
Chunky CD/DVD Shelf Tower

Assembly Instructions – Please keep for future reference

928/8892 D

928/8885 D

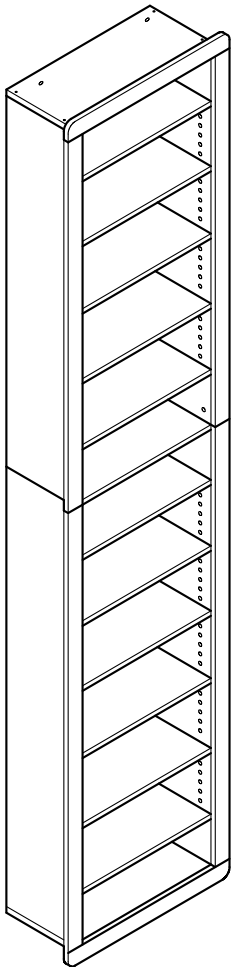

Dimensions

Width – 45 cm
Depth – 20 cm
Height – 201 cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 – 26/10/2010

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.


Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: if require the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


Please check you have all the panels listed below

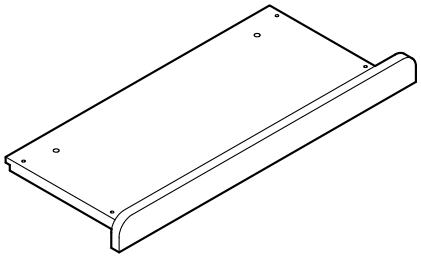


1 Top panel
(450 x 197mm)

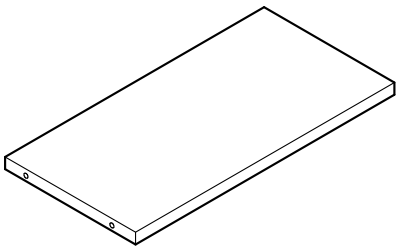


2 Middle shelf
(370 x 184mm)

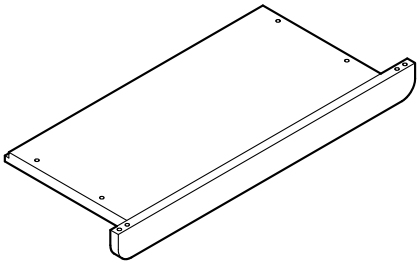


3 Bottom shelf
(450 x 197mm)

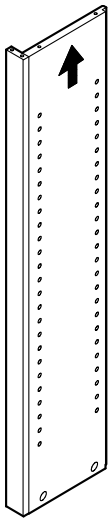


4 Top left side panel
(890 x 197mm)




5 Top right side panel
(890 x 197mm)

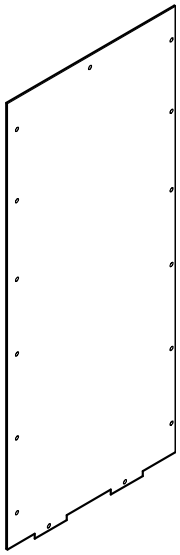


6 Top back panel
(912 x 394mm)

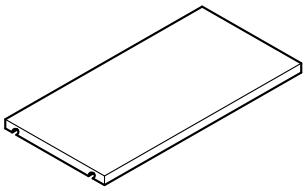


10 Movable shelf x 11
(369 x 184mm)



7 Bottom left side panel
(1042 x 197mm)



8 Bottom right side panel
(1042 x 197mm)

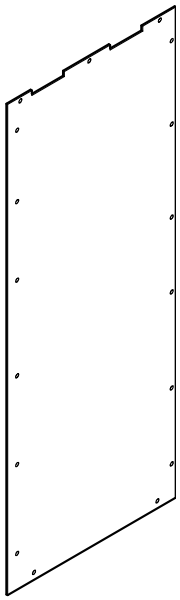

9 Bottom back panel
(1052 x 394mm)









11 Foot x 2
(184 x 25mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800**


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

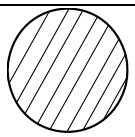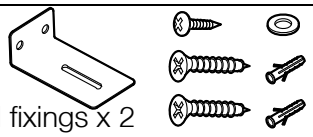
A  Metal dowel and cam x 4	**B**  30mm Screw x 8	**C**  40mm Screw x 8
D  20mm Wood dowel x 12	**E**  Cover pad x 12	**F**  Φ2.5 x14mm Screw x 32
G  Shelf pin x 44	**H**  Wall fixings x 2	

Tools required

 Philips screwdriver

 Flatblade screwdriver


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Screw Bottom side panels [7] and [8] onto the ends of Middle shelf [2], using 4 piece 30mm Screws Ⓑ.

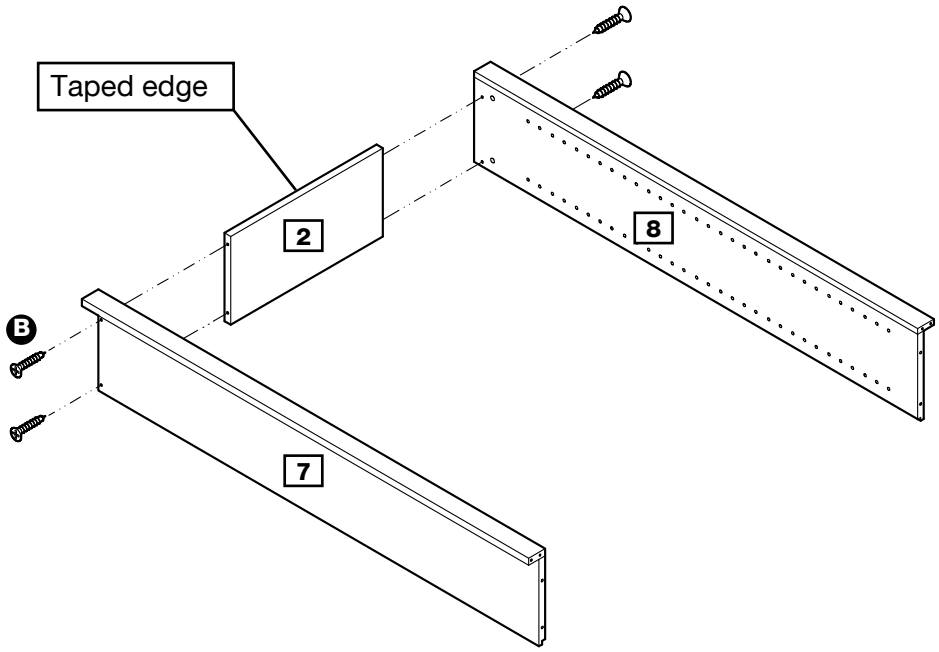

Step 2

Push 20mm Wood dowels Ⓓ into short end of Bottom side panels as shown.

Push the Bottom shelf onto the wood dowels and fasten the bottom shelf by using 40mm screws Ⓒ.

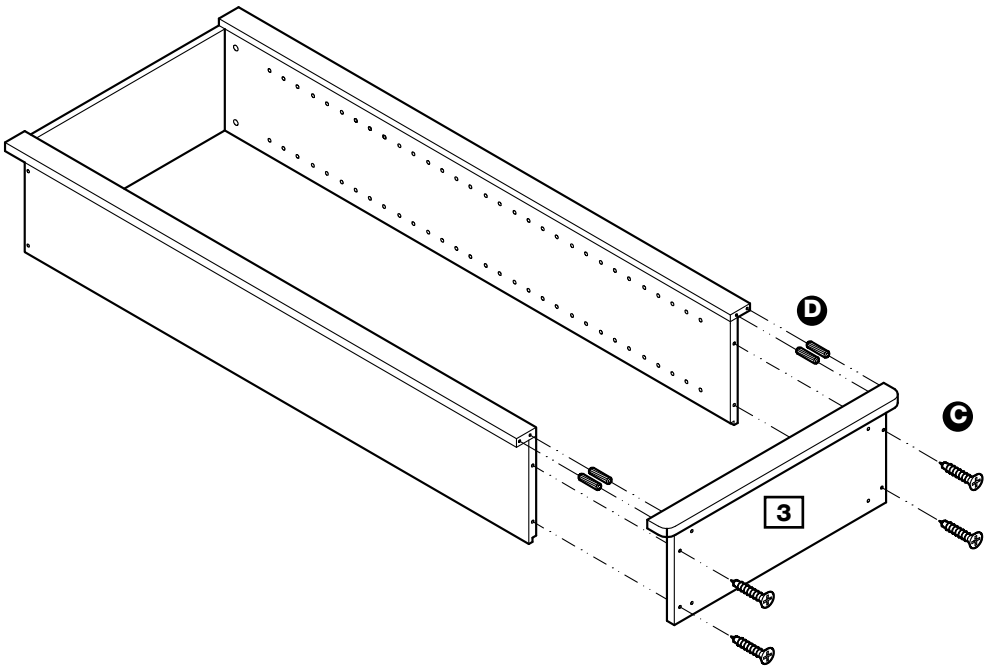


Step 3

Push one end of the Metal dowels Ⓐ into the end holes on Side panels [7] & [8] .

Push Metal cams Ⓐ into the side holes in the Side panels so that they are flush.

Note: Longer leg of the cross on the Metal Cams must face towards end of panel (as shown).

Then, using a Philips Screwdriver, screw all 4 Metal Cams Ⓐ clockwise until they are ‘hand tight’.

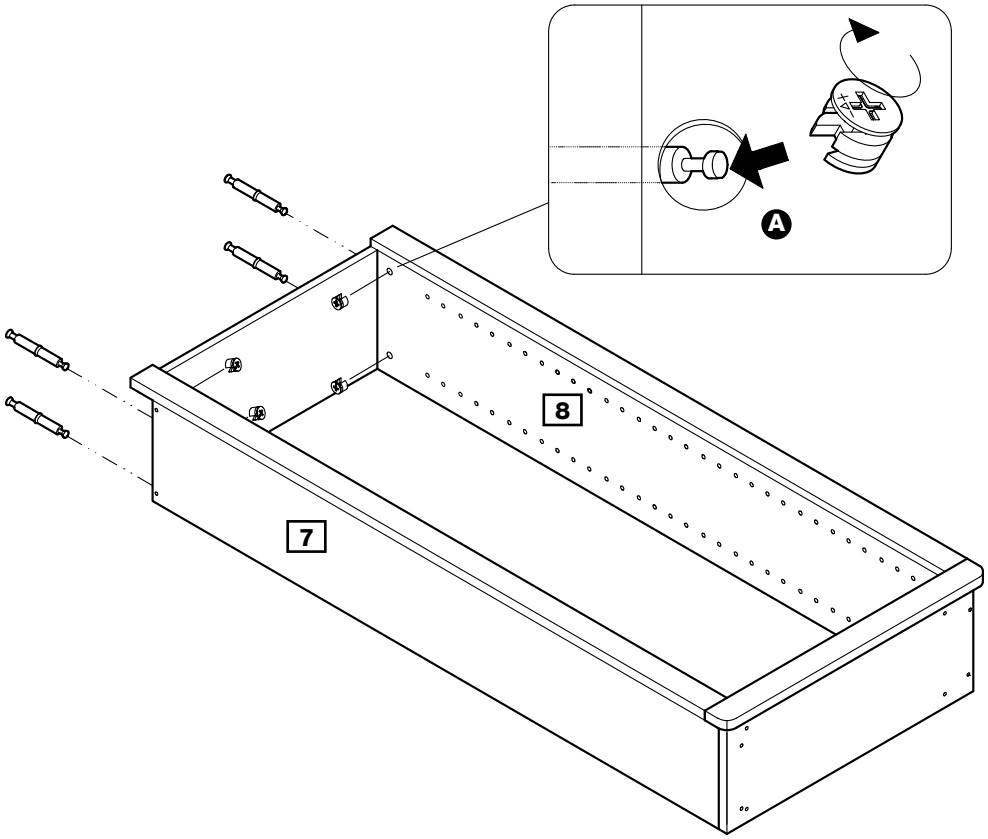


Step 4

Push 20mm Wood dowels Ⓓ into short end of Bottom side panels as shown.

Push Top side panels [4] and [5] onto the wood dowels.

Push Metal cams Ⓐ into the side holes in the Top side panels so that they are flush.

Using a Philips Screwdriver, screw all 4 Metal Cams Ⓐ clockwise until they are ‘hand tight’.

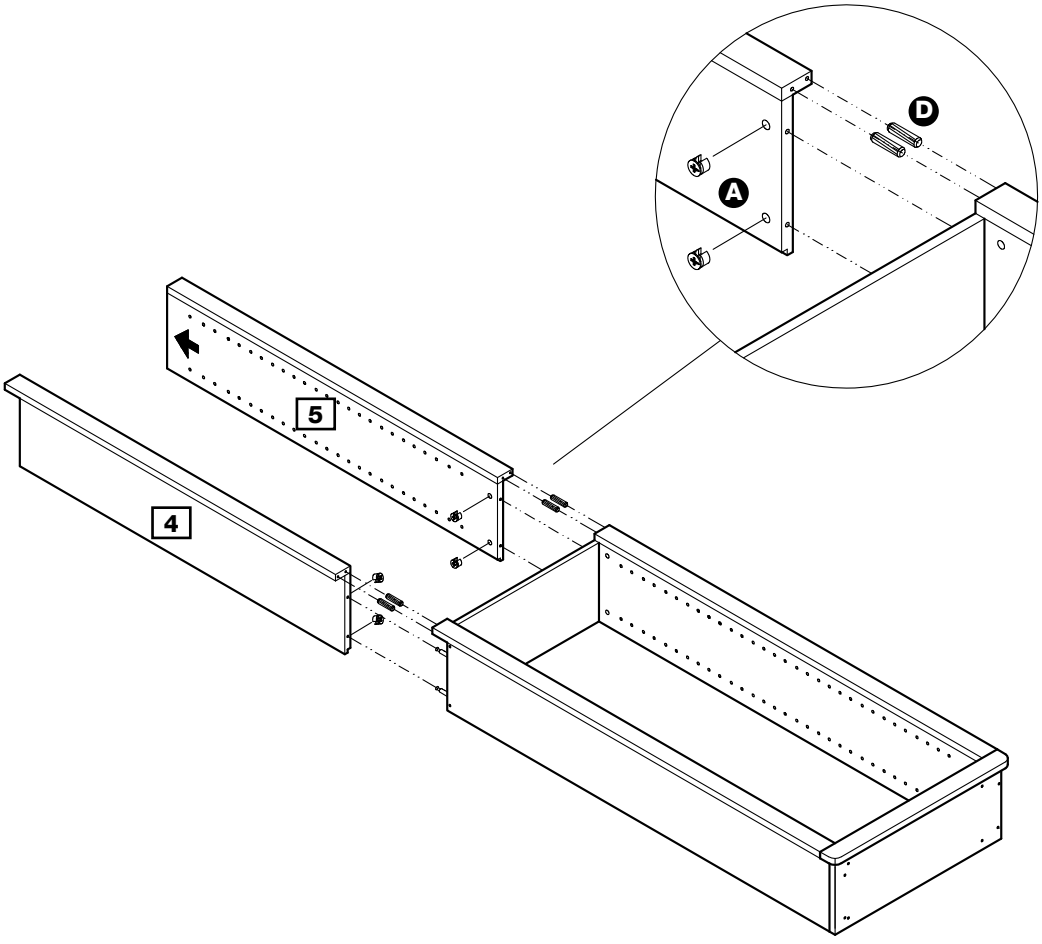


Assembly Instructions

Step 5


Push 20mm Wood dowels Ⓓ into short end of Top side panels as shown.

Push the Top piece onto the wood dowels and fasten the Top piece by using 40mm screws Ⓒ .

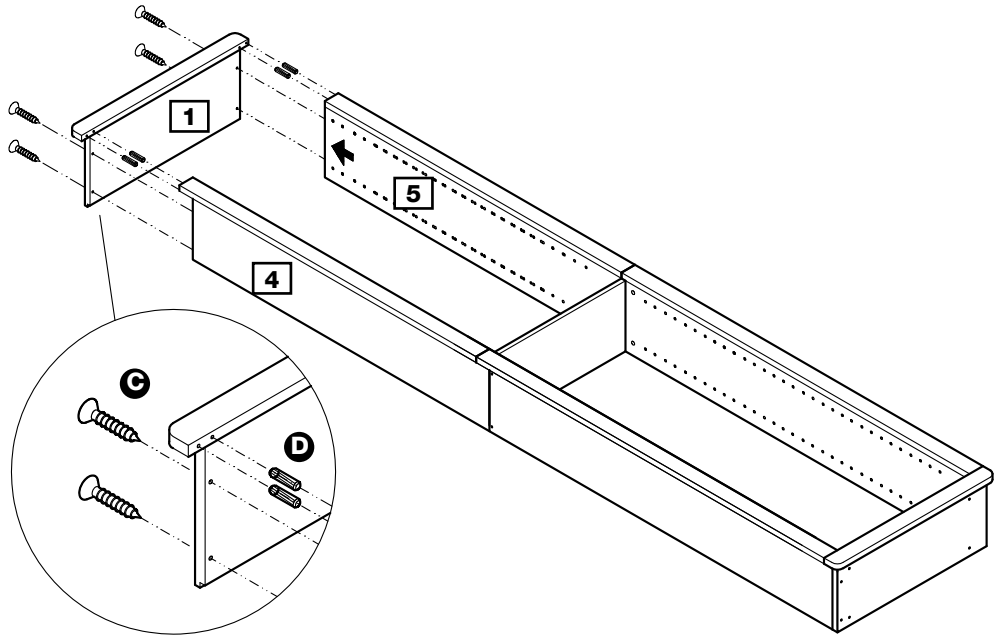


Step 6

Screw Foot 11 to the inner most holes in Bottom shelf 3 using 4 piece 30mm Screws Ⓑ as shown.

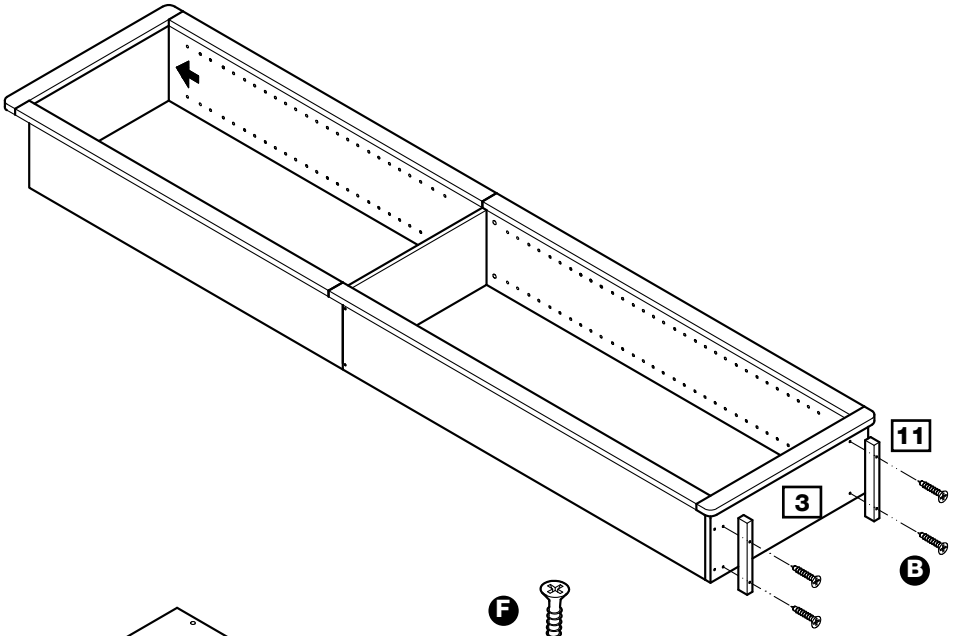

Step 7


Secure the Back Panel 6 and 9 into the recess on the edges of shelves, using 32 Screws Ⓕ.

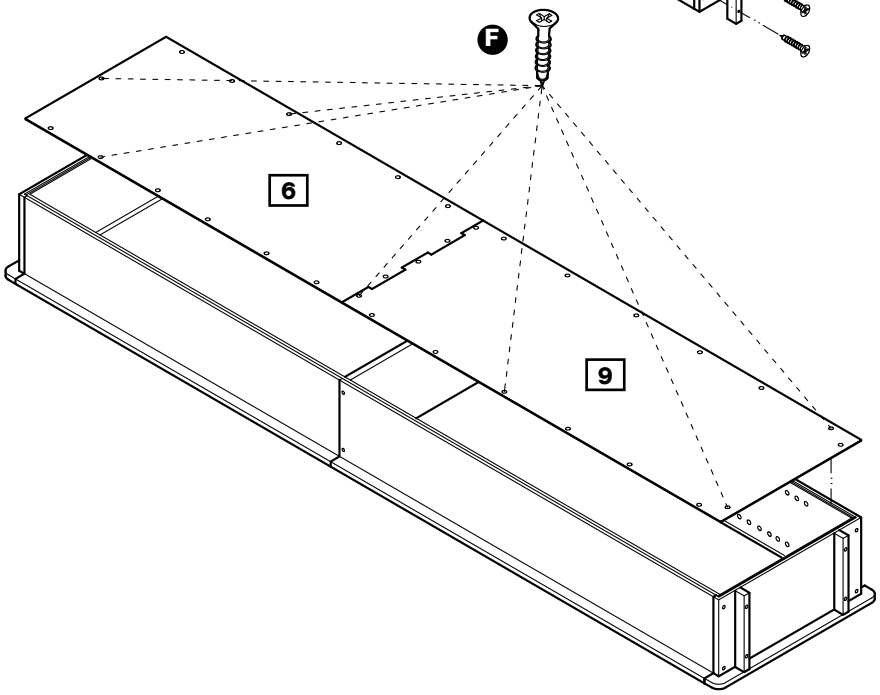

Step 8


Push 22 Shelf Pins **G** into each side of the Shelf.

Push 11 Movable shelves **10** onto the Shelf Pins.

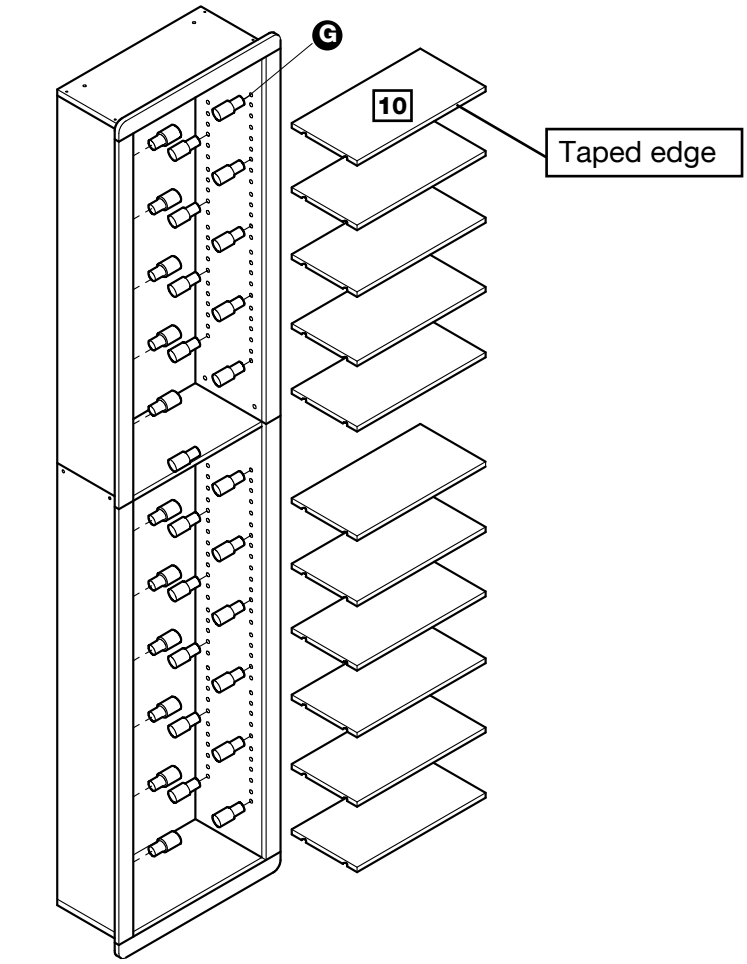

Step 9

Cover all visible screw holes with Cover pads **E**.

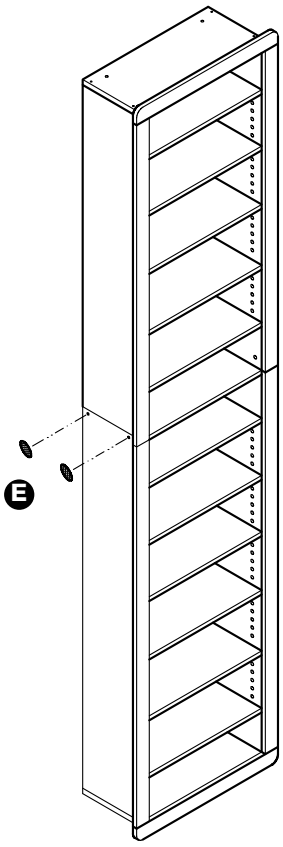

Step 10

Note: This Step is for securing the Tower to a wall and should only be attempted by experienced persons.


You will Need the Following:

- Another person to assist you
- Electric Drill (& Drill Bits)
- Screwdriver

Fixings Supplied:

- 2 Bracket
- 2 Washer
- 2 Small Screws

Note: The fixings described are for use with solid masonry walls only. Alternative fixings should be purchased if you have a different wall construction.

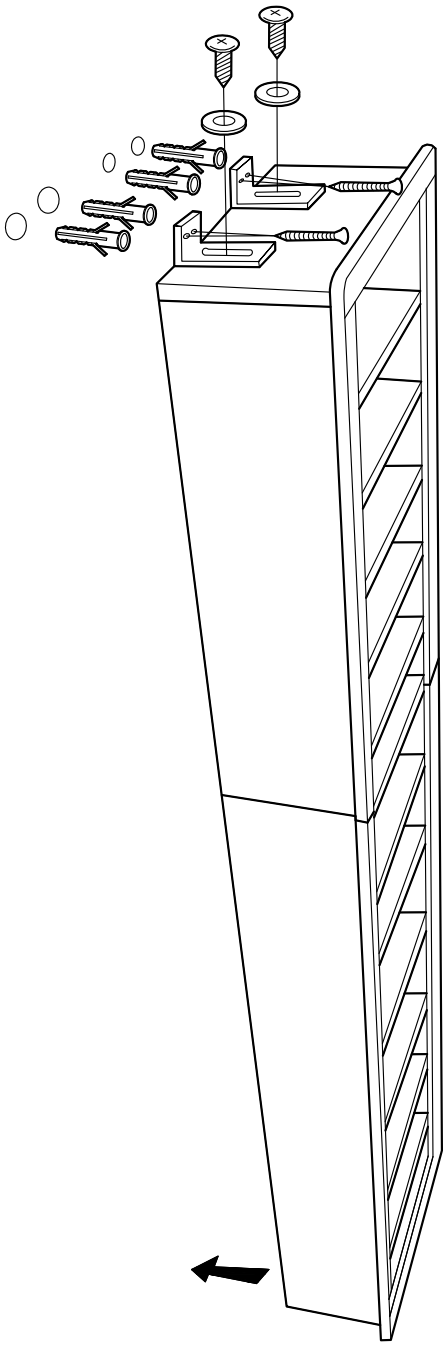

Assembly is complete.