
Metal Coat And Hat Stand

Assembly Instructions - Please keep for future reference | 932/7492

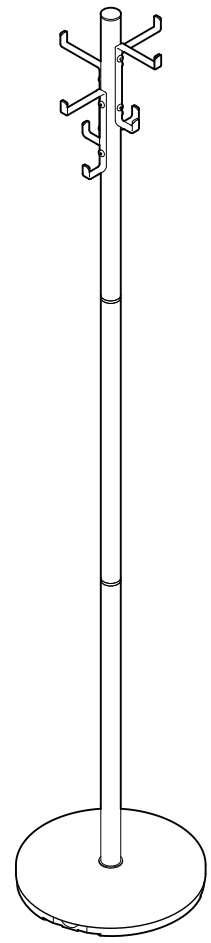

Dimensions

Width - 30cm
Depth - 30cm
Height - 170.5cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: Argos = 0345 640 0800**


Issue 1 - 22/03/11

Components - Panels


If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 640 0800**

Please check you have all the panels listed below


1 Bottom pole x 1 (55cm)




2 Middle pole x 1 (55cm)




3 Top pole x 1 (55cm)




4 Hook x 4 (1.3x9.2x17.6cm)

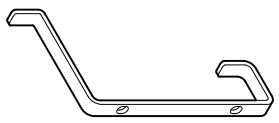

5 Upper base x 1 (30.3cm)

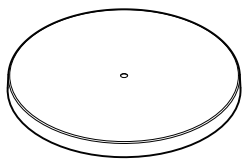


6 Lower base x 1 (30cm)

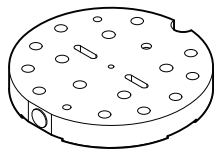


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A Double end screw x 2 	**B** Plastic cap x 1 	**C** 50mm Screw x 1 
D 13mm Screw x 8 	**E** Small washer x 1 	**F** Big washer x 1 
G Allen key x 1 		

Ruler - Use this ruler to help correctly identify the screws



Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on page 2.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.
- If using power tools, please follow the safety instructions supplied with the tools.
- Assemble the unit as close to its final position (in the same room) as possible.



- We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Assembly Instructions

Step 1

Note: It would be useful to ask someone to help you at this stage.


a: Use Screw **C** to affix Small washer **E** with Lower base **6**, Upper base **5**, Big washer **F** and Bottom pole **1**, then tighten by Allen key **G**.

a:

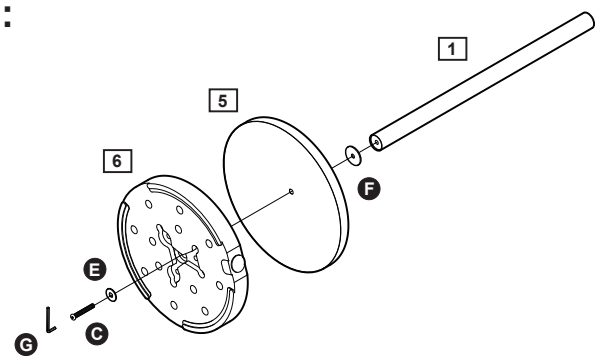

b: Attach Plastic cap **B** into Top pole **3**, use Screw **D** to attach Hook **4** with Top pole **3**, then tighten by Allen key **G**.

b:

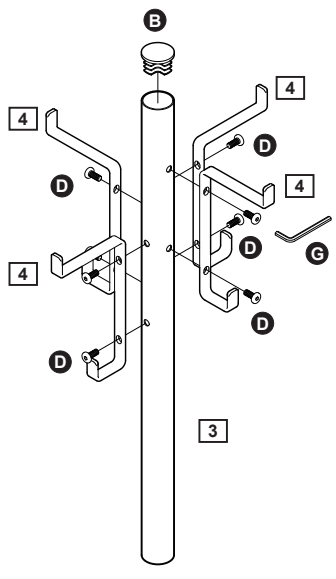


Assembly Instructions

Step 2

Finishing the Unit

a: Fix the poles
Use Double end screw Ⓐ to fix Middle pole 2 with Bottom pole 1, then use Double end screw Ⓐ to fix Top pole 3 with Middle pole 2.

a:

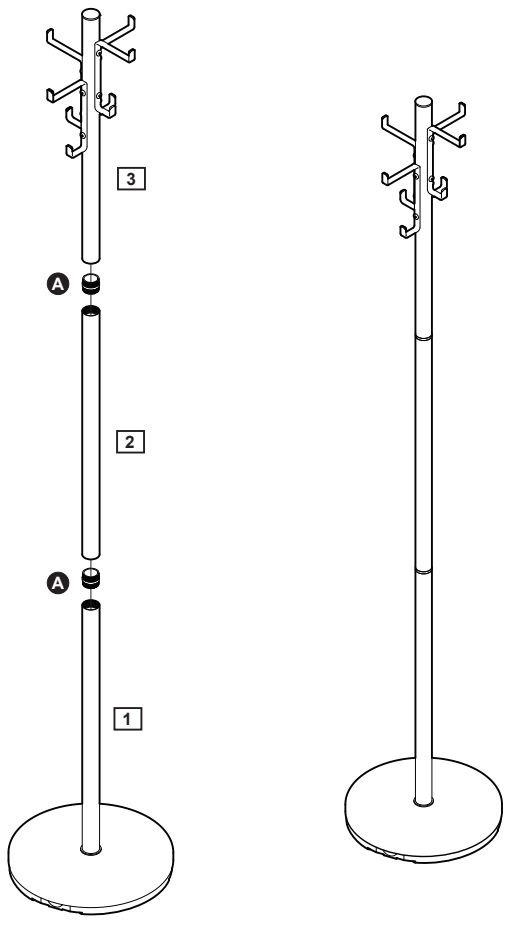

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline:**
Argos = 0345 640 0800