
cuggl

**CUGGL EBONY DELUXE PUSHCHAIR**

care & instruction manual

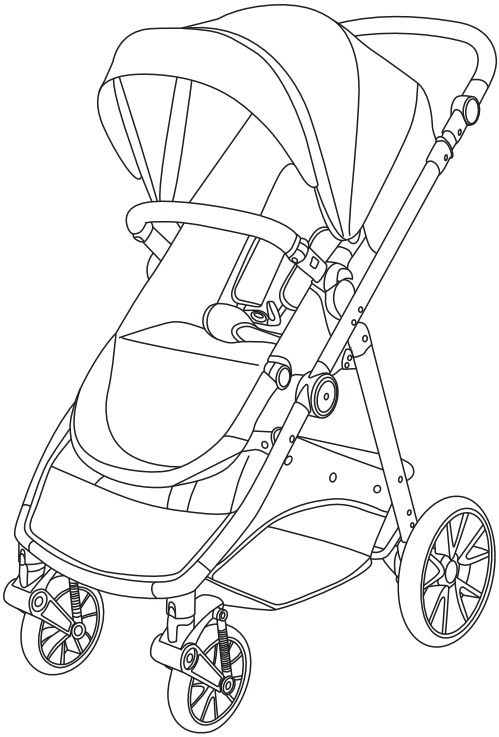

# IMPORTANT-READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

cuggl

# IMPORTANT – READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Thank you for choosing our product. Please always read all the instructions provided carefully before use and remember the child's safety may be affected if you do not follow these instructions. The pushchair is suitable from birth up to 15kg (approx. 36 months), never overload.

# WARNINGS:

- Never leave the child unattended
- Ensure that all locking devices are engaged before use.
- To avoid injury ensure that the child is kept away when unfolding and folding this product.
- Do not let the child play with this product.
- Always use the restraint system provided and make sure the harness is correctly fitted
- Always use the crotch strap in combination with the waist belt.
- This product is not suitable for running or skating.
- For a new-born baby, the seat unit should be in the most reclined position.
- The parking device shall be engaged when placing and removing the children.
- The maximum permissible loading for the shopping basket is 3kg.
- Any load attached to the handle and/or on the back and/or on the side will affect the stability of the vehicle.
- Use the stroller for only one child at a time.
- Accessories which are not approved by the manufacturer shall not be used.
- Only replacement parts supplied or recommended by the manufacturer/distributer shall be used.
- Do not use if any part is broken, torn or missing
- Avoid placing the pushchair near naked heat sources such as electric bar fires, etc. or where a child could gain access to any other kinds of hazards.

cuggl

# Care and Maintenance

**General**
This pushchair was designed and manufactured with qualified materials and craftsmanship.

**Always check and inspect your pushchair regularly for**:

Worn parts,torn materials or stitching.
Loose screws,bent or broken frame parts.
Broken,damaged or missing parts.

Should any of the above be evident do not use and contact the Helpline : 0345 640 2020 for advice.

**Care and Maintenance**

Lubricate moving parts regularly, especially the wheels, and lower parts of the chassis that tend to collect dirt.

Fabric parts may be cleaned in accordance with the fabric care labels.

Seat:Sponge clean only.
Footmuff: Maximum temperature 30℃ machine washing
Canopy / basket: hand wash only

Do not leave the pushchair exposed to heat i.e. by a radiator or in direct sunlight.


If the pushchair chassis parts have been exposed to salt water we recommend that they be rinsed down with fresh ( soapy ) water as soon as possible afterwards.
Do not fold or store the product while wet and never store in a damp environment as this can cause mildew to form.

Cat No: 9593068


cuggl

## Contents


Check all parts are present before assembly

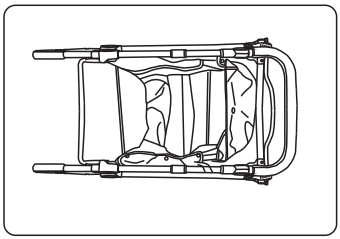


FRAME

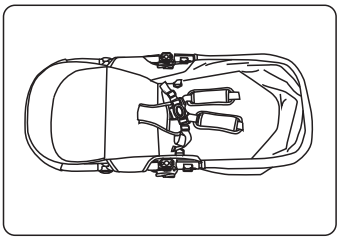


SEAT

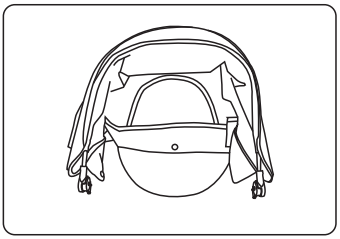


CANOPY

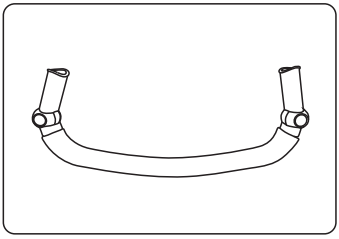


FRONT BUMPER

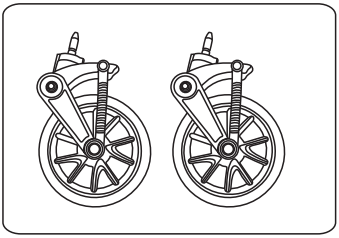


FRONT WHEELS

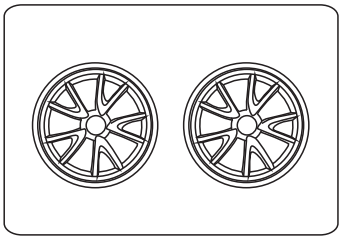

REAR WHEELS

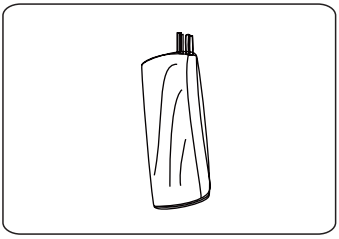

RAINCOVER

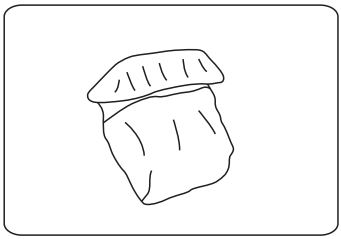


FOOTMUFF

Cat No: 9593068

cuggl

# Name of parts

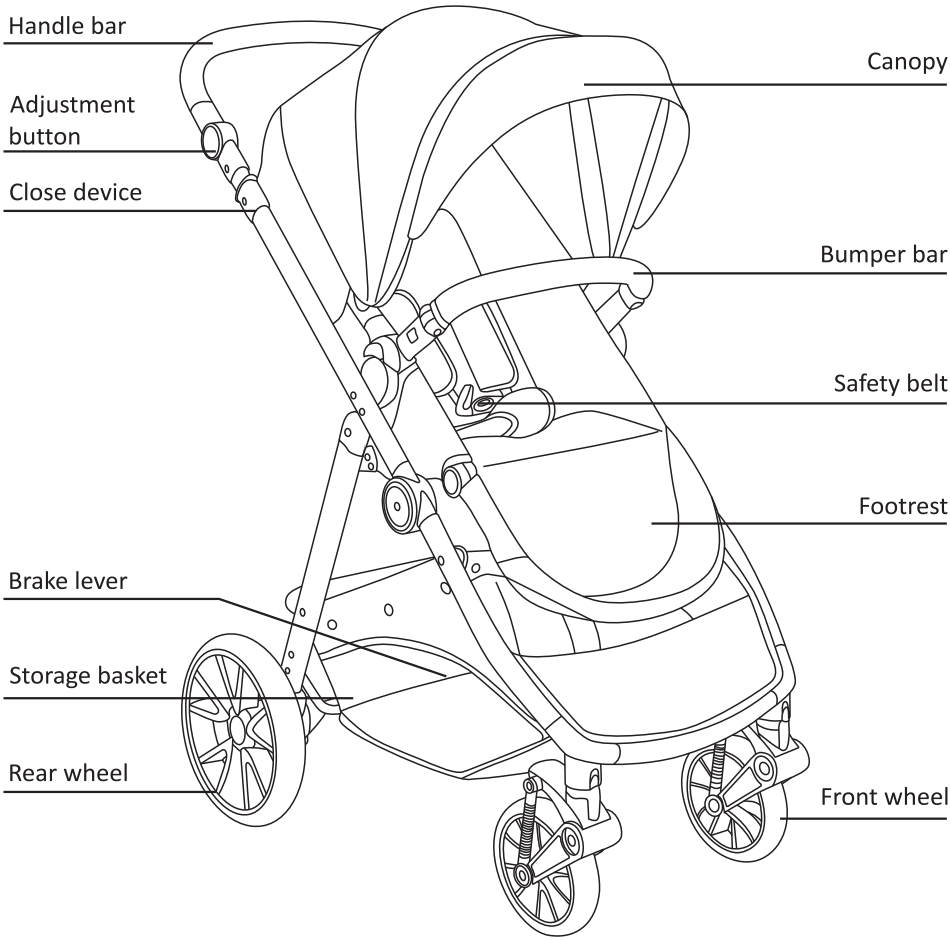


Cat No: 9593068

cuggl


# Assembly

Keep children out of the work area.

## 1

SETTING UP THE FRAME

- Remove all the components from the box. To unfold the frame, locate the locking catch on the side of the pushchair and bend outwards to release it from the locking stud. Place your foot on the rear tube and fully lift the handle bar upwards and forwards until the hinge is fully engaged with a "Click" noise.

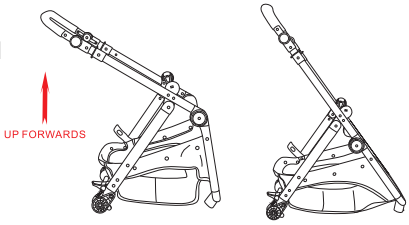



- NOTE: Check that the frame folding mechanism lock has fully engaged before each use.

## 2

FRONT WHEEL INSTALLATION


- Tilt the pushchair backwards and insert each front wheel assembly into the front wheel hub until they lock "Click" into place.
- NOTE: Check that the wheel assembly is securely attached to the pushchair before each use.
- To remove, press the release button on the side of the wheel hub whilst pulling the wheel assembly downwards.

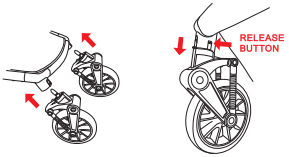


## 3

REAR WHEEL INSTALLATION


- Tilt the pushchair forward and insert each rear wheel spindle into the rear frame hub until they lock "Click" into place.
- NOTE: Check that the rear wheels are securely attached to the pushchair before each use.
- To remove, pull/press the release button on the bottom of the rear wheel hub whilst pulling the rear wheel outwards.

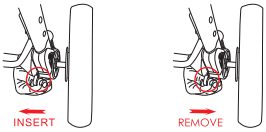



Cat No: 9593068

## 4 ATTACHING THE SEAT


- Insert the seat unit connectors into the coresponding seat unit adaptors on the pushchair frame ensuring they are fully engaged before each use. You should hear a “click”
- Insert the front bumper bar connectors into the coresponding adaptors on the front of the seat unit ensuring that they are fully engaged before each use. You should hear a “click”

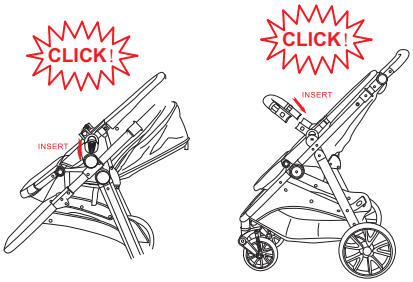


- Clip the canopy connectors onto the coresponding slot located on each side of the seat.
- Extend the canopy by pulling the front edge forward whilst holding the rear edge in place.

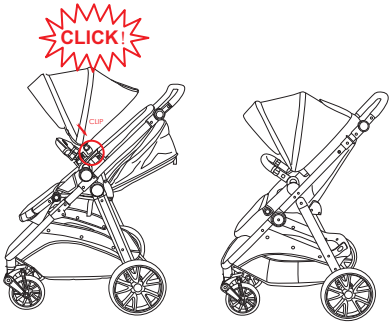


- The seat unit is reversible. Press the button on both sides of the frame adaptors simultaneously whilst lifting the seat unit. Rotate the seat unit and reinsert the connectors back into the adaptors.
- NOTE. The child should be removed before the seat unit direction is changed.

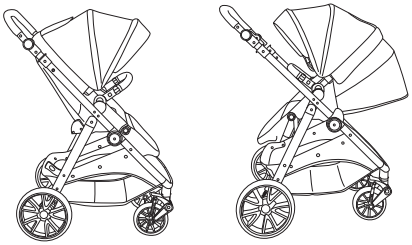



Cat No: 9593068

cuggl


## 5 BACKREST ADJUSTMENT

- The seat can be adjusted into upright, half-reclined and reclined positions.
- Lift the recline lever on the rear of the seat unit and rotate the seat into the desired position.

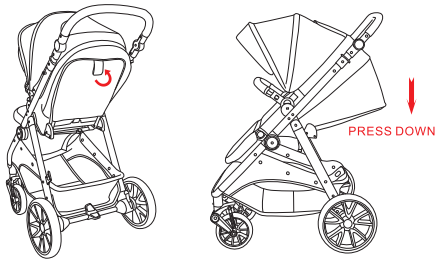



## 6 FOOTREST ADJUSTMENT

- Press the button on both sides of the footrest simultaneously to adjust it to the desired position.

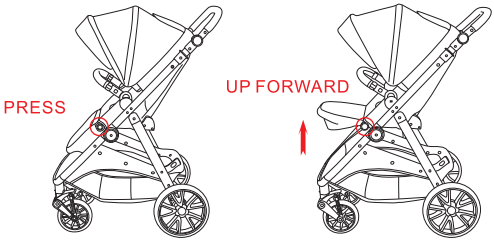


MUITI-POSITION HANDLE

- Whilst pressing the two release buttons on the handle side, adjust until a comfortable position for the user has been reached.
- Note: Make sure the handle is locked into position before using.

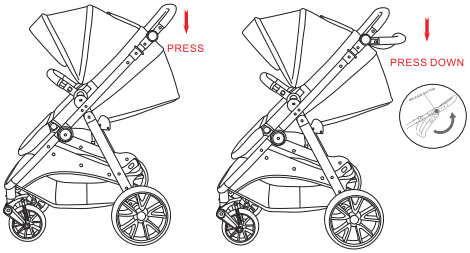



Cat No: 9593068

cuggl

## 7

FRONT WHEEL LOCK

- The front wheels are equipped with a swivel locking device. Slide the button on each of the wheels down to prevent the wheel from swivelling and slide the button back upwards to allow the wheels to swivel.

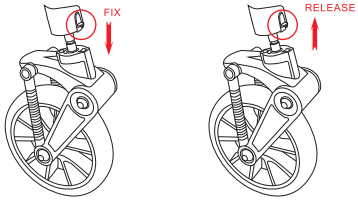



## 8

BRAKE OPERATION

- To engage the brakes simply press down with your foot on the pedal located on the rear axle. The pushchair might need to be rolled back and forth to fully engage the brakes before letting go.

- To release the brakes simply lift the pedal located on the rear axle with your foot. The pushchair might need to be rolled back and forth to fully disengage the brakes before setting off.

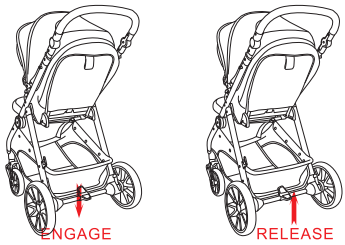


## 9


HARNESS & BUCKLE

- Note: Thread the shoulder straps through the loops to reduce the shoulder strap height if required.

- To fasten the waist harness:
  Insert both buckle clips into each side of the buckle housing until a “Click!” is audible

- To release the harness:
  Press the button on the buckle housing


- To adjust the buckle:
  Adjust the shoulder straps by moving the slides as shown

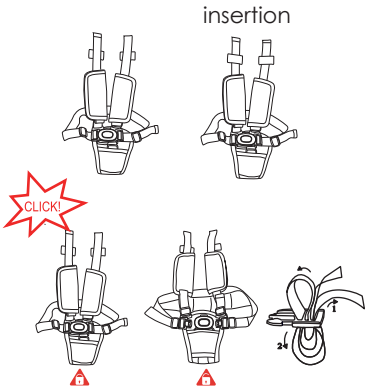


Cat No: 9593068


## 10 TO FIT THE RAINCOVER

- Place the raincover over the hood and then cover the pushchair.
- Fasten the touch fasteners in position A on both sides of the pushchair.

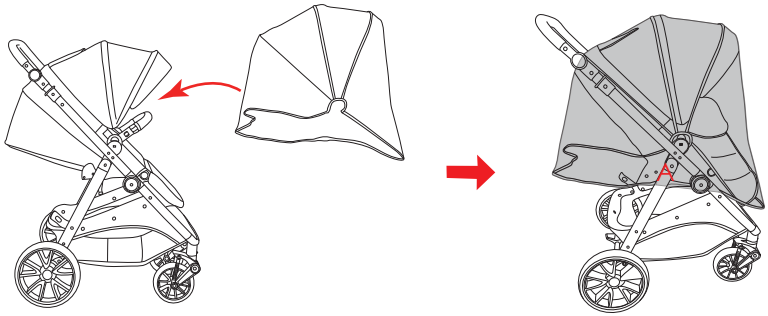

## 11 TO FIT THE FOOTMUFF


- Slide the footmuff over the footrest of the seat unit and pass it under the bumper bar.
- Wrap the webbing around the frame and secure in place by the press stud on both sides.
- The top of the footmuff can be folded down over the bumper bar and secured in place by two hidden magnets .

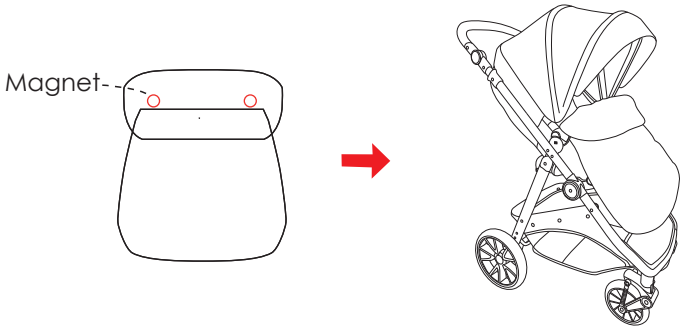


Cat No: 9593068


## 12 TO FOLD PUSHCHAIR

- Close the canopy by pushing the front edge backwards towards the rear of the seat unit.

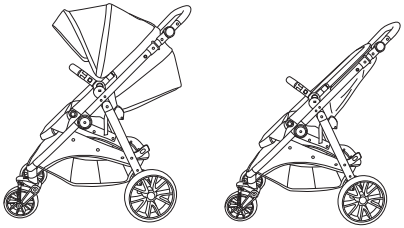


- Pull the pushchair backwards to align the front wheels with the frame as per the images on this page.

- Ensure the seat unit is facing away from the parent before folding.

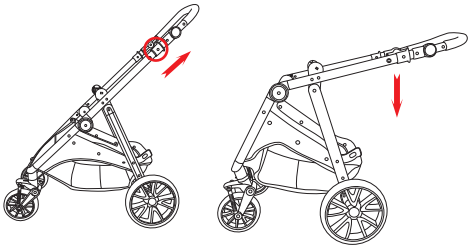

- Fold the pushchair by pulling both release triggers and lower the handle towards the floor.

- Make sure the front wheels lie flat under the frame. Use the locking strap to secure the pushchair in the folded position.

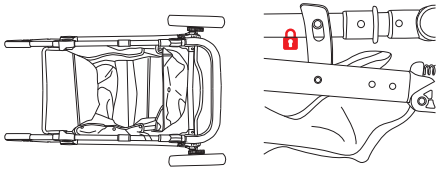

- Note:The stroller can not be folded in parent facing position.

cuggl

# Technical specification

| | |
|---|---|
| Product title | CUGGL EBONY DELUXE PUSHCHAIR |
| Argos Cat. No. | 9593068 |
| Supplier Ref. No. | M6800H |
| Age group | 0-36M |
| Weight suitability | From birth up to 15kg |
| Safety compliance | Complies with EN1888-1:2018 |
| Product weight | 12.4kg |
| Product unfolded size | L90xW61xH115.5cm |

If you encounter any problems with this product please call our customer care team on 0345 640 2020

Producted in China. Argos Limited,489-499 Avebury Boulevard,Milton Keynes,MK9 2NW. Argos (N.I.)Ltd, Forestside Shopping Centre,Upper Galwally ,Belfast, United Kingdom,BT8 6FX. Argos Distributors (Ireland) Limited,Unit 7,Ashbourne Retail Park, Ballybin Road, Ashbourne,County Meath,Ireland