
01SHPPLSBIK0703-V2

Please retain product label and instructions for future reference

Overall Dimensions:
Length = 849cm
Width = 2223cm
Height = 1721cm


Base Dimensions:
Length = 795cm
Width = 1980cm

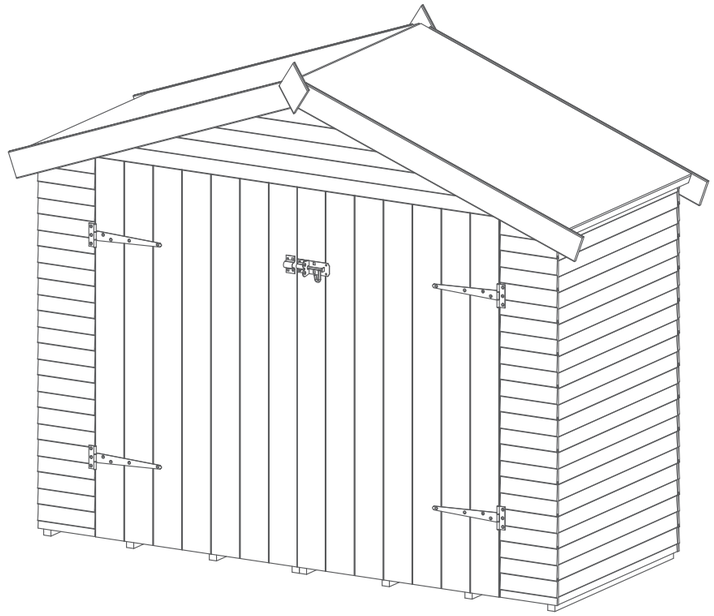


Before assembly please make sure you have a suitable base ready to erect your building

MADE IN GREAT BRITAIN


Contents

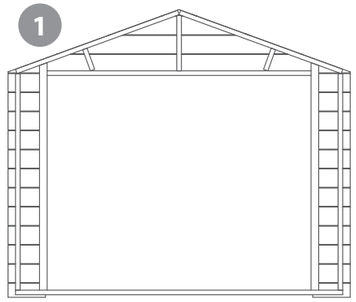


1 **Door Gable**

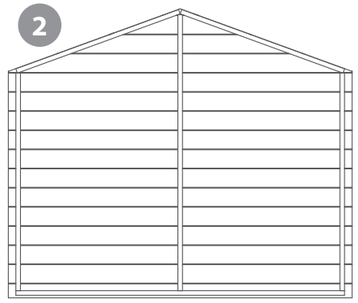


2 **Back Gable**

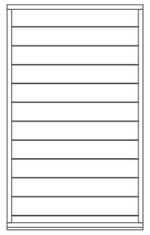


3 **Plain Side x2**

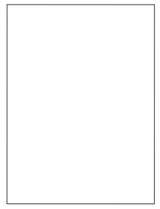

4 **Roof x2**

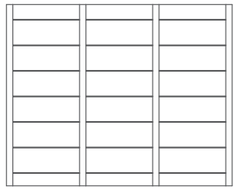

5 **Floor x2**

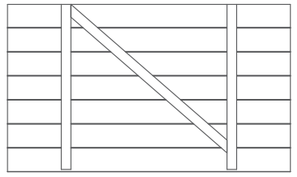

6 **Door x2**

Fixing Kit


7 **Eaves Frame 825mm x2**

8 **Ridge Bar 736mm**


9 **Fascia 1095mm x4**

10 **Door Block 132mm x4**

11 **Finial x2**



12 **T Hinge Qty 4**



13 **Pad Bolt**



14 **Turn Button Qty 2**




15 **Felt**



16 **L-Bracket Qty 2**

Nail Bag

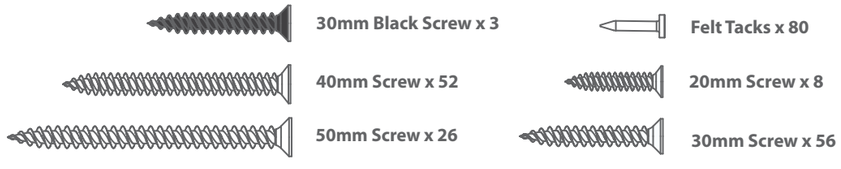

30mm Black Screw x 3
40mm Screw x 52
50mm Screw x 26
Felt Tacks x 80
20mm Screw x 8
30mm Screw x 56

BEFORE YOU START PLEASE READ INSTRUCTIONS CAREFULLY

- Check the pack and make sure you have all the parts listed.
- When you are ready to start, make sure you have the right tools at hand (**not supplied)** including a Phillips screwdriver, Stanley knife, wood saw, step ladder and drill with 2mm bit.
- Ensure there is plenty of space and a clean dry area for assembly.

TIMBER

As with all natural materials, timber can be affected during various weather conditions. For the duration of heavy or extended periods of rain, swelling of the wood panels may occur. Warping of the wood may also occur during excessive dry spells due to an interior moisture loss. Unfortunately, these processes cannot be avoided but can be helped. It is suggested that the outdoor building is sprayed with water during extended periods of warm sunshine and sheltered as much as possible during rain or snow.

Our buildings are pre treated with a water based treatment**; this only helps to protect the product during transit and for upto 3 months against mould. To validate your guarantee and ensure longevity of the product, it is ESSENTIAL the building is treated with a wood preserver within the first three months of assembly and thereafter in accordance with the manufactures recommendations. Care must be taken to ensure the product is placed on a suitable base.

BUILDING A BASE

When thinking about where the building and base is going to be constructed: Ensure that there will be access to all sides for maintenance work and annual treatment.

Ensure the base is level and is built on firm ground, to prevent distortion. Refer to diagrams for the base dimensions, The base should be slightly smaller than the external measurement of the building, i.e. The cladding should overlap the base, creating a run off for water. It is also recommended that the floor be at least 25mm above the surrounding ground level to avoid flooding.

TYPES OF BASE

- Concrete 75mm laid on top of 75mm hard-core.
- Slabs laid on 50mm of sharp sand.

Whilst all products manufactured are made to the highest standards of Safety and in the case of childrens products independently tested to EN71 level, we cannot accept responsibility for your safety whilst erecting or using this product.



x2

This building should be erected by two adults



2mm Drill bit

For ease of assembly, you must pilot drill all screw holes and ensure all screw heads are countersunk.



Winter = High Moisture = Expansion
Summer = Low Moisture = Contraction



CAUTION

Every effort has been made during the manufacturing process to eliminate the prospect of splinters on rough surfaces of the timber. You are strongly advised to wear gloves when working with or handling rough sawn timer.

For Assistance Please Contact Customer Care on

01636 880514

****Protim Aquatan T5 (621)****

Your building has been treated with **Aquatan**.

Aquatan is a water-based concentrate which is diluted with water, the building as been treated by the correct application of Aquatan solution and then allowed to dry.


Aquatan is a decorative finish to colour the wood, which is applied industrially to timber fence panels and garden buildings.

Aquatan *undiluted* contains: boric acid, sodium hydroxide 32% solution, aqueos mixture of sodium dioctyl sulphosuccinat and alcohols: 2, 4, 6-trichlorophenol.

Mercia Garden Products Limited, Sutton On Trent, Newark, Nottinghamshire, NG23 6QN
www.merciagardenproducts.co.uk


Pre Assembly

Remove transportation blocks from the bottom of each panel before beginning assembly. Each Panel should have two blocks.

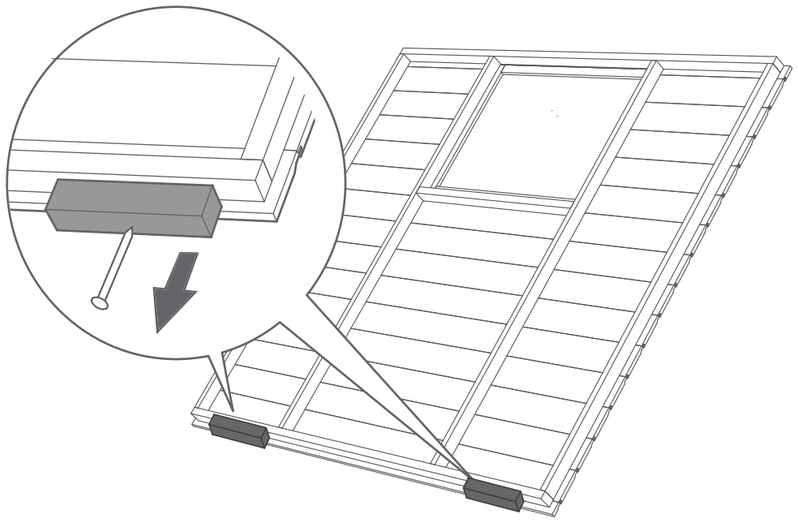

Fix the T Hinges onto the door and door frame in line with the door blocks.

28x30mm screws

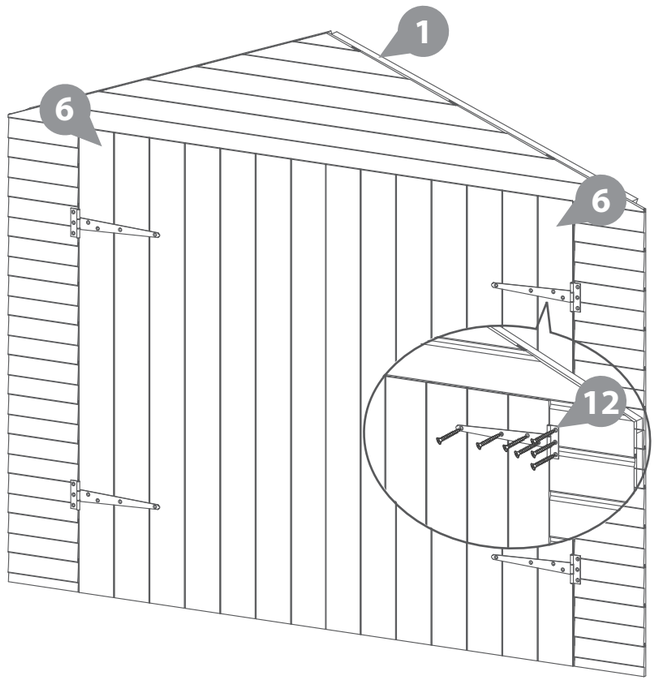



Step 1

Place floor on firm and level base, ensure base has suitable drainage free from areas where water can collect. (See front page on base requirements).

Attach the floors using 10 x 40mm screws

10 x 40mm screws

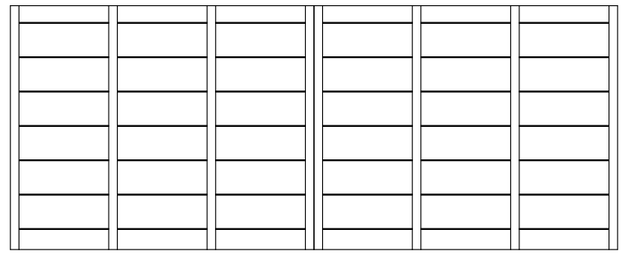

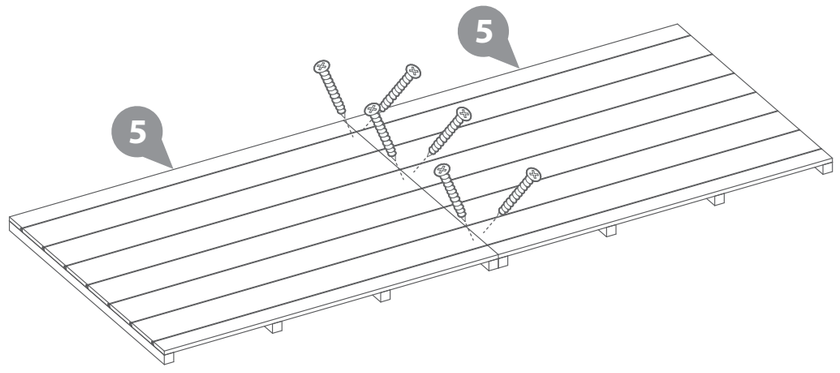


Step 2

a Fix the corners with 50mm screws as shown in diagram.

b Do not secure the building to the floor until the roof is fitted. Fix the panels onto the floor using 50mm screws in alignment with the floor joists

Position the panels so there is equal spacing between the floor and cladding on all 4 sides


3x50mm Screws

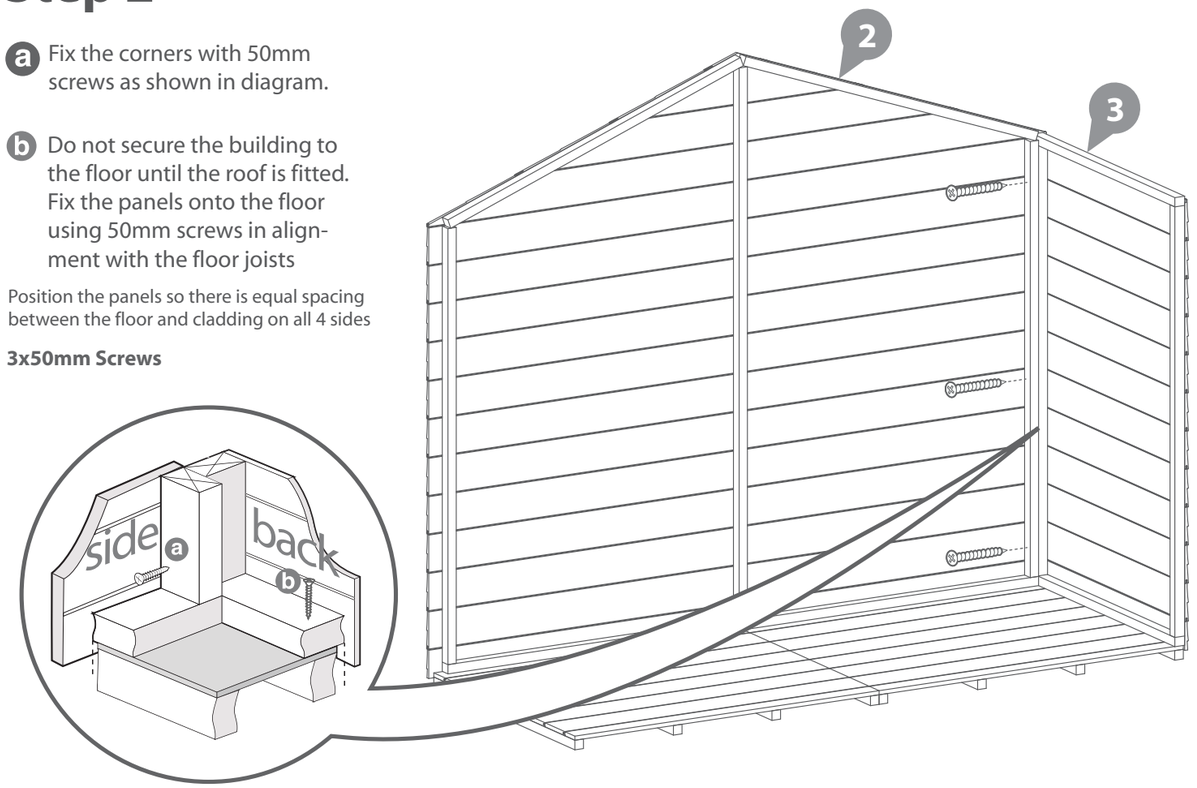

Step 3

Fix the corners with 50mm screws as shown in diagram.


9x50mm Screws

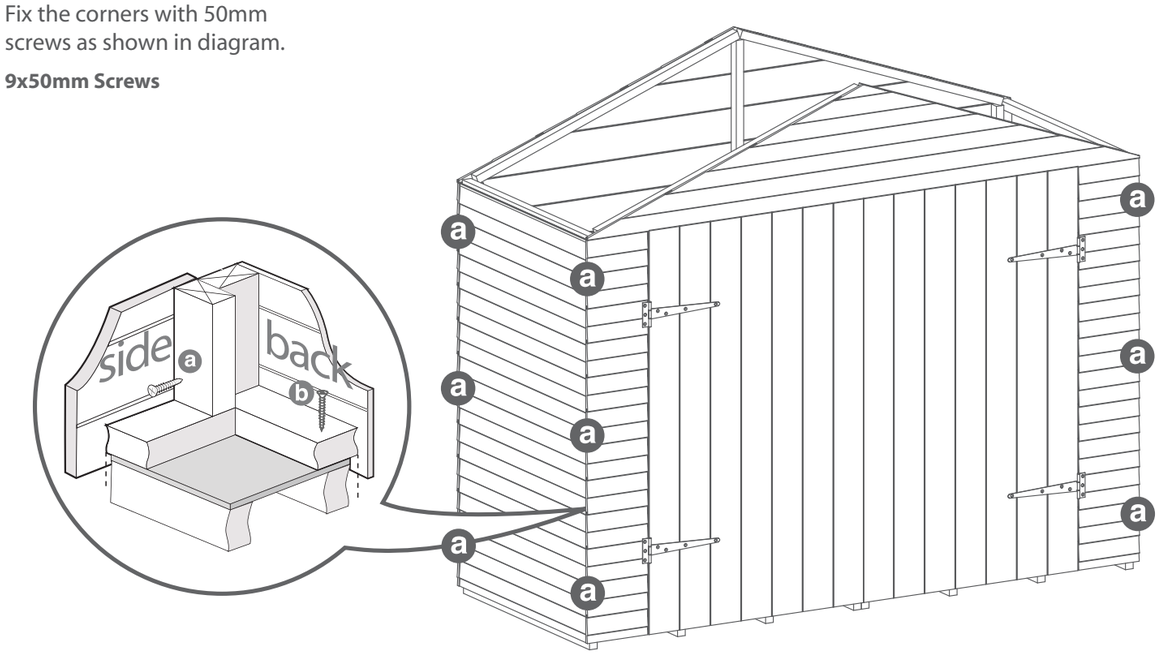

Step 4

Place the ridge bar in between the front and back gables. Ensure the top corners of the ridge bar sits flush with the top points of the door gable. Fix the ridge bar to the gable using one L bracket for each end.
Fix with 4x20mm screws each

8x20mm Screws

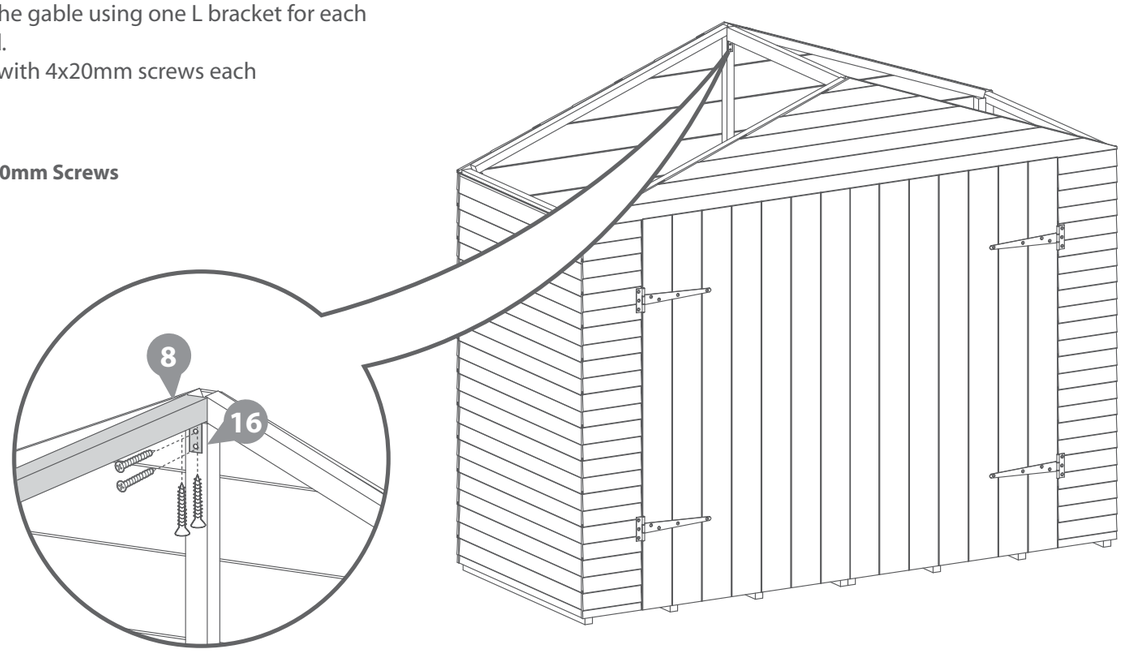


Step 5

Set the two roof panels into position and fix to the side panels and gables using 30mm screws.

24x40mm Screws

Fix two eaves frames to each roof sheet using 3x30mm screws per eave.


6x30mm Screws

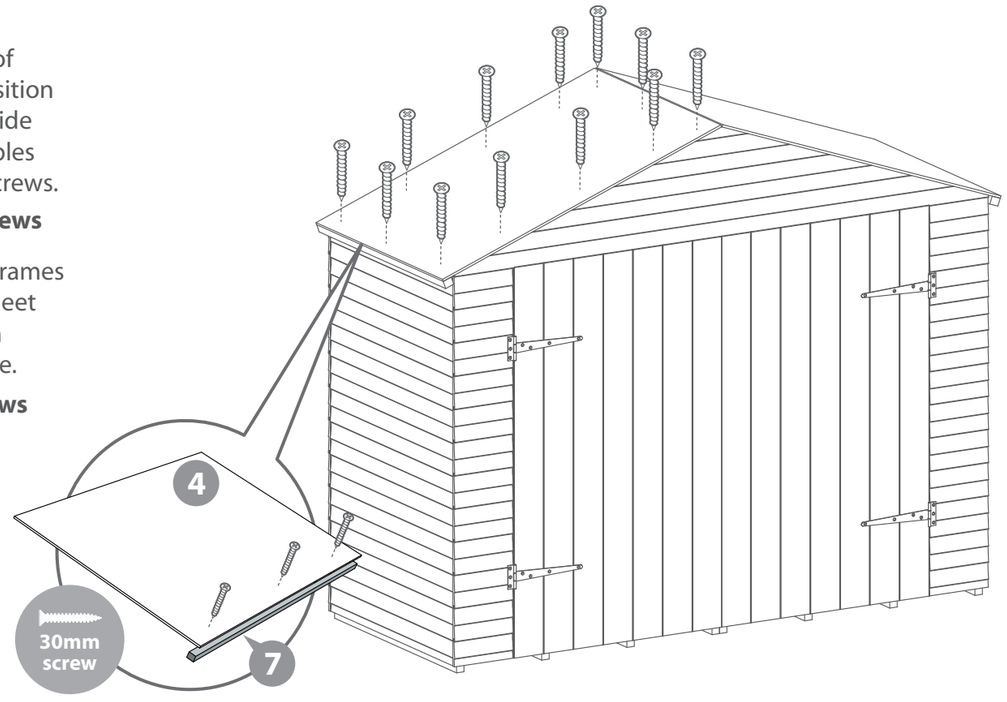

Step 6

Secure the building to the floor using 12x50mm screws.

12x50mm Screws

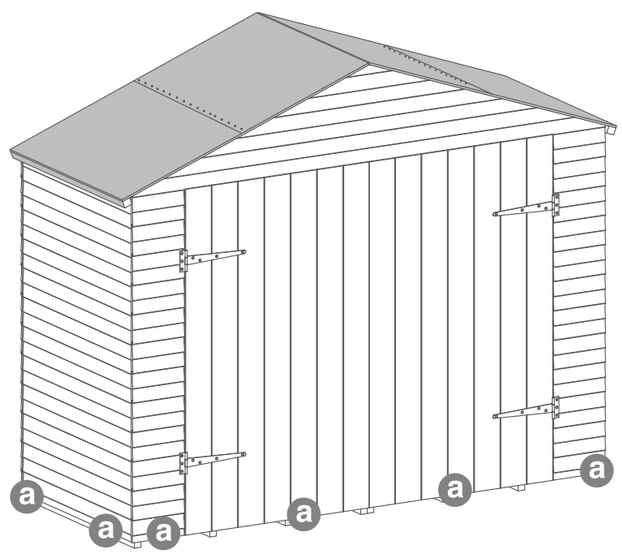

Step 7


Cut out three strips of 1025mm felt and place onto the roof.


Place the felt flat onto the roof in the order that is stated on the diagram below.


Once the sheets are laid out fix them onto the roof with tacks 100mm apart.





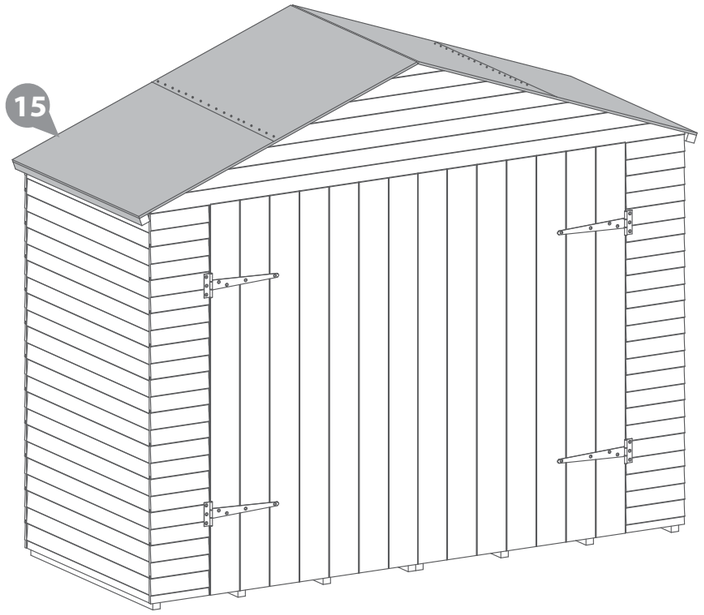

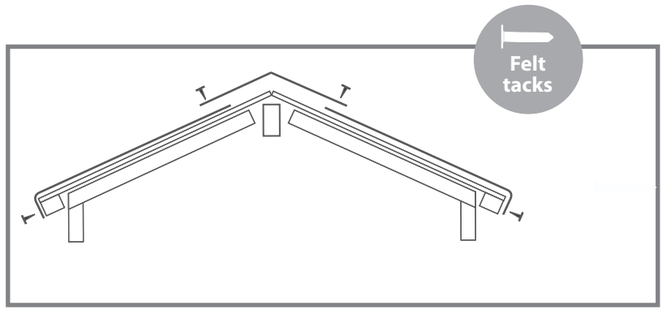

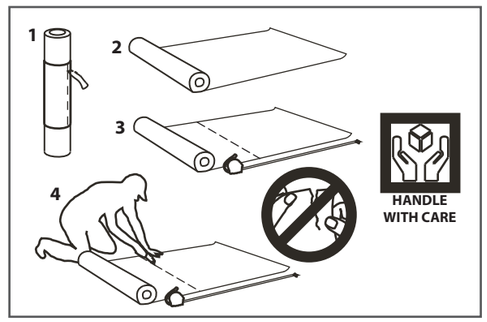


Step 8

Attach the faiscas to the roof leaving a slight overhang at the top.

Fit the fascias to the roof over the felt and secure in place with 40mm screws as shown.
Pre drill to avoid splitting.

16x40mm Screws

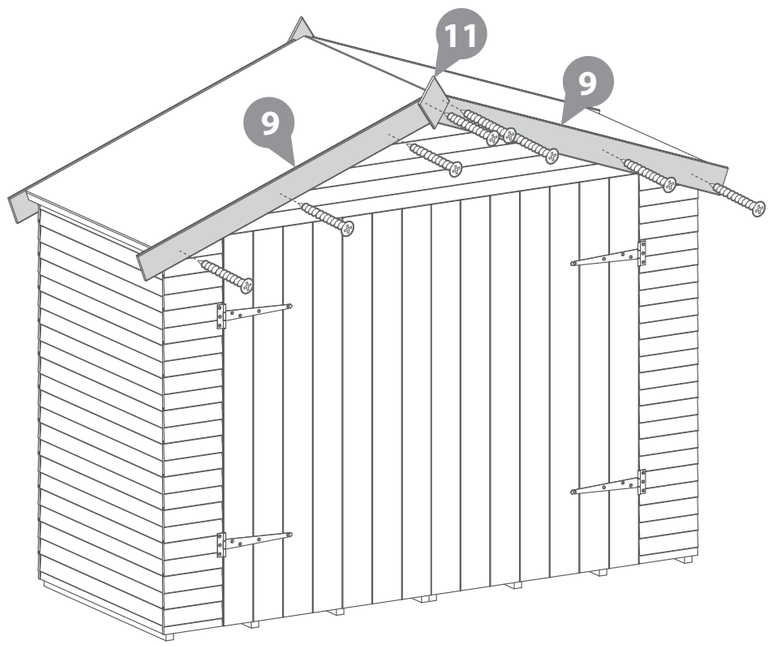


Step 9

Fit the door blocks to the doors as shown in the diagram with 2x30mm screws each and ensure that they sit flush with the door gable.

Fit the turn buttons using 1x30mm black screw per button.


Attach the door strips to the inside of the door frame using 3x30mm screws per strip, ensuring door opens and closes freely.

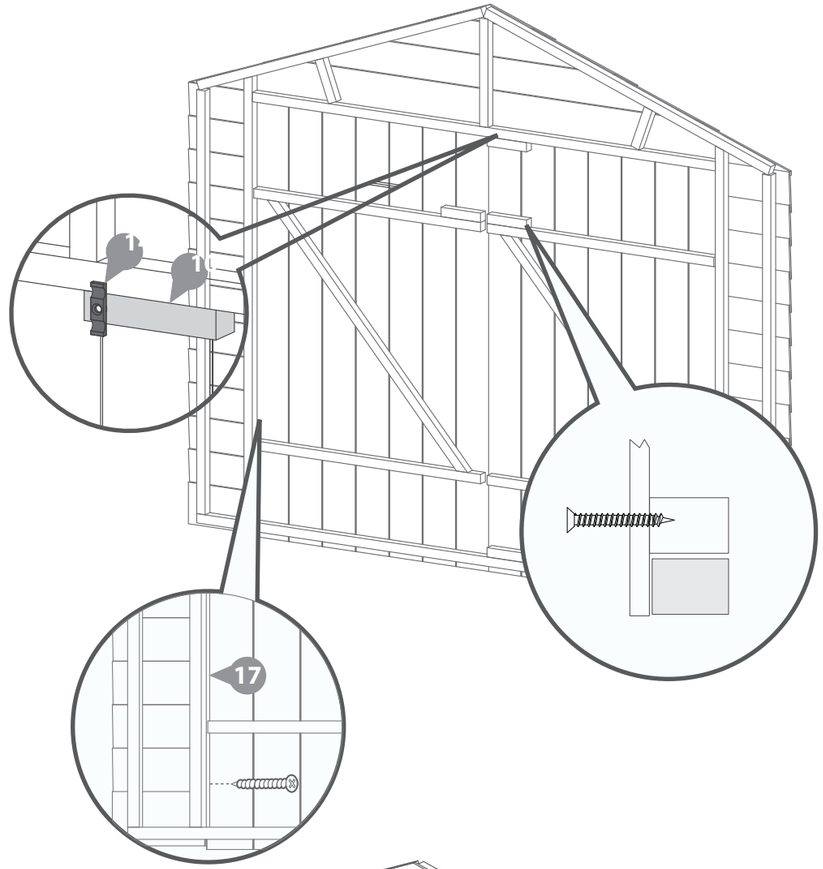


Step 10

Use 4x30mm screws to fix the Pad bolt onto the master door (Right door panel) and 2x30mm screws to fix the retainer to the slave door

6x30mm Screws

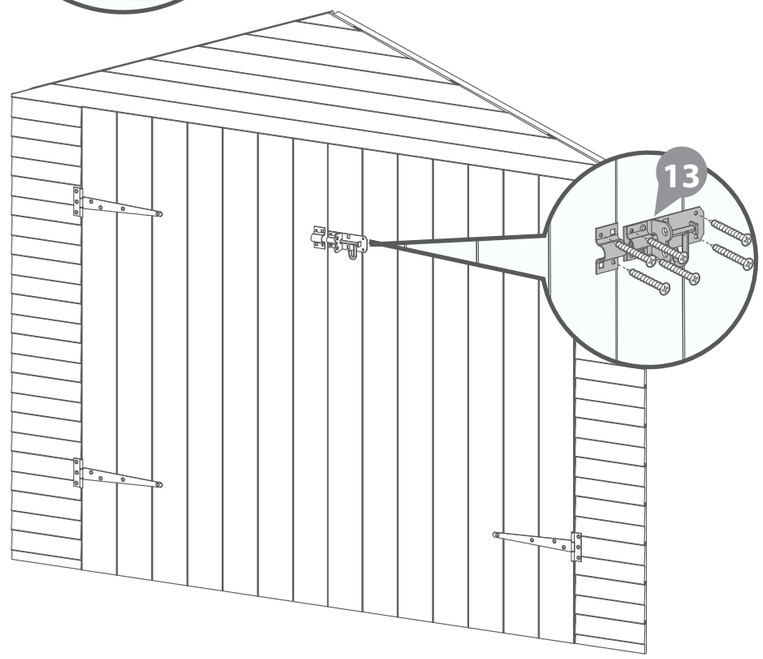


It is ESSENTIAL that you apply wood
treatment immediately after the building
has been assembled.

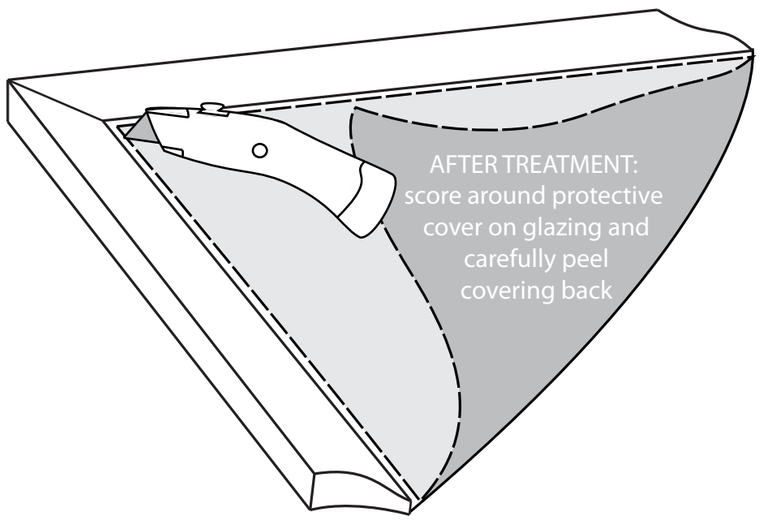
AFTER TREATMENT:
score around protective
cover on glazing and
carefully peel
covering back