
Aspley

habitat

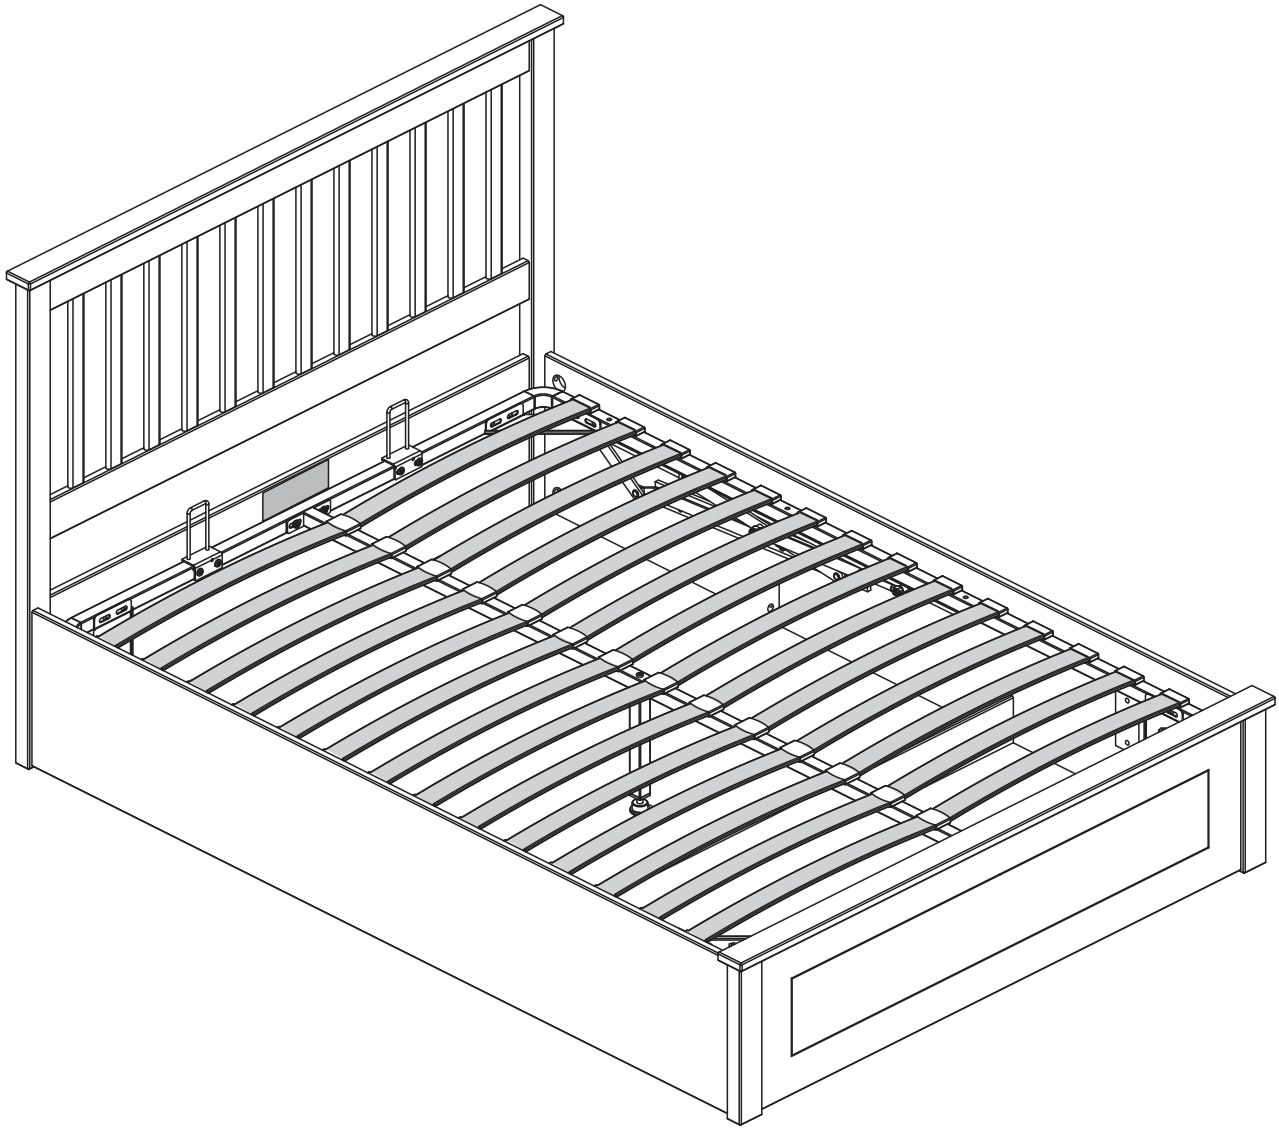

Spare Parts

www.argos-support.co.uk

Help@ClickSpares.co.uk

0370 112 1928

Customer Support

0345 640 2020

Issue 2 - 21/10/24


Safety and Care Advice

Product Details

5ft Ottoman White	334/1838
5ft Ottoman Oak Stain	342/6540
5ft Ottoman Grey	744/8610

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- This product has been constructed to be used in the domestic environment only and not for commercial purposes.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.

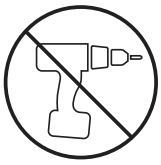

- We do not recommend the use of power drill/drivers for inserting screws as this could damage the unit. Only use hand screwdrivers.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Use a dry cloth to clean the product, furniture polish is not recommended.
- From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Additional Guidance

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.
- Maximum user weight 110kg
- This product is compliant EN 1725
- **Dimension of mattresse 150 x 200cm.**


IMPORTANT SAFETY WARNING

•Caution. This bed uses a pressurised mechanism. Use caution when operating. - Always use two hands at arm's length.

•You must ensure the mattress is on the bed frame before lifting the mechanism. Failure to do so may result in injury.

•Please ensure Children and Pets are kept away from the bed when operating the bed mechanism.

ALWAYS USE TWO HANDS AT ARM'S LENGTH TO OPERATE MECHANISM FROM THIS LOCATION

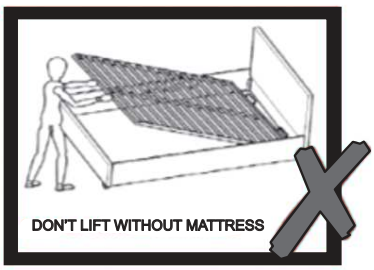



Habitat, Argos Limited and Sainsbury's Supermarkets Ltd, London EC1N 2HT, UK. Argos (N.I.) Ltd and Sainsbury's (NI) Ltd. Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK


Panels




3 Right Post
(1100x63mm) x1



4 Left Post
(1100x63mm) x1



11 Wooden Block
(125x65mm) x2

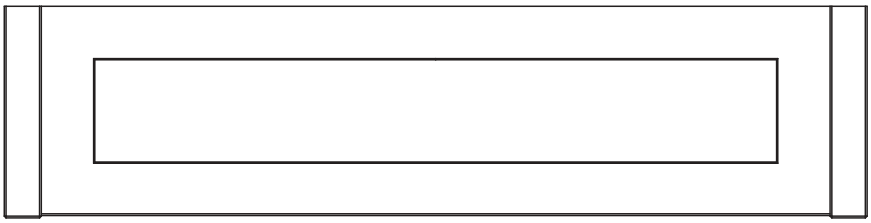


32 Footboard
(1618x360mm) x1




33 Footboard top rail
(1642x67mm) x1



34 Storage Centre Rails
(1560x110mm) x2

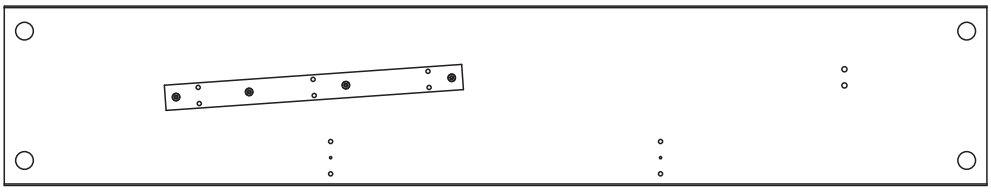

35 Right Side Rail
(2045x355mm) x1

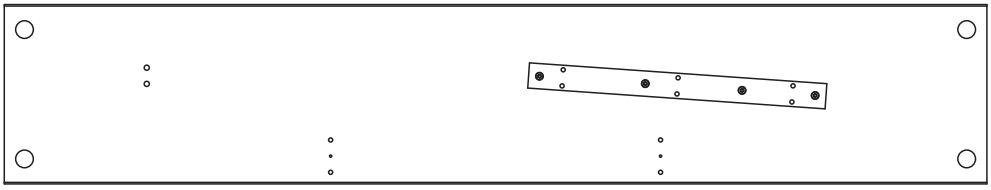


36 Left Side Rail
(2045x355mm) x1

Panels




37 Headboard Bottom Panel (1492x355mm) x1

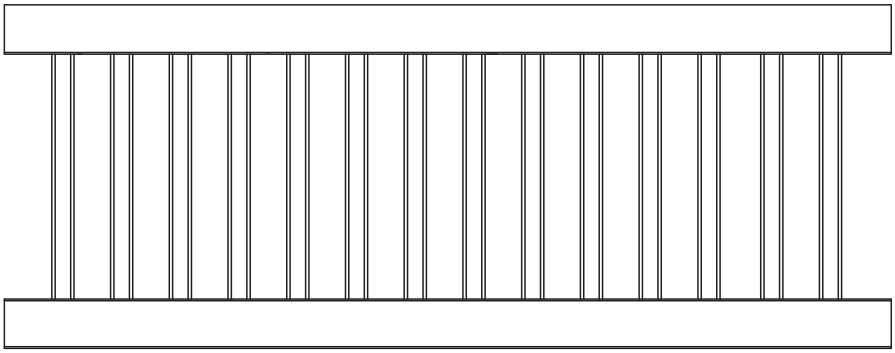


38 Headboard Frame (1492x609mm) x1



39 Headboard top rail (1642x67mm) x1



40 Storage Bottom Panel (1558x670mm) x2

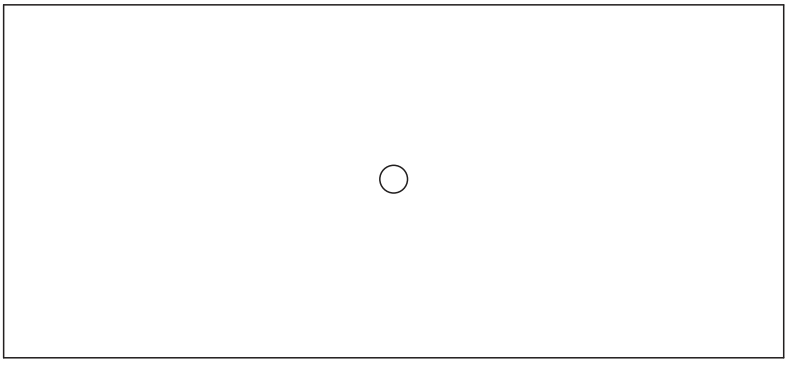


41 Storage Middle Bottom Panel (1558x670mm) x1

Fittings

A 

5x70mm Screw x4


B 

10x40 Wooden Dowel x28

10004

C 

8x40 Wooden Dowel x8

D 


1/4x80mm Bolt x4

9204

E 

Half-moon nut x4

6000

F 

7x90mm Bolt x4

G 

1/4x65mm Headless Bolt x4

H 

Half-Moon Washer x4

J 


1/4 mm nut x4

K 


13x40 Metal Dowel x10

L 


13x32 Metal Dowel x8

M 

15x11 Locking Nut x18

N 

1/4x20mm Bolt x8


O 

Spanner x1


P 

Allen Key x1

Tools required




Ruler/tape measure



Scissors



Phillips screwdriver (small & medium)

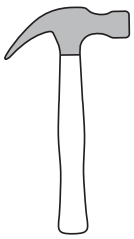

Large hammer


1


B

10x40 Wooden Dowel x28

C


8x40 Wooden Dowel x8

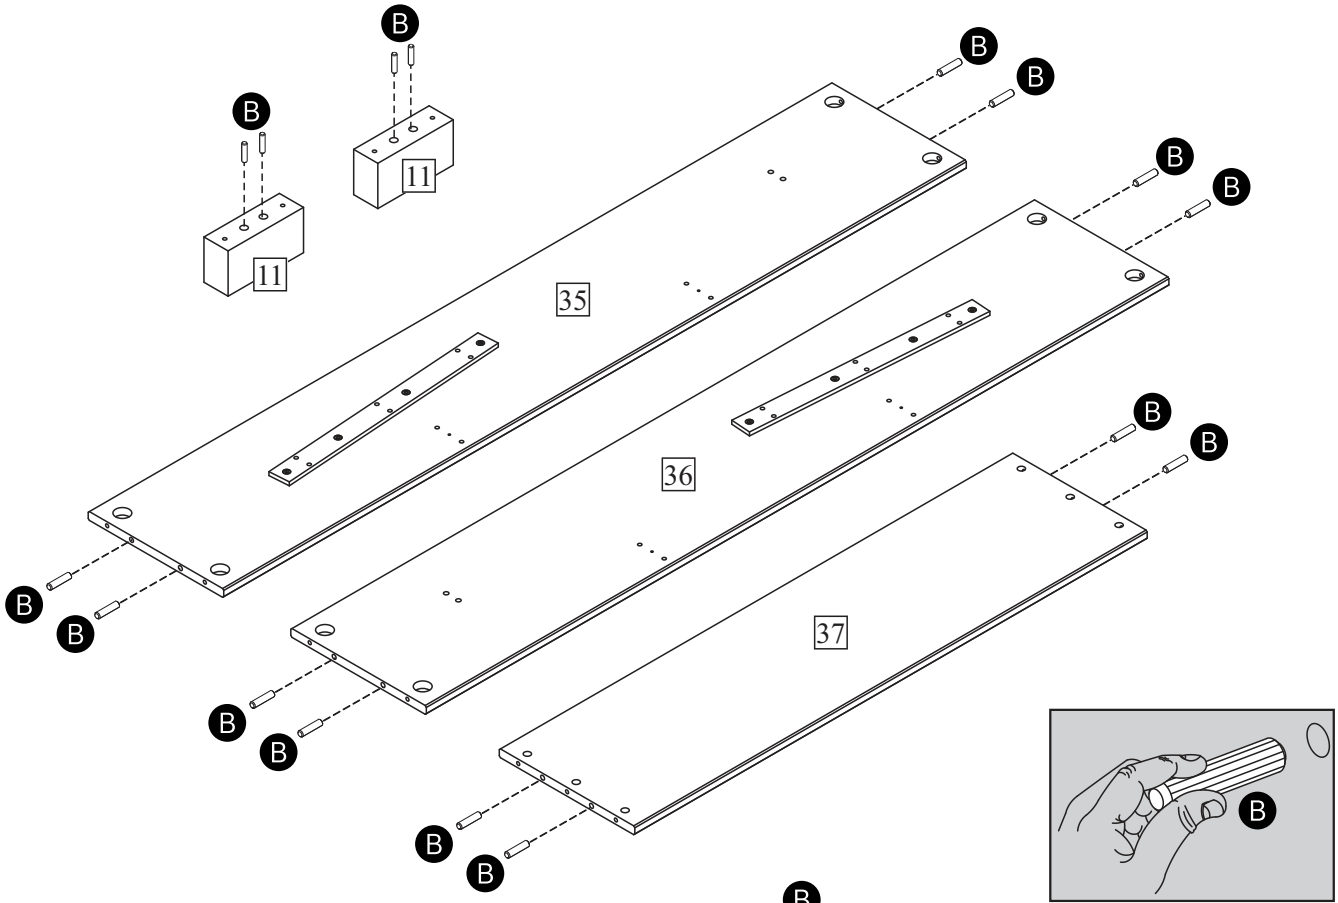

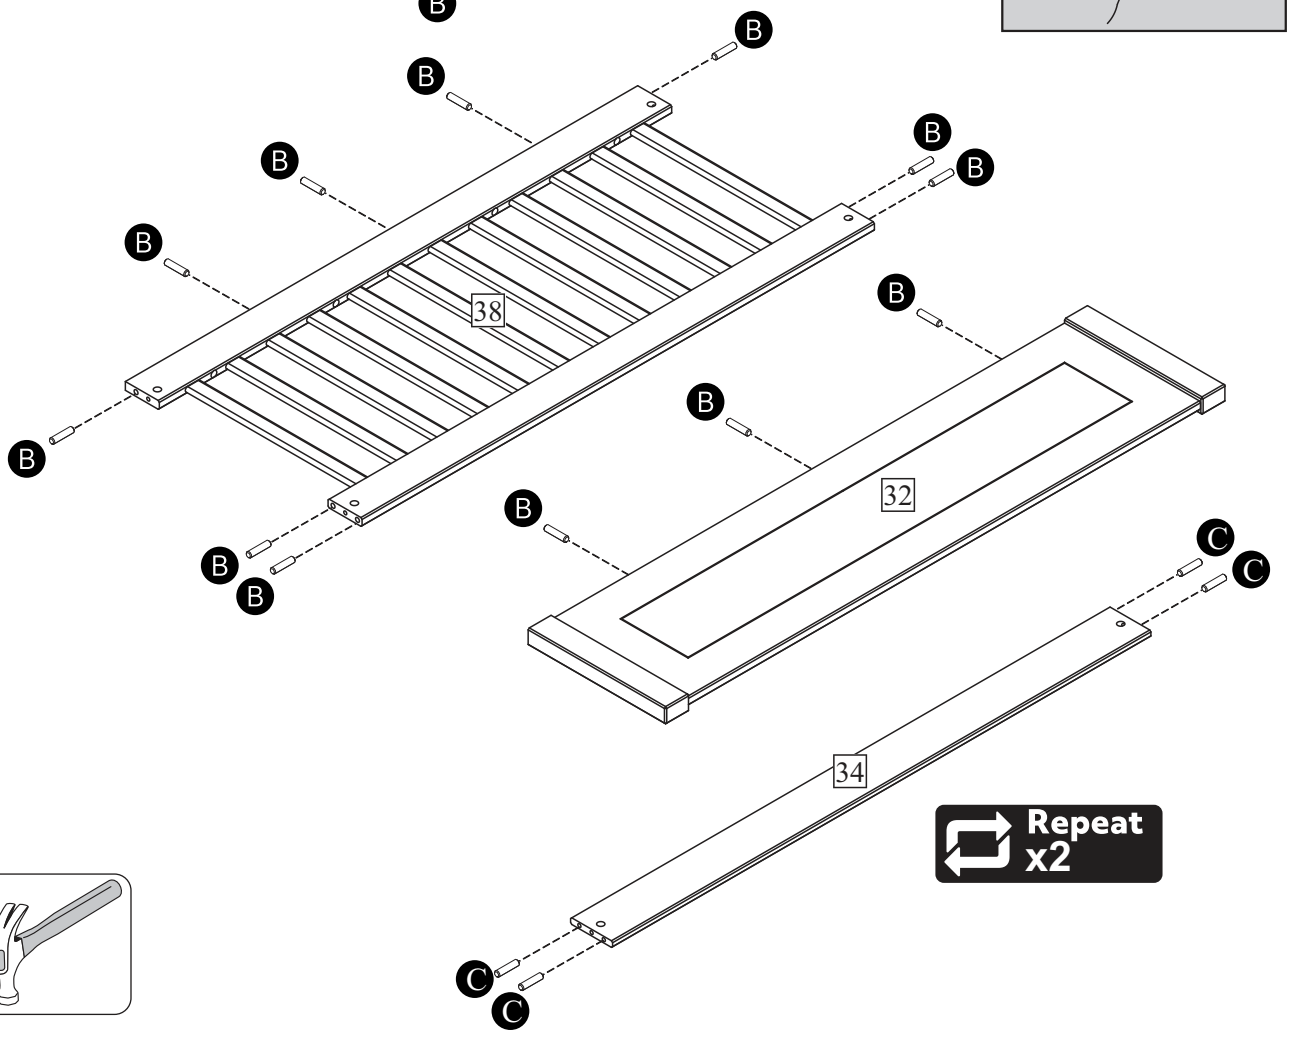


2

K



40mm Metal Dowel x10

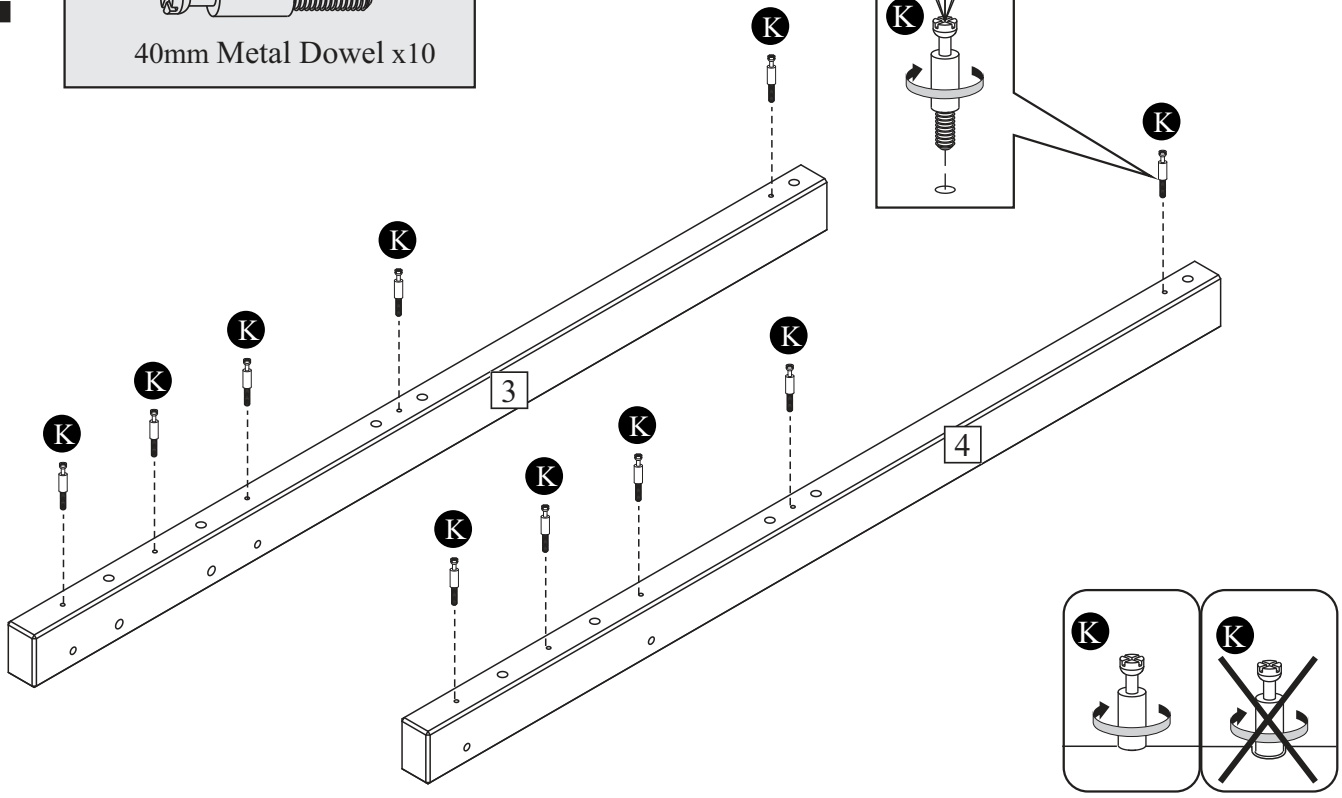



3

M




15x11 Locking Nut x5

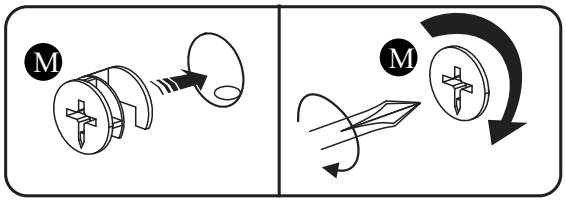


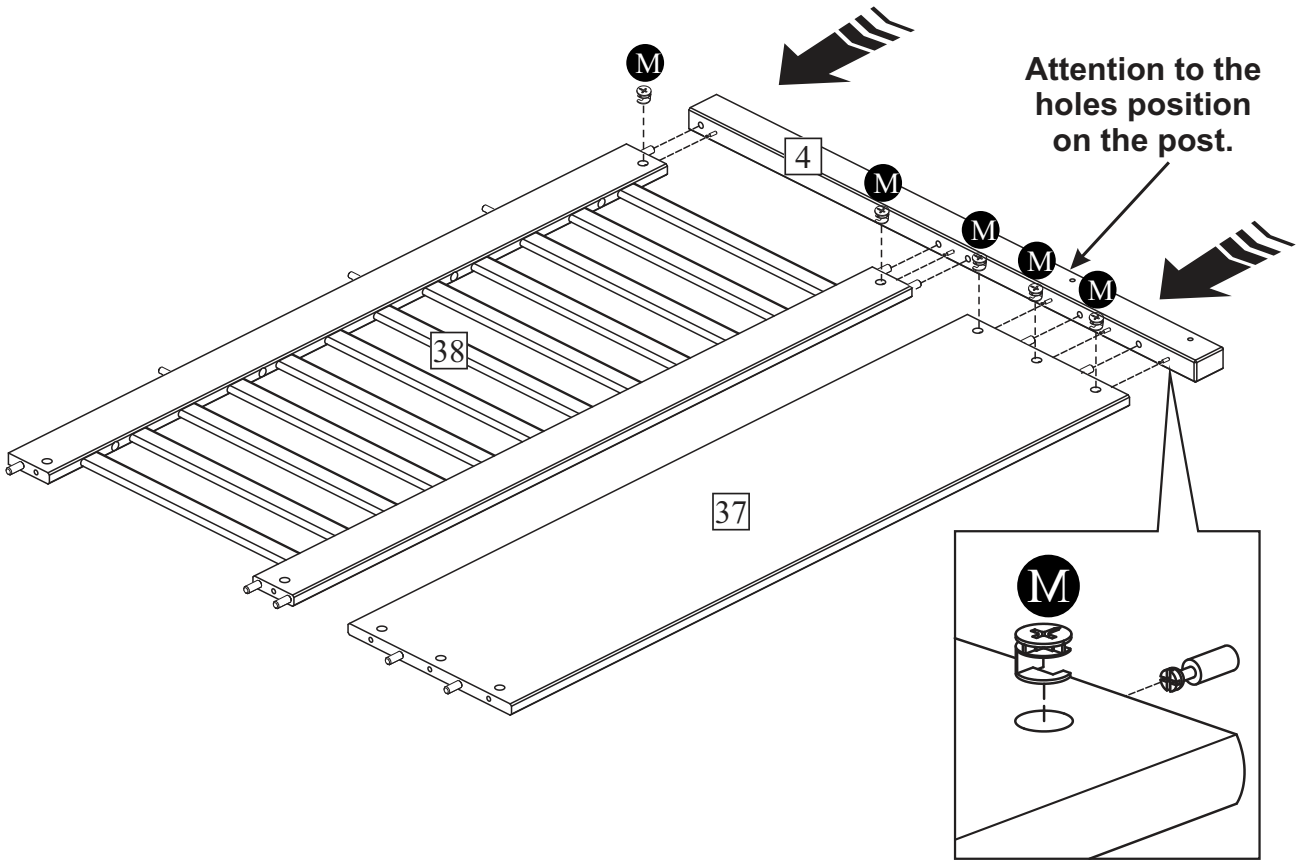

4




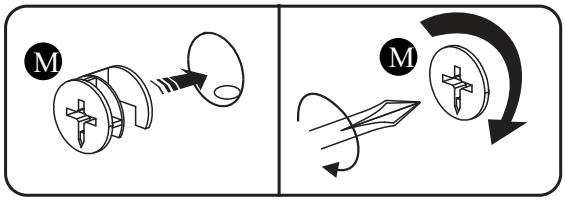


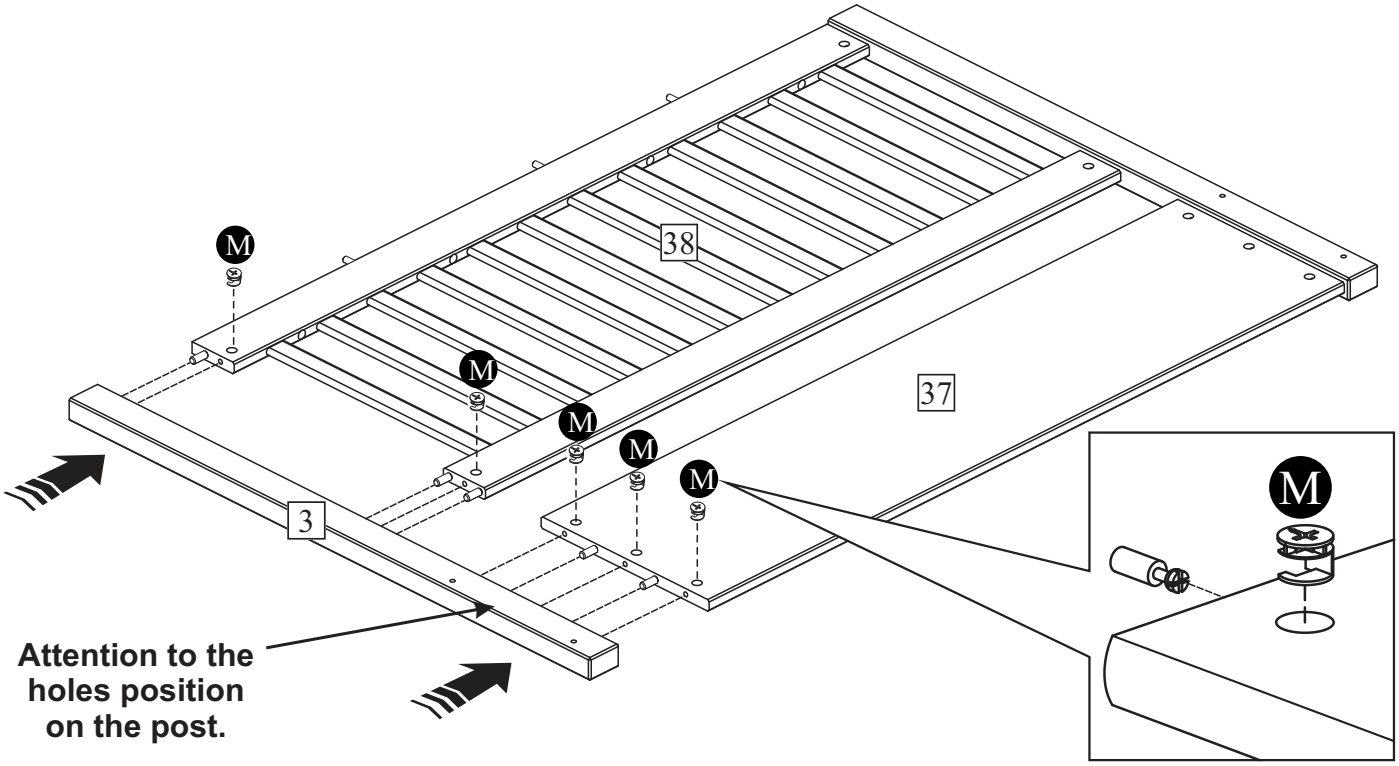


Attention to the holes position on the post.

5

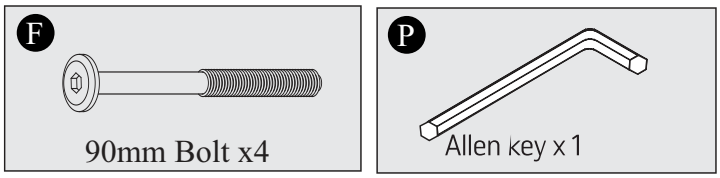


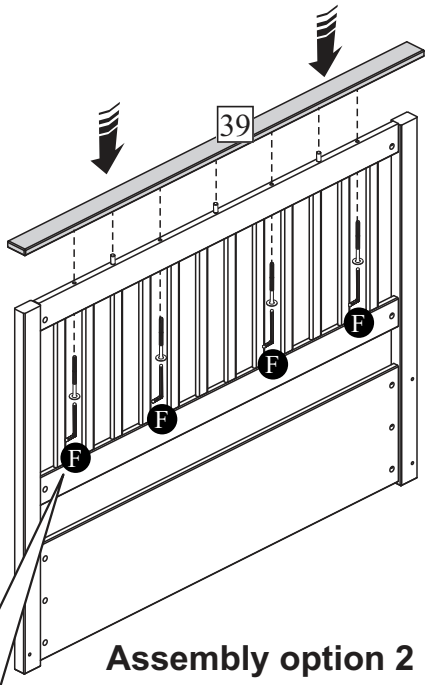

Assembly option 2

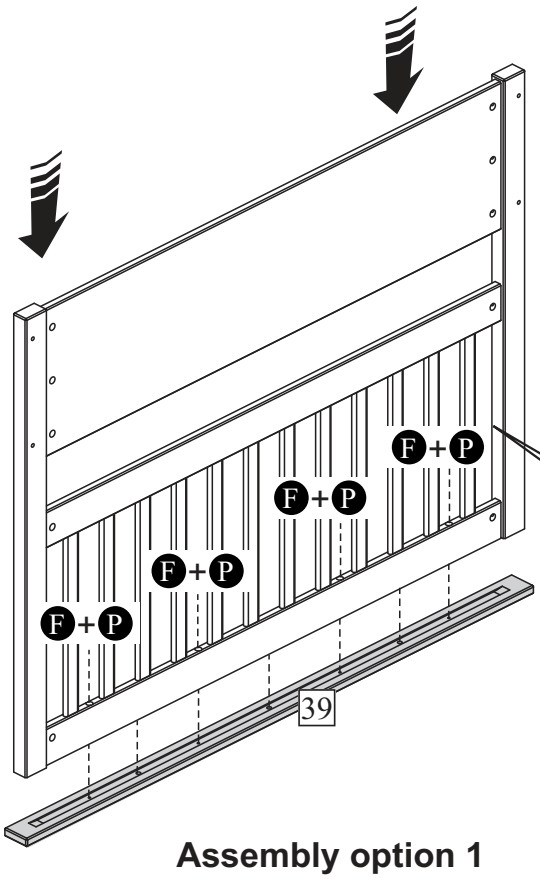


Assembly option 1

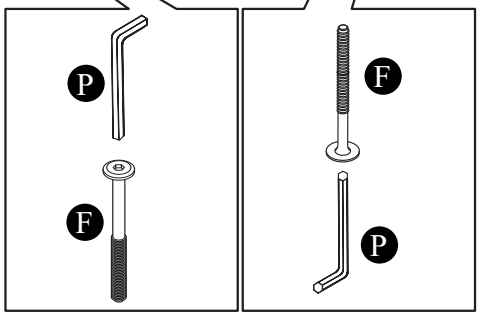


6

L




32mm Metal Dowel x4

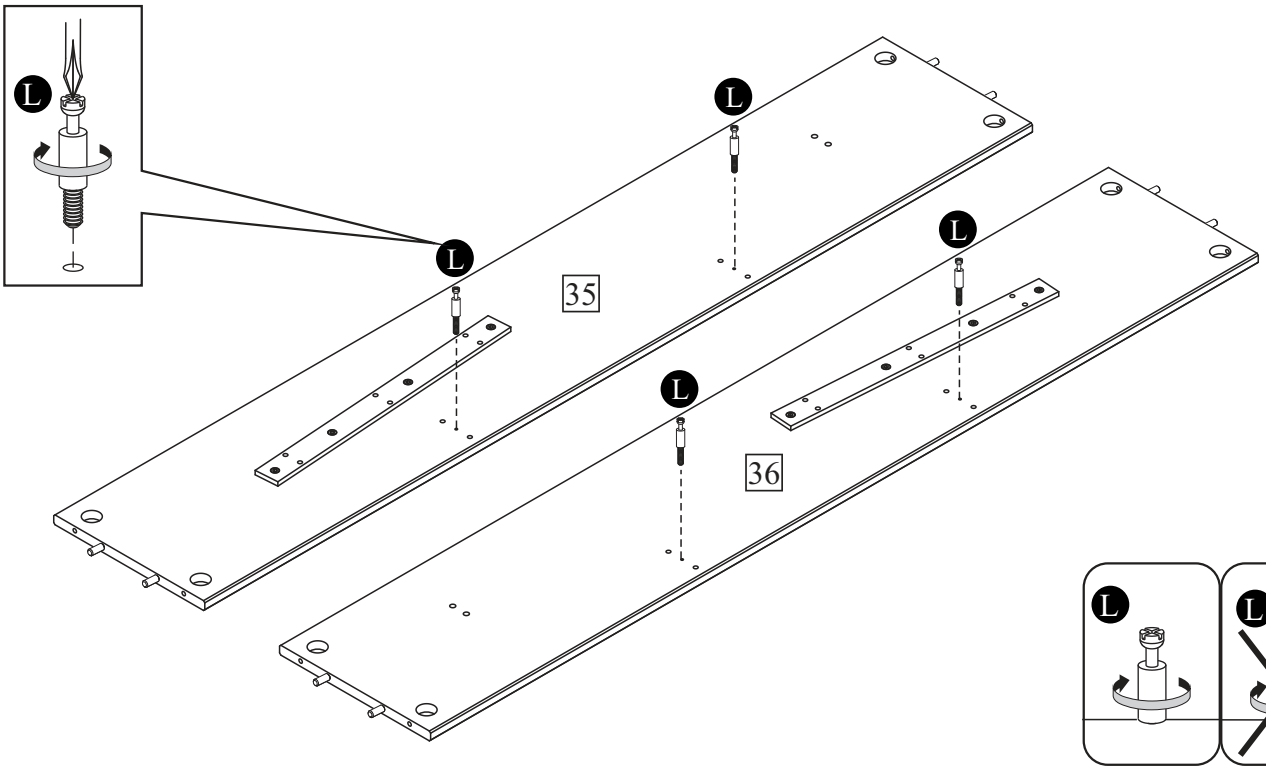

7


A



70mm Screw x4

8

D



1/4x80mm Bolt x2

E




Half-moon nut x2

P




Allen key x 1

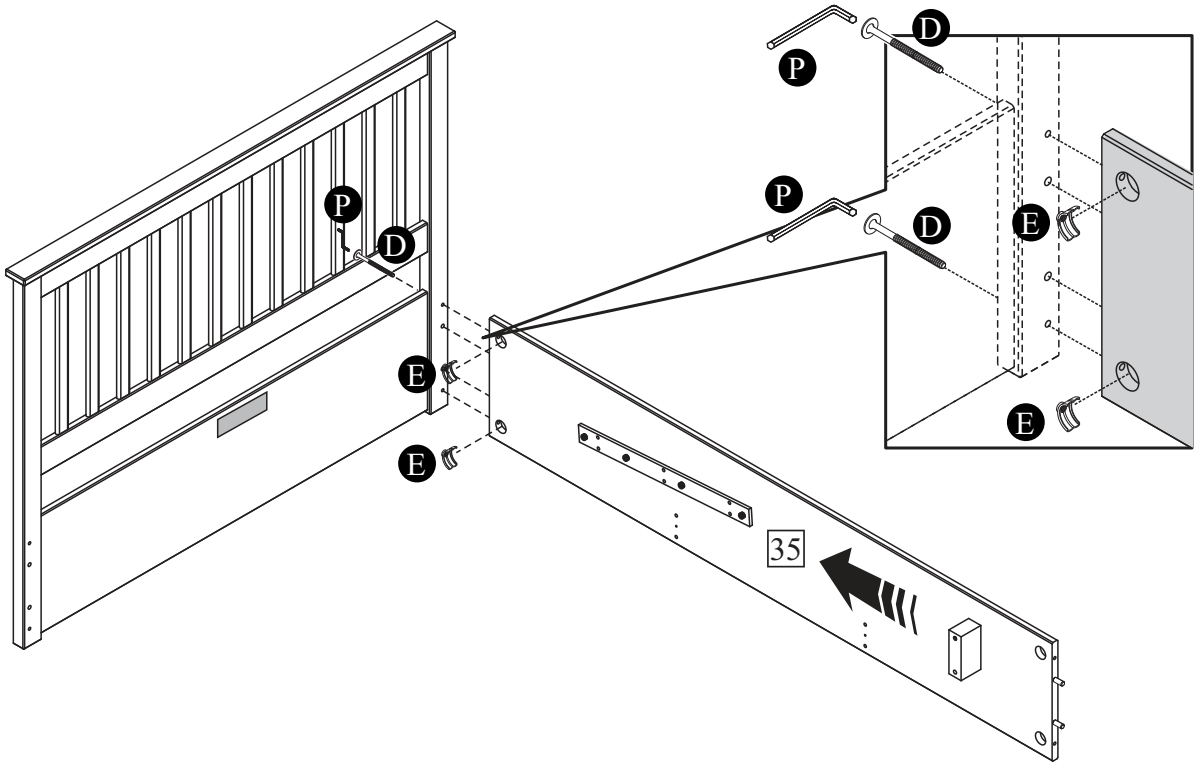

9

D




1/4x80mm Bolt x2

E




Half-moon nut x2

P

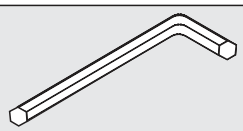

Allen key x 1

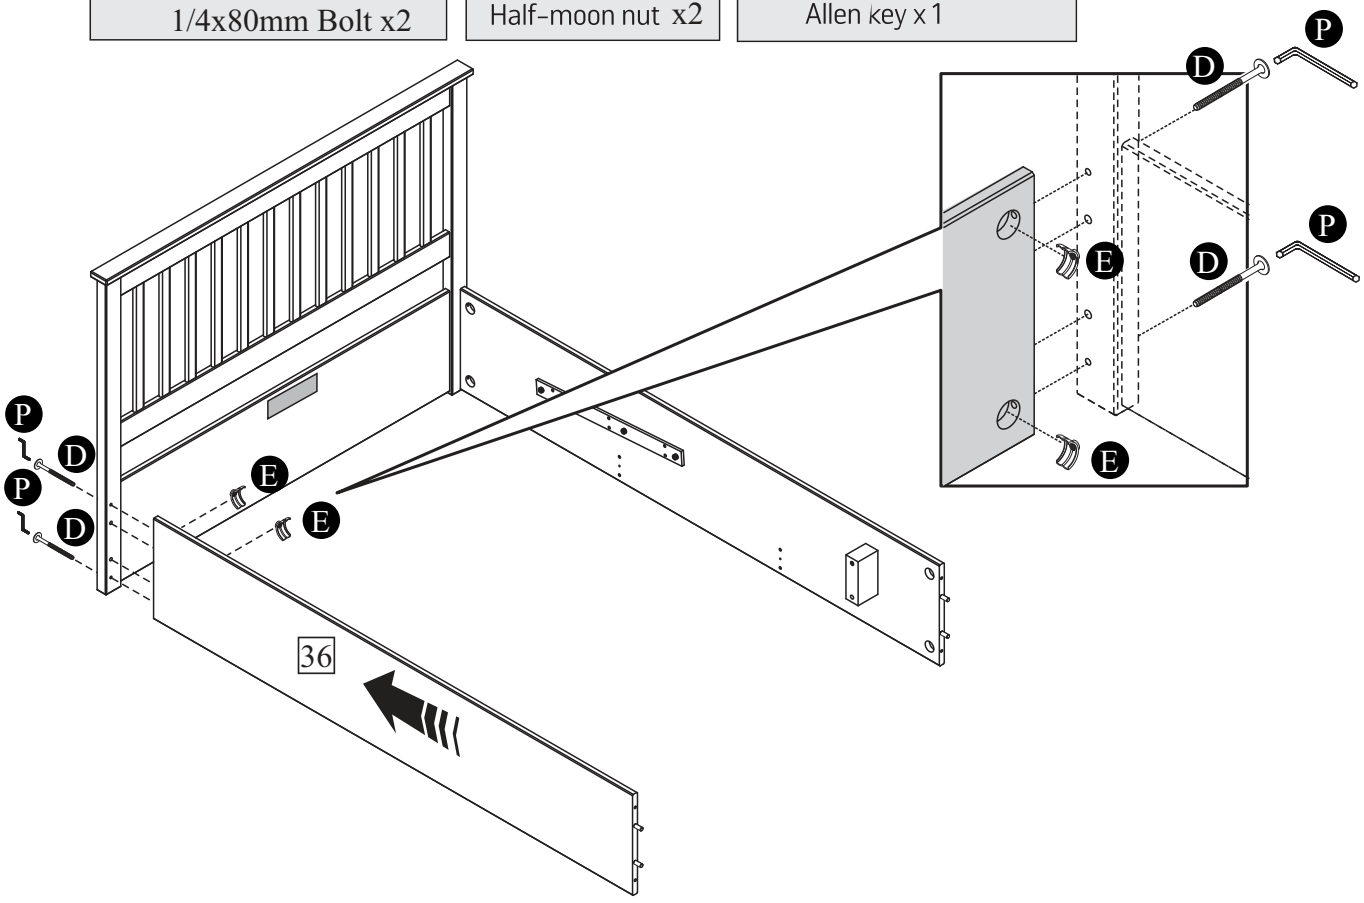



10

M




15x11 Locking Nut x4

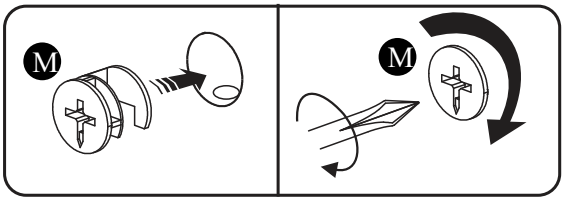

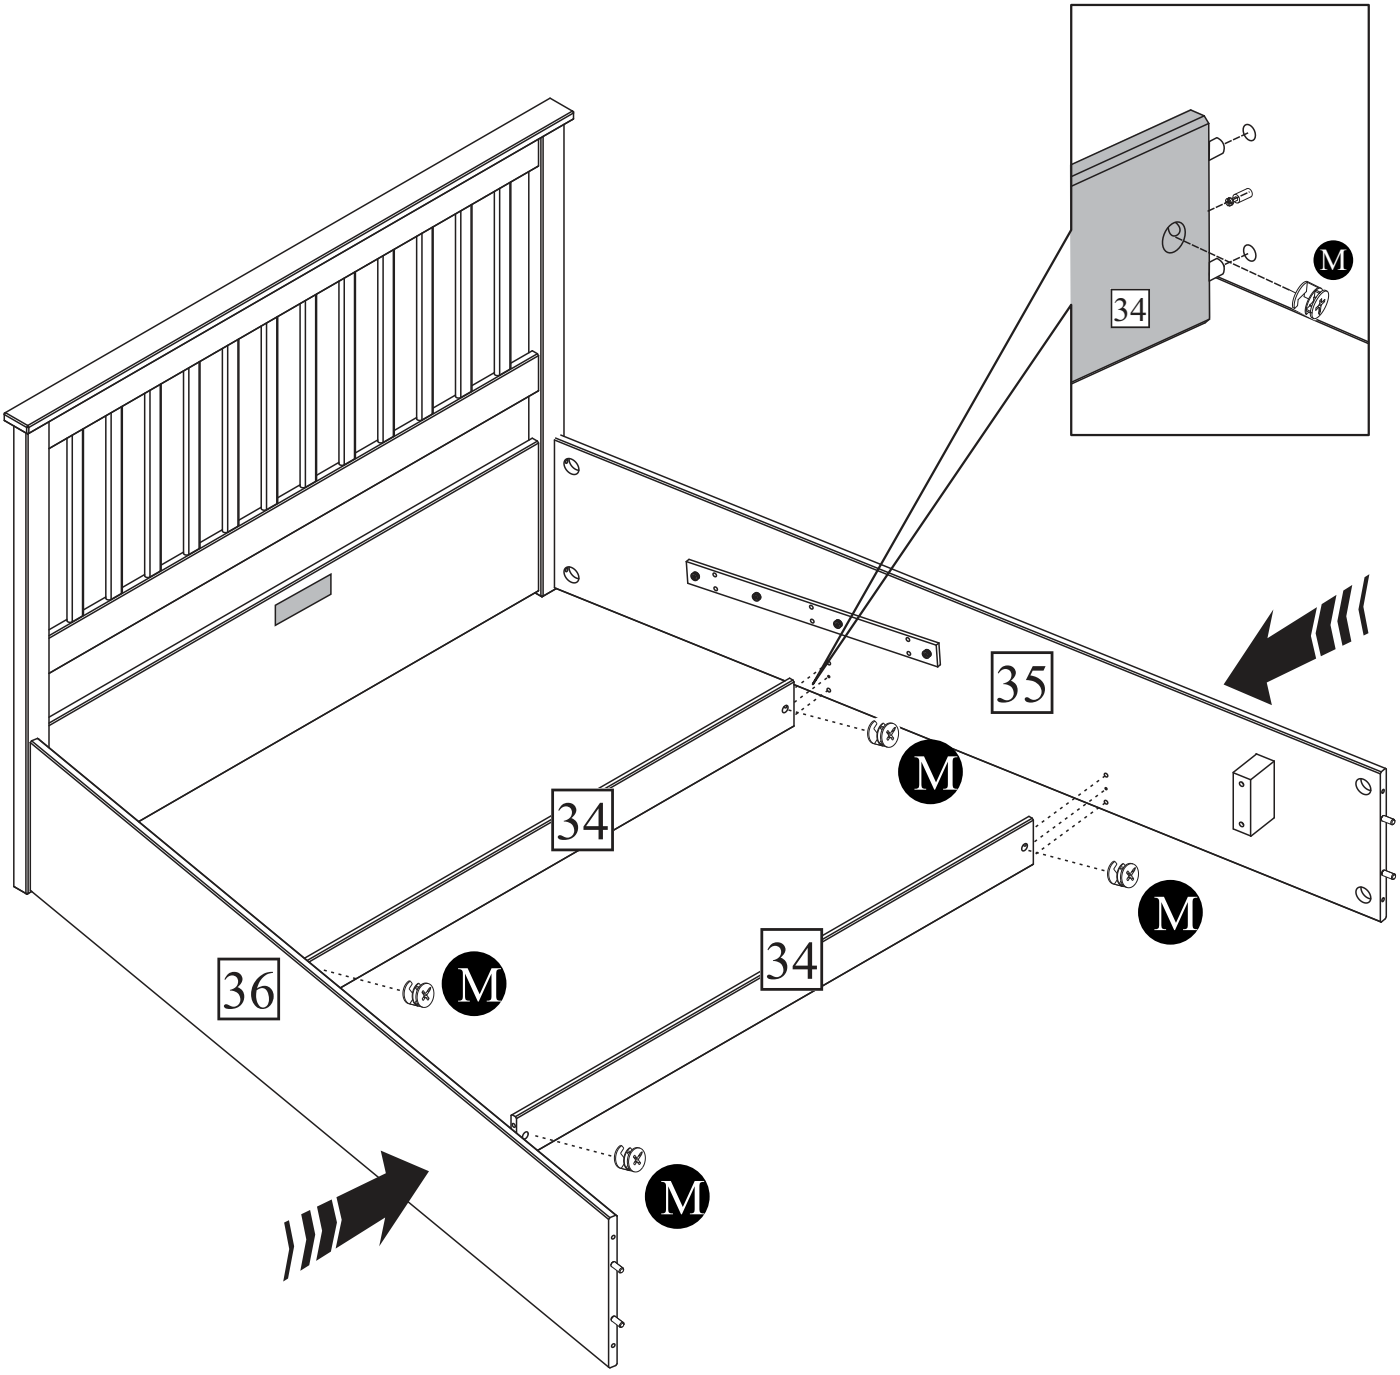



11

L



32mm Metal Dowel x4

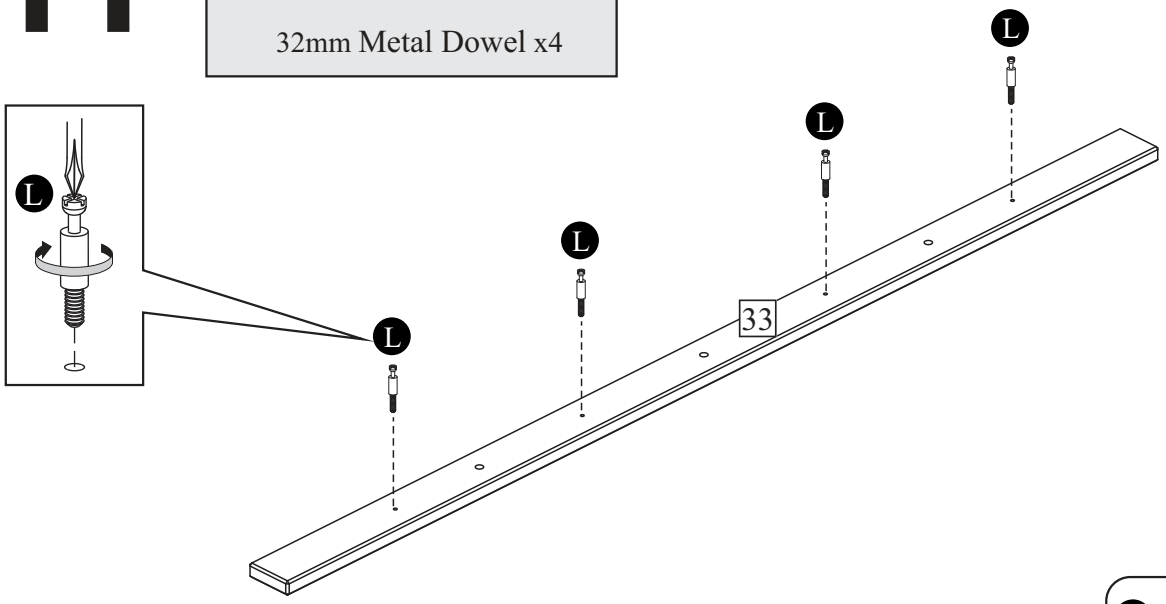

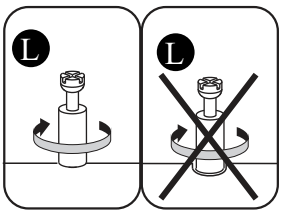

12

M



15x11 Locking Nut x4

13

G



65mm Headless Bolt x4

14

H




Half-Moon Washer x4

J




1/4 mm nut x4


O




Spanner

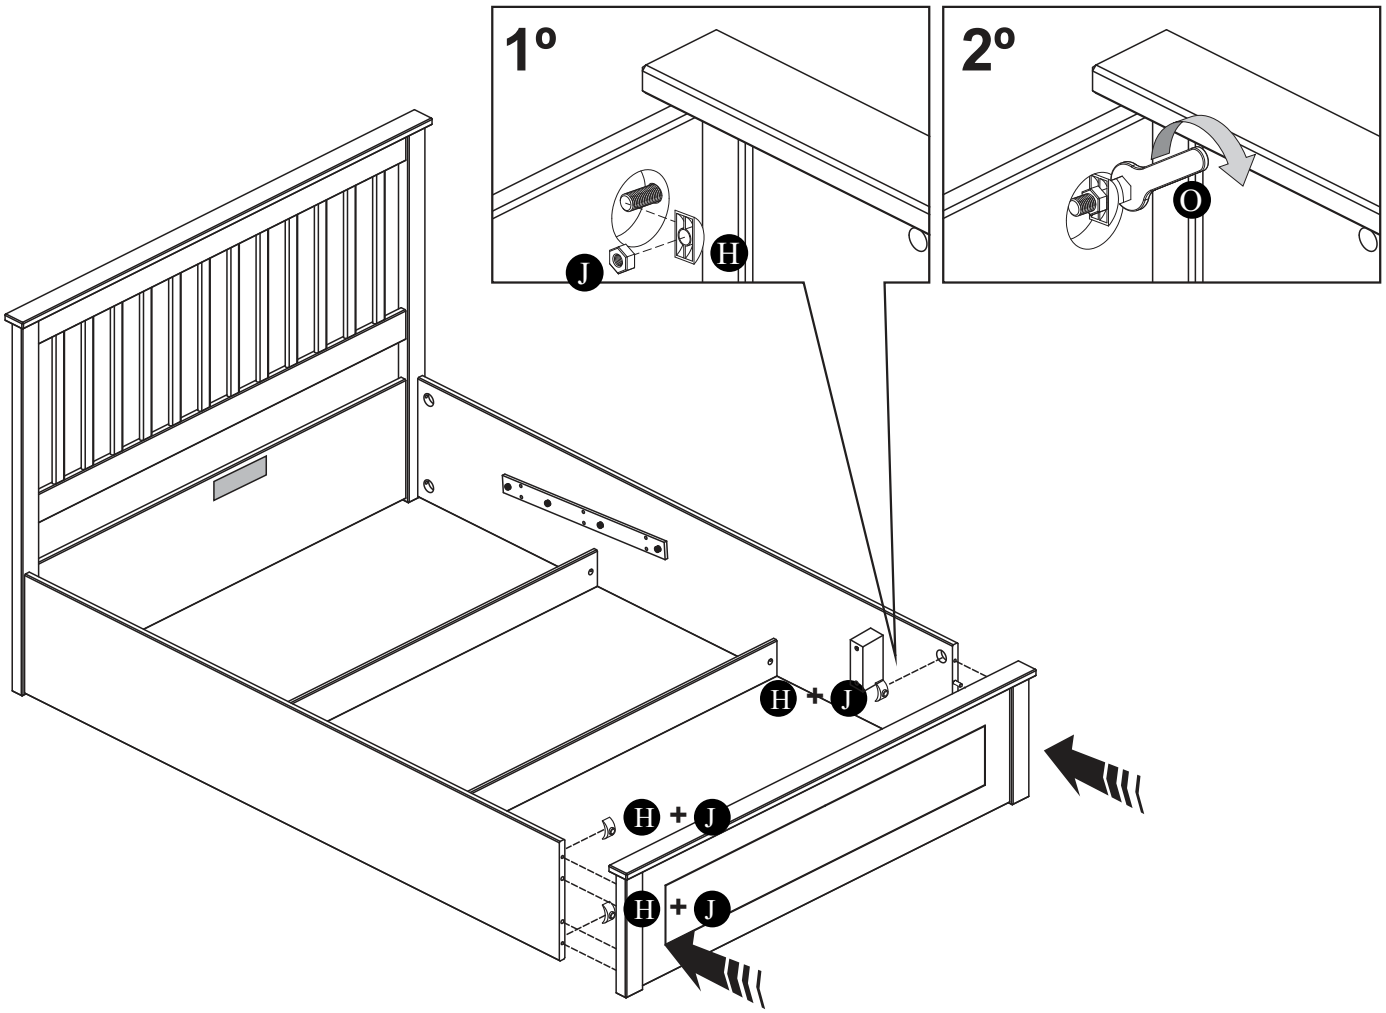


15

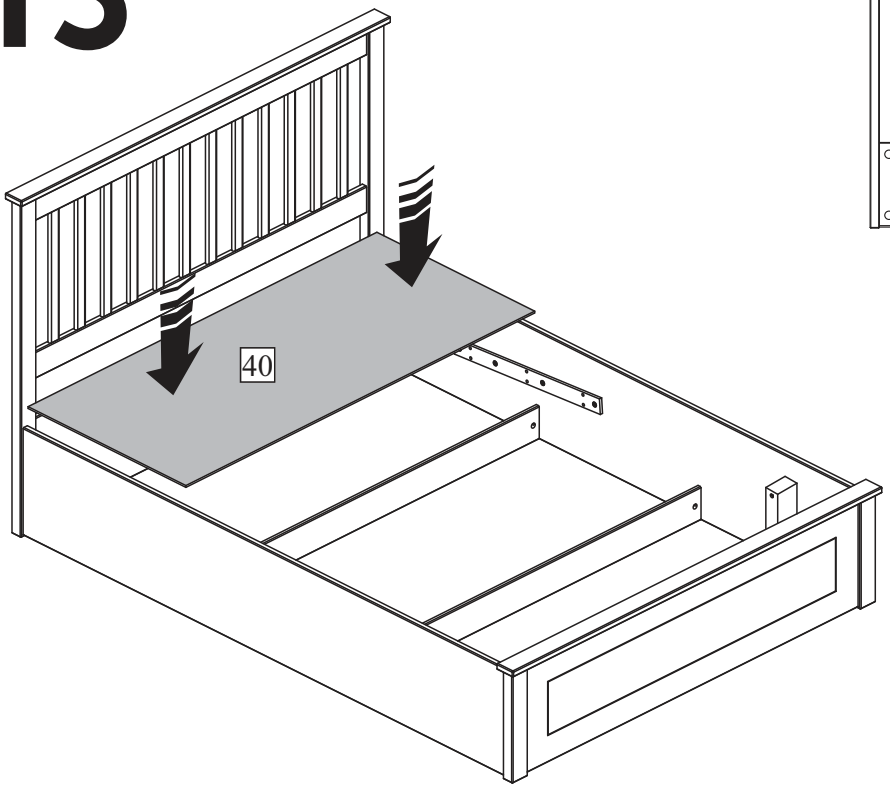


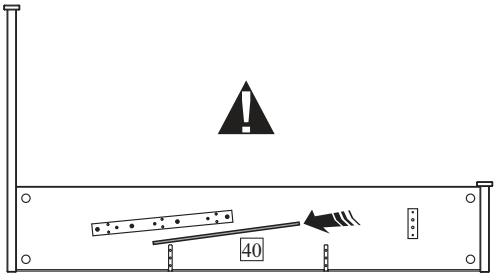


16

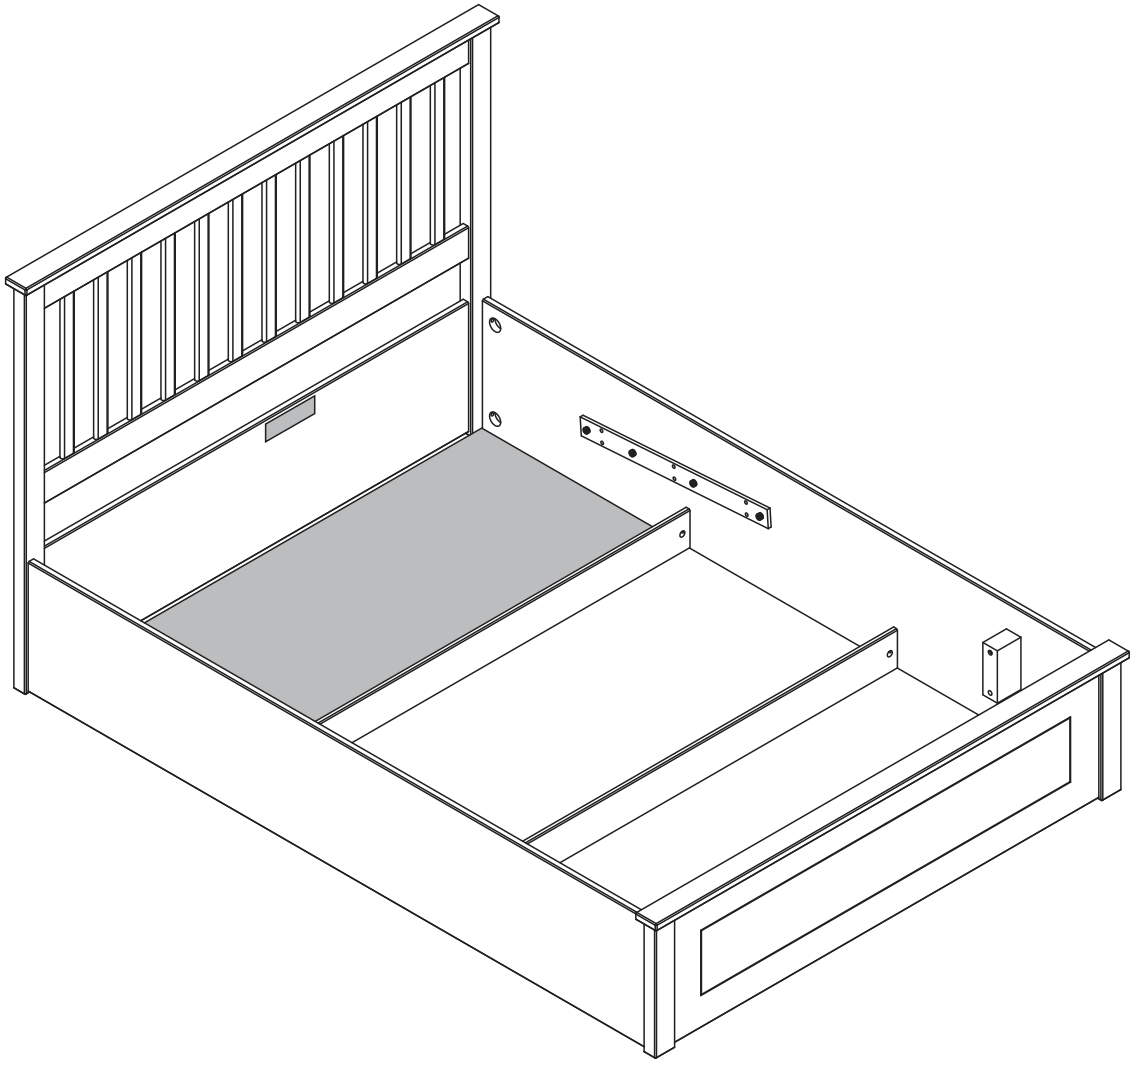


Metal Structure

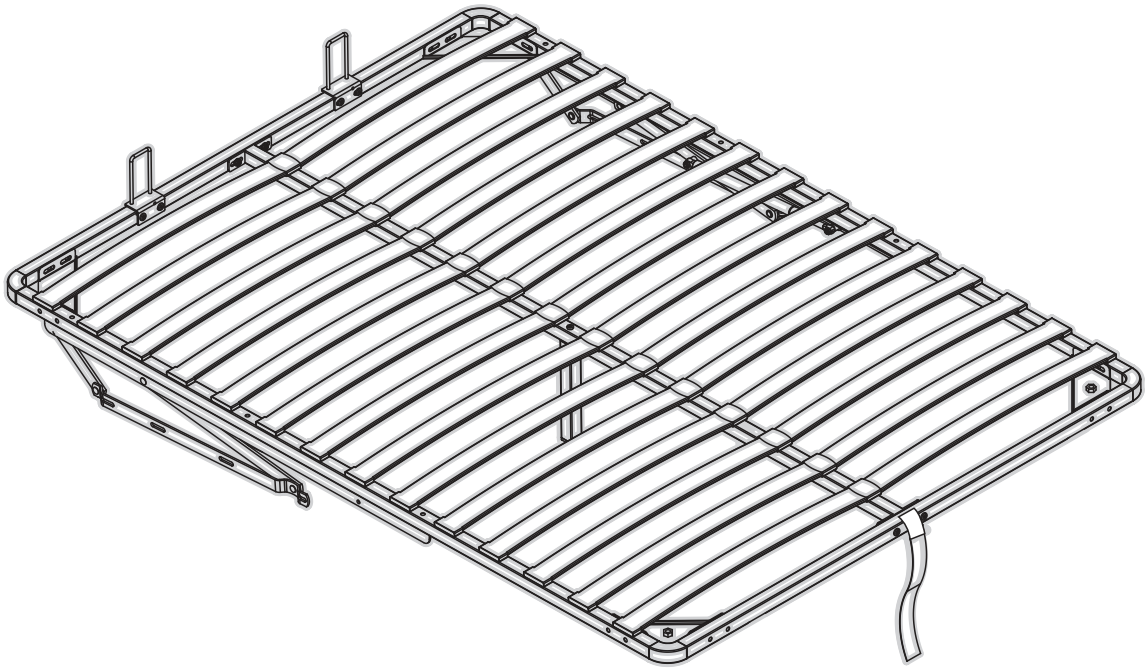


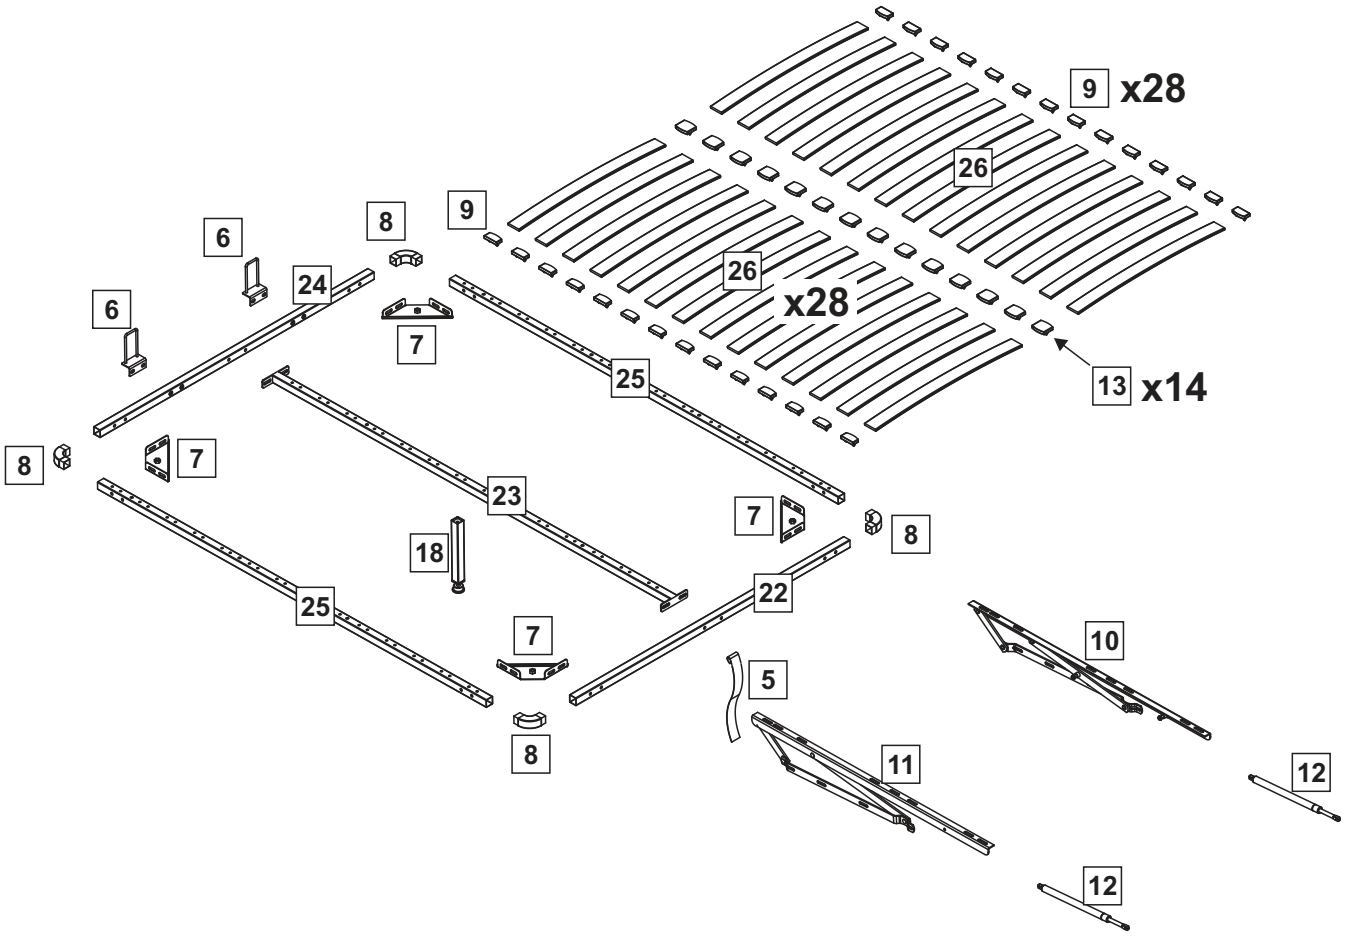

Parts



5 Pull Strap x1



6 Mattress Stopper (110x60mm) x2




7 Metal Corner (235x105mm) x4




8 Plastic Corner (54x54x30mm) x4



9 Slats Cap (52x8mm) x28




13 Slat Center Cap (57x8mm) x14

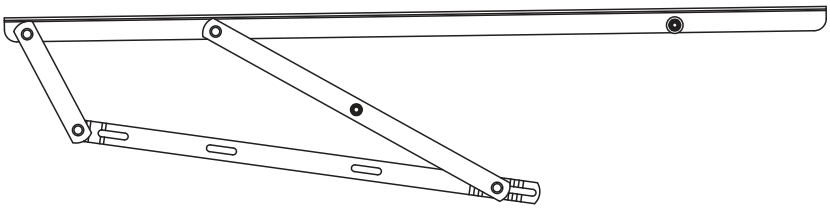


10 Right Hinge (910mm) x1

Parts

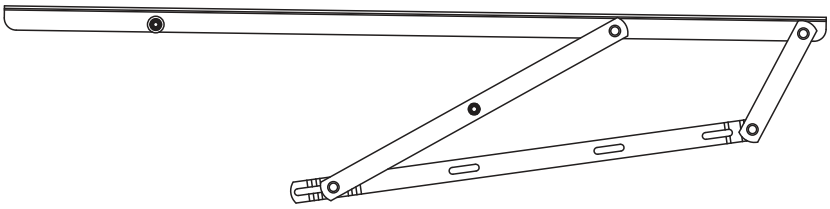

11 Left Hinge (910mm) x1




12 Hydraulic Piston (650N) x2



18 Center Leg (242mm) x2



22 Footboard end Bar (1392x30x30mm) x1




23 Center Bar (1842mm) x1



24 Headboard end Bar (1392x30x30mm) x1




25 Side Bar (1890x30x30mm) x2




26 Slats (742x52mm) x28

Fittings

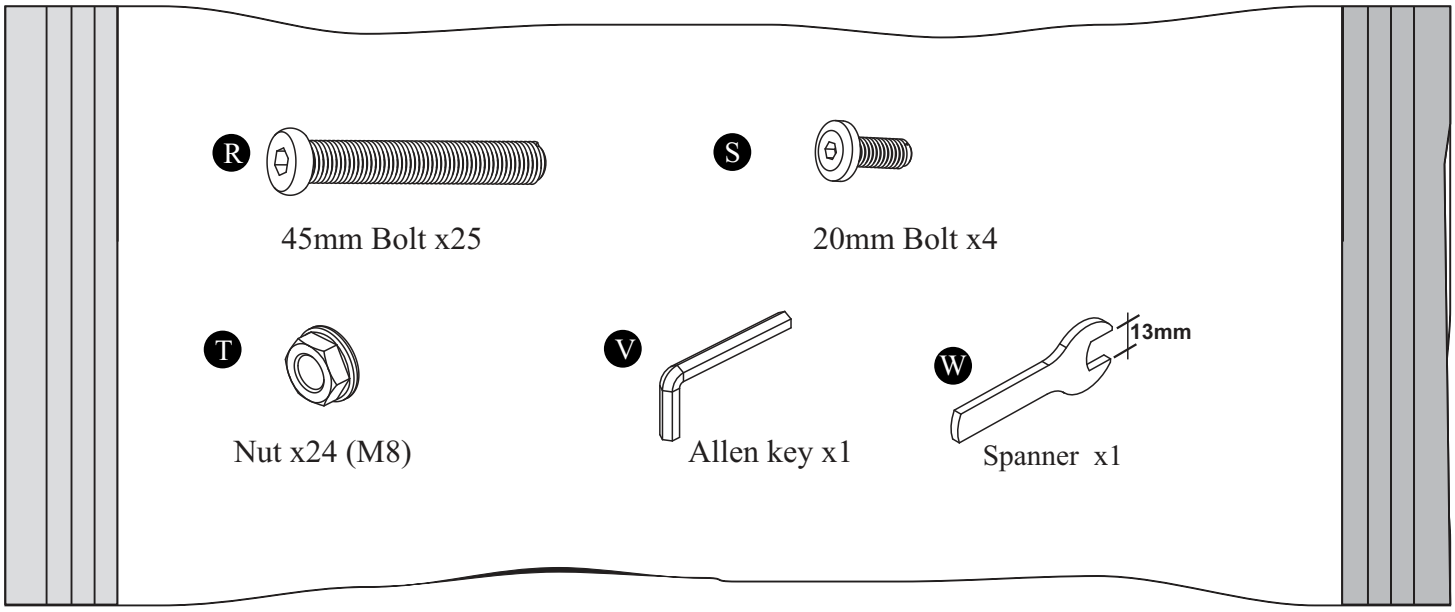

Tools required



Ruler/tape measure



Scissors



Phillips screwdriver (small & medium)




Not included





Eye protection (when using a hammer or glue)

1

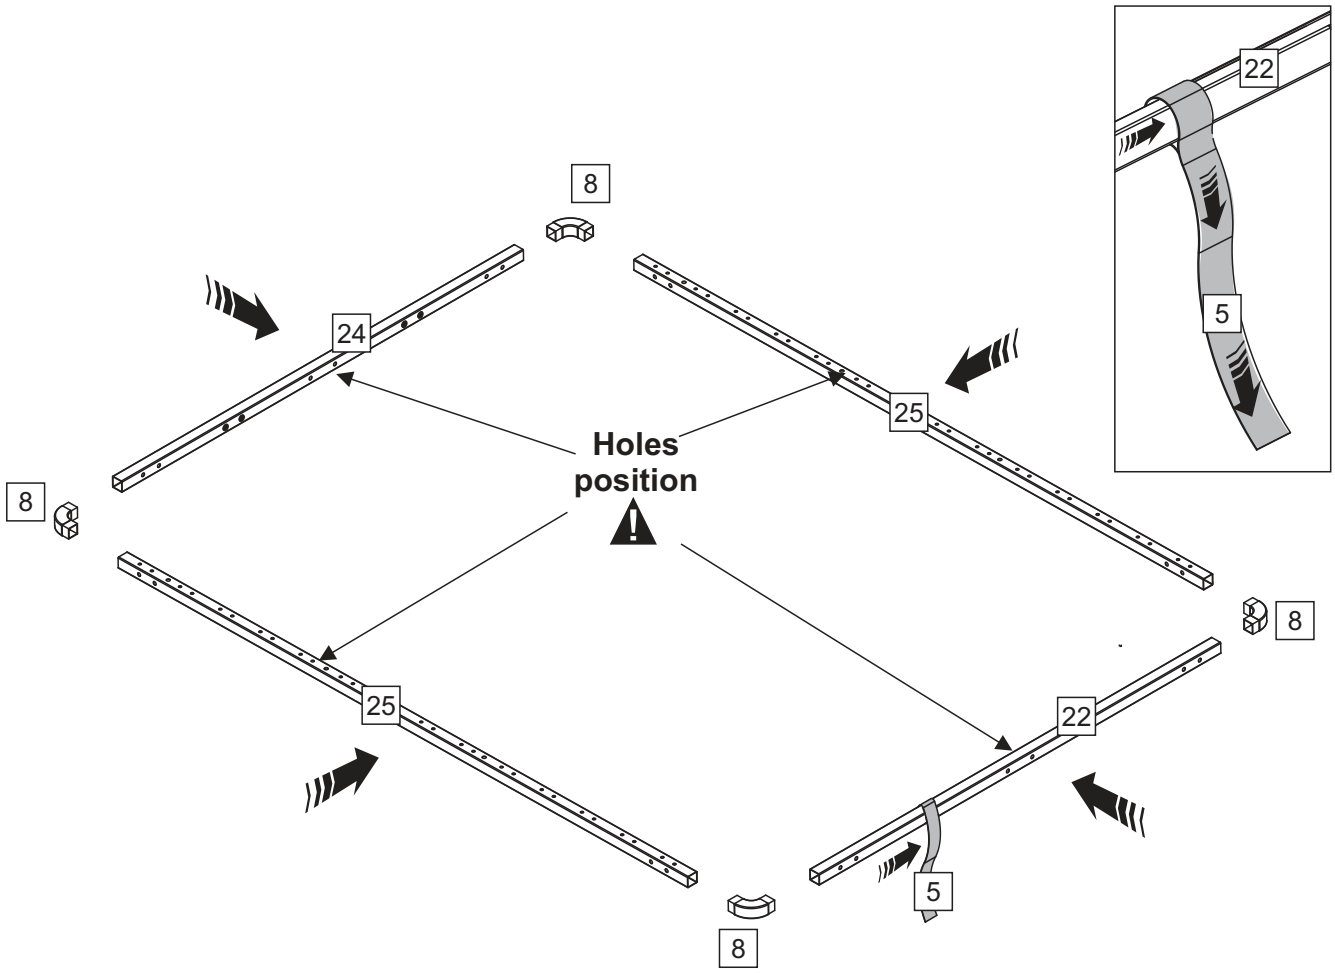
22
5
8
24
25
Holes
position
8
8
25
22
5
8

2

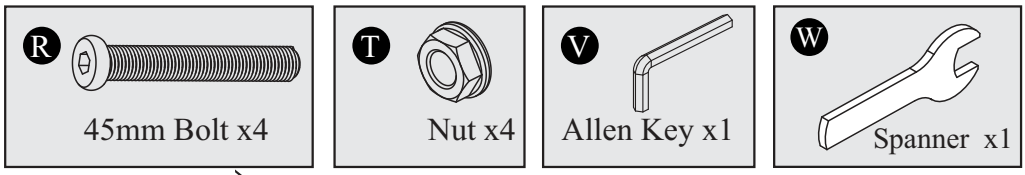
R
45mm Bolt x4
T
Nut x4
V
Allen Key x1
W
Spanner x1

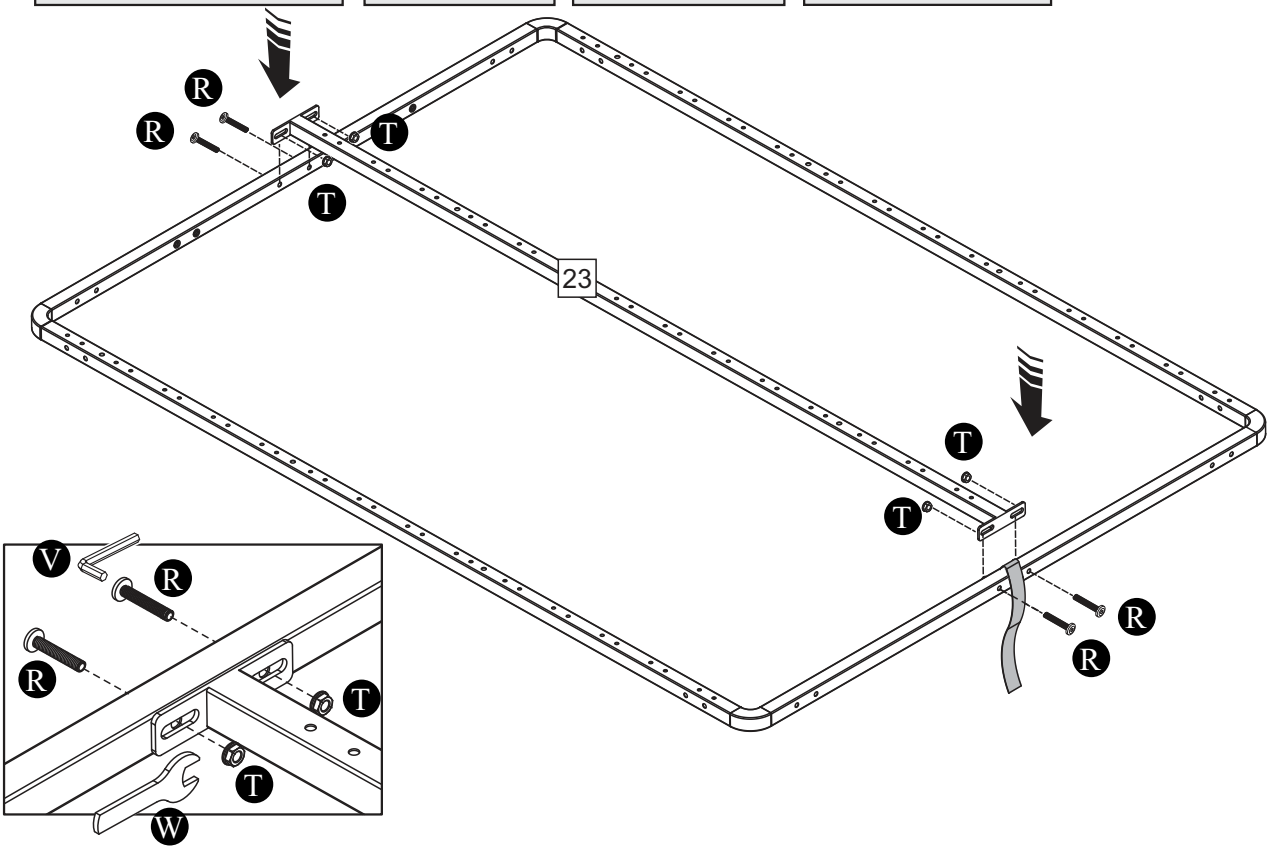
R
R
T
T
23
T
T
R
R
V
R
R
T
T
W


3

R 45mm Bolt x16

T Nut x16

V Allen Key x1


W Spanner x1

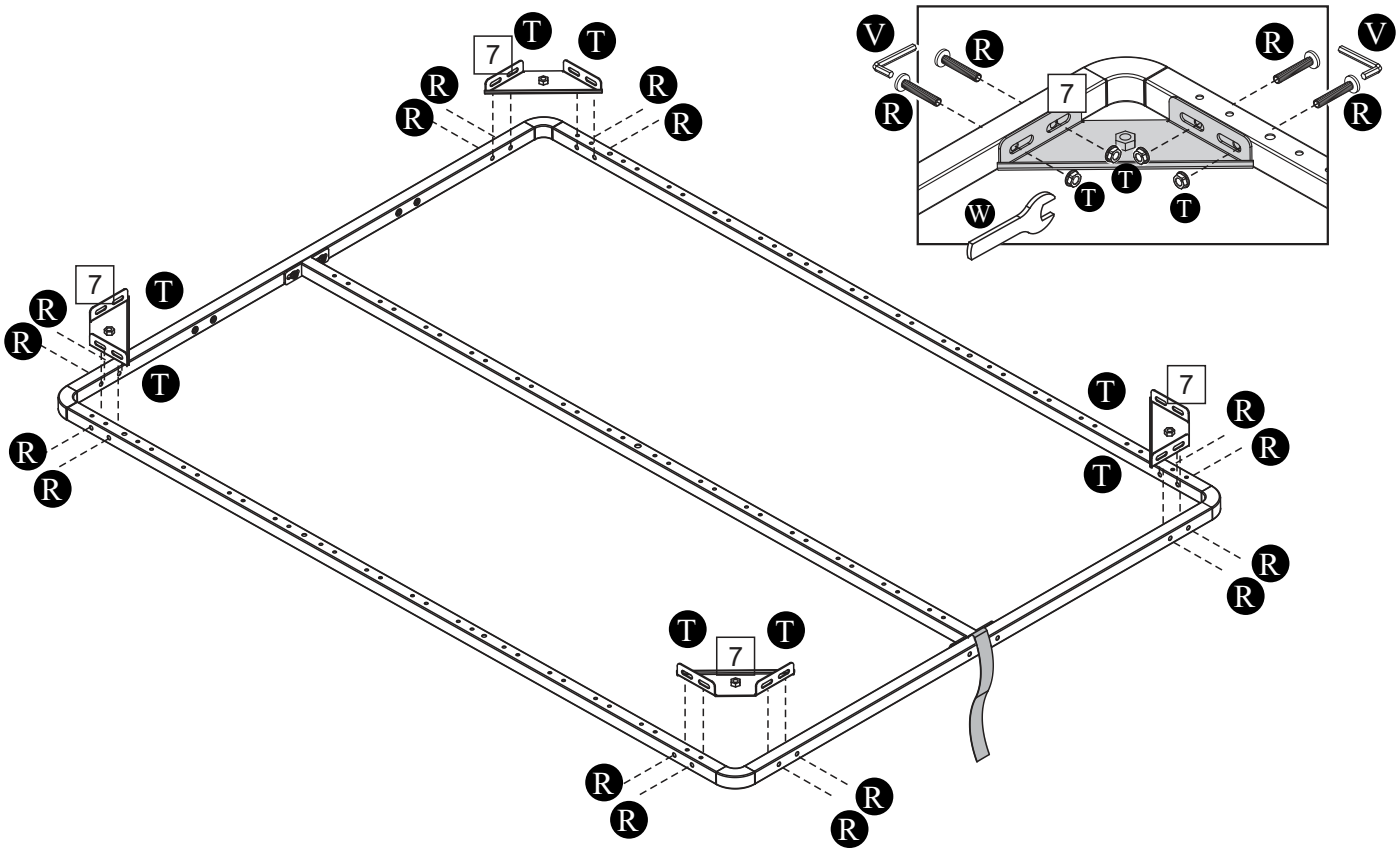


4


S 20mm Bolt x4

V Allen Key x1

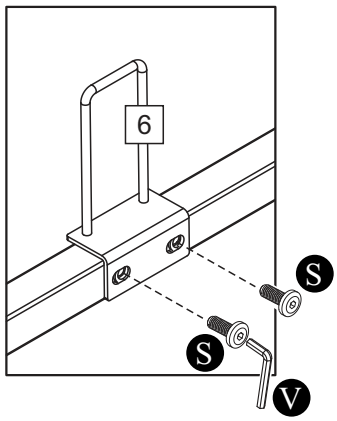


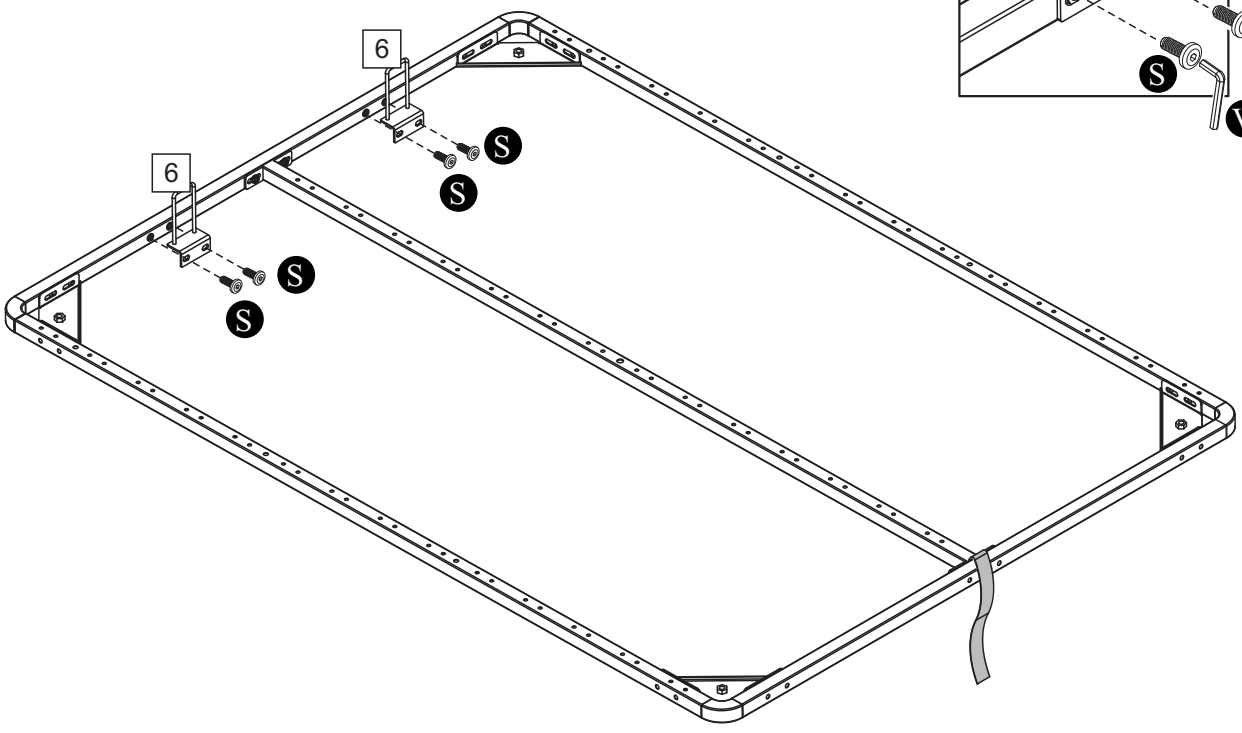


5

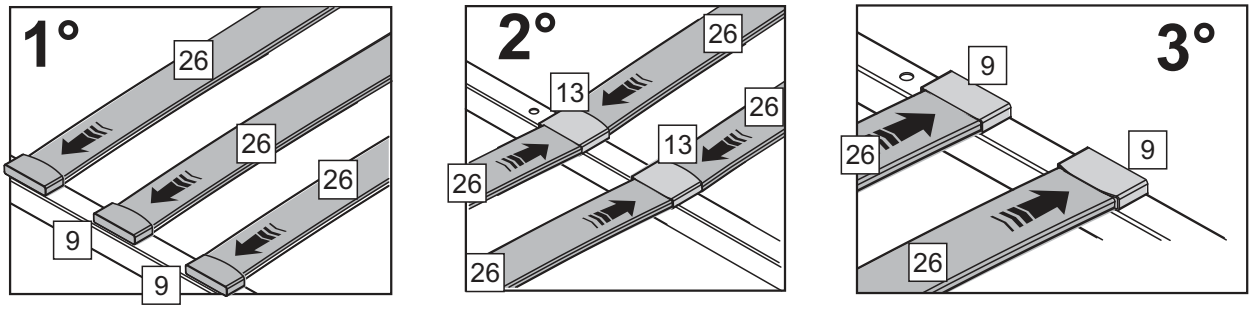


Insert the Slats (26)
To hardware parts (9) and (13) then press into the base making sure they are secure.

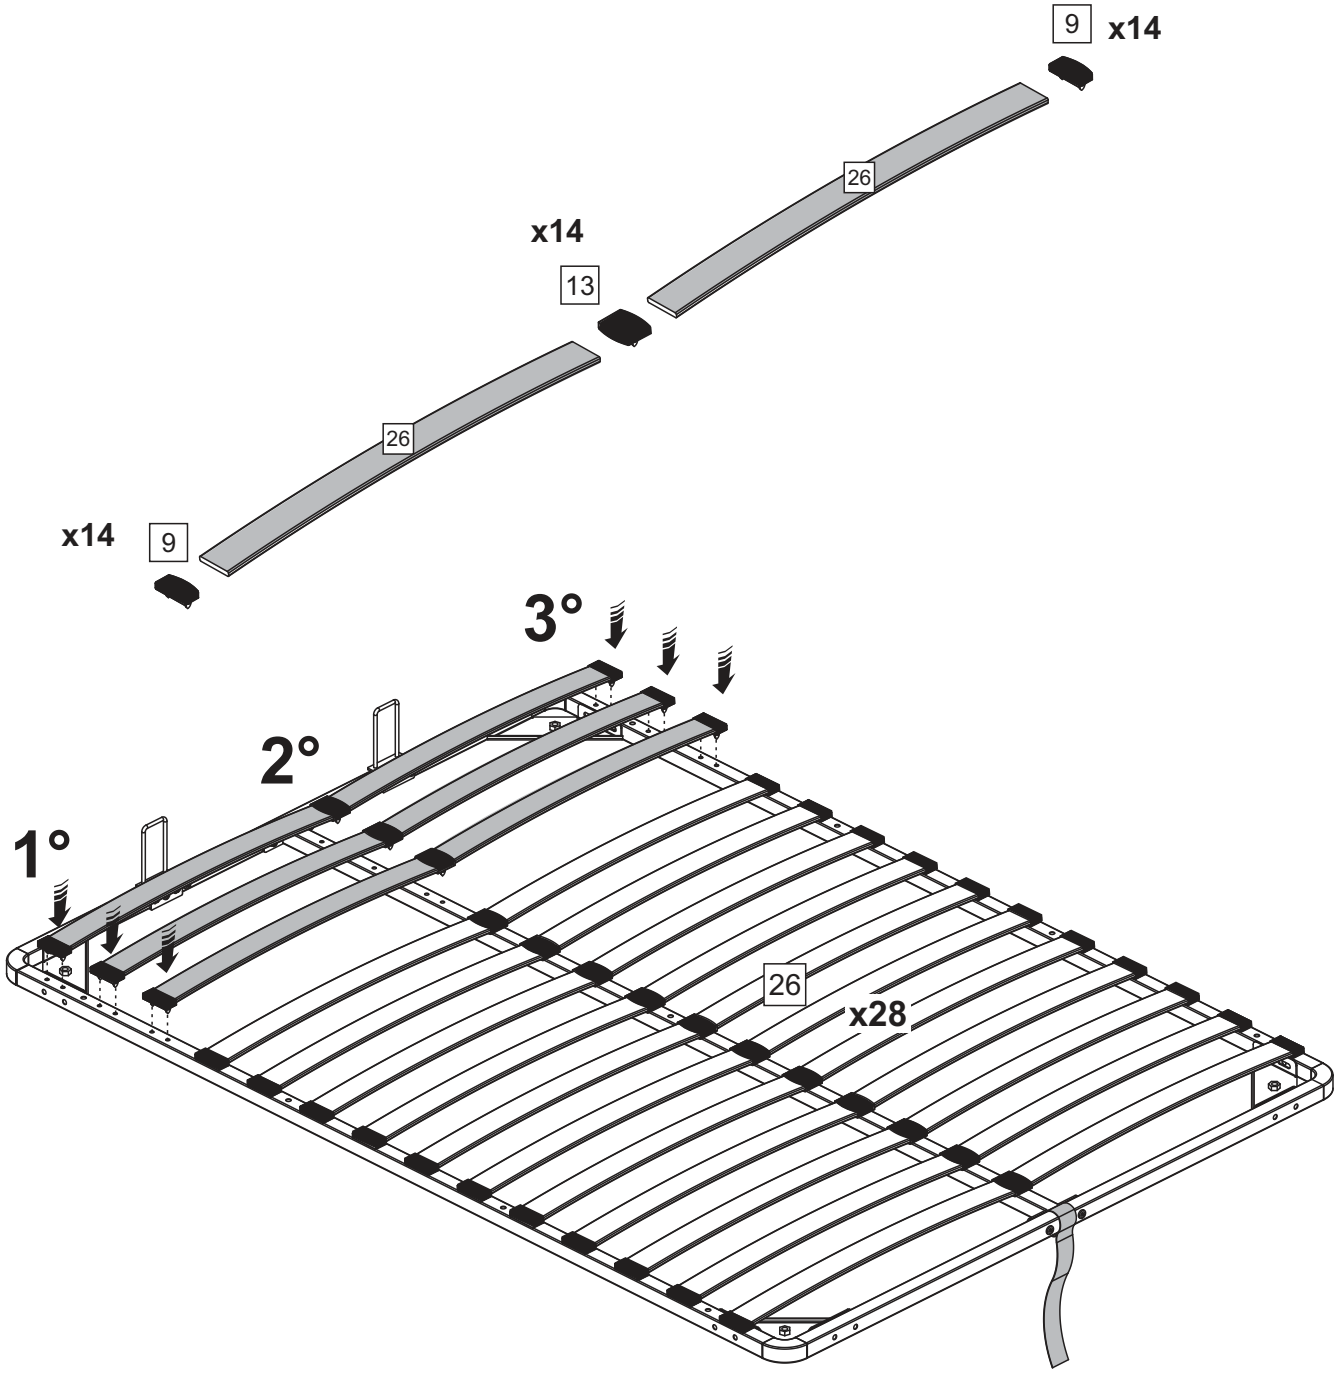


6

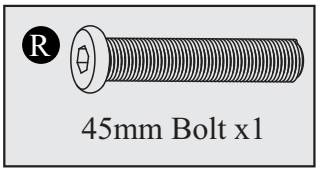

45mm Bolt x1

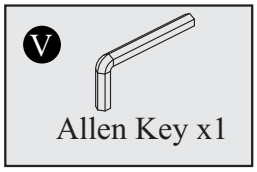


Allen Key x1

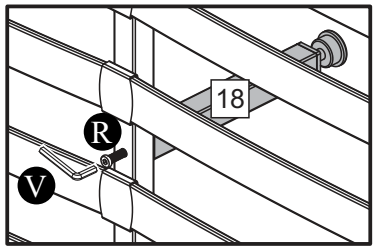




7

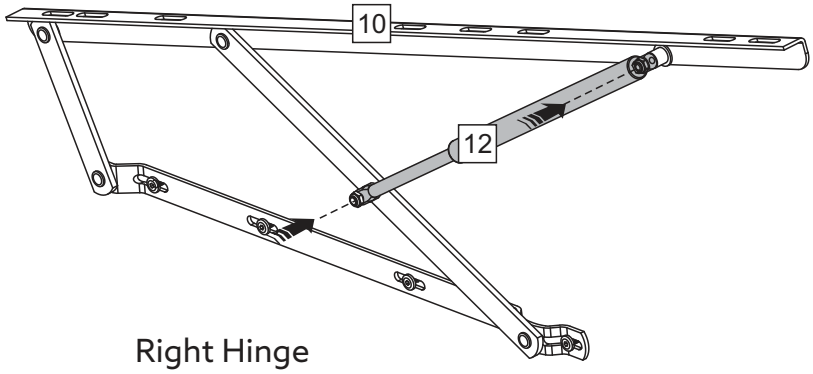

Right Hinge

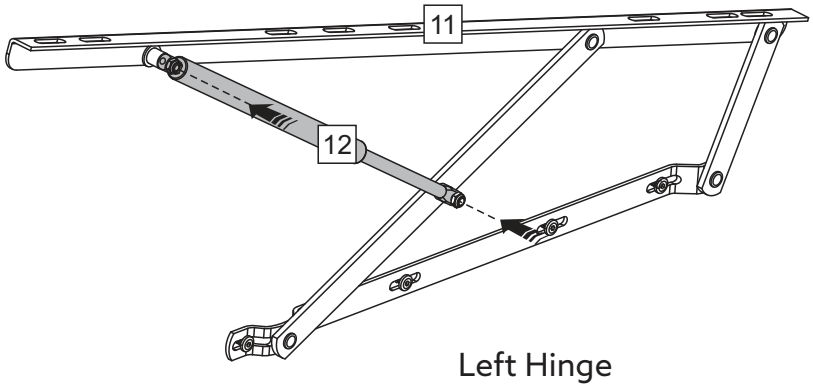



Left Hinge




Not included


8

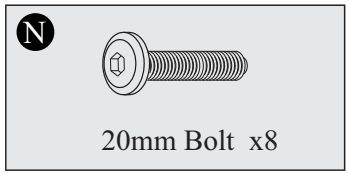

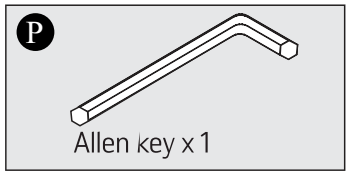

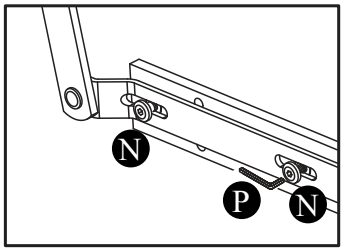



Attention

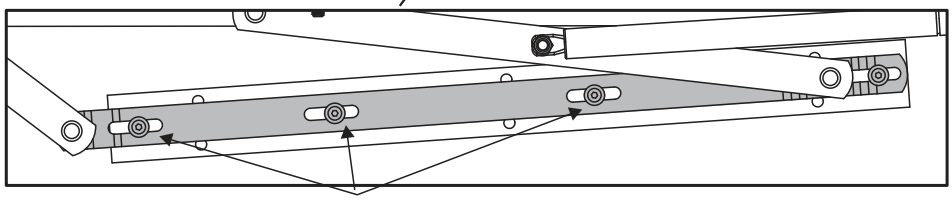



1°- Centralize bolts into the holes.
Finish tighten bolts after adjustment, see Step 9

9

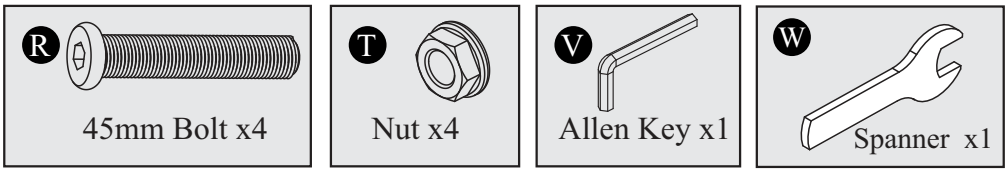


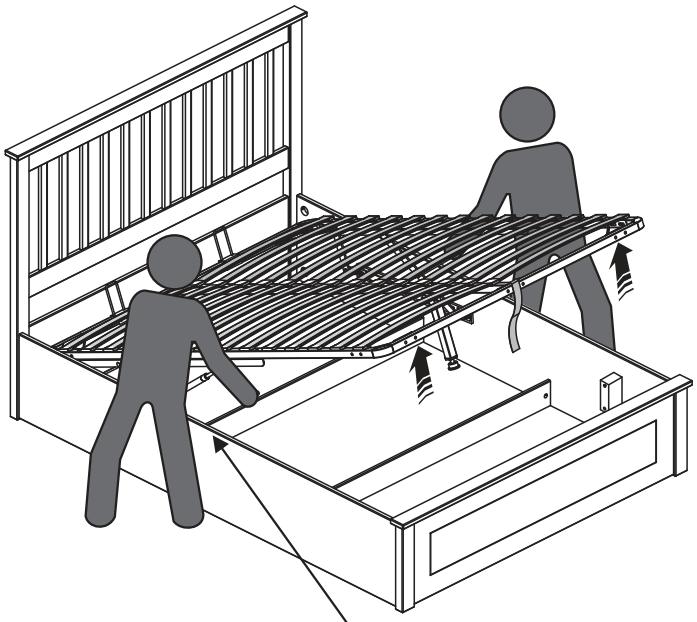

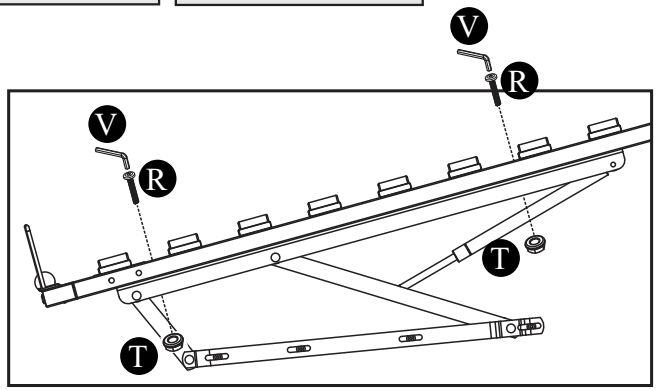

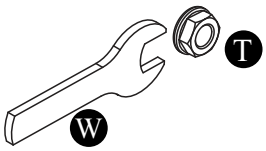



Attention

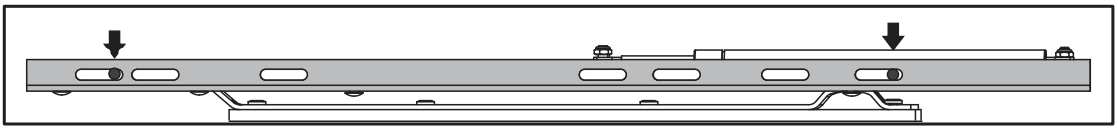



1º Centralize bolts into the holes.
Finish tighten bolts after adjustment, see Step 8

10

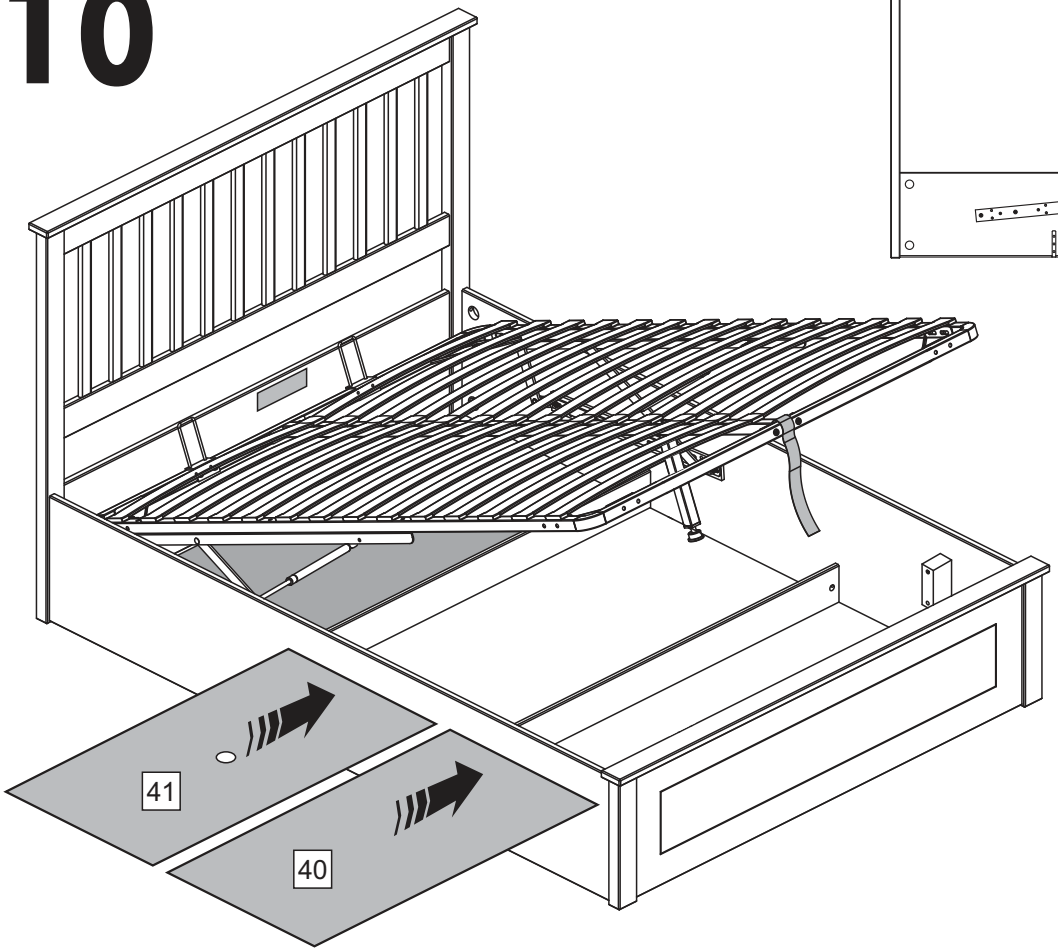

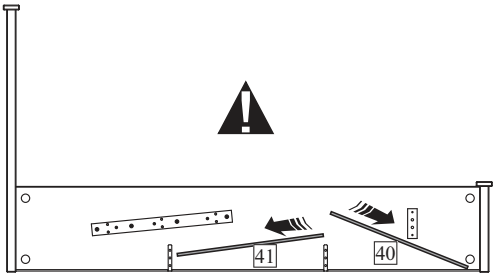

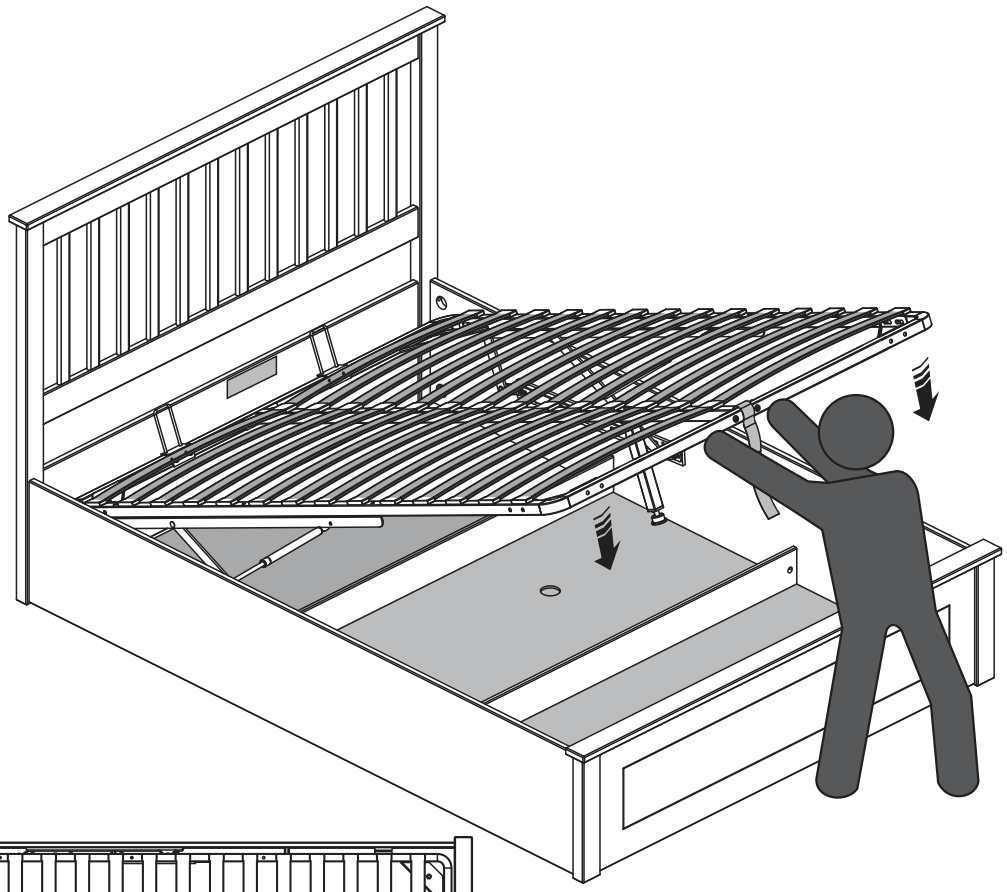

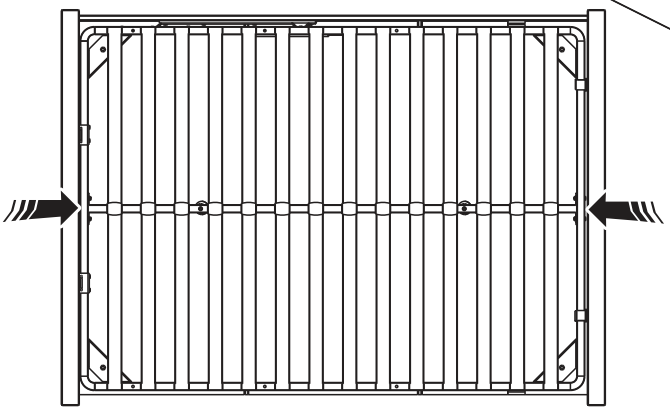

Attention:

Adjust bed base making sure it is centralized between headboard and footboard. After adjusting then tighten all bolts from step (8) and step (9).

