
Aspley

habitat

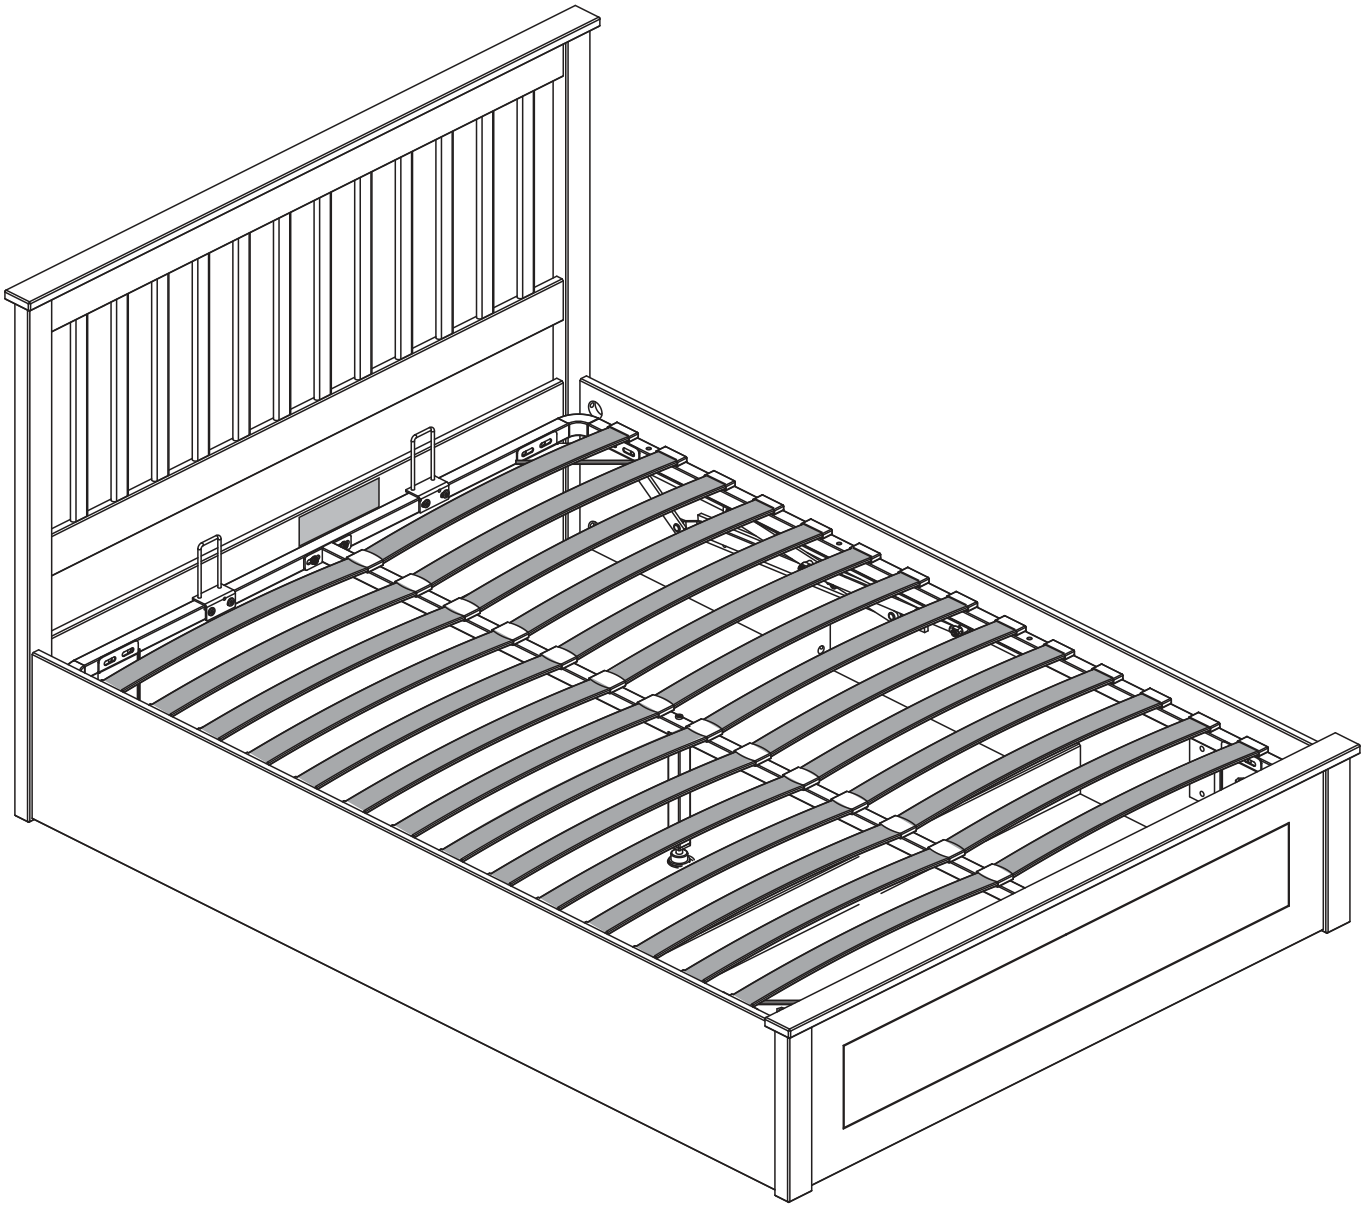

Spare Parts

www.argos-support.co.uk

Help@ClickSpares.co.uk

0370 112 1928

Customer Support

0345 640 2020

Issue 2 - 21/10/24


Safety and Care Advice

Product Details

4ft Ottoman White	470/6520
4ft Ottoman Oak Stain	341/4428
4ft Ottoman Grey	712/0213

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- This product has been constructed to be used in the domestic environment only and not for commercial purposes.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.

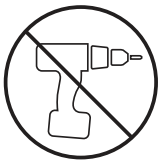

- We do not recommend the use of power drill/drivers for inserting screws as this could damage the unit. Only use hand screwdrivers.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Use a dry cloth to clean the product, furniture polish is not recommended.
- From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Additional Guidance

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.
- Maximum user weight 110kg
- This product is compliant EN 1725
- **Dimension of mattresse 120 x 190cm.**

IMPORTANT SAFETY WARNING

- Caution. This bed uses a pressurised mechanism. Use caution when operating. - Always use two hands at arm's length.
- You must ensure the mattress is on the bed frame before lifting the mechanism. Failure to do so may result in injury.
- Please ensure Children and Pets are kept away from the bed when operating the bed mechanism.


ALWAYS USE TWO HANDS AT ARM'S LENGTH TO OPERATE MECHANISM FROM THIS LOCATION

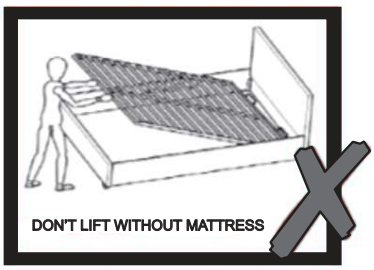




Habitat, Argos Limited and Sainsbury's Supermarkets Ltd, London EC1N 2HT, UK. Argos (N.I.) Ltd and Sainsbury's (NI) Ltd. Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK

Panels

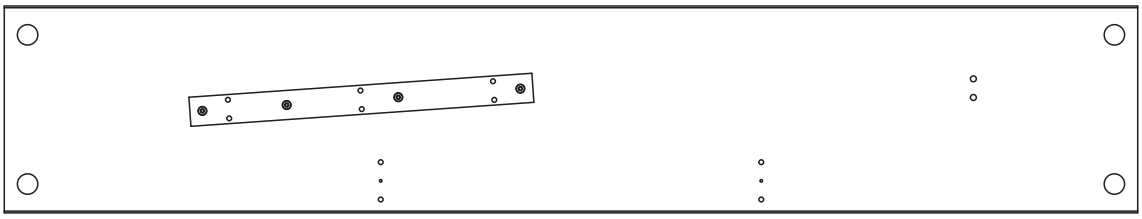

1 Right Side Rail
(1945x355mm) x1

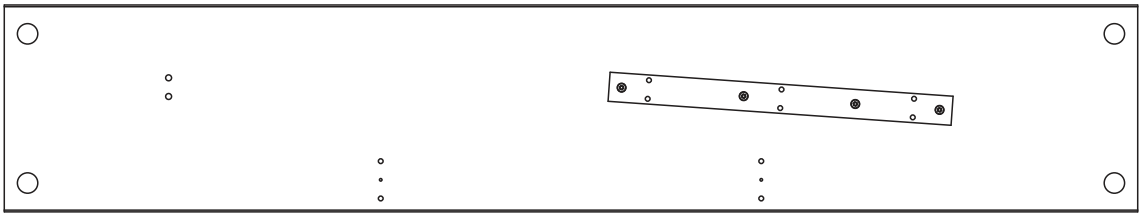

2 Left Side Rail
(1945x355mm) x1




3 Right Post
(1100x63mm) x1




4 Left Post
(1100x63mm) x1



28 Headboard top rail
(1342x67mm) x1

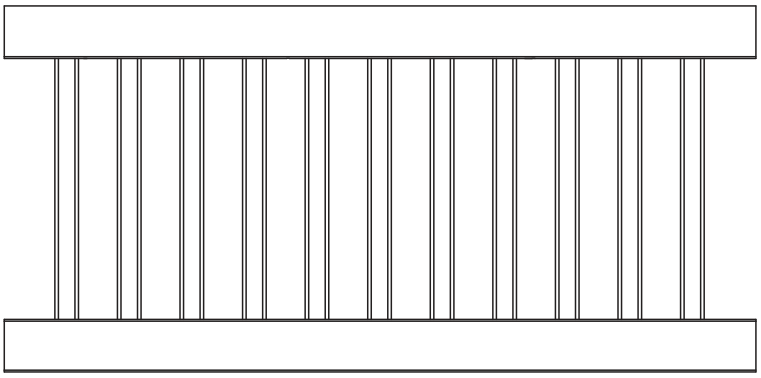

27 Headboard Frame
(1192x609mm) x1

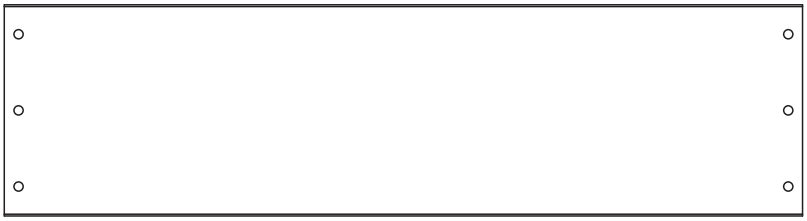

26 Headboard Bottom Panel
(1192x355mm) x1


Panels




25 Storage Centre Rails (1260x110mm) x2




24 Footboard top rail (1342x67mm) x1

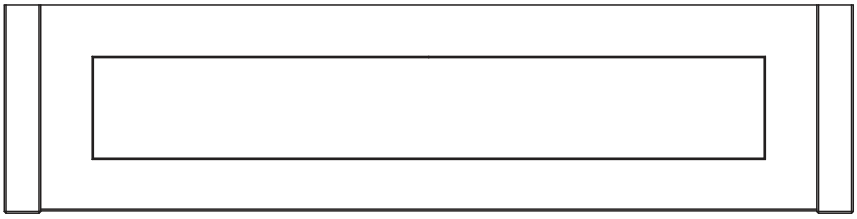


23 Footboard (1318x360mm) x1



11 Wooden Block (125x65mm) x2




29 Storage Bottom Panel (1258x637mm) x2

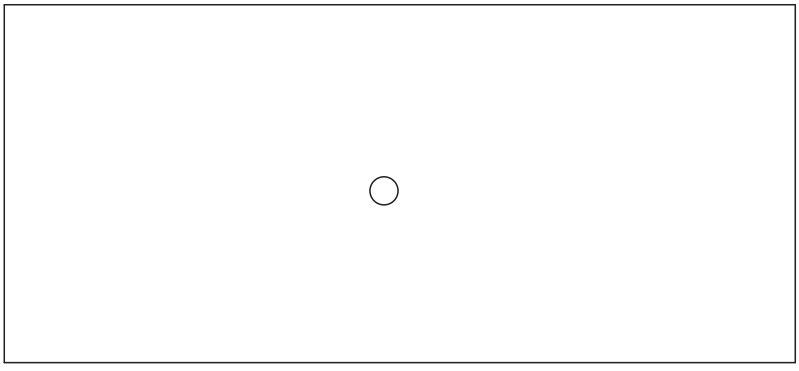


30 Storage Middle Bottom Panel (1258x637mm) x1

Fittings

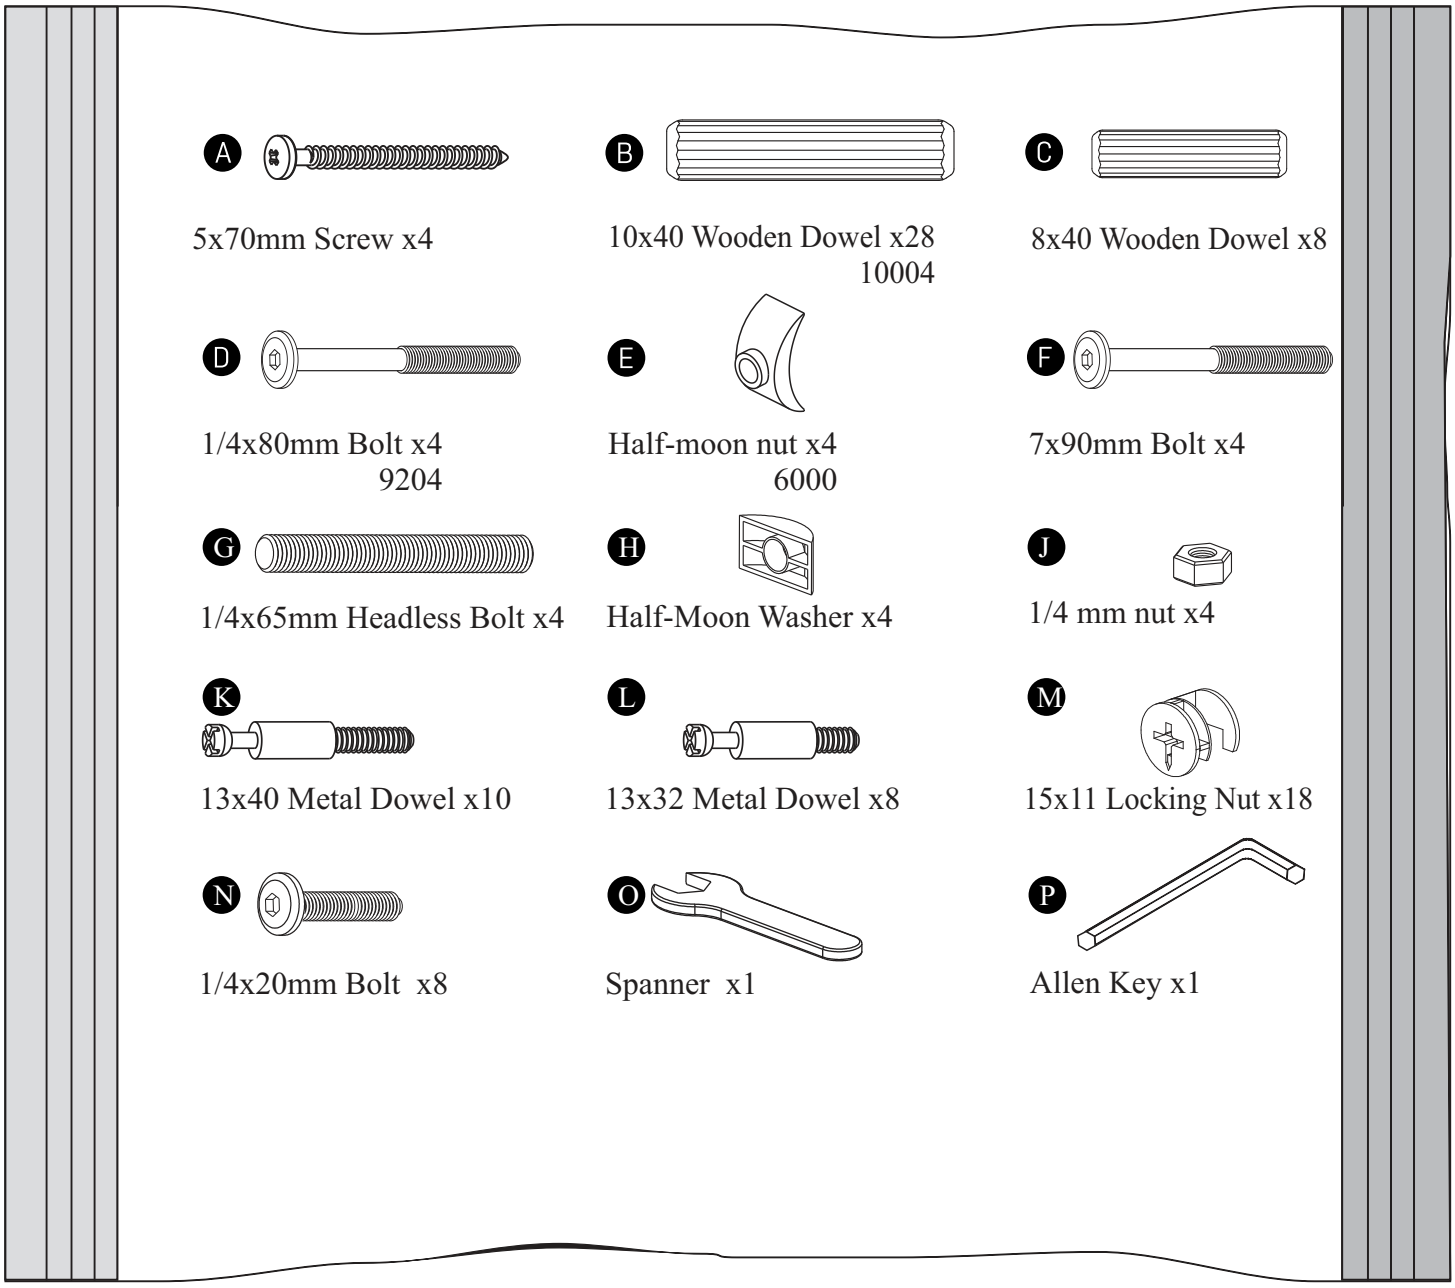

Tools required

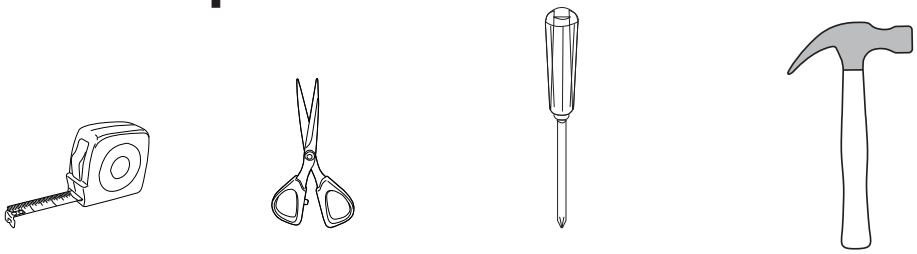

Ruler/tape measure


Scissors

Phillips screwdriver (small & medium)

Large hammer

1

B





10x40 Wooden Dowel x28

C



8x40 Wooden Dowel x8

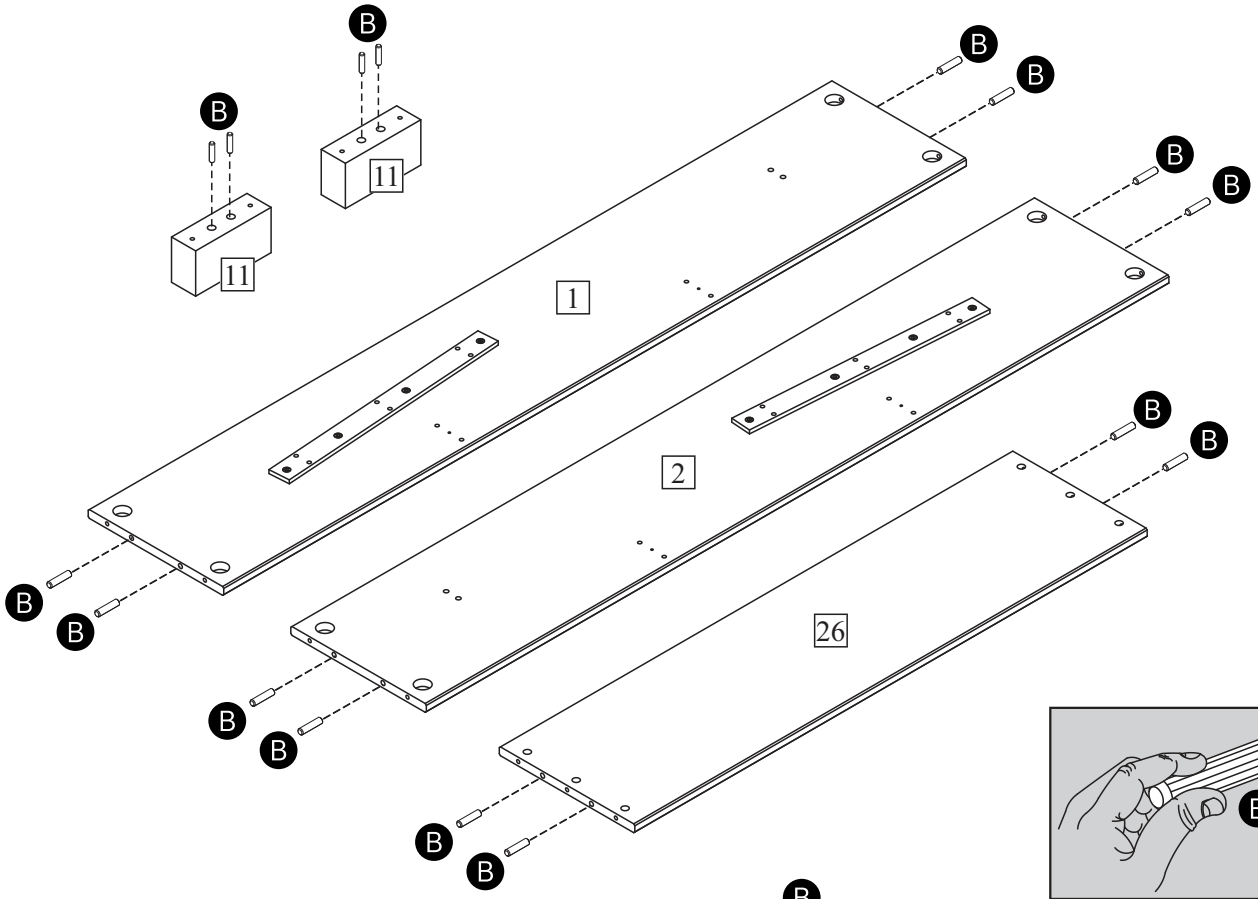


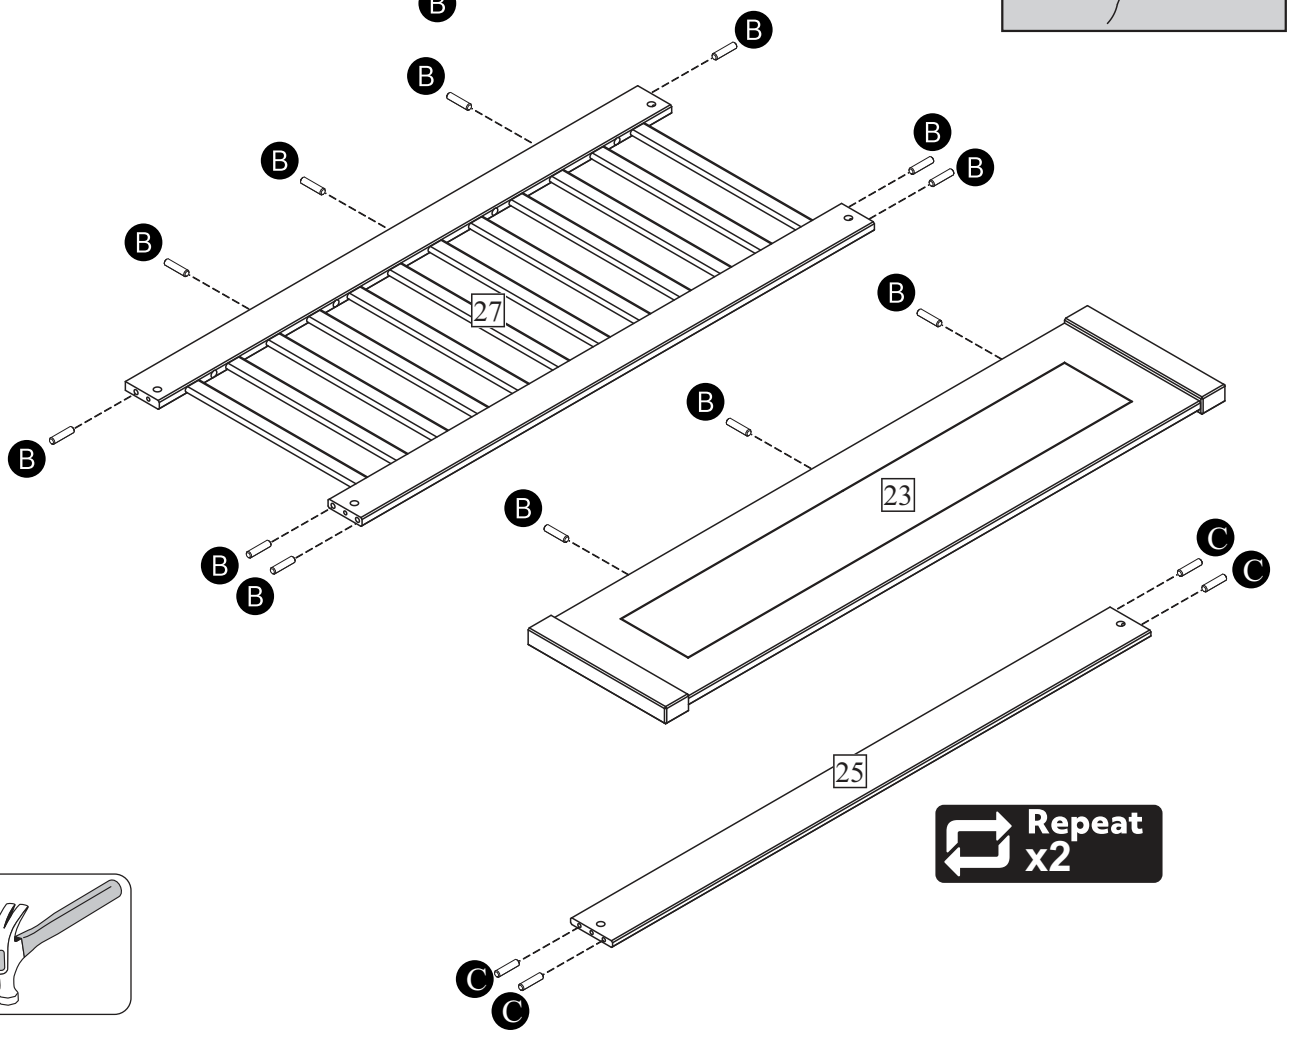


Repeat x2

2

K



40mm Metal Dowel x10

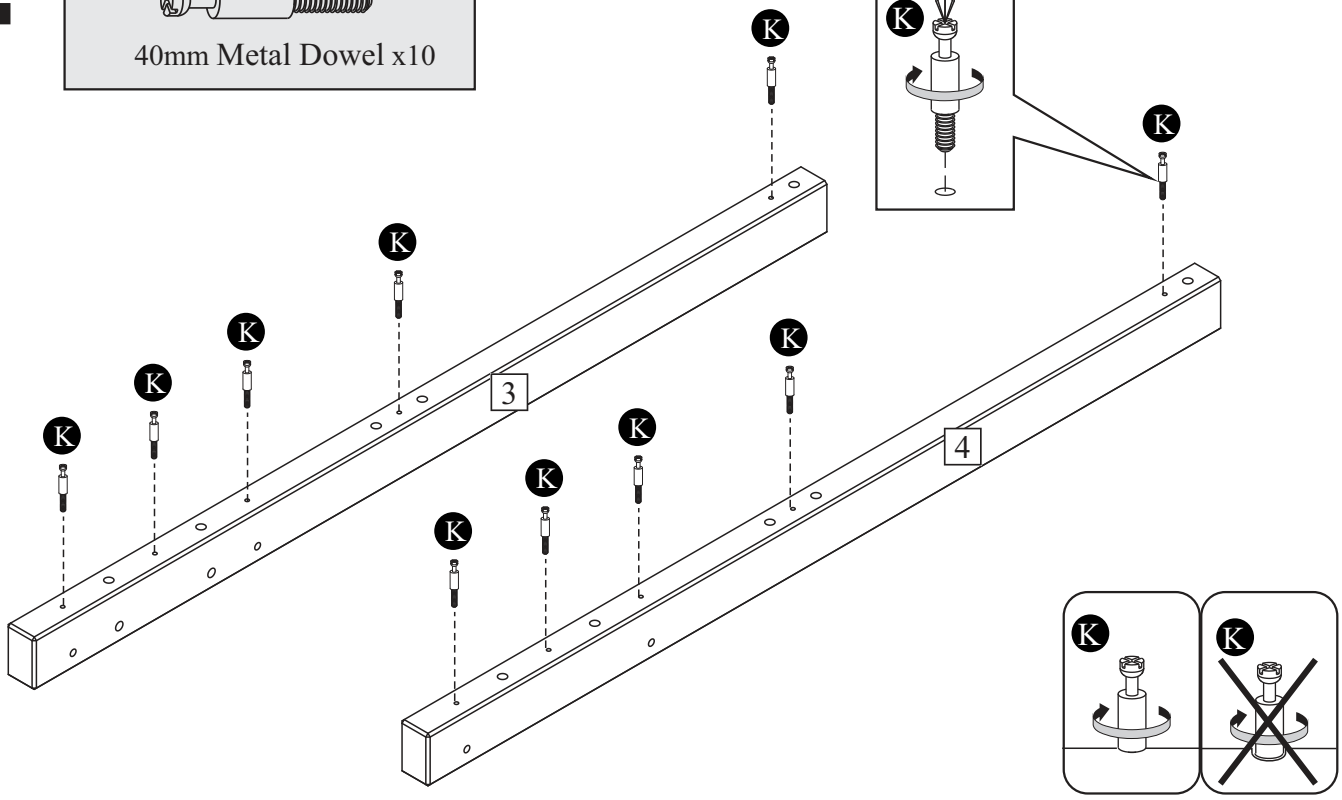



3

M



15x11 Locking Nut x5

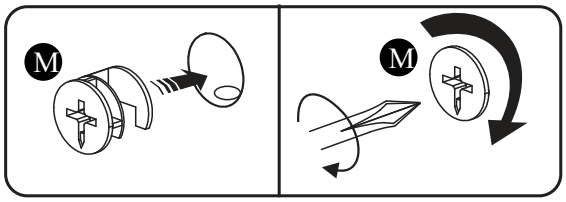

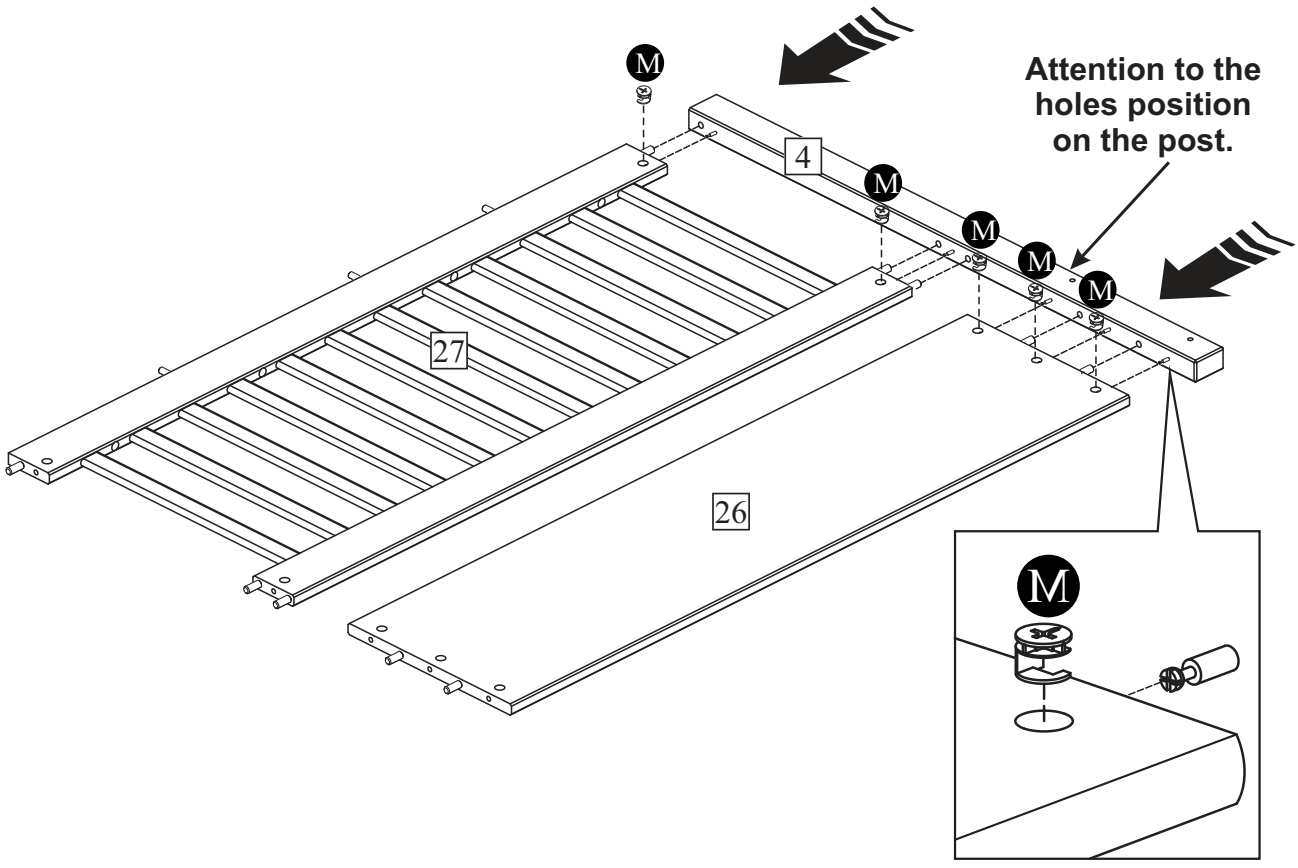



4

M



15x11 Locking Nut x5

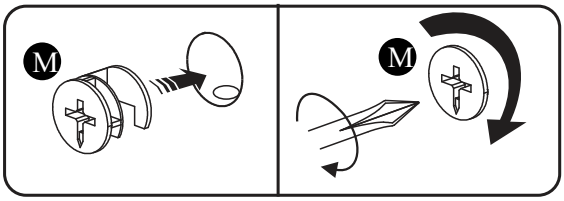


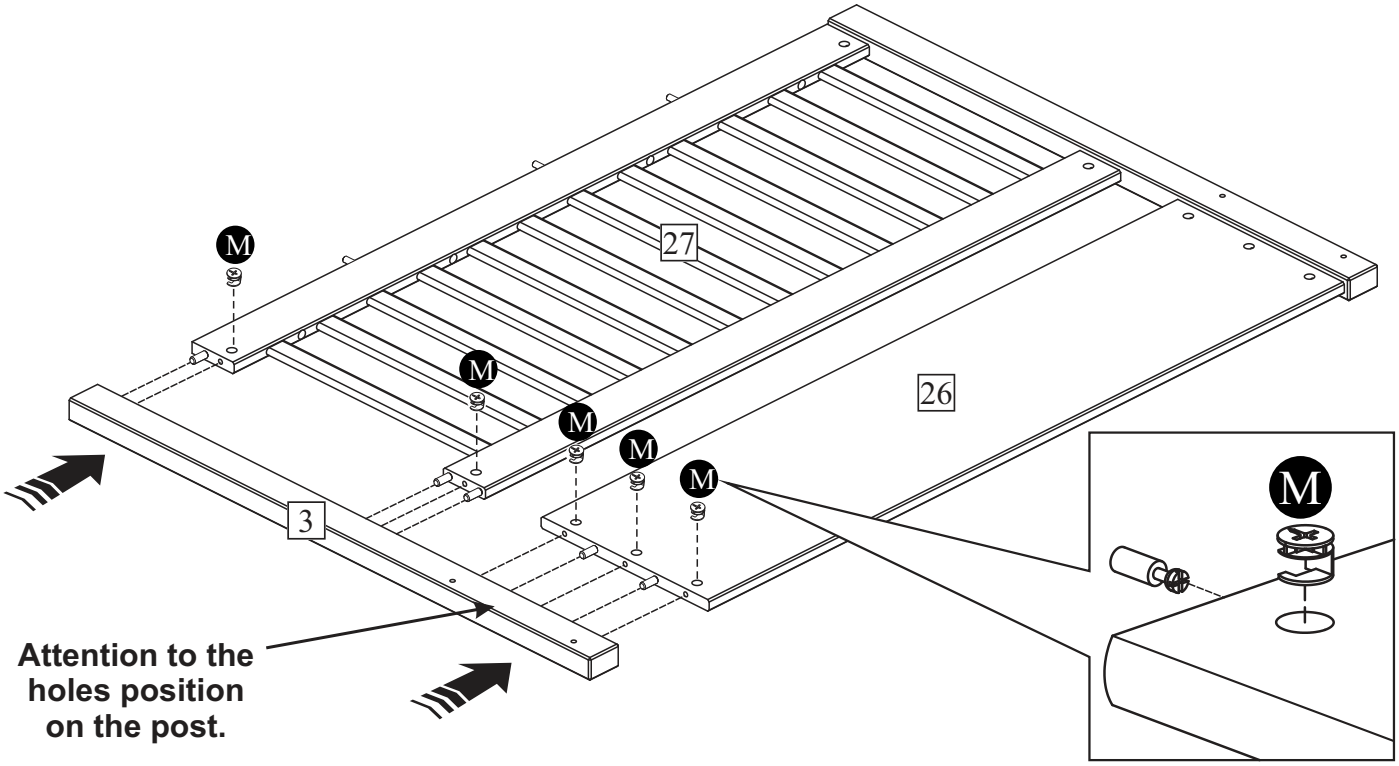

Attention to the holes position on the post.


5

F




90mm Bolt x4


P

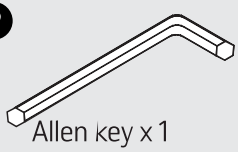


Allen key x 1

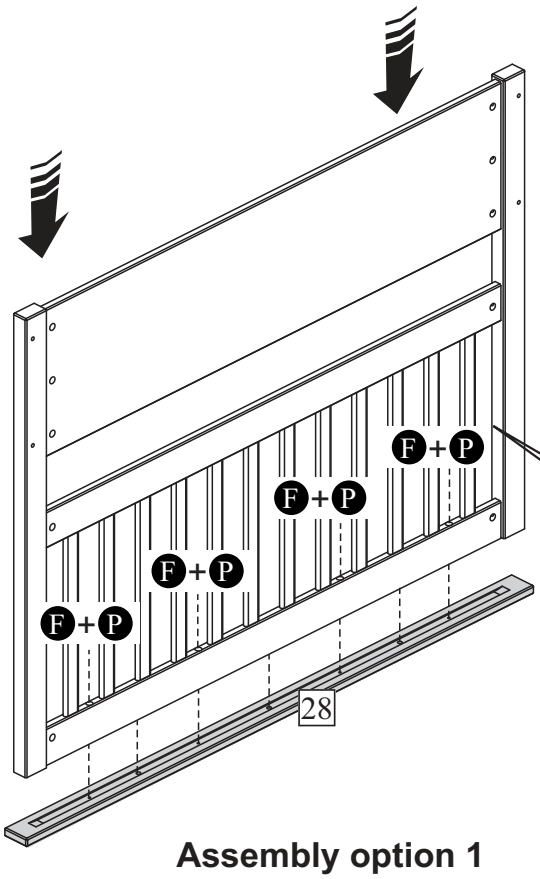

Assembly option 1

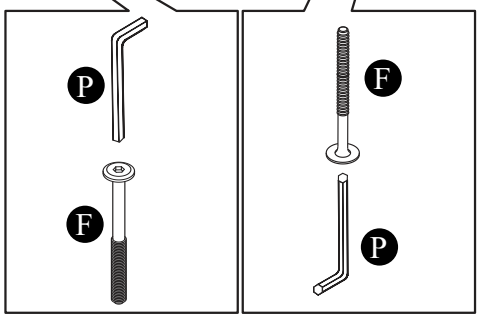


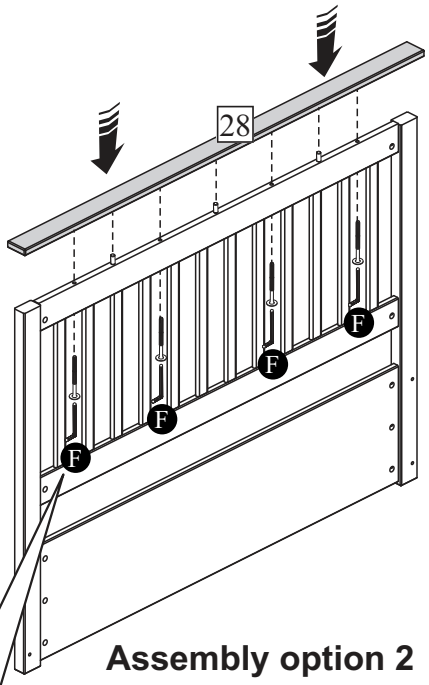


Assembly option 2

6

L




32mm Metal Dowel x4

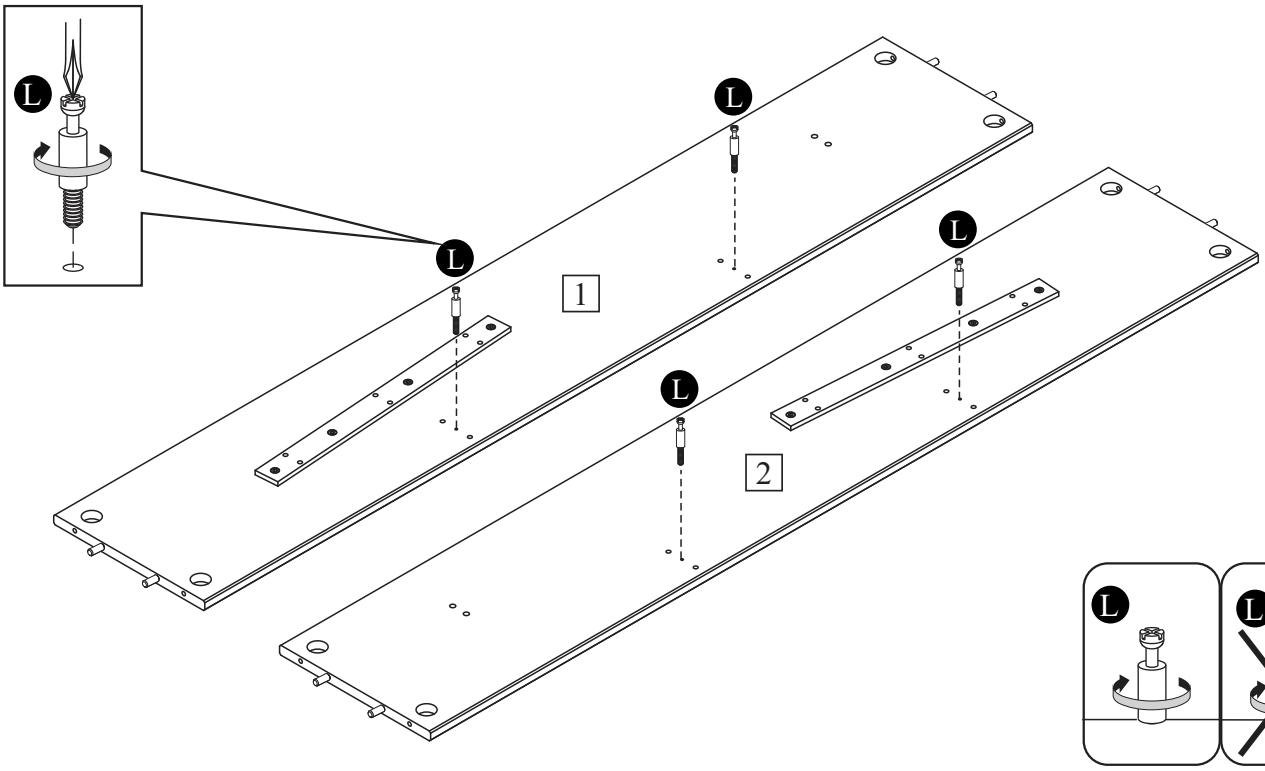

7


A



70mm Screw x4

8

D




1/4x80mm Bolt x2

E




Half-moon nut x2

P

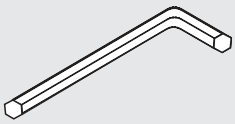


Allen key x 1

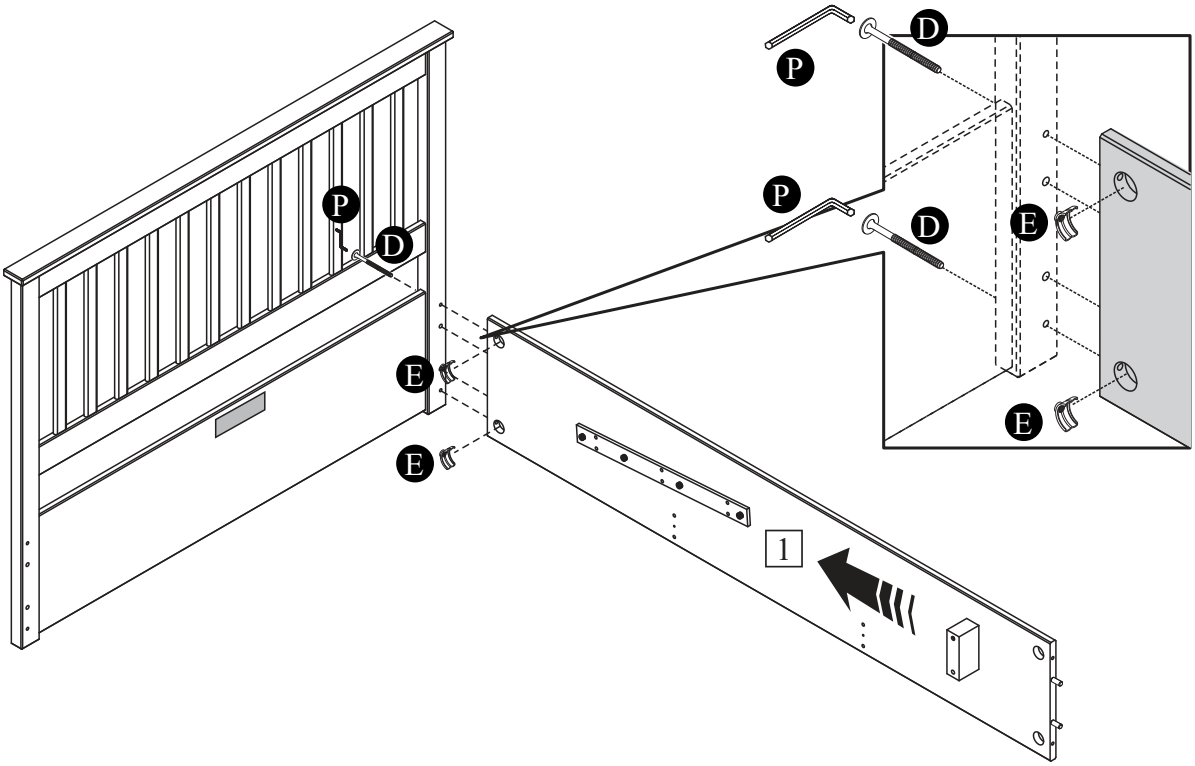

9

D




1/4x80mm Bolt x2

E




Half-moon nut x2

P

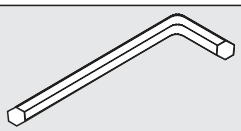

Allen key x 1

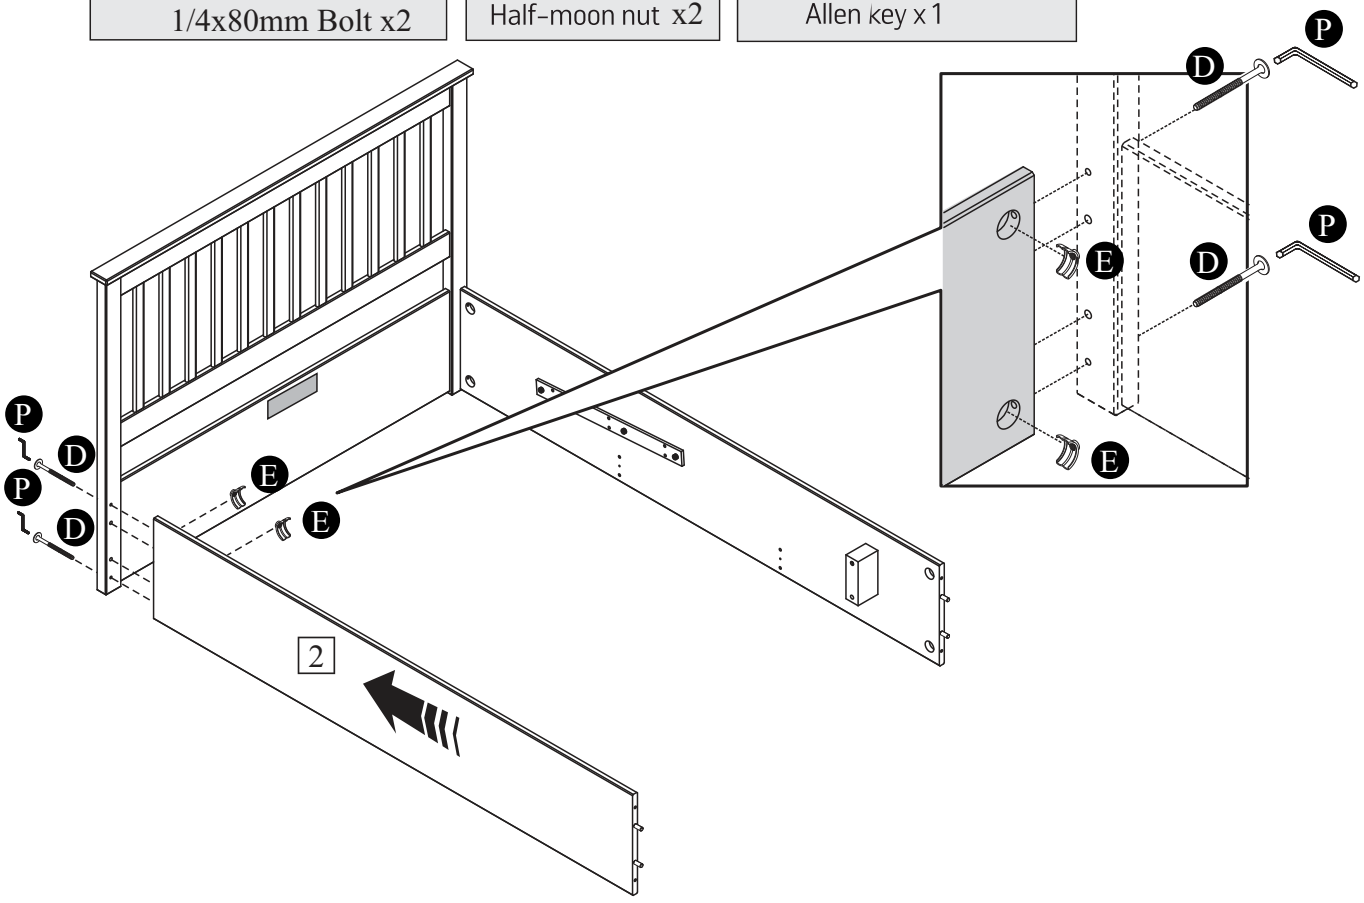



10

M




15x11 Locking Nut x4

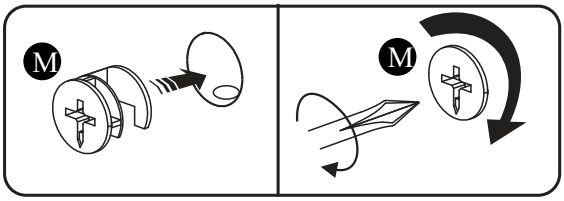

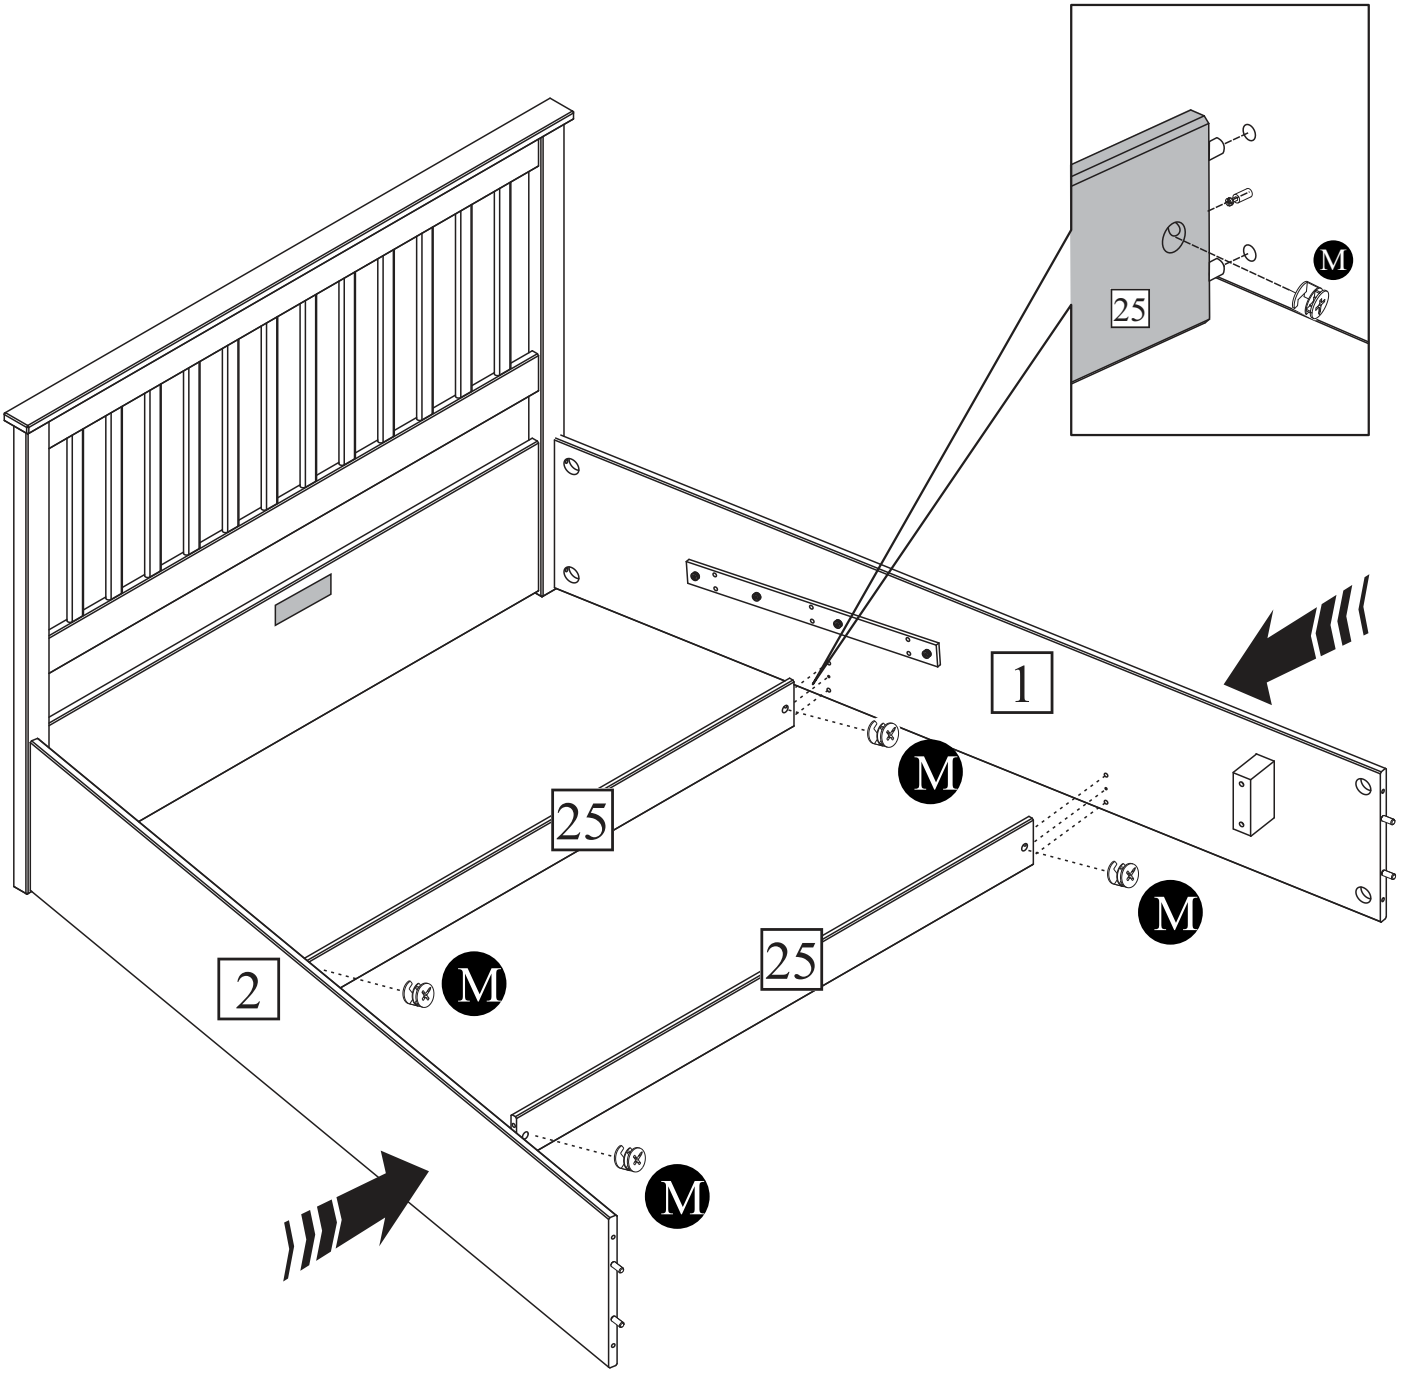



11

L



32mm Metal Dowel x4

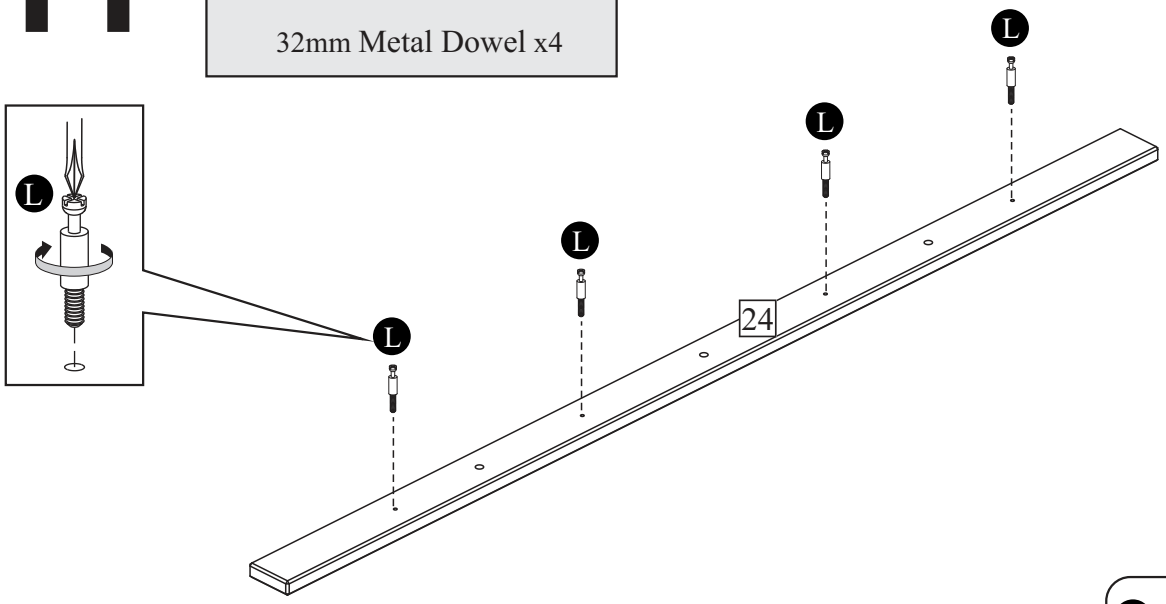

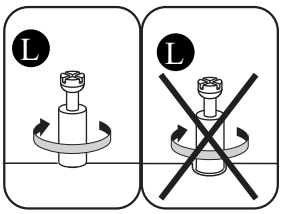

12

M



15x11 Locking Nut x4

13

G



65mm Headless Bolt x4

14

H




Half-Moon Washer x4

J




1/4 mm nut x4


O




Spanner

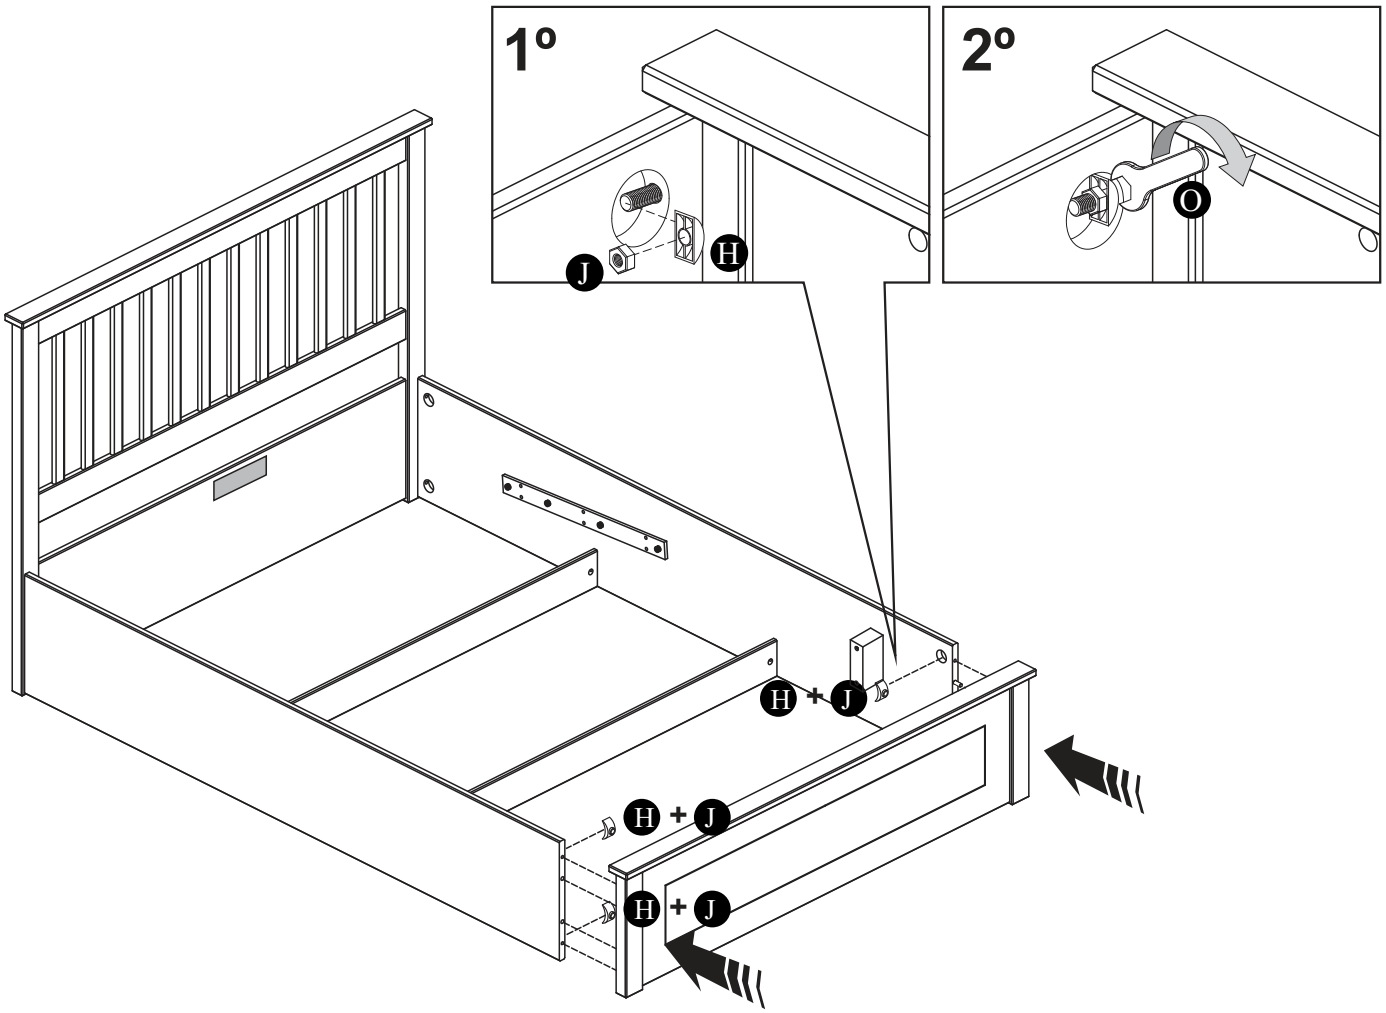


15

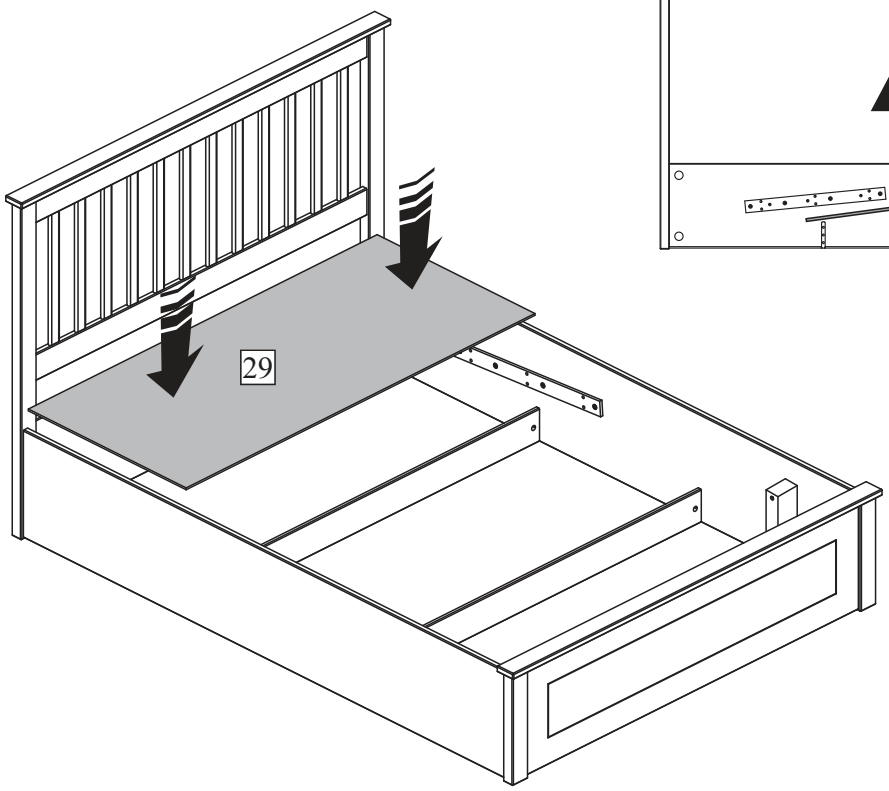


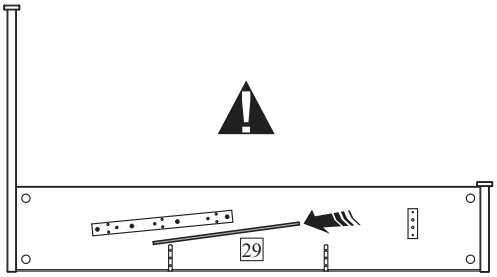


16

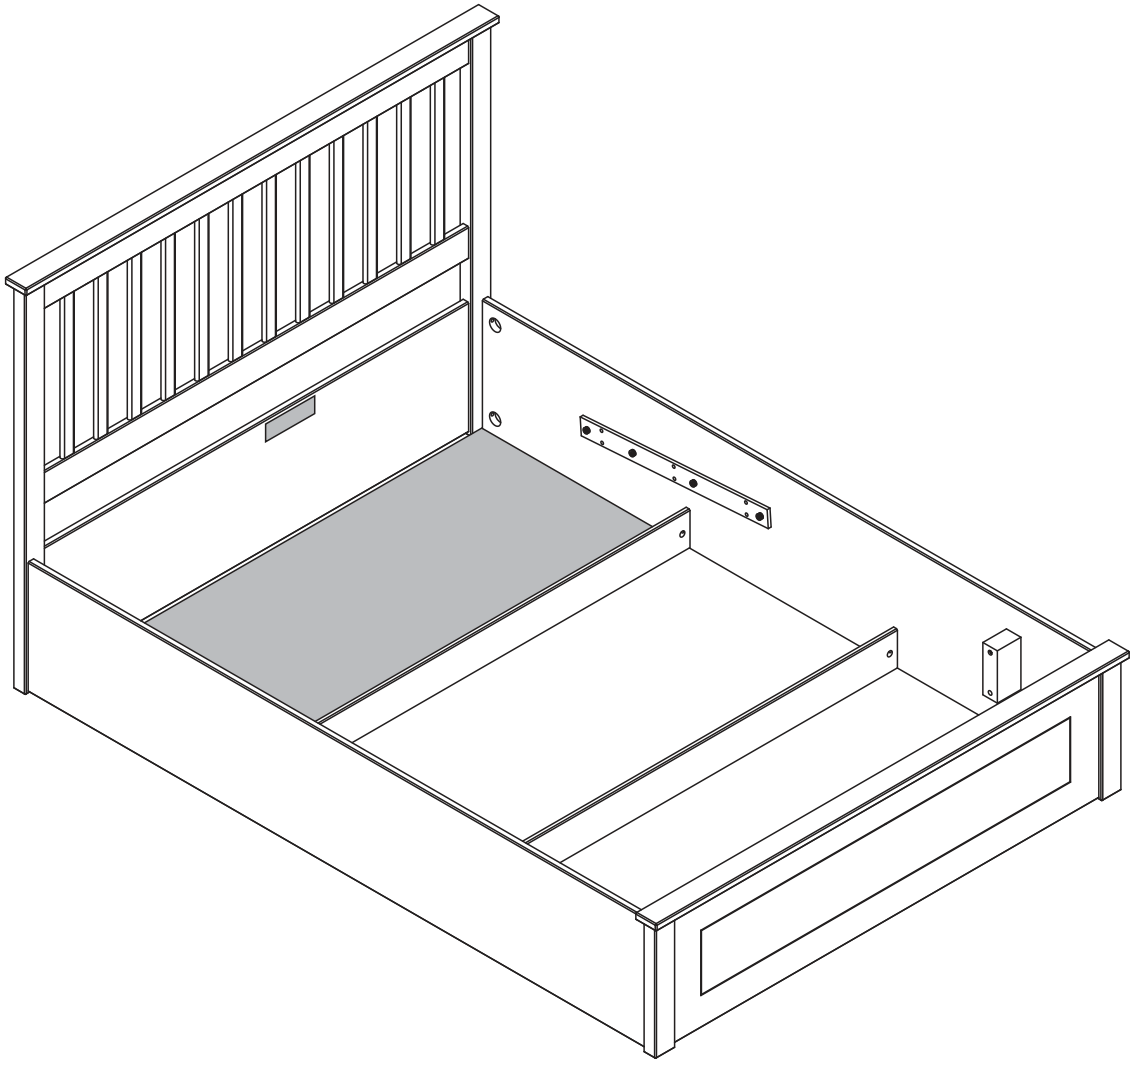

Metal Structure

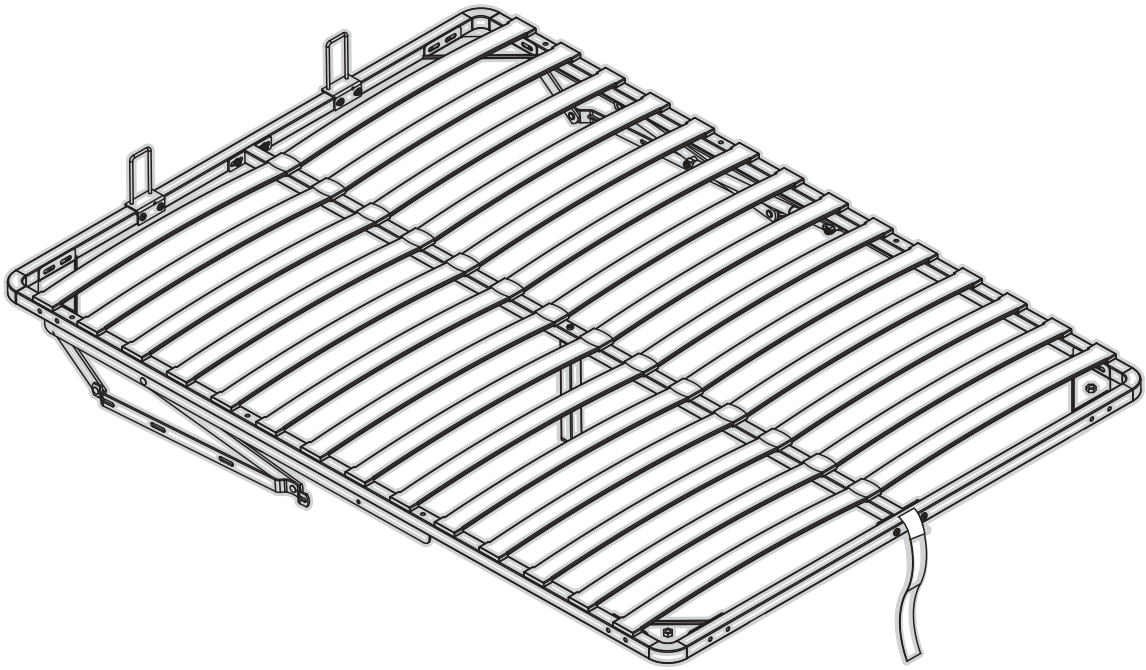


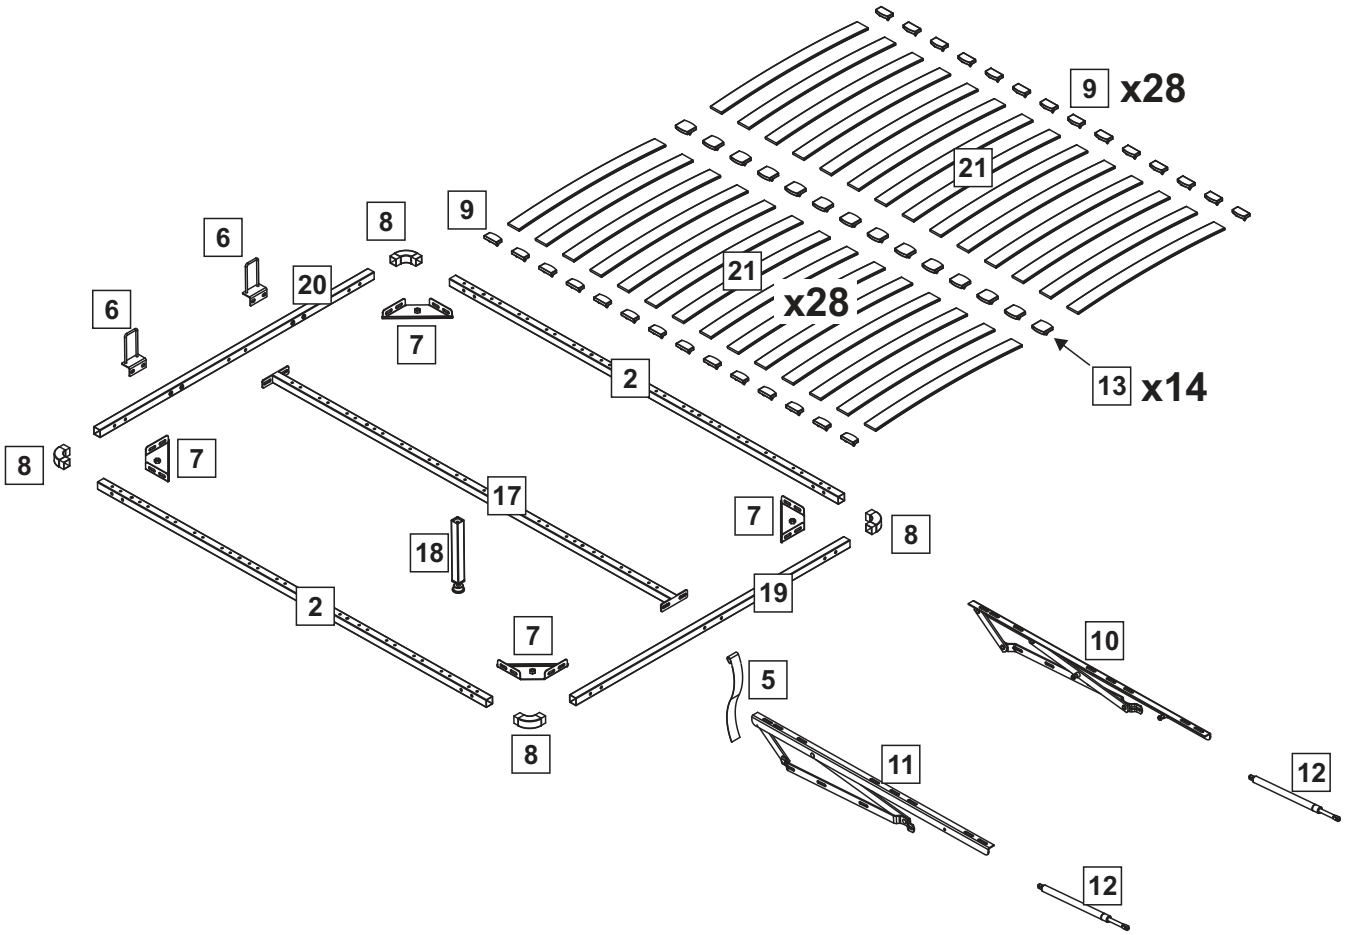


Parts




2 Side Bar (1790x30x30mm) x2



5 Pull Strap x1



6 Mattress Stopper (110x60mm) x2




7 Metal Corner (235x105mm) x4



8 Plastic Corner (54x54x30mm) x4




9 Slats Cap (52x8mm) x28




13 Slat Center Cap (57x8mm) x14

Parts

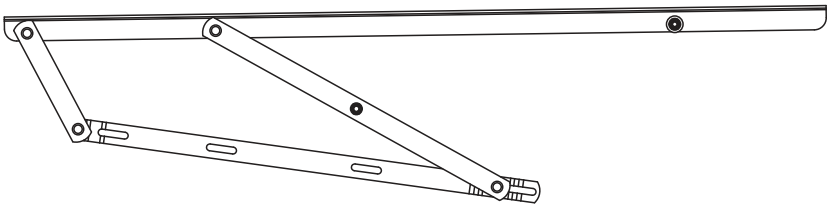


10 Right Hinge (910mm) x1

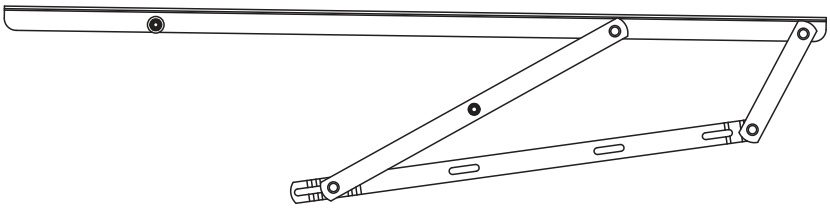


11 Left Hinge (910mm) x1




12 Hydraulic Piston (650N) x2




17 Center Bar (1840mm) x1




18 Center Leg (240mm) x1



19 Footboard end Bar (1090x30x30mm) x1




20 Headboard end Bar (1090x30x30mm) x1




21 Slats (594x52mm) x28

Fittings

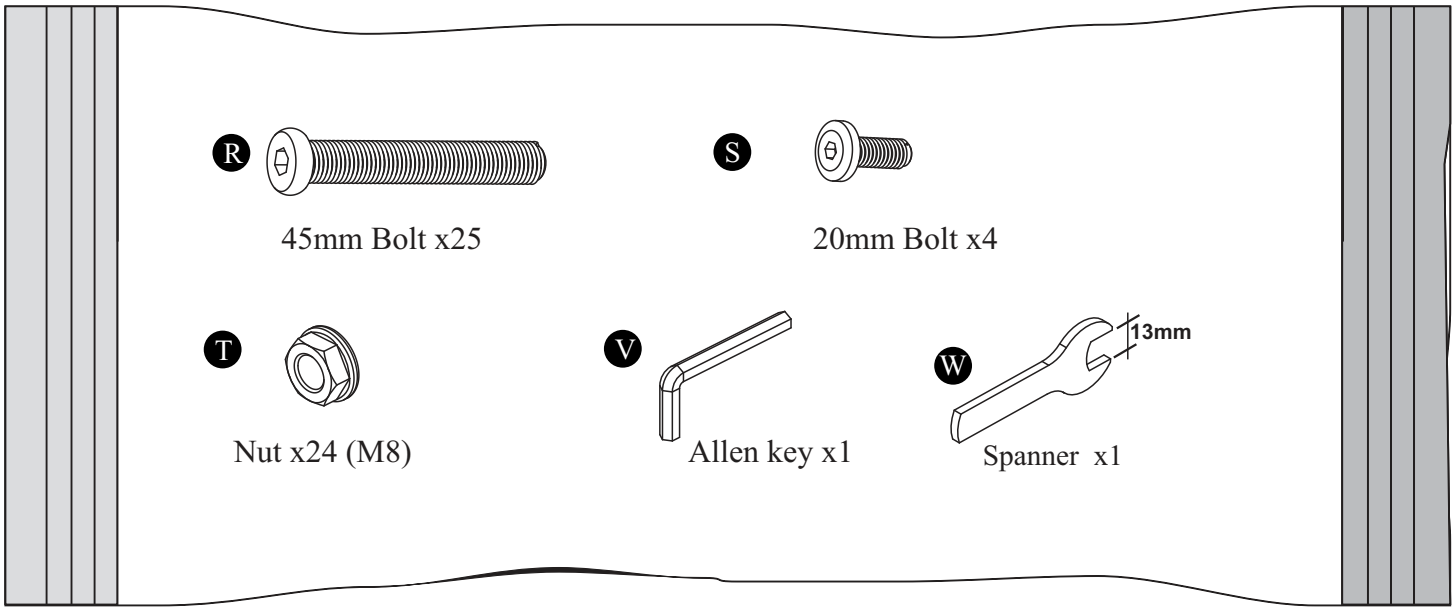

Tools required



Ruler/tape measure



Scissors



Phillips screwdriver (small & medium)




Not included




Eye protection (when using a hammer or glue)


1

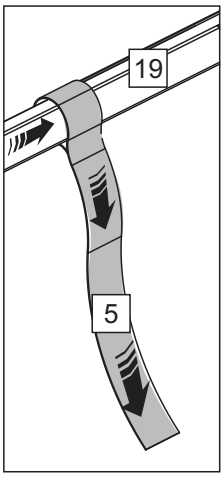
19
5

8
20
2
Holes
position
8
8
2
19
5
8

2

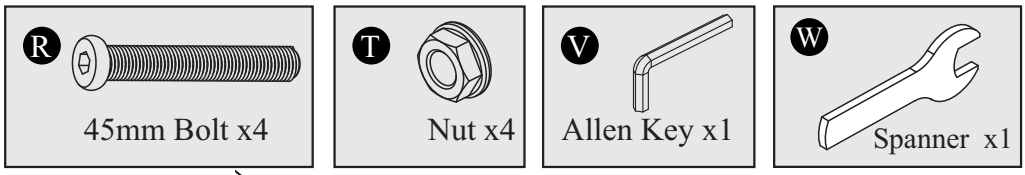
R
45mm Bolt x4
T
Nut x4
V
Allen Key x1
W
Spanner x1

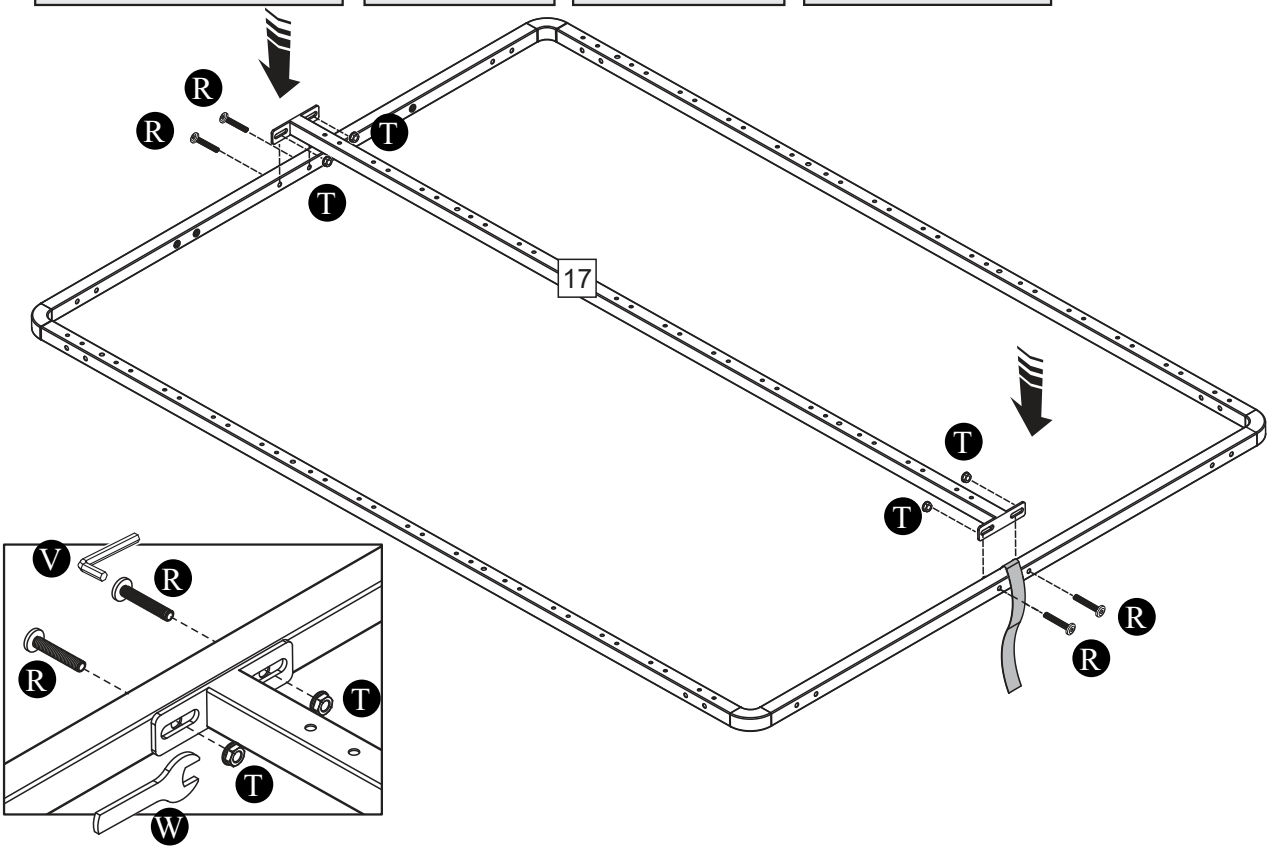
R
R
T
T
17
T
T
R
R
V
R
R
T
T
W


3

R 45mm Bolt x16

T Nut x16

V Allen Key x1


W Spanner x1

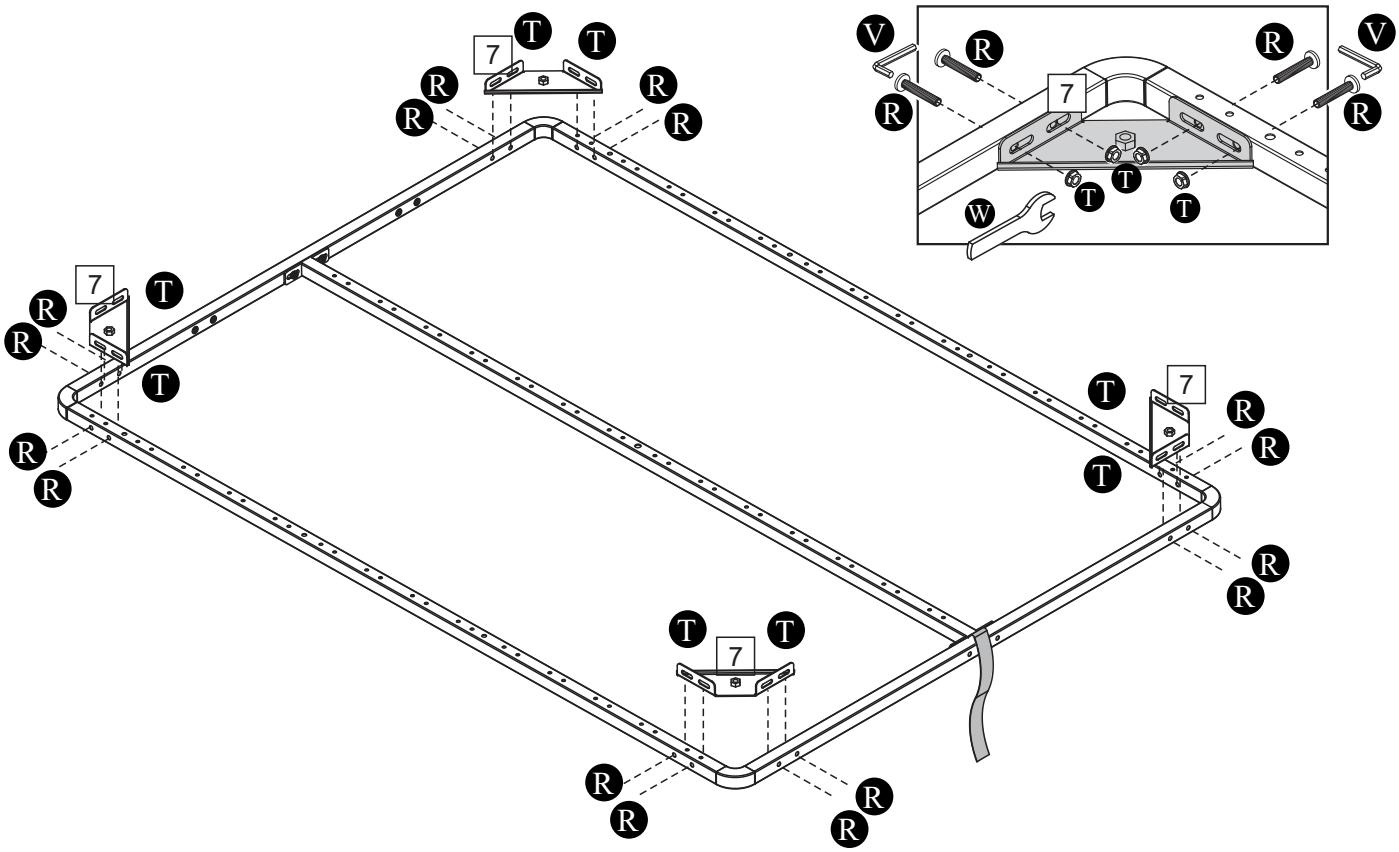


4


S 20mm Bolt x4

V Allen Key x1

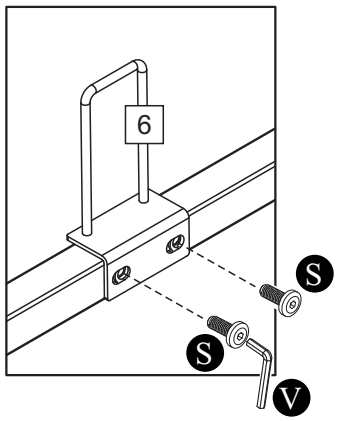


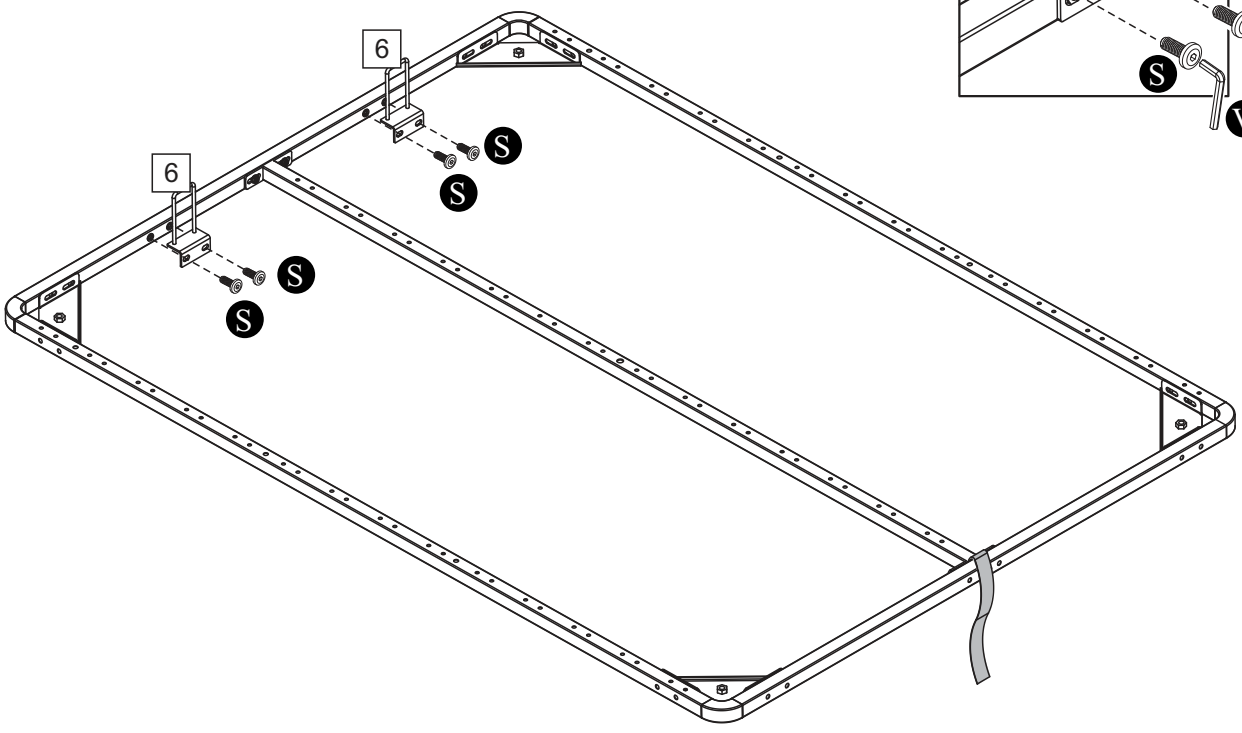


5

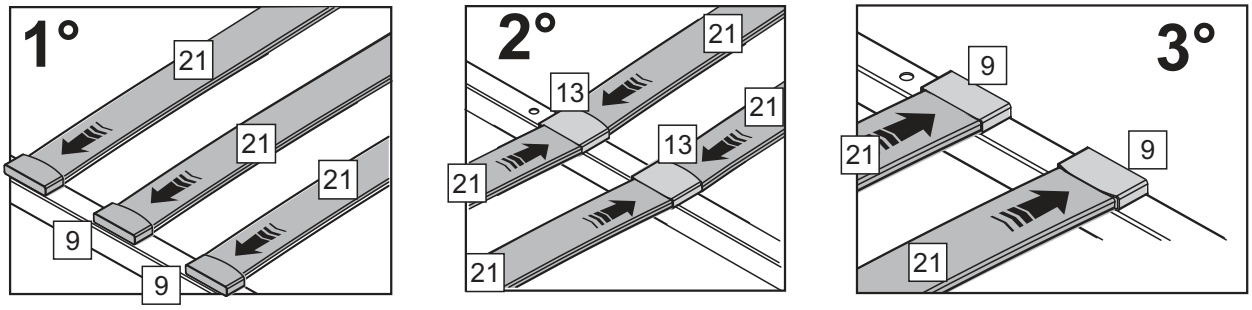


Insert the Slats (21)
To hardware parts (9) and (13) then press into the base making sure they are secure.

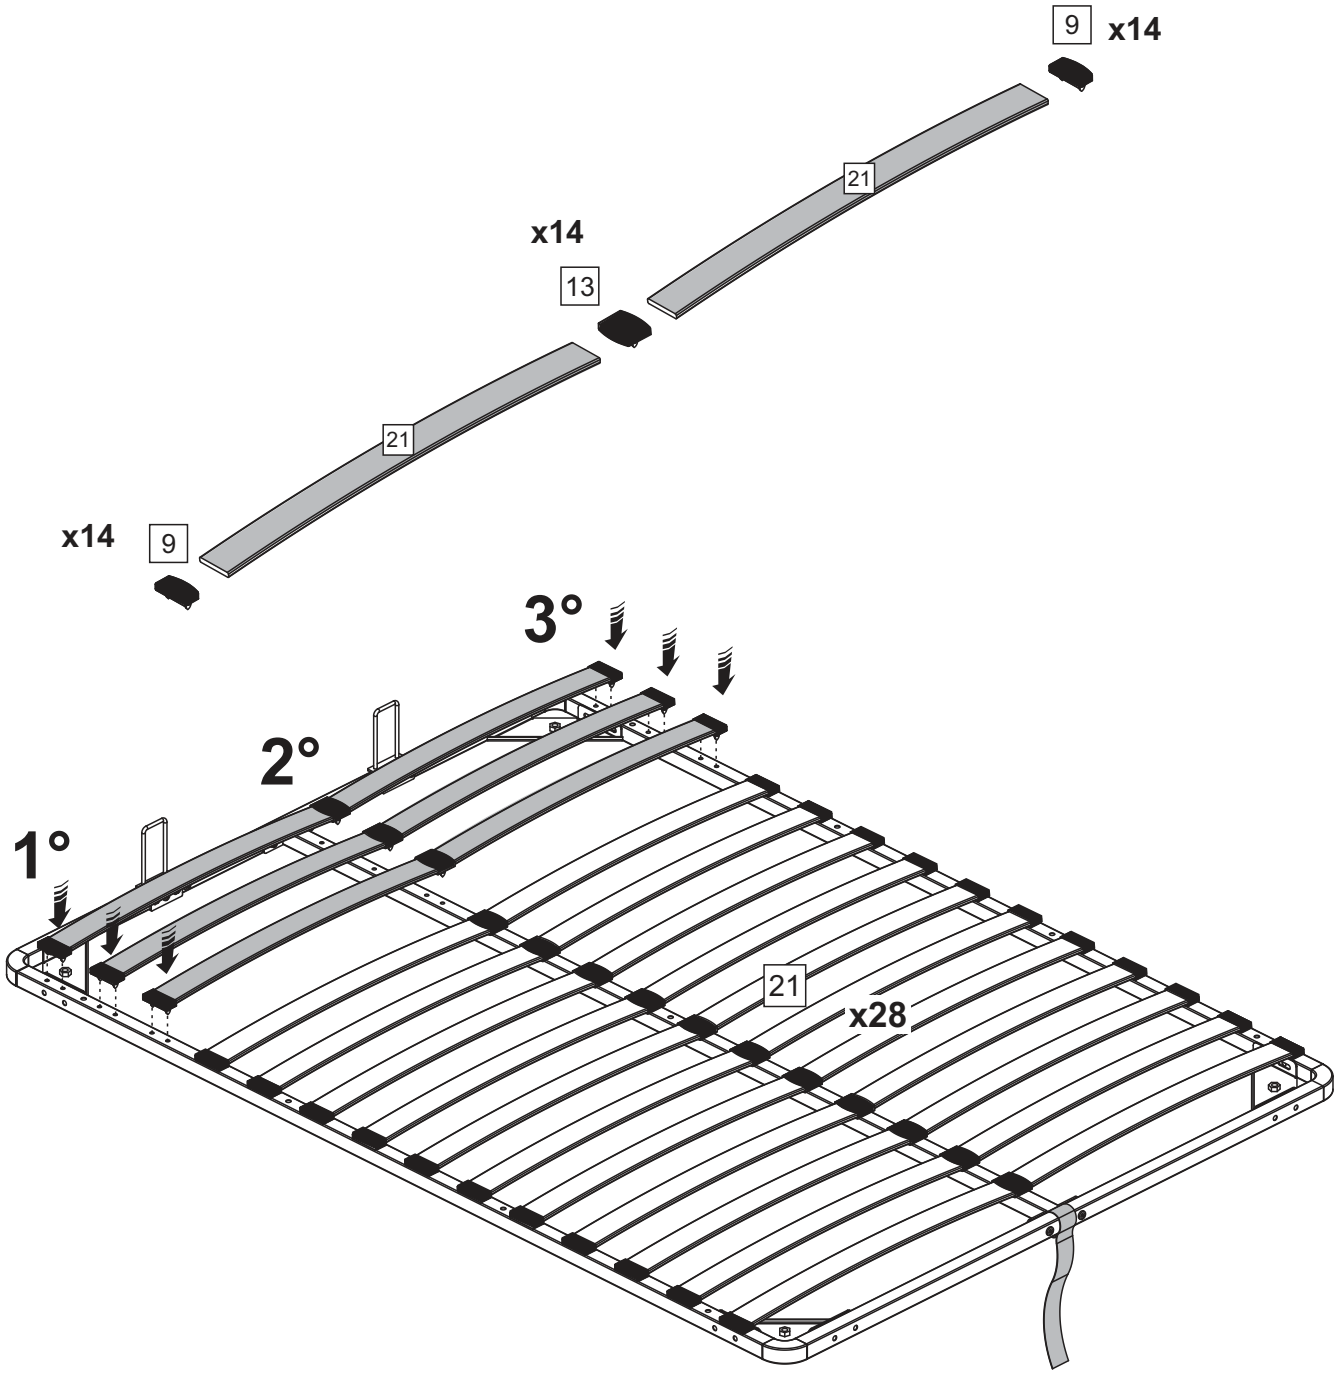


6

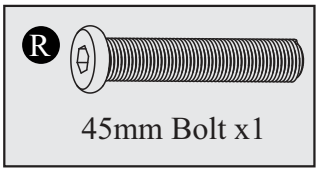

45mm Bolt x1

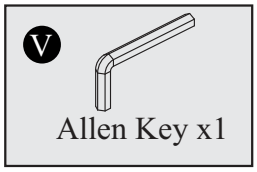


Allen Key x1

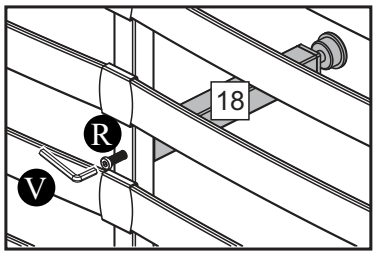




7

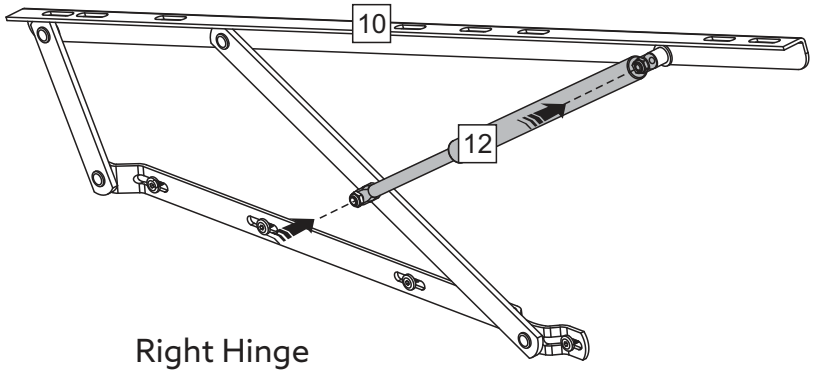

Right Hinge

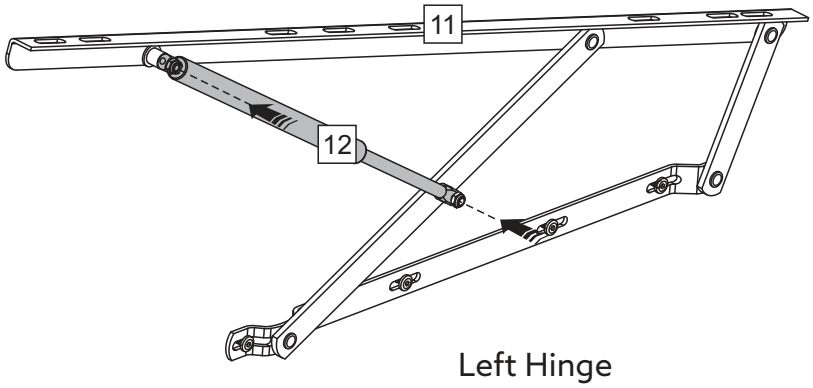



Left Hinge




Not included


8

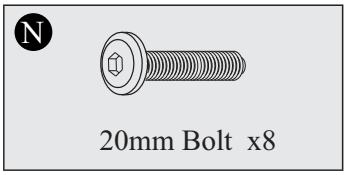

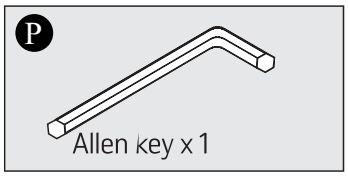

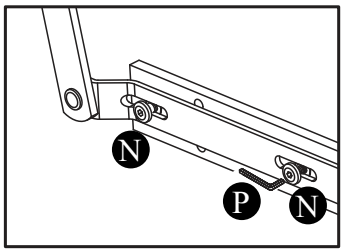


Attention

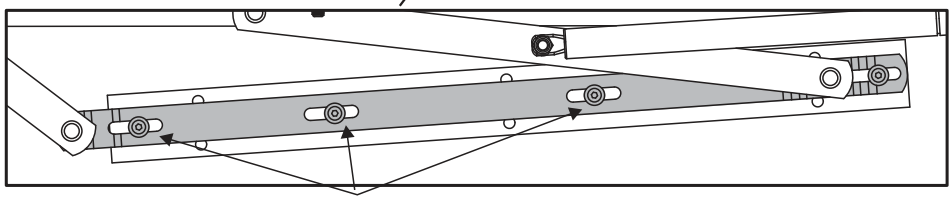

1°- Centralize bolts into the holes.
Finish tighten bolts after adjustment, see Step 9


9

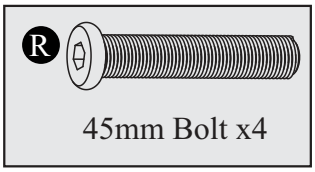


45mm Bolt x4




Nut x4





Allen Key x1

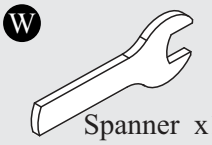


Spanner x1

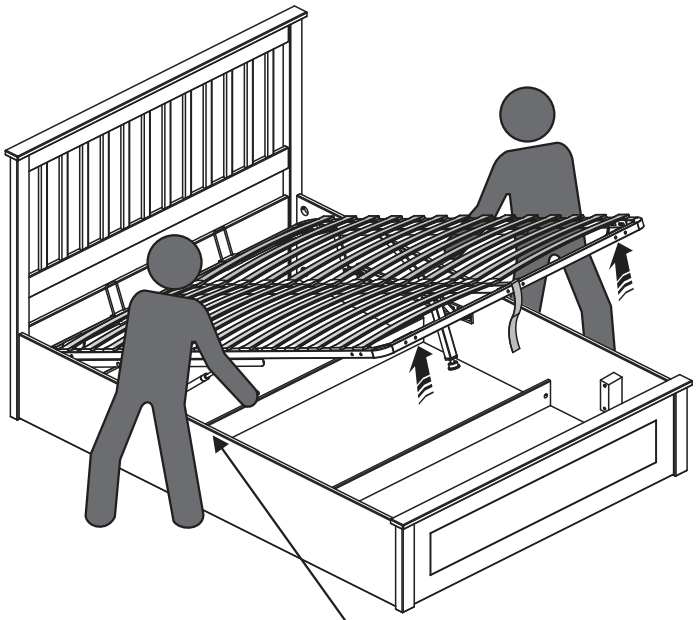

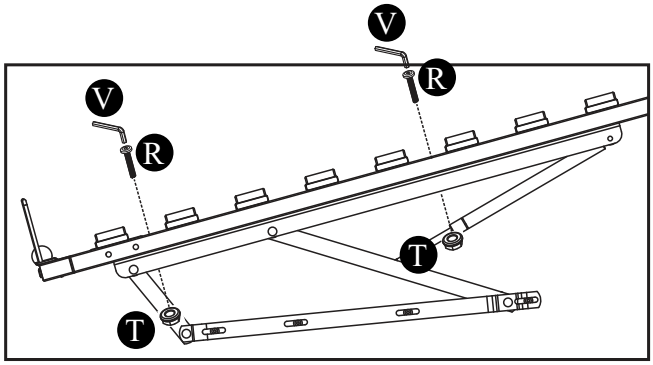

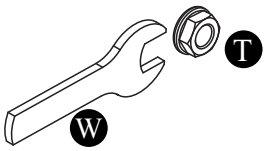



Attention

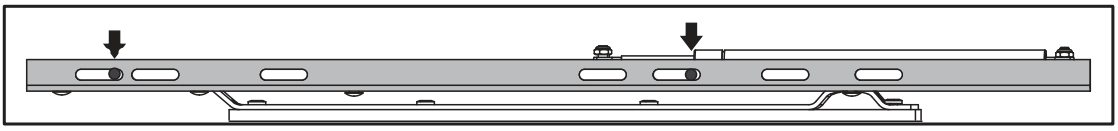



1º Centralize bolts into the holes.
Finish tighten bolts after adjustment, see Step 8

10

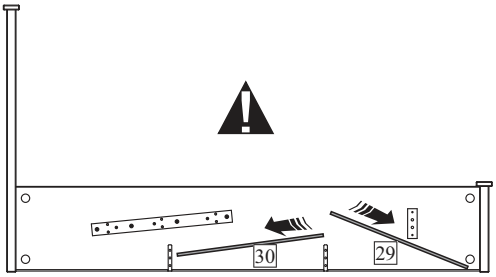

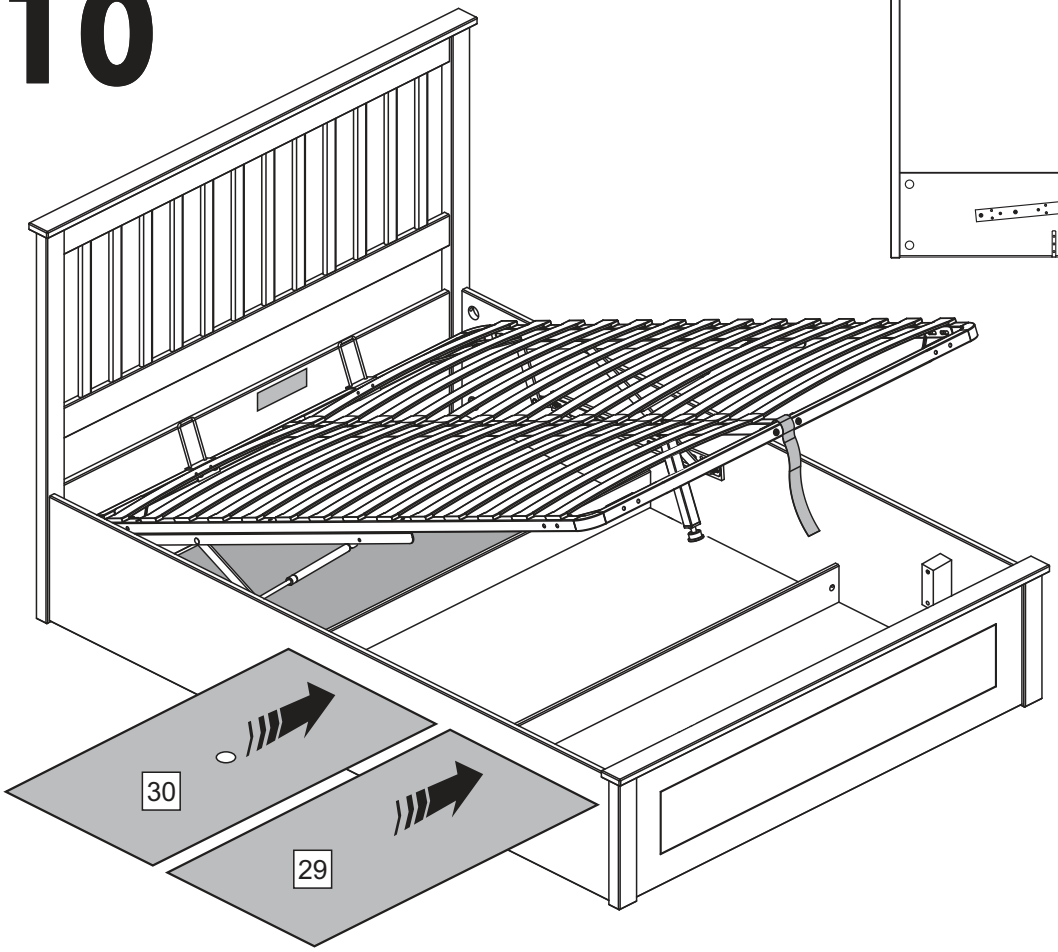

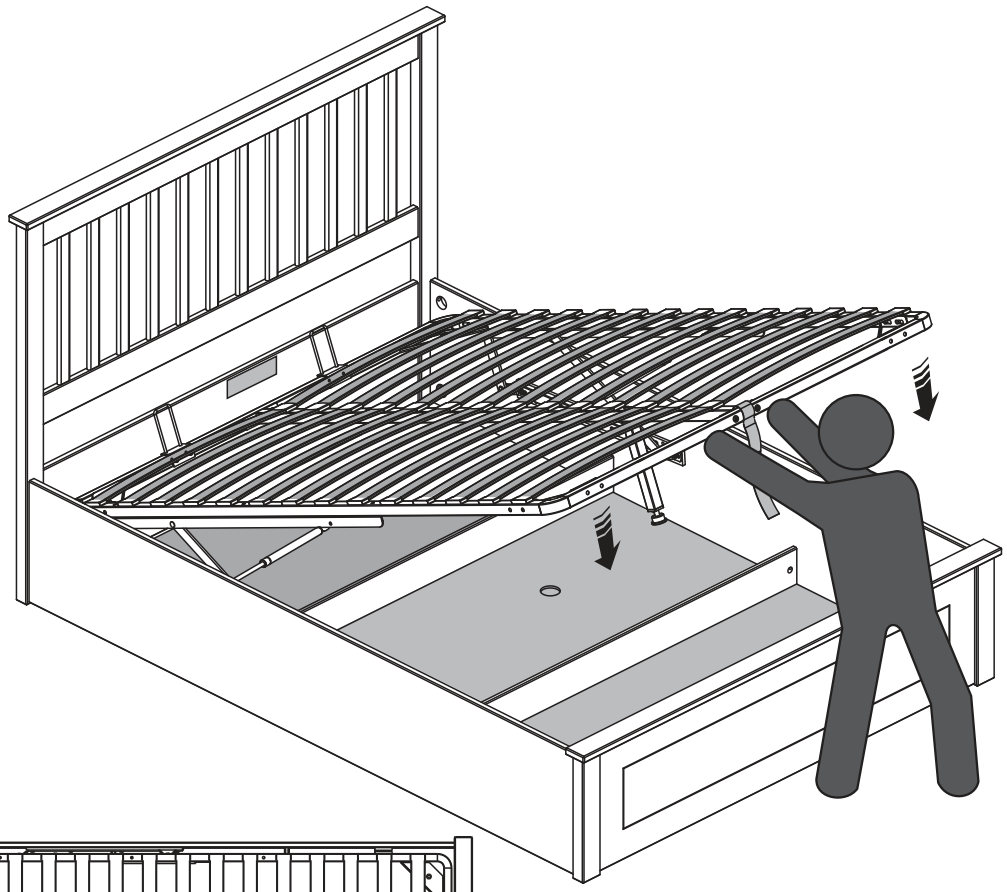

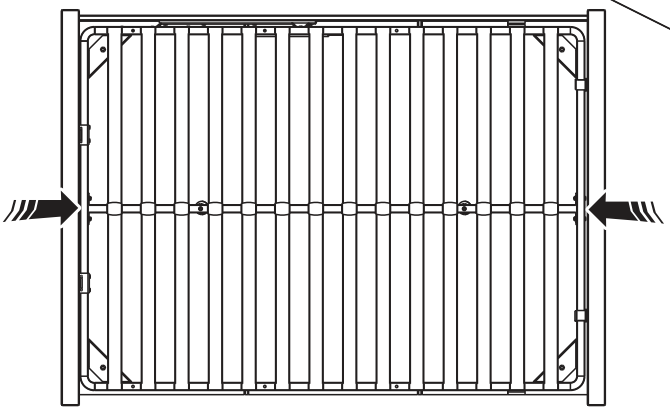

Attention:

Adjust bed base making sure it is centralized between headboard and footboard. After adjusting then tighten all bolts from step (8) and step (9).

