



Pepper


habitat

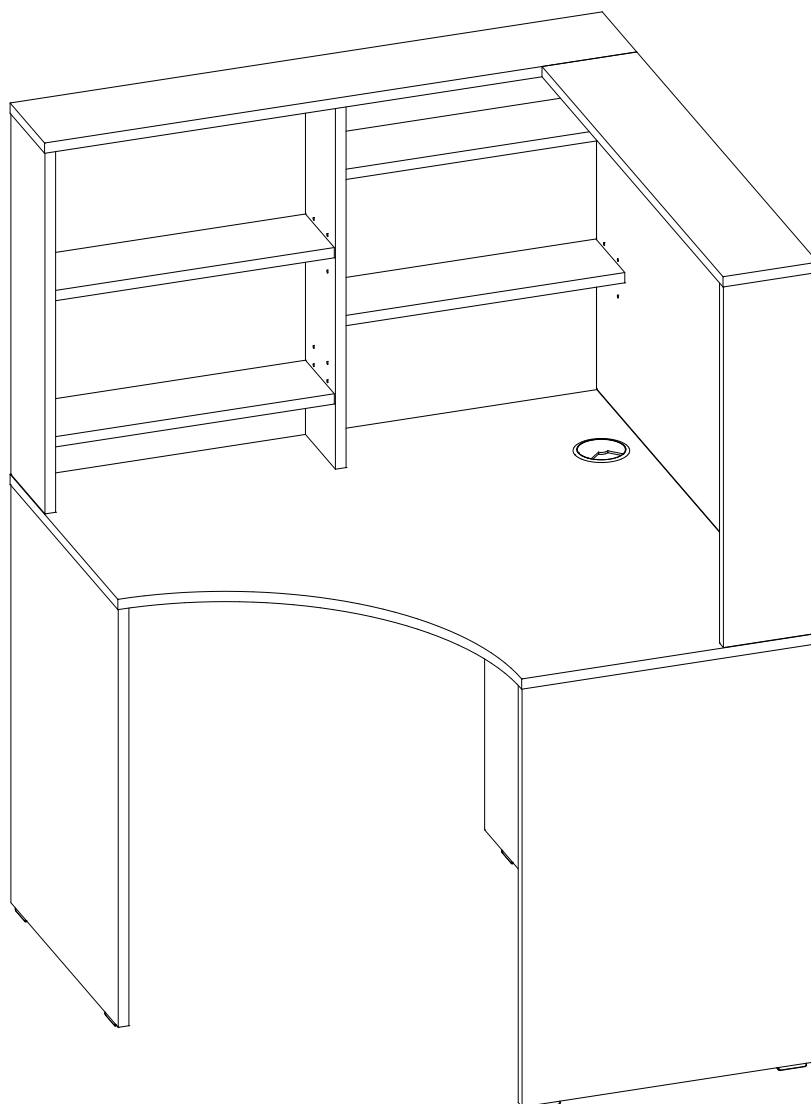


Spare Parts

 www.argos-support.co.uk

 Help@ClickSpares.co.uk

 0370 112 1928

Customer Support

 0345 640 2020



Safety and Care Advice

Product Details

4667140 (desk)


5253728 (desk)

9489536 (desk)

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- This product has been constructed to be used in the domestic environment only and not for commercial purposes.

- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.

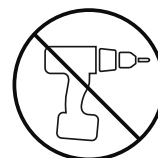

- We do not recommend the use of power drill/drivers for inserting screws as this could damage the unit. Only use hand screwdrivers.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent. Do not use abrasive cleaners.
- Use a dry cloth to clean the product, furniture polish is not recommended.
- From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Additional Guidance

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.
- Maximum user weight 40kg
- This product is compliant BS1725

Fittings

(Shown to scale)


Bag 1



A ø8x35 wooden dowel x 56



B ø8x45 wooden dowel x 2



C Shelf support with pins x 16



D Cam lock cap x 38




E Cam Lock
x 38



F Metal Cam Screw x 38




G Desk cable passage x 1




H Plastic foot x 6

Tools required




Phillips screwdriver
(small & medium)

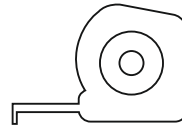

Ruler/tape
measure




Phillips screwdriver
(small & medium)

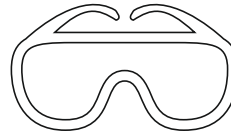

Eye protection
(when using a
hammer or glue)




Small
hammer




Mallet


Panels

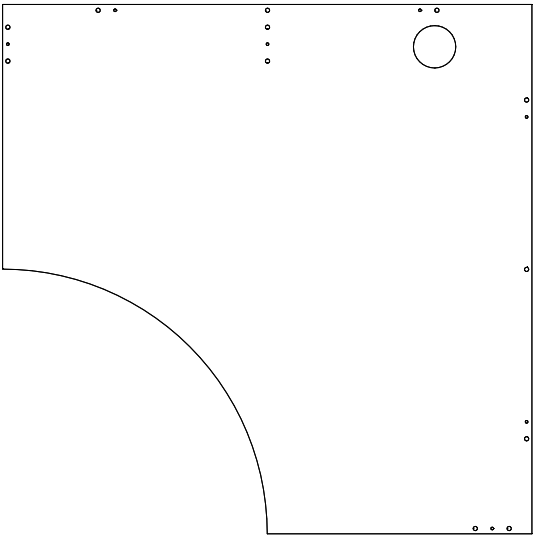


1 Top of the desk x 1 (100x100cm)

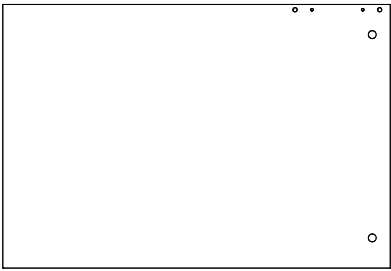

2 Right side x 1 (73x50cm)

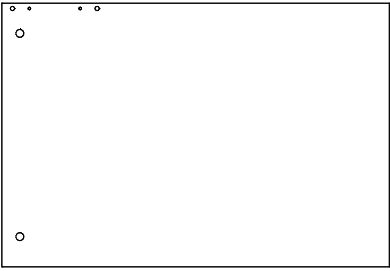


3 Left side x 1 (73x50cm)



4 Construction slat x 2 (78x20cm)




5 Right leg x 1 (73x18cm)




6 Left leg x 1 (73x20cm)




7 Right top of the desk extension x 1 (84x16cm)




8 Left top of the desk extension x 1 (100x16cm)



9 Right side of the desk extension x 1 (63x16cm)




10 Left side of the desk extension x 1 (63x16cm)




11 Middle partition of the desk extension x 1 (63x14cm)

Panels

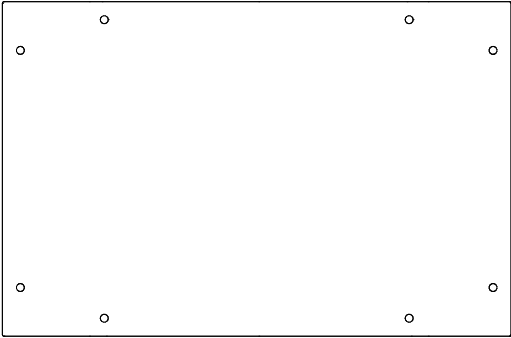

12 Right rear panel of the desk extension x 1 (96x63cm)





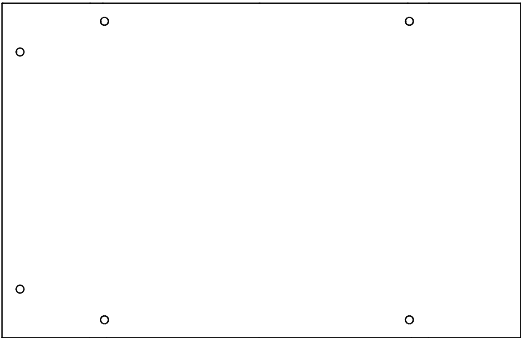


13 Left rear panel of the desk extension x 1 (98x63cm)











14 Drilled shelf of the desk extension x 4 (47x13cm)





1

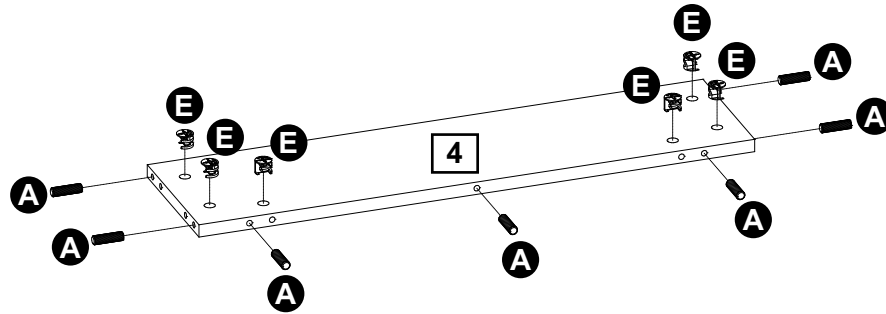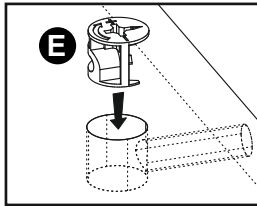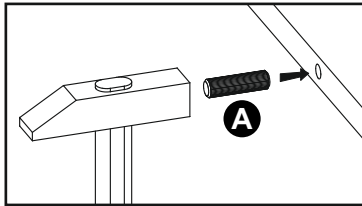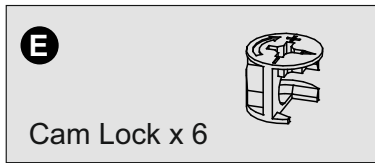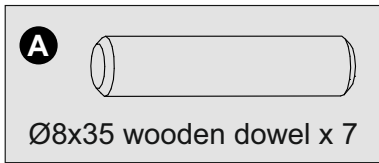









2

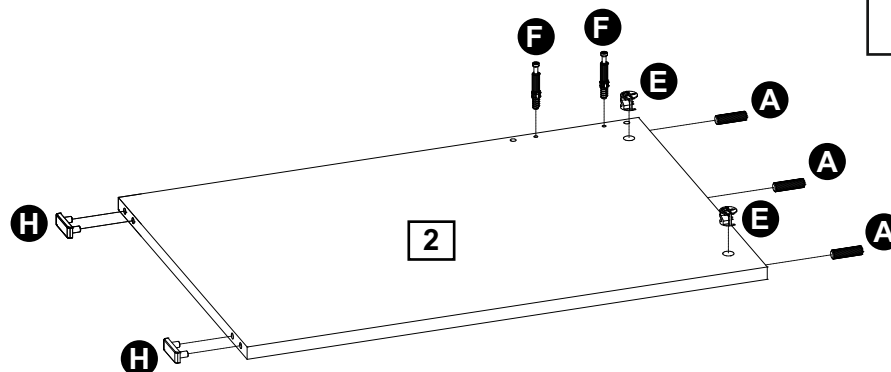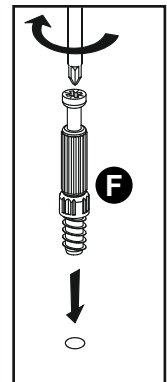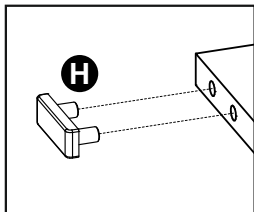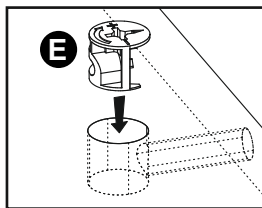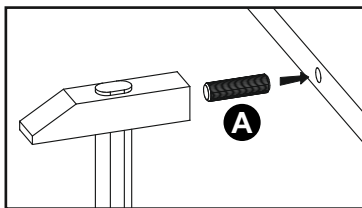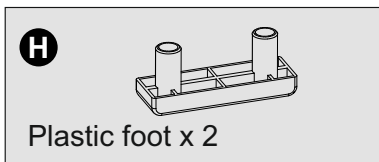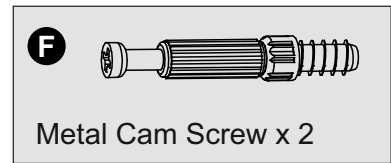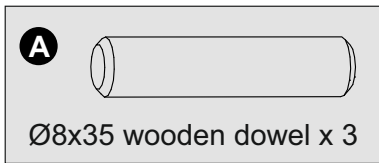





3

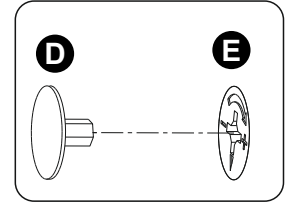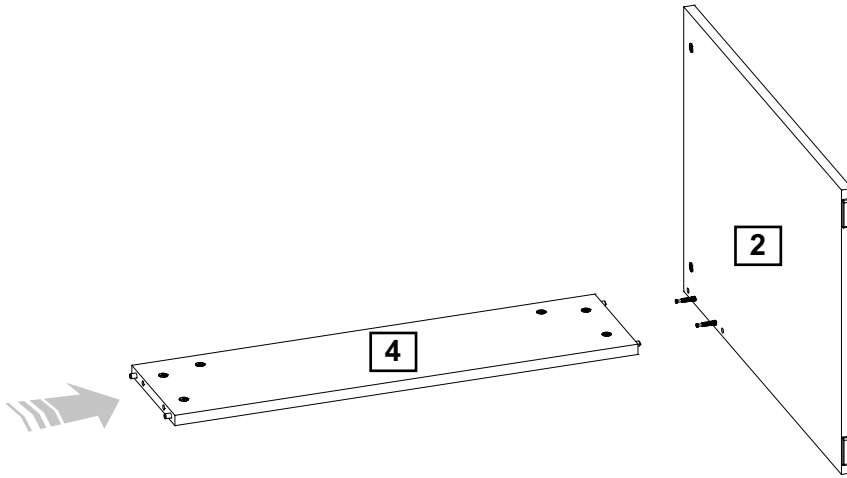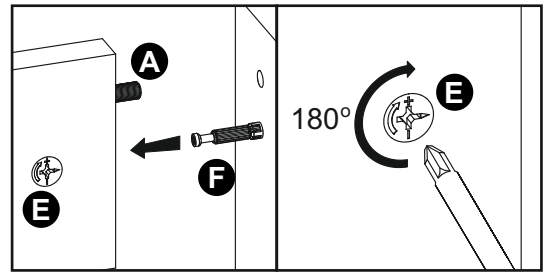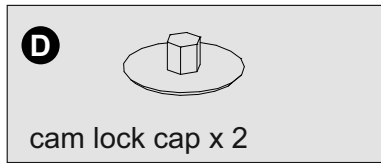






4

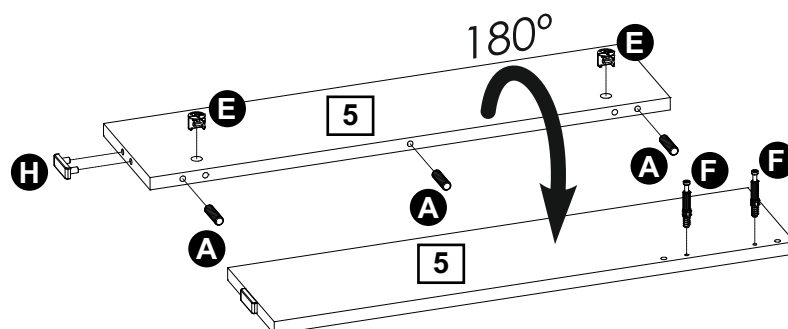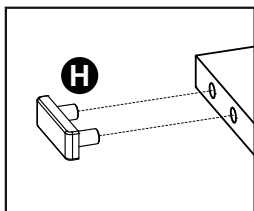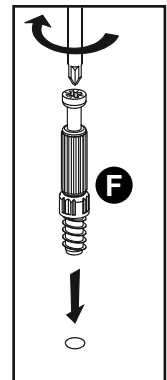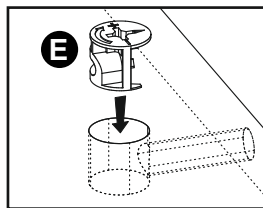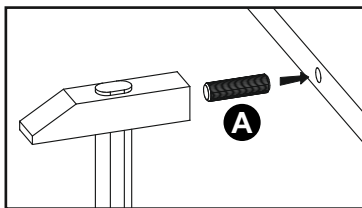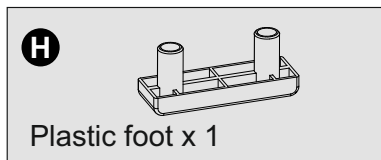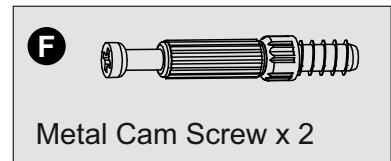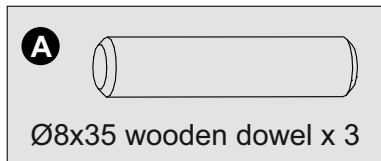





5

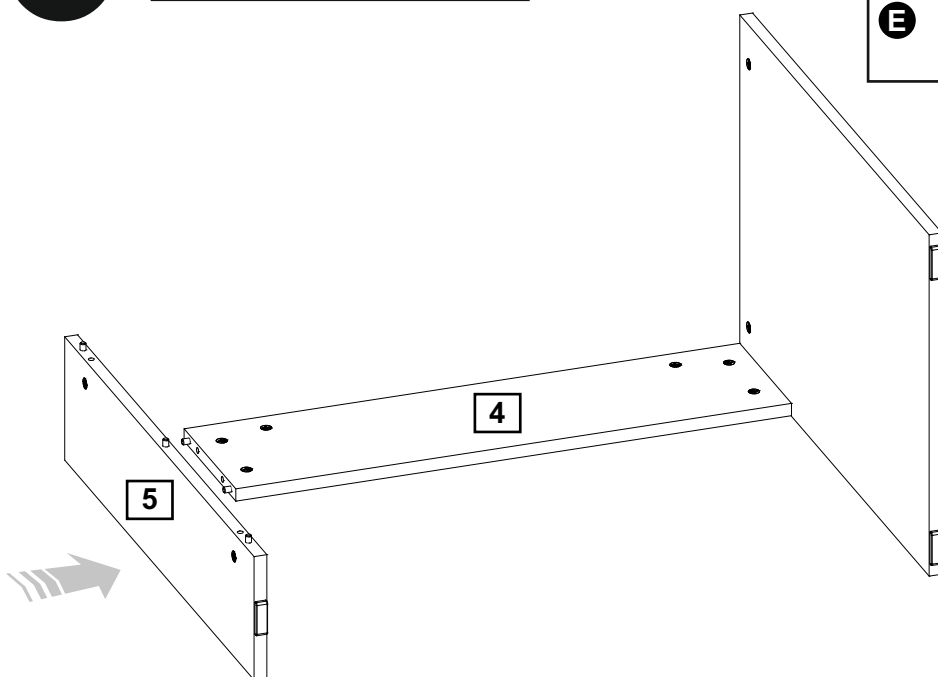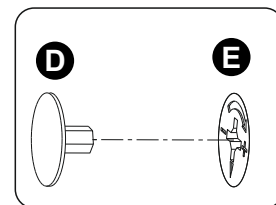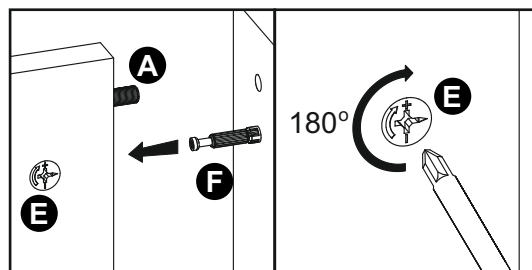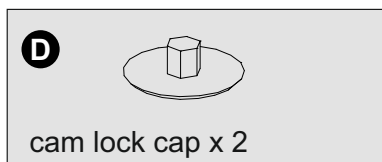









6

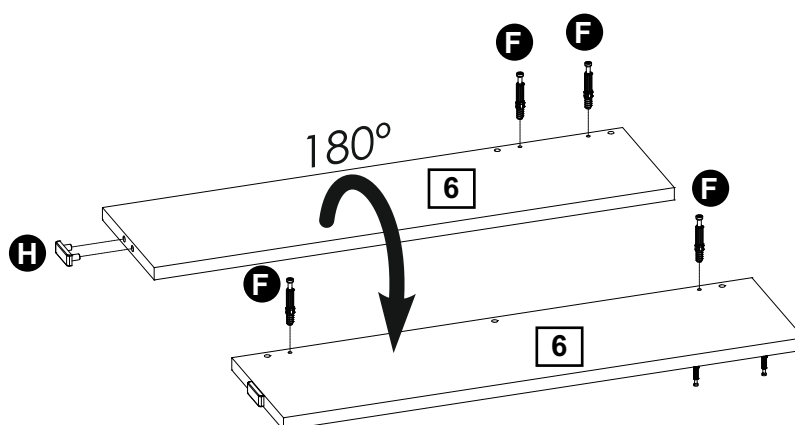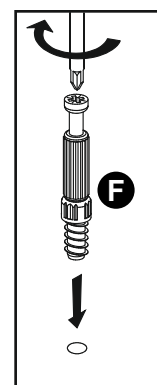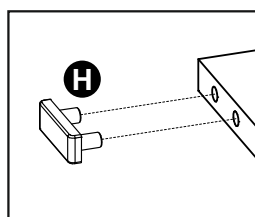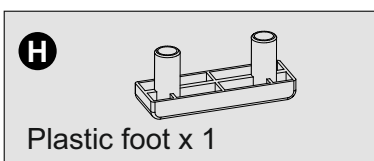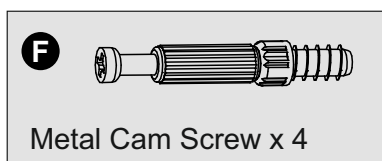






7

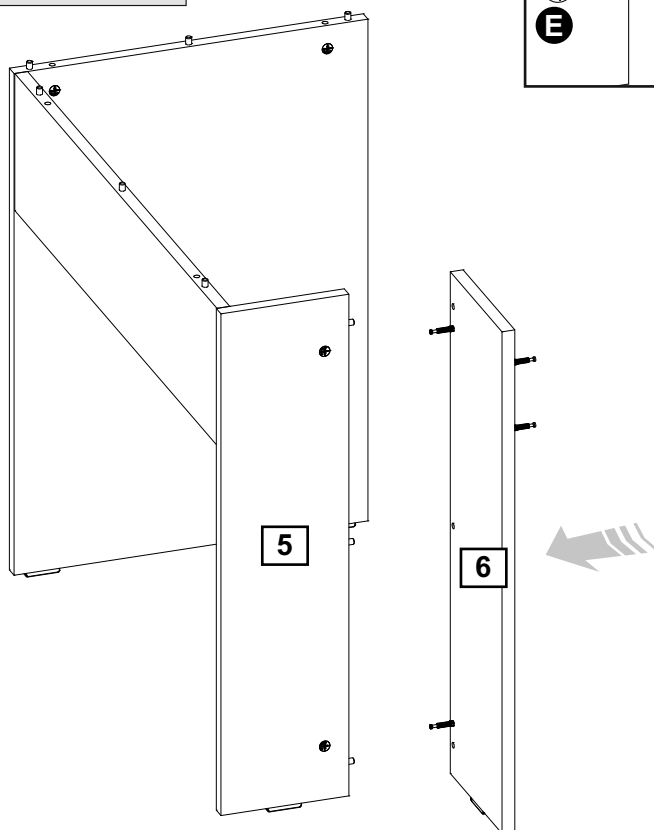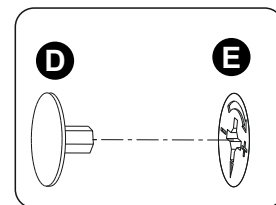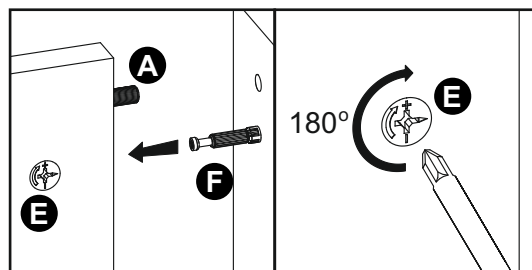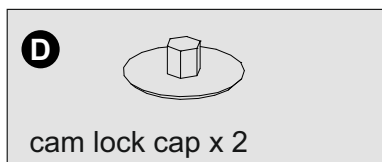






8

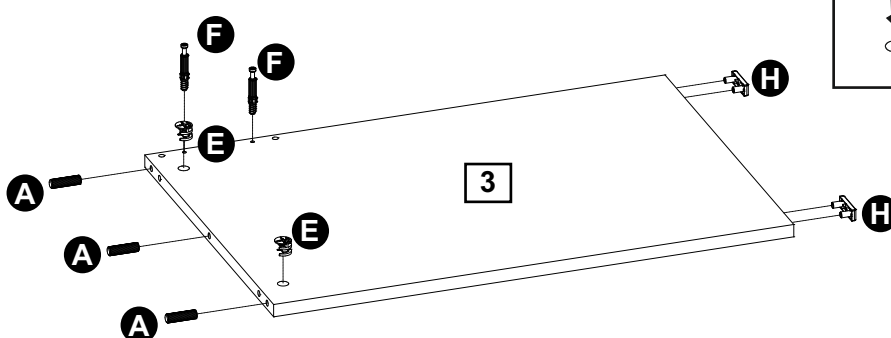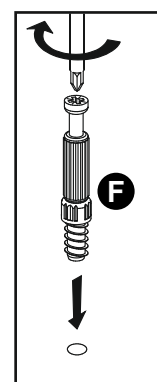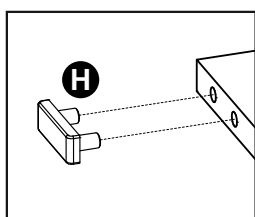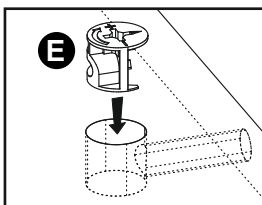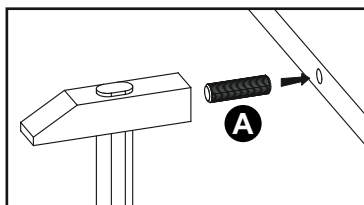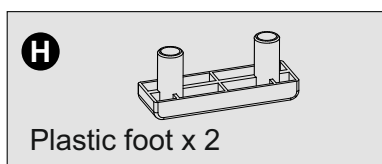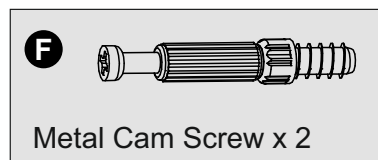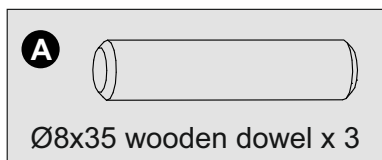





9

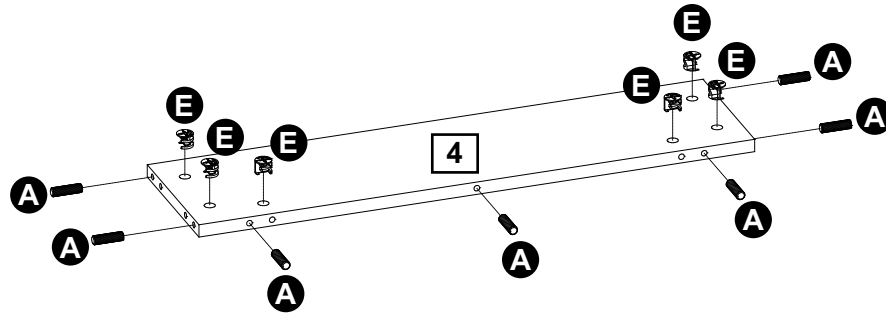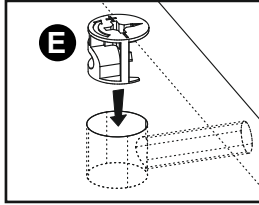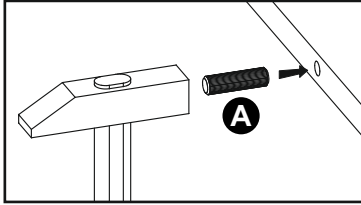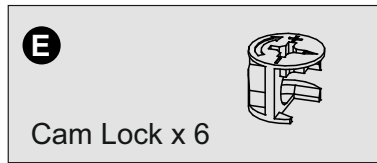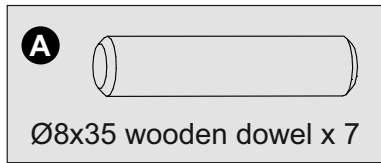




10

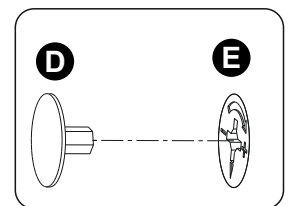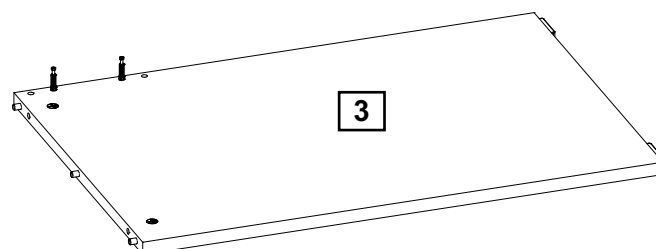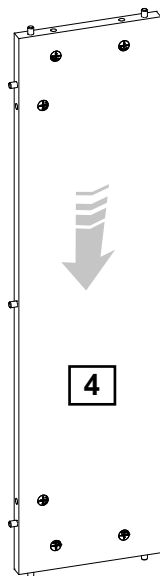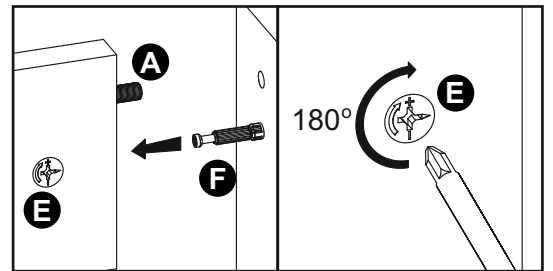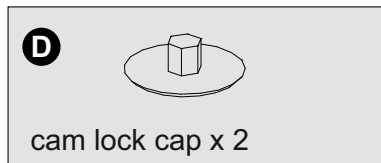





11

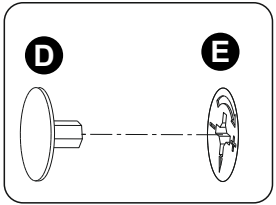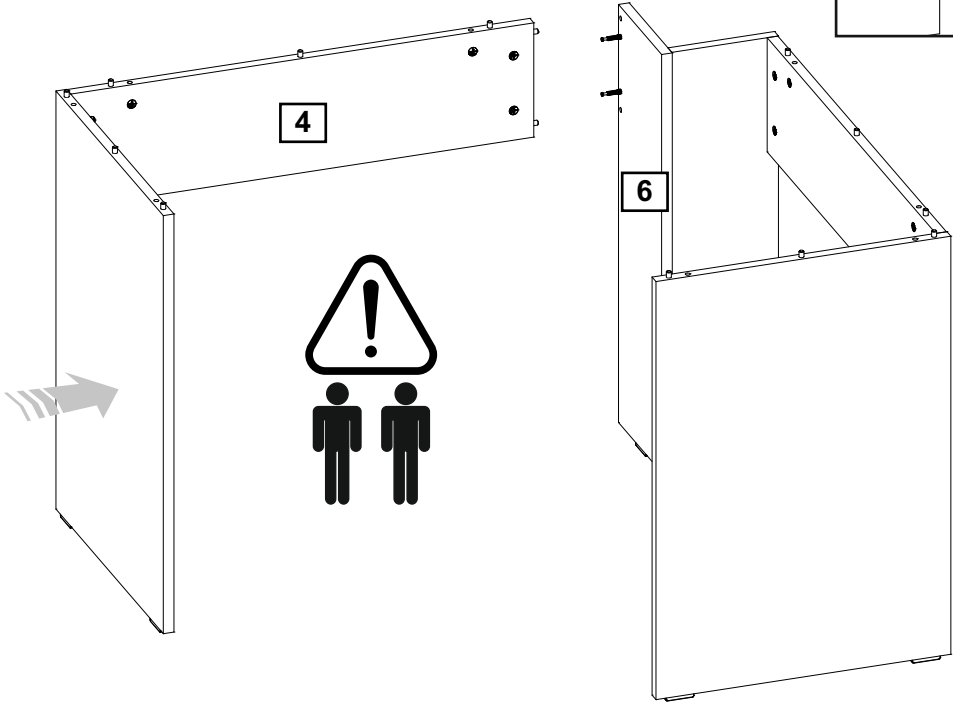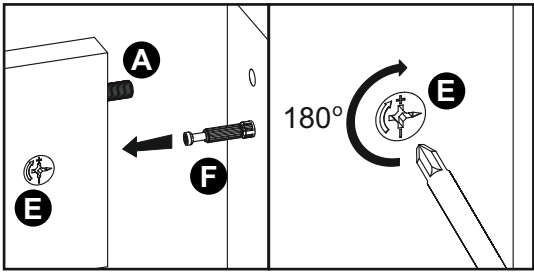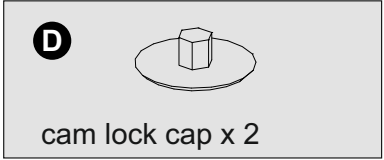





12

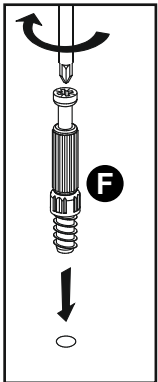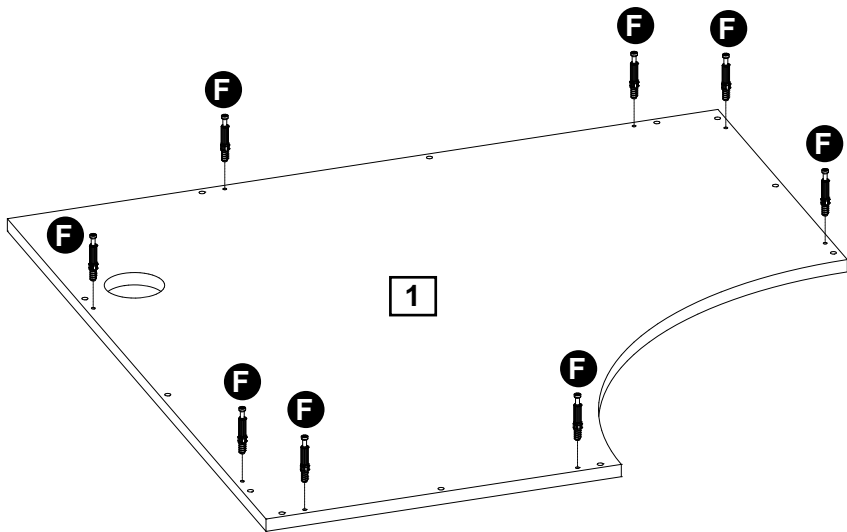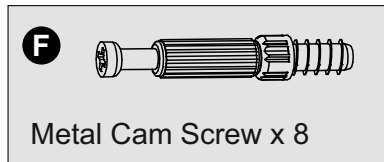

13

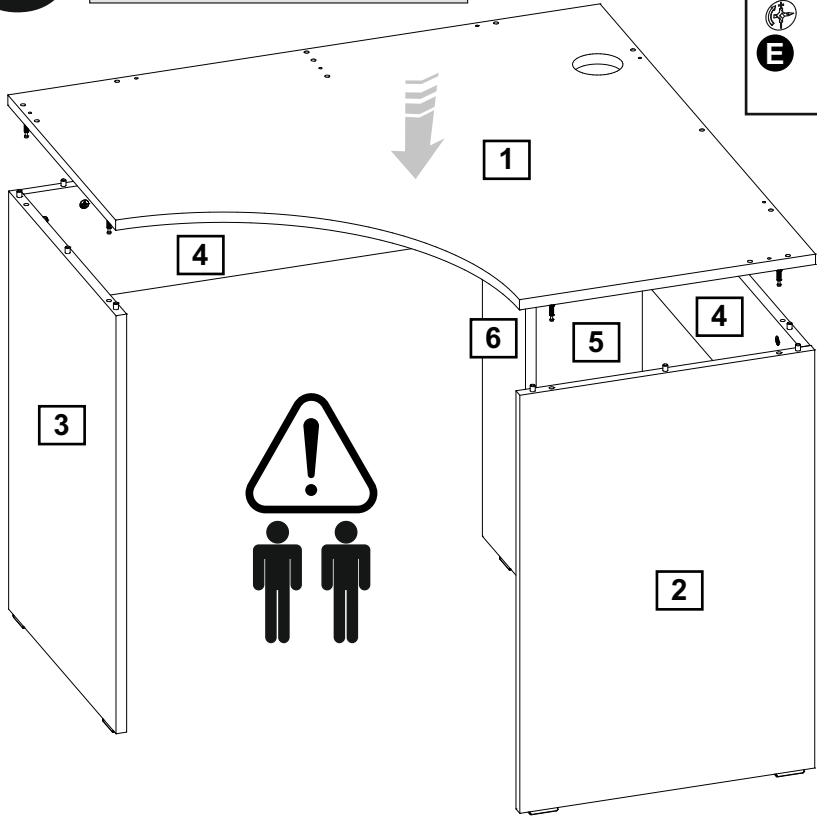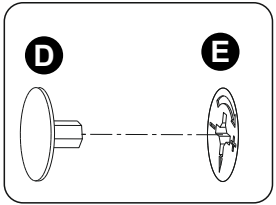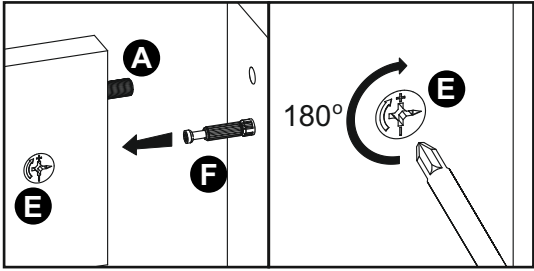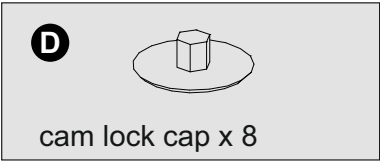


14

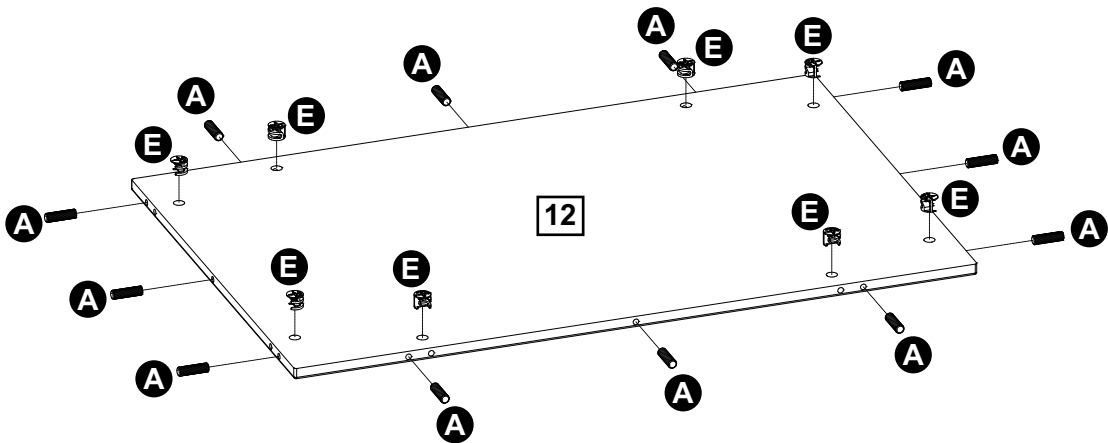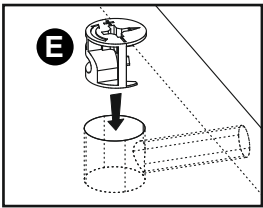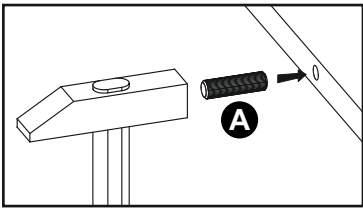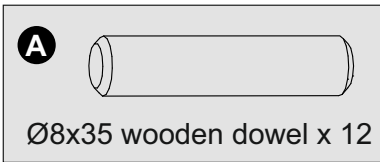

15

A



Ø8x35 wooden dowel x 4

E







Cam Lock x 2

F



Metal Cam Screw x 2


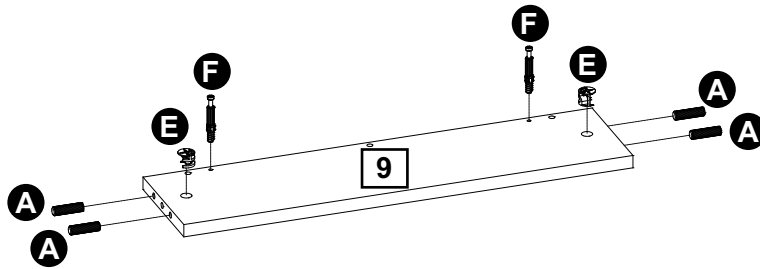
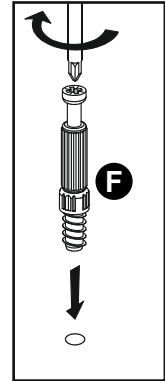
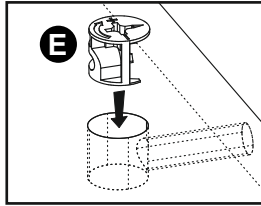
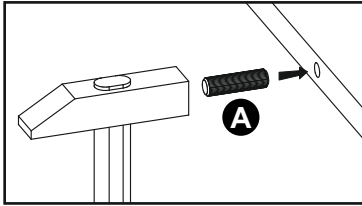


16

D



cam lock cap x 2

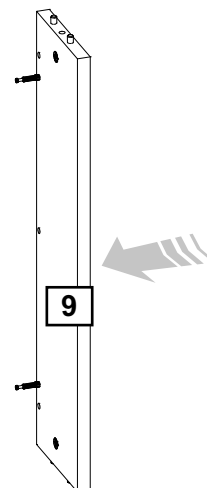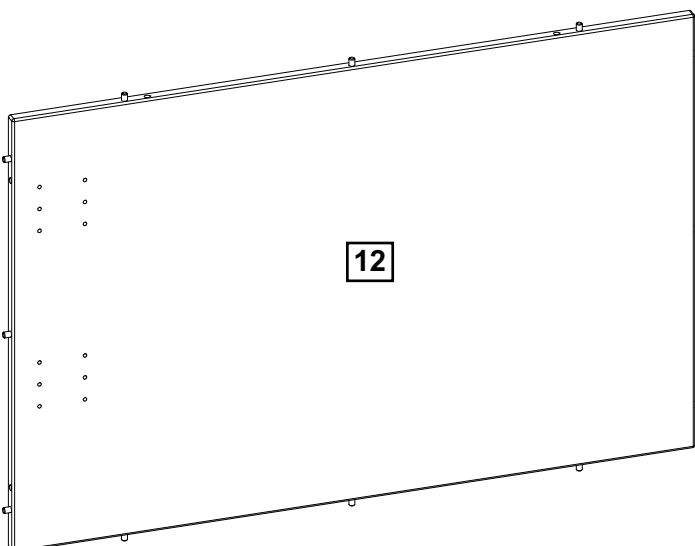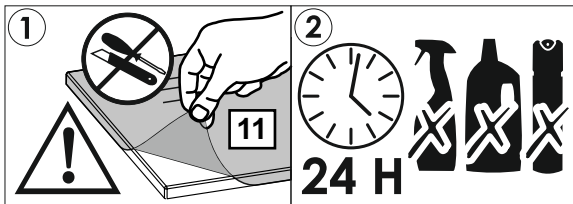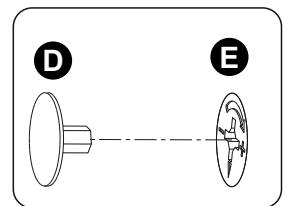
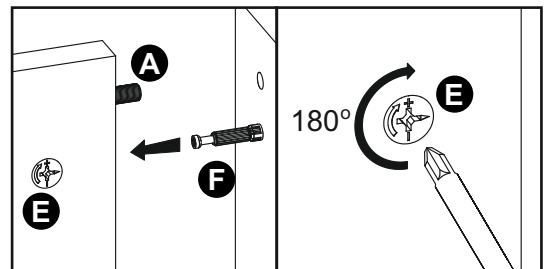


17

F



Metal Cam Screw x 3


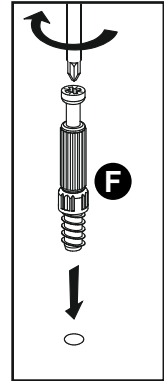
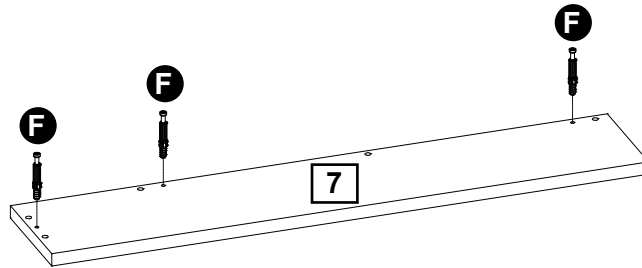


18








D










cam lock cap x 3

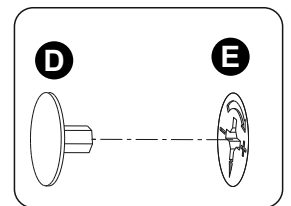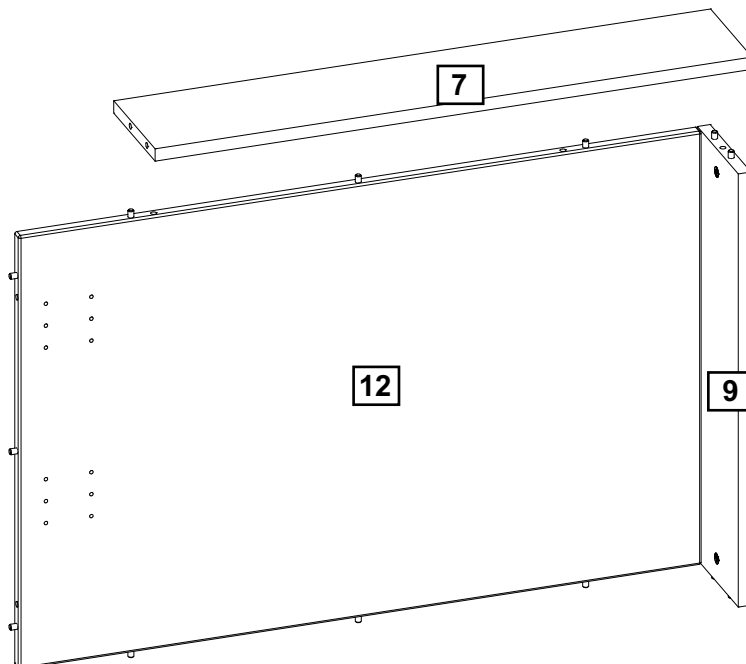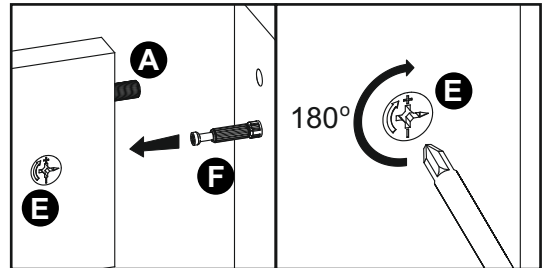





19

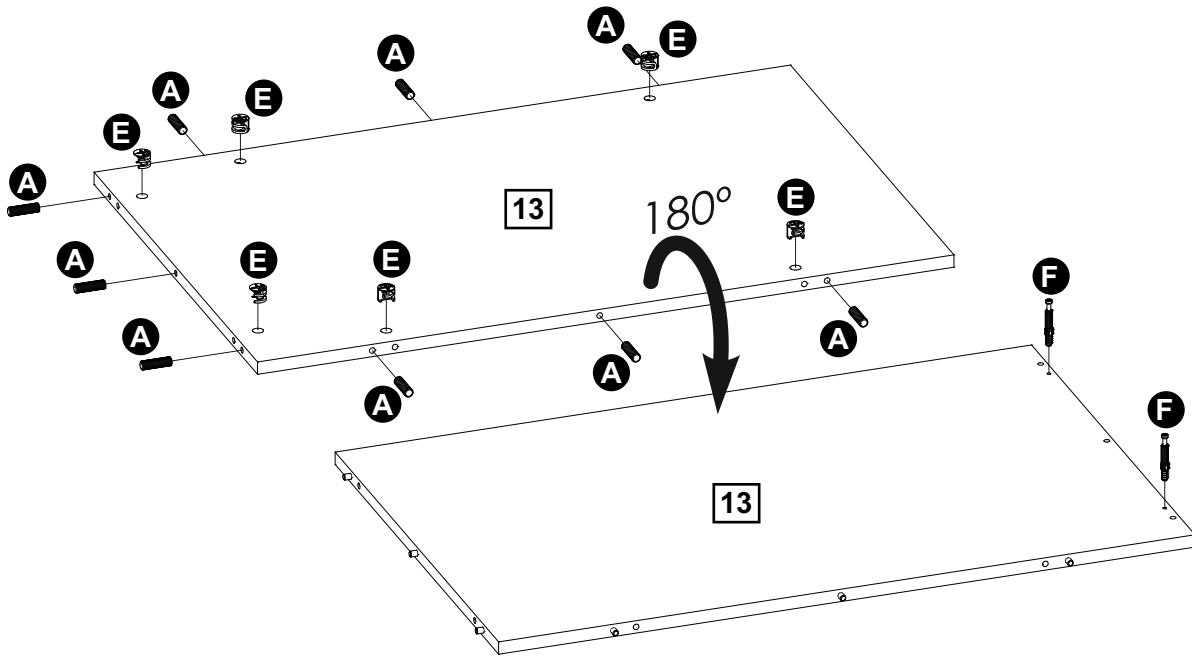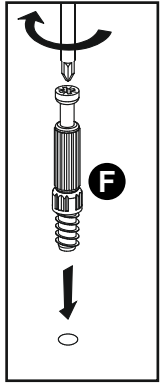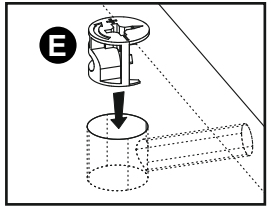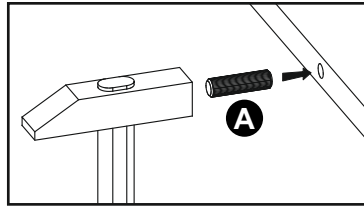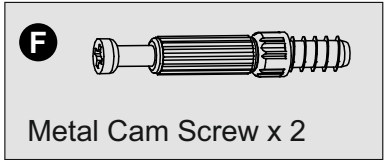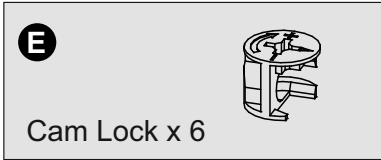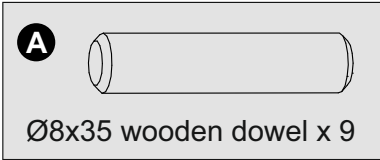






20

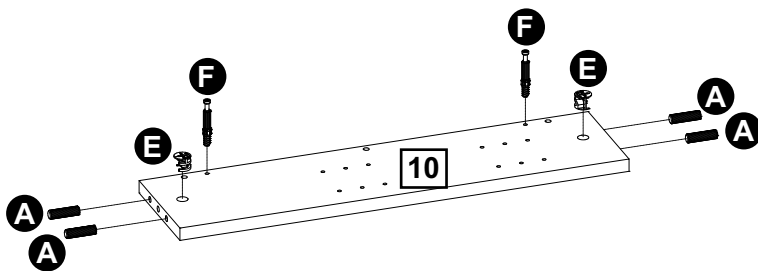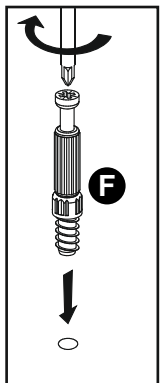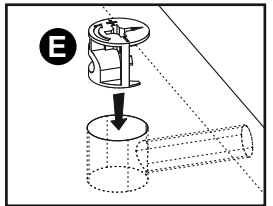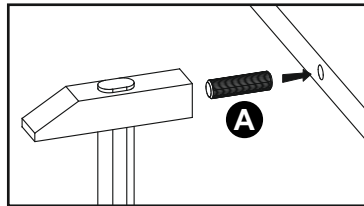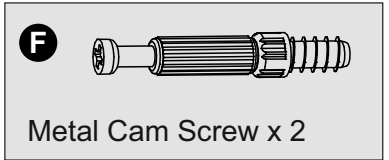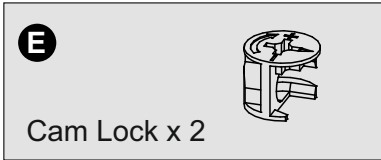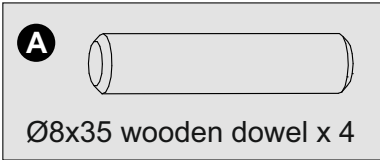






21

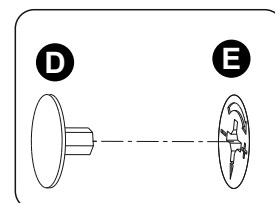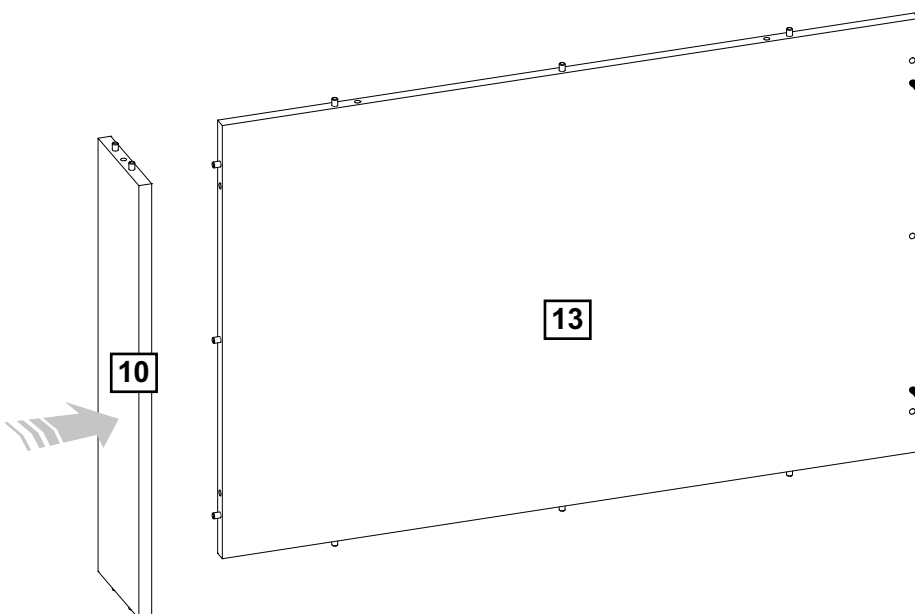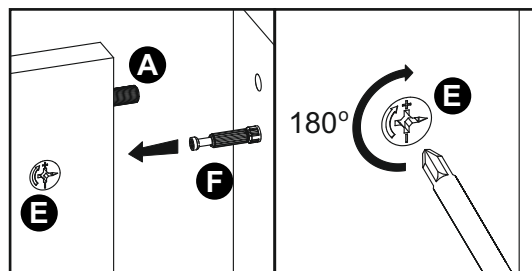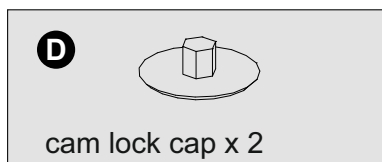





22

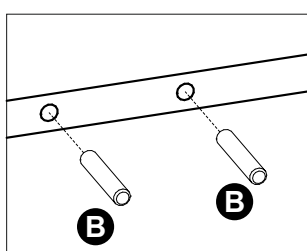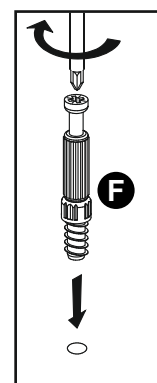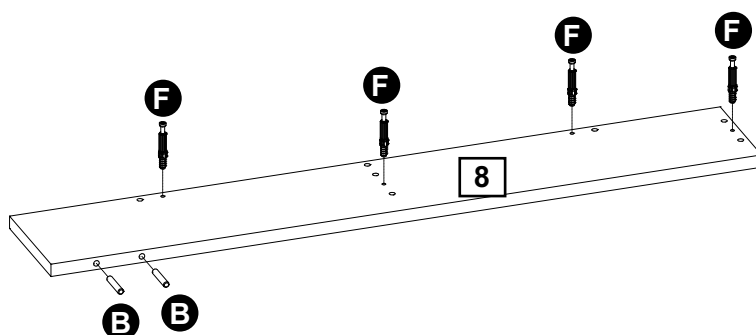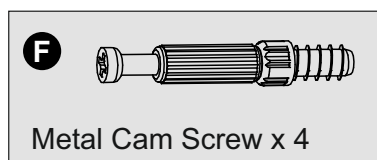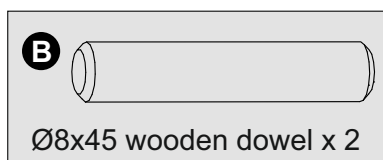





23

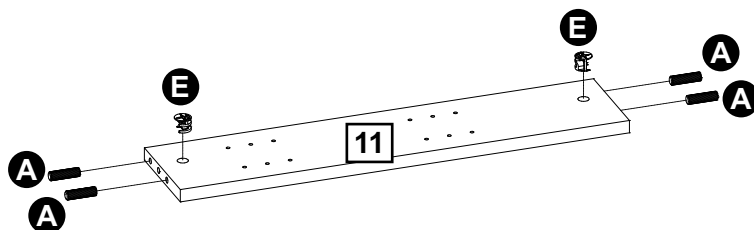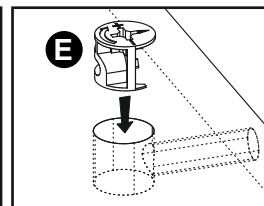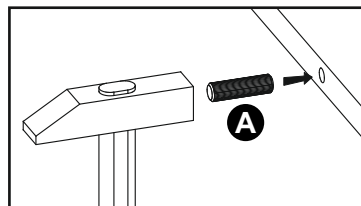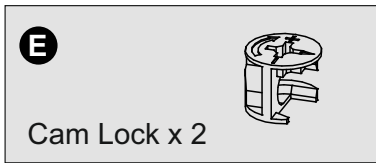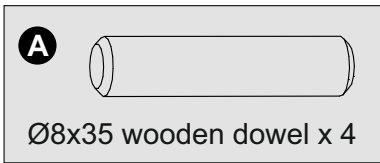





24

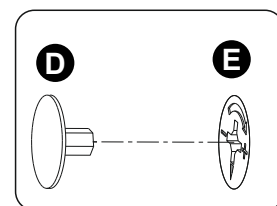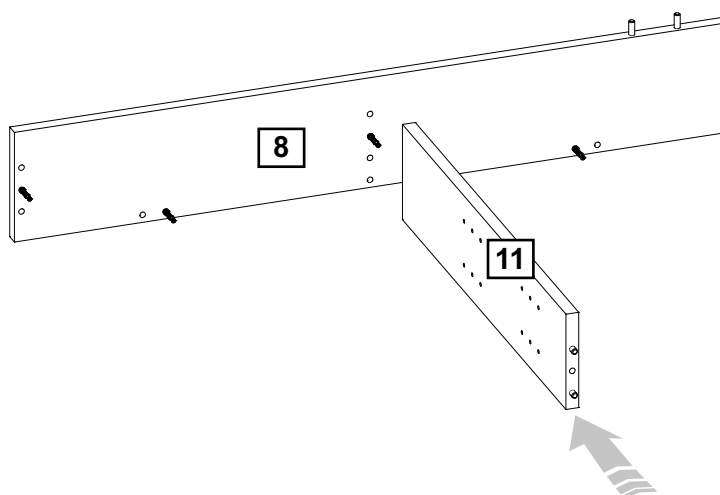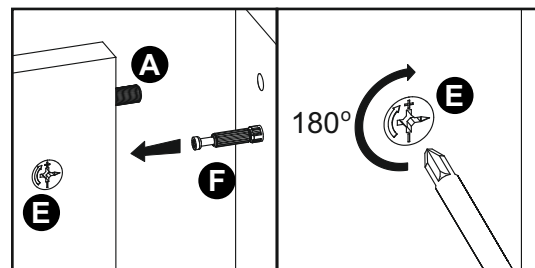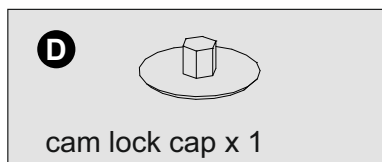




25

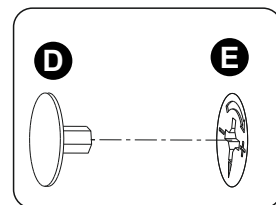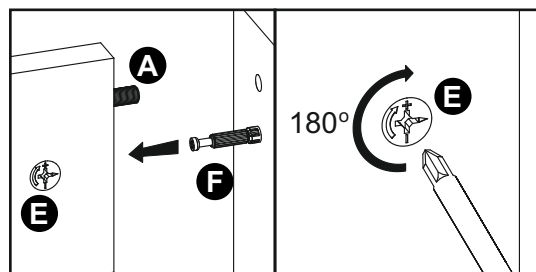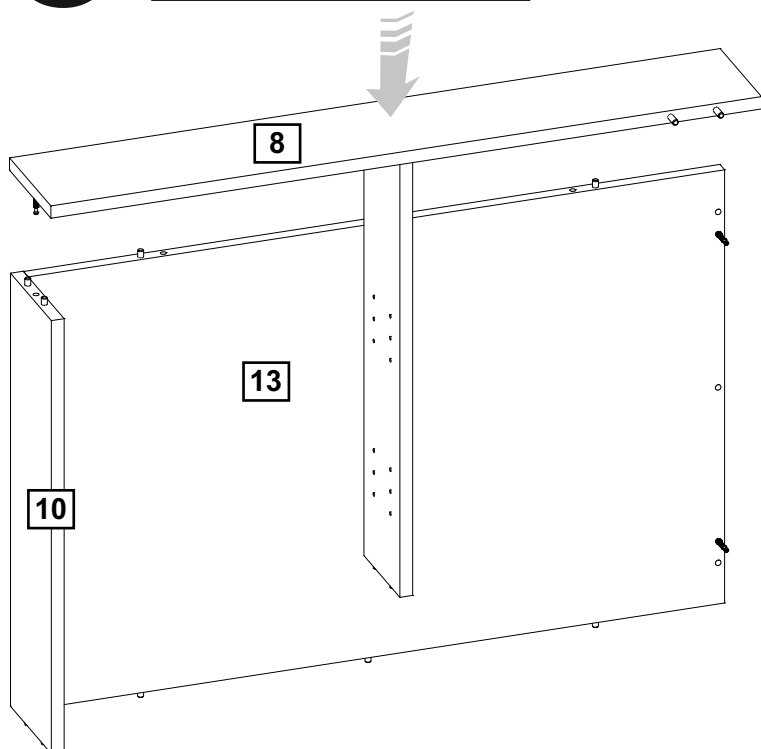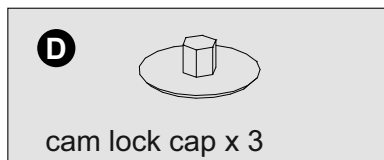



26

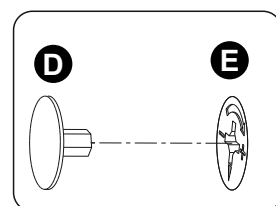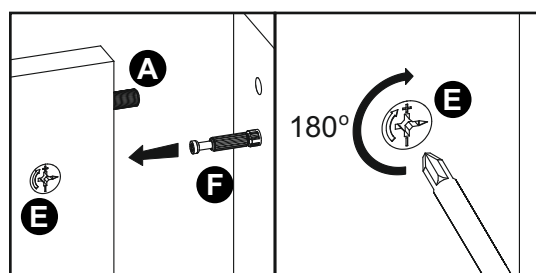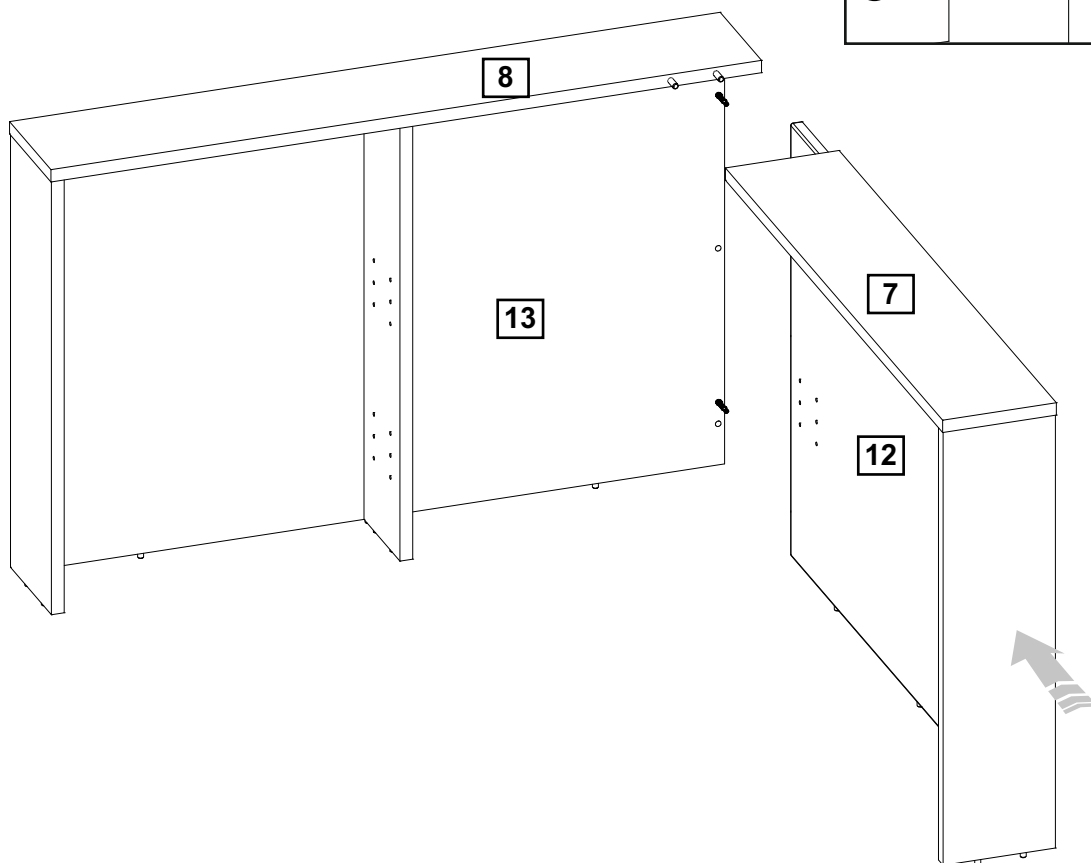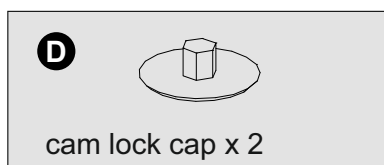




27

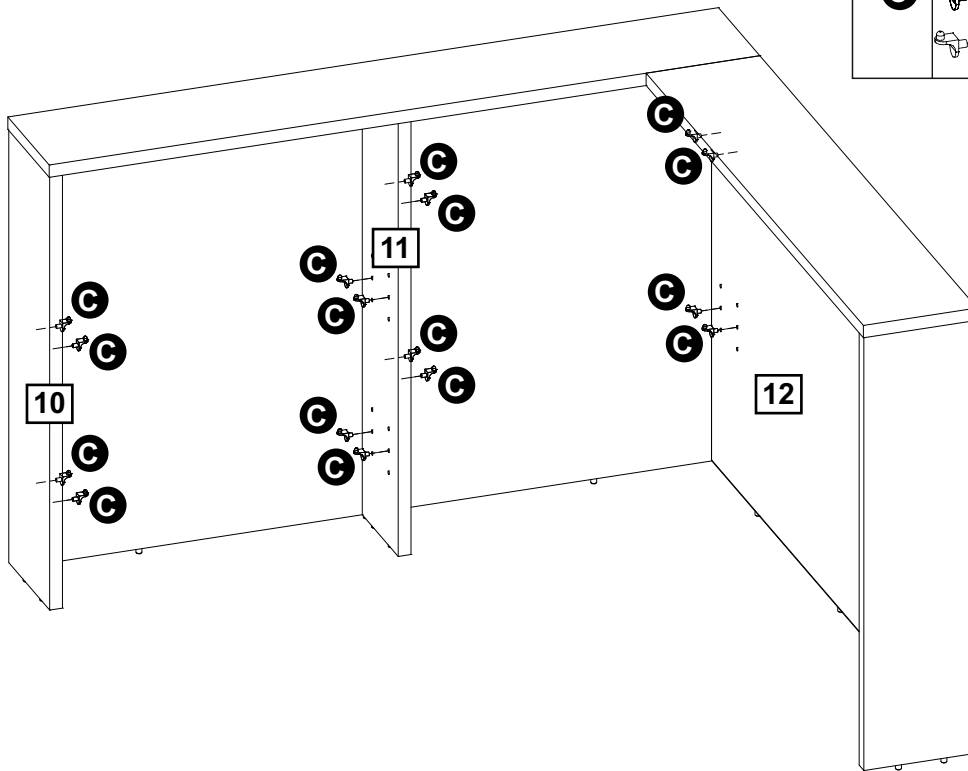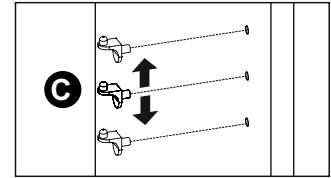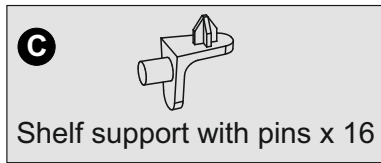





28

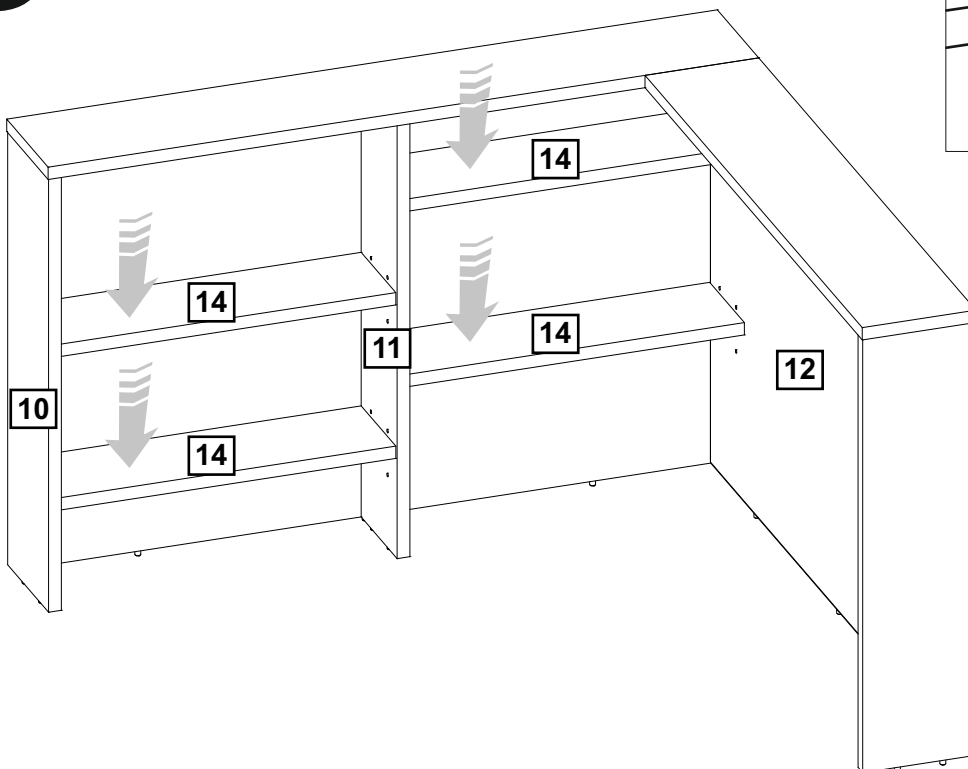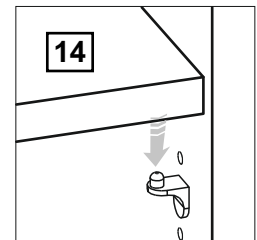

29

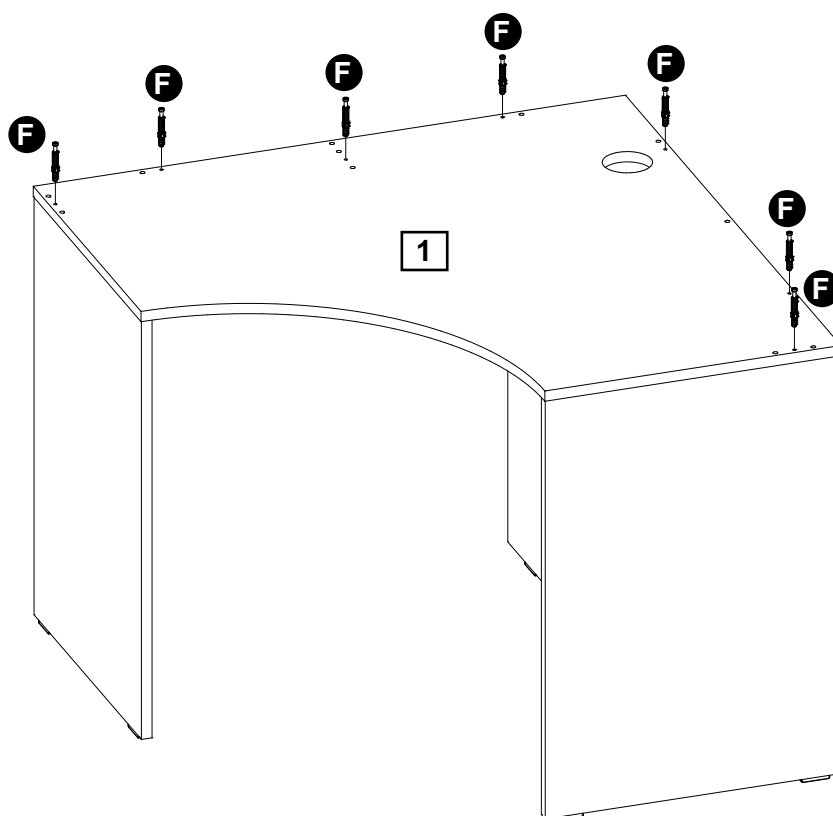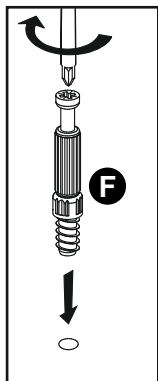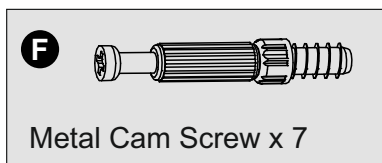

30

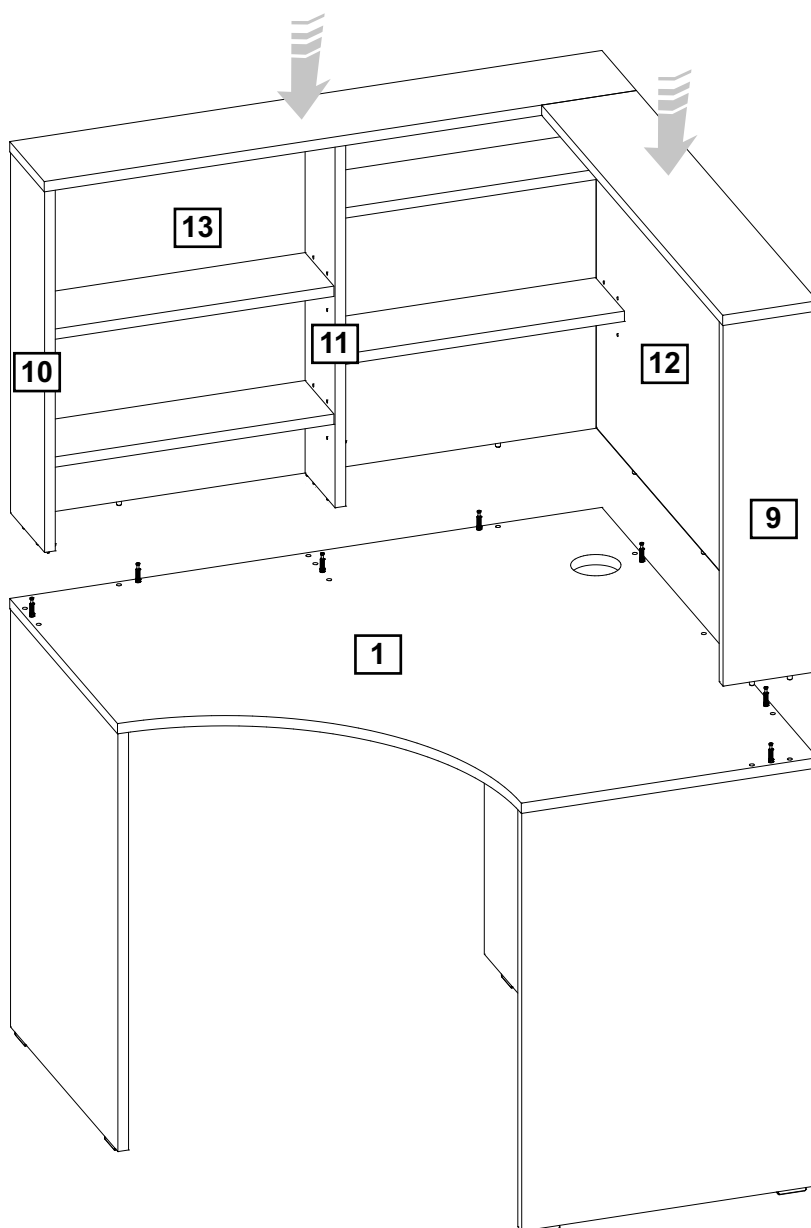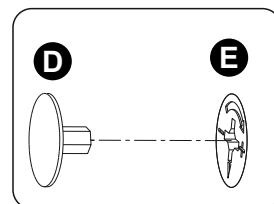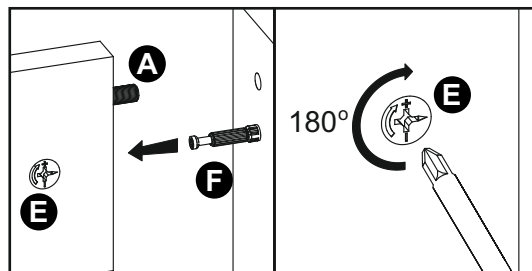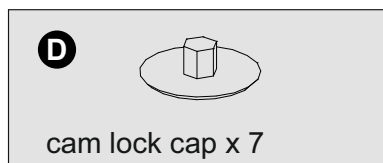

31

