
Pimlico

habitat

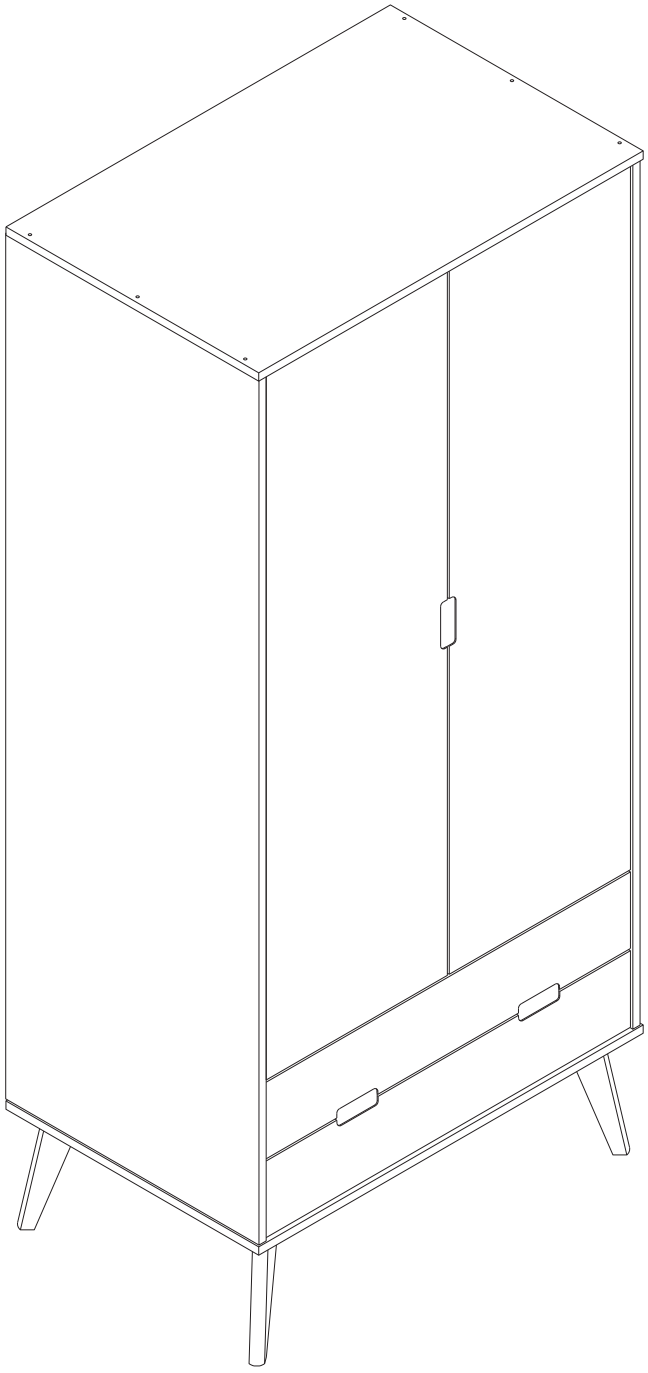

Spare Parts

www.argos-support.co.uk

Help@ClickSpares.co.uk

0370 112 1928

Customer Support

0345 640 2020


Issue 1 -13/05/24

⚠ Safety and CareAdvice

Product Details 2 Door 2 Drawer Robe White - 579/1187
Blue - 579/1204

IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- This product has been constructed to be used in the domestic environment only and not for comercial purposes.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.

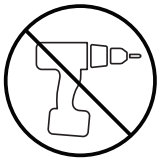

- We do not recommend the use of power drill/drivers for inserting screws as this could damage the unit. Only use hand screwdrivers.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.

Care and maintenance


- Use a dry cloth to clean the product, furniture polish is not recommended.
- From time to time check that there are no loose screws, nuts or bolts. If there are please re-tighten.
- This product should not be discarded with household waste.Take to your local authority waste disposal centre.

Additional Guidance


- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts.
- Regularly check and ensure that all bolts and fittings are tightend properly.
- This product is compliant BS 4875-7 and EN 14749.

Habitat, Argos Limited and Sainsbury's Supermarkets Ltd, London EC1N 2HT, UK. Argos (N.I.) Ltd and Sainsbury's (NI) Ltd. Forestside Shopping Centre, Upper Galwally, Belfast, BT8 6FX, UK

Panels

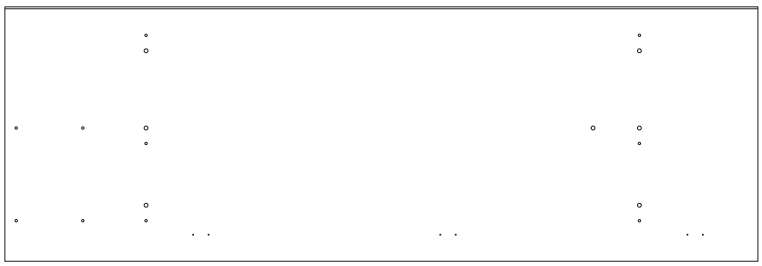

1 Right side panel
(1560 x 527mm)

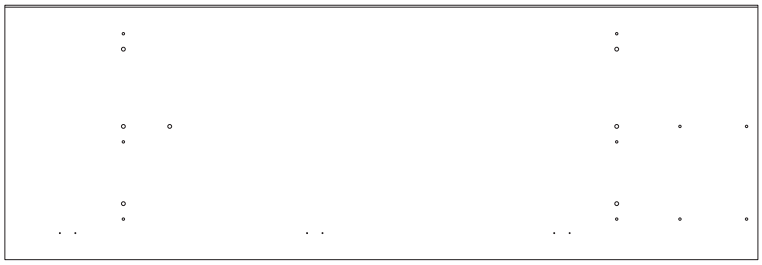

2 Left side panel
(1560 x 527mm)




3 Back panel
(1590 x 388mm) (x2)

4 H profile
(1560mm)




5 Door knocker
(1266 x 70mm)

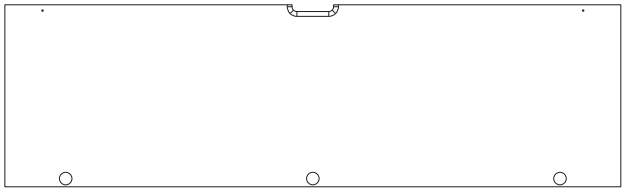

6 Door
(1276 x 377mm) (x2)



13 Internal drawer front
(715 x 134mm) (x2)




16 Front frame
(674 x 45mm) (x2)



7 Top panel
(800 x 527mm)



8 Base panel
(800 x 527mm)

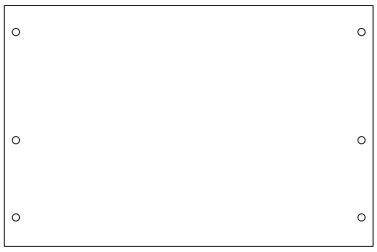

9 Fixed shelf
(764 x 499mm) (x2)




10 Drawer bottom
(725 x 366mm) (x2)




11 Drawer front
(758 x 134mm) (x2)


12 Hanging rail
(756 x 22mm)



14 Drawer back
(715 x 112mm) (x2)



17 Side frame
(404 x 45mm) (x2)



15 Drawer side
(380 x 112mm) (x4)




18 Leg
(210 x 57mm) (x4)

Fittings

A 


8x20 Small wooden Dowel x 4
10000B

B 


8x30 Wooden Dowel x 28
10001

C 


12mm Screw x 12
8999

D 

14mm Screw x 40
9001

E 


20mm Screw x 8
9000E

F 


35mm Screw x 16
9006

G 

30mm Screw x 6
9017D

H 


40mm Screw x 12
9014

I 

45mm Screw x 14
9015C

J 

10mm Screw x 8
9101

K 


35mm Bolt x 4
9105

L 


Metal Dowel x 12
4001

M 

Locking nut x 12
4101

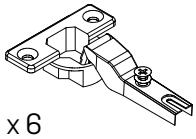N 

Hinge x 6
1003

O 


Hinge support x 6
1007

P 


Hanging rail support x 2

Q 

Alen key x 1

R 


Washer x 2
11152

S 


Wall Strap x 1

T 


Nail x 40
5000

U 

Metal bracket x 4

V 

Left runner x 2
8000


W 

Right runner x 2
8000

X 

Door stop x 2


Tools required




Ruler/tape measure



Phillips screwdriver (small & medium)




Small hammer



Eye protection (when using a hammer or glue)

1

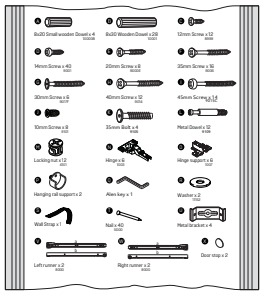


D





14mm Screw x 8

U



Metal bracket x 4

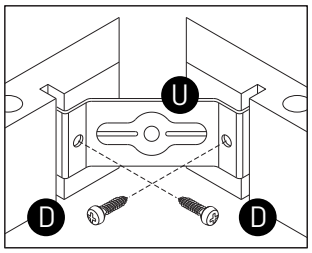


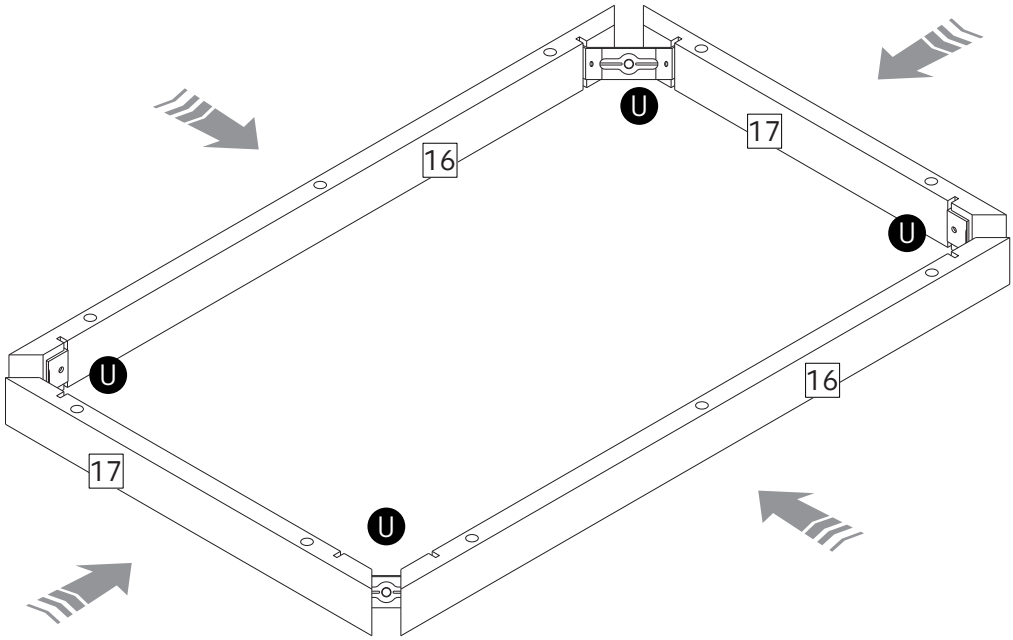

Attention: to the position of side frames 17 !

2

K




35mm Bolt x 4

Q



Alen key x 1

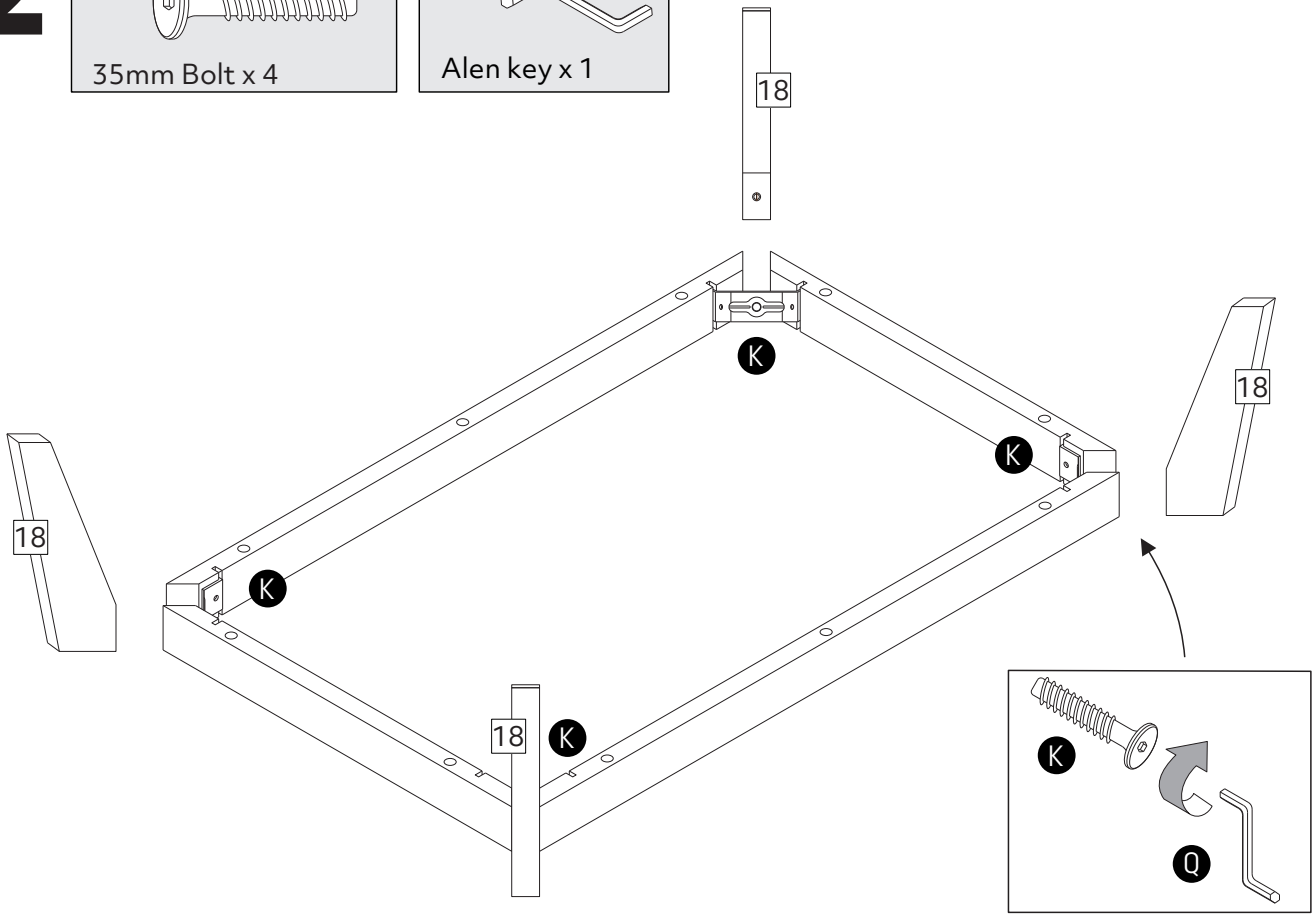


3

B





8x30 Wooden Dowel x 4

I



45mm Screw x 10

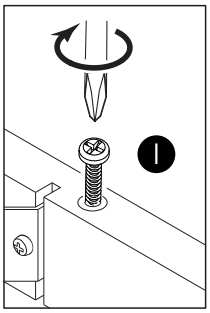


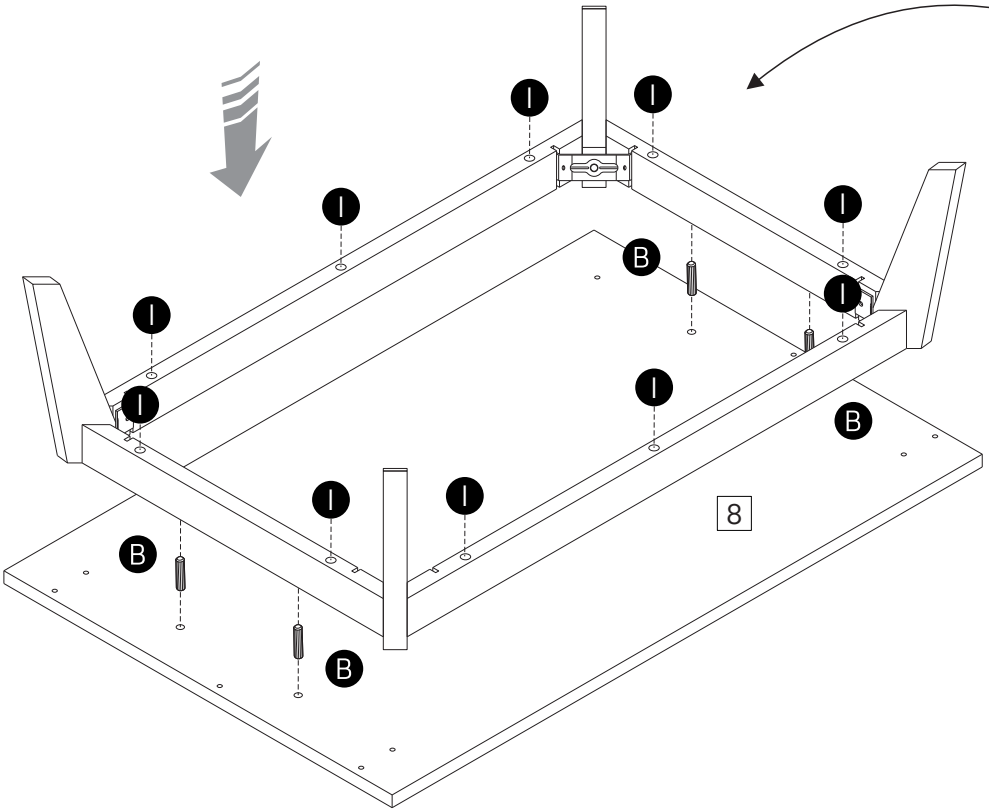


Turn Product

4

I



45mm Screw x 4

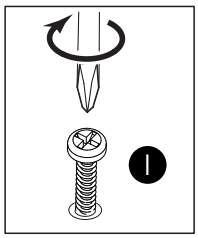

5

B




8x30 Wooden Dowel x 6

D




14mm Screw x 6

O



Hinge support x 3

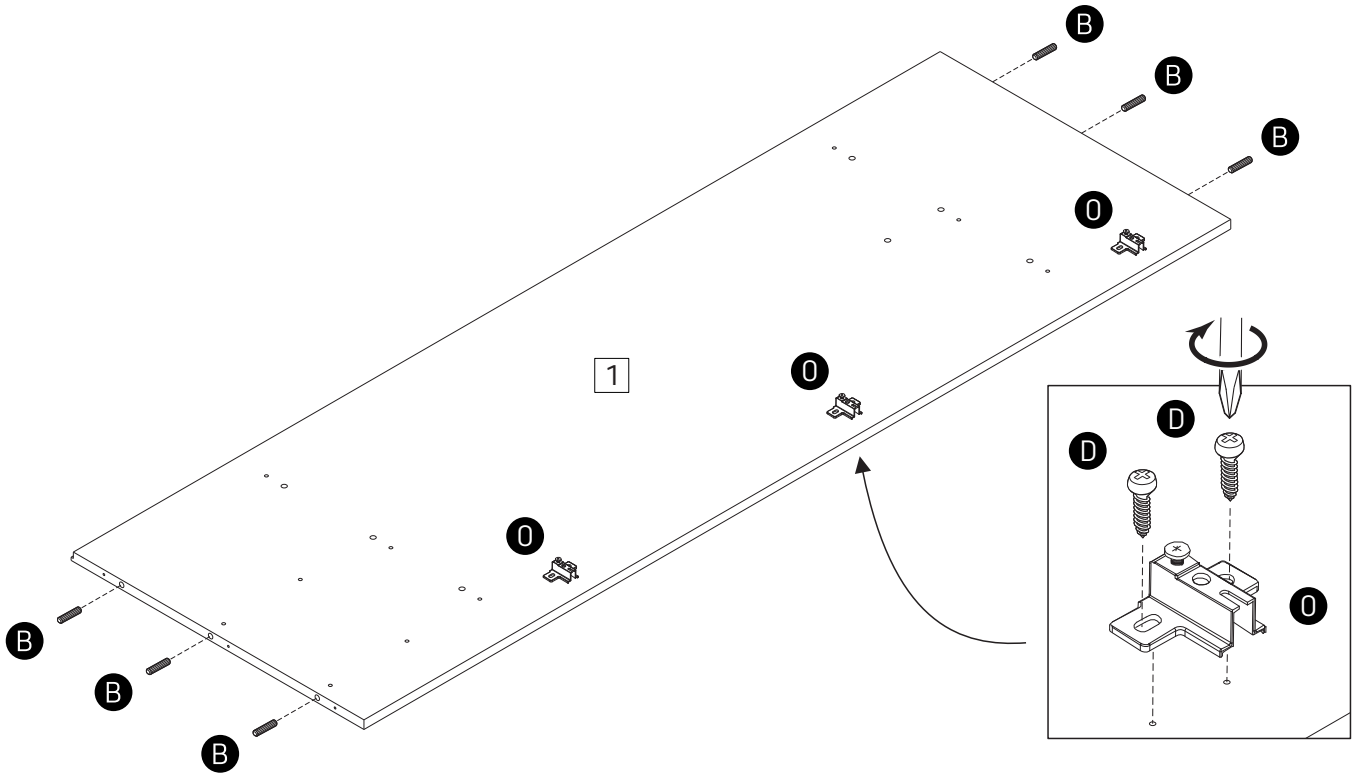

6

D



14mm Screw x 1

J



10mm Screw x 4

P




Hanging rail support x 1

W



Right runner x 2

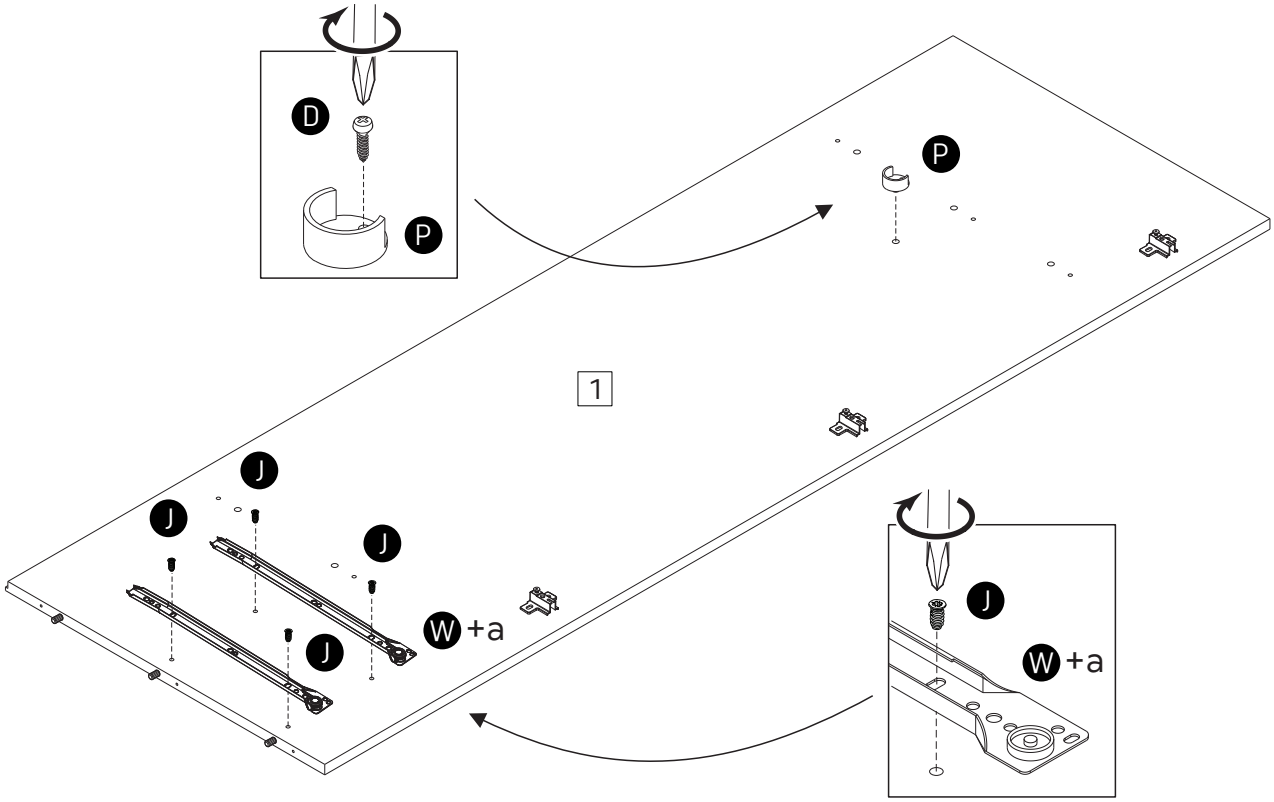


7

L



Metal Dowel x 6

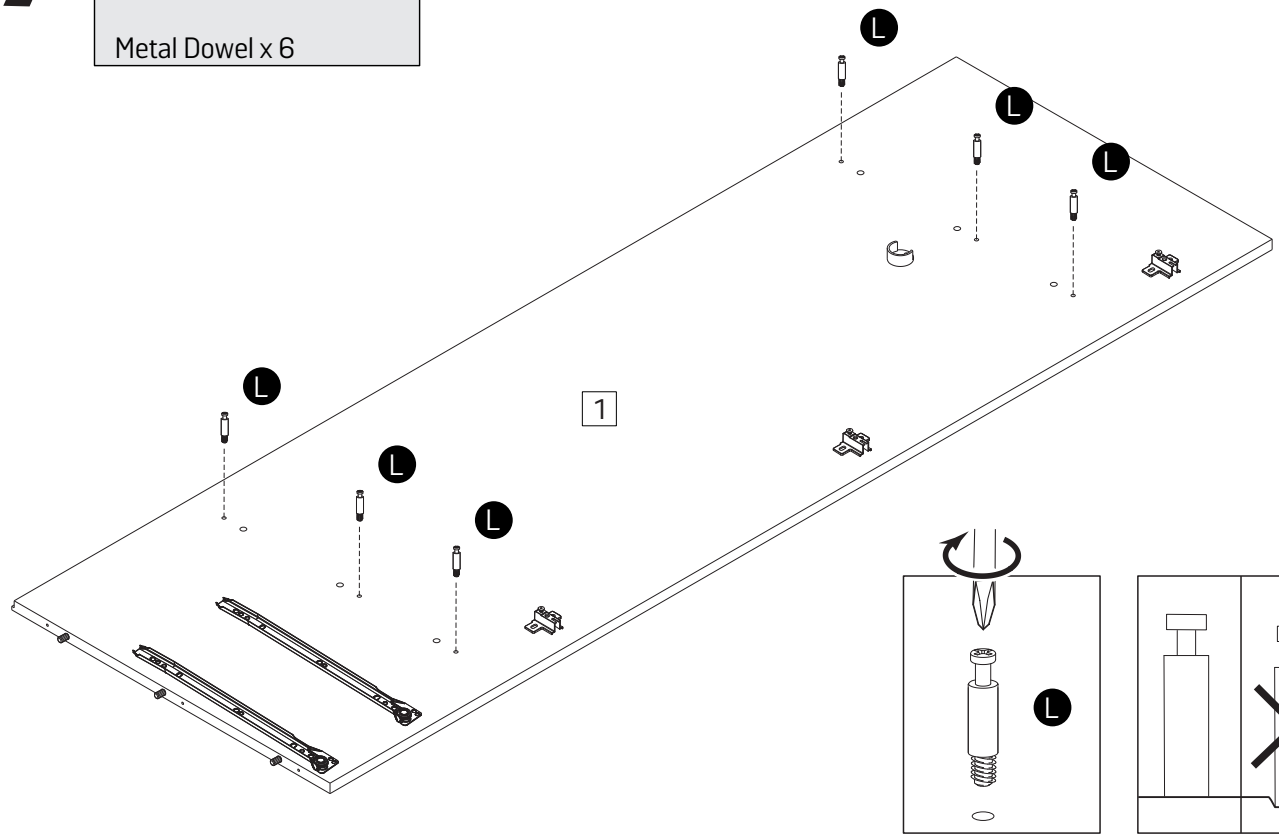

8

B


8x30 Wooden Dowel x 6

D




14mm Screw x 6

O



Hinge support x 3

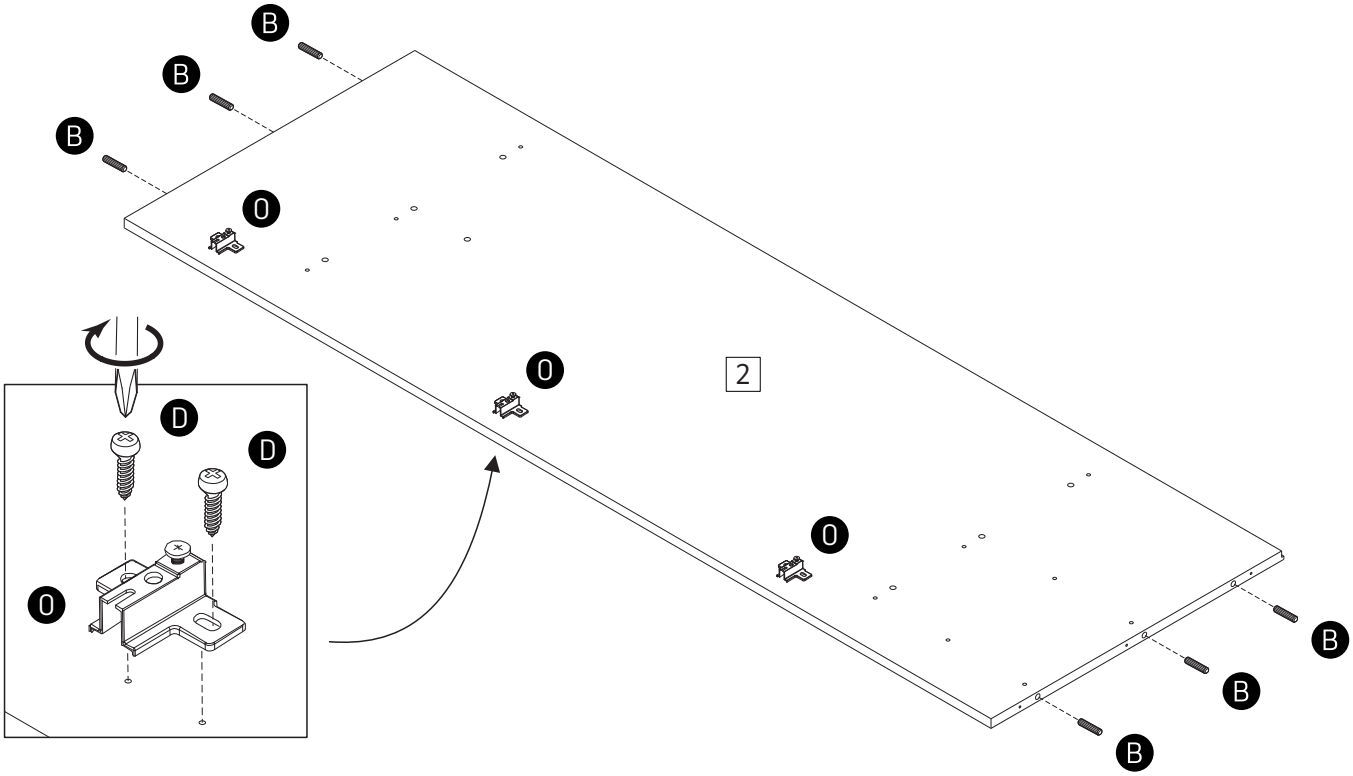

9

D



14mm Screw x 1

J



10mm Screw x 4

P




Hanging rail support x 1

V




Left runner x 2

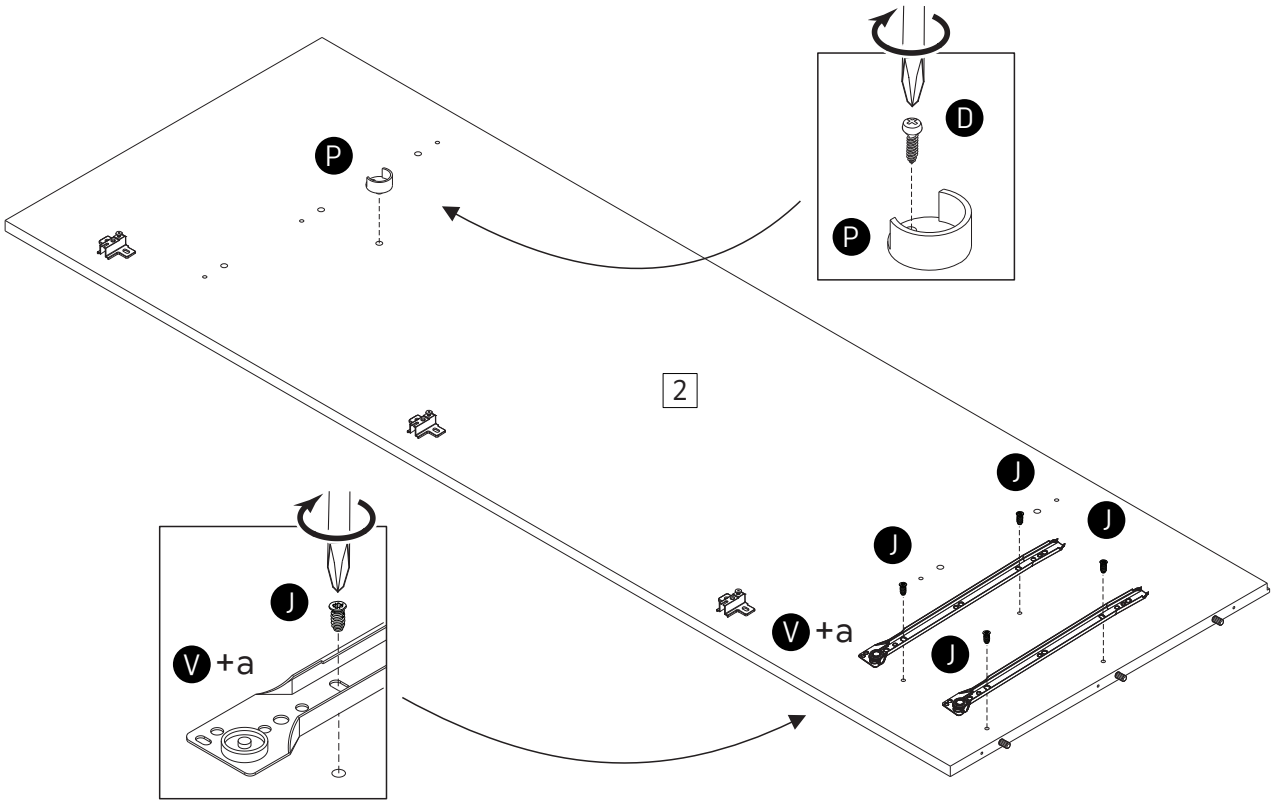


10


L

Metal Dowel x 6

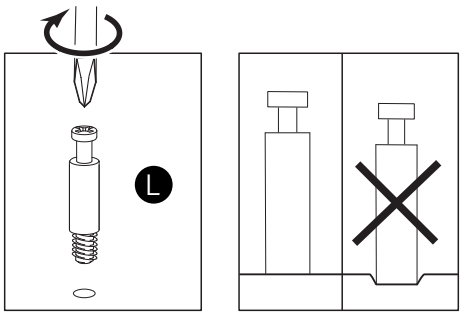


11

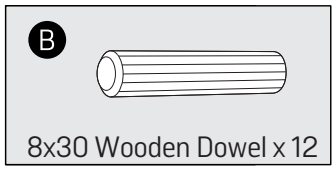


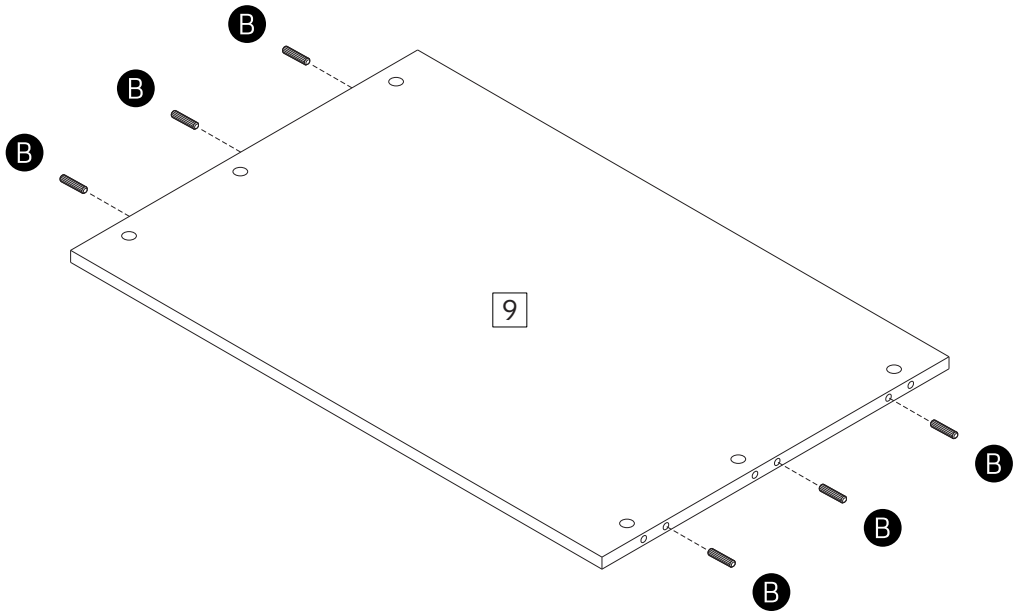

Repeat x2


12

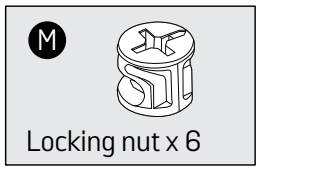

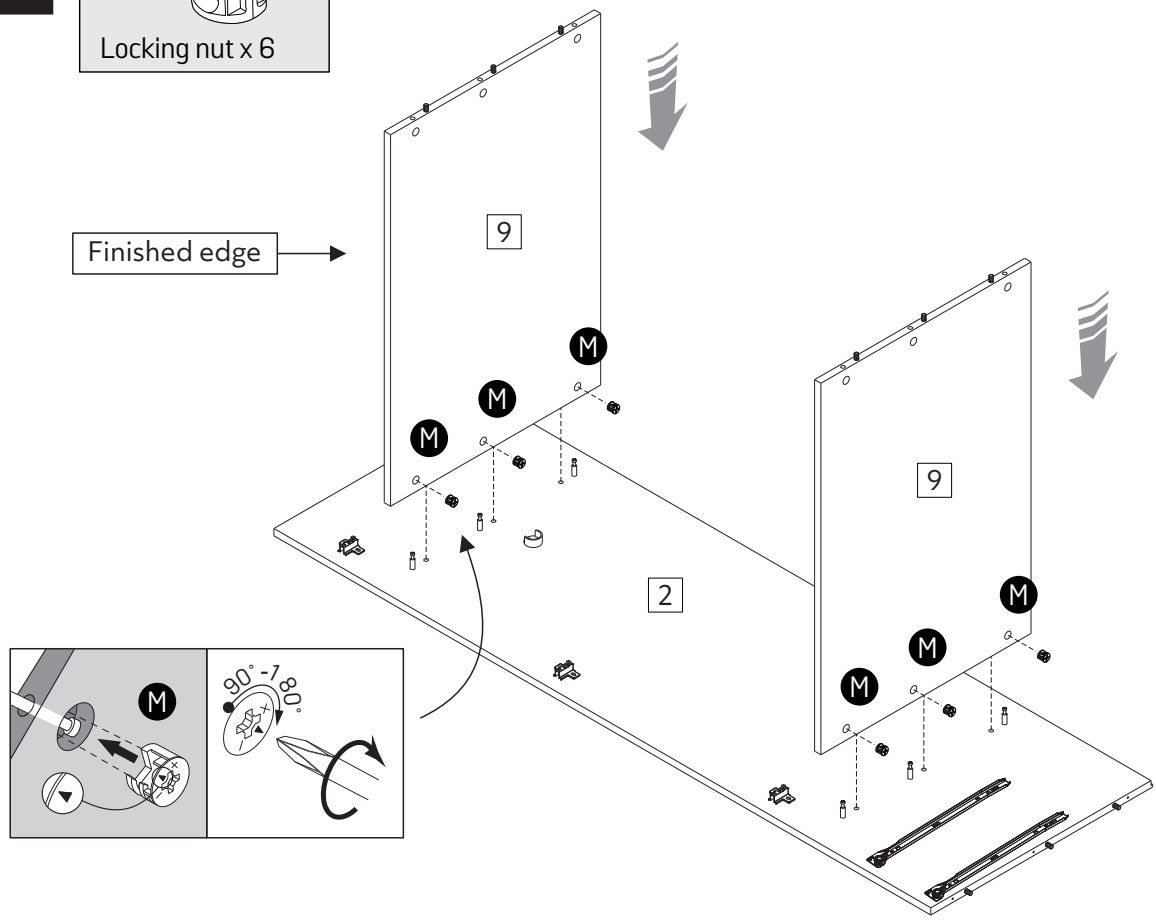



13

M

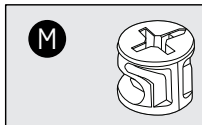

Locking nut x 6

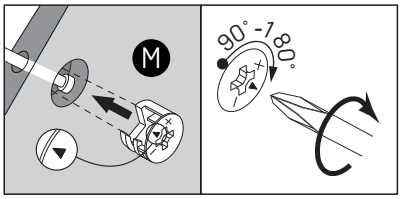


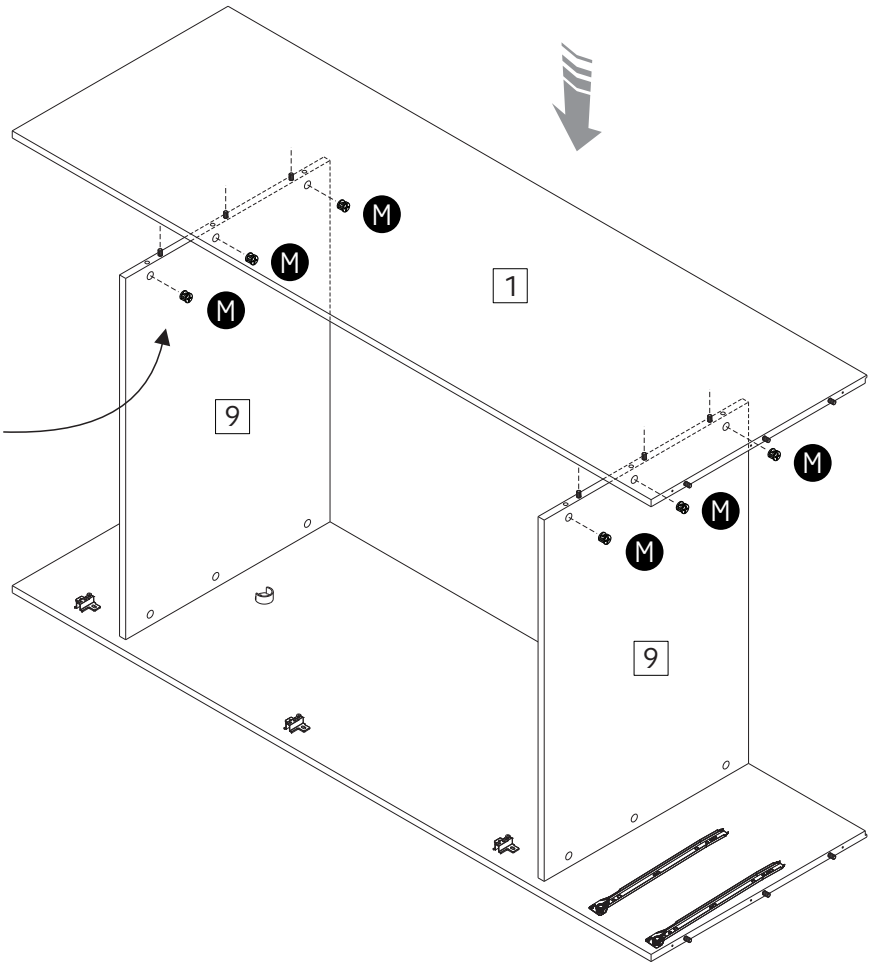

Rotate Product

14


H

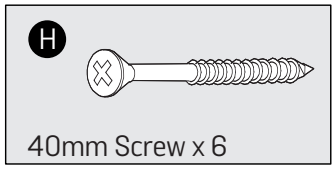


40mm Screw x 6

15

H



40mm Screw x 6

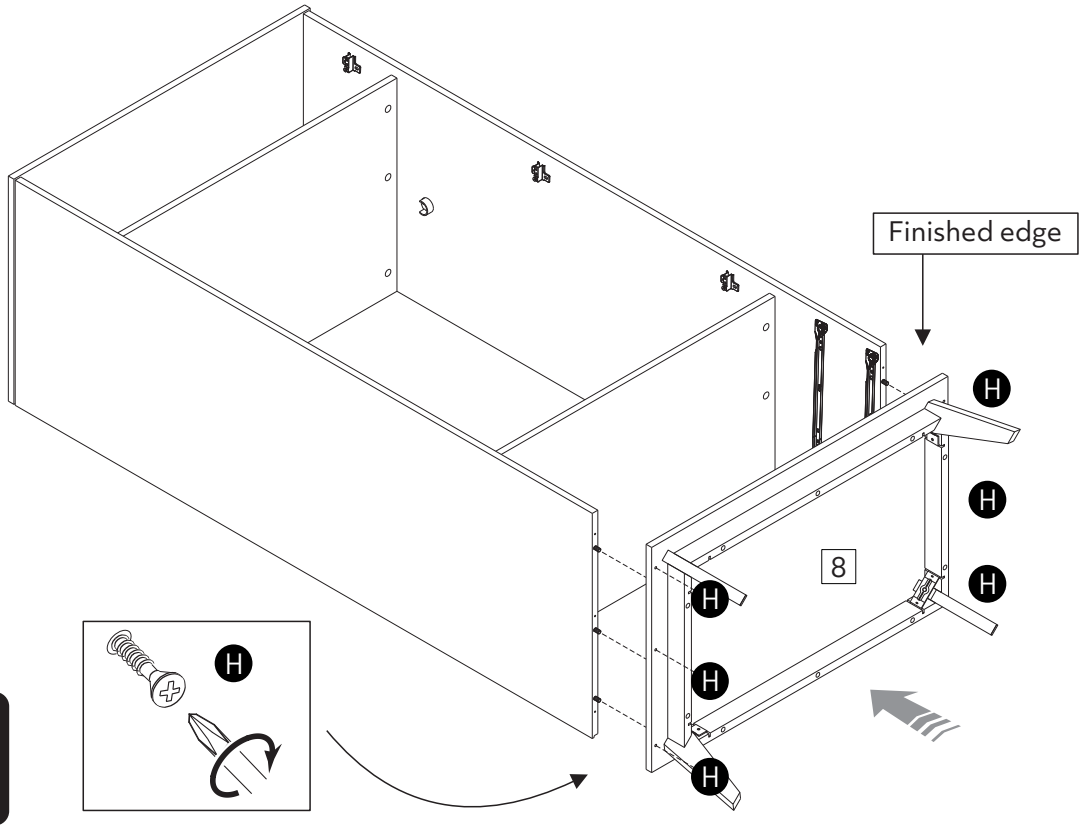






16

T

Nail x 40

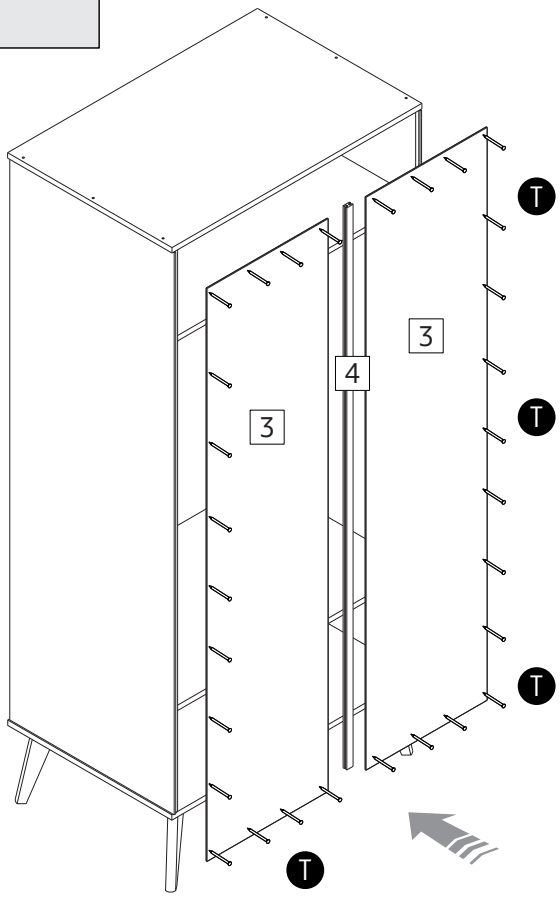

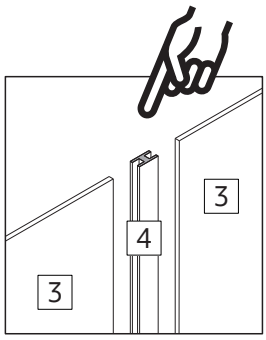

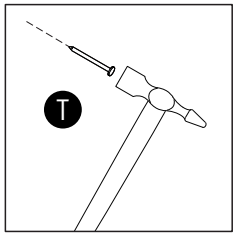





17

X

Door stop x 2

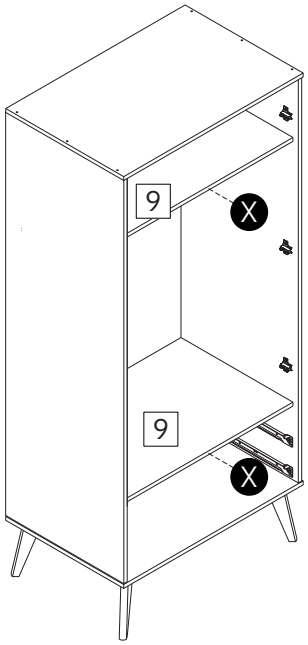

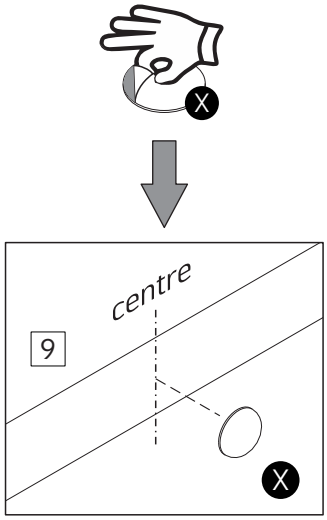

18

R


Washer x 1


S

Wall Strap x 1

WARNING!

Wall plugs not supplied. The correct type of fixing must be used for your wall, seek professional advice if in doubt

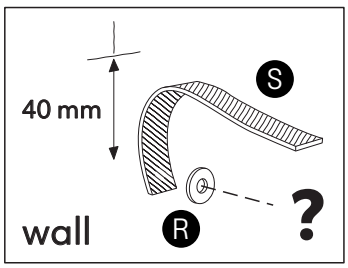

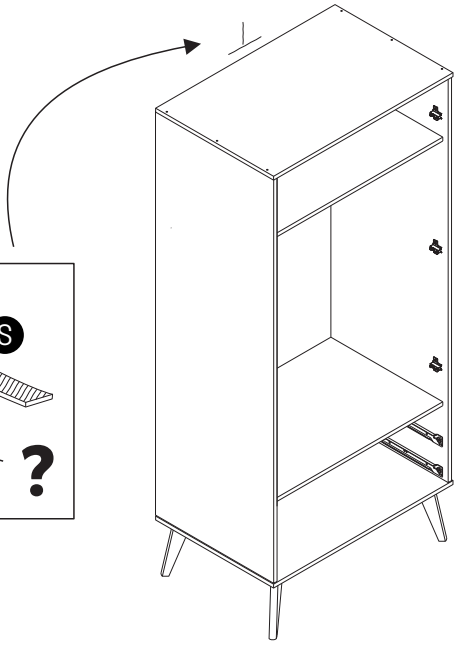


19


D

14mm Screw x 1

R

Washer x 1

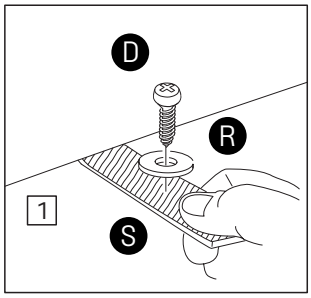


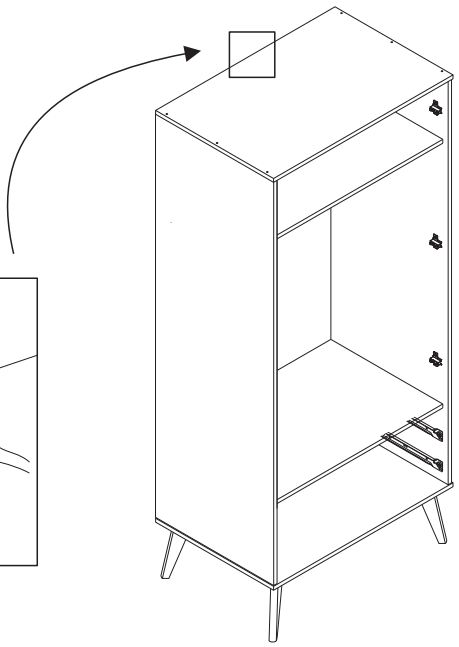

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

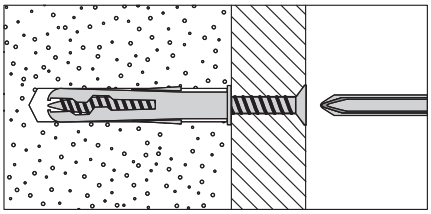


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

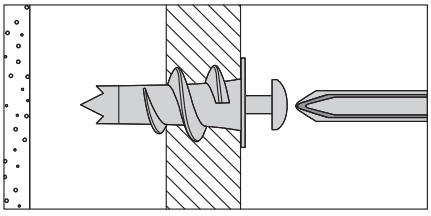


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

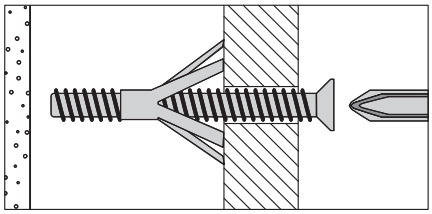


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

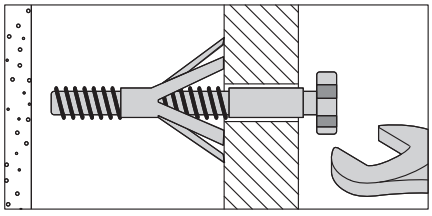


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

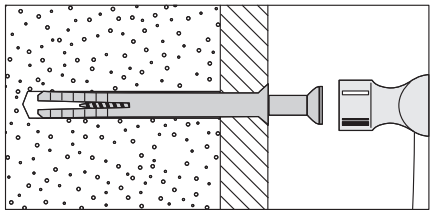

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

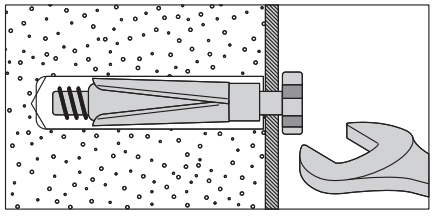


For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.


Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.


Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.


20

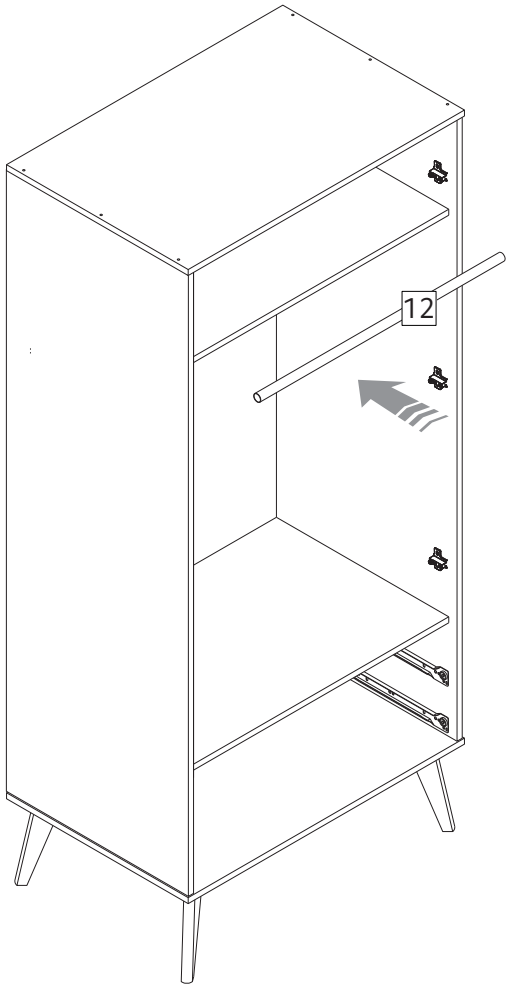


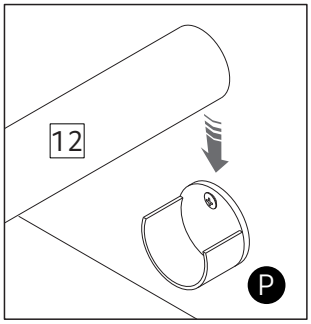

21

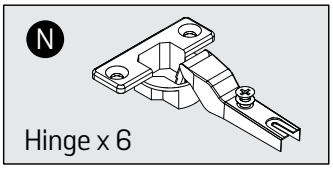


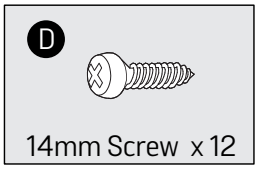


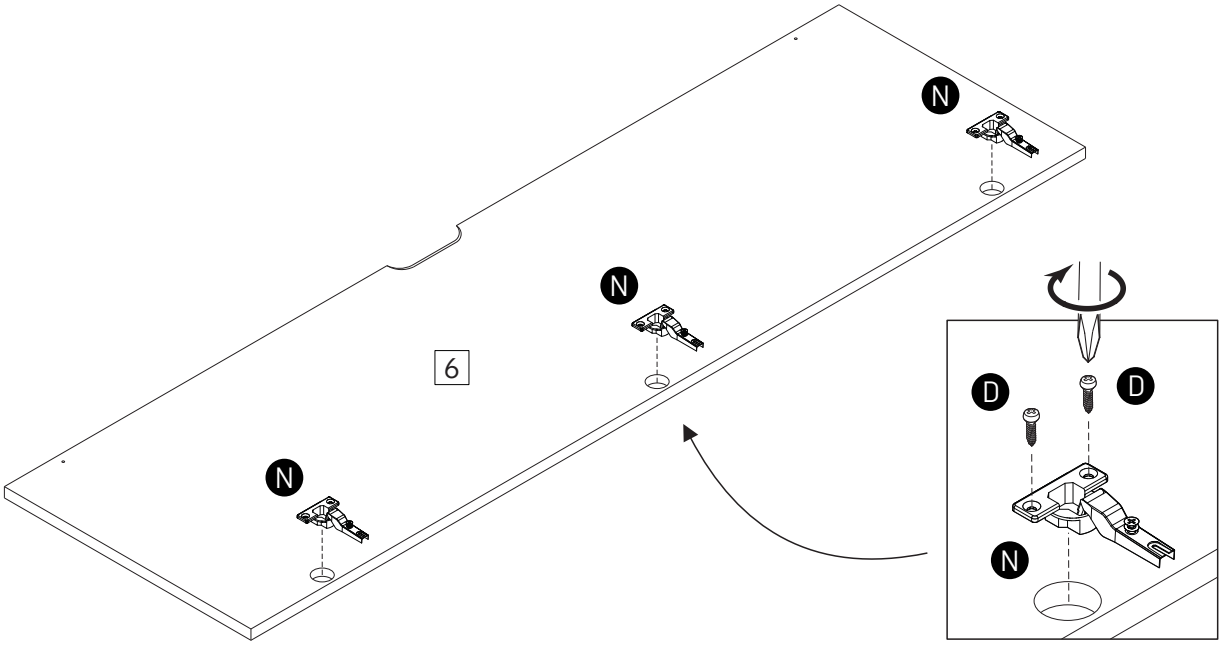


Repeat x2


22

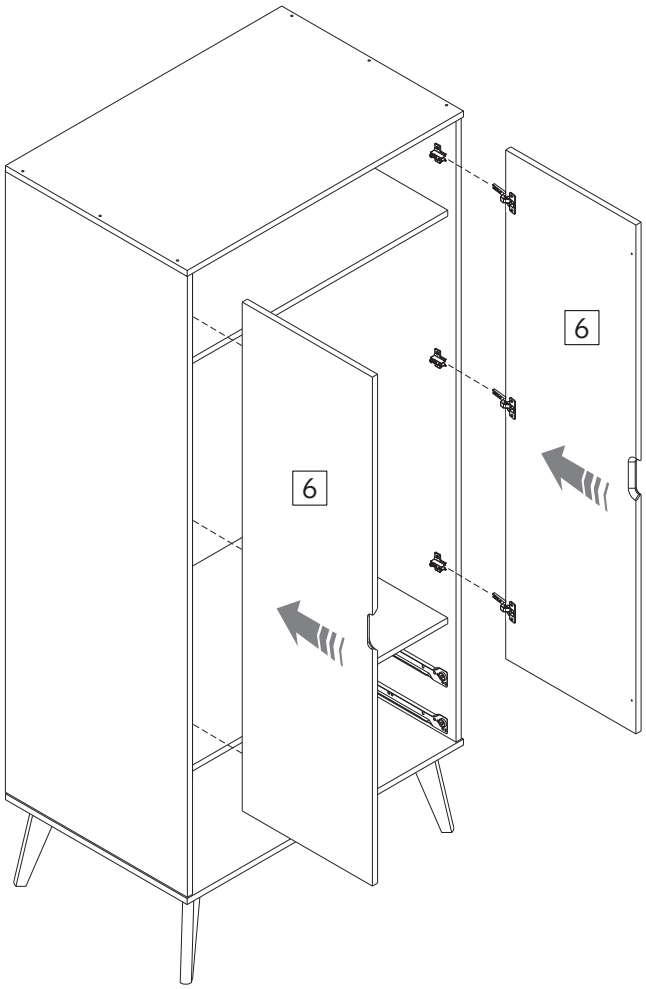


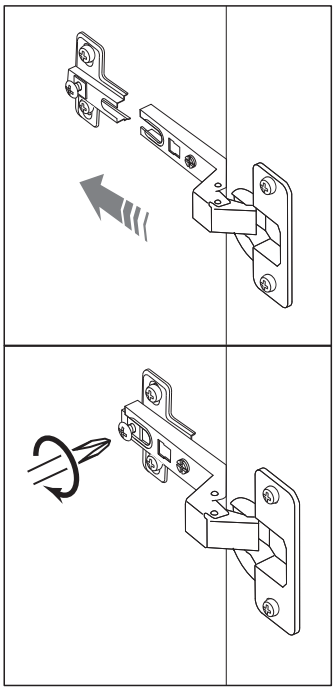


23

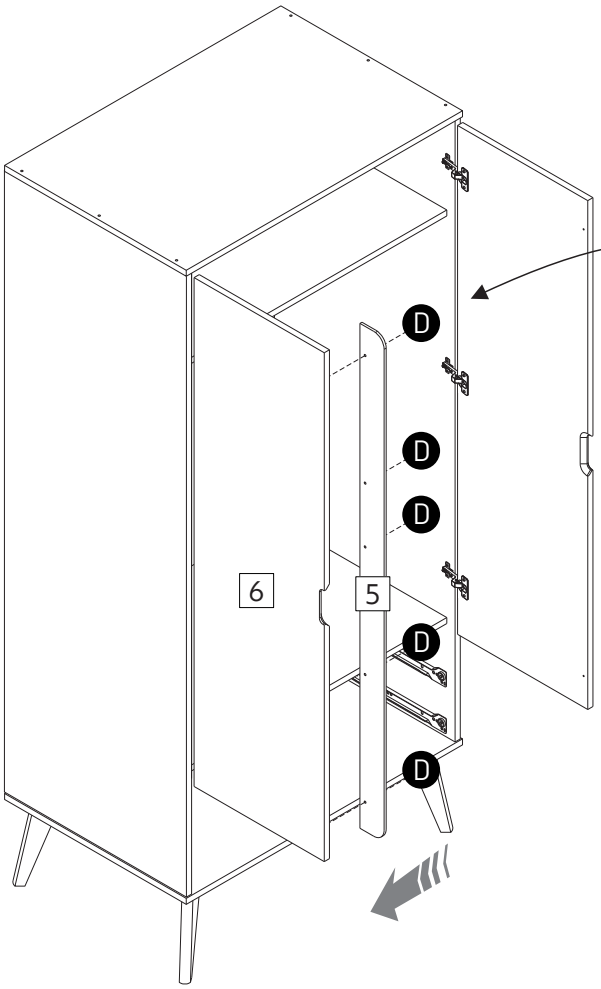

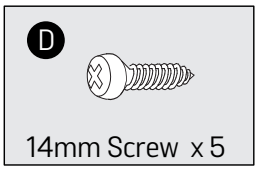

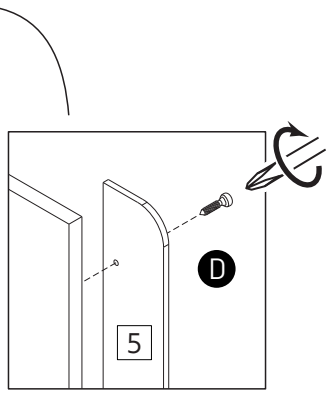

24

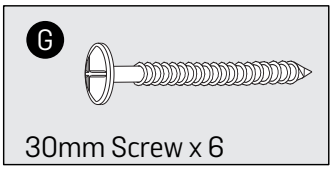


Adjust the Door if needed

a: Height adjustment.
Loosen screws A on Hinge Plates and move Door up or down as required. Retighten screw A.

b: Forward and Back adjustment.
Loosen screw B on Hinge Plate and move Door in or out as required. Retighten screw B.

c: Sideways adjustment.
To move Door 'out' loosen screw C.
To move Door 'in' tighten screw C.

d: After adjust the Door, fix hinge using screws G .

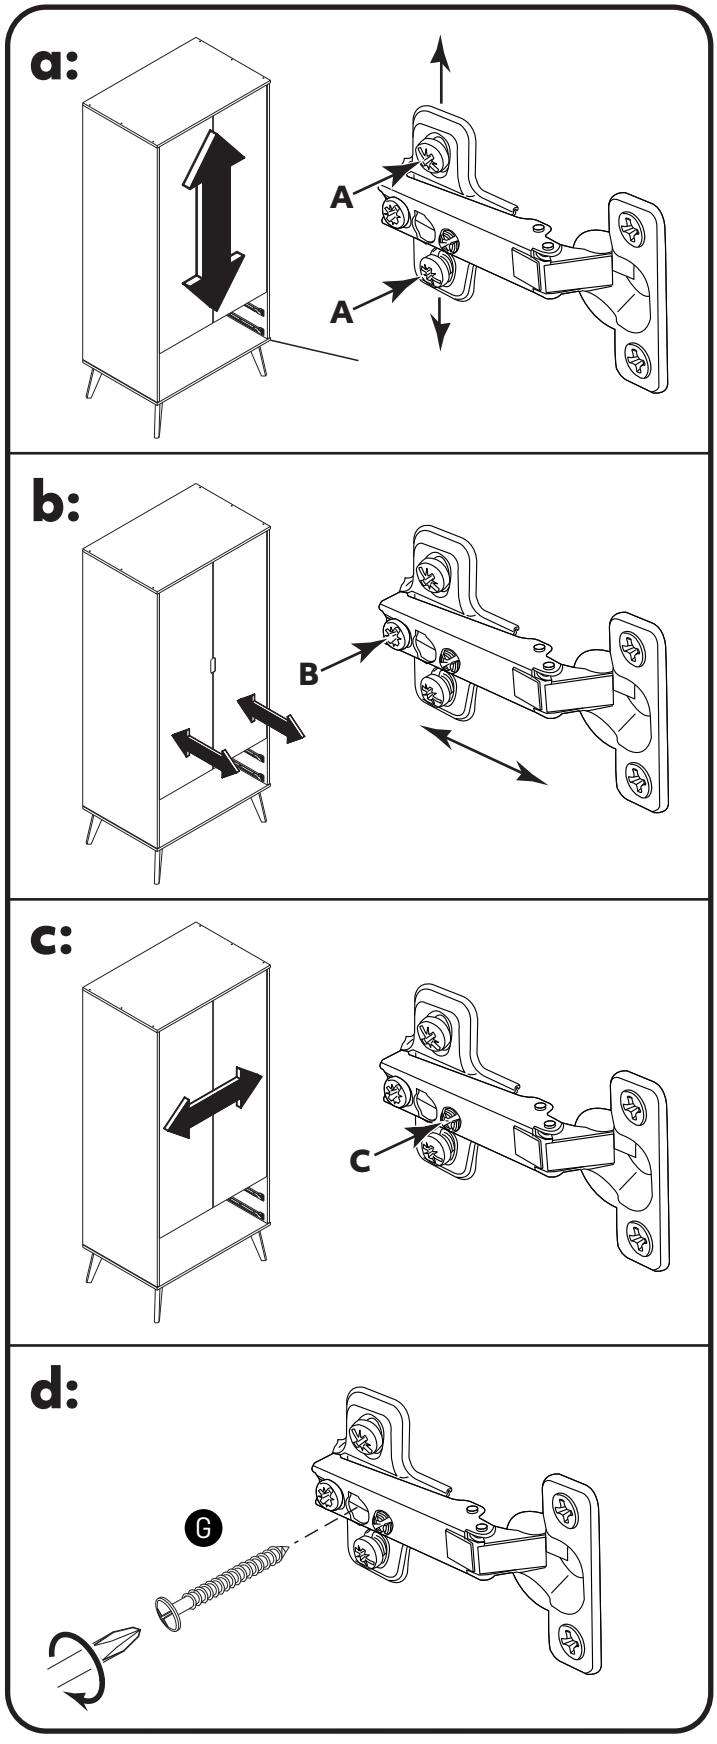


25

A



8x20 Small wooden Dowel x 4


Important!
Do not press wooden dowel too much!

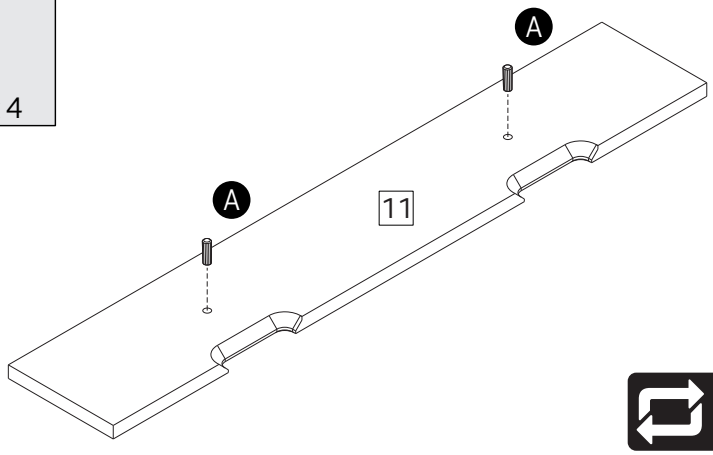


Repeat x2


26

E




20mm Screw x 8

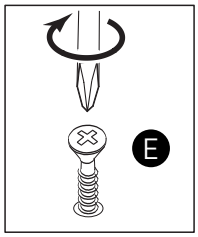

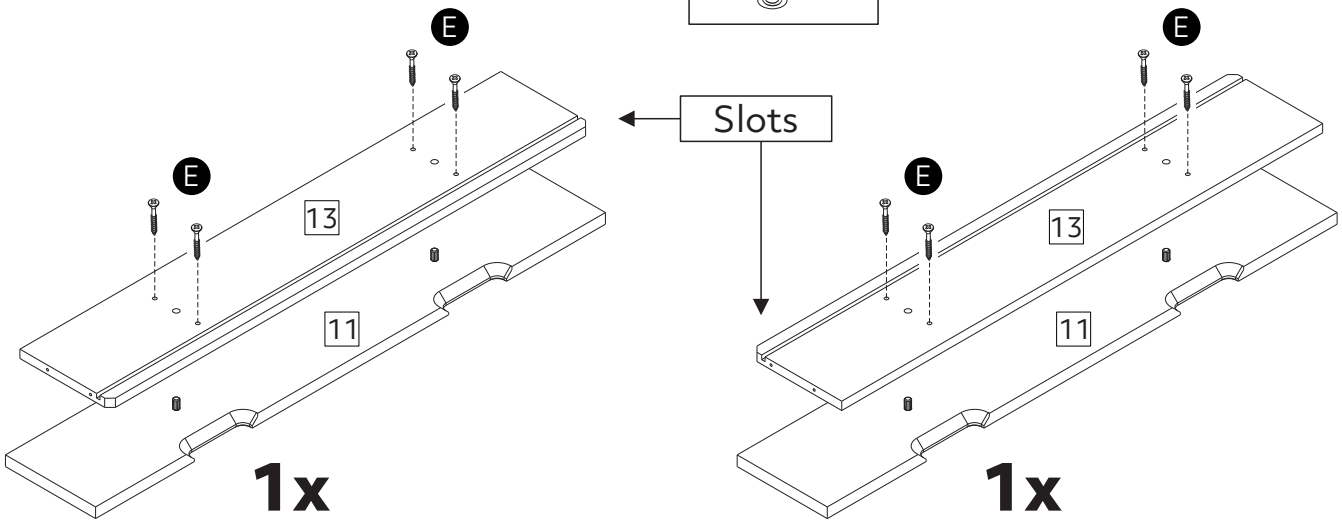


27


F



35mm Screw x 8

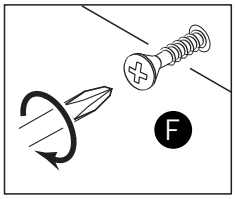

28

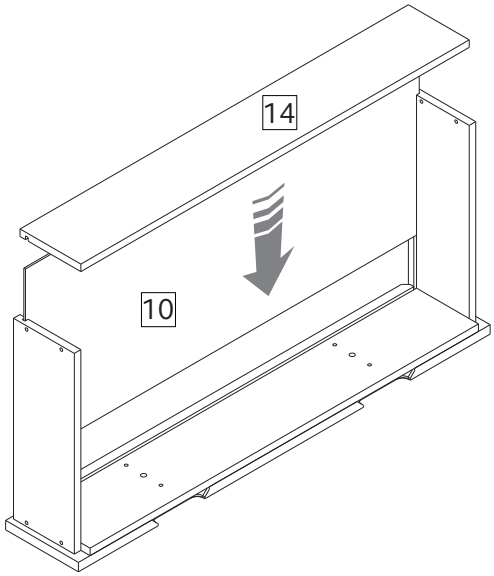



Repeat x2

29

F

35mm Screw x 8

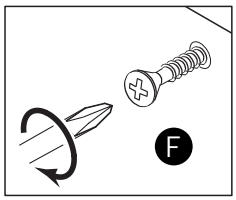

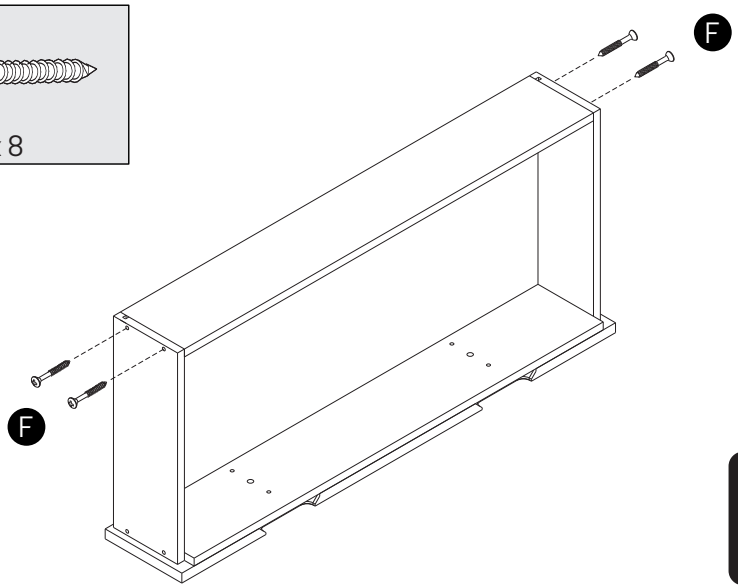

Repeat x2

Turn Product


30

C




12mm Screw x 8

V




Left runner x 2

W





Right runner x 2

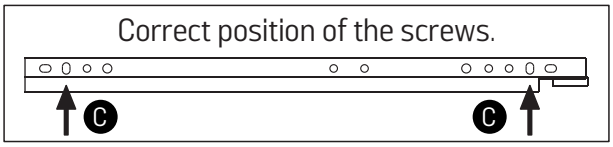

Repeat x2

31

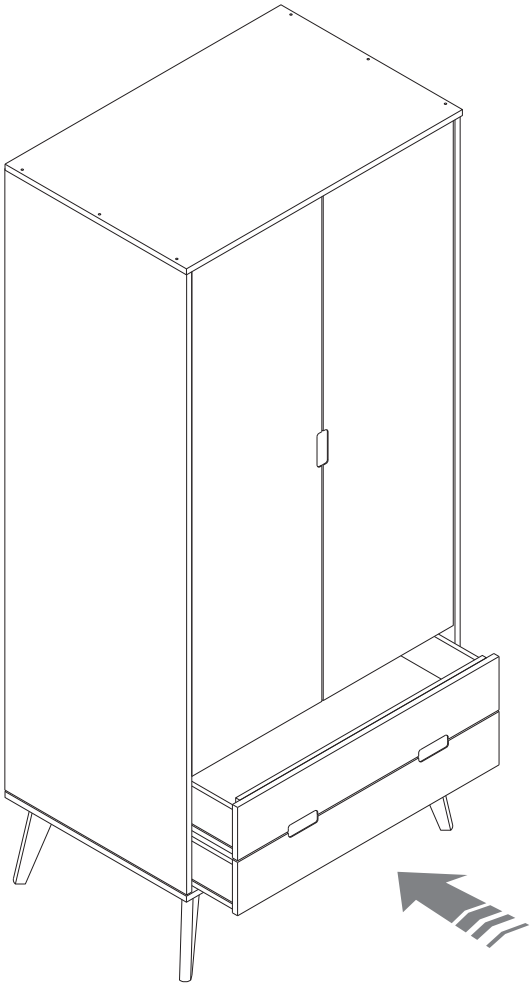


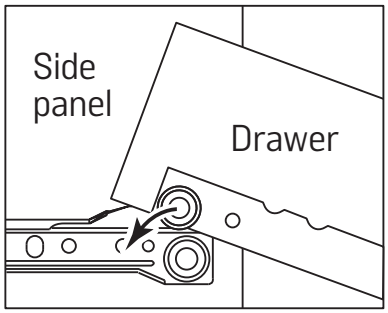


32

C

12mm Screw x 4

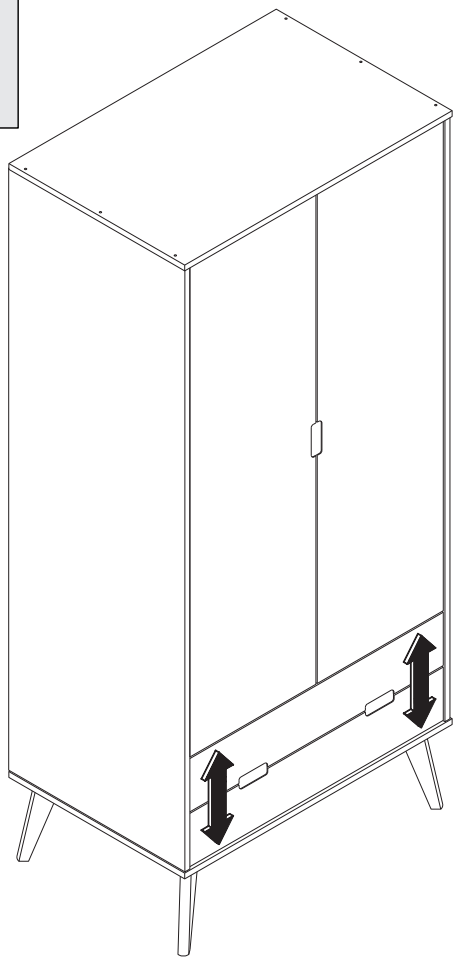

a:

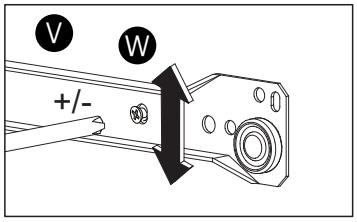

b:

