Brisbane

582/2575 582/2582 582/2568 582/2551



IMPORTANT - Retain these instructions for future reference

Spare Parts

Visit: www.argos-support.co.uk

Email: Help@ClickSpares.co.uk

Call: 0370 112 1928

Customer Support

Call: 0345 640 2020

Issue 1 - 16/05/24

Safety

Important - Please read these instructions fully before starting assembly

• Warning: This unit weighs approximately 156kgs. Please lift with care.

• Assembly to be carried out by a competent adult only.

• During assembly children should be kept away from the product due to possible risk of injury.


• Installation shall only be carried out exactly according to the manufacturer's instructions - otherwise a safety risk can occur if incorrectly installed.


• Do not use this item if any components are missing or damaged.

• Regularly check all fastenings to ensure they are properly tightened.

• WARNING: To prevent possible overbalancing this unit must be secured to a wall using the 3 overbalance protector kits supplied.

• A unit that is allowed to topple can cause serious or fatal injury. In addition to wall fixing the unit, place heavy items on the lower shelves, do not put any heavy objects on top of the unit and never allow children to climb or hang on drawers, doors or shelves.

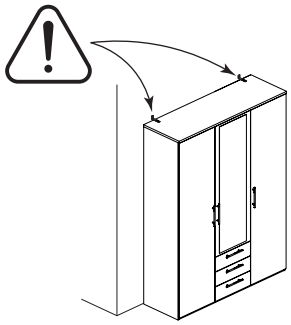

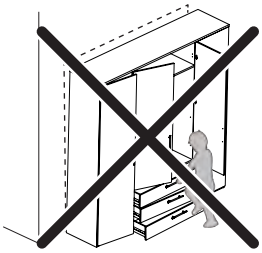

• Refer to guide after section 25 for wall fixing information.

Care Advice

• Check you have all the components and tools listed on relevant pages.

• Remove all fittings from the specified plastic bag and separate them into their groups.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).

• Only clean with a damp cloth.


• Assembly videos are available throughout these instructions by scanning in the QR codes.




• We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

• Please explore a sustainable (re-selling/donation to charity) or a responsible (local tip) way of disposal at the end of use of this product.


Cabinet Panels

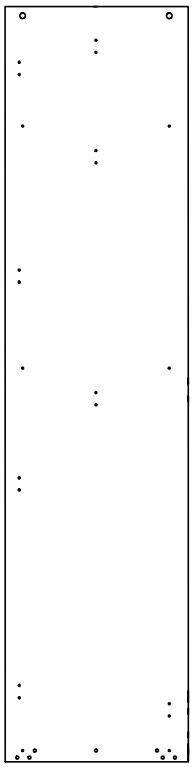


1 197.8 x 48cm

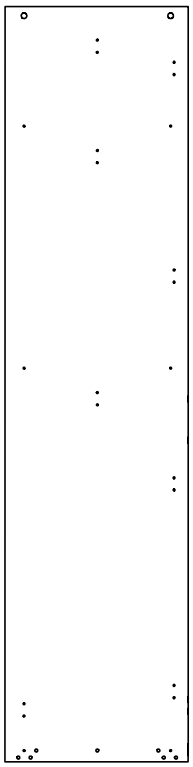


2 197.8 x 48cm

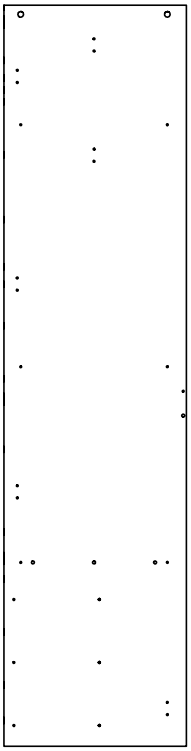


3 194.1 x 47.8cm

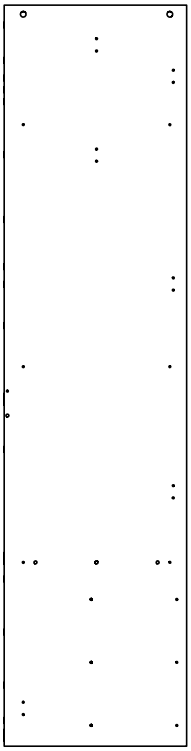


4 194.1 x 47.8cm

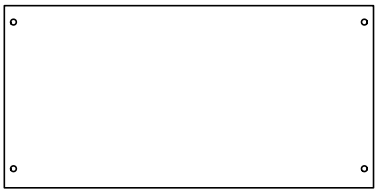

5 96.7 x 47.7cm




6 96.7 x 47.7cm

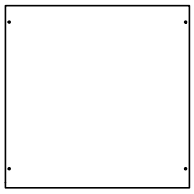


7 48.2 x 47.7cm x 2



8 199.5 x 49.7cm



9 96.7 x 12cm

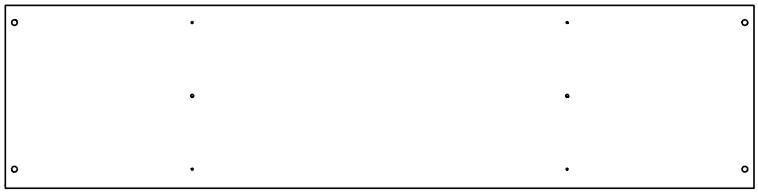


10 196.1 x 47.9cm

Cabinet & Drawer Panels

Note: the internal drawer panels are grey




11 196.1 x 9cm x 2

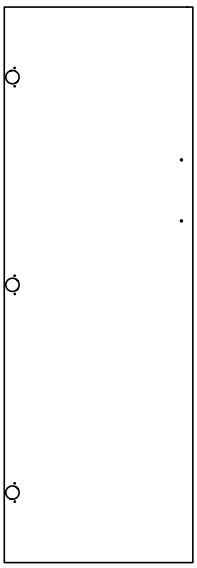


12 145.5 x 49.4cm


Warning:
Glass! Handle with care

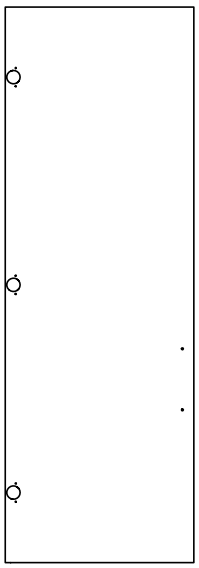


13 145.5 x 49.4cm

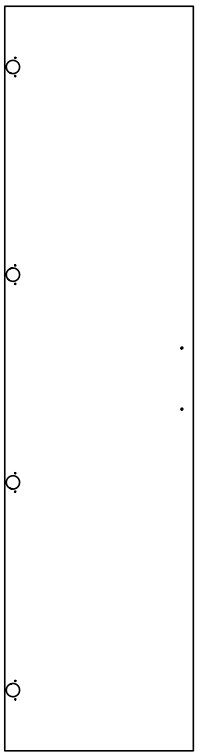


14 195 x 49.4cm x 2




15 197.4 x 50.1cm x 2

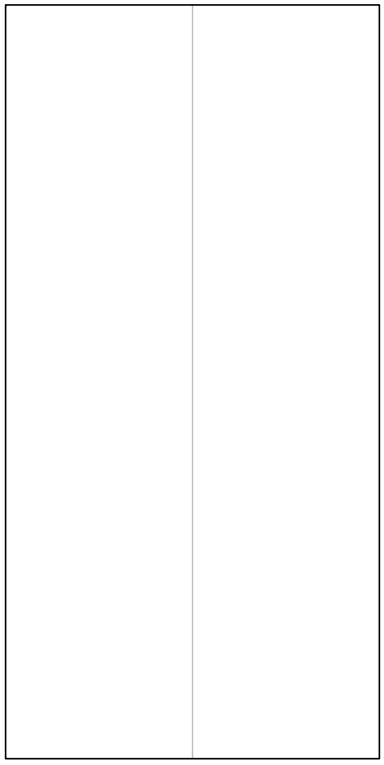


16 197.4 x 97.9cm




17 99.1 x 16.2cm x 3



18 35 x 13cm x 3



19 35 x 13cm x 3



20 93.45 x 13cm x 3




21 94.55 x 34.7cm x 3

Fittings

Use these drawings to
correctly identify the fittings


Bag 1




A x 18




B x 18



C x 36




D x 4




E x 8



F x 12

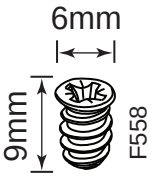


G x 20

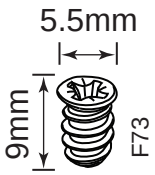


H x 12



I x 28




J x 8



K x 52




L x 12



M x 12




N x 14

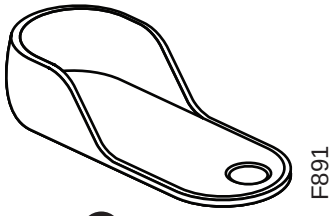


O x 10

Bag 2



A x 6




E x 6



F x 12



P x 6




Q x 6




R x 12

Tools





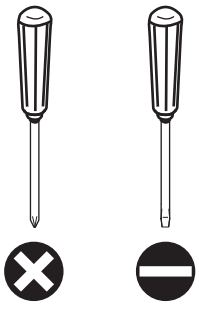










Only used for
drilling walls

Fittings

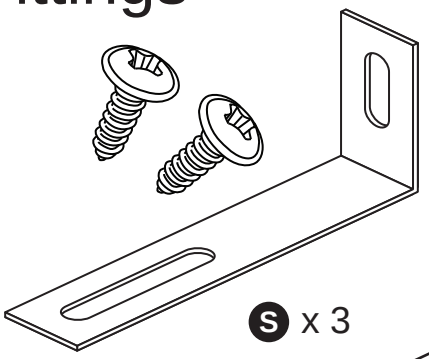

F474


S x 3

F450

T x 6


F420

U x 6

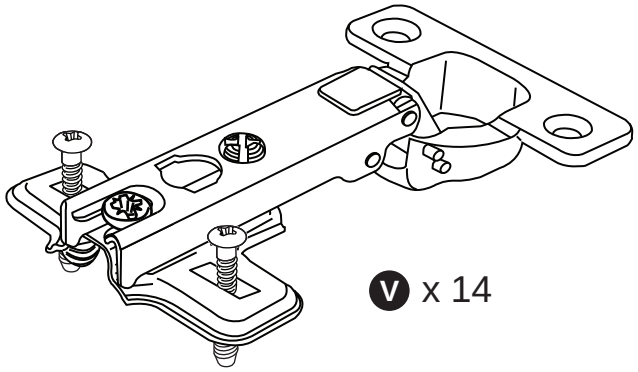


F655

V x 14

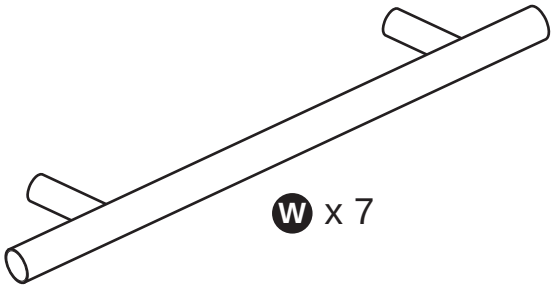

EK0071001


W x 7

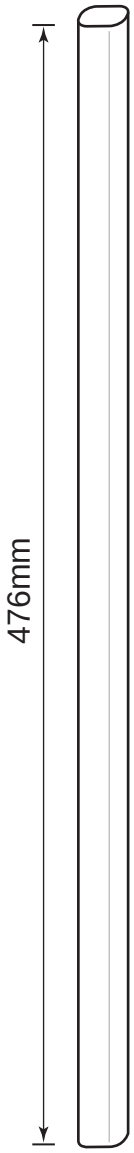

476mm

FHR30X476

X x 4

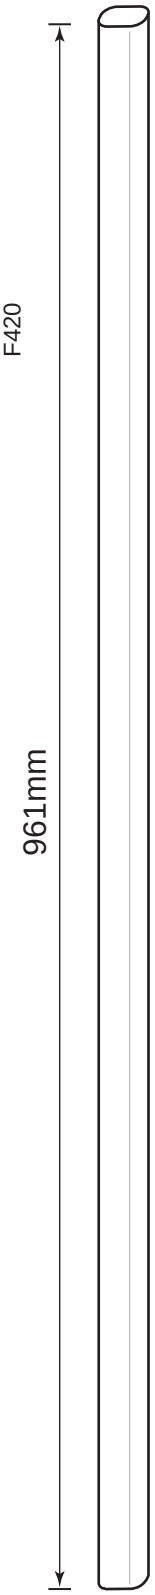



961mm


FHR30X961

Y x 1

Tools





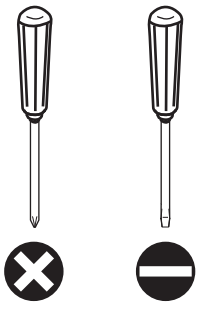










Only used for drilling walls


1


Fitting Ball Bearing Runners


www.youtube.com/watch?v=yG4xtiJJeSg

Bag 1

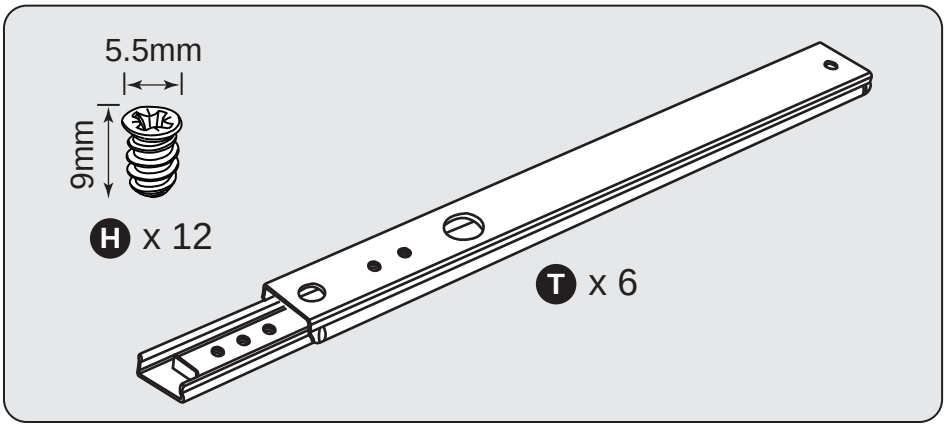


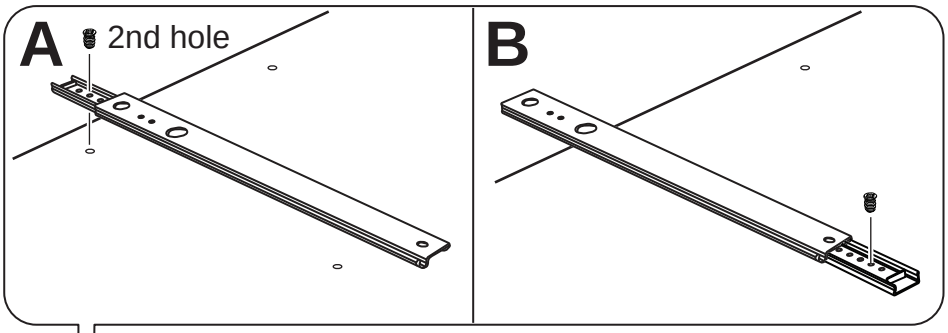


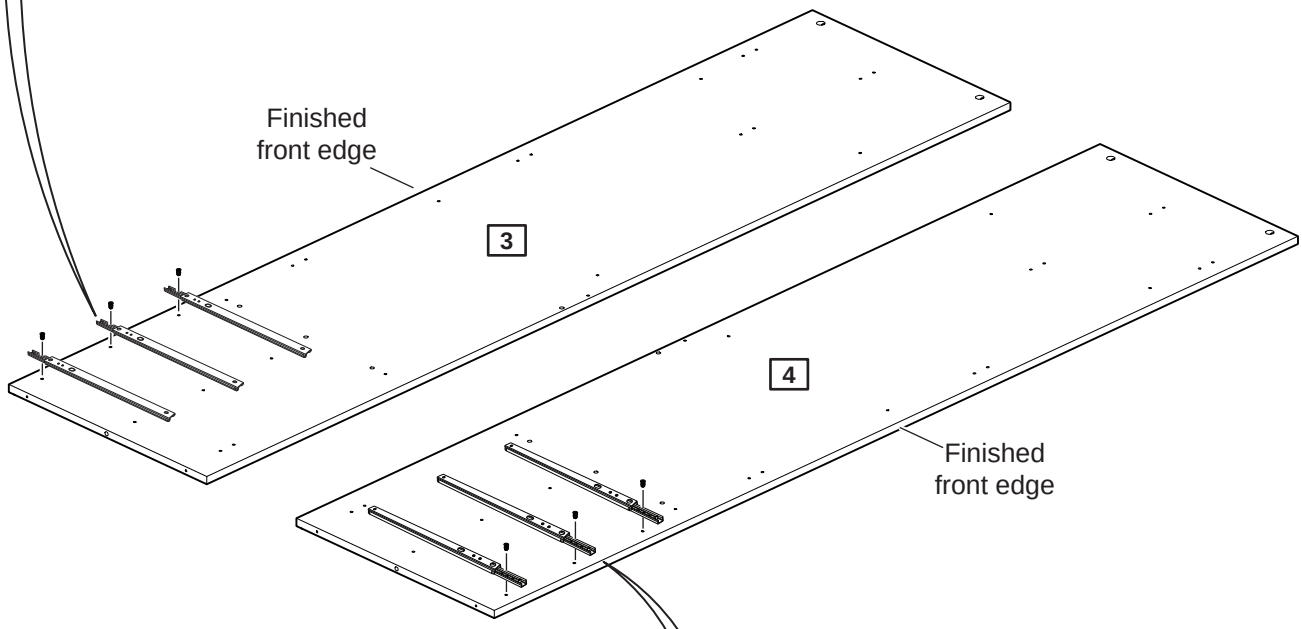

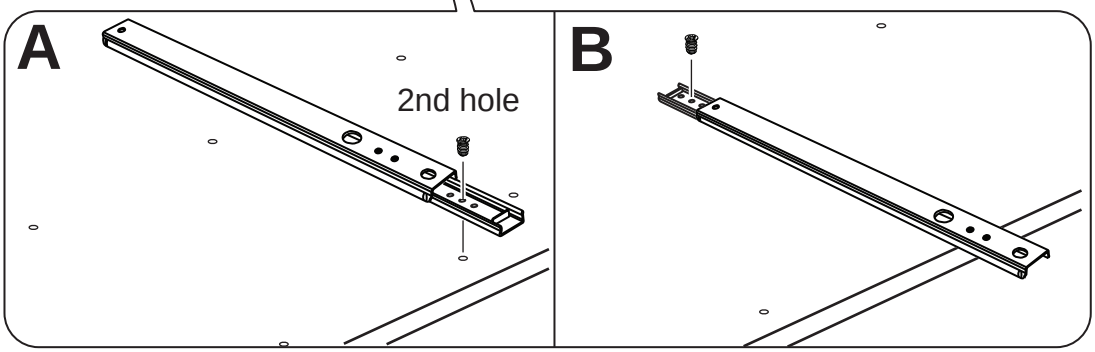



2

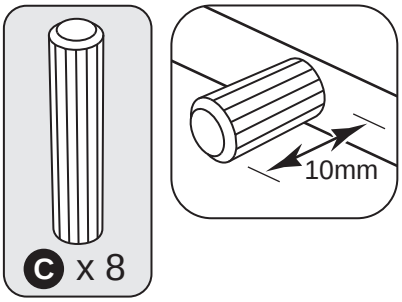

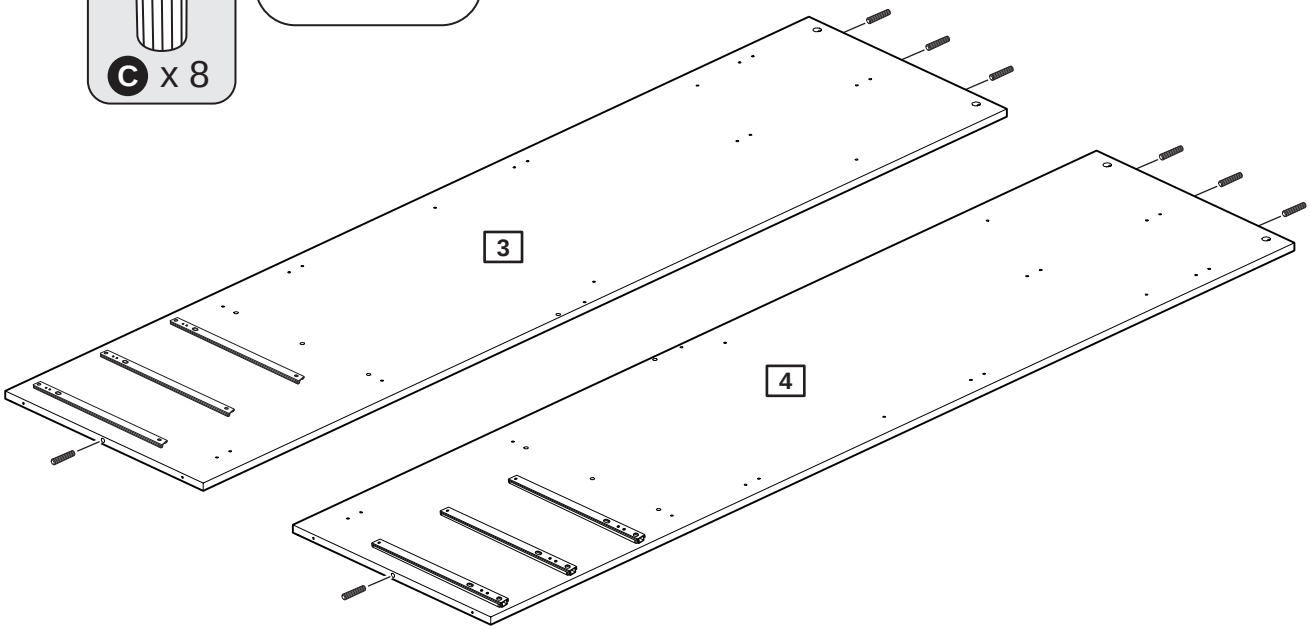



3

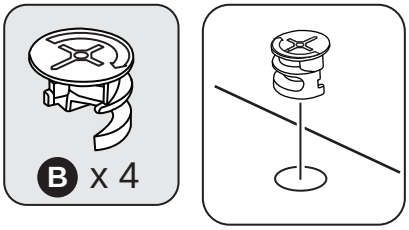

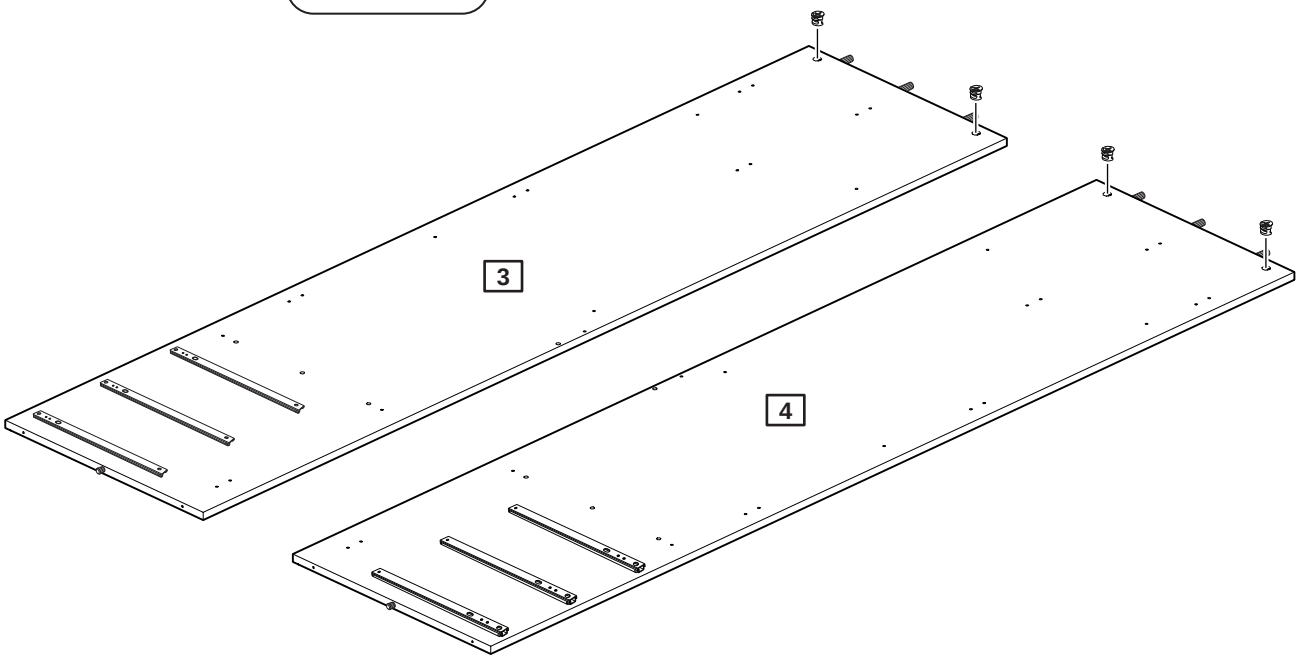



4

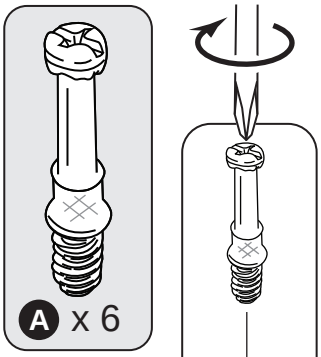

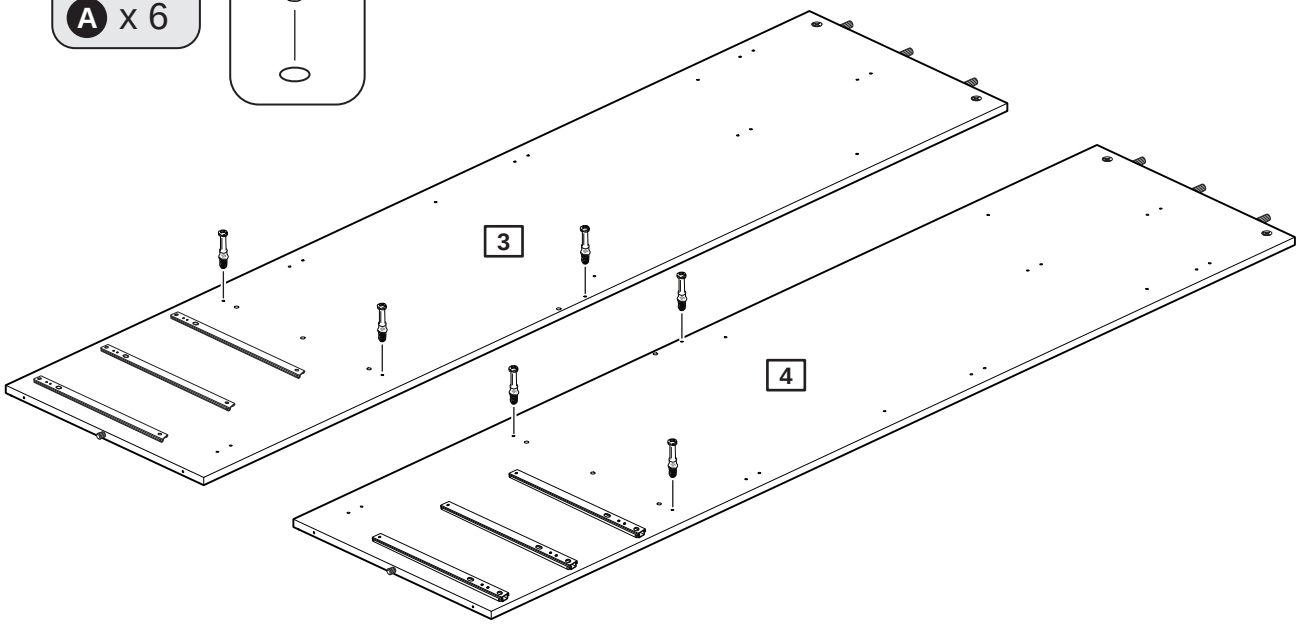


5

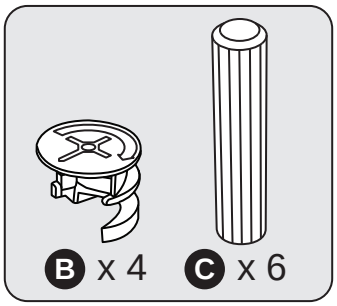


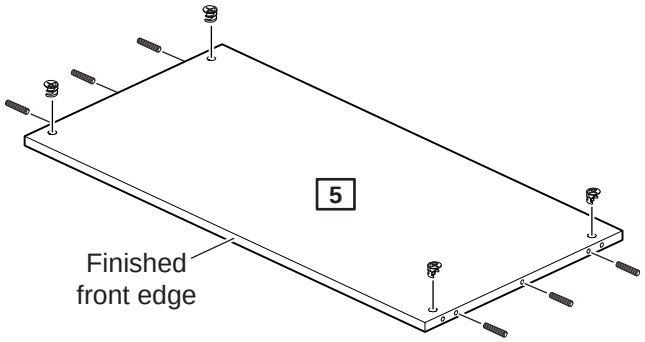


6

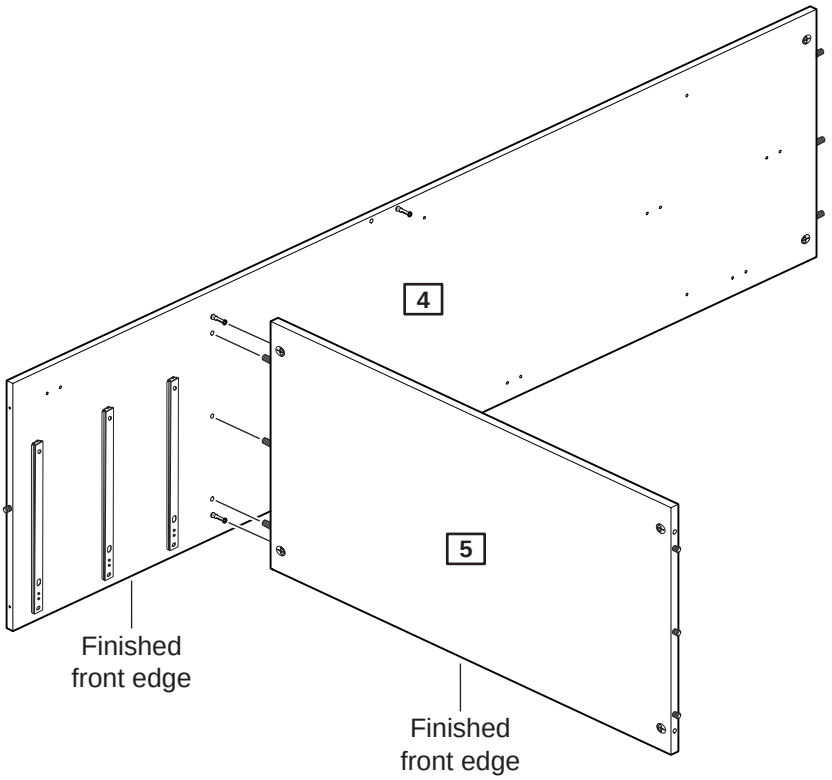


7

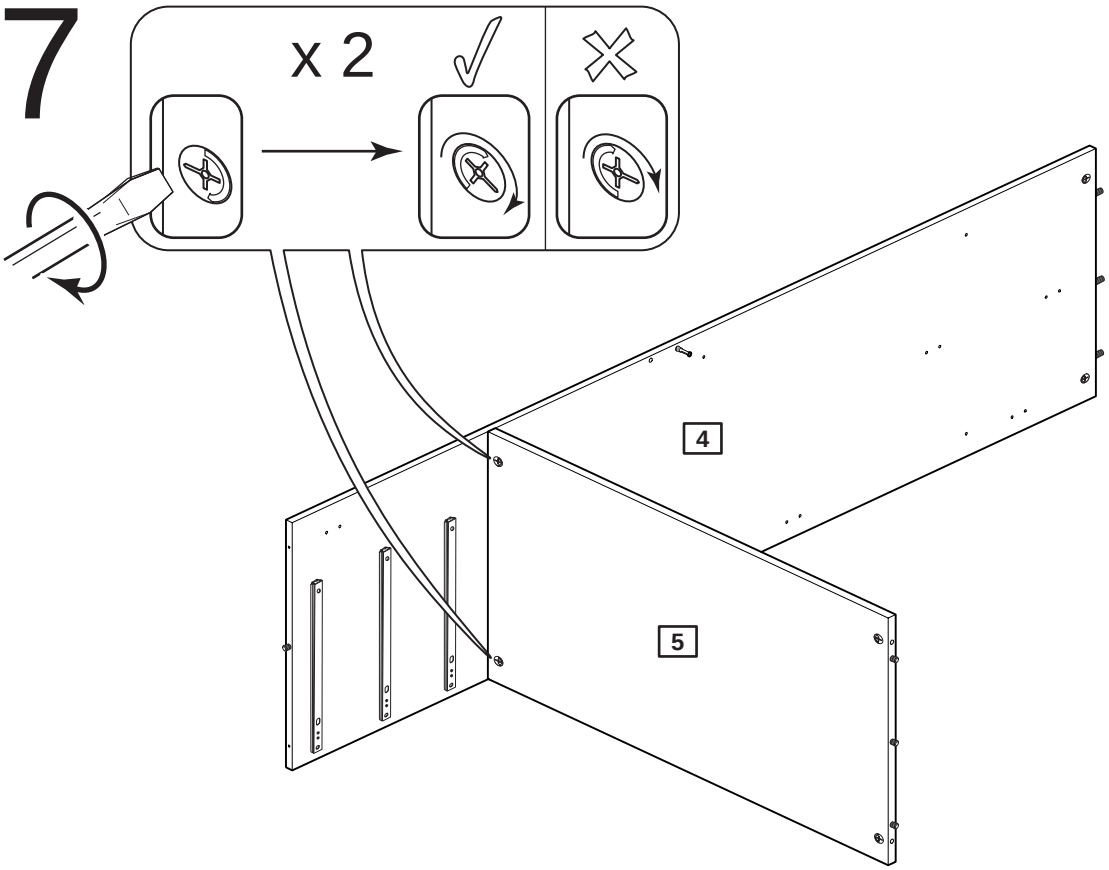



8

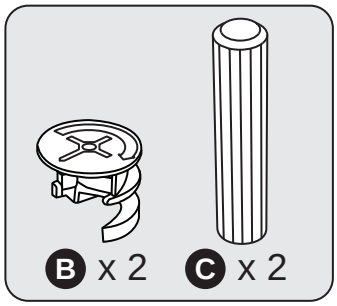

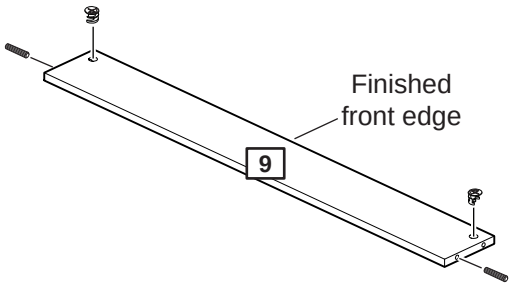


9

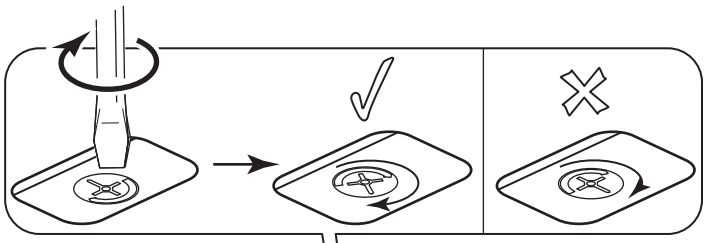

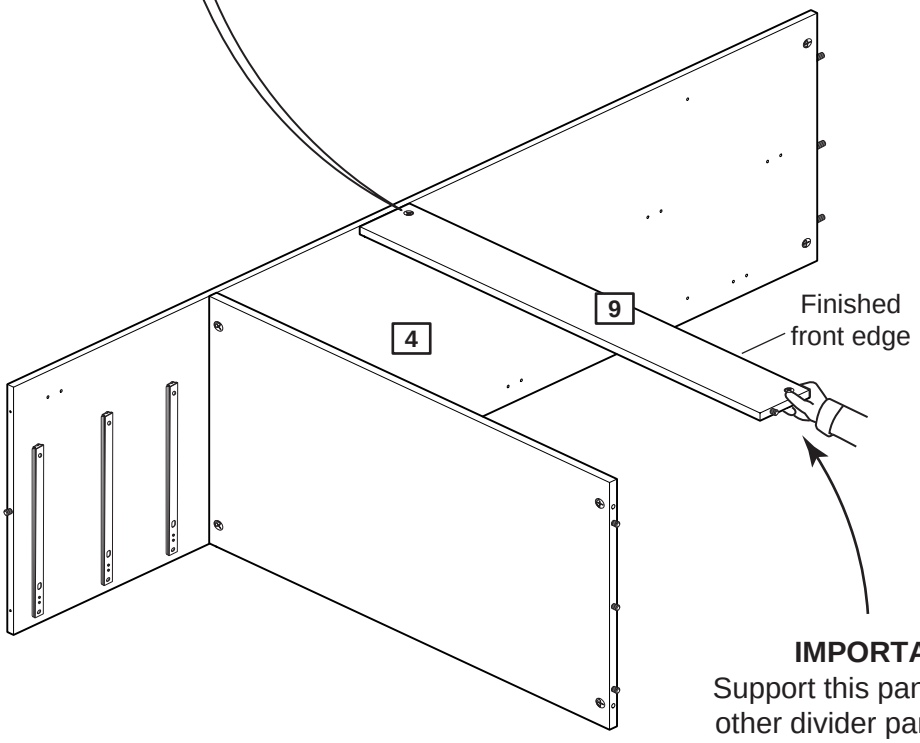



IMPORTANT:
Support this panel until the other divider panel is fitted in the next step

10

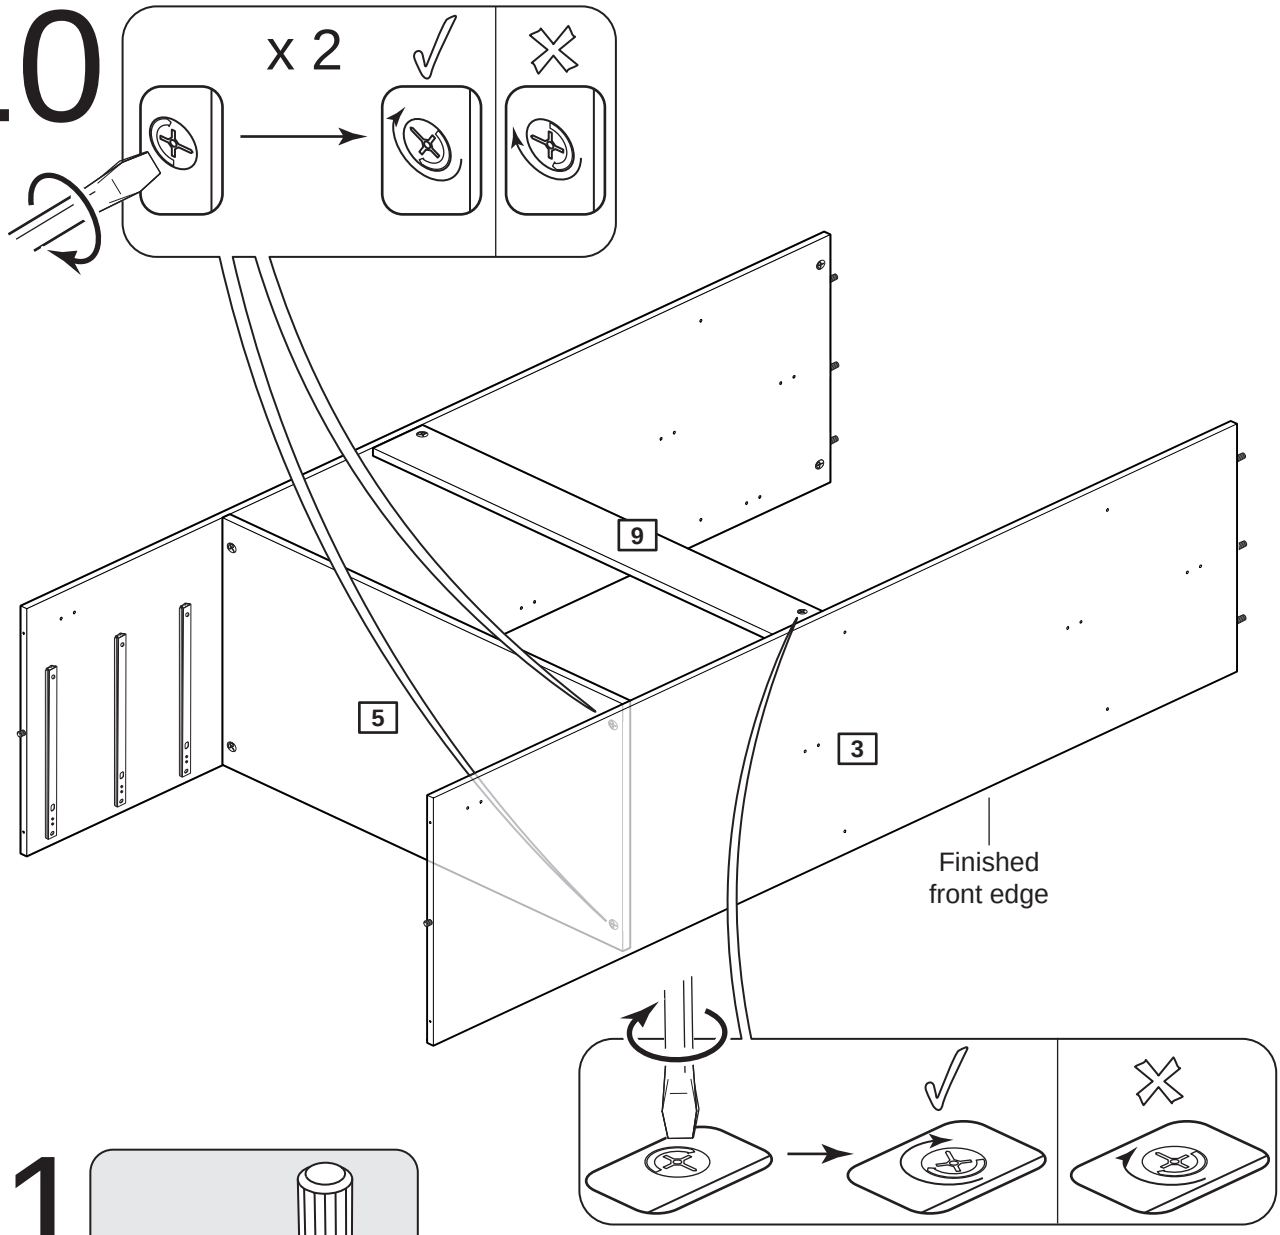


11

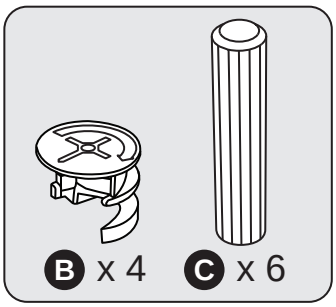

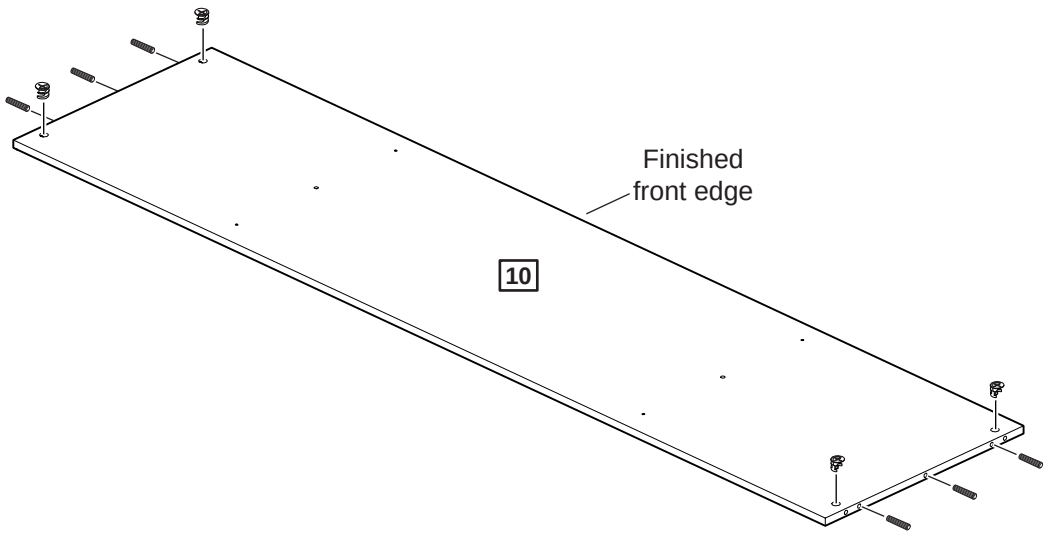


12

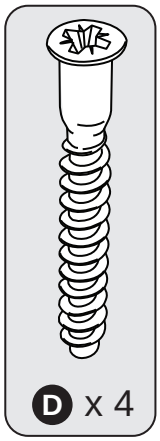


D x 4


13

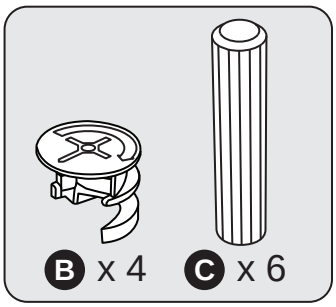


B x 4 C x 6

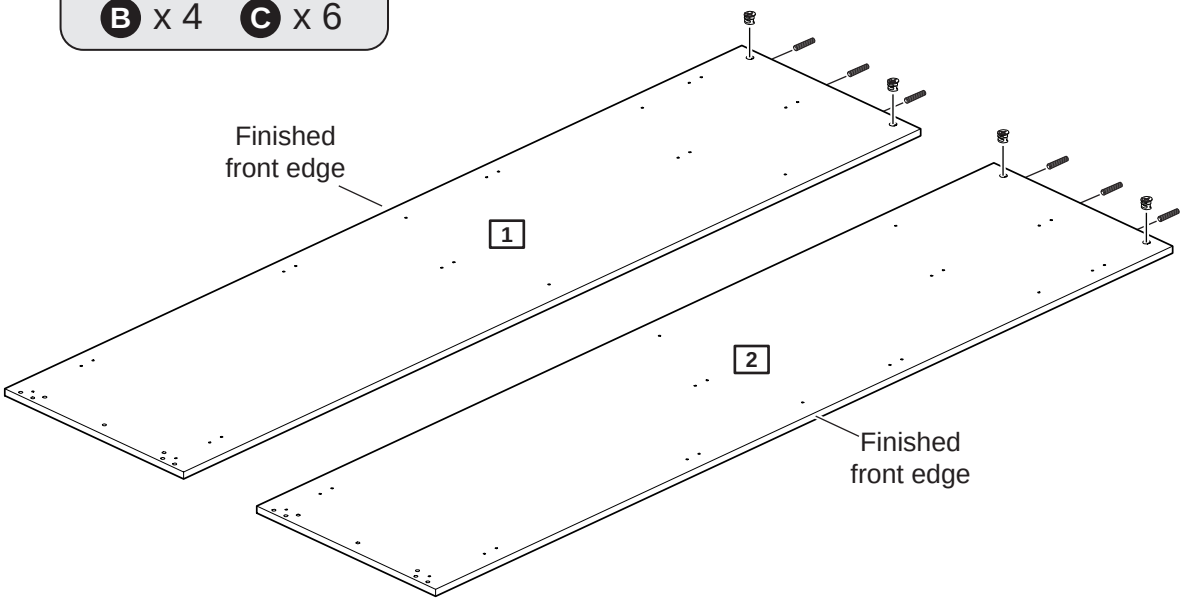



14

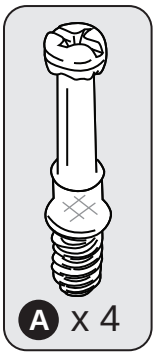

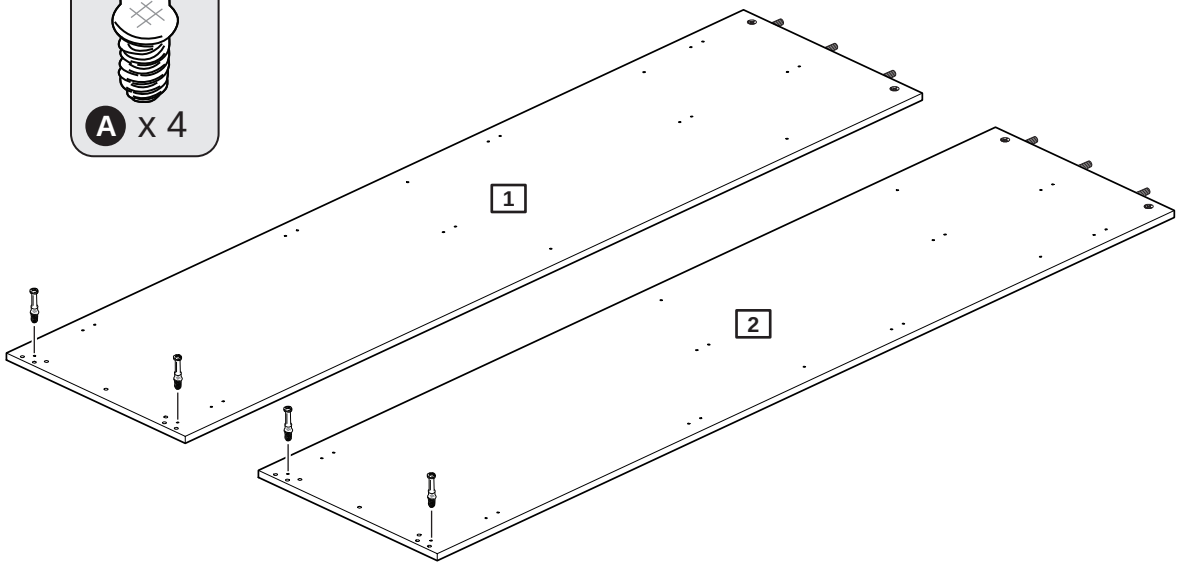



15

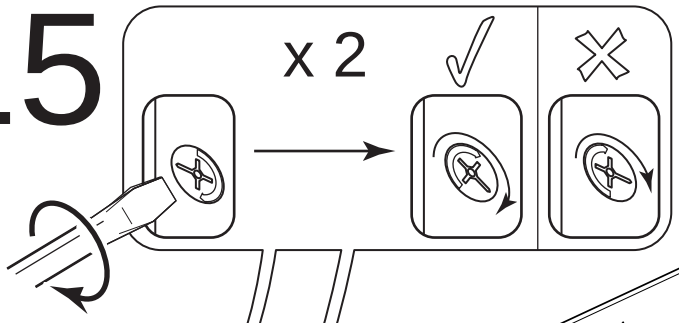

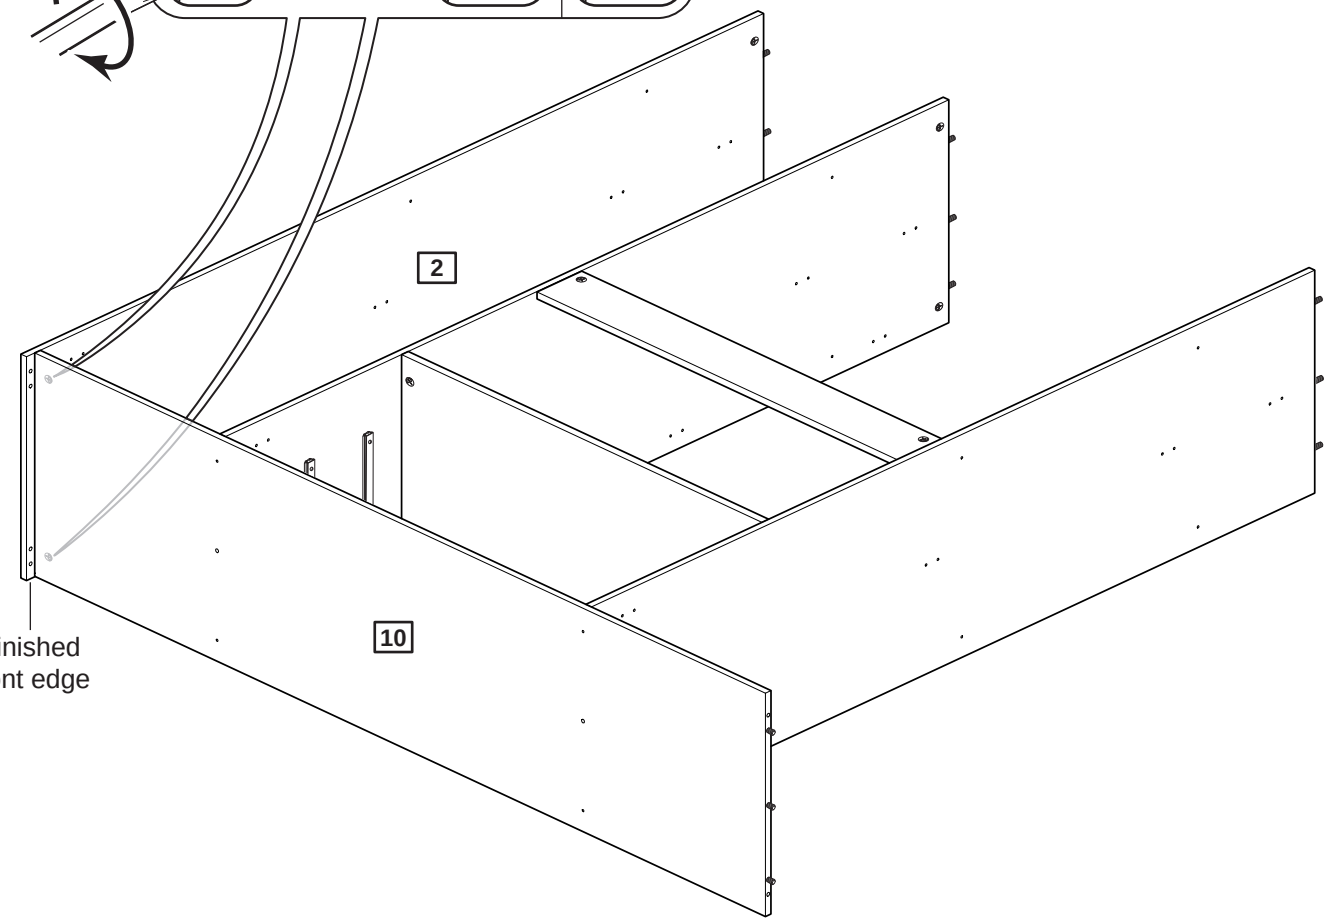


16

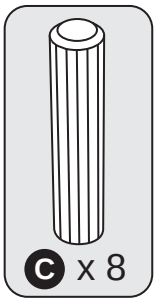

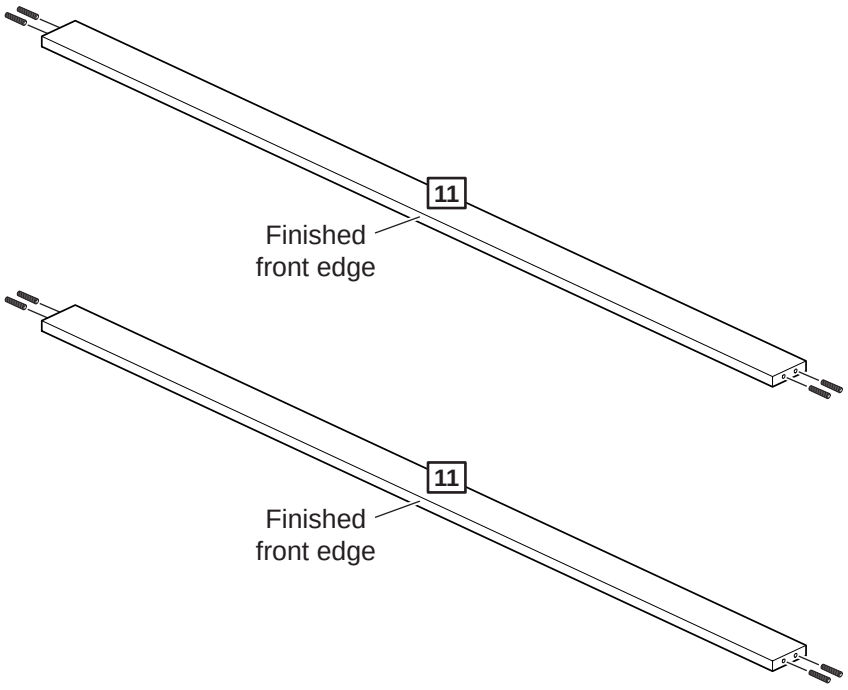


17

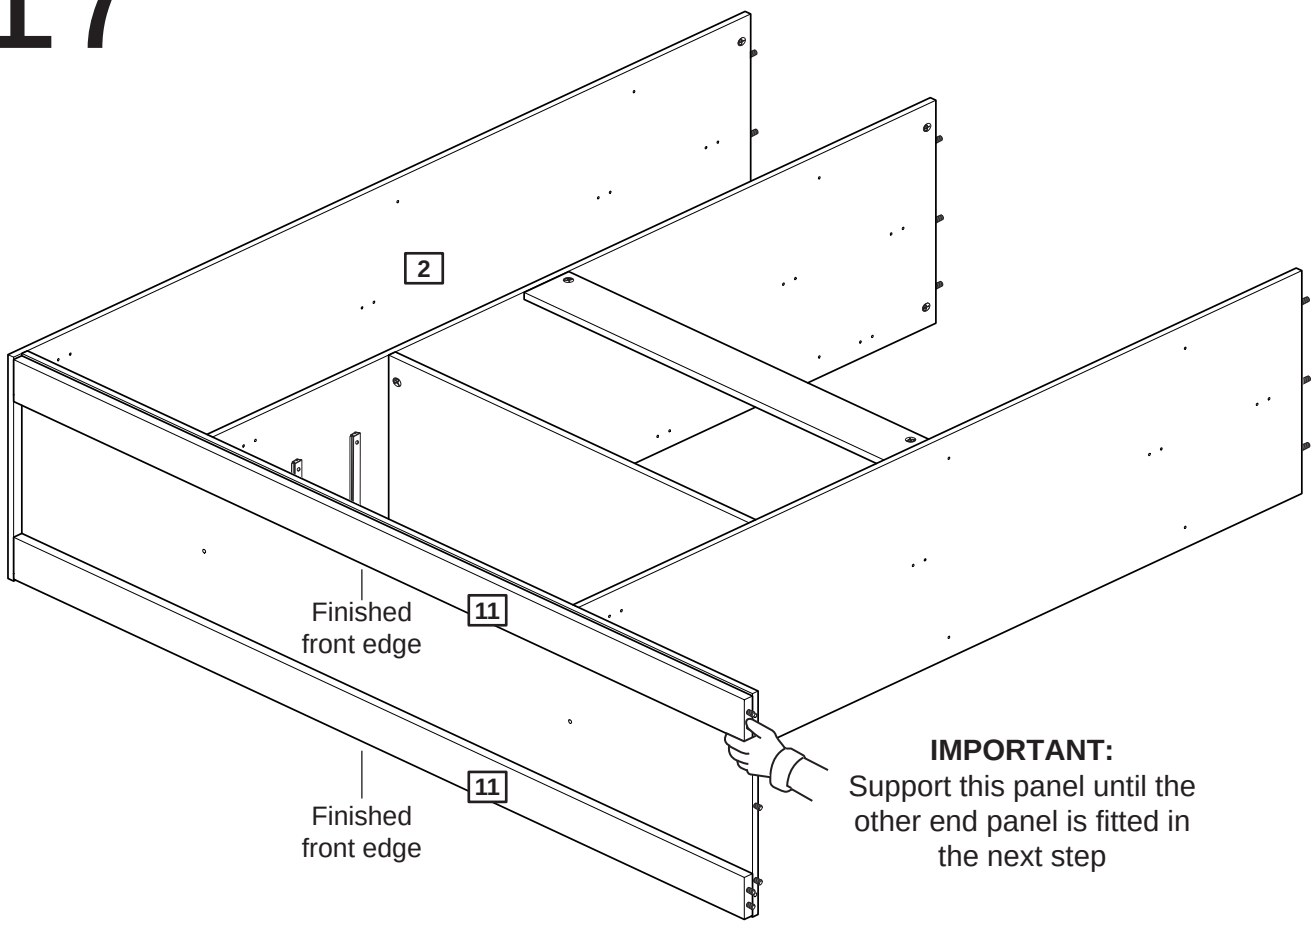



IMPORTANT:
Support this panel until the other end panel is fitted in the next step

18

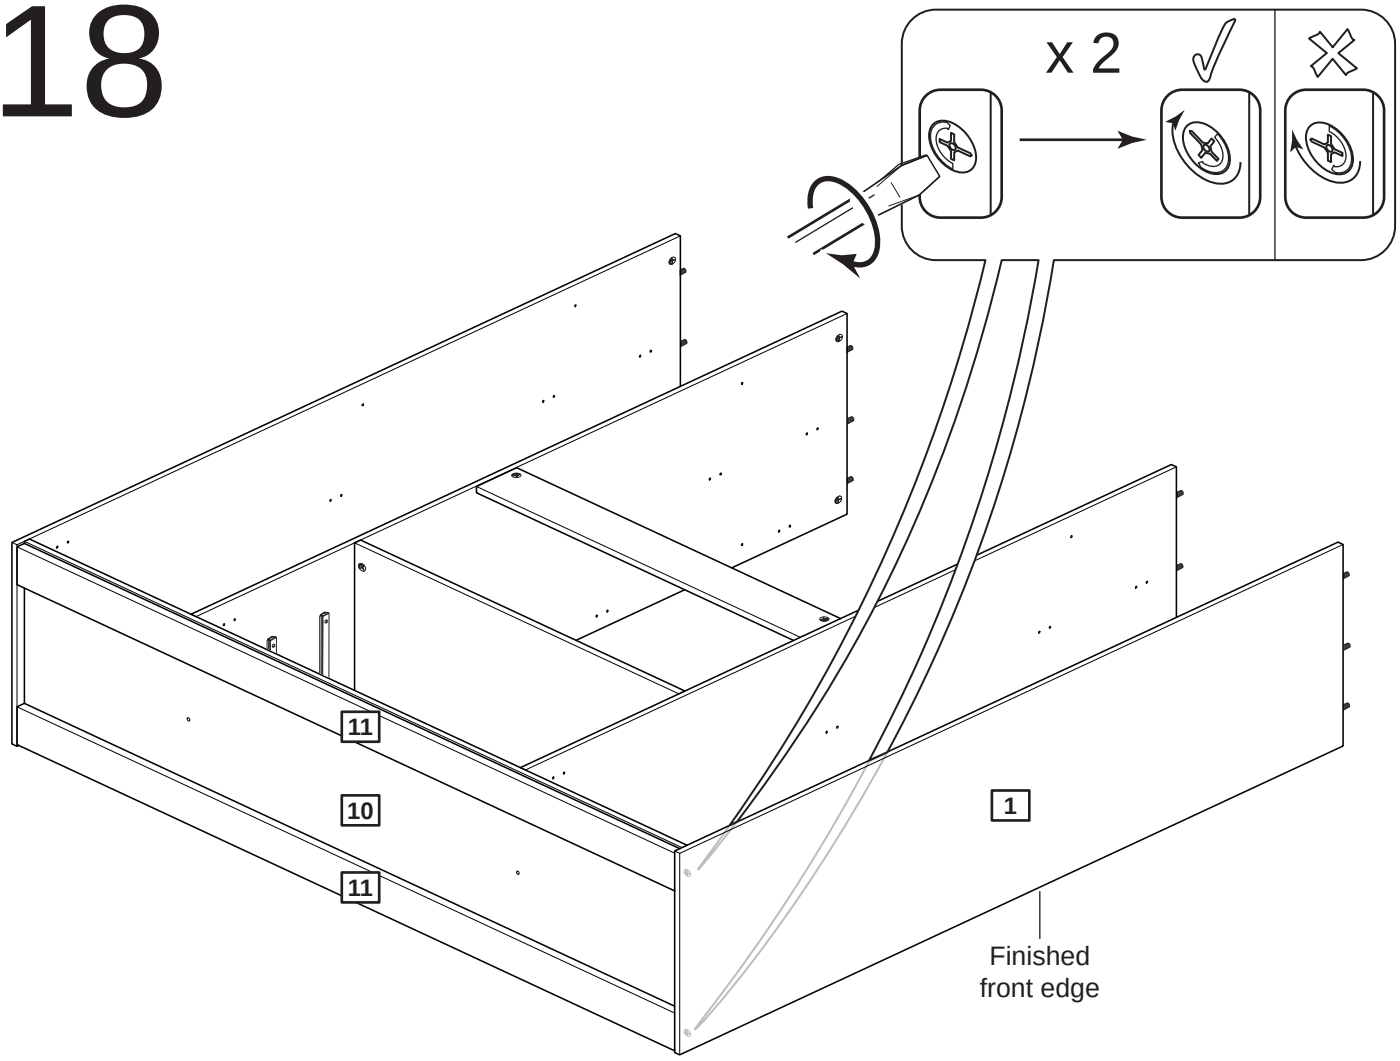


19

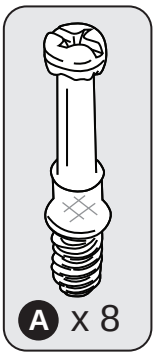

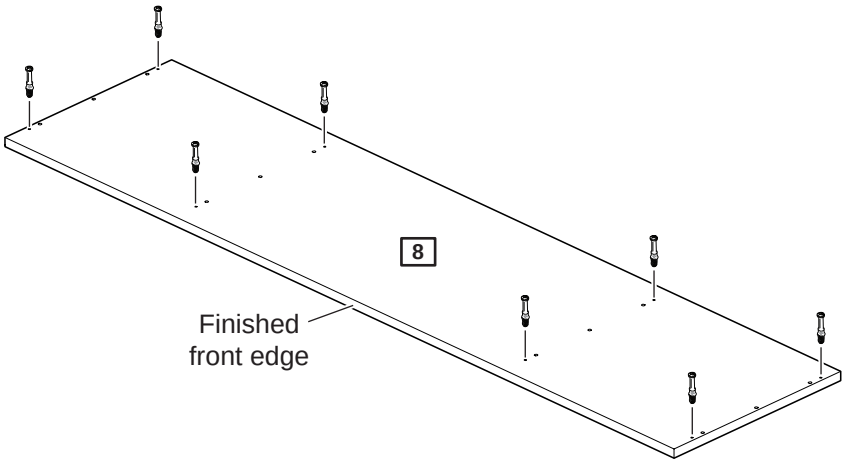

20

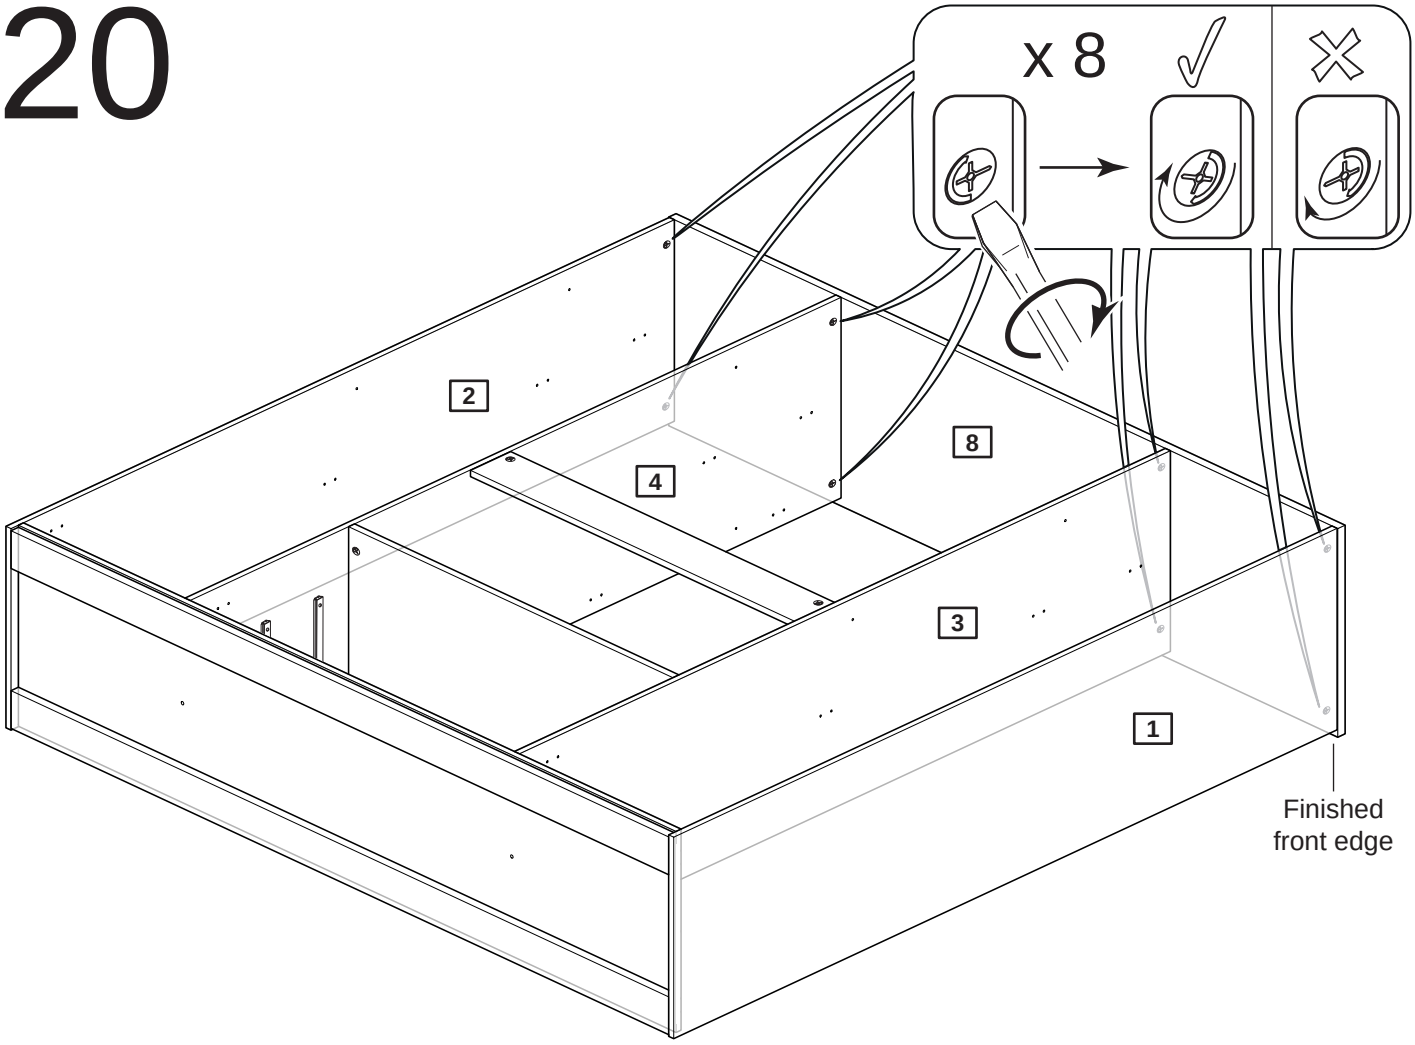


21


Squaring a Robe & Fitting Back Panel
www.youtube.com/watch?v=udEKmXmPEW0

A = B

Make sure measurement A and B are the same before attaching the Back Panels

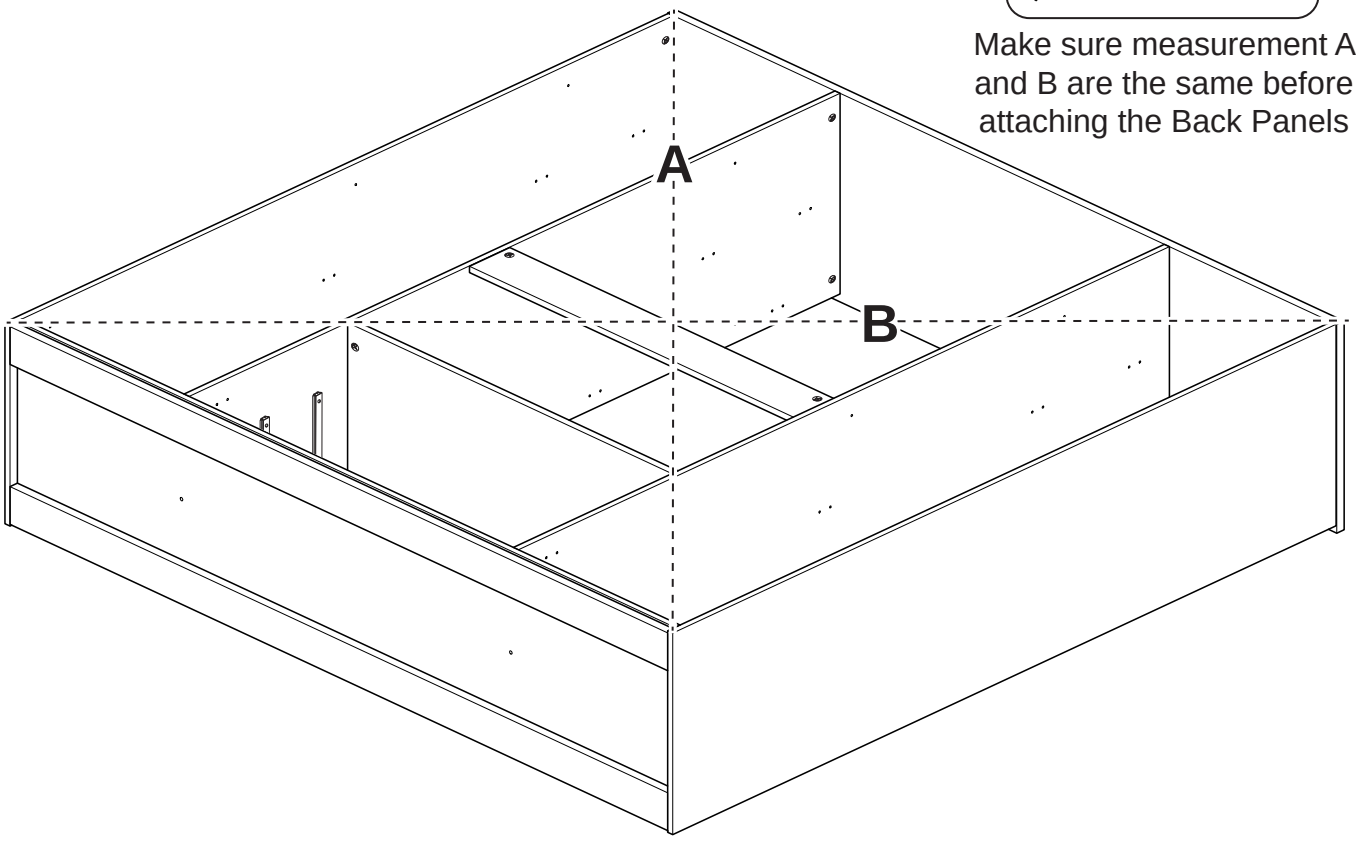


22

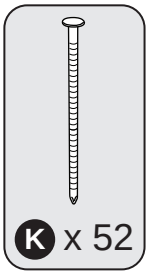


K x 52


IMPORTANT:
DO NOT nail where
the Back panels meet

23

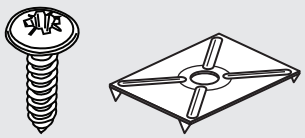



F x 12 M x 12

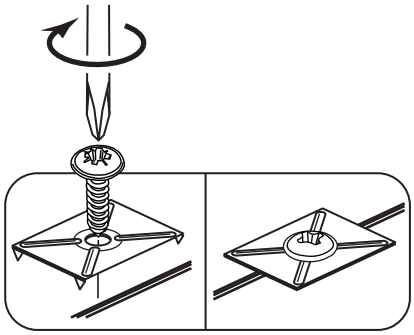


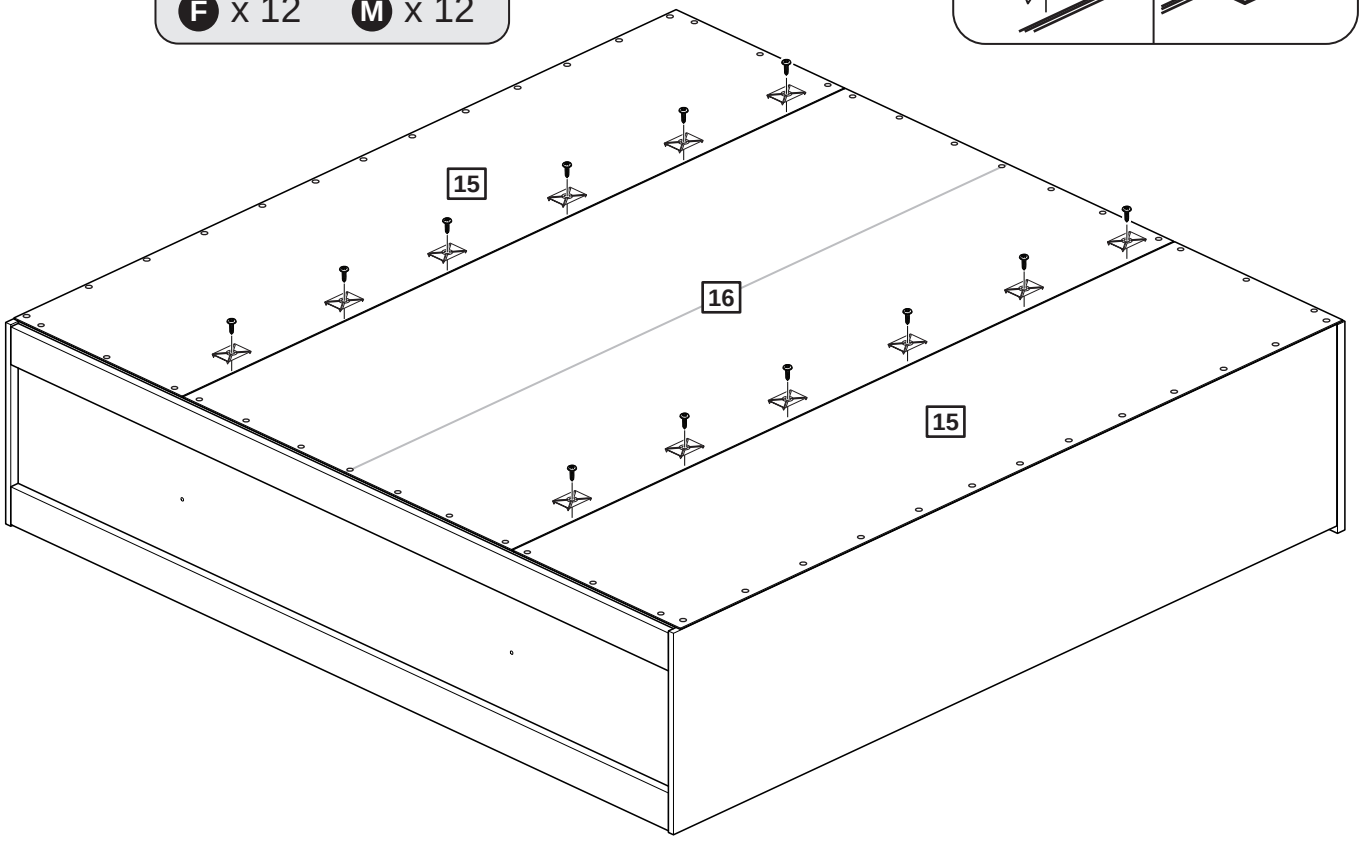


24

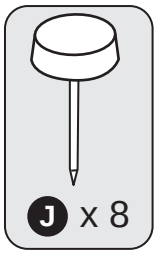

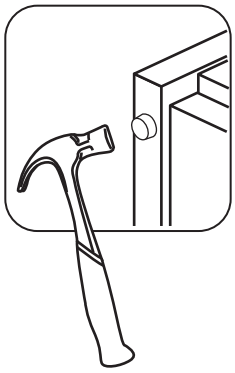

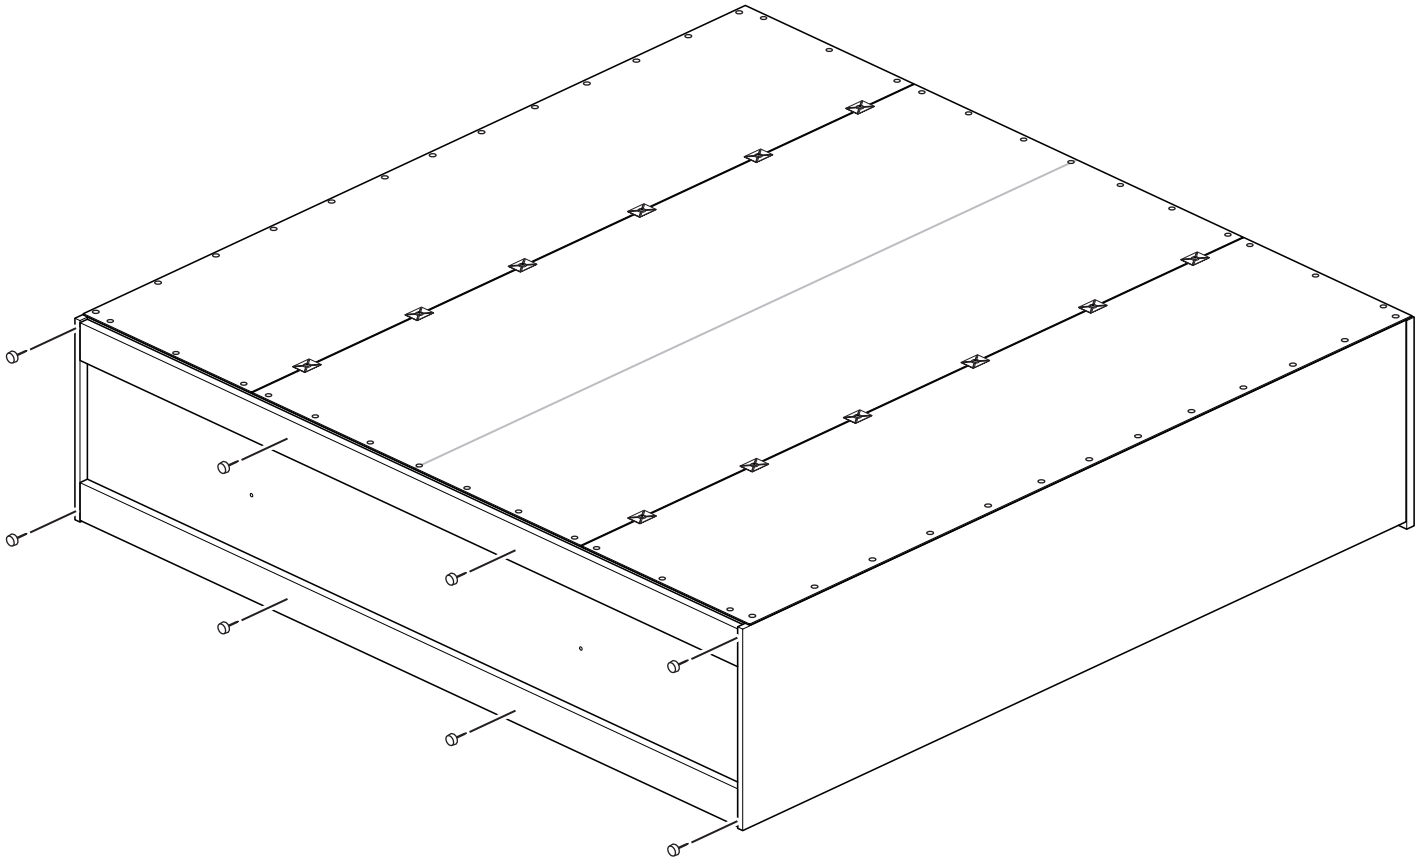


25

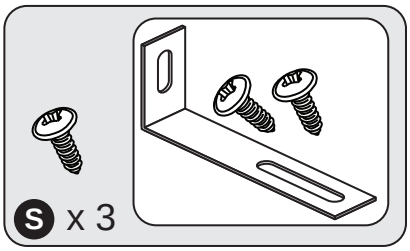


WARNING!

In order to prevent overturning this product must be used with the wall attachment devices provided

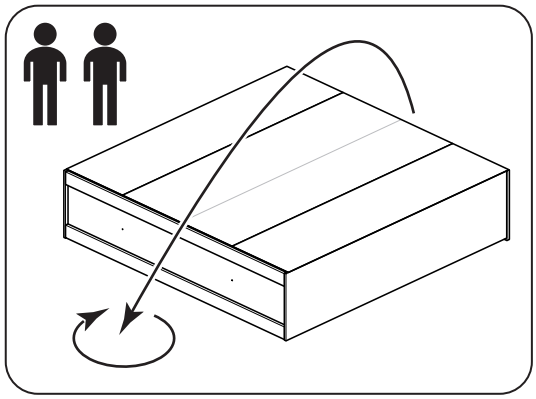

See the next section for a guide to wall mounting and fixings

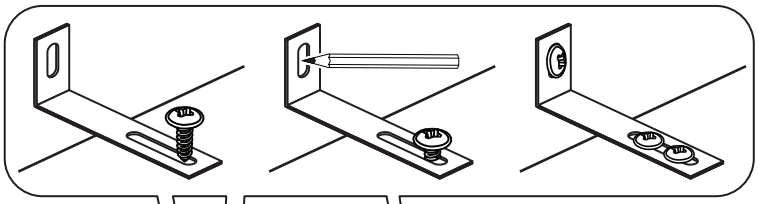

Carefully stand the unit up and push it up against the wall.

Loosely fit the 1st screw through the brackets into the top panel.


Slide the brackets against the wall and mark the slot at the back of the brackets for drilling into the wall.

Swivel the brackets away from the wall and drill the wall using a suitable drill-bit and fit your wall fixings (wall fixings are not supplied as they will need to suit the wall type).

Swivel the brackets back and fix them to the wall.

Fit the 2nd screw into top panel and tighten both screws from the kits.


Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

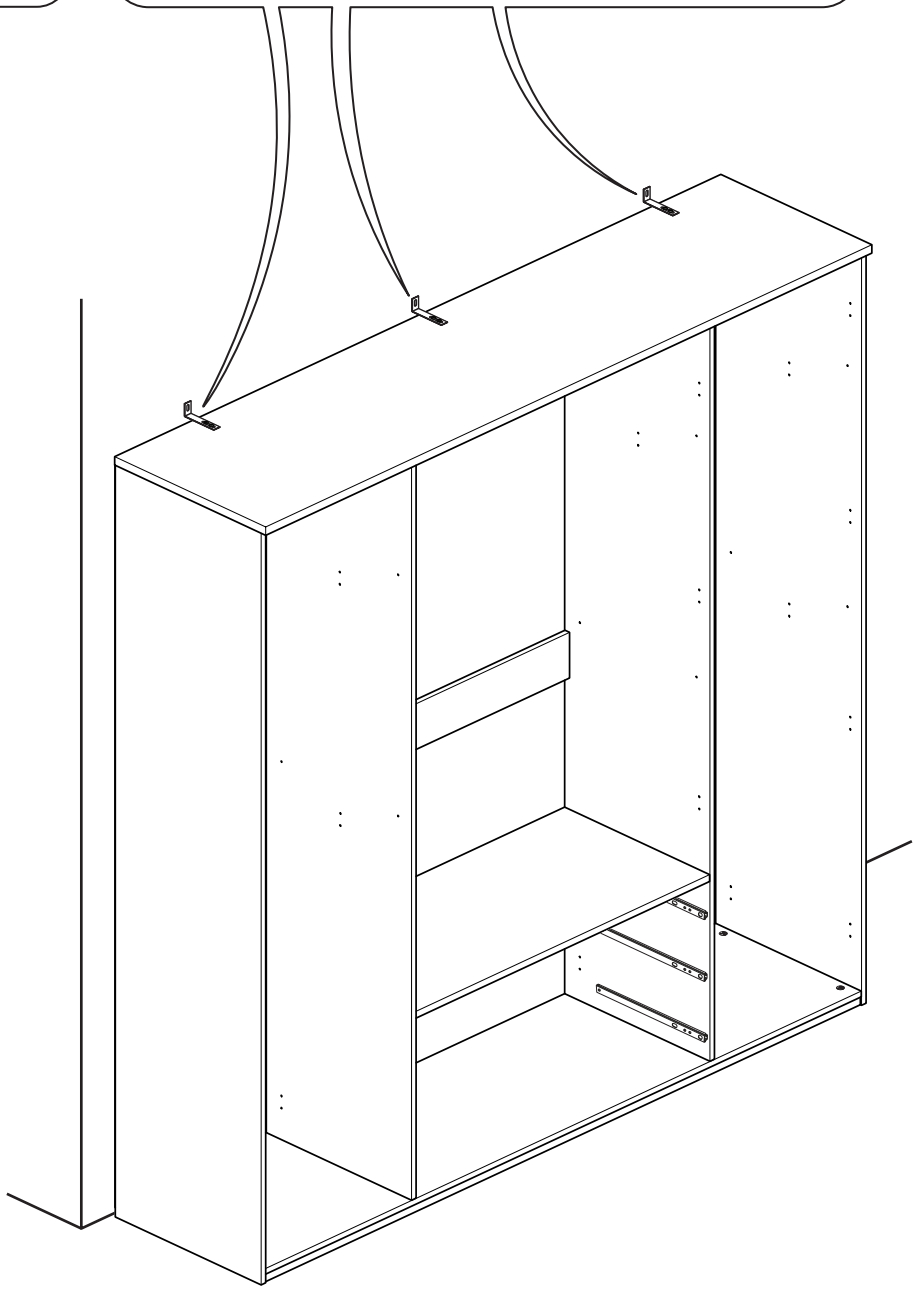

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

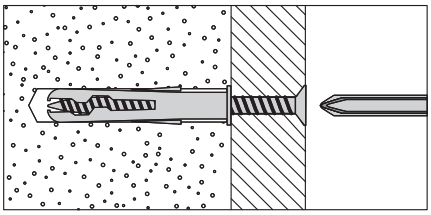


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

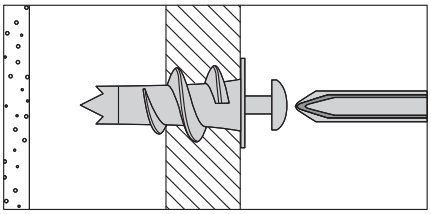


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

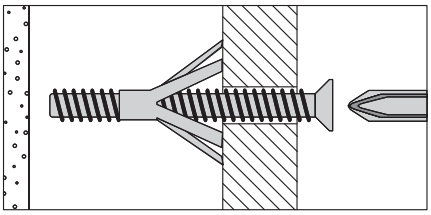


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

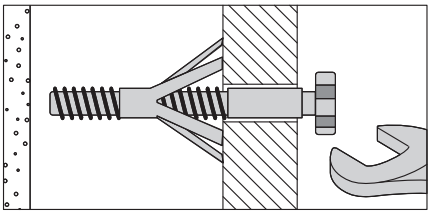


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

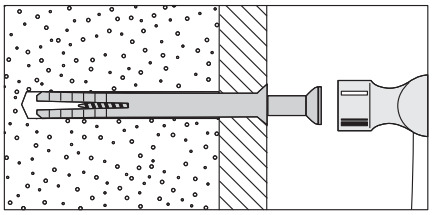

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

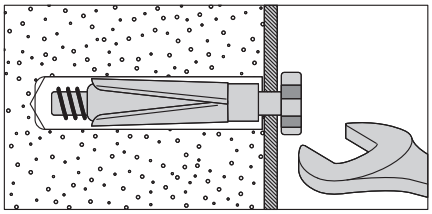


For use with heavier loads such as TV & HiFi speakers and satellite dishes etc.


Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.


Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

26

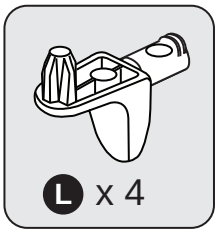


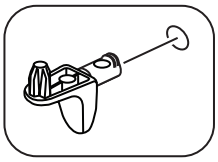



Choose the position for the Large Shelf to be fitted, and screw in shelf studs to suit.

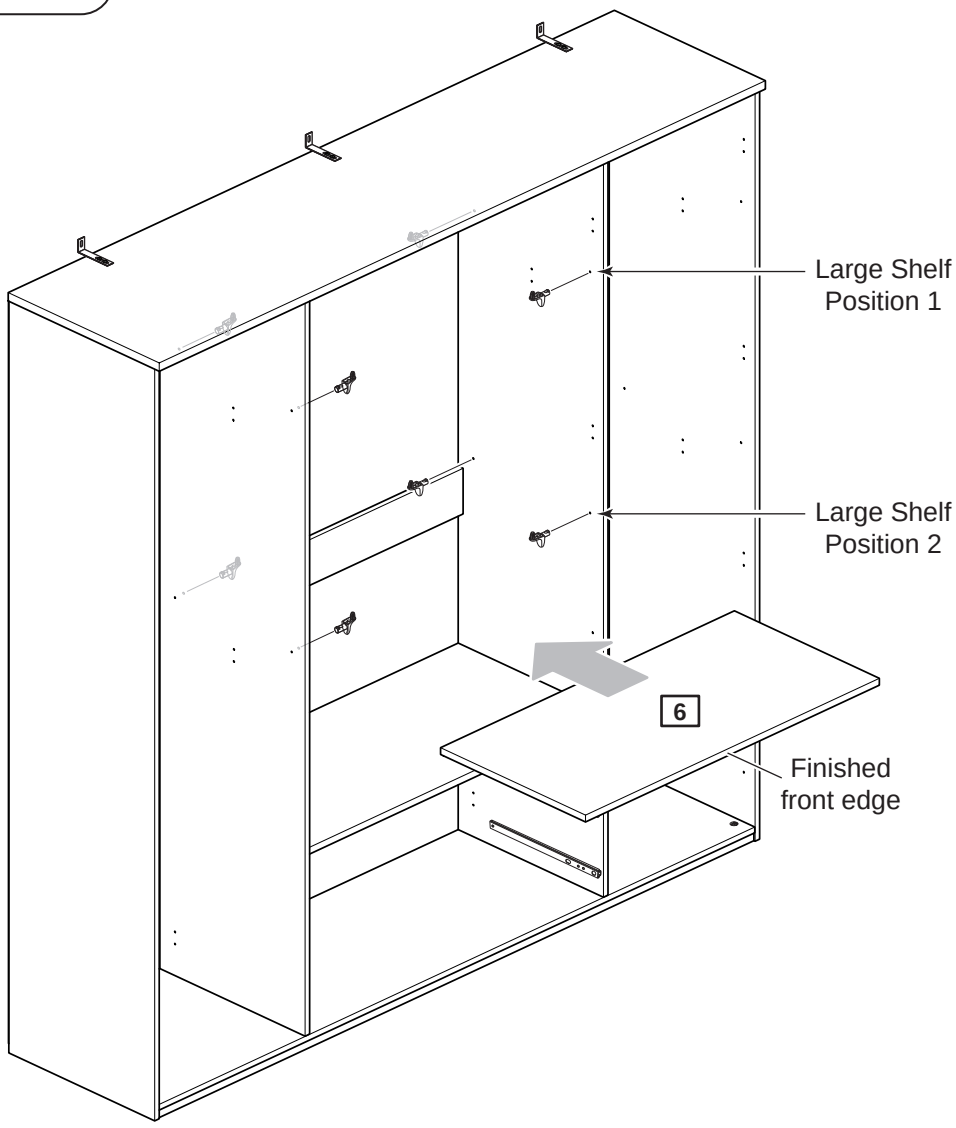


27

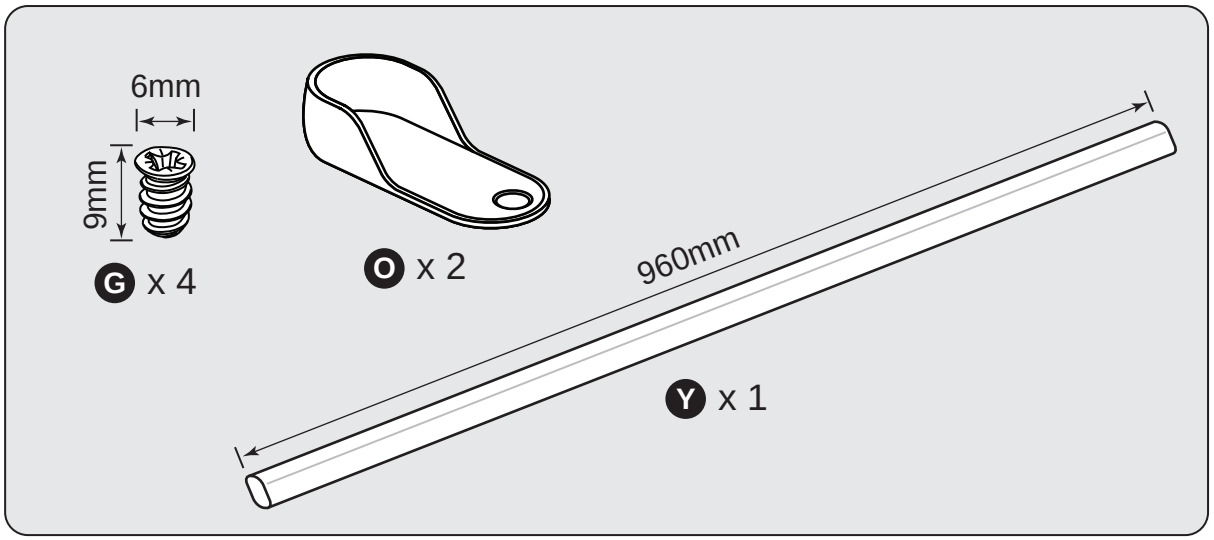

6mm
9mm
G x 4
O x 2
960mm
Y x 1

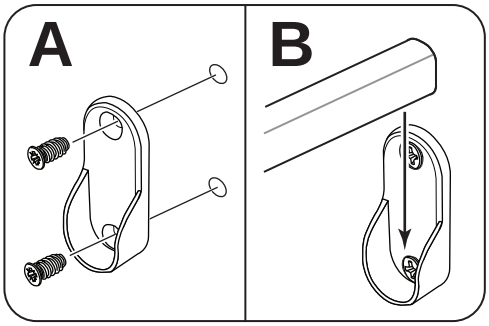
A
B

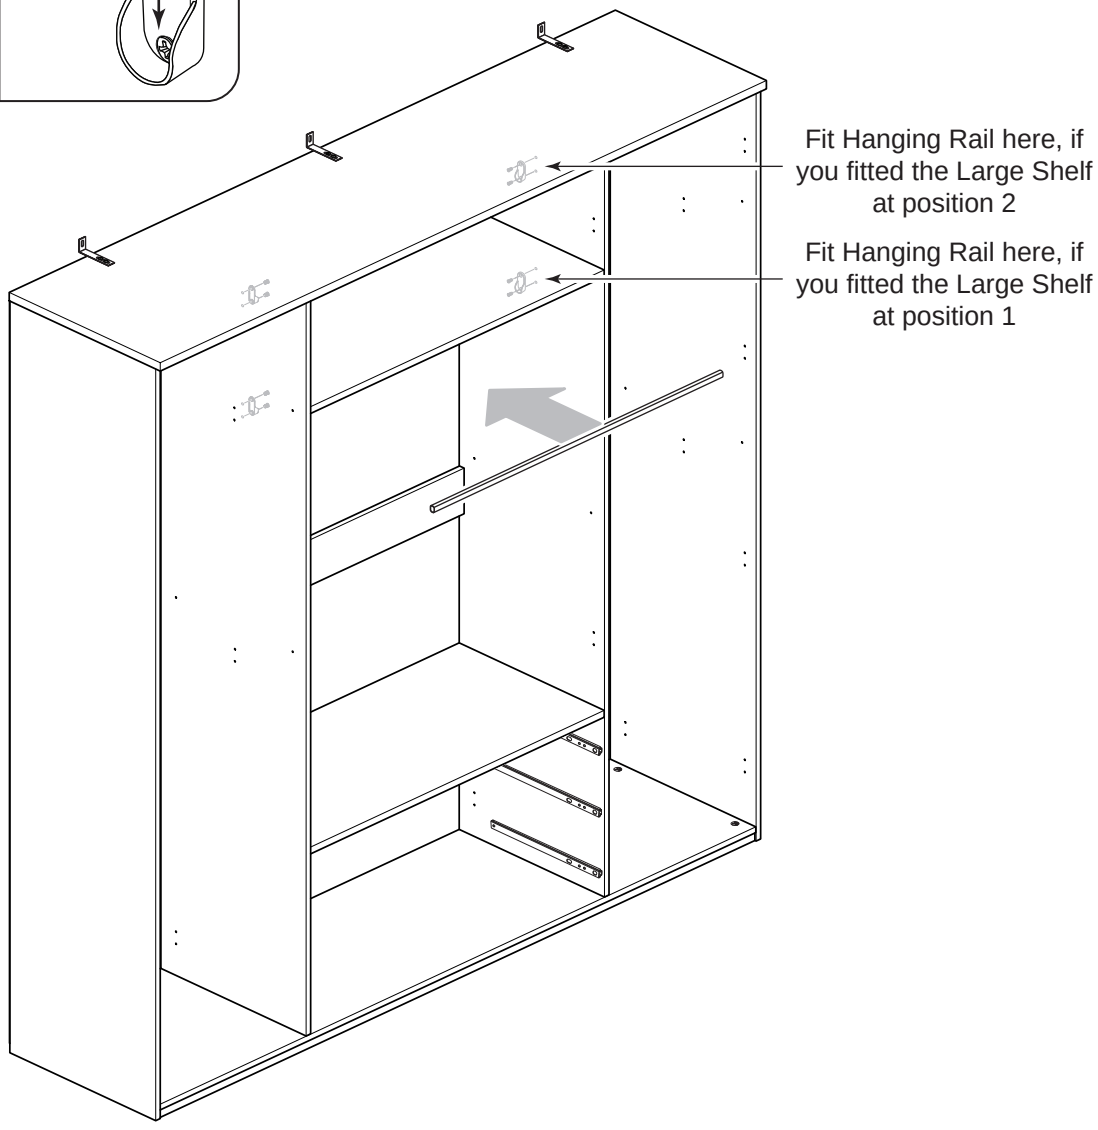

Fit Hanging Rail here, if you fitted the Large Shelf at position 2
Fit Hanging Rail here, if you fitted the Large Shelf at position 1

28

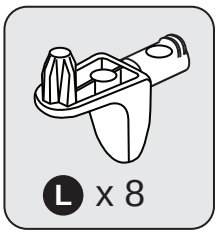


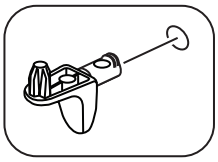



Choose the positions for the Small Shelves to be fitted, and screw in shelf studs to suit.

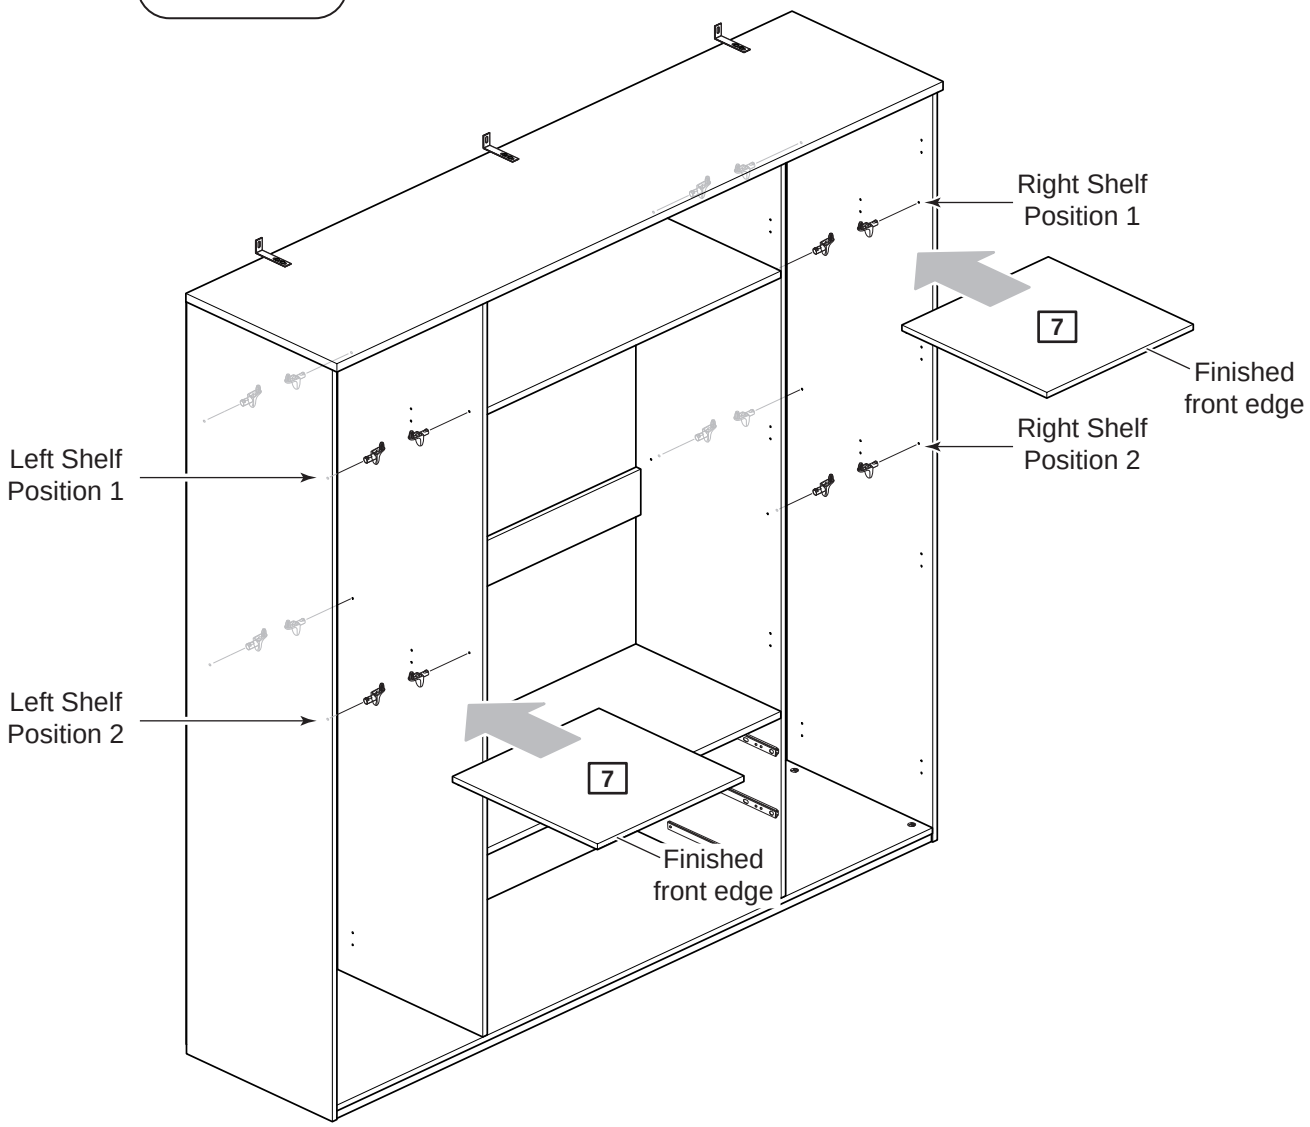


29

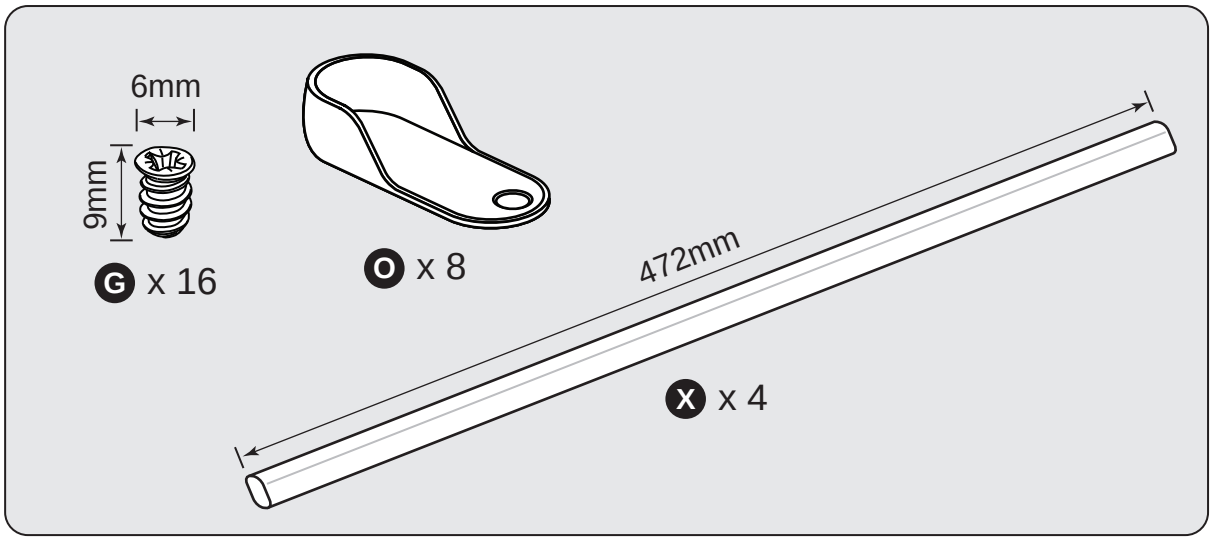
6mm
9mm
G x 16
O x 8
472mm
X x 4

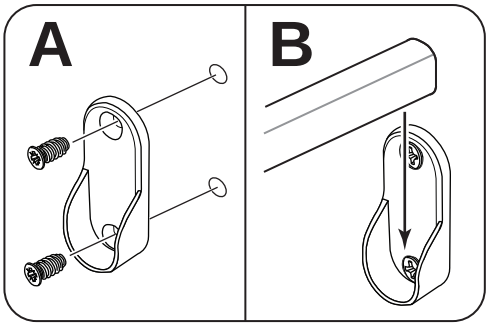

A
B

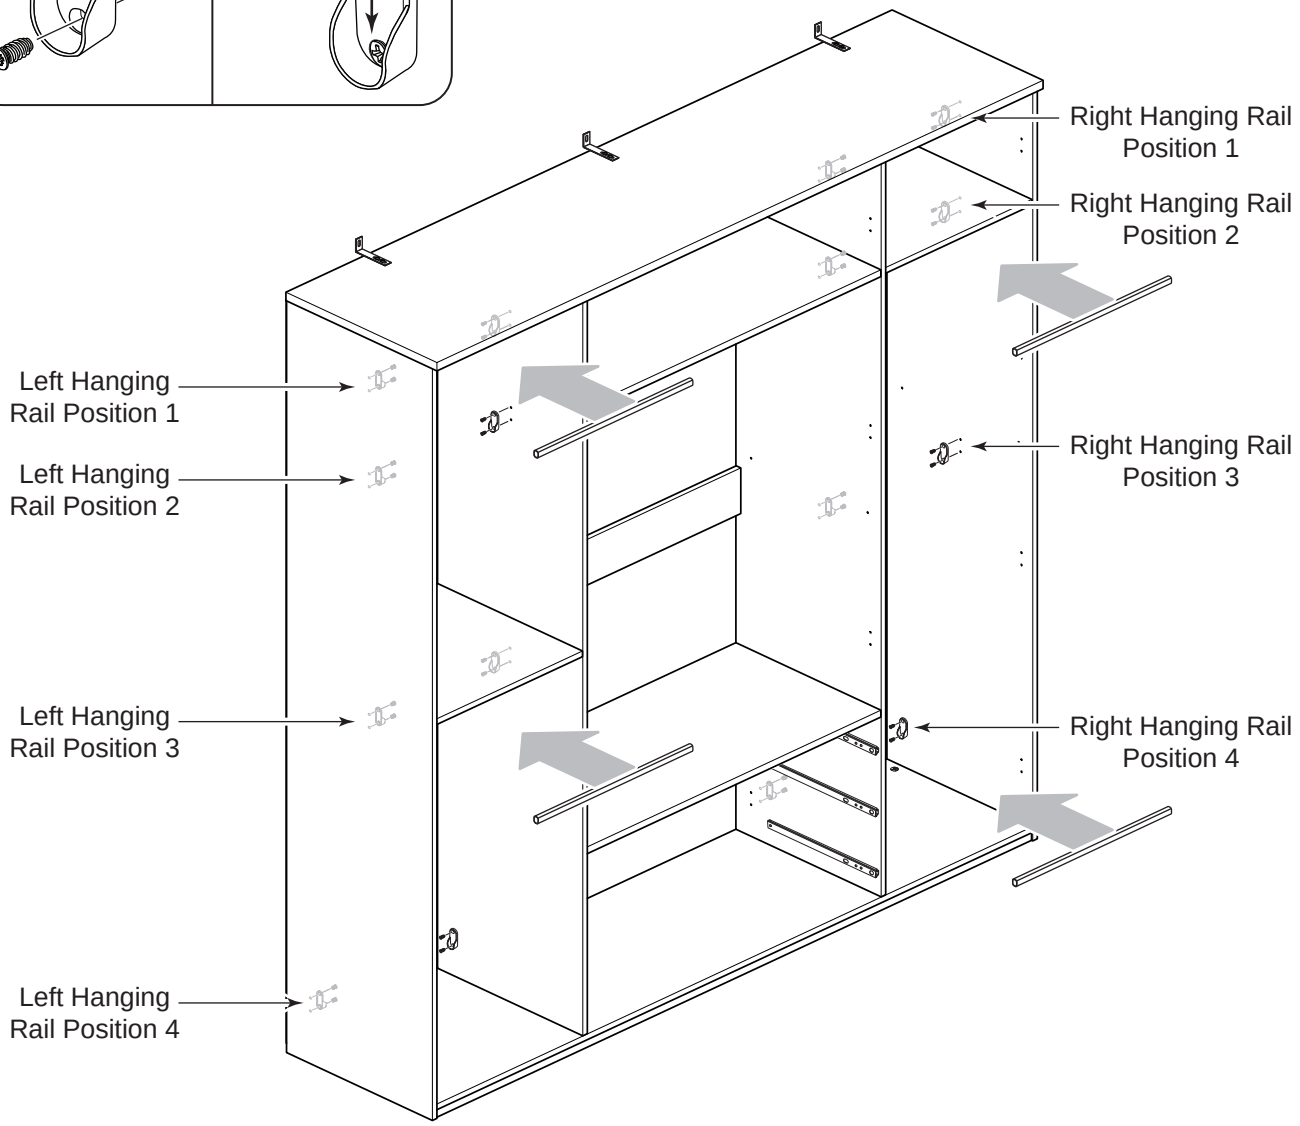

Right Hanging Rail Position 1
Right Hanging Rail Position 2
Left Hanging Rail Position 1
Left Hanging Rail Position 2
Right Hanging Rail Position 3
Left Hanging Rail Position 3
Right Hanging Rail Position 4
Left Hanging Rail Position 4


30

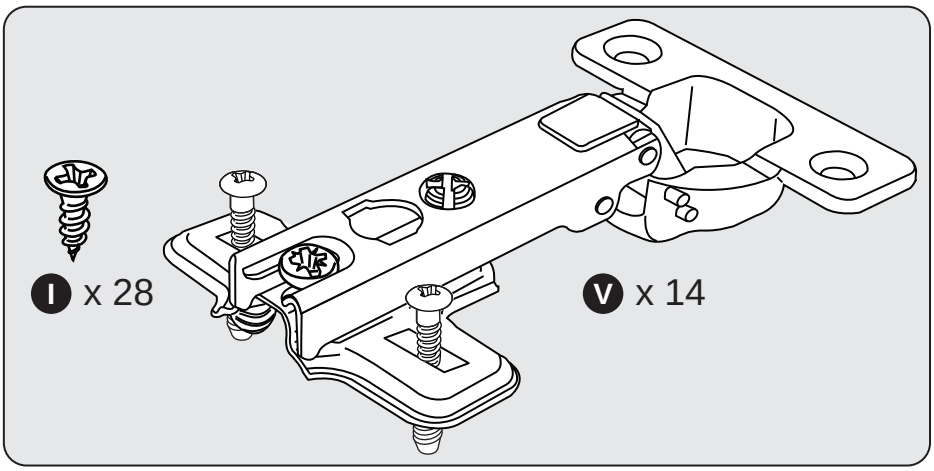



Pre-mounted Hinge Fitting & Adjustment
https://www.youtube.com/watch?v=b4NeCGnpjP8

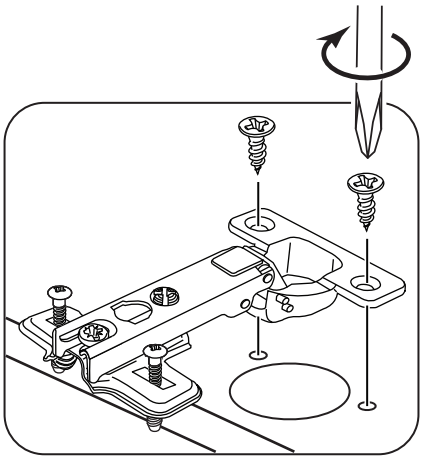

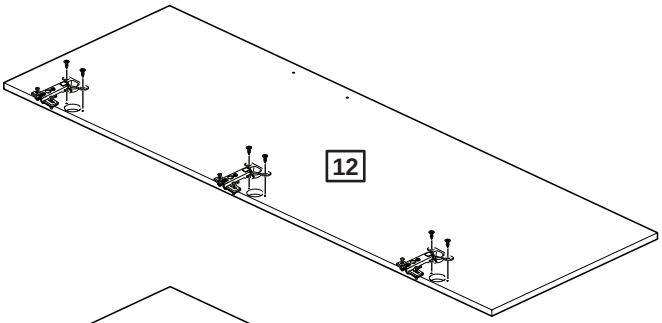

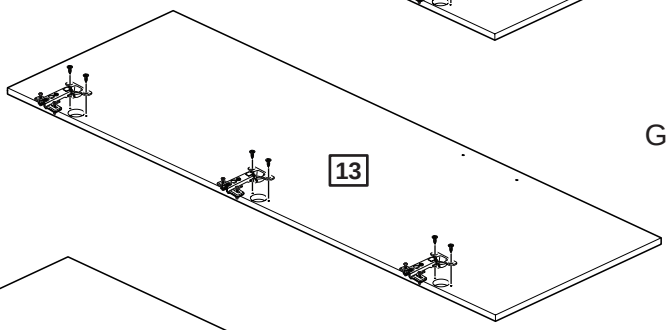

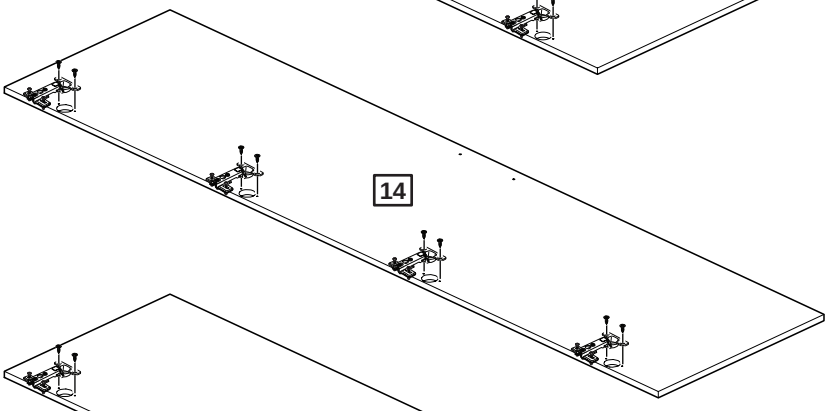

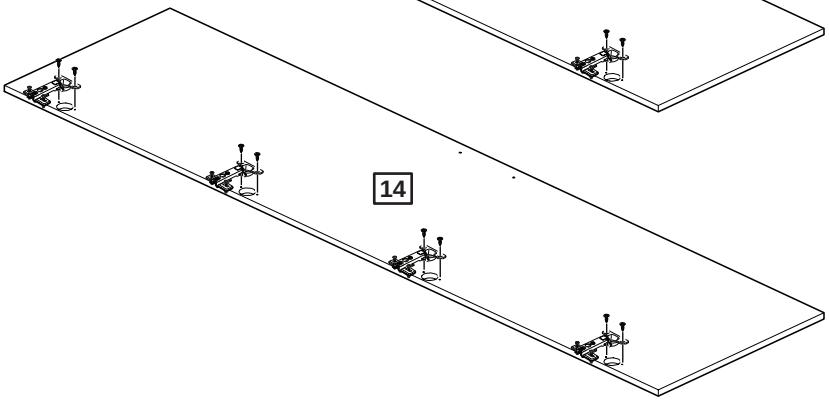




Warning:
Glass! Handle with care


31


Pre-mounted Hinge Fitting & Adjustment
https://www.youtube.com/watch?v=b4NeCGnpjP8

Press the screws into the holes in the panels

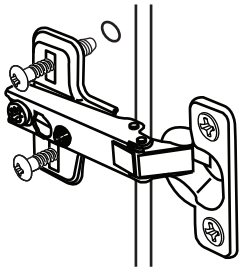



When the hinges have been pushed in, tighten up their screws

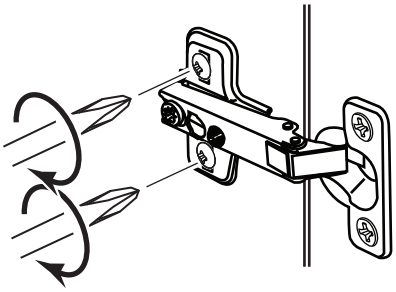

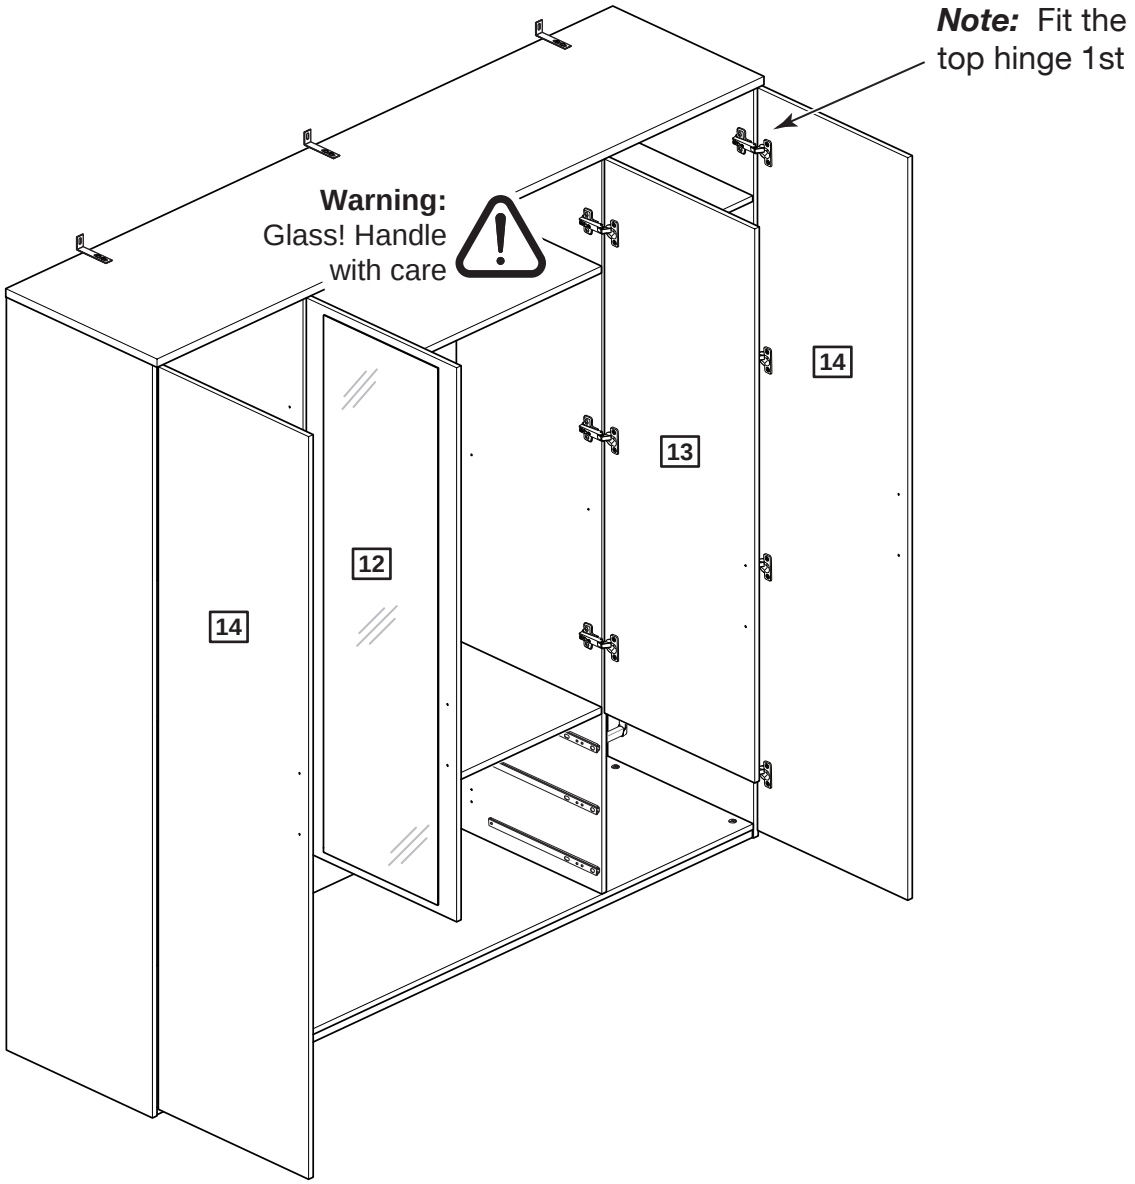


32

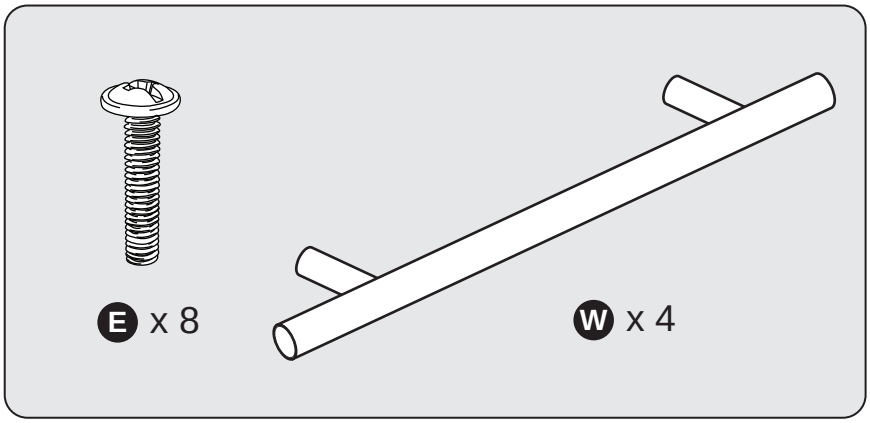

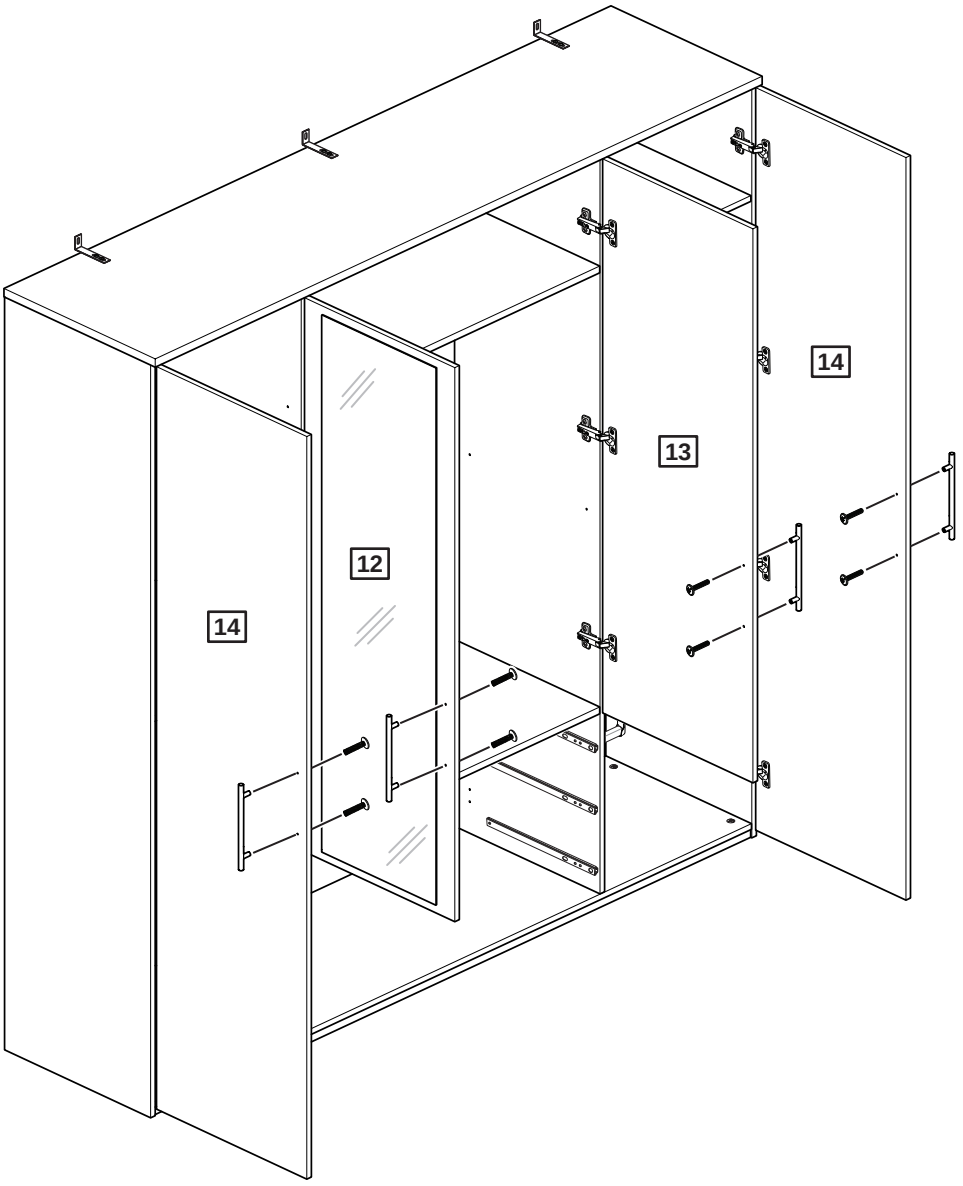

33

N x 8

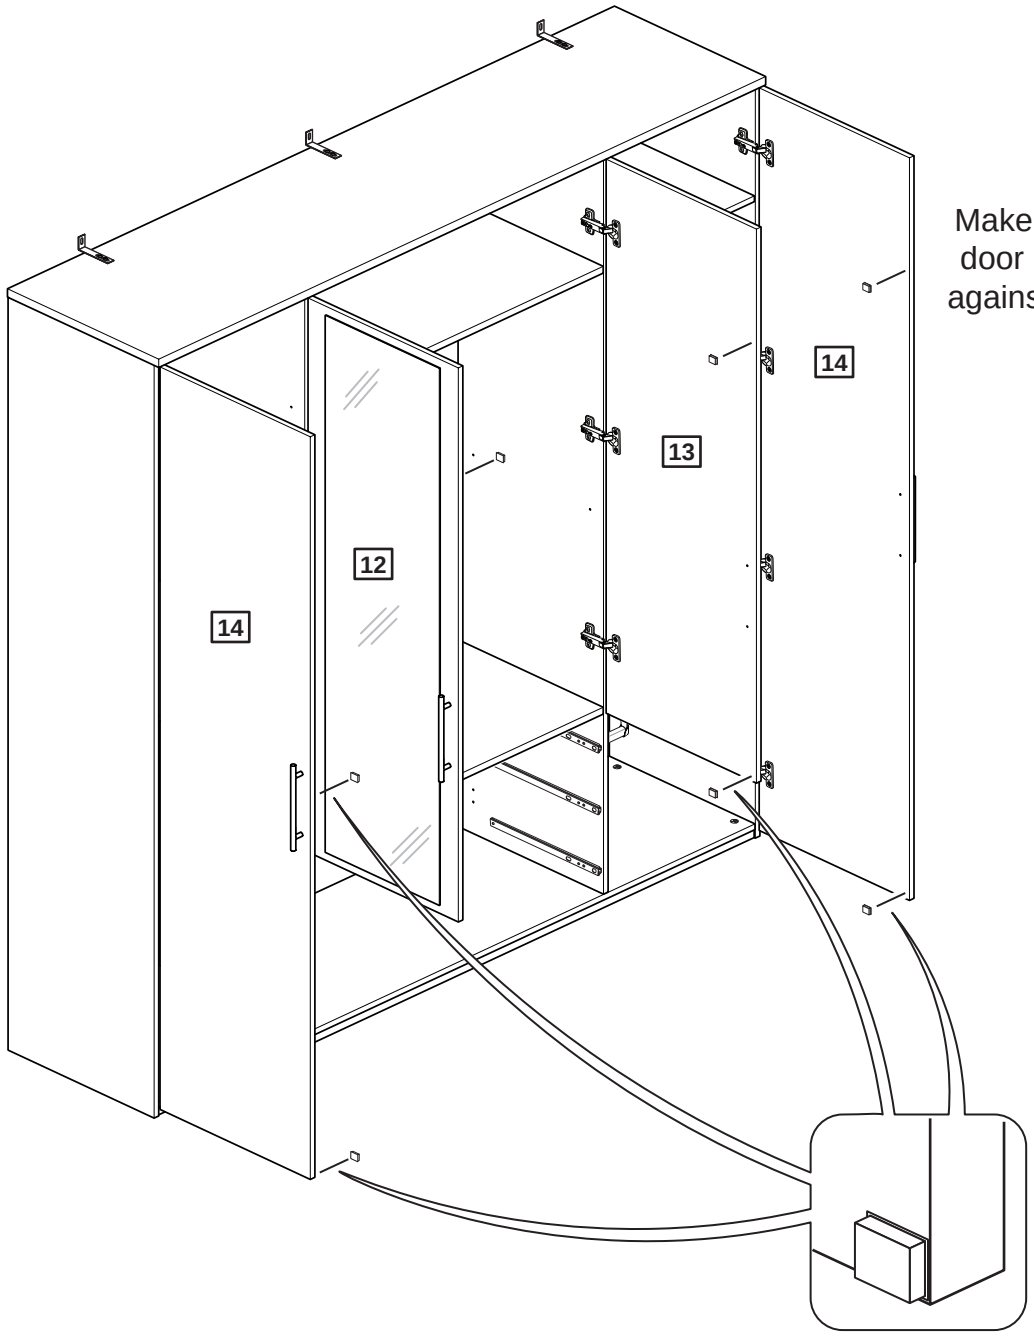

Make sure that the door buffers close against the Shelves

34

Pre-mounted Hinge Fitting & Adjustment
https://www.youtube.com/watch?v=b4NeCGnpjP8


Adjust the Doors if needed

a: Before adjusting the Doors, use a Spirit Level to check the Top (or Base) of the unit is level, front-to-back and side-to-side in the 3 positions shown. Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the Hinges, as shown.


b: Height adjustment.
Loosen screws A on Hinge Plates and move Door up or down as required. Retighten screw A.

c: Forward and Back adjustment.
Loosen screw B on Hinge Plate and move Door in or out as required. Retighten screw B.

d: Sideways adjustment.
To move Door ‘out’ loosen screw C.
To move Door ‘in’ tighten screw C.

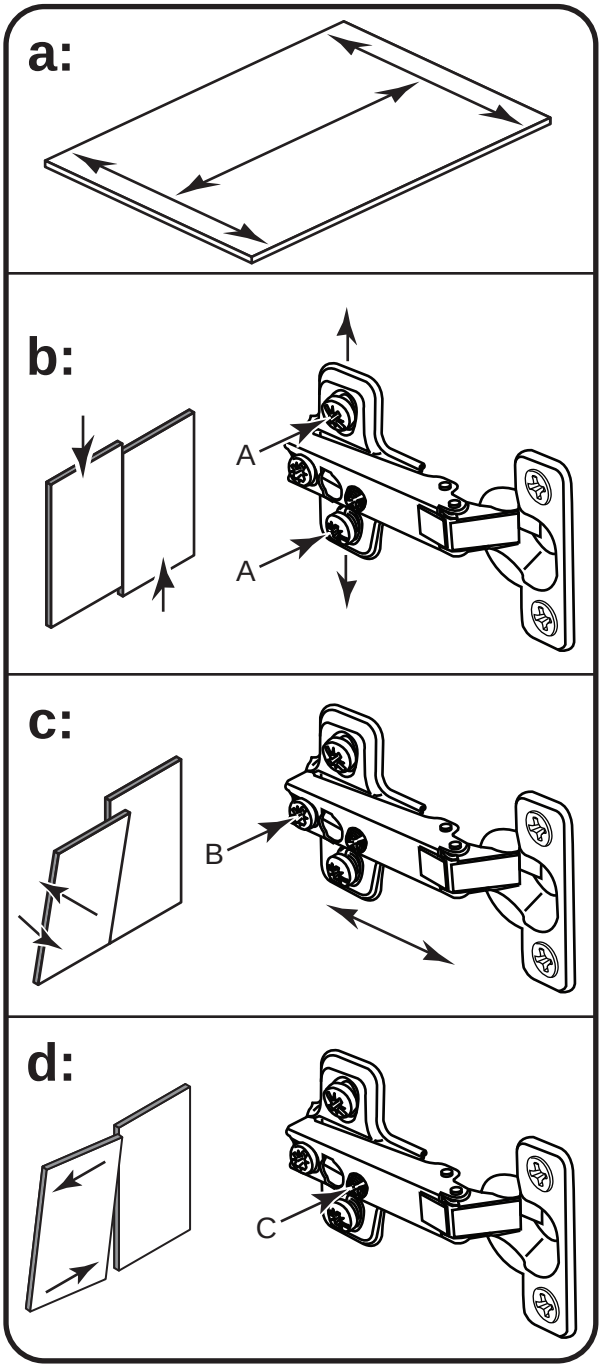


Drawer Assembly

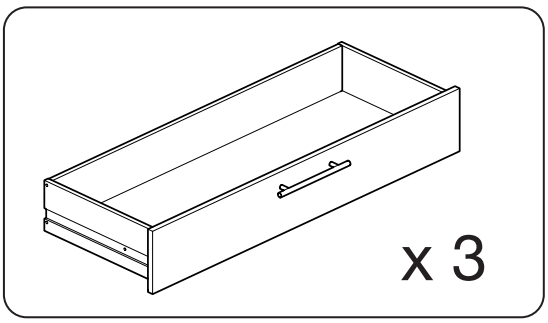


Bag 2


Drawer Assembly
www.youtube.com/watch?v=InNBV_uuMmo


35

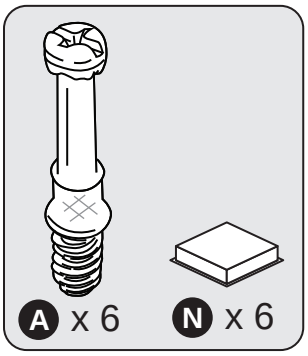

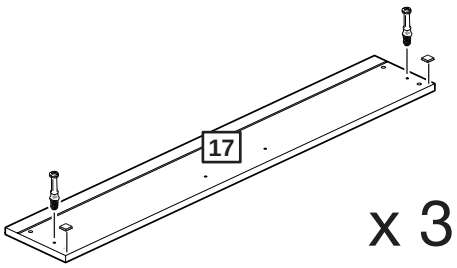


36

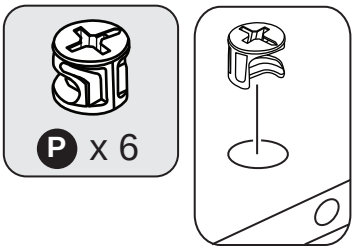


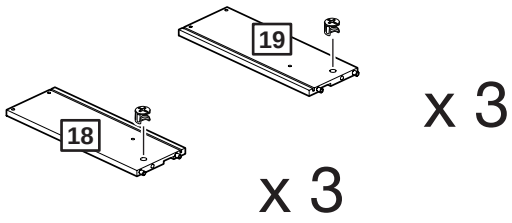

37

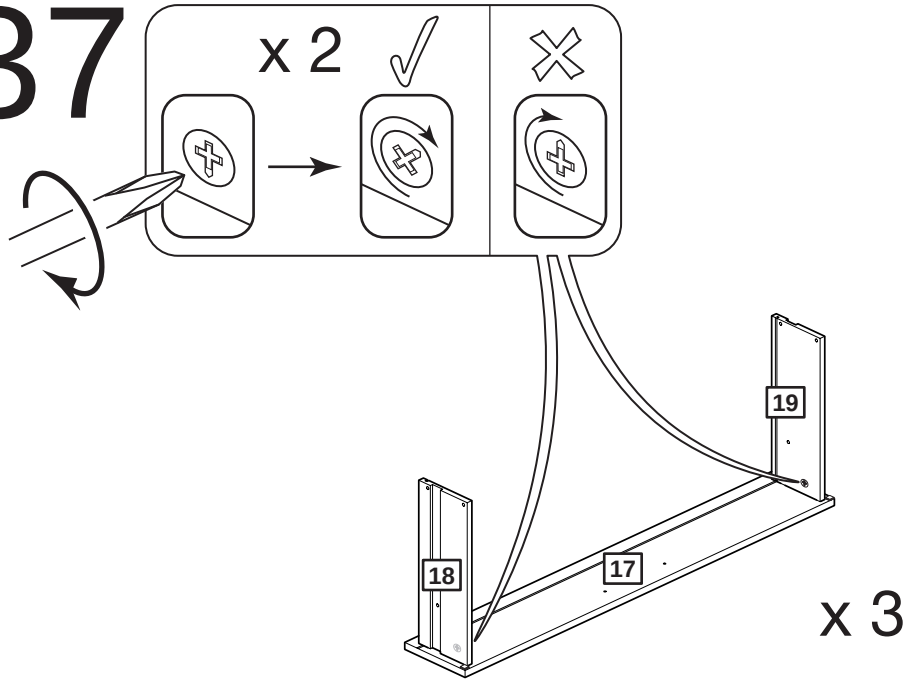


38

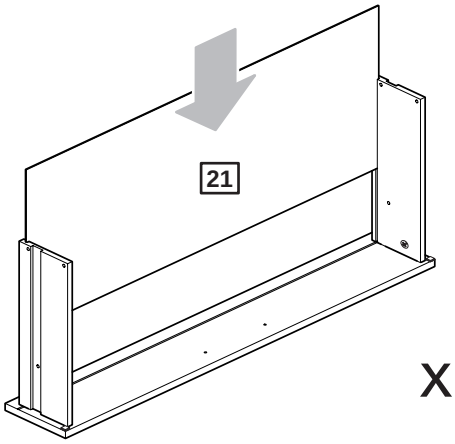


x 3

39

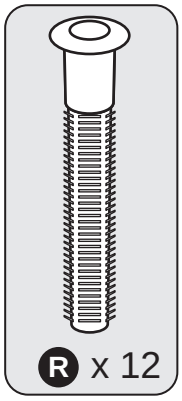


R x 12

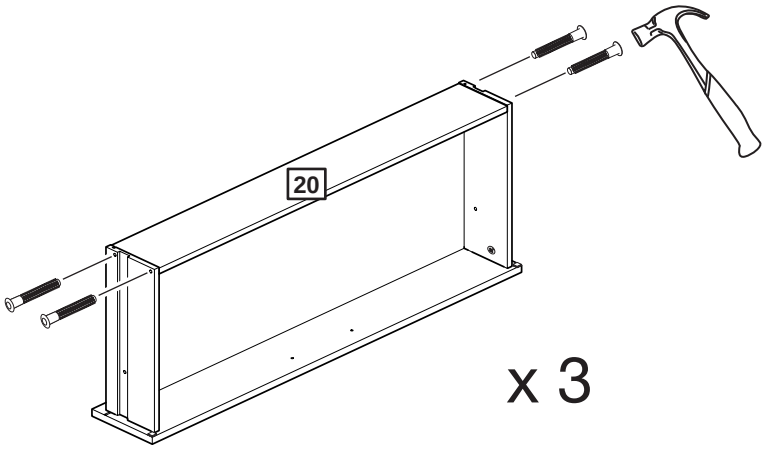


x 3

40

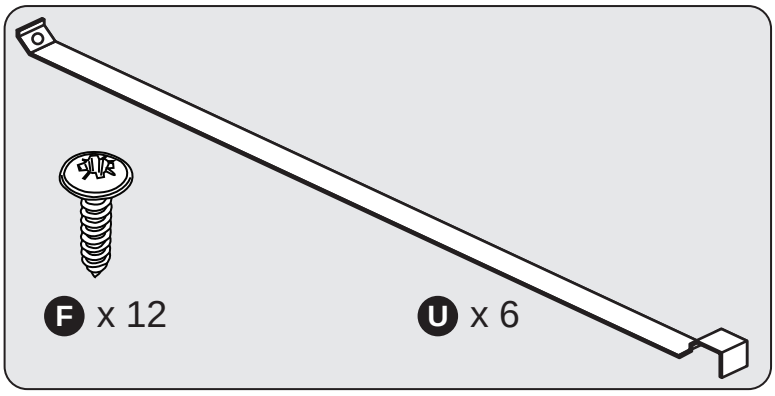


F x 12


U x 6

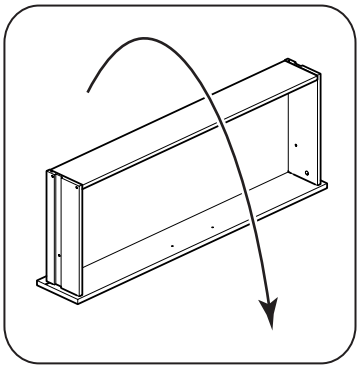




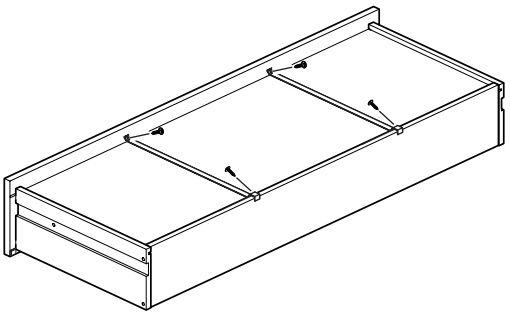



x 3

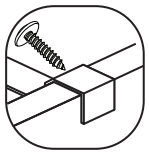

41

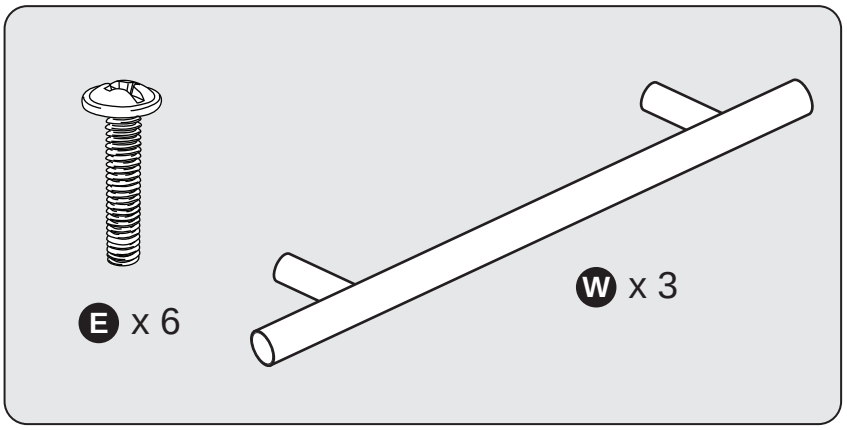


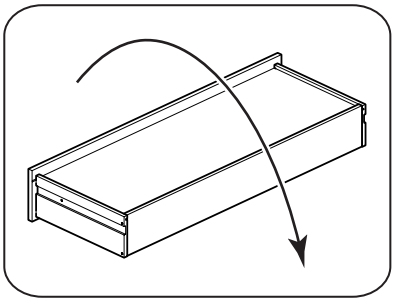

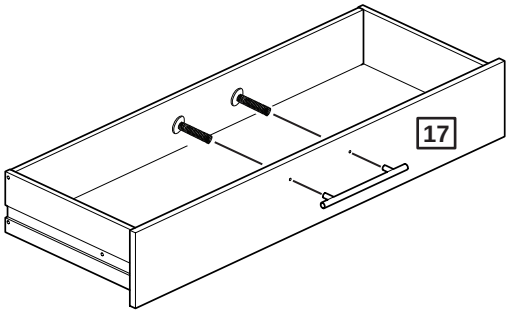



x 3

42

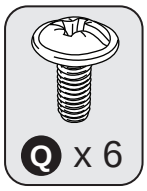

Fitting Ball Bearing Runners
www.youtube.com/watch?v=yG4xtiJJeSg

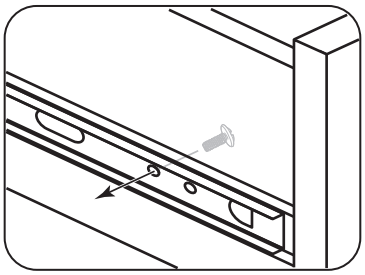

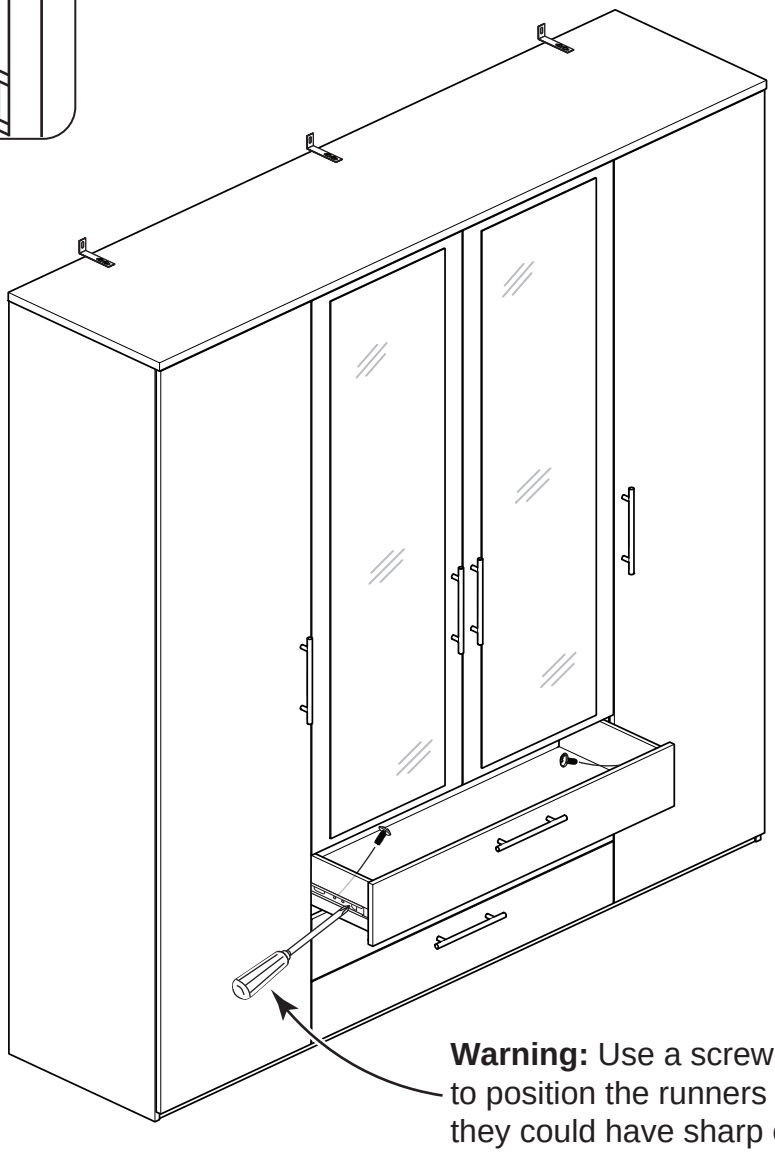


Warning: Use a screwdriver to position the runners as they could have sharp edges

Starting with the bottom Drawer and working up, fit the Drawers by sliding both its Runners forward and locate the Drawer Sides between them, lining up the holes in the Drawer Sides with the 2nd 'threaded' holes in the Runners.

Working from the inside of the Drawer, insert 2 Screws through the Drawer Sides and out into the 2nd threaded hole in the Runner.

Note: Do not overtighten the Screws.
If they catch on the runner you may need to loosen them slightly.

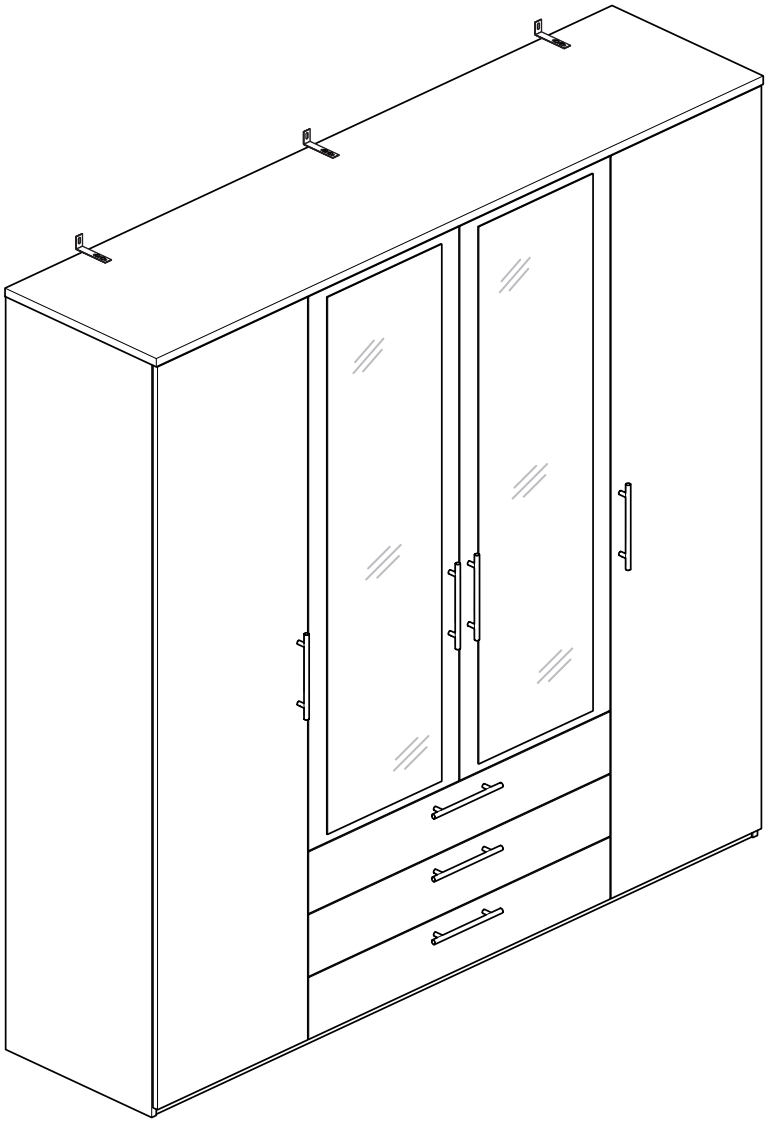

Assembly is complete

Please remove any protective film from panel edges and surfaces and clean the mirrors