General Instructions

01PBS0306-V1

3x6 Palletised Bike Store

BEFORE YOU START PLEASE READ INSTRUCTIONS CAREFULLY

- Check the pack and make sure you have all the parts listed.
- When you are ready to start, make sure you have the right tools at hand (not supplied) including a Phillips screwdriver, Stanley knife, wood saw, step ladder and drill with 2mm bit.
- Ensure there is plenty of space and a clean dry area for assembly.

TIMBER

As with all natural materials, timber can be affected during various weather conditions. For the duration of heavy or extended periods of rain, swelling of the wood panels may occur. Warping of the wood may also occur during excessive dry spells due to an interior moisture loss. Unfortunately, these processes cannot be avoided but can be helped. It is suggested that the outdoor building is sprayed with water during extended periods of warm sunshine and sheltered as much as possible during rain or snow.

Our buildings are pre treated with a water based treatment**; this only helps to protect the product during transit and for upto 3 months against mould. To validate your guarantee and ensure longevity of the product, it is ESSENTIAL the building is treated with a wood preserver within the first three months of assembly and thereafter in accordance with the manufactures recommendations. Care must be taken to ensure the product is placed on a suitable base.

BUILDING A BASE

When thinking about where the building and base is going to be constructed: Ensure that there will be access to all sides for maintenance work and annual treatment.

Ensure the base is level and is built on firm ground, to prevent distortion. Refer to diagrams for the base dimensions, The base should be slightly smaller than the external measurement of the building, i.e. The cladding should overlap the base, creating a run off for water. It is also recommended that the floor be at least 25mm above the surrounding ground level to avoid flooding.

TYPES OF BASE

- Concrete 75mm laid on top of 75mm hard-core.
- Slabs laid on 50mm of sharp sand.

Whilst all products manufactured are made to the highest standards of Safety and in the case of childrens products independently tested to EN71 level, we cannot accept responsibility for your safety whilst erecting or using this product.

Refer to the instructions pages for you specific product code



All building's should be erected by two adults



Winter = High Moisture = Expansion
Summer = Low Moisture = Contraction



2mm Drill bit

For ease of assembly, you **MUST** pilot drill all screw holes and ensure all screw



CAUTION
Every effort has been made during the manufacturing process to eliminate the prospect of splinters on rough surfaces of the timber. You are strongly advised to wear gloves when working with or handling rough sawn timer.

****Protim Aquatan T5 (621)****

Protim Aquatan* T5 is a coloured, water-based concentrate which is diluted with water to make a solution for application to unseasoned timber. **Protim Aquatan T5** treated wood is not protected against wood destroying insects or wood decaying fungi. Further preservative treatment is required to protect against these organisms.

Contains: Boric Acid, Sodium Hydroxide 32% solution, aqueous mixture of sodium dioctyl sulphosuccinate & alcohols: 2,4,6-Trichlorophenol.

Hazard Statements:

H315: Causes skin irritation.
H319: Causes serious eye irritation.
H412: Harmful to aquatic life.

Wear gloves when handling freshly treated wood.
Avoid breathing dust when cutting treated or untreated wood.
Dispose of off-cuts responsibly – **do not burn**.
IF SKIN IRRITATION OCCURS: Get medical advice/attention.
IF IN EYES: Rinse cautiously with water for several minuets. Remove contact lenses, and continue rinsing. If the irritation persists: Get medical advice/attention.
DO NOT INGEST.

For assistance please contact customer care on: 01636 880514

Mercia Garden Products Limited,
Sutton On Trent,
Newark,
Nottinghamshire,
NG23 6QN

www.merciagardenproducts.co.uk

01PBS0306-V1


Please retain product label and instructions for future reference


Overall Dimensions:
Length = 1952mm
Width = 979mm
Height = 1230mm

Base Dimensions:
Length = 1900mm
Width = 920mm

Before assembly please make sure you have a suitable base ready to erect your building

MADE IN GREAT BRITAIN

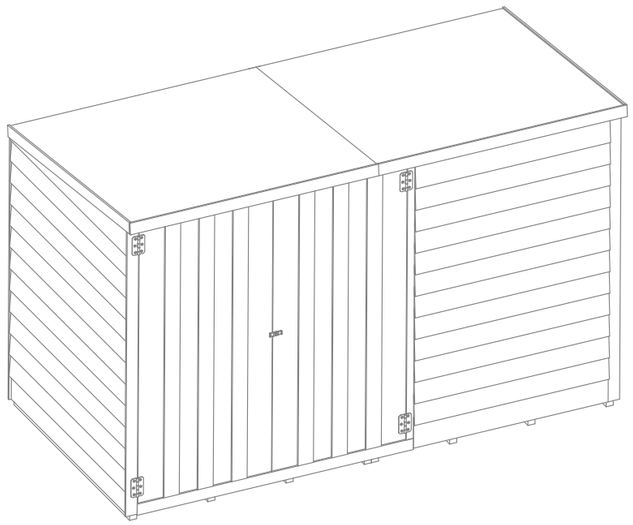

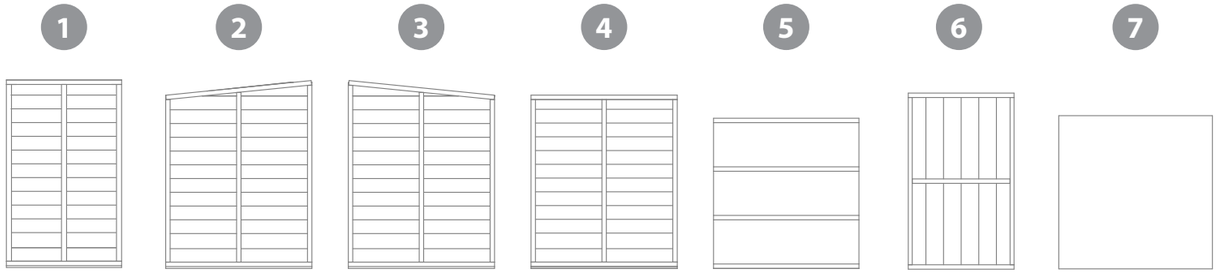

Front Panel **Right Gable** **Left Gable** **Back Panel** **Floor QTY 2** **Door QTY 2** **Roof QTY 2**

8 **Roof Support: 28x28x871mm**

9 **Door Frame: 28x28x1085mm QTY 2**

10 **Door Side Frame: 28x28x1118mm**

11 **Eaves Frame: 28x28x969mm QTY 2**

12 **Trim: 45x7x1178mm QTY 11**

13 **Door Side Trim: 28x7x1118mm**

14 

Butt Hinge QTY 4


15 

Turn Button QTY 3

16 

"L" Bracket

Nail Bag

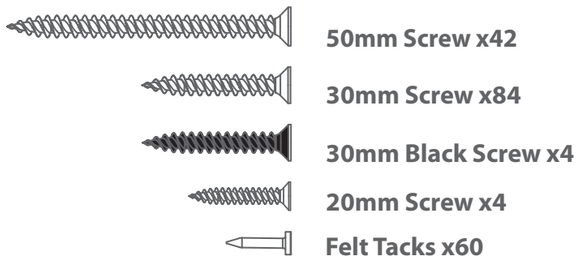

50mm Screw x42

30mm Screw x84


30mm Black Screw x4

20mm Screw x4

Felt Tacks x60

Pre Assembly

Before assembling remove the transportation blocks from the bottom of each panel.

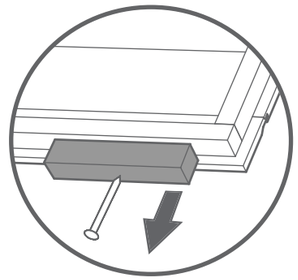


Step 1


Place the two floors onto a firm and level base upside down.

Secure the floors together using 3x50mm screws, fixing in an alternating pattern as shown in the illustration.

Once fitted, turn the floor assembly the right way up.

Ensure the base has suitable drainage & is free from areas where standing water can collect.

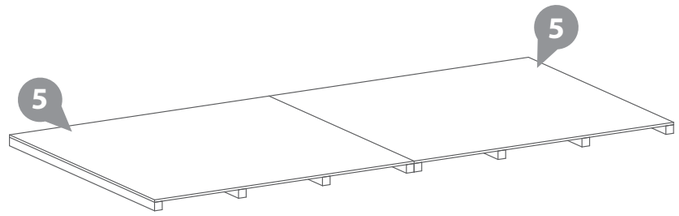

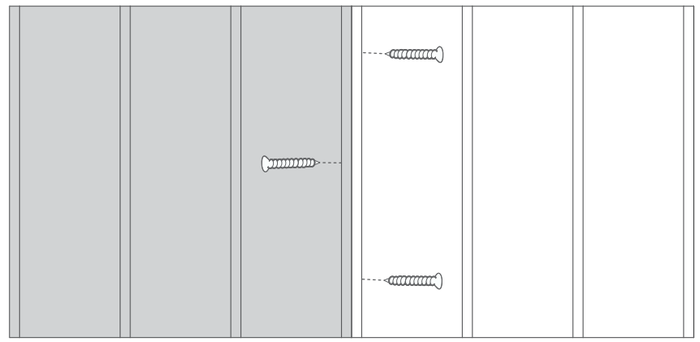

3x50mm Screws



Pre drill hole





Step 2

a Place the back panels and the right gable onto the floor and secure in place using 6x50mm screws.

b Do ***not*** secure to the floor until the roof is fixed.

6x50mm Screws



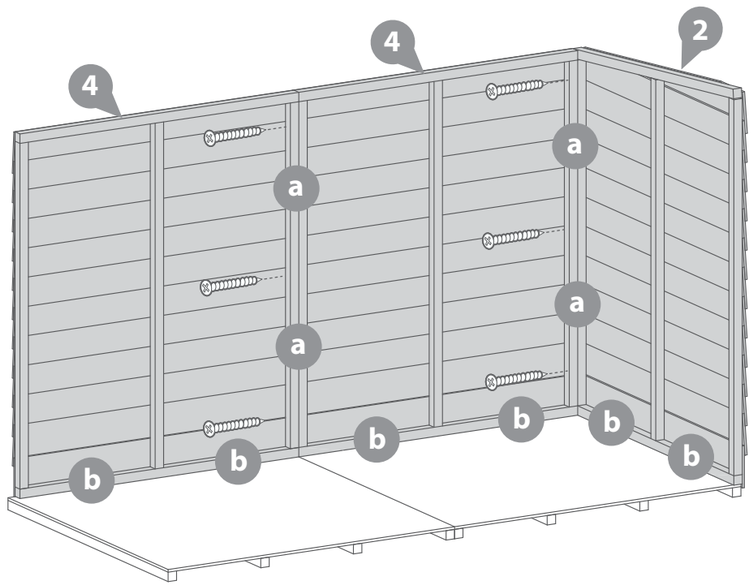


Step 3


a Following the same method outlined in step 2, place the front panel and the left gable onto the floor and secure in place using 6x50mm screws.

b Do ***not*** secure to the floor until the roof is fixed.

6x50mm Screws

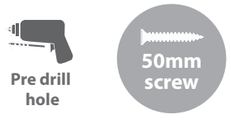

****The door opening can be positioned at either side of the building depending on your needs and preferences.***

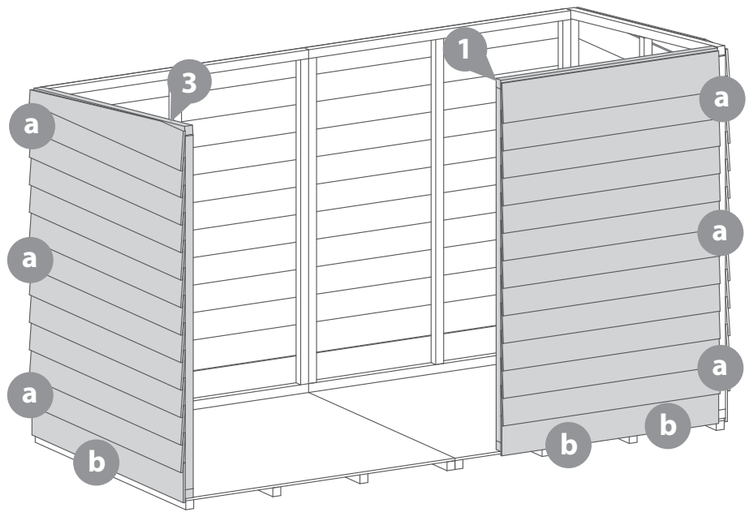

Step 4


Place the first door frame inbetween the gable and the front panel and secure in place using 3x50mm screws.

****Ensure to screw through the framing into the floor bearers***

3x50mm Screws



****The door opening can be positioned at either side of the building depending on your needs and preferences.***

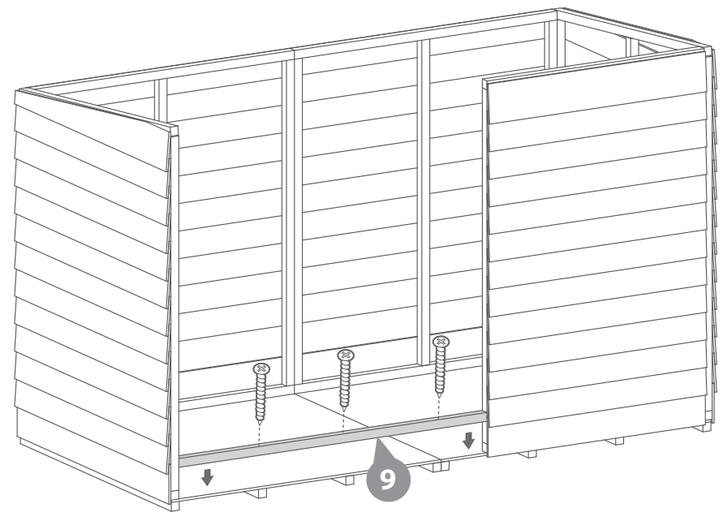


Step 5


Attach the door side rail to the front panel with 3x50mm screws.

****Ensure the door side rail sits on top of the bottom framing.***

3x50mm Screws

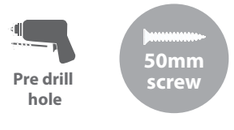

****The door opening can be positioned at either side of the building depending on your needs and preferences.***

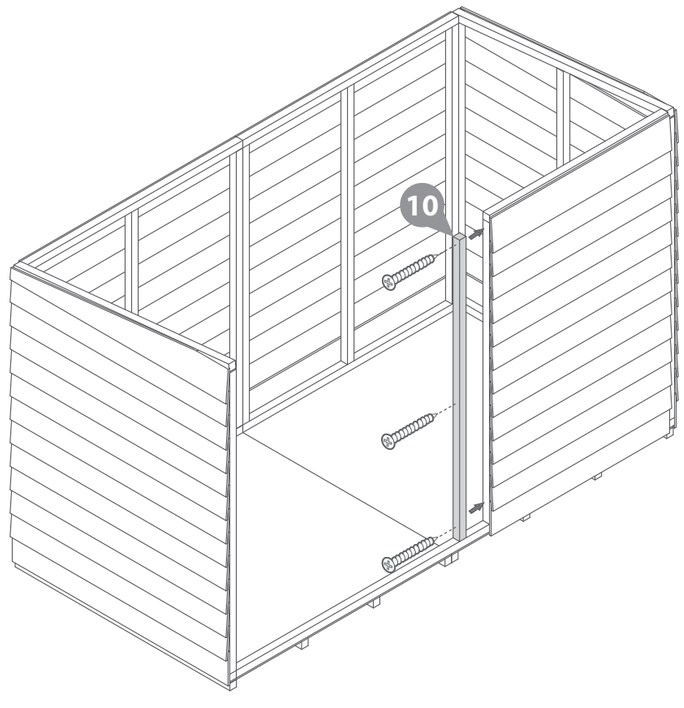



Step 6

a Using 2x20mm screws fix the "L" bracket to one end of the remaing door frame.

b Place the assembled rail onto the side door rail and secure through the top using 1x50mm screw and to the gable (***through the "L" bracket***) using 2x30mm screws.

2x20mm Screws
2x30mm Screws
1x50mm Screws

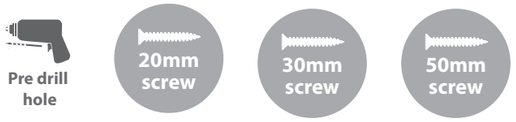

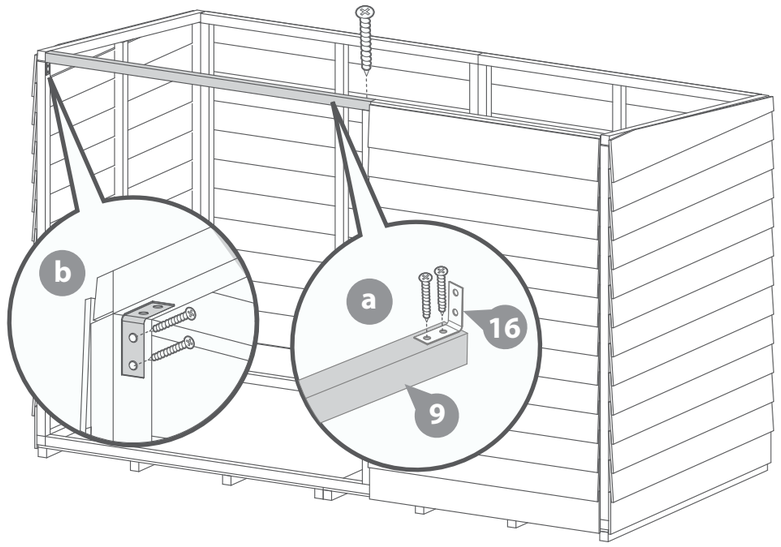


Step 8


Fix the large trims to the (***gable***) side and the bottom of the door opening as shown in the illustration, securing into place using 3x30mm screws per trim.

Measure and cut trims to fit.

attach the small door side trim to the door side rail with 3x30mm screws.

9x30mm Screws

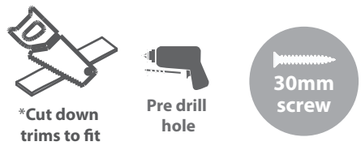


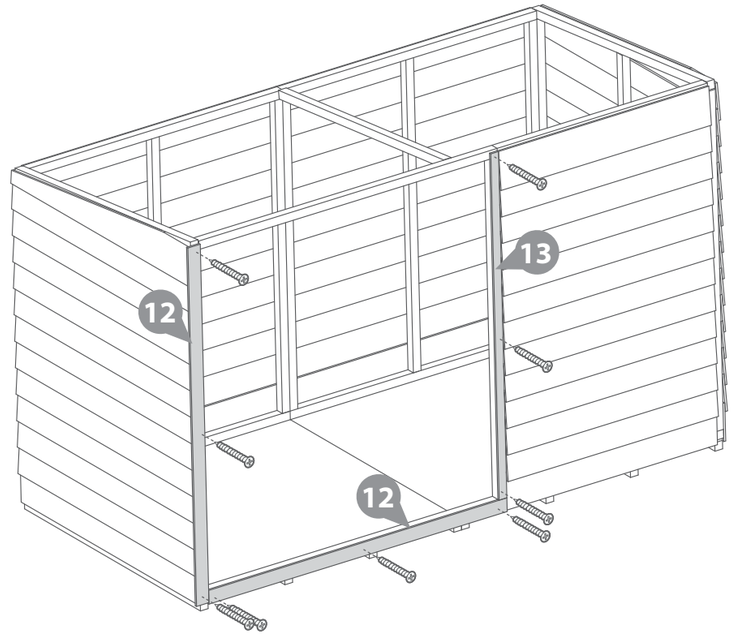


Step 7

Place the roof support bar centrally in the building and secure into place with 2x50mm screws, fixing through the top rail and the back panel.

2x50mm Screws



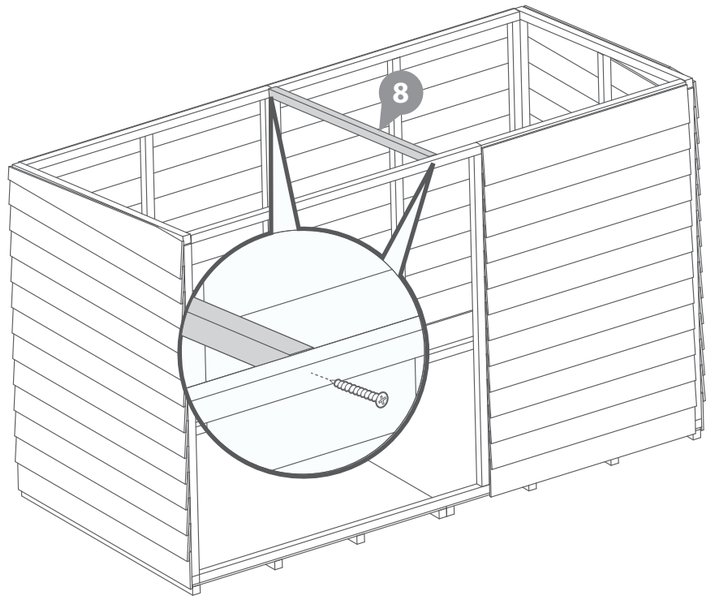


Step 9

Attached 2x butt hinges to each door, securing at the edge with 3x30mm screws per hinge.

Align each door into the door gap and secure at either side using using 3x30mm screws per hinge.

24x30mm Screws



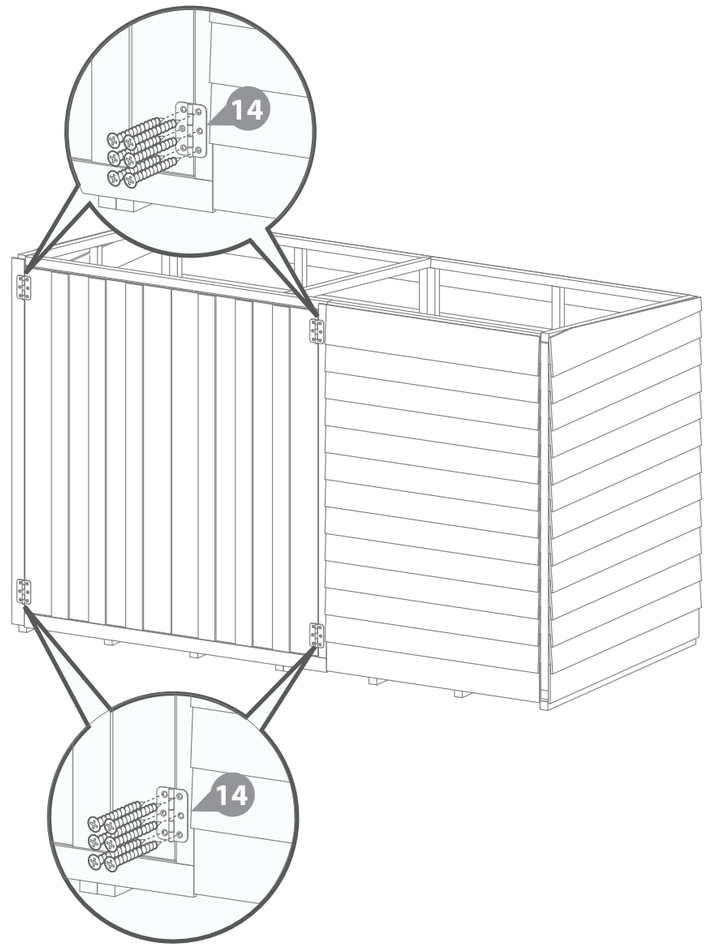



Step 10

a Secure 1x eaves frame to each roof sheet, flush to the edge, using 3x30mm screws.

b Rest the assembled roof sections on top of the building and fix into place with 8x30mm screws per roof.

22x30mm Screws

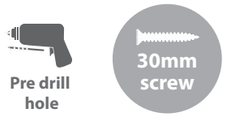

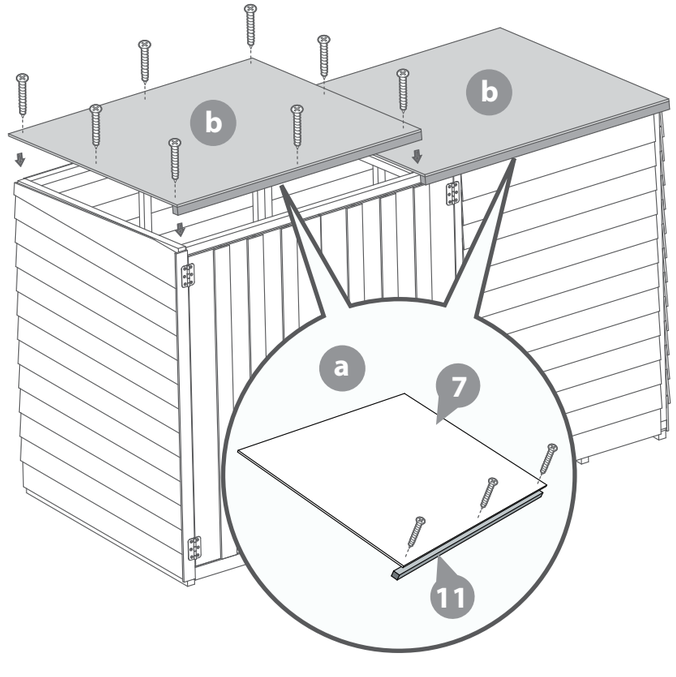



Step 11

b Once the roof is fixed secure the the building to the floor with 15x50mm screws.

Ensure to screw through the framing into the floor bearers.

15x50mm Screws

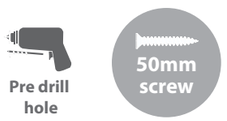

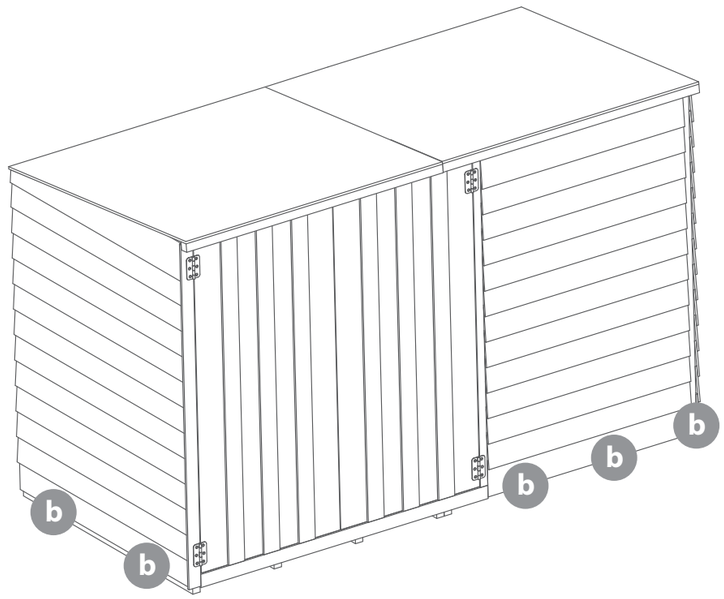

Step 12


Cut the felt into 2 sheets and lay onto the roof.


Ensure there is approximately 50mm of overhang around the building.


Fix into place using 60x felt tacks at 100mm intervals.


60x Felt Tacks

***Felt Size: 2050mm**

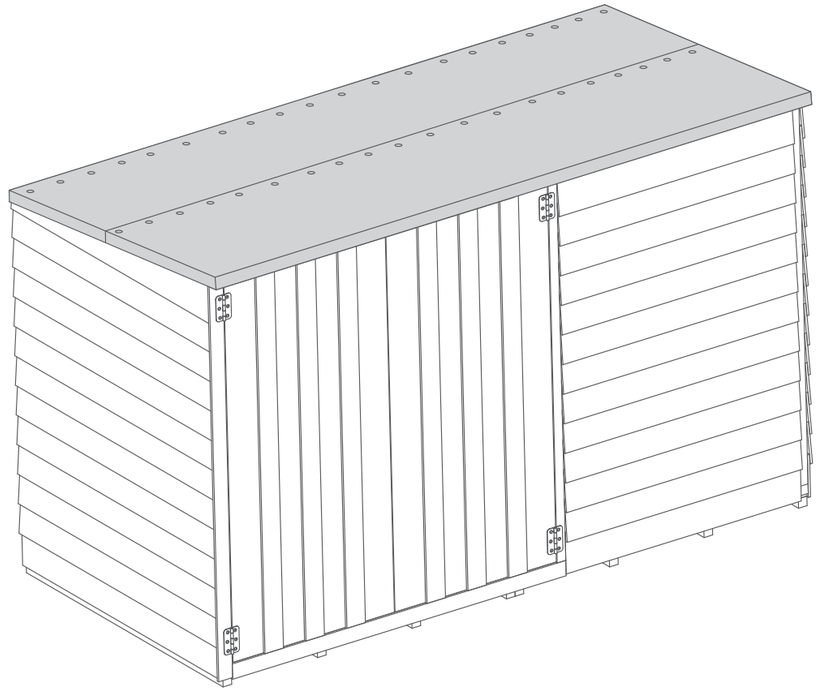

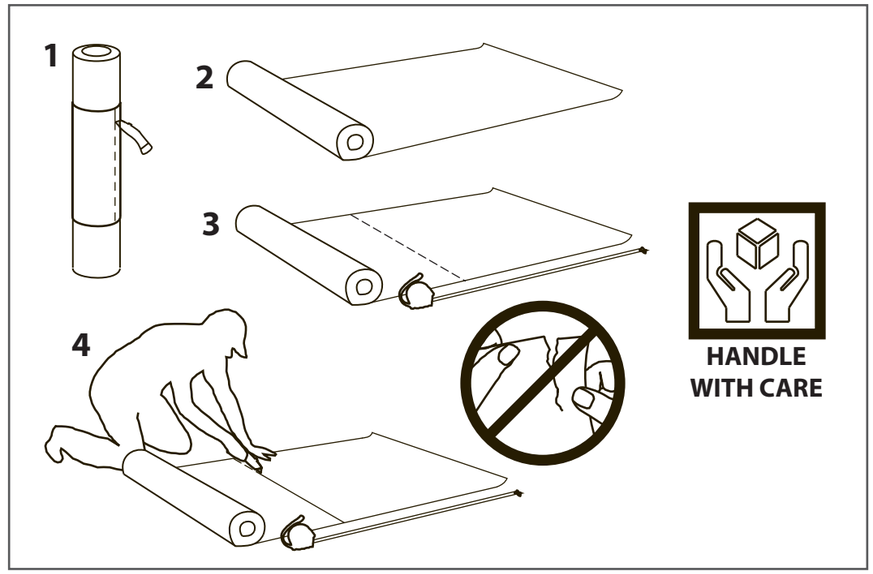

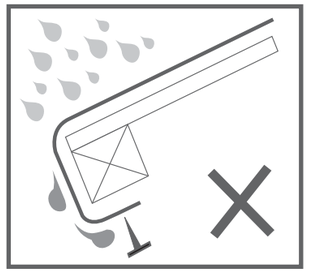

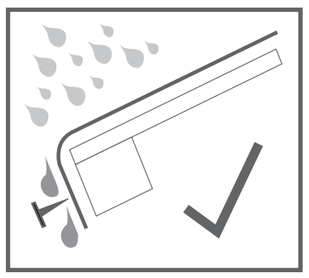



Step 13

Fix the trims to each corner of the building and across the joint at the back, securing each trim into place with 3x30mm screws

Measure and cut trims to fit.

12x30mm Screws

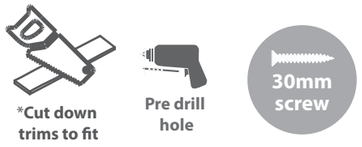

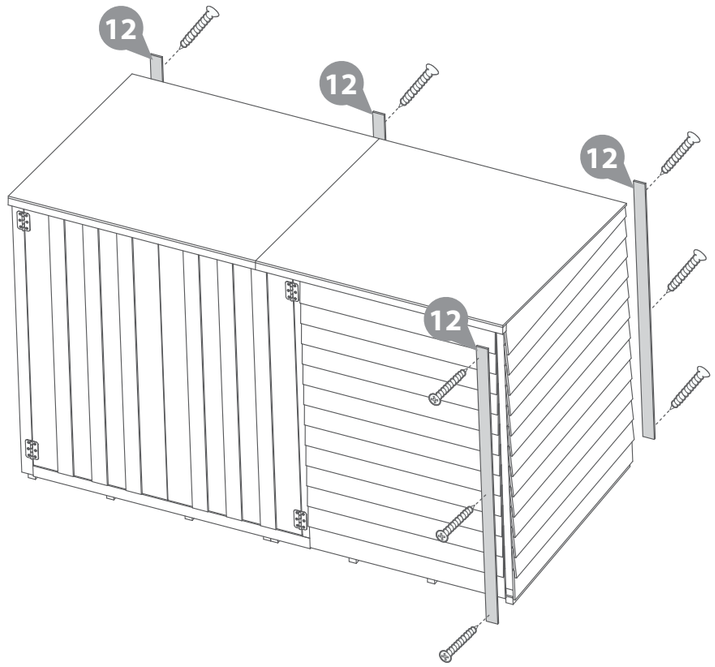



Step 14

Fix the remaining trims around the top of the building, make sure to trap the felt inbetween. Secure each trim in place with 3x30mm screws.

Measure and cut trims to fit.

12x30mm Screws

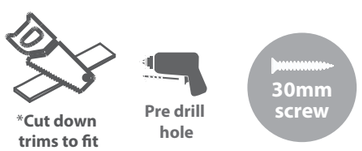

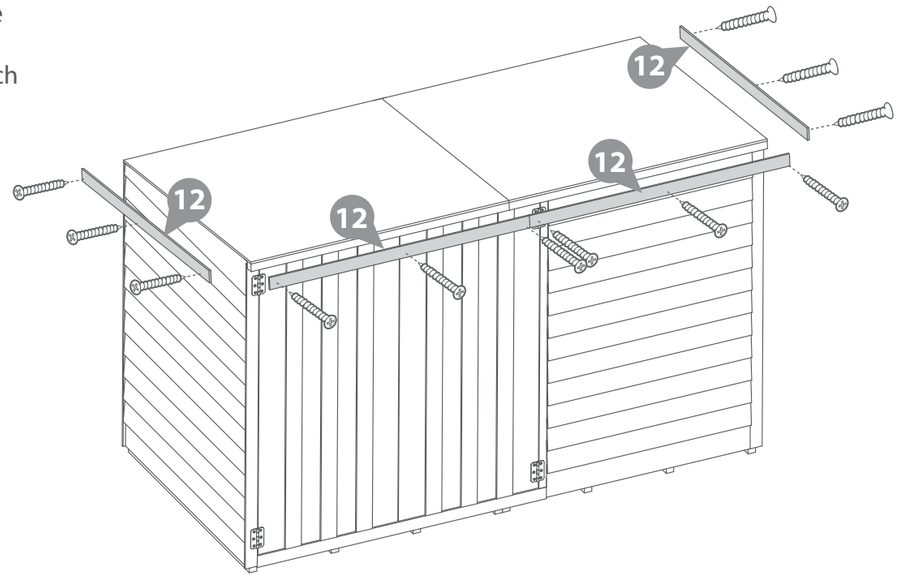

Step 14

a Attach a turn button to the top and bottom of one door (***depending on which door you wish to be the locking door***) using 1x30mm black screw per turn button.

b Fix the last turn button to the front of the "locking door" with 1x30mm black screw.

3x30mm Black Screws

