General Instructions

ESDXL21PT001

LOG STORE

BEFORE YOU START PLEASE READ INSTRUCTIONS CAREFULLY

- Check the pack and make sure you have all the parts listed.
- When you are ready to start, make sure you have the right tools at hand (not supplied) including a Phillips screwdriver, Stanley knife, wood saw, step ladder and drill with 2mm bit.
- Ensure there is plenty of space and a clean dry area for assembly.

TIMBER

As with all natural materials, timber can be affected during various weather conditions. For the duration of heavy or extended periods of rain, swelling of the wood panels may occur. Warping of the wood may also occur during excessive dry spells due to an interior moisture loss. Unfortunately, these processes cannot be avoided but can be helped. It is suggested that the outdoor building is sprayed with water during extended periods of warm sunshine and sheltered as much as possible during rain or snow.

Our buildings are pre treated with a water based treatment**; this only helps to protect the product during transit and for upto 3 months against mould. To validate your guarantee and ensure longevity of the product, it is ESSENTIAL the building is treated with a wood preserver within the first three months of assembly and thereafter in accordance with the manufactures recommendations. Care must be taken to ensure the product is placed on a suitable base.

BUILDING A BASE

When thinking about where the building and base is going to be constructed: Ensure that there will be access to all sides for maintenance work and annual treatment.

Ensure the base is level and is built on firm ground, to prevent distortion. Refer to diagrams for the base dimensions, The base should be slightly smaller than the external measurement of the building, i.e. The cladding should overlap the base, creating a run off for water. It is also recommended that the floor be at least 25mm above the surrounding ground level to avoid flooding.

TYPES OF BASE

- Concrete 75mm laid on top of 75mm hard-core.
- Slabs laid on 50mm of sharp sand.

Whilst all products manufactured are made to the highest standards of Safety and in the case of childrens products independently tested to EN71 level, we cannot accept responsibility for your safety whilst erecting or using this product.

Refer to the instructions pages for you specific product code



All building's should be erected by two adults



Winter = High Moisture = Expansion
Summer = Low Moisture = Contraction



2mm Drill bit

For ease of assembly, you **MUST** pilot drill all screw holes and ensure all screw heads are countersunk.



CAUTION
Every effort has been made during the manufacturing process to eliminate the prospect of splinters on rough surfaces of the timber. You are strongly advised to wear gloves when working with or handling rough sawn timber.

****Protim Aquatan T5 (621)****

Your building has been treated with **Aquatan**.

Aquatan is a water-based concentrate which is diluted with water, the building as been treated by the correct application of Aquatan solution and then allowed to dry.

Aquatan is a decorative finish to colour the wood, which is applied industrially to timber fence panels and garden buildings.

Aquatan *undiluted* contains: boric acid, sodium hydroxide 32% solution, aqueos mixture of sodium dioctyl sulphosuccinat and alcohols: 2, 4, 6-trichlorophenol.

For assistance please contact customer care on: 01636 880514

Mercia Garden Products Limited,
Sutton On Trent,
Newark,
Nottinghamshire,
NG23 6QN

www.merciagardenproducts.co.uk

ESDXL21PT001

Overall Dimensions:


Length = 818mm
Width = 1053mm
Height = 1262mm

Base Dimensions:

Length = 757mm
Width = 943mm

Before assembly please make sure you have a suitable base ready to erect your building

MADE IN GREAT BRITAIN

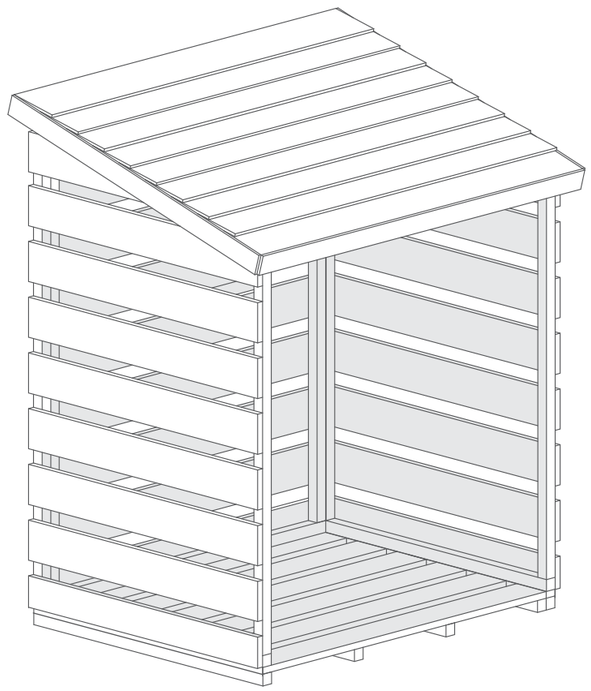


Fixing Kit

6 **Front Fascia - 7x50x1039mm Qty 1**

7 **Side Fascia - 7x50x828mm Qty 2**

Nail Bag




50mm Screw x 23

30mm Screw x 14


Content

1

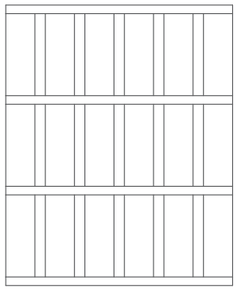


Floor Qty 1

2

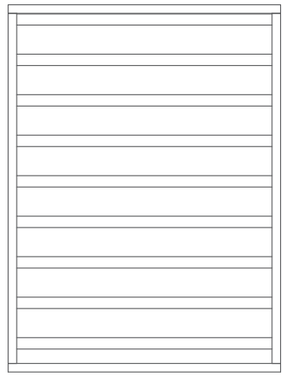


Back Panel Qty 1

3

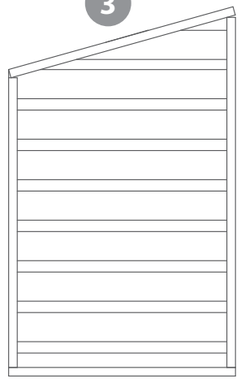

Left Gable Qty 1

4

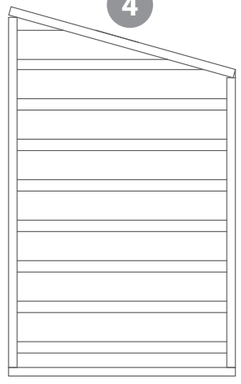

Right Gable Qty 1


5



Roof Qty 1


Step 1

Remove transportation blocks from the bottom of each panel before beginning assembly. Each Panel should have two blocks.

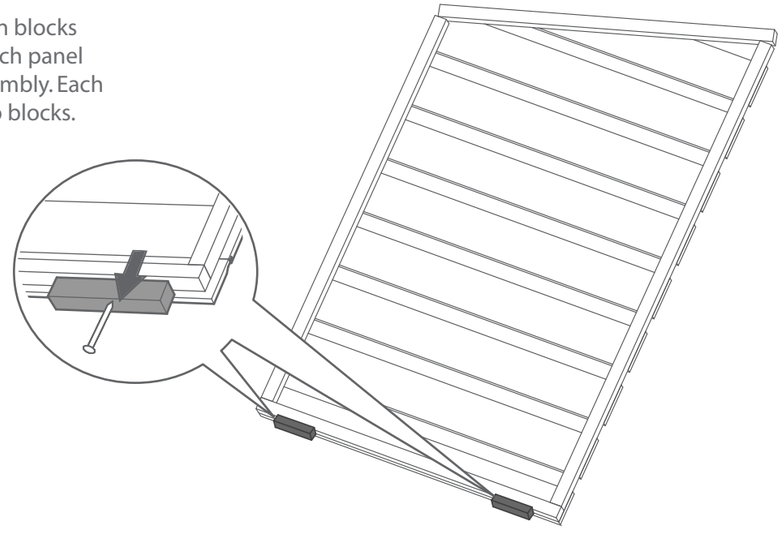

Step 2

Place the **floor** on a firm and level base, ensure base has suitable drainage free from areas where standing water can collect. (See front page on base requirements).

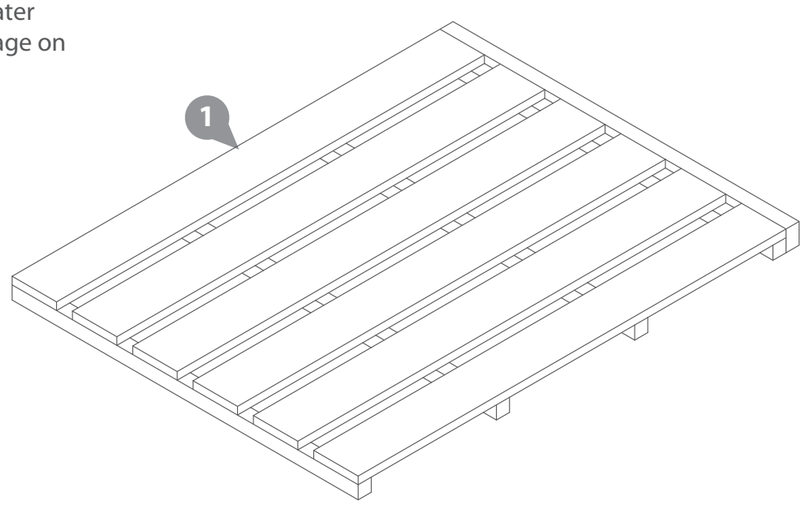


Step 3


Attach the right gable and a back panel together with 3x50mm screws.

DO NOT SECURE THE PRODUCT TO THE FLOOR UNTIL AFTER THE ROOF HAS BEEN FITTED.

a Fix the corners with 3 x 50mm screws as in the diagram.

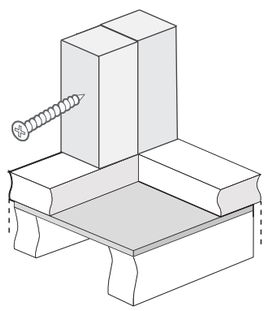

Position the panels so there are equal gaps between the floor and cladding

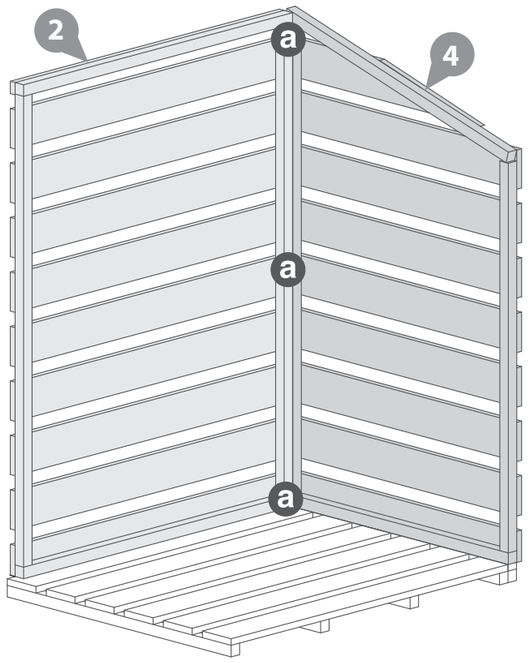


3 x 50mm screws

Step 4


Attach the left gable to the back panel with 50mm screws.

DO NOT SECURE THE BUILDING TO THE FLOOR UNTIL AFTER THE ROOF HAS BEEN FITTED.

a Fix the corners with 3 x 50mm screws as in the diagram.

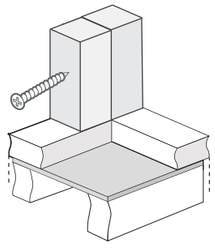


Position the panels so there are equal gaps between the floor and cladding

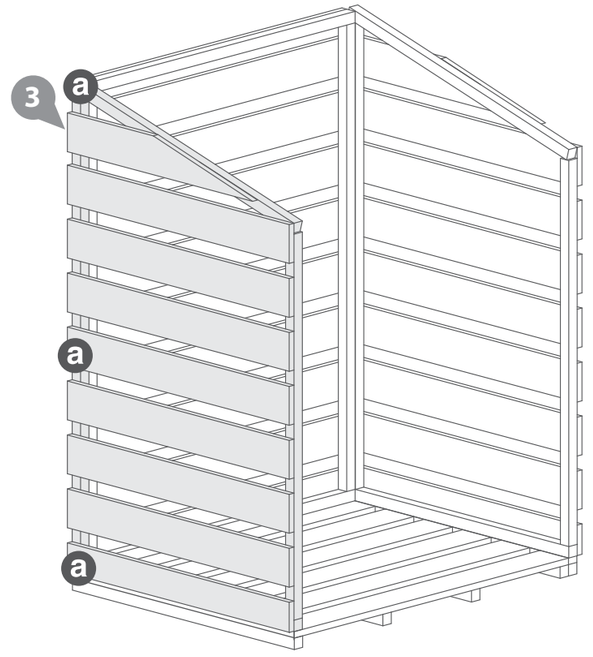

3 x 50mm screws

Step 5


Attach the roof ontop of the gables and fix through the framing on the side into the gable cladding using 50mm screws.

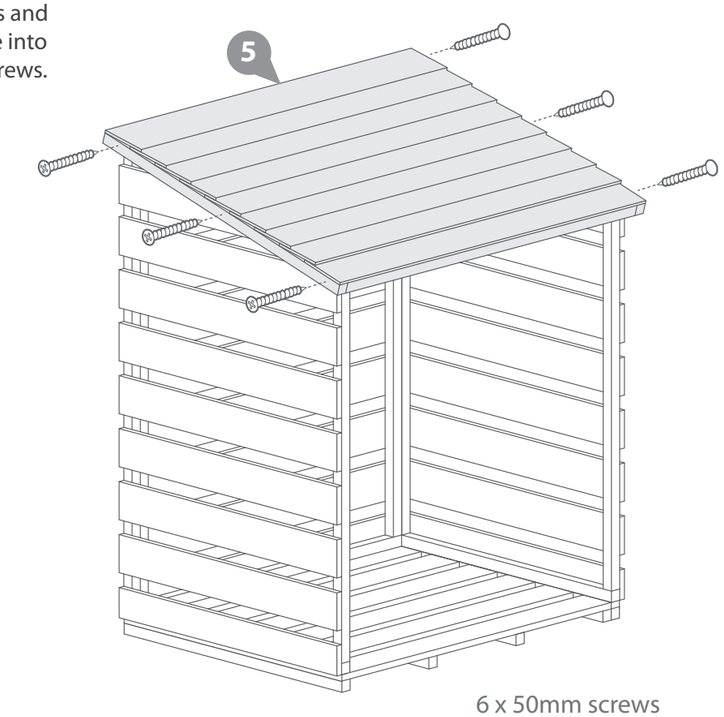

6 x 50mm screws


Step 6

Fix the panels to the floor using 50mm screws as shown in the illustration.

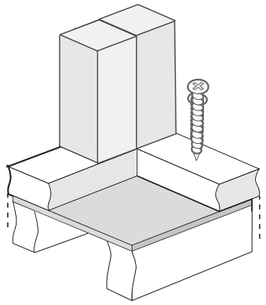

b Fix the panels to the floor with 3x50mm screws per panel as in the diagram.

Position the panels so there are equal gaps between the floor and cladding

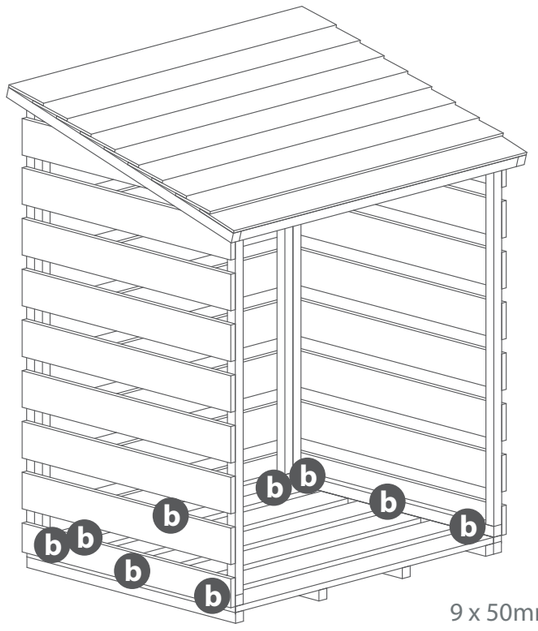


9 x 50mm screws

Step 7

Attach the front fascia to the edge of the roof using 3x30mm screws.

Attach the side fascias using 3x30mm screws each.

Make sure the screws go through the fascia and into framing.

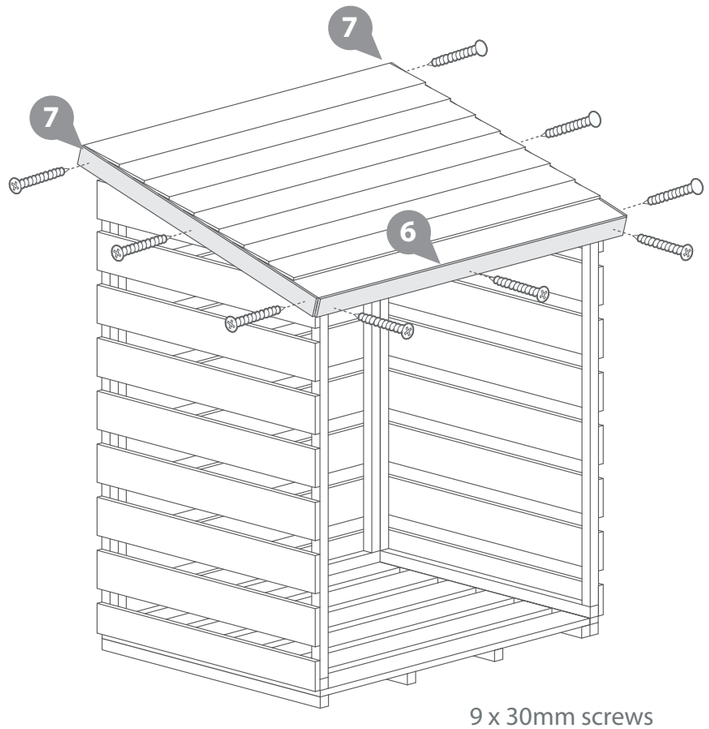

9 x 30mm screws