Wooden Pavilion

ESDXL21PT022

IMPORTANT!
RETAIN FOR FUTURE REFERENCE.
READ CAREFULLY.


Check all parts prior to assembly.

This building is pressure treated to ensure the longevity of all timber components and to protect against rot. This may leave a colour difference on some parts that will even out as the moisture content stabilises.

- Timber is a natural material. It will shrink and swell as a result of varying moisture content.
- Please keep all plastic bags and small parts away from children.
- The roof of this building is not a load bearing structure.
- This product must be built on a solid level base.

In line with your statutory rights, please check all parts prior to assembly, as assembly of damaged parts may be deemed to be acceptance and this may affect the remedies you are entitled to. If the product is not constructed in accordance with the instructions, or is altered in anyway (e.g. painted) the manufacturer cannot be held liable for any resulting damage.

FIXING PACK

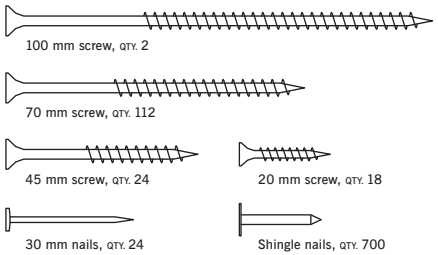


REQUIRED TOOLS (not supplied):



IMPORTANT:
Assembly of this Wooden Pavilion requires a minimum of three adults.


IMPORTANT:
Must pre-drill (Ø 3–4 mm) for each screw used.

PARTS LIST

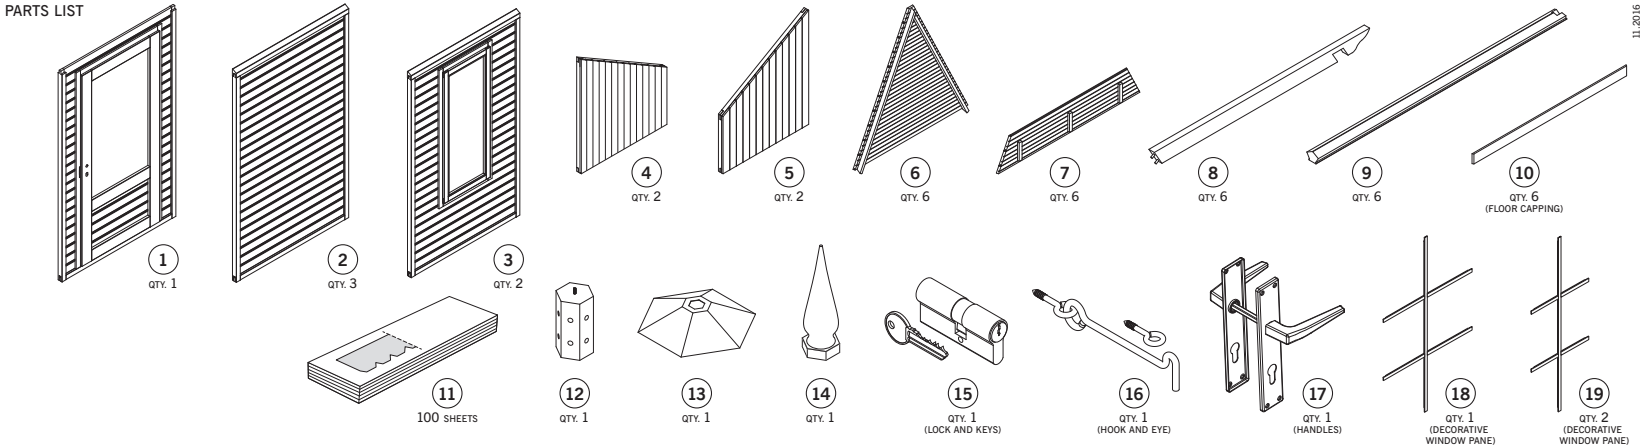


11.2016

A

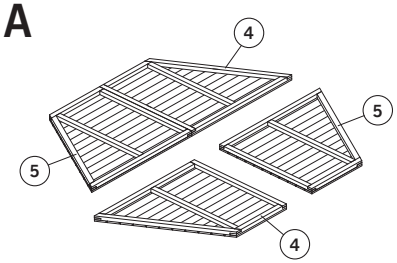


Fix the floors to each other using 2 × 70 mm screws for each joint before turning the completed base over.

B

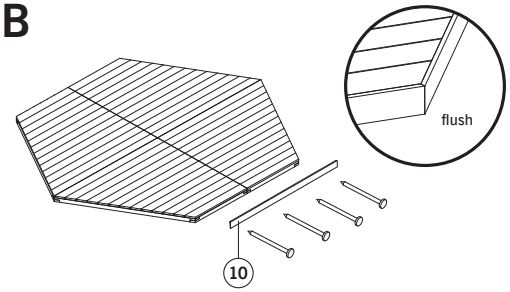


Position and fix each of the floor capping pieces around the edge of the base using 4 × 30 mm nails for each.

C

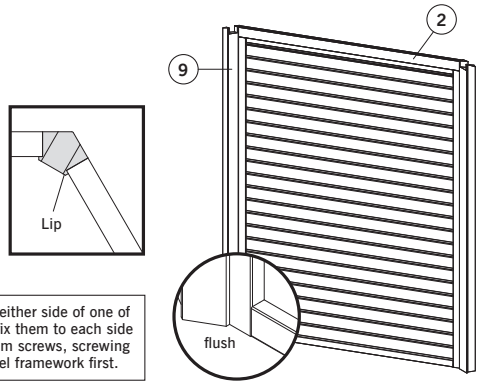


Fix the posts to either side of one of the panels and fix them to each side using 4 × 70 mm screws, screwing through the panel framework first.

D

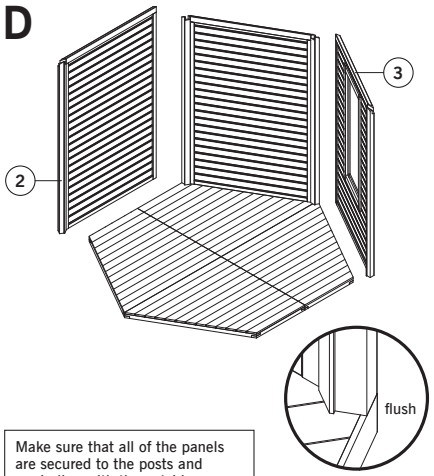


Make sure that all of the panels are secured to the posts and are in line with the outside of the base as shown.
Do not fix to the floor at this point!

E

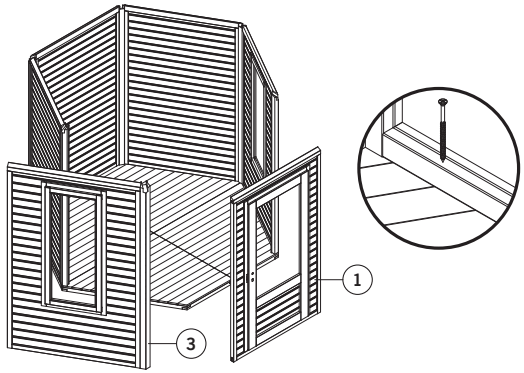


Check that all of the sides are flush with the base before securing each panel to the base using 4 × 70 mm screws, screwing down through the framing. Use 2 × 70 mm screws to secure the door panel down to the base either side of the door.
After fixing the handles in a later step (**L**), further secure the door panel to the floor using 2 × 100 mm screws.

F

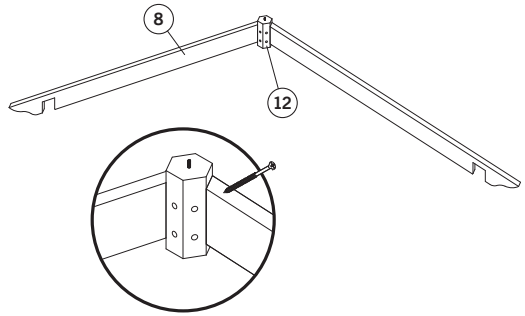

Fix a rafter to the finial base and make sure that everything is tight. Secure the rafter using a 70 mm screw, screwing at an angle down through the rafter.
Complete for the opposite side and position the assembly onto the pavilion so that the rafters sit into the top of the posts.

G

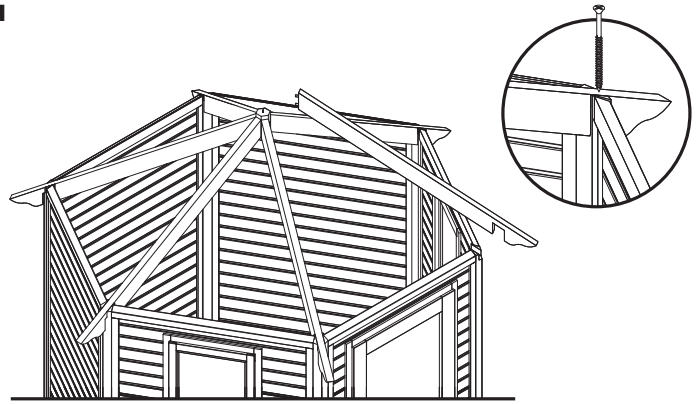


Fix the remaining rafters to the finial base the same as step **F**.
Fix each rafter to the post by screwing down through the rafter (70 mm screw for each), into the post.

ATTENTION!
Take care when working at height and make sure ladders are anchored.


ATTENTION!
Make sure that the rafters are held by another person whilst fixing to avoid injury.

H

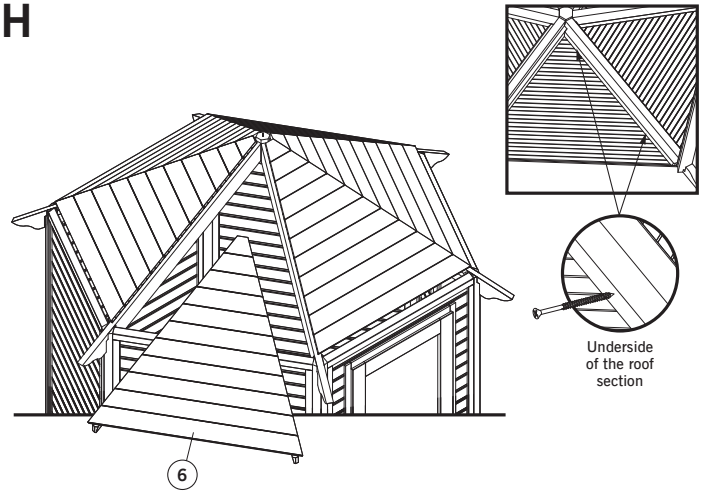

Place the roof sections on top of the rafters so that they sit on top of the rafters equally on each side. From underneath the roof section fix the roof to the rafters using 2 × 70 mm screws for each side, screwing through the batten first.


I

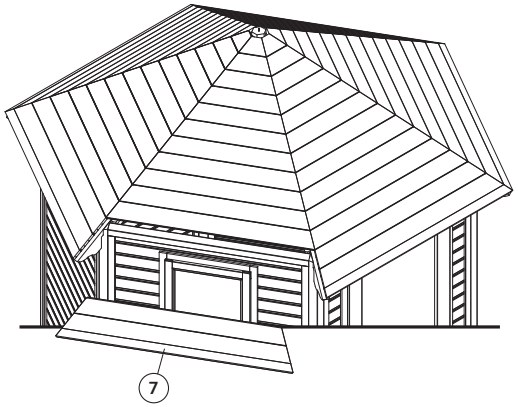

Place the remaining board pieces at the end of each roof segment.
Make sure that the boards are lined up and slotted tightly into the roof before fixing each piece in place with 2 × 45 mm screws for each end screwing into the rafters.


J

ATTENTION!
Please take care when cutting the shingles.

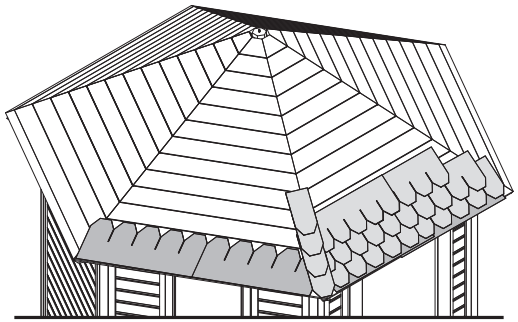


Position and fix the bottom layer of the shingles so that the square edge is in line with the roof and fasten into place using the nails provided.
In overlapping lines continue covering the pavilion.
To finish off the joins between the different roof sections you will need to cut some individual shingles, and again working upward to the centre, overlap each tile.

K

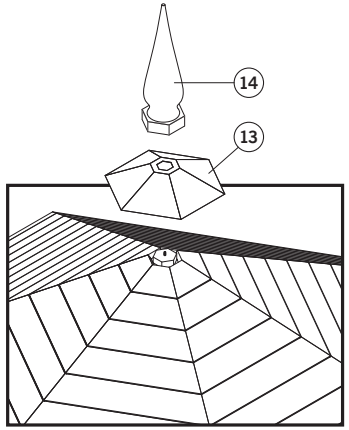

When all of the roof is completely shingled.
Place the metal cap over the finial base and screw the finial top into position over the top.

L

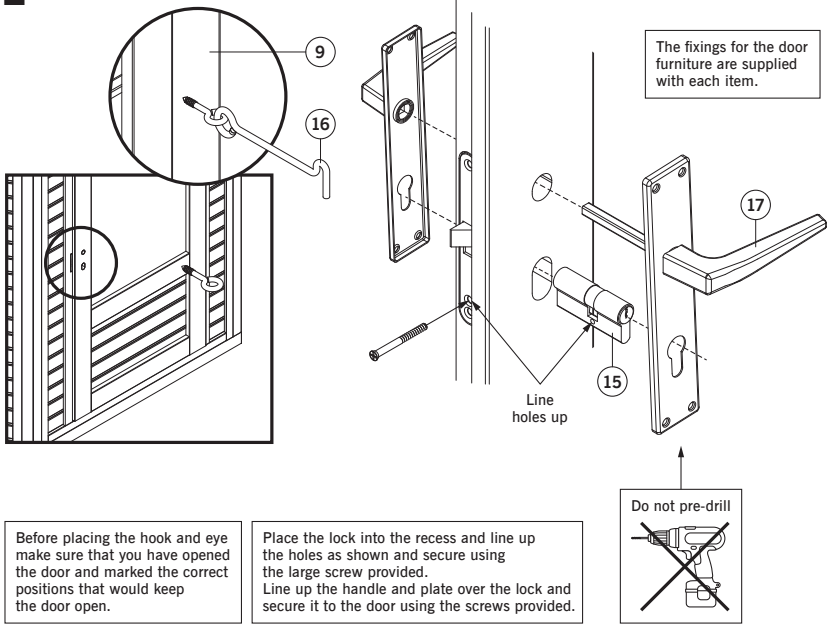


The fixings for the door furniture are supplied with each item.

Before placing the hook and eye make sure that you have opened the door and marked the correct positions that would keep the door open.

Place the lock into the recess and line up the holes as shown and secure using the large screw provided.
Line up the handle and plate over the lock and secure it to the door using the screws provided.

M

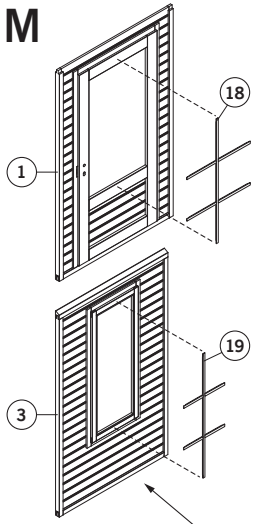

Fix the decorative window pane using 6 × 20 mm screws for each window.

BIOCIDAL PRODUCT REGULATION (EU 528/2012) ARTICLE 58 INFORMATION:
This article contains biocidal products to give protection against wood destroying insect and wood rotting Fungai.
This article contains timber treated with Tanalith E 3475, incorporating biocidal products to give protection against wood destroying insects & wood rotting fungi.
Contains: Copper carbonate, Tebuconazole and Propiconazole.
Wear gloves when handling freshly treated wood. Avoid breathing dust when cutting treated or untreated wood. Dispose of off-cuts responsibly – do not burn.

MAINTENANCE.
Regularly check that all fixings are secure.
Regularly check structural parts for damage.
Regularly check benches are free of splinters.