General Instructions

Please retain product label and instructions for future reference

06LOG004-V1 & 06LOG004VR-V1
06LOG004-V1: 19mm log cabin 2.5x2.7m, single door with single (glass) glazing.
06LOG004VR-V1: 19mm log cabin 2.5x2.7m, with veranda and single door with single (glass) glazing.

BEFORE YOU START PLEASE READ INSTRUCTIONS CAREFULLY

- Check the pack and make sure you have all the parts listed.
- When you are ready to start, make sure you have the right tools at hand (not supplied) including a Phillips screwdriver, Stanley knife, wood saw, step ladder and drill with 2mm bit.
- Ensure there is plenty of space and a clean dry area for assembly.

TIMBER

As with all natural materials, timber can be affected during various weather conditions. For the duration of heavy or extended periods of rain, swelling of the wood panels may occur. Warping of the wood may also occur during excessive dry spells due to an interior moisture loss. Unfortunately, these processes cannot be avoided but can be helped. It is suggested that the outdoor building is sprayed with water during extended periods of warm sunshine and sheltered as much as possible during rain or snow.

Our buildings are pre treated with a water based treatment**; this only helps to protect the product during transit and for upto 3 months against mould. To validate your guarantee and ensure longevity of the product, it is ESSENTIAL the building is treated with a wood preserver within the first three months of assembly and thereafter in accordance with the manufactures recommendations. Care must be taken to ensure the product is placed on a suitable base.

BUILDING A BASE

When thinking about where the building and base is going to be constructed: Ensure that there will be access to all sides for maintenance work and annual treatment.

Ensure the base is level and is built on firm ground, to prevent distortion. Refer to diagrams for the base dimensions, The base should be slightly smaller than the external measurement of the building, i.e. The cladding should overlap the base, creating a run off for water. It is also recommended that the floor be at least 25mm above the surrounding ground level to avoid flooding.

TYPES OF BASE

- Concrete 75mm laid on top of 75mm hard-core.
- Slabs laid on 50mm of sharp sand.

Whilst all products manufactured are made to the highest standards of Safety and in the case of childrens products independently tested to EN71 level, we cannot accept responsibility for your safety whilst erecting or using this product.

Refer to the instructions pages for you specific product code



All building's should be erected by two adults



Winter = High Moisture = Expansion
Summer = Low Moisture = Contraction



2mm Drill bit

For ease of assembly, you **MUST** pilot drill all screw holes and ensure all screw heads are countersunk.



CAUTION
Every effort has been made during the manufacturing process to eliminate the prospect of splinters on rough surfaces of the timber. You are strongly advised to wear gloves when working with or handling rough sawn timber.



For ease of assembly use a rubber mallet to fit the log boards. Do **NOT** use a heavy hammer.



Ensure to measure and check before cutting boards.



It is advisable to use a circular saw when cutting roof and floor boards.

For assistance please contact customer care on: 01636 880514

Mercia Garden Products Limited,
Sutton On Trent,
Newark,
Nottinghamshire,
NG23 6QN

www.merciagardenproducts.co.uk

06LOG004-V1 & 06LOG004VR-V1


Please retain product label and instructions for future reference

Overall Dimensions:
Width = 2615mm
Depth = 2432mm (Without veranda) 2918mm (With veranda)
Height = 2546mm


Base Dimensions:
Width = 2305mm
Depth = 1803mm (Without veranda) 2707mm (With veranda)

Before assembly please make sure you have a suitable base ready to erect your building

MADE IN GREAT BRITAIN

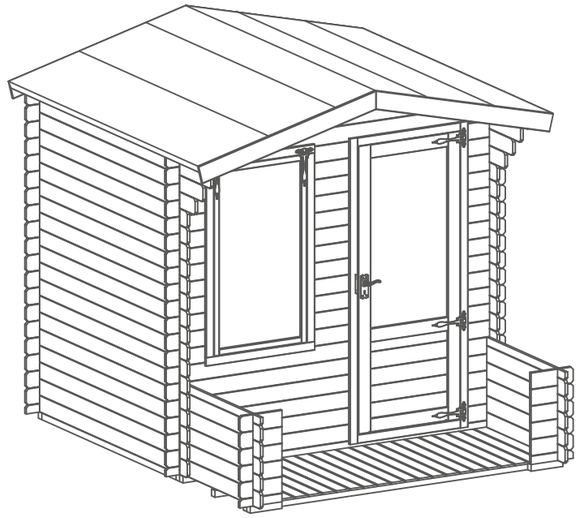

1 **2** **3**

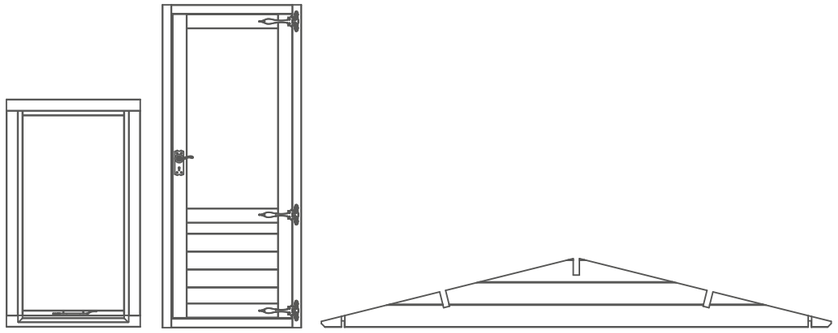

Window **Door** **004 Gable 2500mm QTY 2**

4
Starter Board (S1) - 66x19x2500mm QTY 2
LB19RT66-2500mm

5
Log Board (B) - 120x19x1370mm QTY 6
LB19-1370mm

6
Log Board (B) - 120x19x310mm QTY 30
LB19-310mm

7
Log Board (C) - 120x19x310mm QTY 12
LB19-310mm (No notch)

8
Log Board (A) - 120x19x2500mm QTY 20
LB19-2500mm

9
Log Board (A) - 120x19x2000mm QTY 32
LB19-2000mm

10
Log Board (WA) - 120x19x2100mm QTY 2
LB19-2100mm

11
Log Board (WA) - 120x19x2200mm QTY 2
LB19-2200mm

12
Log Board (WA) - 120x19x2300mm QTY 2
LB19-2300mm

13
Log Board (WAR) - 110x19x2400mm QTY 2
LB19RG110-2400mm

14
Roof Board - 121x16x1344mm QTY 44
MB16-1344mm

15
Floor Board - 121x16x2264mm QTY 17
MB16-2264mm

16
Bearer - 44x44x2304mm QTY 2
F4444-2304mm

17
Bearer - 44x44x1715mm QTY 9
F4444-1715mm

18
Fascia - 120x16x1347mm QTY 4
S16120-1347mm (Angled)

19
Eaves Frame - 44x27x2400mm QTY 2
F2744-2400mm

20
Purlin - 90x40x2400mm QTY 3
F4090-2400mm

Veranda Components (*06LOG004VR-V1 only*)

21
Bearer - 44x44x2304mm QTY 3
F4444-2304mm

22
Bearer - 44x44x234mm QTY 2
F4444-234mm

23
Starter (S2) - 66x19x310mm QTY 2
LB19RT66-310mm

24
Log Board (B) - 120x19x310mm QTY 8
LB19-310mm

25



Log Board (BR) - 110x19x310mm QTY 2
LB19RG110-310mm

26




Log Board (B) - 120x19x1000mm QTY 10
LB19-1000mm

27




Log Board (BR) - 56x19x1000mm QTY 2
LB19RG56-1000mm

28



Veranda Floor - 95x12x882mm QTY 22
SR1295-882mm

29



Storm Brace - 27x44x2100mm QTY 8
F2744-2100mm


30

Skirting - 28x28x2400mm QTY 5
FS2828-2400mm

31


Interior Roof Trim - 27x44x2400mm QTY 3
F2744-2400mm (Bevelled)

32




Mortice Lock

33




Key Plate

34

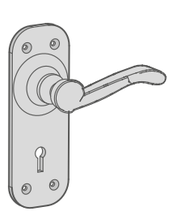


Handles (*Pair*)

35




Felt

36

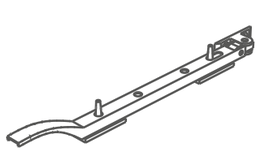

Casement Stay

Nail Bag

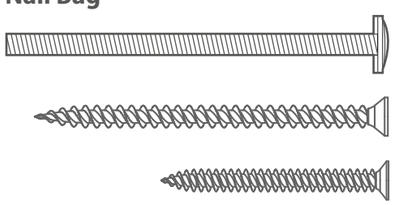


80mm Bolt Set x24
70mm Screw x151
40mm Screw x520
30mm Screw x15
30mm Black Screw x21
Felt Tacks x155

Pre-assembly

Please note:

Each board interlocks at either end in a staggered pattern.


Before securing ensure that the boards are fitted properly in their respective tongue's and groove's.

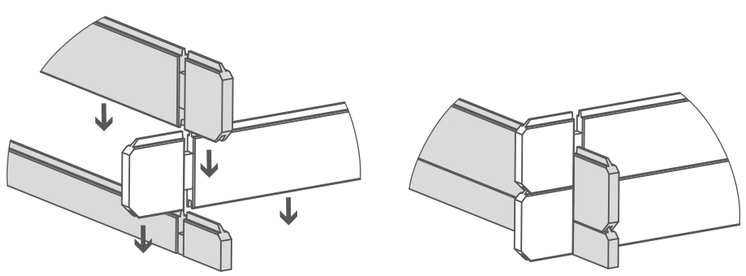


Step 1

a Fit the mortice lock (***No. 32***) into the recess in the door (***No. 2***) and secure using the screws provided. Attach the key plate (***No. 33***) to the door framing with the screws provided.


b Fit the door handles (***No. 34***) and connect with the metalbar to the mortice lock using 8x30mm screws. Ensure the lock mechanism closes correctly. If not, remove the lock and turn the catch around using the small grub screw.

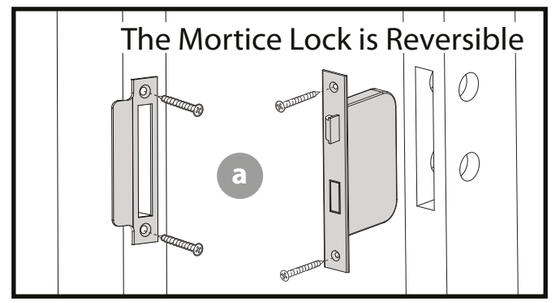

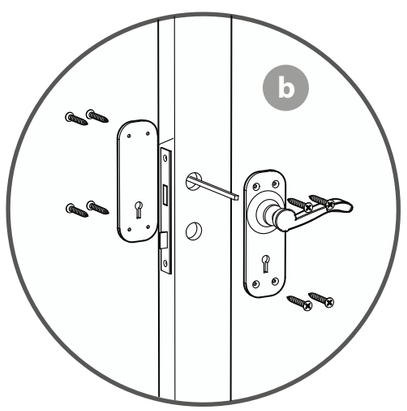

***Please note:** This image is for illustrative purposes and may differ from your choice in product (**regarding ironmongery**). Nevertheless the process of fixing the frames is the same.*

8x30mm Black Screws
4x30mm Screws

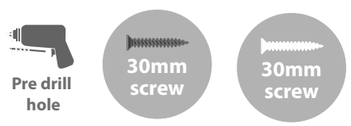


Step 2

Fix the casement stay (***No. 36***) onto the window (***No. 1***) and the casement stay pins to the window cill using 6x30mm screws per casement stay.

Ensure the casement stay is centralised on the window.

6x30mm Black Screws
6x30mm Screws
Depending on Ironmongery choices



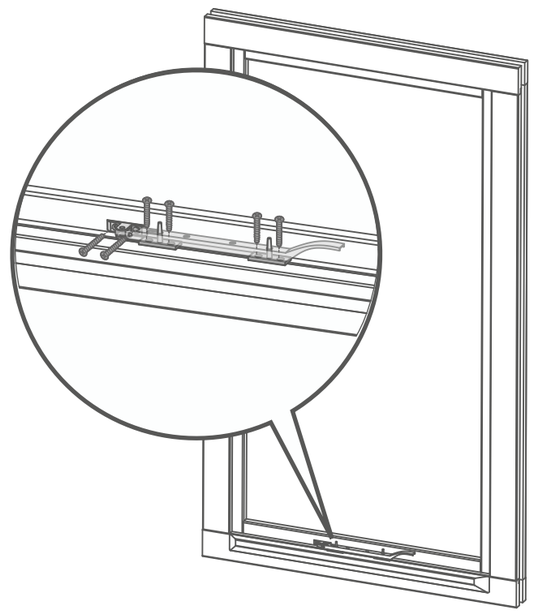



Step 3

Lay the starters (***No. 16 & No. 17***) onto a firm and level surface (***free from areas where standing water can collect***) as shown in the illustration.

Fix the framing together at each corner using 8x70mm screws, ensuring the frame is flush.

8x70mm Screws



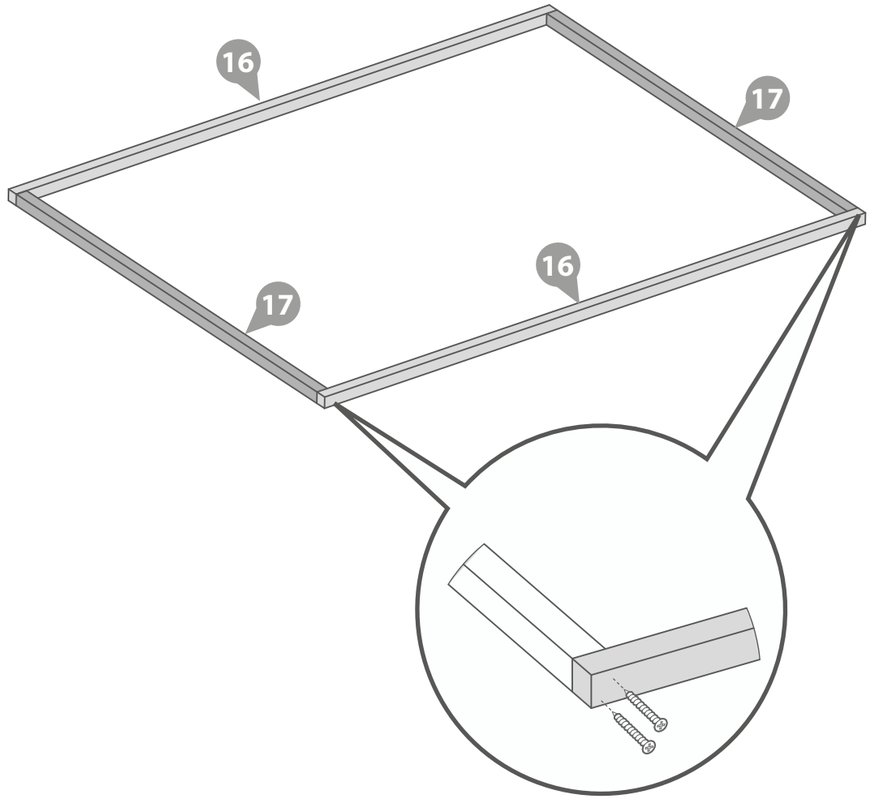


Step 4


Following the same method outlined in **Step 3**, arrange the remaining bearers (***No. 17***) as shown in the illustration.


Ensure there is an equal amount of space between each frame.

Secure each of the frames in place using 4x70mm screws per frame, ensuring the framing remains level.

32x70mm Screws

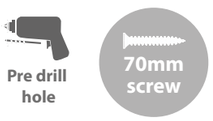

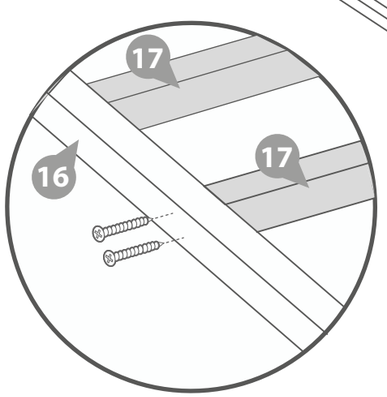

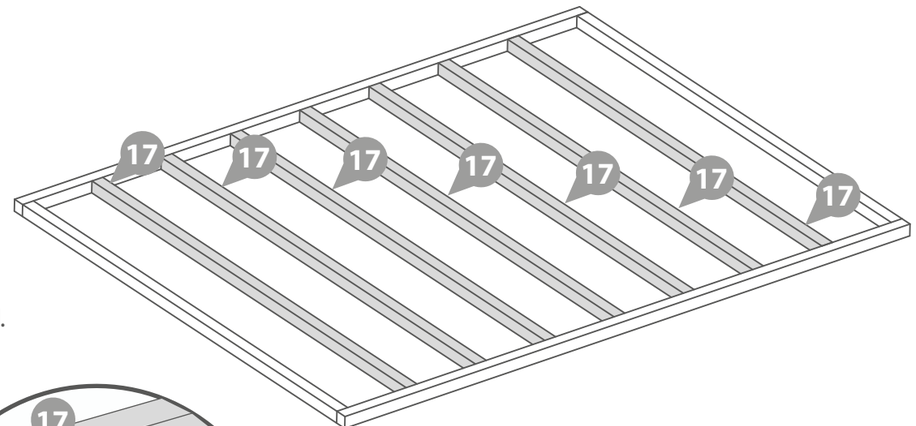


Step 5 *(See Pre-Assembly)*

Place the starter boards (***No. 4***) on to assembled base frame along the longest sides.


Ensure the notches at either end of each board are flush and level with the ends of the frame.


Fix each of the starter boards to the frame by screwing through the notch into the frame as shown in the illustration.

4x70mm Screws



IMPORTANT: ***It is imperative that you pre-drill before fixing screws.***

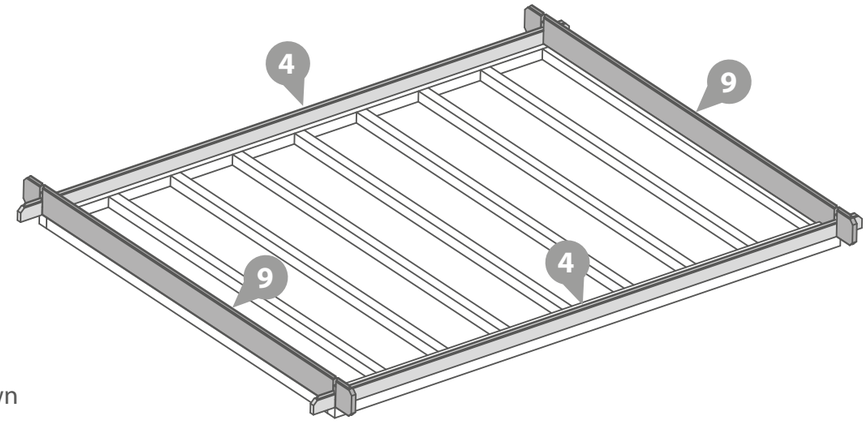

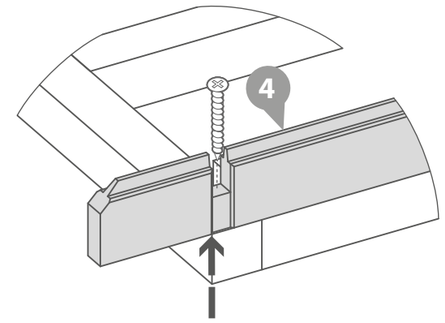

Step 6 *(See Pre-Assembly)*


Following the same method outlined in *Pre-Assembly*, lay the first 6 boards (***No's. 5, 6 8 & 9***) onto the starter boards to create your first level.

Ensure that the boards are level and flush with each other as you lay each one.


Fix every third board to the one below by screwing through the notch as shown in the illustration using 1x70mm screw per side.


****Ensure to stagger the screws so as not to collide with the previous screw.***

16x70mm Screws



IMPORTANT: ***It is imperative that you pre-drill before fixing screws.***

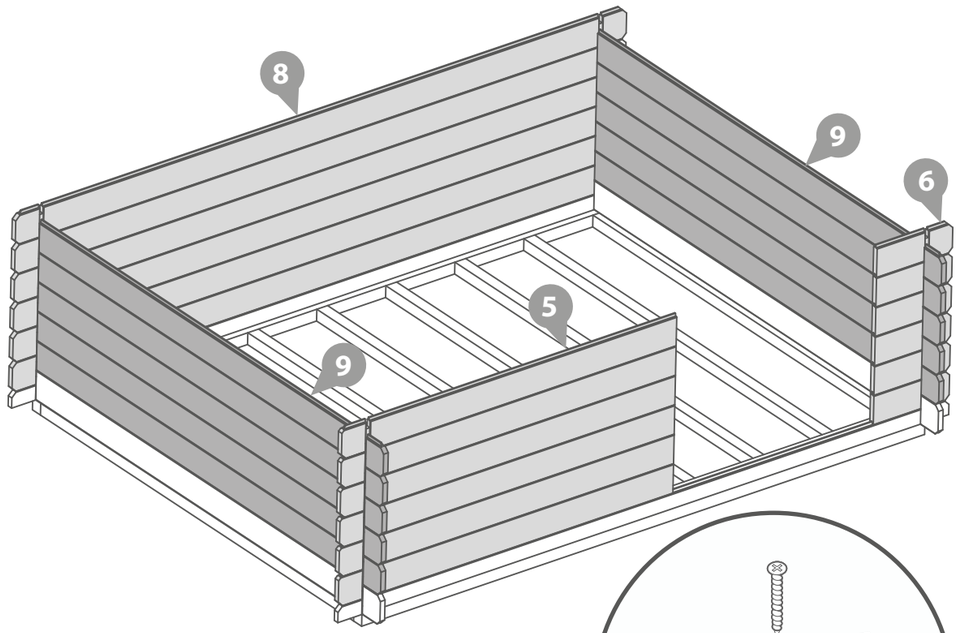

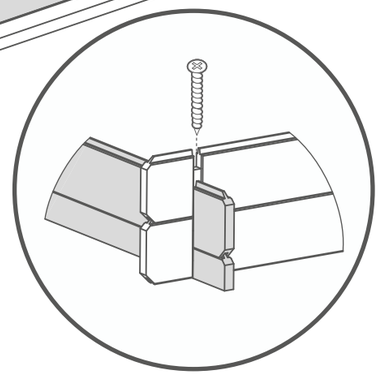


***Please Note:** The short boards at the front of the building (either side of the door and window opening's) can be placed either side depending on your needs.*


Step 7

Once you have laid 6 log boards (*off of the starter*) up the door section, slide the assembled door frame assembly over the boards resting the frame on top of the starter board.

***Please note:** This image is for illustrative purposes and may differ from your choice in product (**regarding door position**). Nevertheless the process of fitting the door frame is the same.*

****Please Note:** The short boards at the front of the building (either side of the door and window opening's) can be placed either side depending on your needs.*

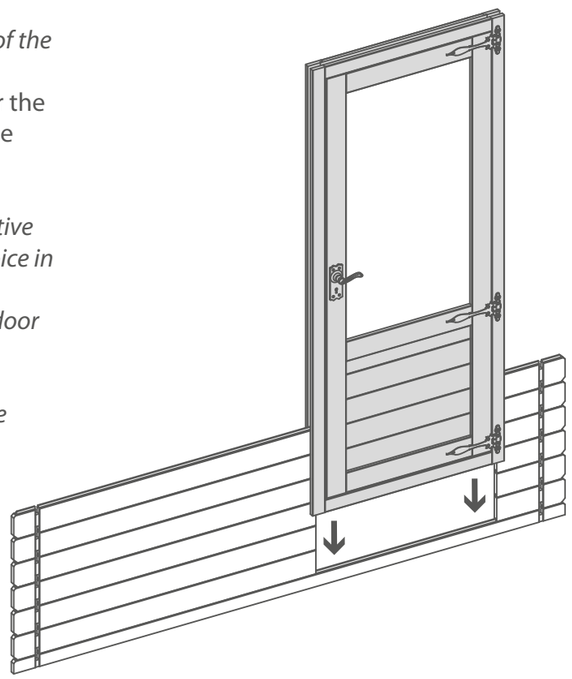



Step 8 *(See Pre-Assembly)*


Following the same method outlined in *Pre-Assembly*, lay the next 4 boards (***No's. 6, 8, 9, 10 & 11***) onto the assembly to create your second level.

Ensure that the boards are level and flush with each other as you lay each one.


Fix every third board to the one below by screwing through the notch as shown in the illustration using 1x70mm screw per side (*as outlined in Step 7*).

****Ensure to stagger the screws so as not to collide with the previous screw.***

20x70mm Screws



IMPORTANT: ***It is imperative that you pre-drill before fixing screws.***

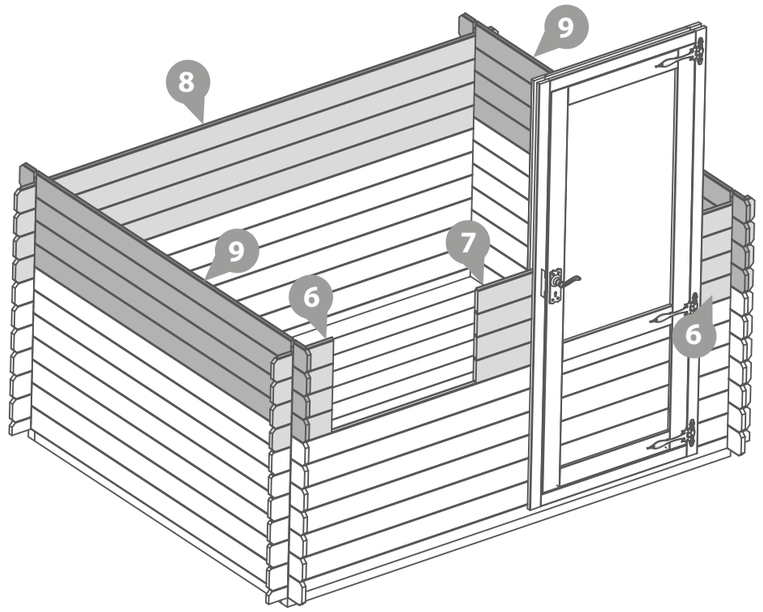


****Please Note:** The short boards placed to create the opening's for the doors & windows can be placed either side depending on your needs.*

Step 9: Window Frame Fit

Once you have laid the second level of boards onto the assembly slide the window(*s*) between the smaller boards and rest on to the longer board.

Ensure the boards are level with each end.

***Please note:** This image is for illustrative purposes and may differ from your choice in product (**regarding window position**). Nevertheless the process of fitting the window is the same.*

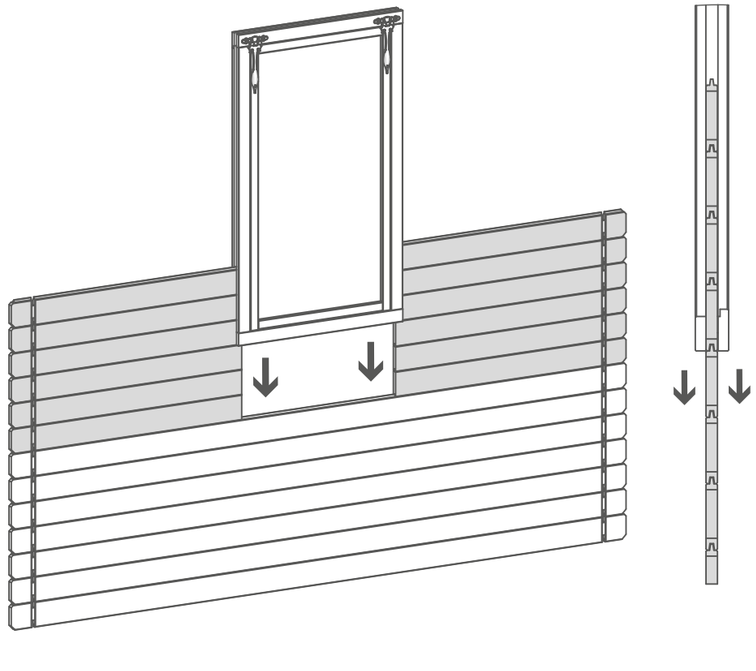

Step 10 *(See Pre-Assembly)*


Following the same method outlined in *Pre-Assembly*, lay the next 4 boards (***No's. 6, 7, 8 & 9***) onto the assembly.

Ensure that the boards are level and flush with each other as you lay each one.


Fix every third board to the one below by screwing through the notch as shown in the illustration using 1x70mm screw per side (*as outlined in Step 7*).

Ensure to stagger the screws so as not to collide with the previous screw.

20x70mm Screws



IMPORTANT: ***It is imperative that you pre-drill before fixing screws.***

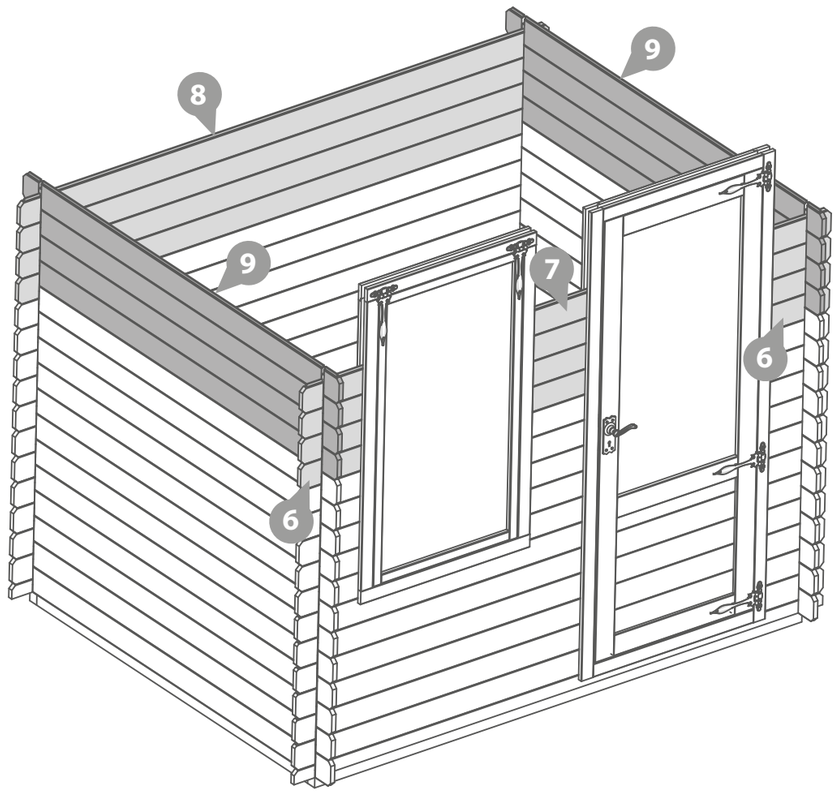

Step 11 *(See Pre-Assembly)*


Following the same method outlined in *Pre-Assembly*, lay the next 4 boards (***No's. 6, 7, 8 & 10***) onto the assembly.

Ensure that the boards are level and flush with each other as you lay each one.


Fixing board ***No. 10*** to the one below by screwing through the notch as shown in the illustration using 1x70mm screw per side (*as outlined in Step 7*).

Ensure to stagger the screws so as not to collide with the previous screw.

4x70mm Screws



IMPORTANT: ***It isimperative that you pre-drill before fixing screws.***

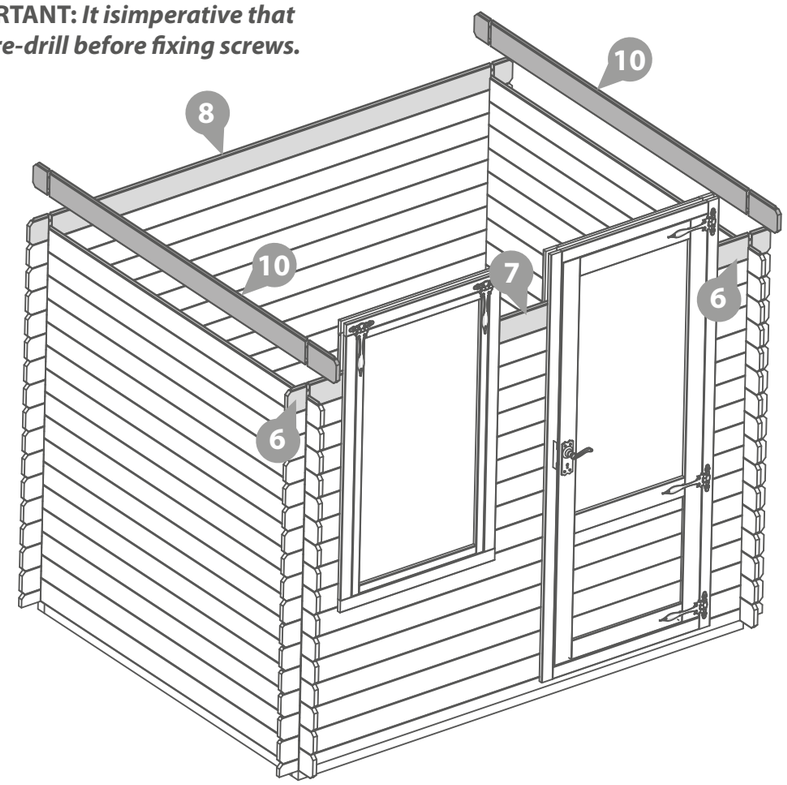


Step 12 *(See Pre-Assembly)*


Following the same method outlined in *Pre-Assembly* and Step 11, lay the next 4 boards (***No's. 6, 7, 8 & 11***) onto the assembly.

Ensure that the boards are level and flush with each other as you lay each one.

4x70mm Screws

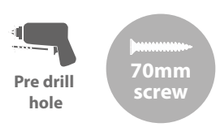

IMPORTANT: ***It isimperative that you pre-drill before fixing screws.***

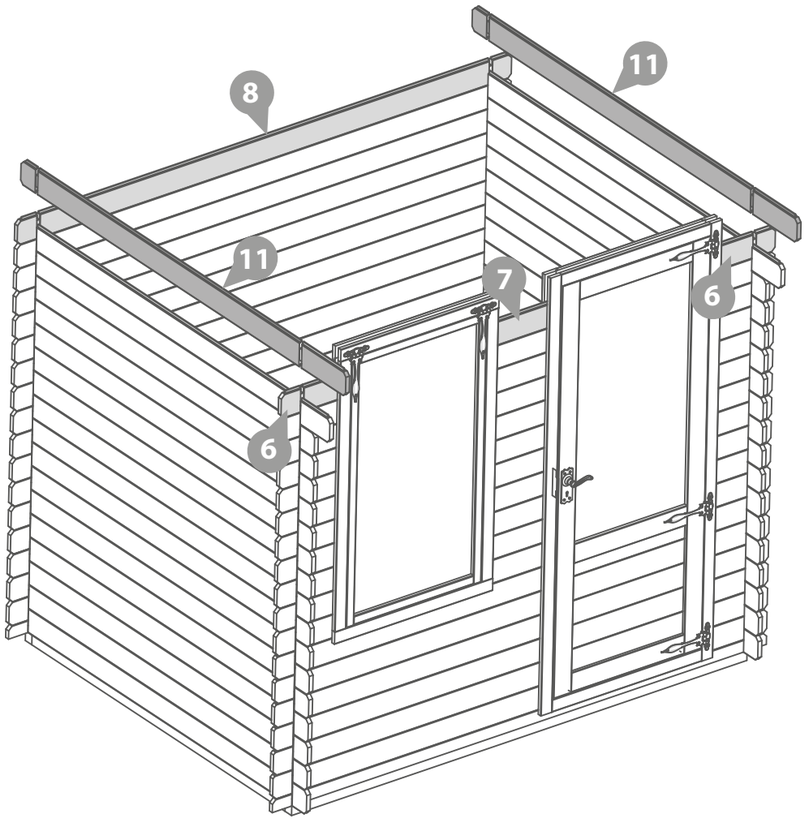


Step 12 *(See Pre-Assembly)*


Following the same method outlined in *Pre-Assembly* and Step 11, lay the next 4 boards (***No's. 6, 7, 8 & 12***) onto the assembly.

Ensure that the boards are level and flush with each other as you lay each one.

4x70mm Screws



IMPORTANT: ***It isimperative that you pre-drill before fixing screws.***

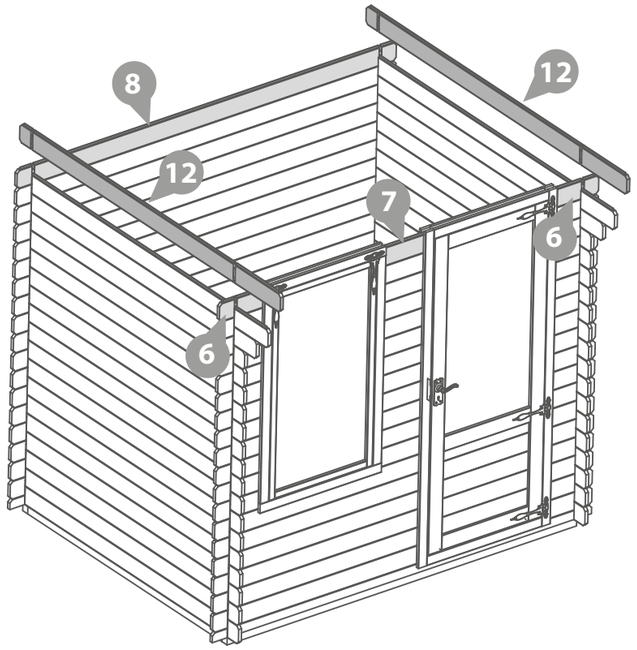


Step 13 *(See Pre-Assembly)*


Following the same method outlined in *Pre-Assembly* and Step 11, lay the next 4 boards (***No's. 8 & 13***) onto the assembly.

Ensure that the boards are level and flush with each other as you lay each one.

4x70mm Screws



IMPORTANT: ***It isimperative that you pre-drill before fixing screws.***

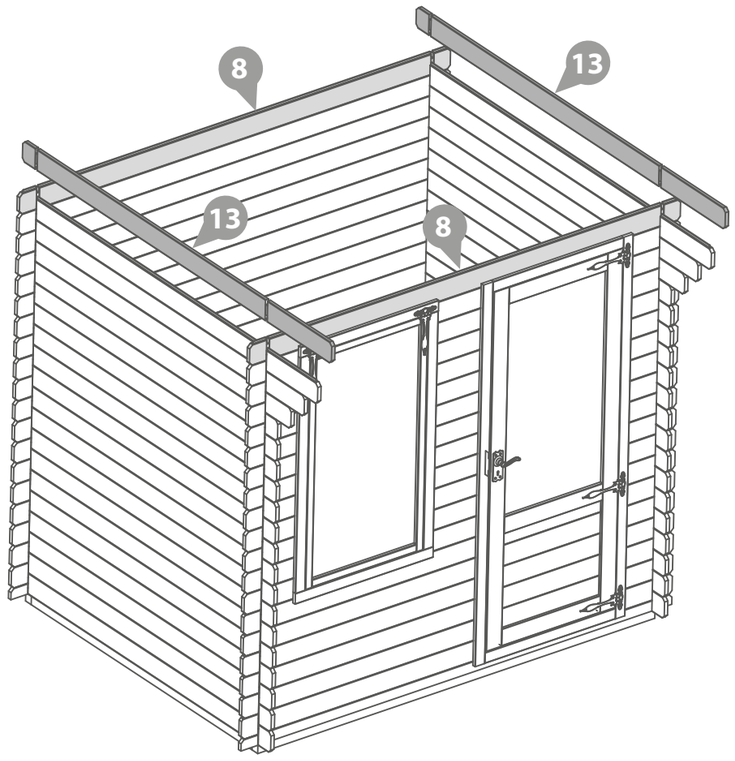


Step 14 *(See Pre-Assembly)*


Place the gable tops onto the assembly. Fix into position by screwing through the notches as shown in the illustration.

Ensure that the boards are level and flush with each other as you lay each one.

4x70mm Screws



IMPORTANT: ***It isimperative that you pre-drill before fixing screws.***

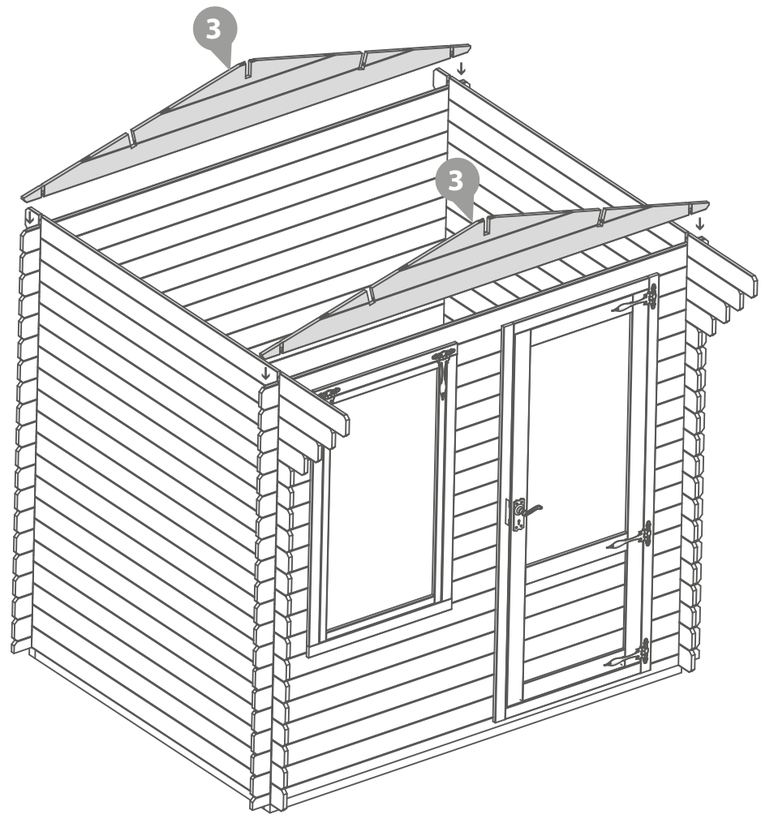


Step 15: Ridge Bar Fit

Align the ridge bar(*s*) (***No. 20***) into the cut out slots on each gable top ensuring each ridge bar interlocks the boards.

Secure the ridge bars at each end by screwing through the bars into the boards (***ensure to pre-drill to avoid the boards splitting***) using 4x70mm screws per ridge bar.


***Please note:** The gable shown is for illustrative purposes and may differ in width from your choice in product. Nevertheless, despite any differences the process of fixing the ridge bars is the same.*

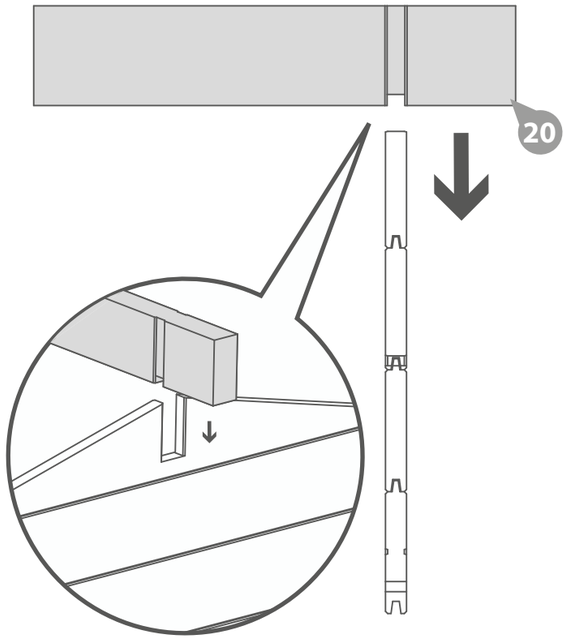

12x70mm Screws


Pre drill hole



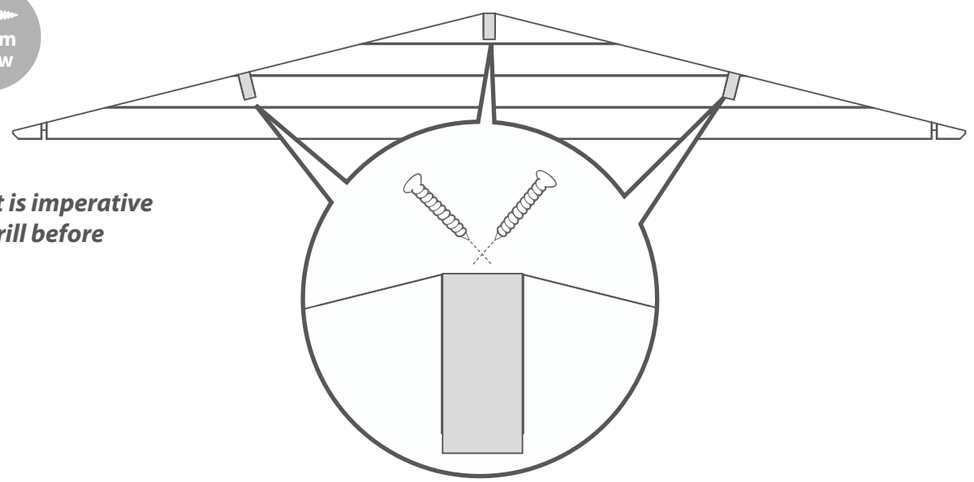

IMPORTANT: ***It is imperative that you pre-drill before fixing screws.***

Step 16

Place the first two roof board's (***No. 14***) onto the assembly on each side, making sure the boards are flush to the end of the roof purlin. Once in position fix to each purlin using 3x40mm screws.


Ensure the roof boards meet at the top of the apex and leave an overhang at the bottom.


Continue adding the roof boards along the roof, fixing each one into position using 3x40mm screws, making sure that each board is interlocked, flush at the bottom & meet at the top of the apex.

The last board on each side will overhang: Using a staight edge and a pencil mark out a line as a guide.

Cut along the pencil mark and remove the excess. Place the cut down board's back onto the roof and secure into place using 3x40mm screws per board.

***Please Note:** This image is for illustrative purposes and may differ from your choice in product. Nevertheless the process of cutting and fitting the last roof boards is the same.*

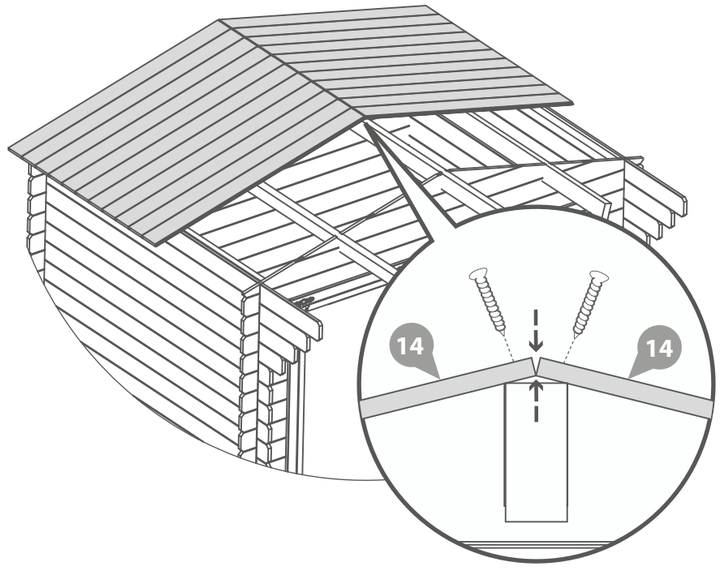

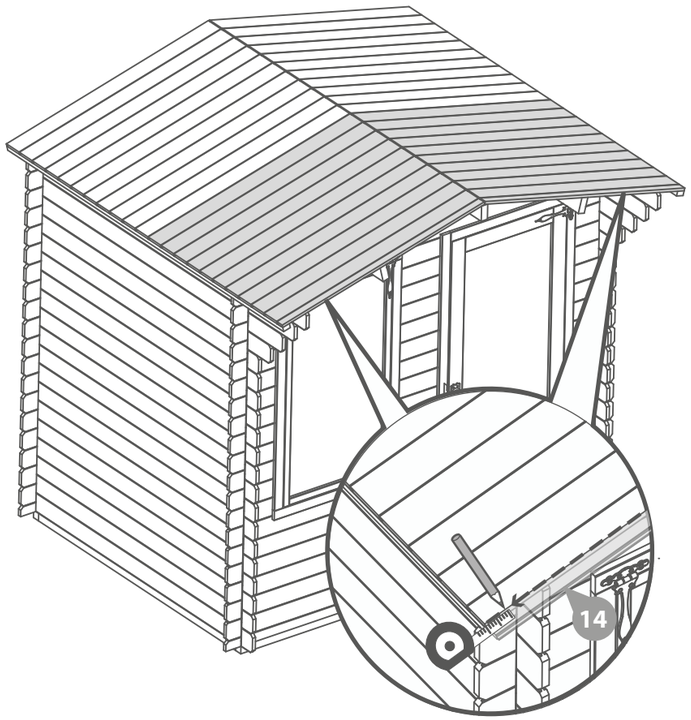

132x40mm Screws


*Cut to fit


Pre drill hole





Step 17

Ensuring the roof boards are flush at the overhanging side and meet at the apex, fix the eaves frames (***No. 19***) to the underside of the roof boards using 9x40mm screws as shown in the illustration

***Please Note:** This image is for illustrative purposes and may differ from your choice in product. Nevertheless the process of fixing the eaves frames is the same.*

18x40mm Screws



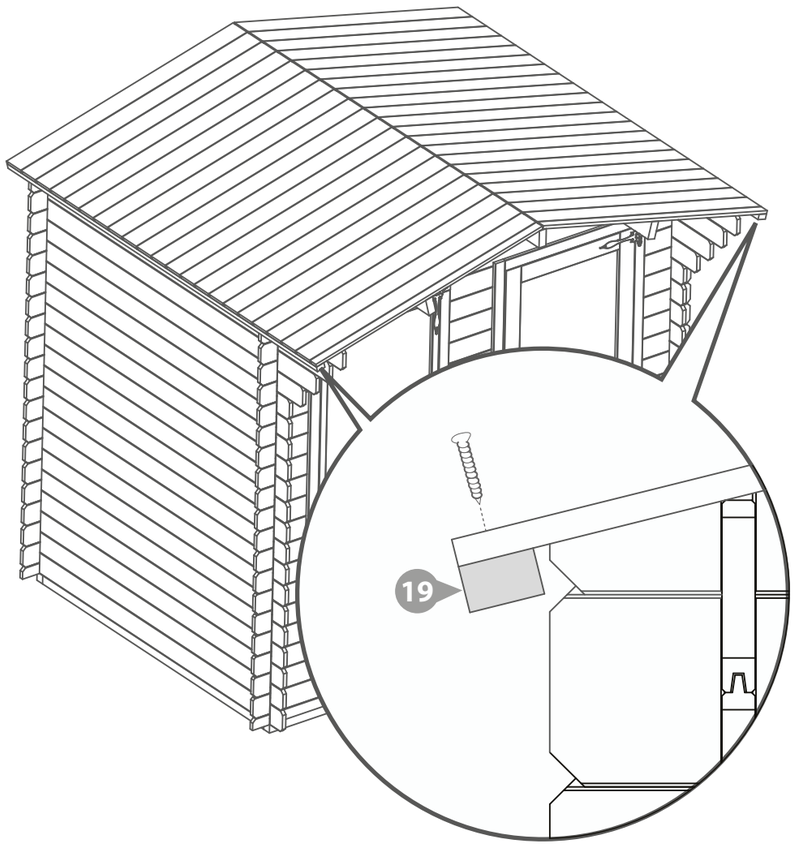

Step 18

Place the first floor board (***No. 15***) inside the building flush to the log board on one side. Continue adding the floor boards (*internally*) making sure to interlock each individual board.

Do NOT secure the boards until the last board has been measured and cut.

Following the same method outlined in **Step 16** measure the gap between the bottom of the tongue (***on the last board placed***) and the log board.


Using a straight edge mark out the measurement onto the last floor board (***No. 15***) and cut along the length removing the excess.


****Please note:** Mark the final board 2mm under the measurement; This will allow the timber to expand and contract correctly.*


Once all the floor boards are in position secure each board into position using 8x40mm screws.

*****Please Note:** Ensure to screw through eachof the floor boards into the floor bearers.*

153x40mm Screws

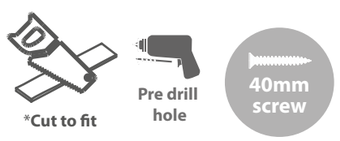

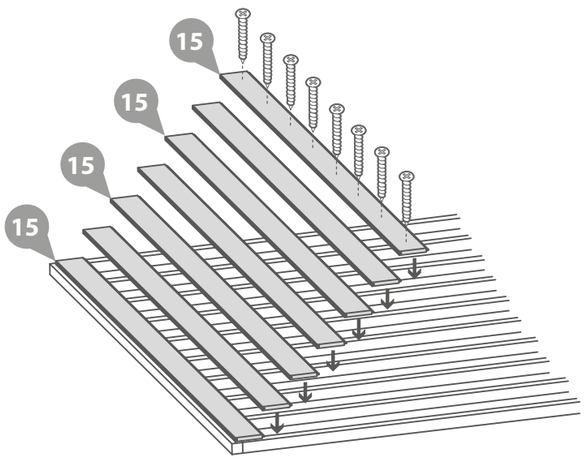

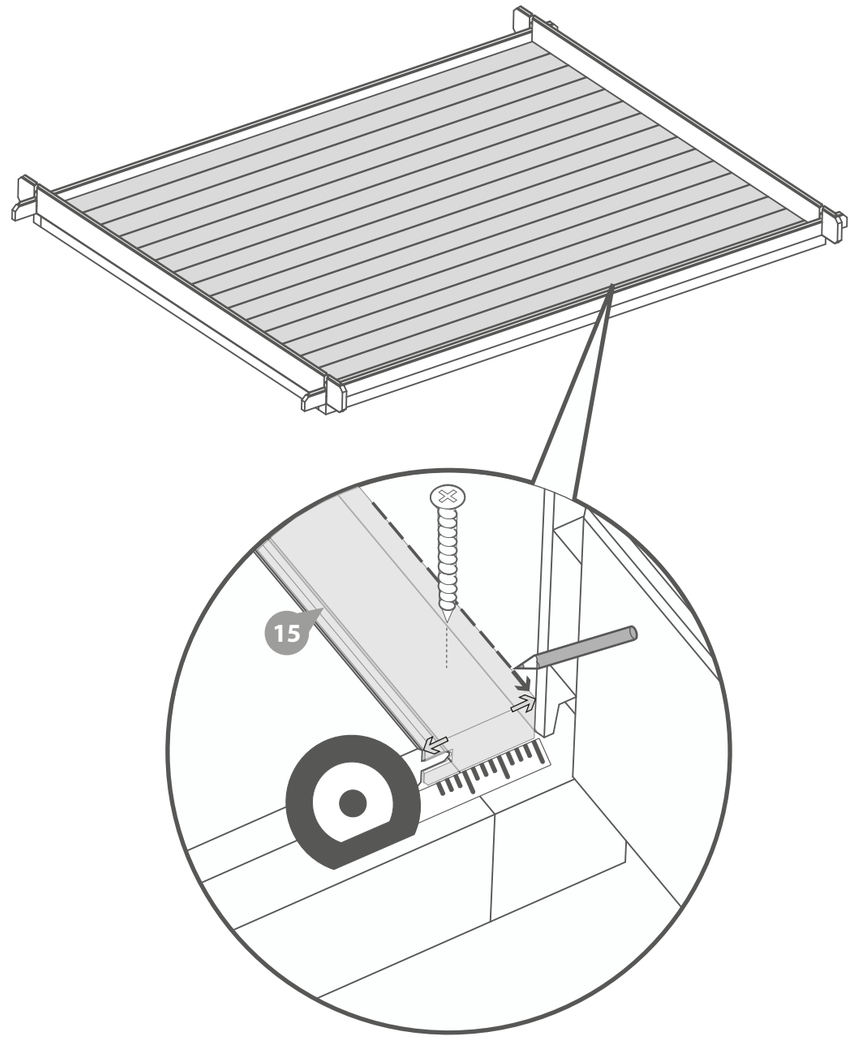


Step 19


Inside the building place an internal roof trim (***No. 31***) against the boarding and align with the roof as shown in the illustration, ensuring the angled face follows the roof line.

Once in position fix each roof trim into place using 40mm screws per roof trim, equally spaced along the face of the board.

12x40mm Screws

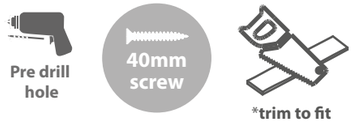

***Measure and cut the interior roof trims to fit the internal space.**

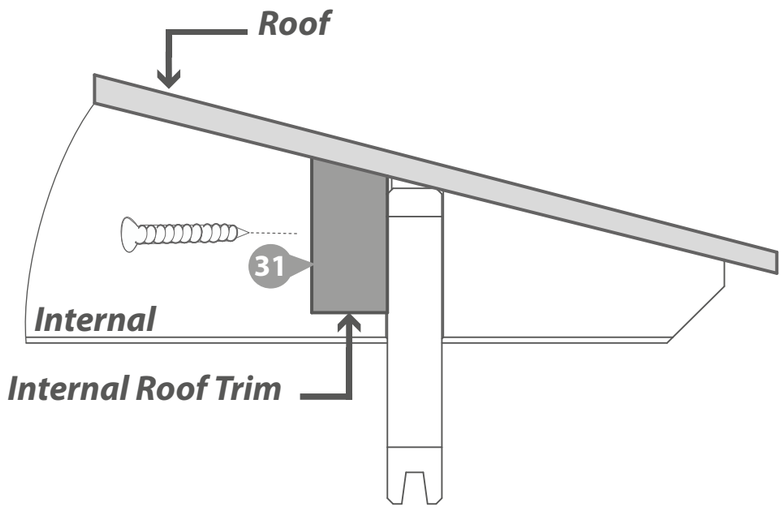


Step 20


Once the floor has been laid arrange the skirting (***No. 30***) around the outside edge of floor (***internally***), measure and cut down accordingly to best match the internal space.

Secure each skirting section into place using 30mm spaced equally along the board as shown in the illustration.

***Do NOT fix the skirting to the floor sheets/boards.**

33x30mm Screws

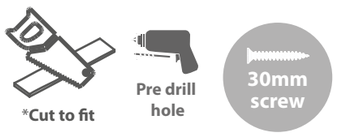

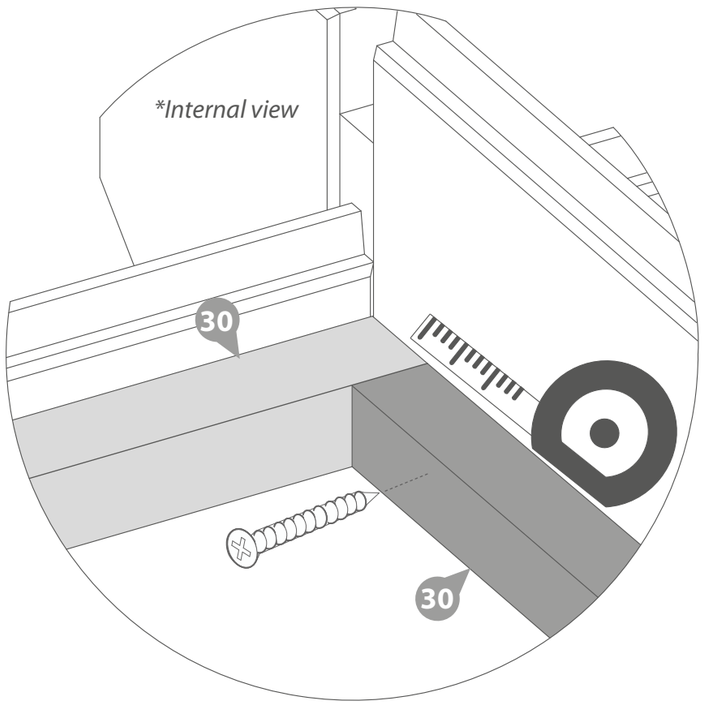

Step 21

Cut the felt into five & strips lay onto the roof in the order shown in the illustration.


***Ensure there is approximately 50mm of overhanging felt each side.**


Once the felt is laid out fix to the roof using felt tacks at 100mm intervals.


***Felt size: 2532mm**

152x Felt Tacks



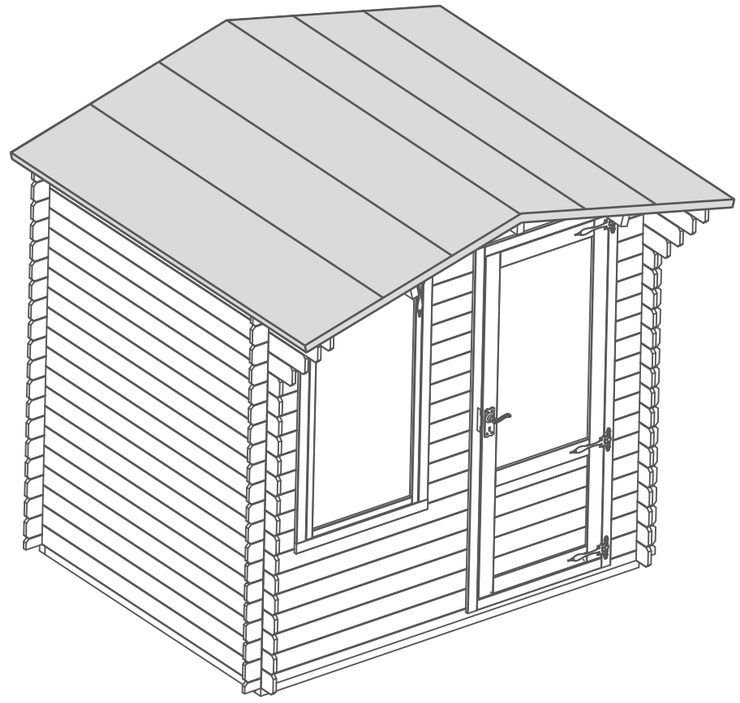

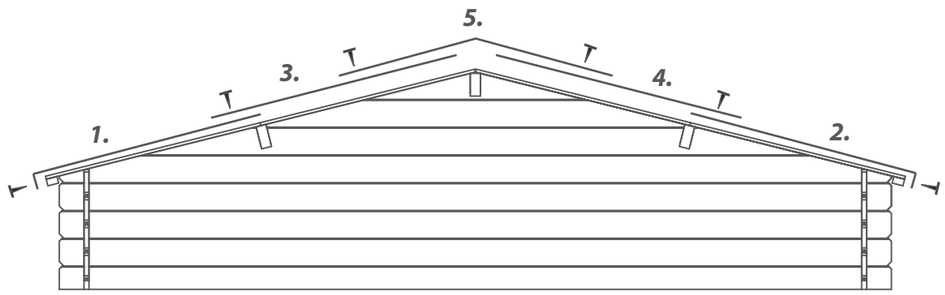

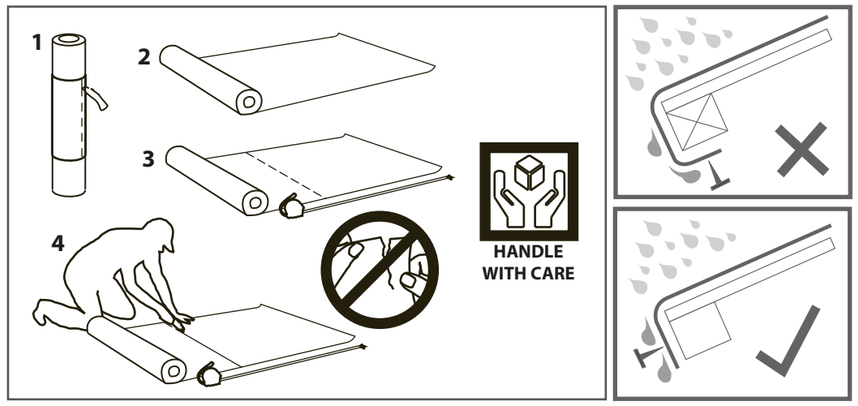


Step 22

Align the fascia's (***No. 18***) with the roof and fix into place using 3x40mm screws per fascia, making to screw through the fascia into the roof purlins and eaves frame.

Ensure the angled cuts meet at the top of the apex.

12x40mm Screws



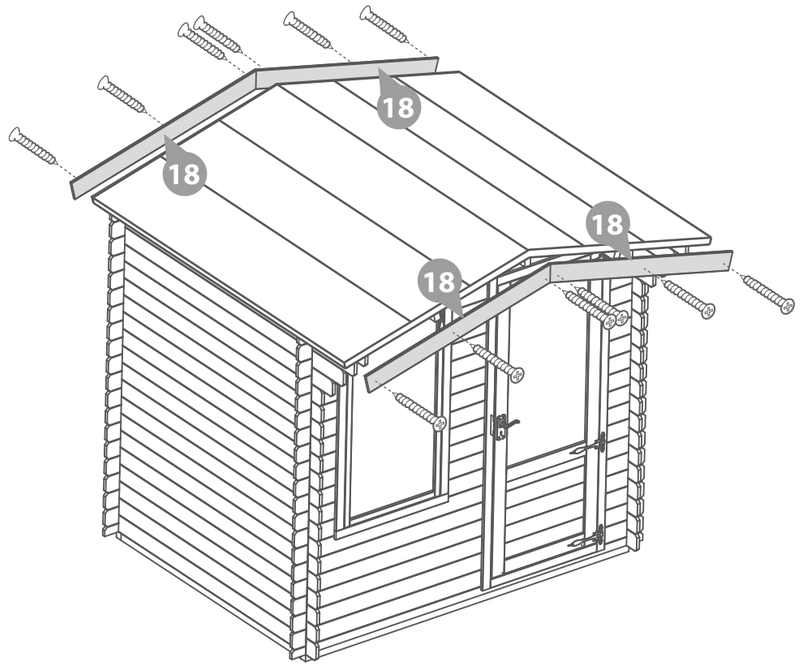

Step 23


Arrange the storm braces (***No. 29***) around the building (***internally***). Place 2x storm braces per side fixing into place using 2x 80mm bolts per brace making sure the washer & nut are tightened from the outside of the building.


***Ensure the storm braces are secured at the highest point possible on each side.**


****Storm braces will help your building expand and contract properly.**

*****It is imperative that each bolt is tightened using a washer so as not to damage the log boards.**

24x80mm Bolt Sets



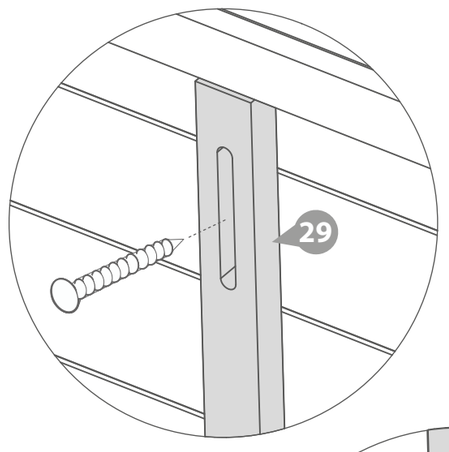

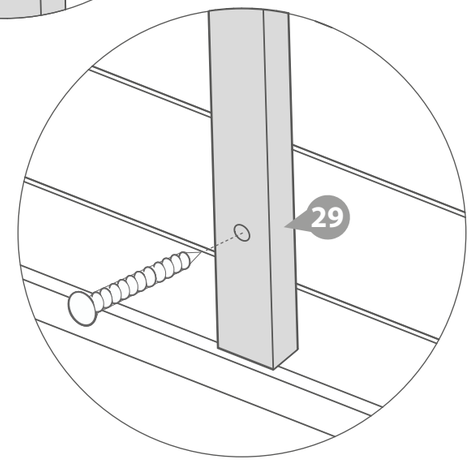


Veranda Fit


Step 1

a Place the first starter (***No. 21***) up to the building and fix to the building starter using 4x70mm screws.

b Attach the smaller starter frame (***No. 21***) to each end of the larger frame (***No. 22***) using 4x70mm screws.

8x70mm Screws



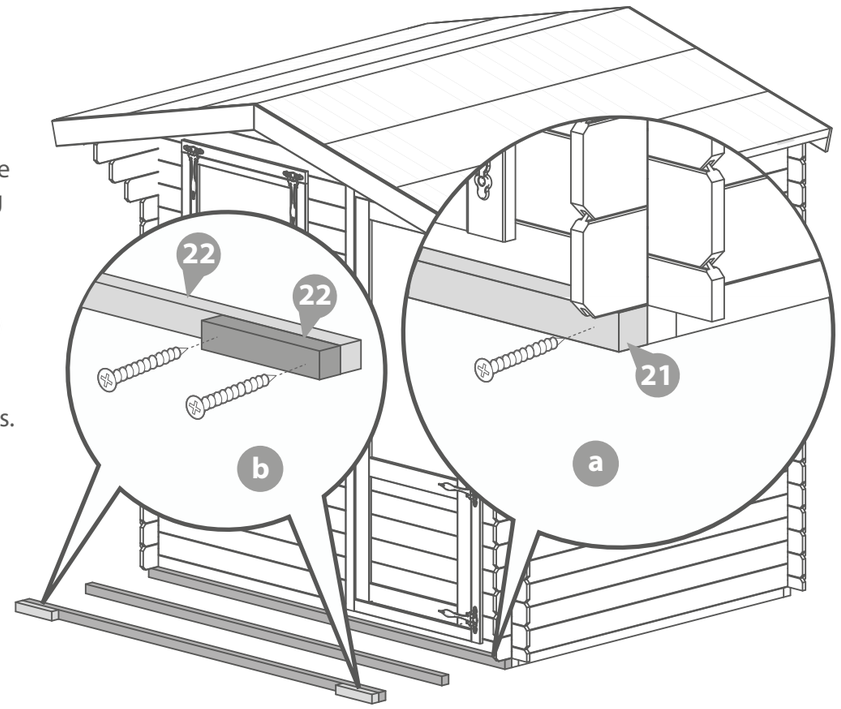


Step 2


Following the method outlined in **Step 5** (*see main instructions*) secure the starter board (***No. 23***) onto the smaller frame using 2x70mm screws ensuring to screw through the notch into the framing below.

Place the first two log boards (***No. 26***) onto the starter board and rest onto the starter frames as shown in the illustration. Once in position fix the log board to the inside of the cabin using 2x40mm screws per side.

****The centre starter frame at this point is not fixed into position, arrange so there the frame is central.***

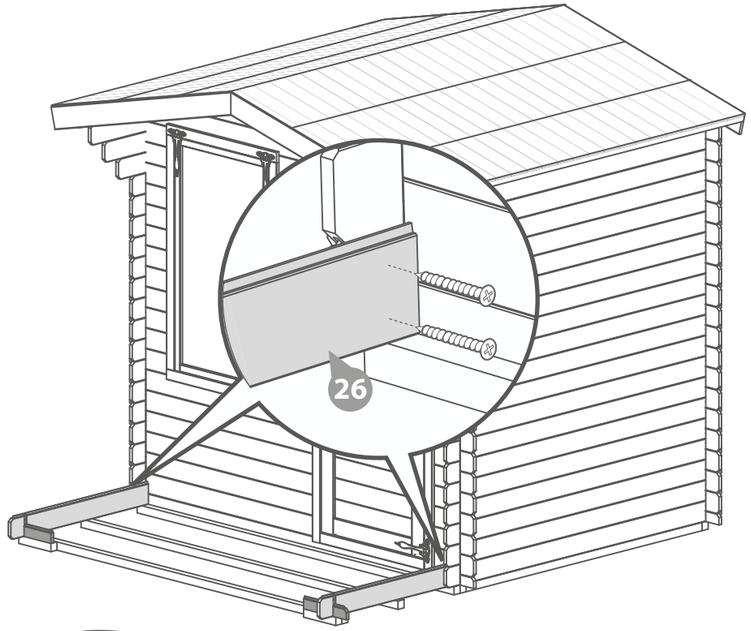

4x40mm Screws
2x70mm Screws

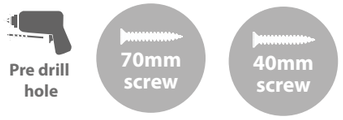


IMPORTANT: ***It is imperative that you pre-drill before fixing screws.***

Step 3


Following the method outlined in **Step 8** (*see main instructions*) continue placing the boards (***No's. 24, 25 & 26***) on to the veranda sides, ensuring to interlock the boards (*fixing every third board by screwing through the notches with 4x70mm screws*).

****Board 37 is the last board to fit on to the assembly.***

Ensure to screw through the boards into the side of the cabin as shown in the previous step.

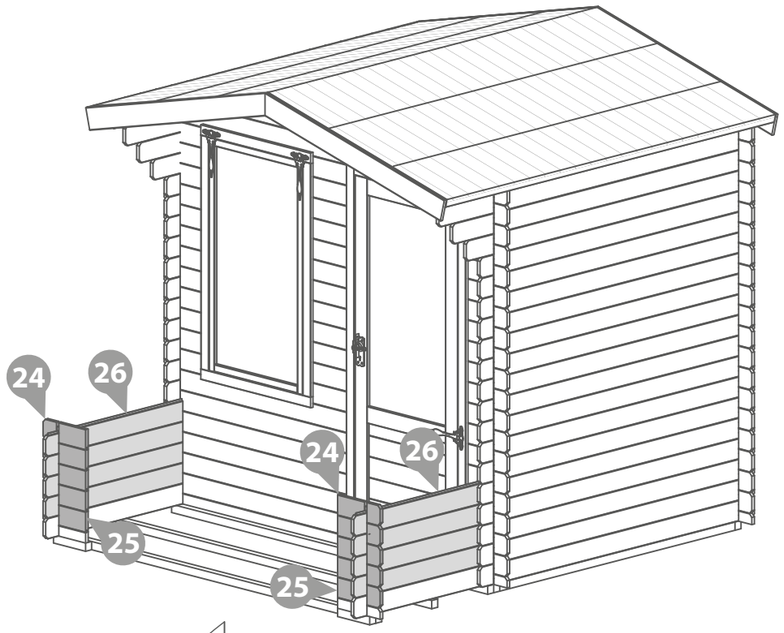


24x40mm Screws
4x70mm Screws

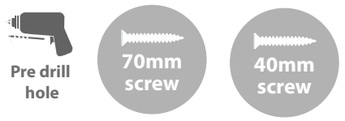


Step 4

Following the method outlined in **Step 17B** (*see main instructions*) place the veranda floor boards (***No. 34***) onto the assembly and secure each board into place using 3x40mm screws ensuring to screw through the boards into the framing below.

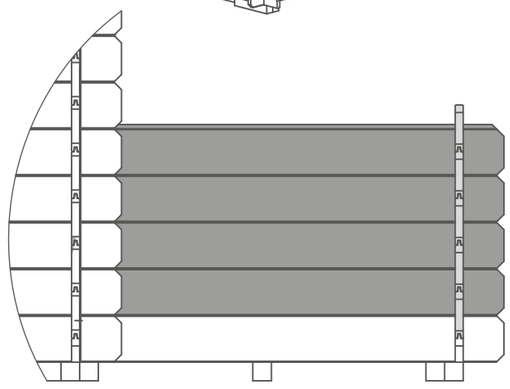

120x40mm Screws



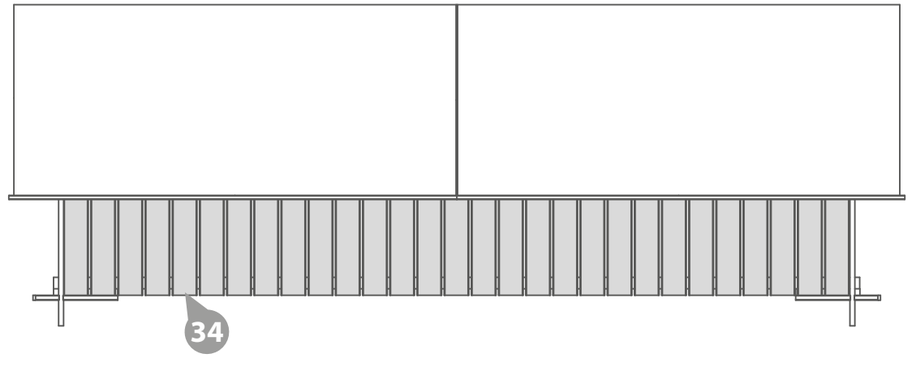

Step 5

Fix the last two log boards (***No. 27***) onto the veranda sides using 2x70mm screws through the notches and 2x40mm screws through the boards as shown in the illustration.

2x40mm Screws
2x70mm Screws

