
ISSUE: 0124

forest
Making British gardens great


# CURVED FIREPIT BENCH
# INSTRUCTIONS

We recommend using the following tools (not supplied):

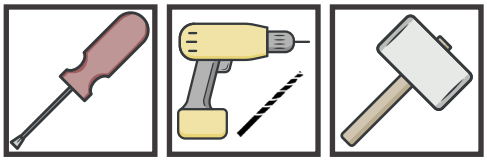

Pozidrive Screwdriver | Drill & 2-3mm Drill Bits | Rubber Mallet

**FIXING PACK CONTAINS:**
**FIXING PACK CODE:** *CFPBENCHFP*

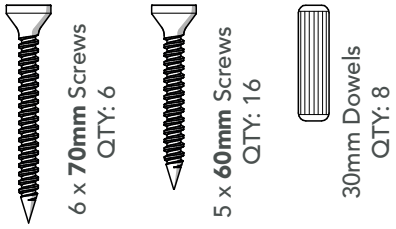



**PLEASE KEEP PLASTIC BAGS AND SMALL PARTS AWAY FROM CHILDREN**

**IMPORTANT**
Assembly requires 2+ adults.

CHECK AND TIGHTEN ALL THE FIXINGS APPLIED TO THIS PRODUCT ON A REGULAR BASIS.


**REMINDER**
Always pre-drill before screwing.

1

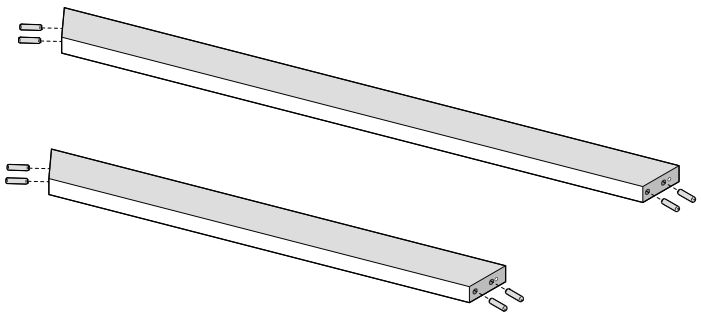

Take both the Short and Long Battens and knock 2 Dowels in each end of both, as shown above.

2

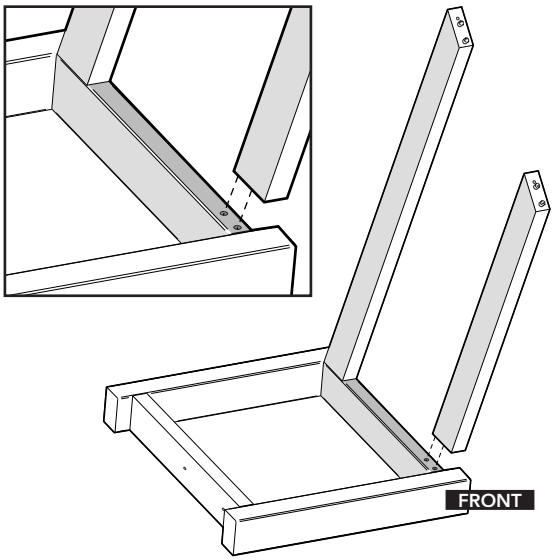



Join the Angled Battens to the Right leg. Ensure they are tight together. Repeat for the Left Leg. Make sure the Shortest Batten is closest to the front.

**Missing something or need more information?**
Call our aftersales team on
0333 321 3142

**Visit our website for spare instructions and more information**
www.forestgarden.co.uk


Forest Garden, Oak Drive, Hartlebury Trading Estate, Hartlebury, Worcestershire, DY10 4JB
EU Authorised Representative: Authorised Representative Service, 77 Camden Street Lower Dublin, D02 XE80, Ireland

3

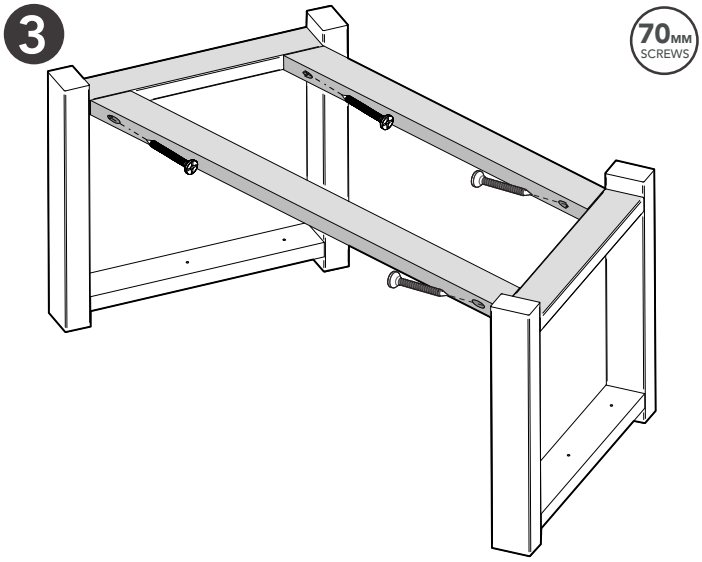



**Secure the Short and Long Battens to the Legs using 4x70mm.**

4

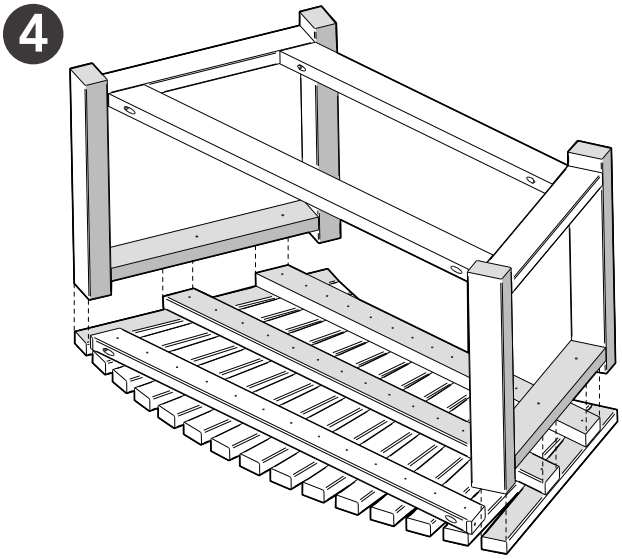


**Position the Leg Assembly onto the the Bench Top.** Ensure the predrilled holes line up with the Battens on the Bench Top.

5

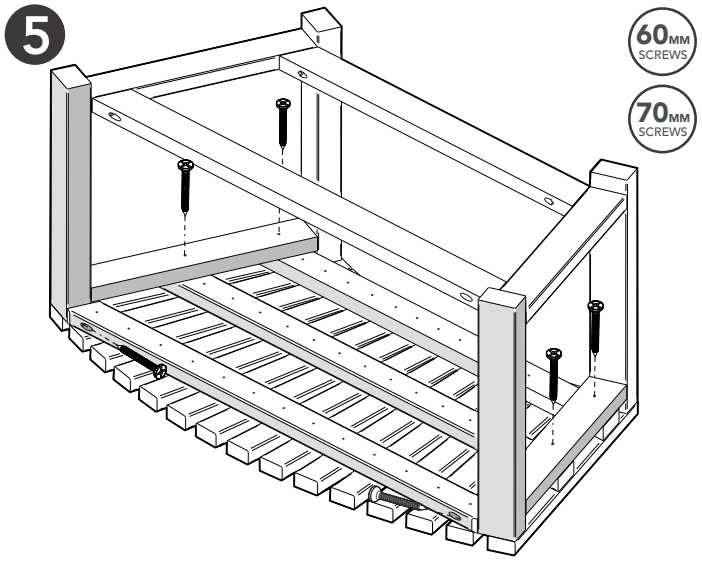



**Screw the Leg Assembly into the Bench Top, using 4x60mm screws. Once secured, screw in 2x70mm screws through the Bench Top into the Leg Assembly.**

6

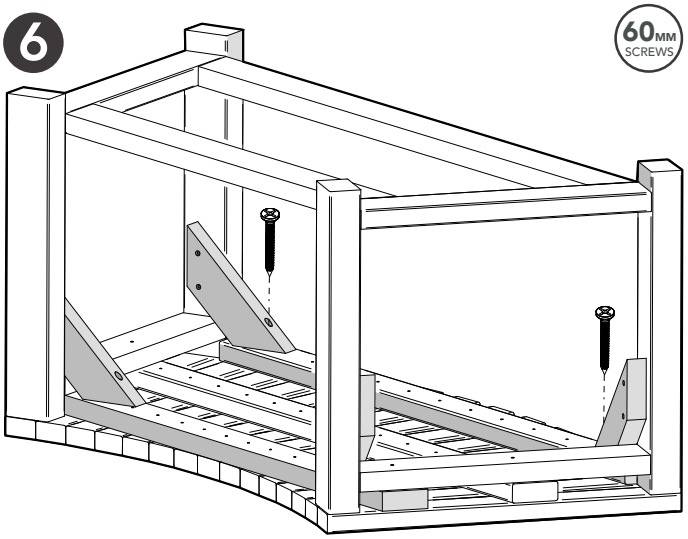


**Position and secure the Braces to the Bench Top with 1x60mm screw in each.** Ensure they are flat to the Bench Top, and the Leg Assembly as shown above.

7

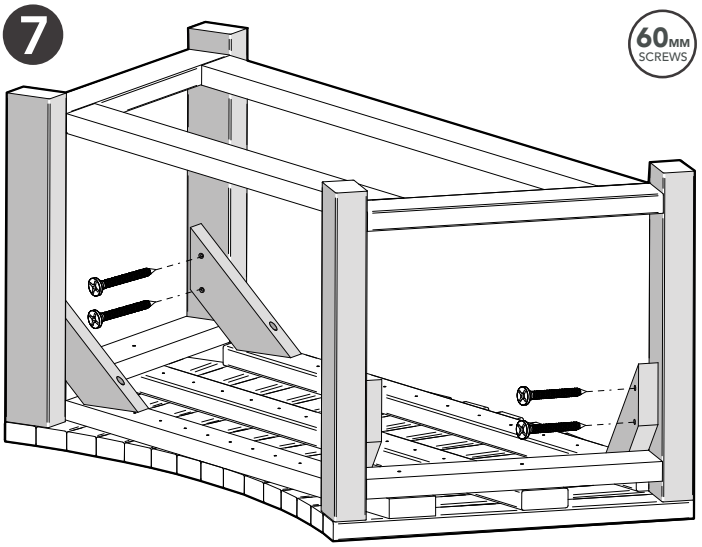


**Secure the Braces to the Leg Assembly with 2x60mm screws in each.**

## HEALTH & SAFETY

We strongly recommend that PPE (Personal Protective Equipment) is used throughout your build to ensure you are protected from any potential health and safety risks. **Do not exempt yourself from wearing PPE.**






**TREATED TIMBER CONTAINING A BIOCIDAL PRODUCT**
CONTROL OF WOOD DESTROYING ORGANISMS

**Active Ingredients** - Propiconazole, Tebuconazole, IPBC, Permethrine, Benzyl-C12-16-Alkyldimethyl Chlorides. (Dip Treated) Basic Copper Carbonate, DDA Carbonate, DDA Chloride. (Pressure Treated)

Wear gloves when handling. Avoid inhalation of sawdust. Do not use in contact with drinking water or food. Do not use for animal bedding or in fish ponds. Dispose of treated wood responsibly.

## CHECK YOU HAVE ALL YOUR PARTS PRIOR TO ASSEMBLY.

**(The parts do not have codes on them. They are listed below should you need to order one.)**

Timber is a natural material of which will shrink and swell as a result of varying moisture content.
Assembly of damaged parts may be deemed to be acceptance and this may affect the remedies you are entitled to. If the product is not constructed in accordance with the instructions, or is altered in anyway (e.g. painted), the manufacturer cannot be held liable for any resulting damage.

The components provided may be heavy. Please lift with caution and with a minimum of 2 people.

| CURVED FIREPIT BENCH (CFPBENCH) | | | |
|---|---|---|---|
| Label | Part Code | Description | No. |
| 1 | *CFPBENCHTOP* | Curved Bench Top | 1 |
| 2 | *LHCFPBENCHLEG* | Left Hand Curved Bench Leg | 1 |
| 3 | *RHCFPBENCHLEG* | Right Hand Curved Bench Leg | 1 |
| 4 | *CFPBENBRACE* | Brace (60x28x235mm) | 4 |
| 5 | *CFPBENSB* | Short Batten (68x28x687mm) | 1 |
| 6 | *CFPBENLB* | Long Batten (68x28x932mm) | 1 |

