
forest

Making British gardens great

ISSUE: 0124

FLORIDA LOVE SEAT
INSTRUCTIONS

We recommend using the following tools (not supplied):

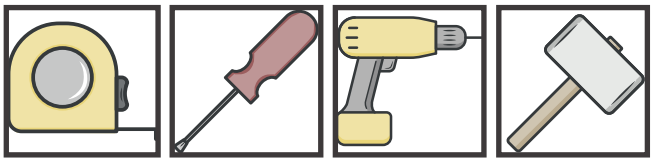


Tape Measure | Pozidrive Screwdriver | Drill & 2-3mm Drill Bits | Rubber Mallet

PLEASE KEEP PLASTIC BAGS AND SMALL PARTS AWAY FROM CHILDREN

FIXING PACK CONTAINS:

FIXING PACK CODE: *FLSEATFP*

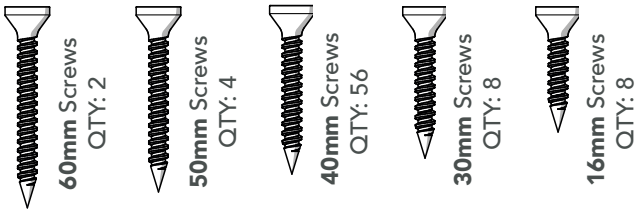


60mm Screws QTY: 2

50mm Screws QTY: 4

40mm Screws QTY: 56

30mm Screws QTY: 8

16mm Screws QTY: 8



45mm Bolt, Washer & Reciever QTY: 8

35mm Dowels QTY: 4


CHECK AND TIGHTEN ALL THE FIXINGS APPLIED TO THIS PRODUCT ON A REGULAR BASIS.

IMPORTANT
Assembly requires 2+ adults.

REMINDER
Always pre-drill before screwing.

1


50MM SCREWS | 40MM SCREWS

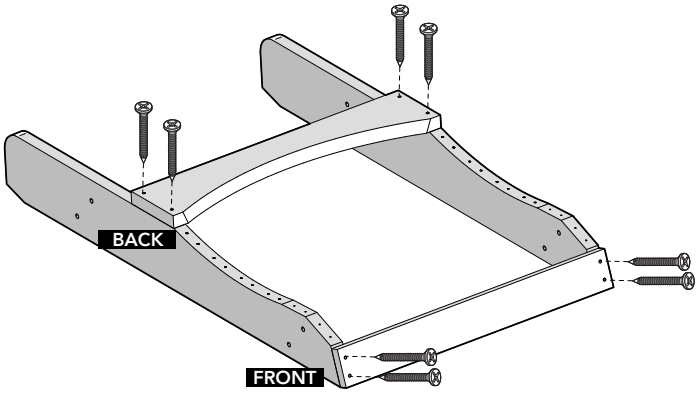

Position and secure a Slat Batten to the front of the Angled Seat legs using 4x40mm screws. Position and secure the Curved Bottom Batten to the top of the Angled Seat Legs using 4x50mm screws. Ensure both Battens are flush to the Angled Seat Legs.

2

45MM bolts

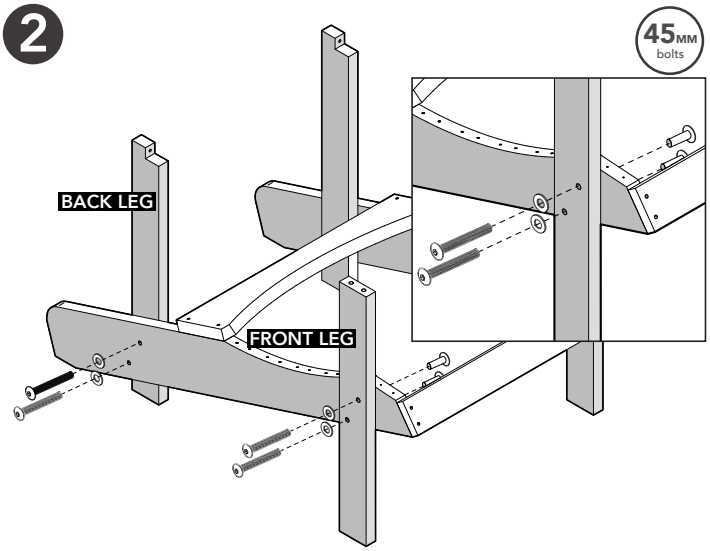


Position the Legs to the Chair Assembly as shown above. Tap in the receivers in to the predrilled holes and secure the bolts and washers into the receivers as shown above. Leave loose untill all legs have been secured, once done tighten all bolts. Ensure to assemble this step on level ground.

Missing something or need more information?
Call our aftersales team on
0333 321 3142

Visit our website for spare instructions and more information
www.forestgarden.co.uk

Forest Garden, Oak Drive, Hartlebury Trading Estate, Hartlebury, Worcestershire, DY10 4JB
EU Authorised Representative: Authorised Representative Service, 77 Camden Street Lower Dublin, D02 XE80, Ireland


3

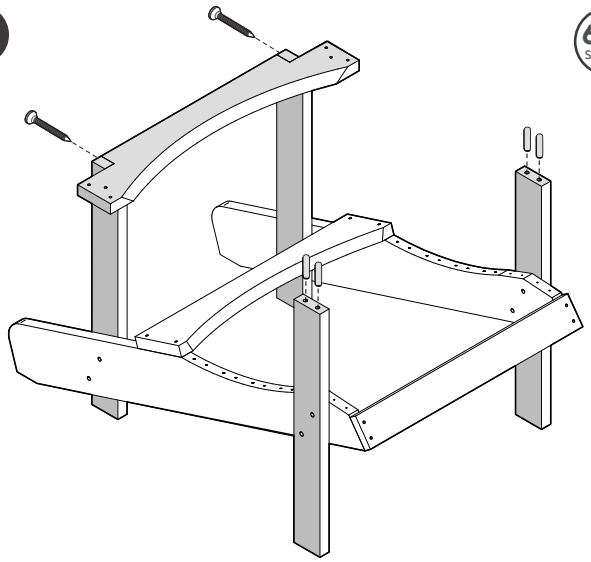

60MM SCREWS

Position the Top Curved Batten ensuring it sits flush into the notches on top of the Back Legs. Secure with 2x60mm screws. Tap in 4x35mm dowels into the front two legs.


4

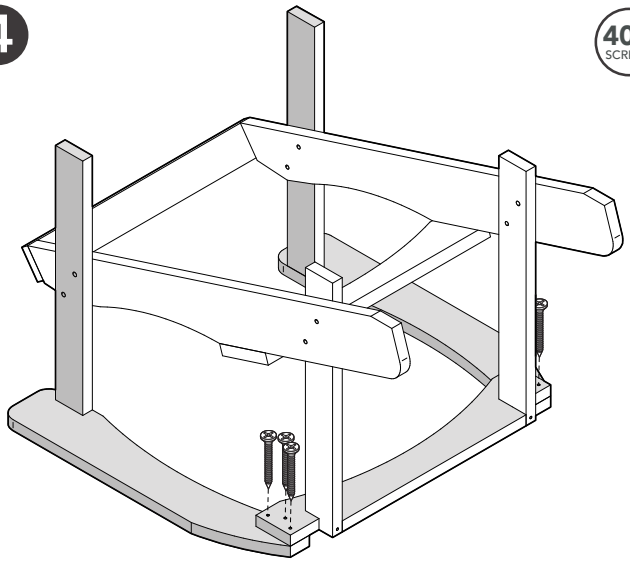

40MM SCREWS

Position the Left and Right Arms as shown above. Tap the front into the dowels ensuring they sit tightly together, then screw the back using 6x40mm screws through the Top Curved Batten into the Arms.


5

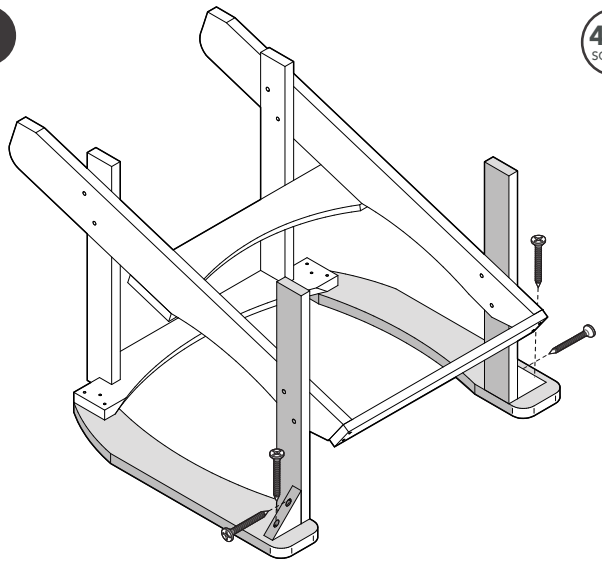

40MM SCREWS

Position and secure the Corner Braces to the Front Legs and Chair Arms using 2x40mm each. Ensure the Corner Braces Sit flush to the edge of the Front legs, as shown above.


6

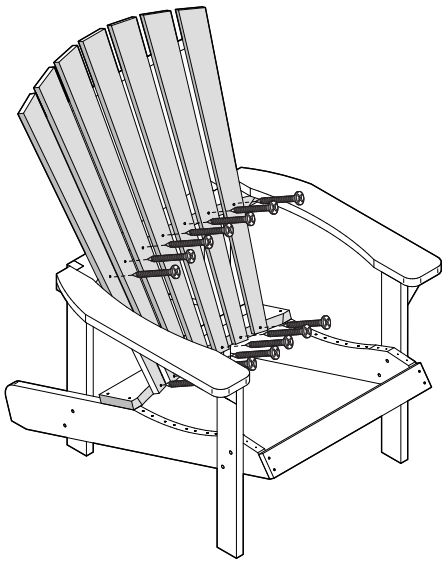

40MM SCREWS

Position the Back on to the Back Curved Battens, ensure the holes line up to the batten behind Secure using 2x40mm screws for each batten as shown. Start from the middle batten and work outwards.


7

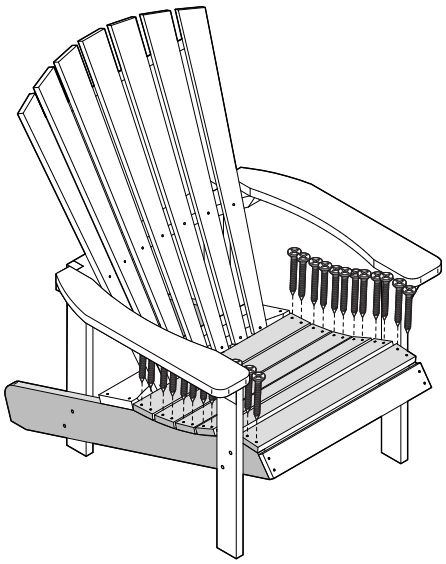

40MM SCREWS

Position the Seat Battens evenly along the curved section on the two Angled Legs. Secure using 4x40mm screws per Seat Batten as shown.


8

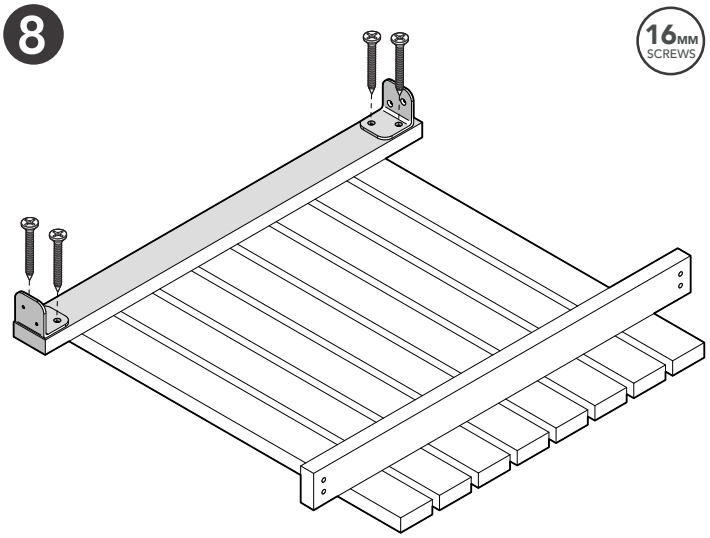

16MM SCREWS


Position and secure the L Brackets using 2x16mm screws to the Underside of the Shelf. Ensure they are centralized on the Back Batten, and flush to the ends.

9

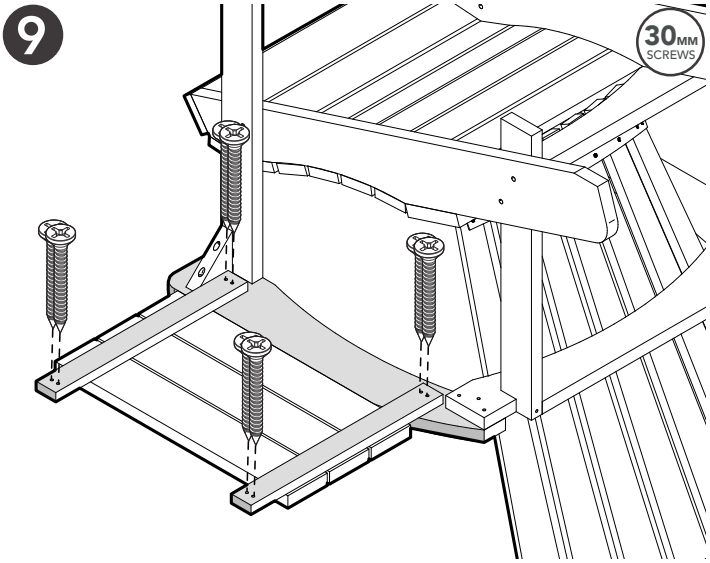

Position the Top Table so it sits flush to the side of the Arm, with the front batten butting up to the Corner Brace of the Chair. Secure using 2x30mm screws in each Batten end as shown.

10

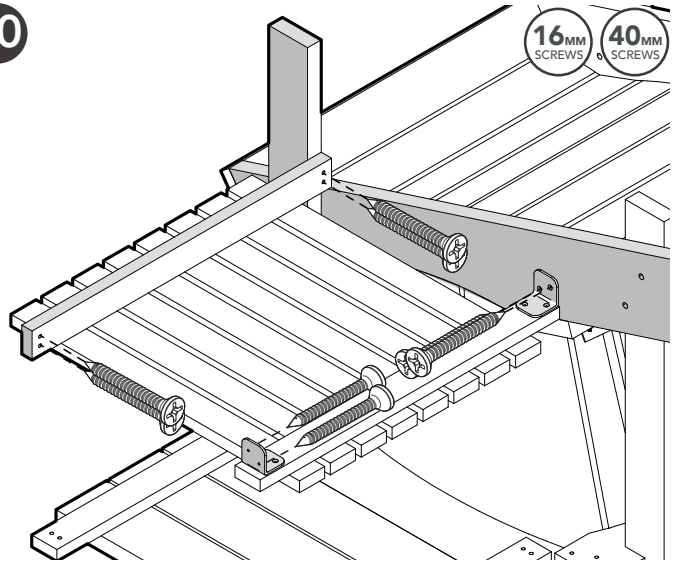

Position the Shelf so it sits level onto the Angled Seat Leg and flush up to the Front Leg. Secure into place once level using 2x16mm screws for each of the L brackets, and 2x40mm screws for each end of the front batten.

HEALTH & SAFETY

We strongly recommend that PPE (Personal Protective Equipment) is used throughout your build to ensure you are protected from any potential health and safety risks. **Do not exempt yourself from wearing PPE.**



TREATED TIMBER CONTAINING A BIOCIDAL PRODUCT

CONTROL OF WOOD DESTROYING ORGANISMS

Active Ingredients - Propiconazole, Tebuconazole, IPBC, Permethrine, Benzyl-C12-16-Alkyldimethyl Chlorides. (Dip Treated) Basic Copper Carbonate, DDA Carbonate, DDA Chloride. (Pressure Treated)

Wear gloves when handling. Avoid inhalation of sawdust. Do not use in contact with drinking water or food. Do not use for animal bedding or in fish ponds. Dispose of treated wood responsibly.

CHECK YOU HAVE ALL YOUR PARTS PRIOR TO ASSEMBLY.

(The parts do not have codes on them. They are listed below should you need to order one.)

Timber is a natural material of which will shrink and swell as a result of varying moisture content.
Assembly of damaged parts may be deemed to be acceptance and this may affect the remedies you are entitled to. If the product is not constructed in accordance with the instructions, or is altered in anyway (e.g. painted), the manufacturer cannot be held liable for any resulting damage.

The components provided may be heavy. Please lift with caution.

FLORIDA LOVE SEAT (FLS)			
Label	***Part Code***	**Description**	**No.**
1	*FLSCTPBATTEN*	Curved Back Chair Top Batten (120x24x650mm)	2
2	*FLSBKLEG*	Back Notched Chair Leg (68x24x550mm)	4
3	*FLSLHA*	Left Hand Arm Chair (120x24x650mm)	2
4	*FLSFRLEG*	Front Chair Leg (68x24x550mm)	4
5	*FLSRHA*	Right Hand Arm Chair (120x24x650mm)	2
6	*FLSASLEG*	Angled Seat Leg (120x24x950mm)	4
7	*FLSCBRACE*	Corner Chair Arm Chair (80x24x80mm)	4
8	*FLSSBATTEN*	Seat Batten (68x18x555mm)	14
9	*FLSCBTBATTEN*	Curved Chair Back Bottom Batten (120x24x555mm)	2
10	*FLORIDASHELF*	Florida Bottom Shelf	1
11	*FLORIDATABLE*	Florida top Table	1
12	*FLSBACK*	Florida Slat Seat Back	2

