
forest

Making British gardens great

ISSUE: 0124

KUBA RANGE INSTRUCTIONS


We recommend using the following tools (not supplied):

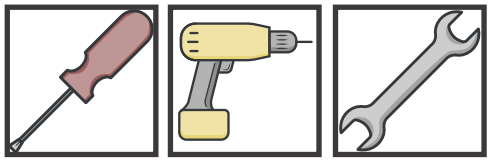

Pozidrive Screwdriver | Drill | Spanner

FIXING PACK CONTAINS:

FIXING PACK CODE: *KUBAFP*

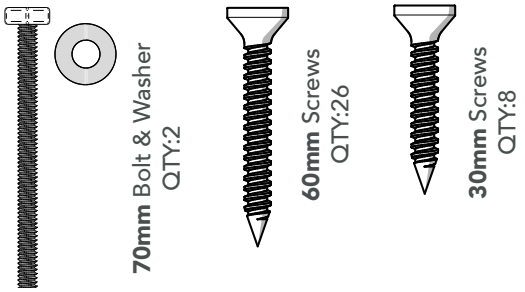


PLEASE KEEP PLASTIC BAGS AND SMALL PARTS AWAY FROM CHILDREN

CHECK AND TIGHTEN ALL THE FIXINGS APPLIED TO THIS PRODUCT ON A REGULAR BASIS.

IMPORTANT
Assembly requires 2+ adults.


REMINDER
Always pre-drill before screwing.

1

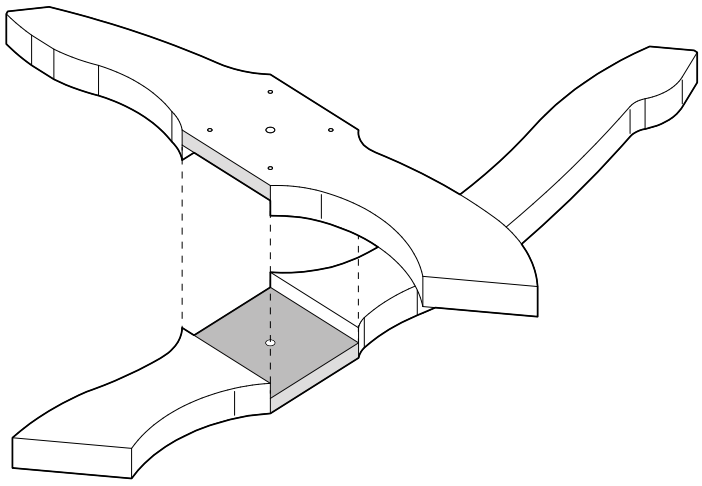

Position the Long and Short Left Legs on top of one another, as shown above, ensuring the middle bolt hole lines up through both.

2

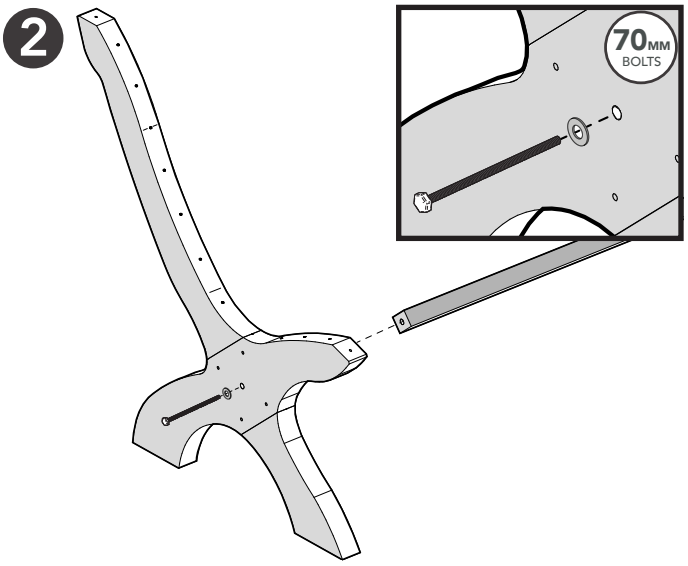

Place a washer on the bolt and insert through the Leg Assembly and into the Batten. The batten is fitted with an internal receiver. **Leave the bolt slighty loose. Repeat the process for the Right Leg.**

Chair Middle Batten (324mm), 4ft Middle Batten (724mm), 5ft Middle batten (1024mm)


Missing something or need more information?
Call our aftersales team on
0333 321 3142

Visit our website for spare instructions and more information
www.forestgarden.co.uk

Forest Garden, Oak Drive, Hartlebury Trading Estate, Hartlebury, Worcestershire, DY10 4JB
EU Authorised Representative: Authorised Representative Service, 77 Camden Street Lower Dublin, D02 XE80, Ireland

3


30MM SCREWS

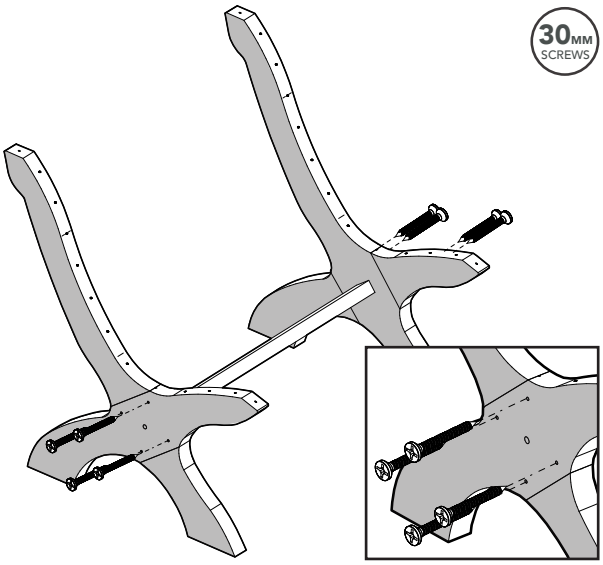

Secure the Leg Assembles together with 4x35mm screws for each Leg. Once secured, tighten the bolts fully.

4

60MM SCREWS

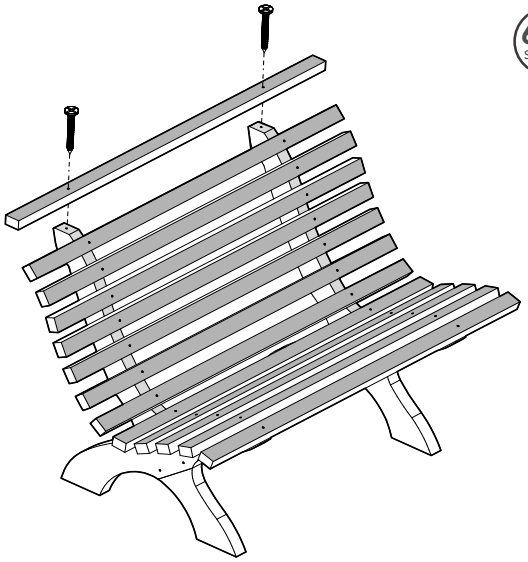

Position and secure the Slats to both Leg Assembles using 2x60mm screws for each slat. Ensure they all line up to the predrilled holes.

Chair Slat (600mm), 4ft Slat (1200mm), 5ft Slat (1500mm)

HEALTH & SAFETY

We strongly recommend that PPE (Personal Protective Equipment) is used throughout your build to ensure you are protected from any potential health and safety risks. **Do not exempt yourself from wearing PPE.**





TREATED TIMBER CONTAINING A BIOCIDAL PRODUCT
CONTROL OF WOOD DESTROYING ORGANISMS

Active Ingredients - Propiconazole, Tebuconazole, IPBC, Permethrine, Benzyl-C12-16-Alkyldimethyl Chlorides. (Dip Treated)
Basic Copper Carbonate, DDA Carbonate, DDA Chloride. (Pressure Treated)

Wear gloves when handling. Avoid inhalation of sawdust. Do not use in contact with drinking water or food. Do not use for animal bedding or in fish ponds. Dispose of treated wood responsibly.

CHECK YOU HAVE ALL YOUR PARTS PRIOR TO ASSEMBLY.

(The parts do not have codes on them. They are listed below should you need to order one.)

Timber is a natural material of which will shrink and swell as a result of varying moisture content.
Assembly of damaged parts may be deemed to be acceptance and this may affect the remedies you are entitled to. If the product is not constructed in accordance with the instructions, or is altered in anyway (e.g. painted), the manufacturer cannot be held liable for any resulting damage.

The components provided may be heavy. Please lift with caution and with a minimum of 2 people.

KUBA CHAIR (KUBACHAIR)			
Label	*Part Code*	Description	No.
1	*KUBALHLONGLEG*	Kuba Left Long Leg	2
2	*KUBARHLONGLEG*	Kuba Right Long Leg	2
3	*KUBALHSHORTLEG*	Kuba Left Short Leg	2
4	*KUBARHSHORTLEG*	Kuba Right Short Leg	2
5	*KUBACHAIRSLAT*	Slat (44x30x600mm)	13
8	*KUBACHAIRBATTEN*	Batten (44x30x324mm)	1

KUBA 4FT BENCH (KUBA4)			
Label	*Part Code*	Description	No.
1	*KUBALHLONGLEG*	Kuba Left Long Leg	2
2	*KUBARHLONGLEG*	Kuba Right Long Leg	2
3	*KUBASHORTLEG*	Kuba Left Short Leg	2
4	*KUBARHSHORTLEG*	Kuba Right Short Leg	2
6	*KUBA4SLAT*	Slat (44x30x1200mm)	13
9	*KUBA4BATTEN*	Batten (44x30x724mm)	1

KUBA 5FT BENCH (KUBA5)			
Label	*Part Code*	Description	No.
1	*KUBALHLONGLEG*	Kuba Left Long Leg	2
2	*KUBARHLONGLEG*	Kuba Right Long Leg	2
3	*KUBALHSHORTLEG*	Kuba Left Short Leg	2
4	*KUBARHSHORTLEG*	Kuba Right Short Leg	2
7	*KUBA5SLAT*	Slat (44x30x1500mm)	13
10	*KUBA5BATTEN*	Batten (44x30x1024mm)	1

