Holsted

HOME


200cm Sliding Wardrobe

WHITE/WOODGRAIN - 890/7497 914/0260 887/3875 735/6159

GLOSS - 886/8983 916/5001

MIRROR - 882/7357 893/9647 920/0344 884/2088

GLOSS/MIRROR -886/7331 887/7314

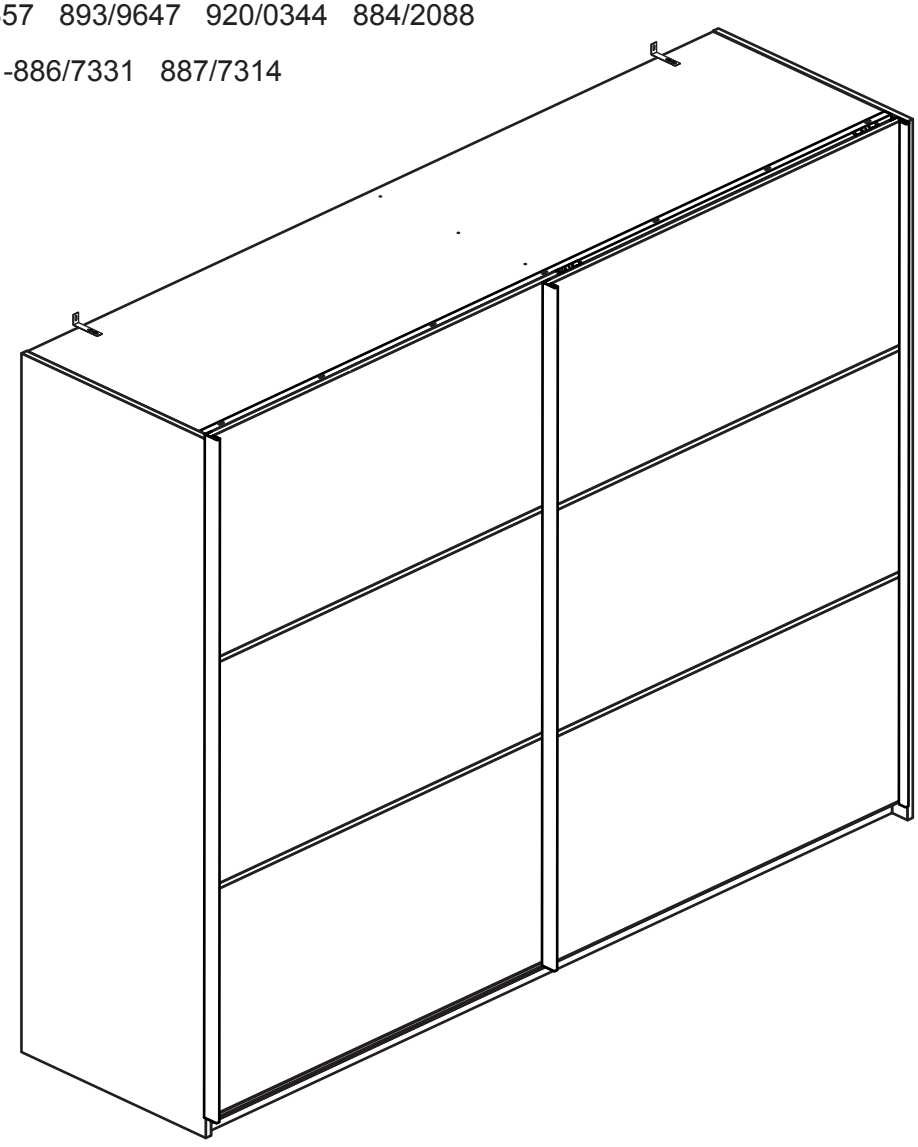

Spare Parts

Visit: www.argos-support.co.uk

Email: Help@ClickSpares.co.uk

Call: 0330 016 1114

Customer Support

Call: 0345 640 2020

Issue 3 - 18/12/19

Safety

Important - Please read these instructions fully before starting assembly

• Warning: This unit weighs approximately 131kgs. Please lift with care.

• During assembly children should be kept away from the product due to possible risk of injury.


• Installation shall only be carried out exactly according to the manufacturer's instructions - otherwise a safety risk can occur if incorrectly installed.


• Do not use this item if any components are missing or damaged.

• WARNING: To prevent possible overbalancing this unit must be secured to a wall using the 2 overbalance protector kits supplied.

• A unit that is allowed to topple can cause serious or fatal injury. In addition to wall fixing the unit, place heavy items on the lower shelves, do not put any heavy objects on top of the unit and never allow children to climb or hang on drawers, doors or shelves.

• Refer to guide after section 31 for wall fixing information.

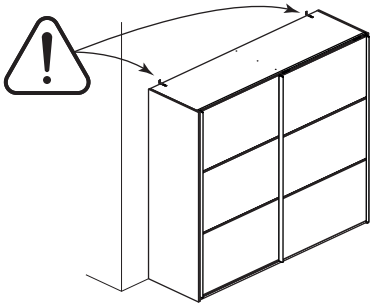

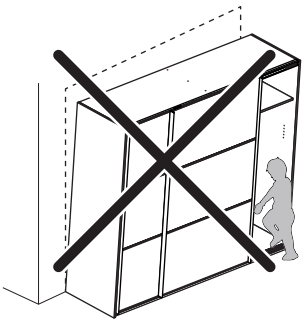

Care Advice

• Check you have all the components and tools listed on relevant pages.

• Remove all fittings from the specified plastic bag and separate them into their groups.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).

• Assembly videos are available throughout these instructions by scanning in the QR codes.





• We do not recommend the use of power drill/drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

• Only clean with a damp cloth.

Tools

















Only used for drilling walls

Cabinet Panels

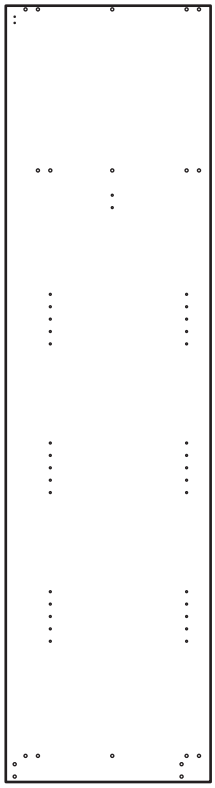


DF-00016596

1 200.5 x 52.9cm

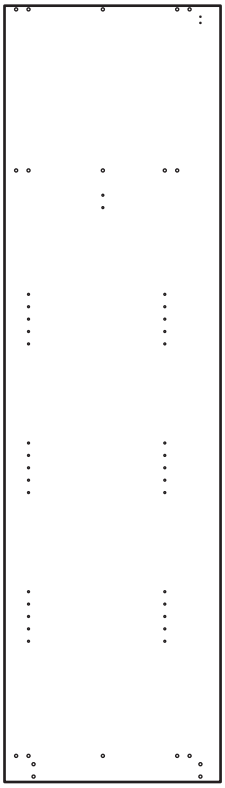


DF-00016598

2 200.5 x 55.8cm

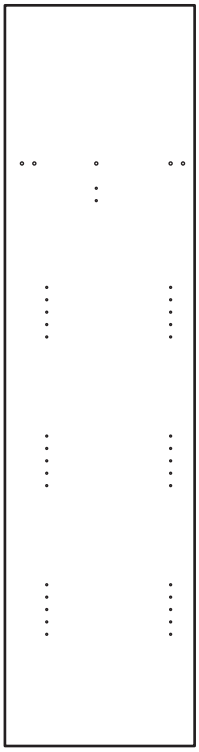

DF-00016600

3 191.3 x 49cm

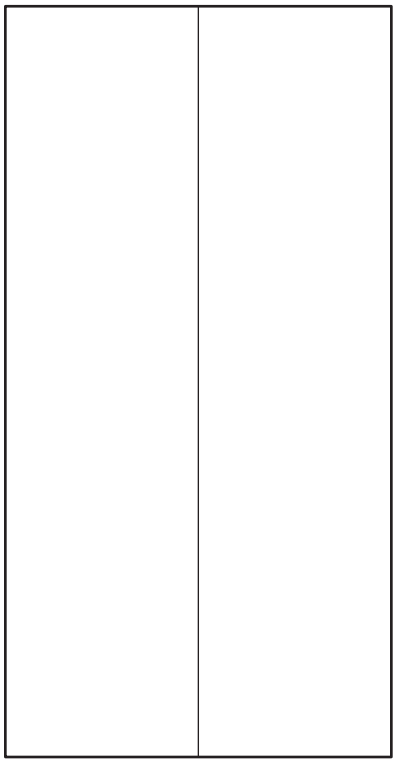


XDF-00016878

4 193.9 x 99.7cm x 2




DF-00016879

5 197 x 51.4cm

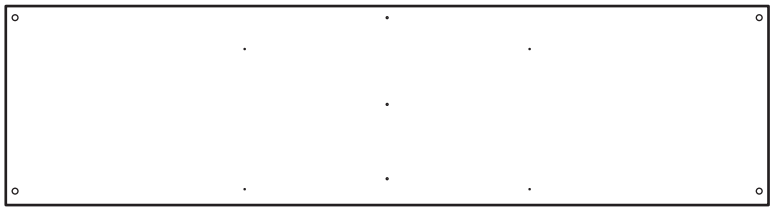


DF-00016886

6 197 x 51.4cm



DF-00016881


7 197 x 6cm x 2

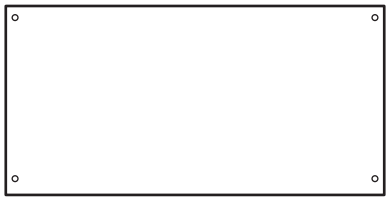

DF-00016880


8 97.75 x 48.8cm x 2

Door Panels

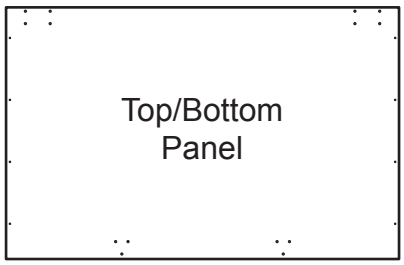

DF-00016883 *White & Woodgrain*
DF-00016888 *Gloss*
DF-00016891 *Mirror*

9 101.5 x 65cm x 4

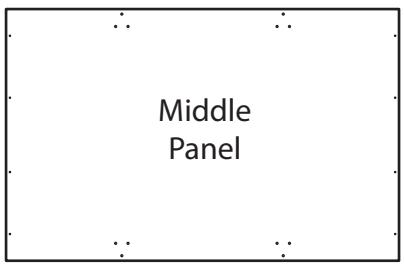

DF-00016884 *White & Woodgrain*
DF-00016889 *Gloss*
DF-00016893 *Mirror*


10 101.5 x 65cm x 2

Fittings

Use these drawings to correctly identify the fittings

NOTE: In some cases more fittings may be supplied than are required


Bag 1a




A x 12



B x 16




C x 26




D x 3




E x 2

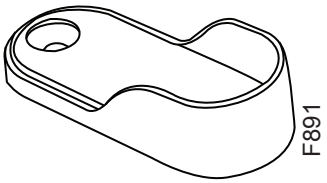

F x 4

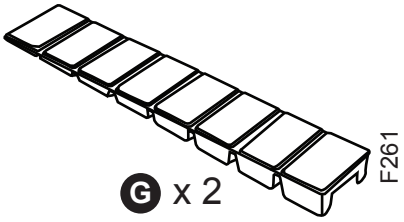


G x 2

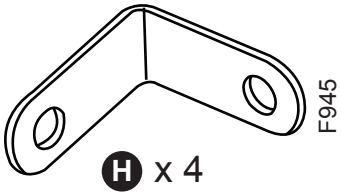


H x 4

Bag 1b



I x 6



J x 52




K x 63




L x 4




M x 58




N x 6




O x 6

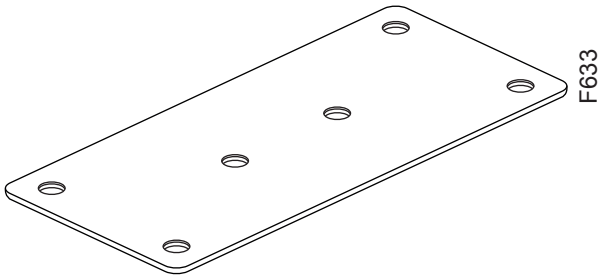

P x 8

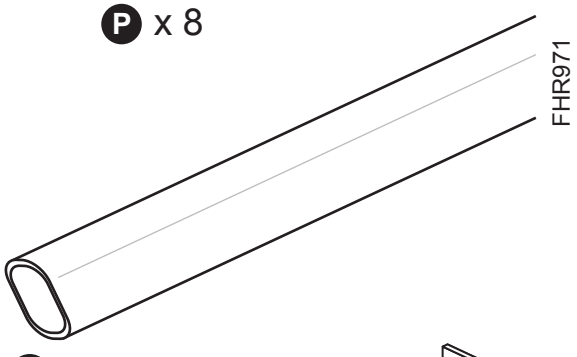


Q x 2

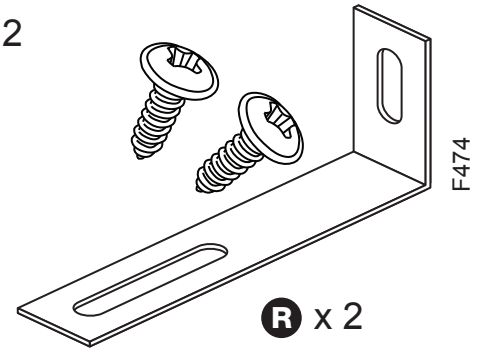


R x 2


Tracks, Handles and Door Trim

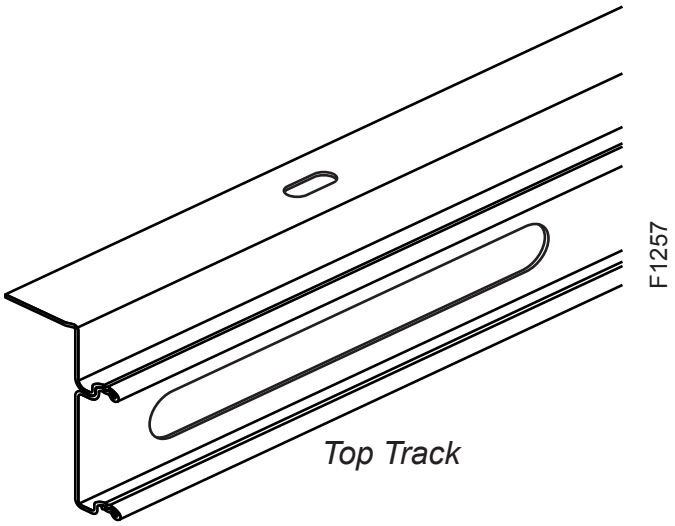


S x 1

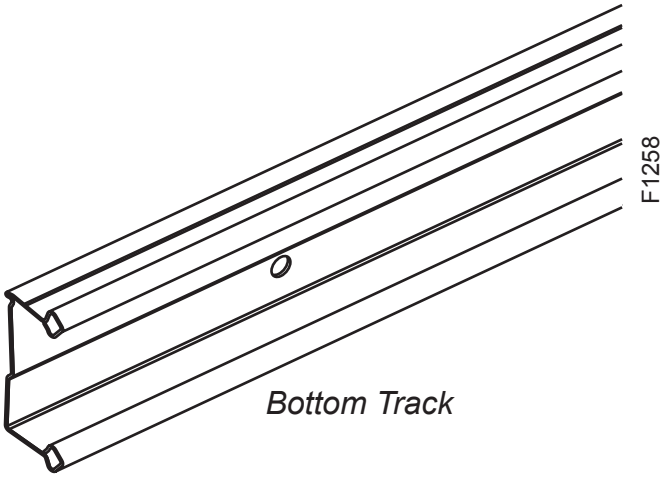


T x 1

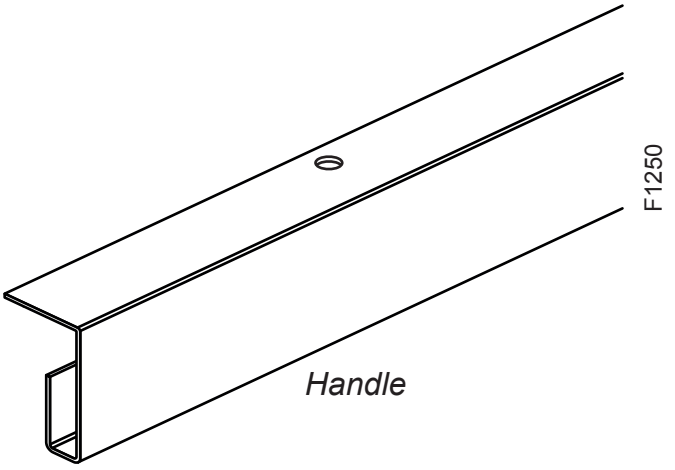

U x 3

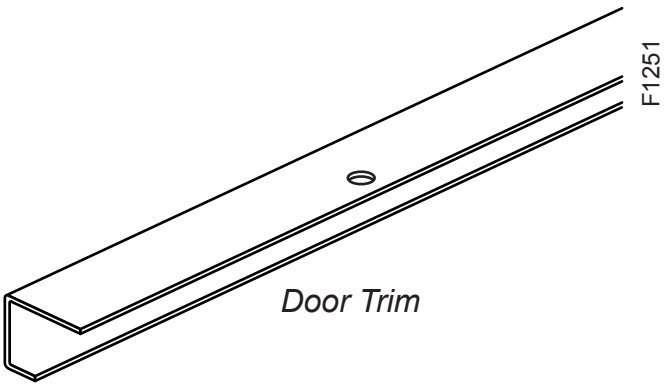


V x 1

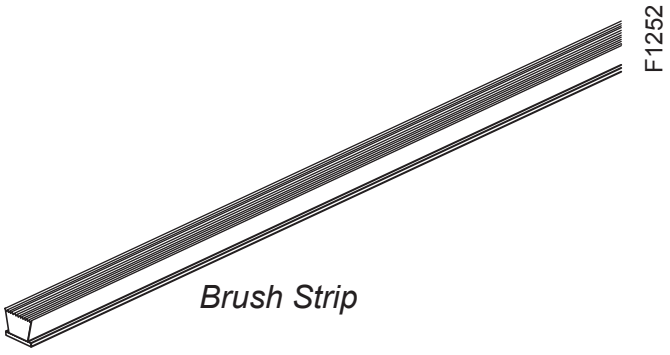


W x 3

Fittings Box for Doors

NOTE: In some cases more fittings may be supplied than are required

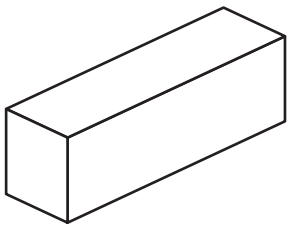

IMPORTANT: Please ignore the instruction leaflet supplied with this box of fittings. Only use the main assembly instructions




AA x 2




AB x 24




AC x 11

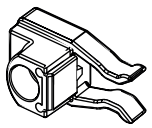


AD x 2

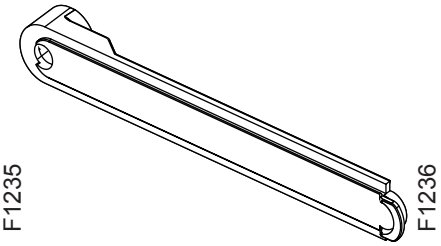


AE x 2

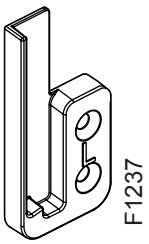


AF x 1

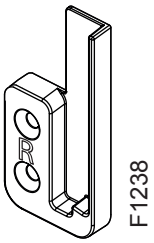


AG x 1

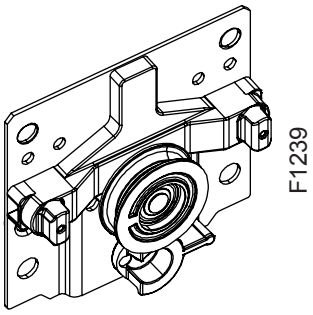


AH x 1

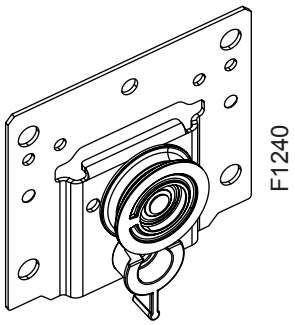


AI x 1

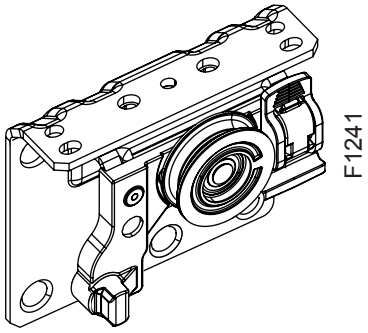


AJ x 1

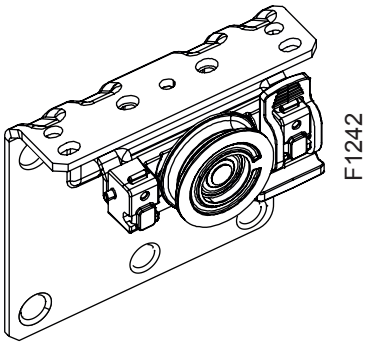


AK x 1

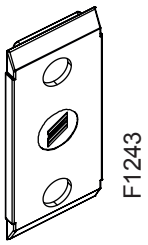


AL x 4

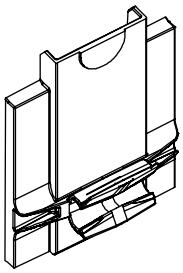

AM x 2

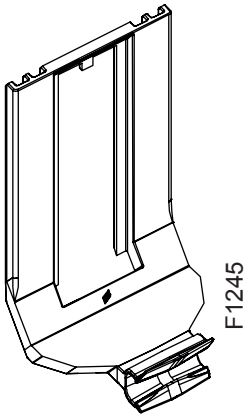



AN x 2




AO x 1


1

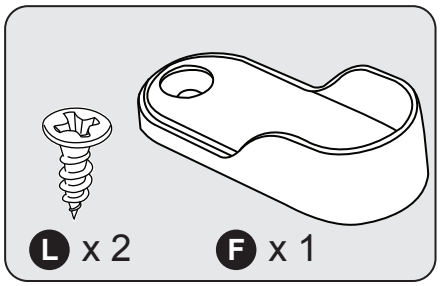


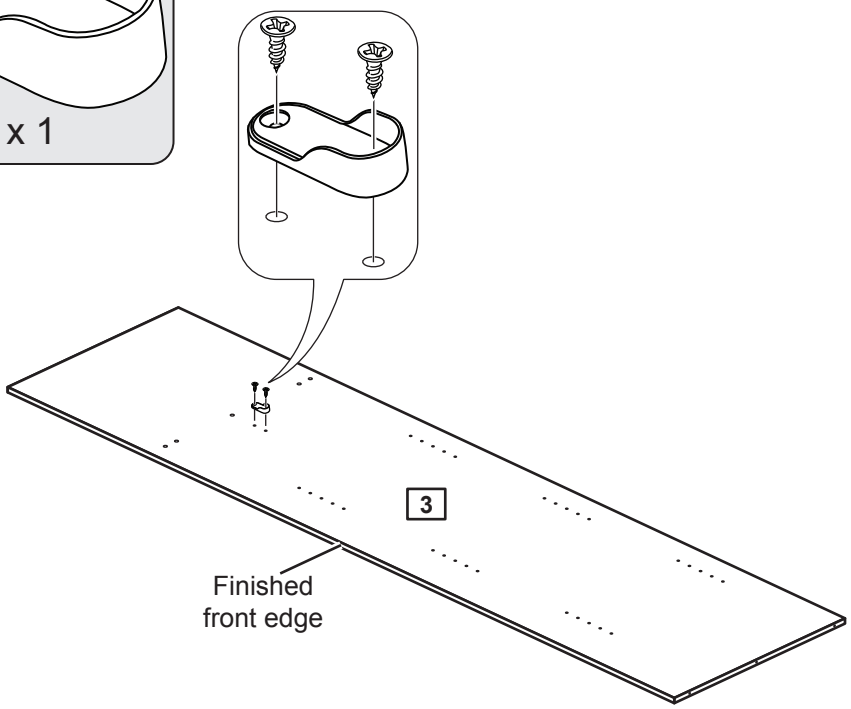


2

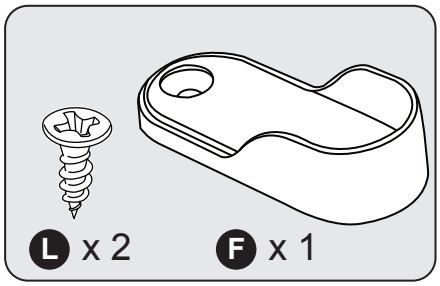


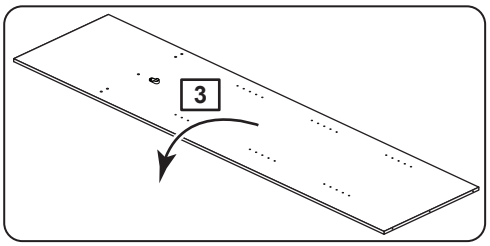


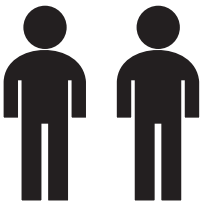

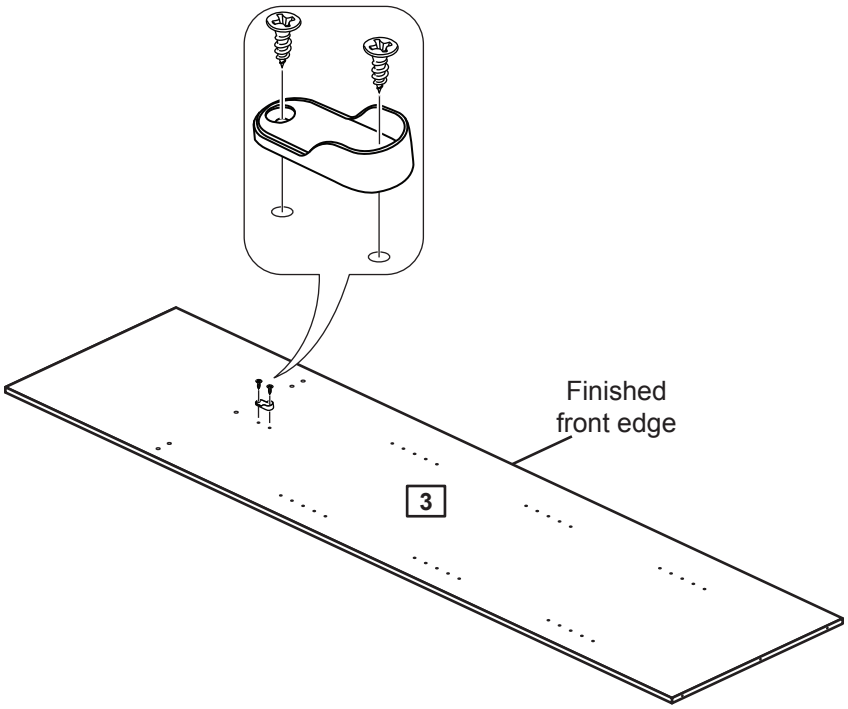


3

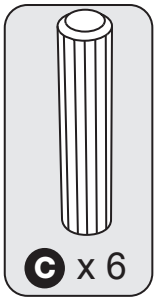

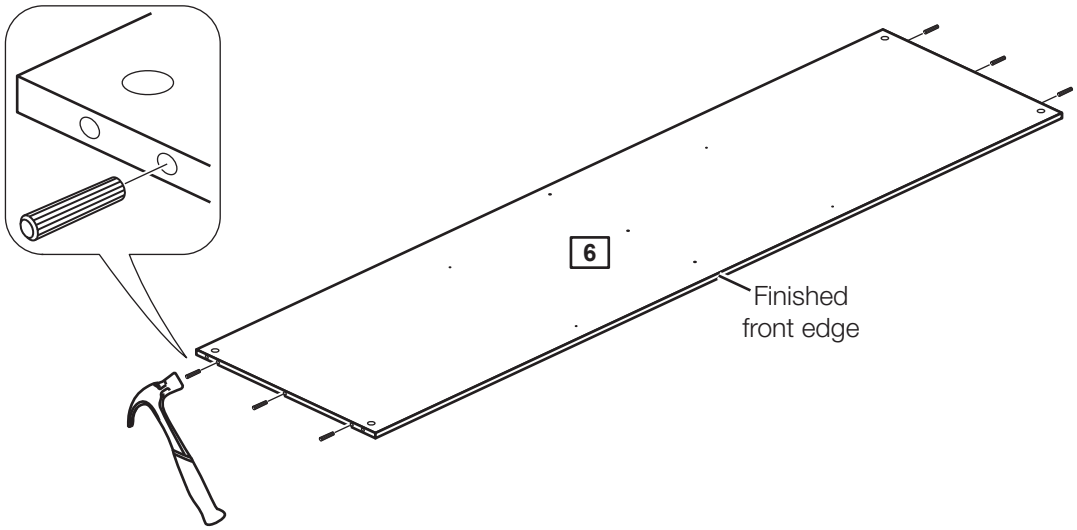


4

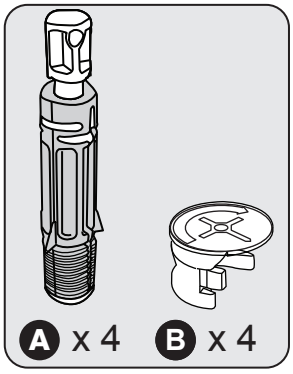



Panel Assembly


https://www.youtube.com/watch?v=33kDsSSfxjw

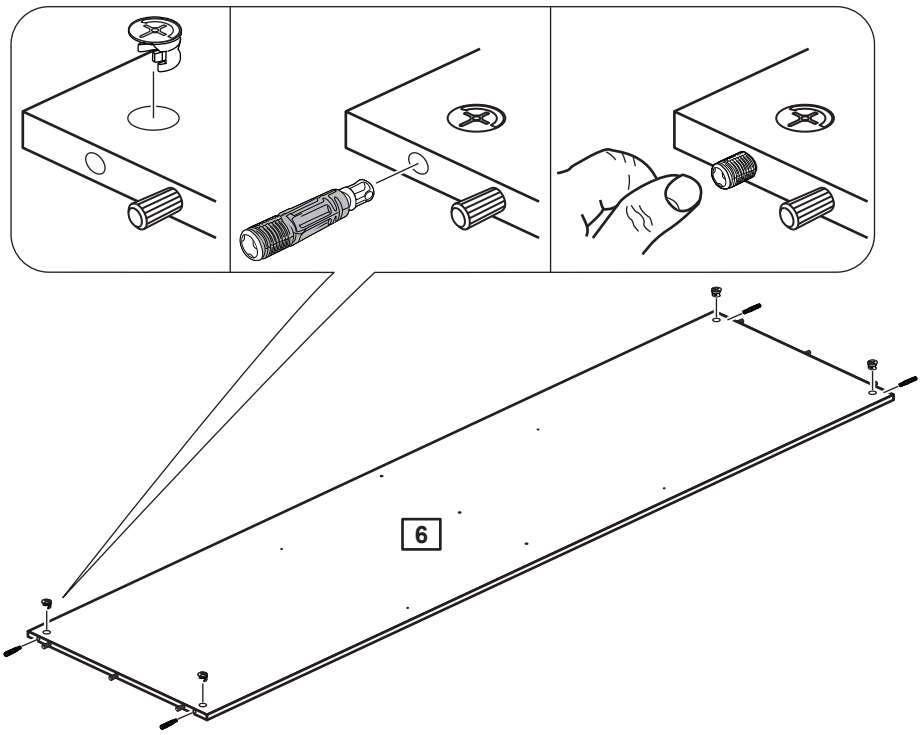


5

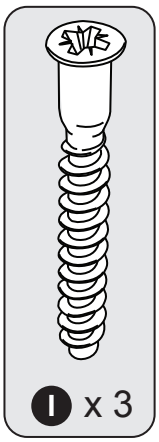

I x 3

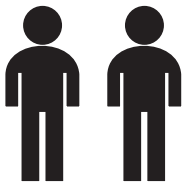

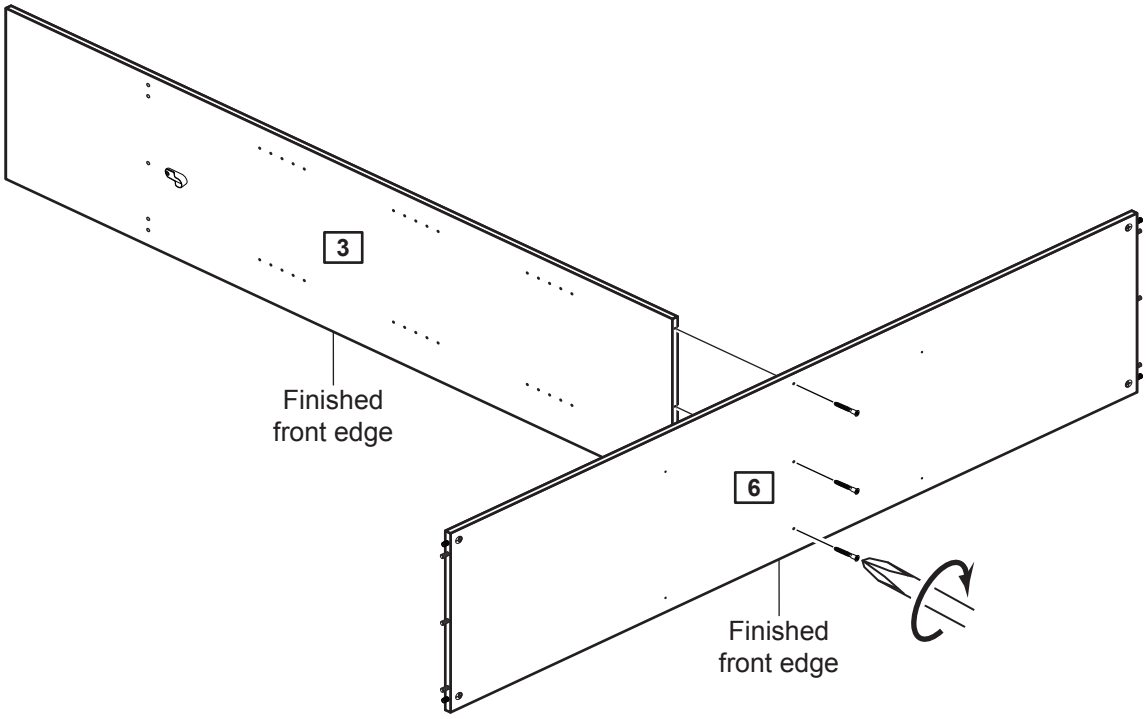

3
Finished
front edge
6
Finished
front edge

6

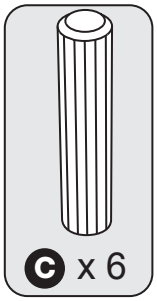
C x 6

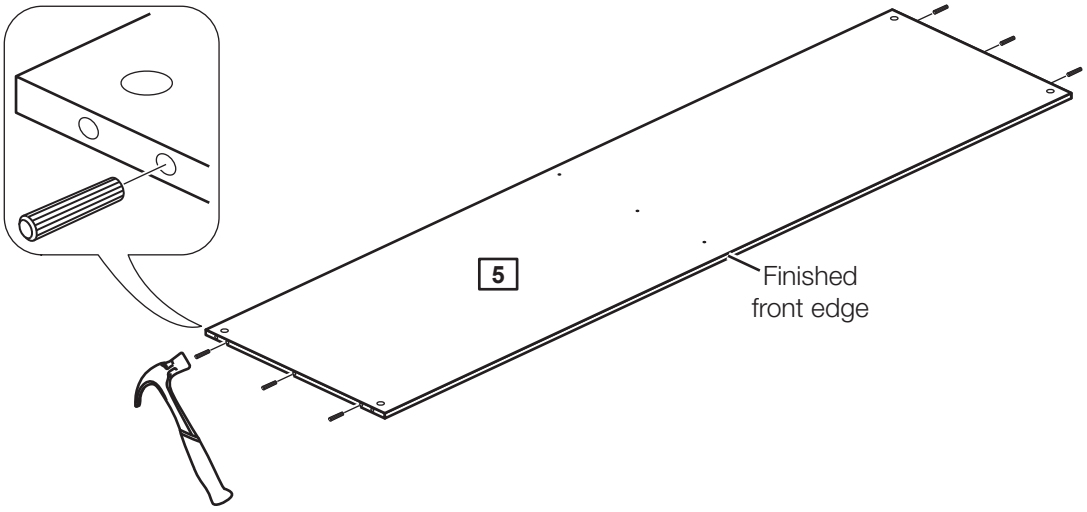

5
Finished
front edge

7

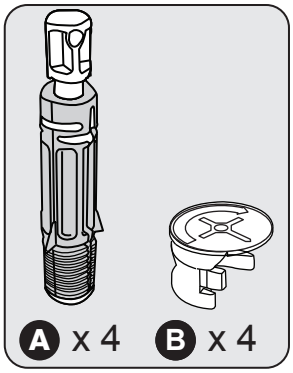



Panel Assembly

https://www.youtube.com/watch?v=33kDsSSfxjw

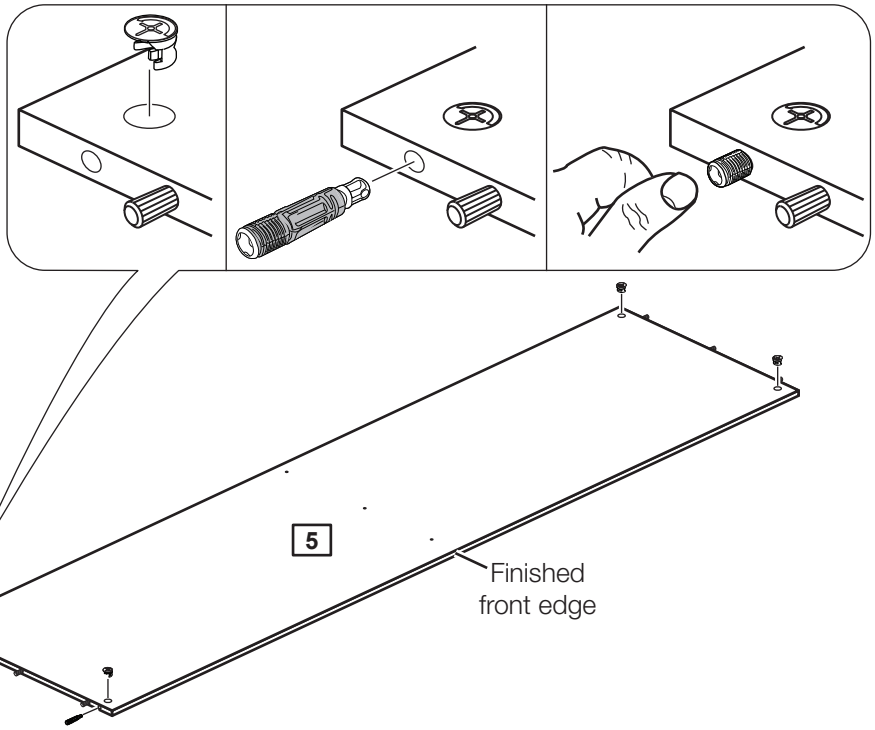



8

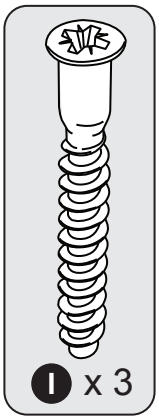

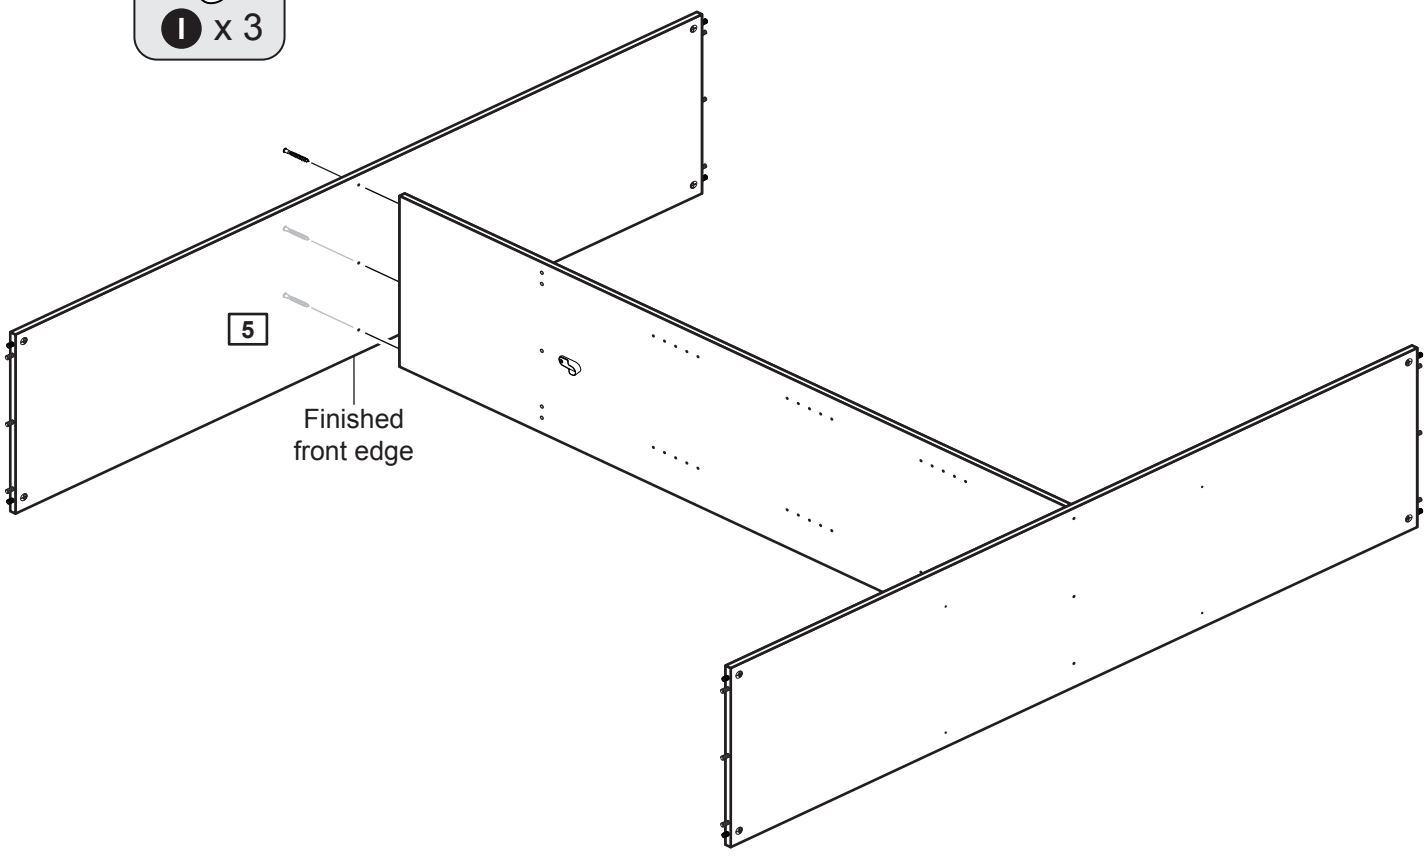



9

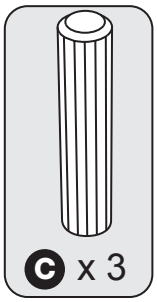
C x 3

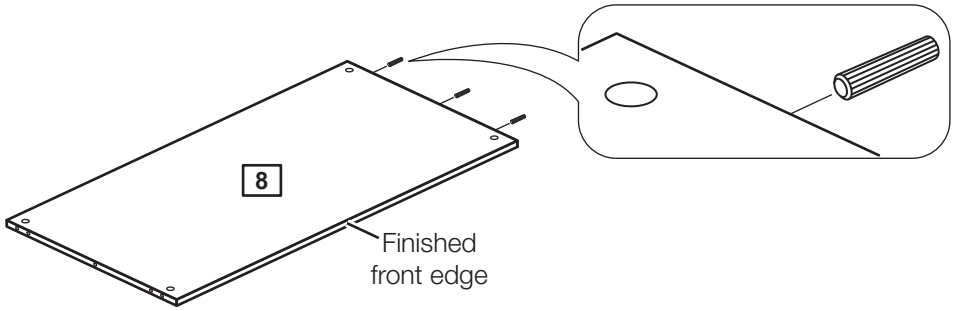

8
Finished
front edge

10

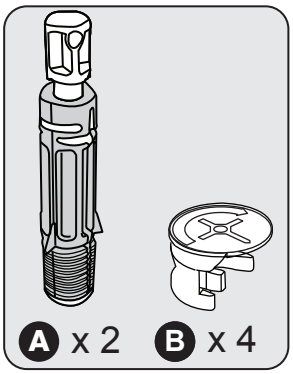
A x 2
B x 4

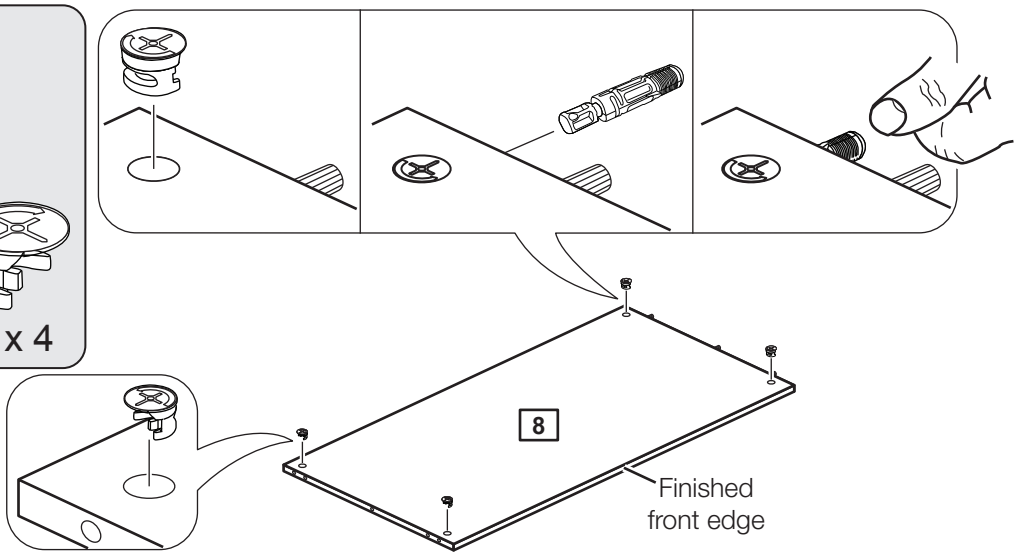

8
Finished
front edge

11

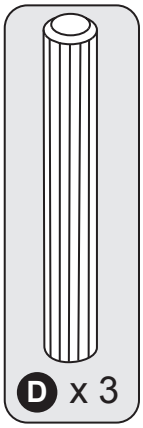
D x 3

8
Finished
front edge


12

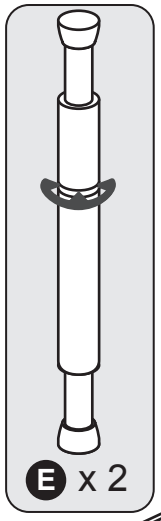


13


Panel Assembly

https://www.youtube.com/watch?v=33kDsSSfxjw

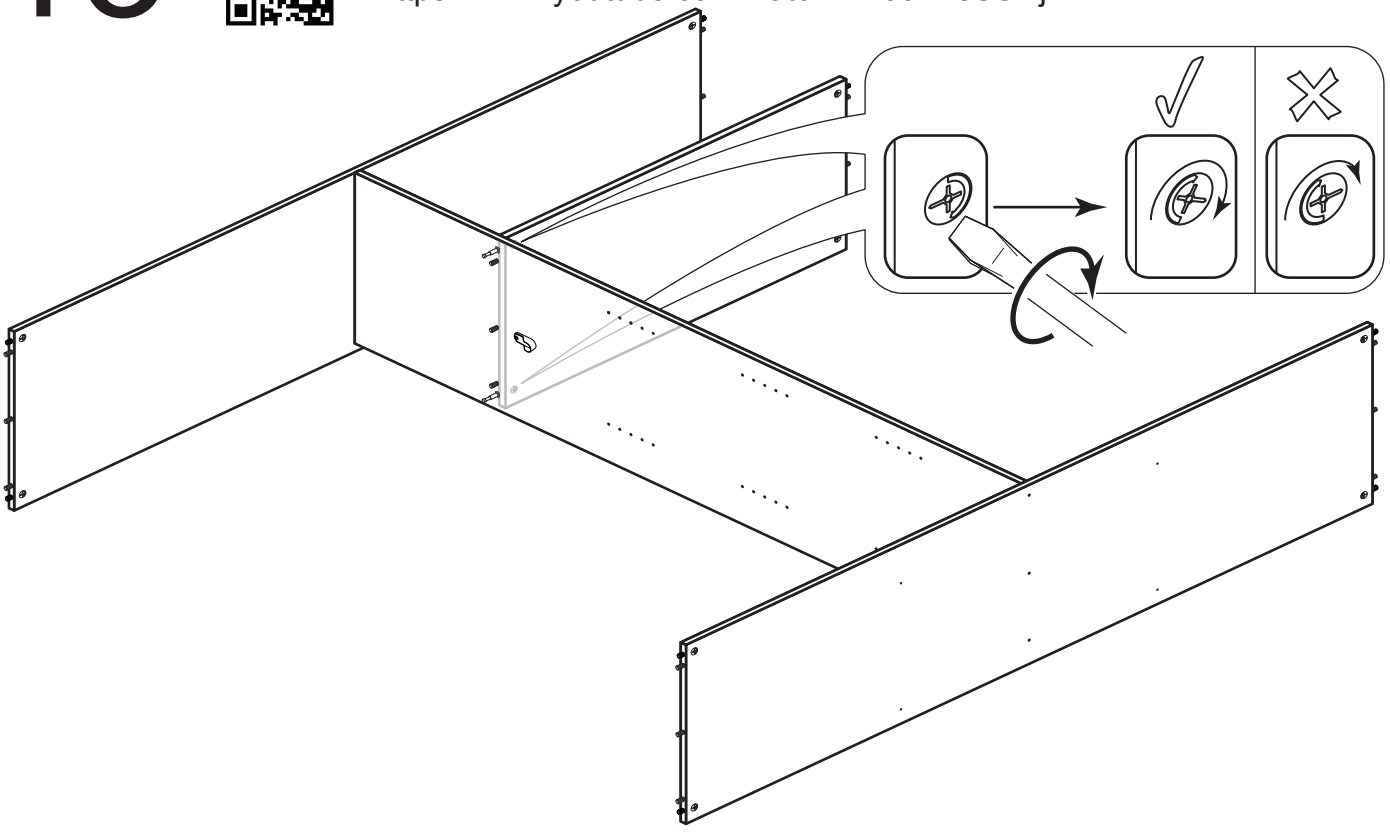



14

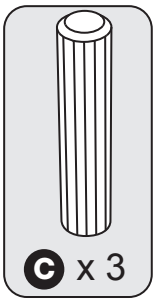
C x 3

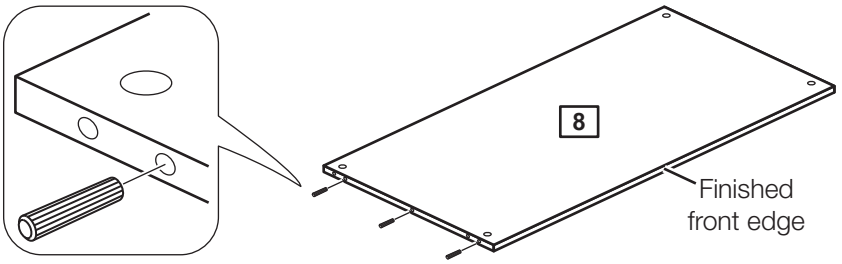

8
Finished
front edge

15

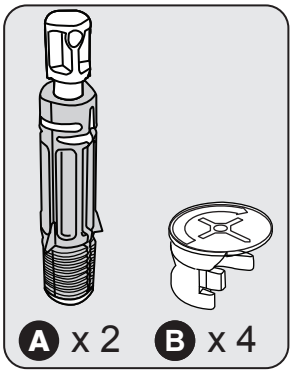
A x 2
B x 4

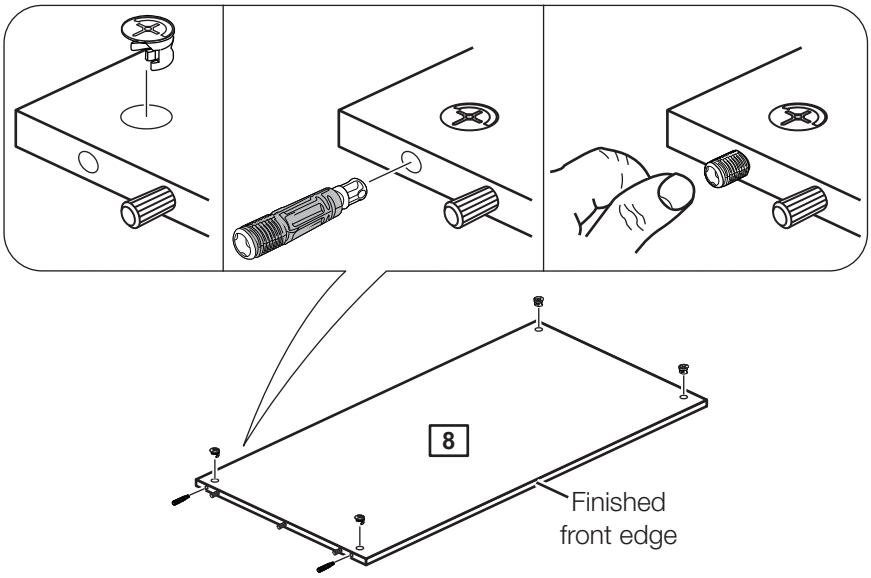
8
Finished
front edge


16

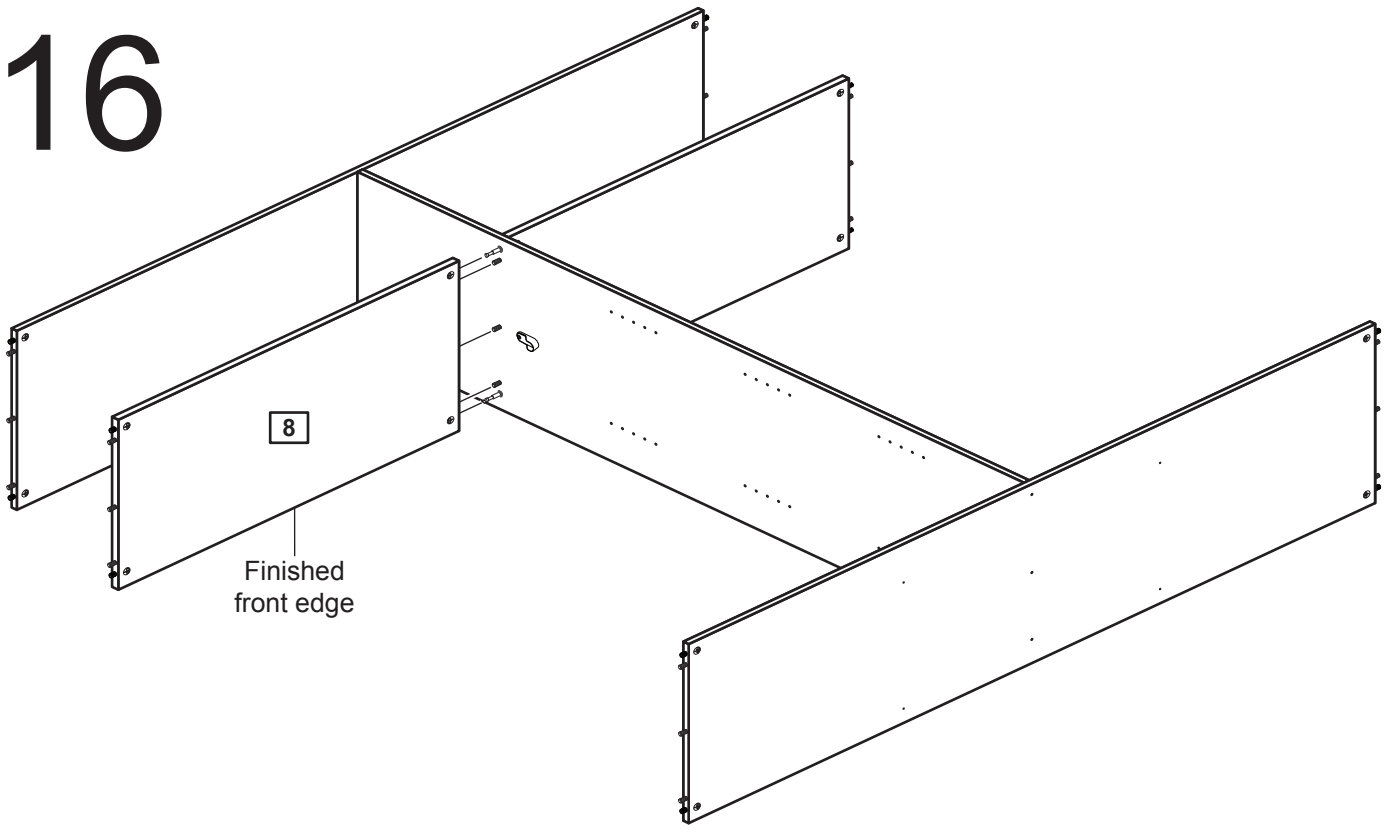
8
Finished
front edge


17


Panel Assembly

https://www.youtube.com/watch?v=33kDsSSfxjw

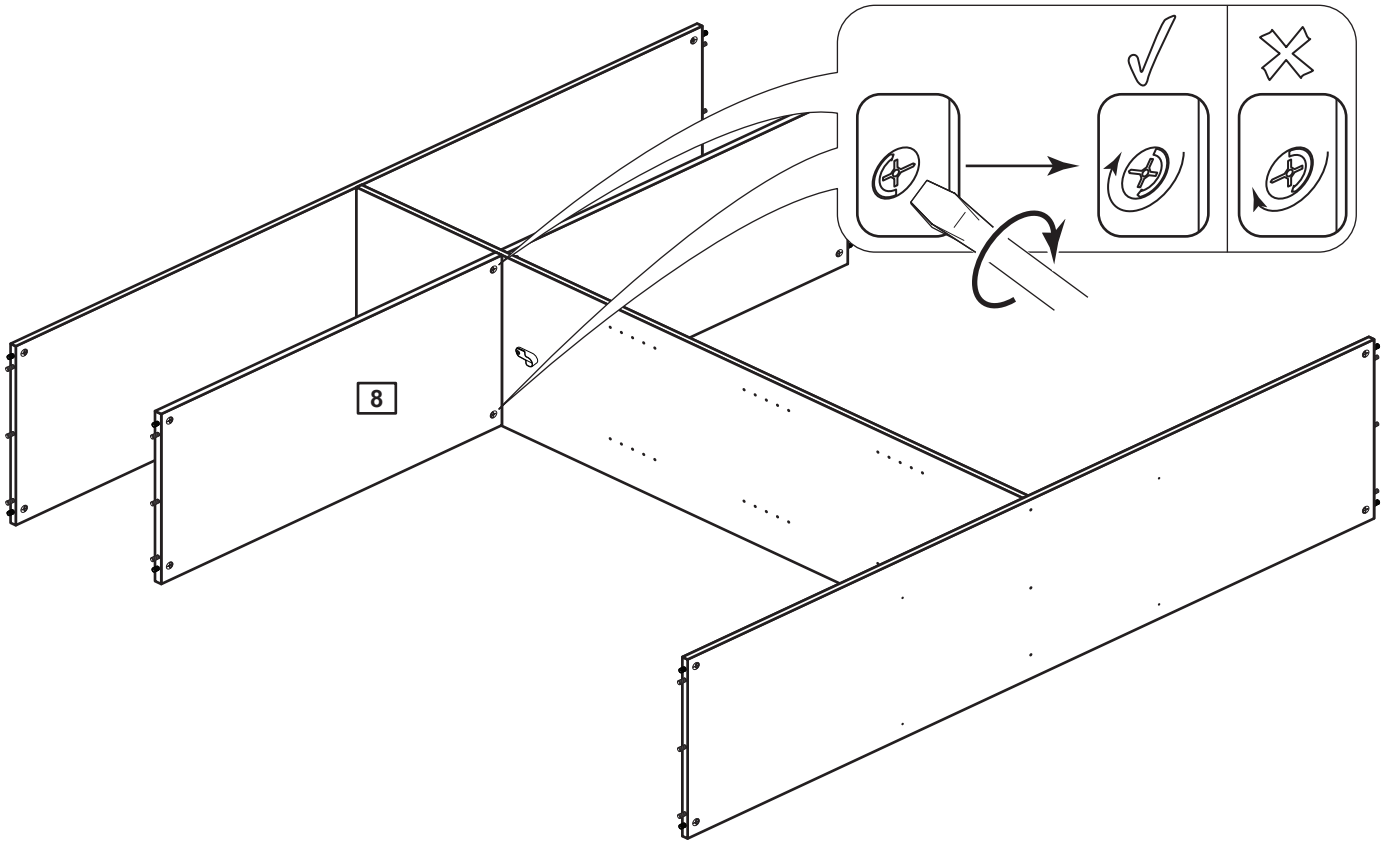



18

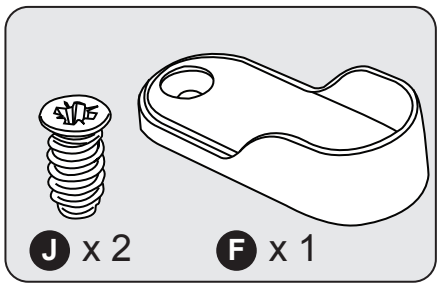


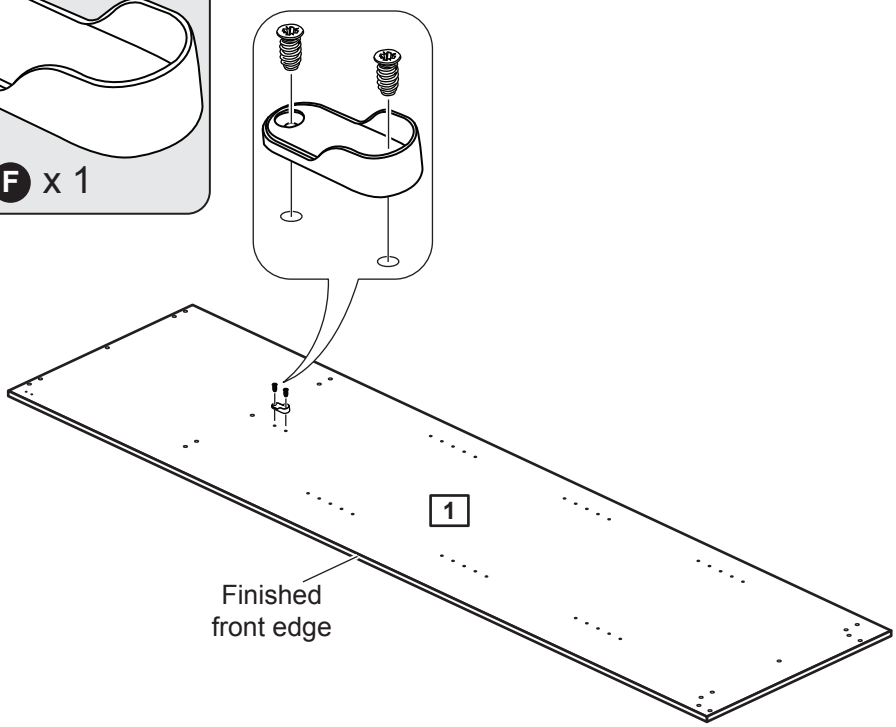


19

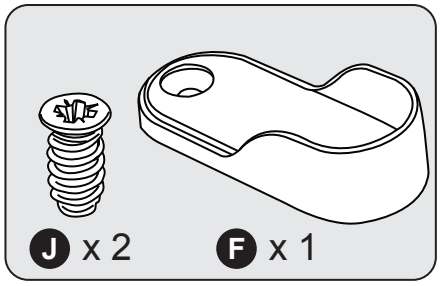


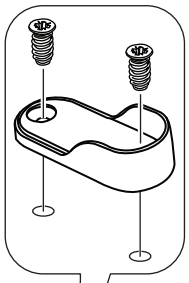

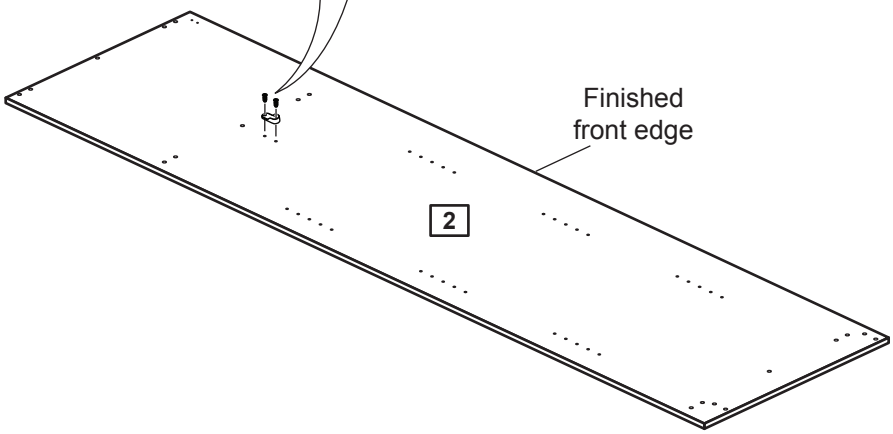


20

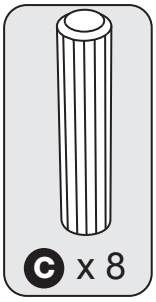


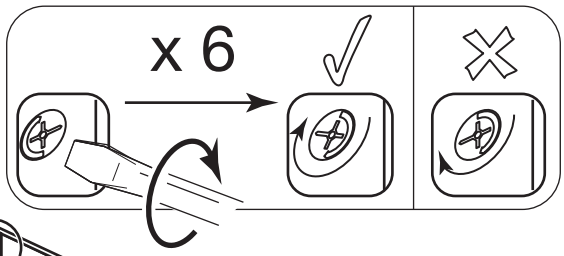


21

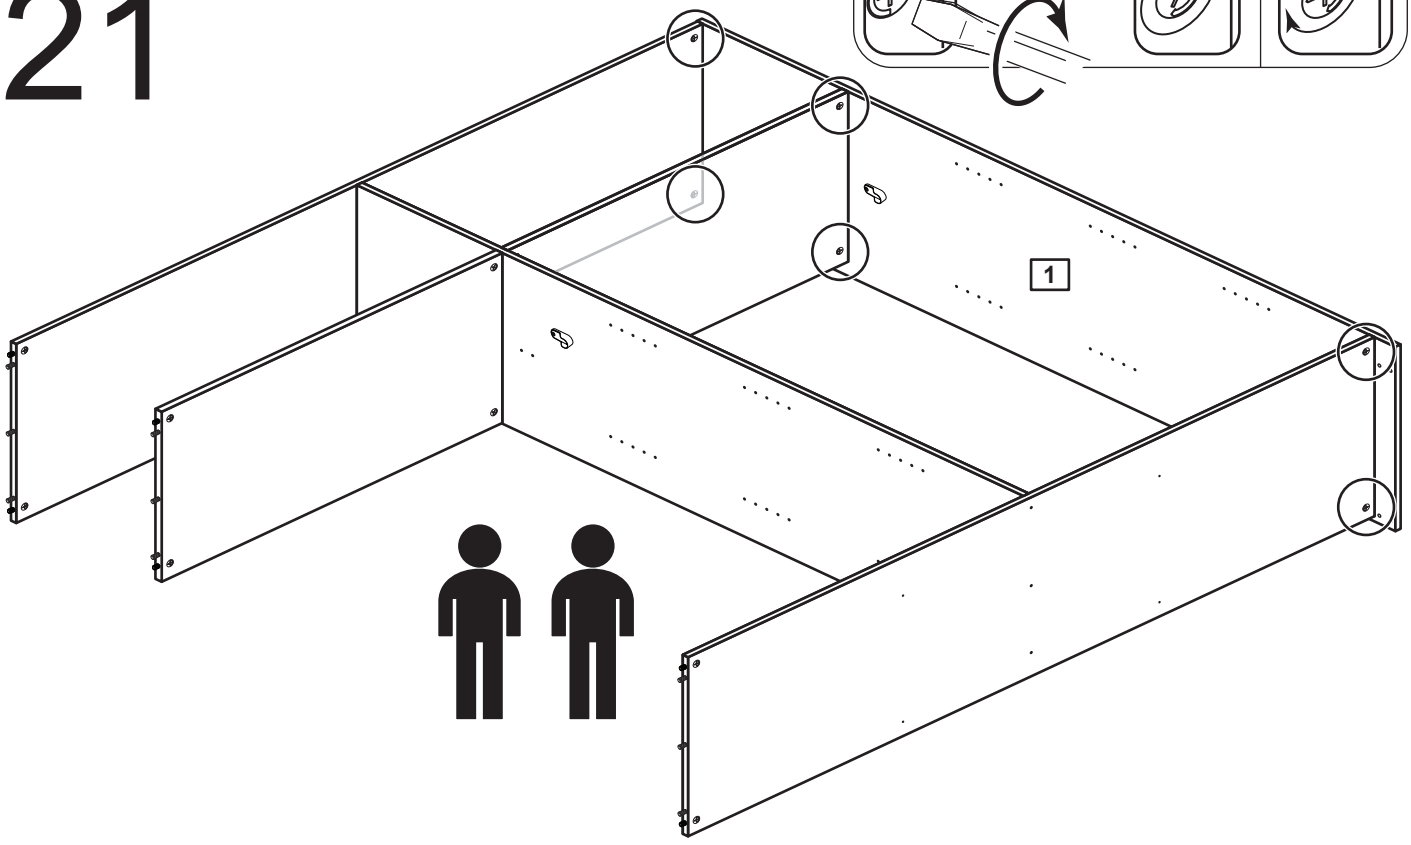


22

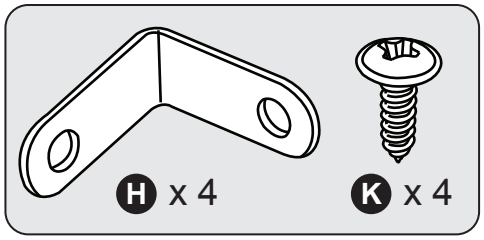

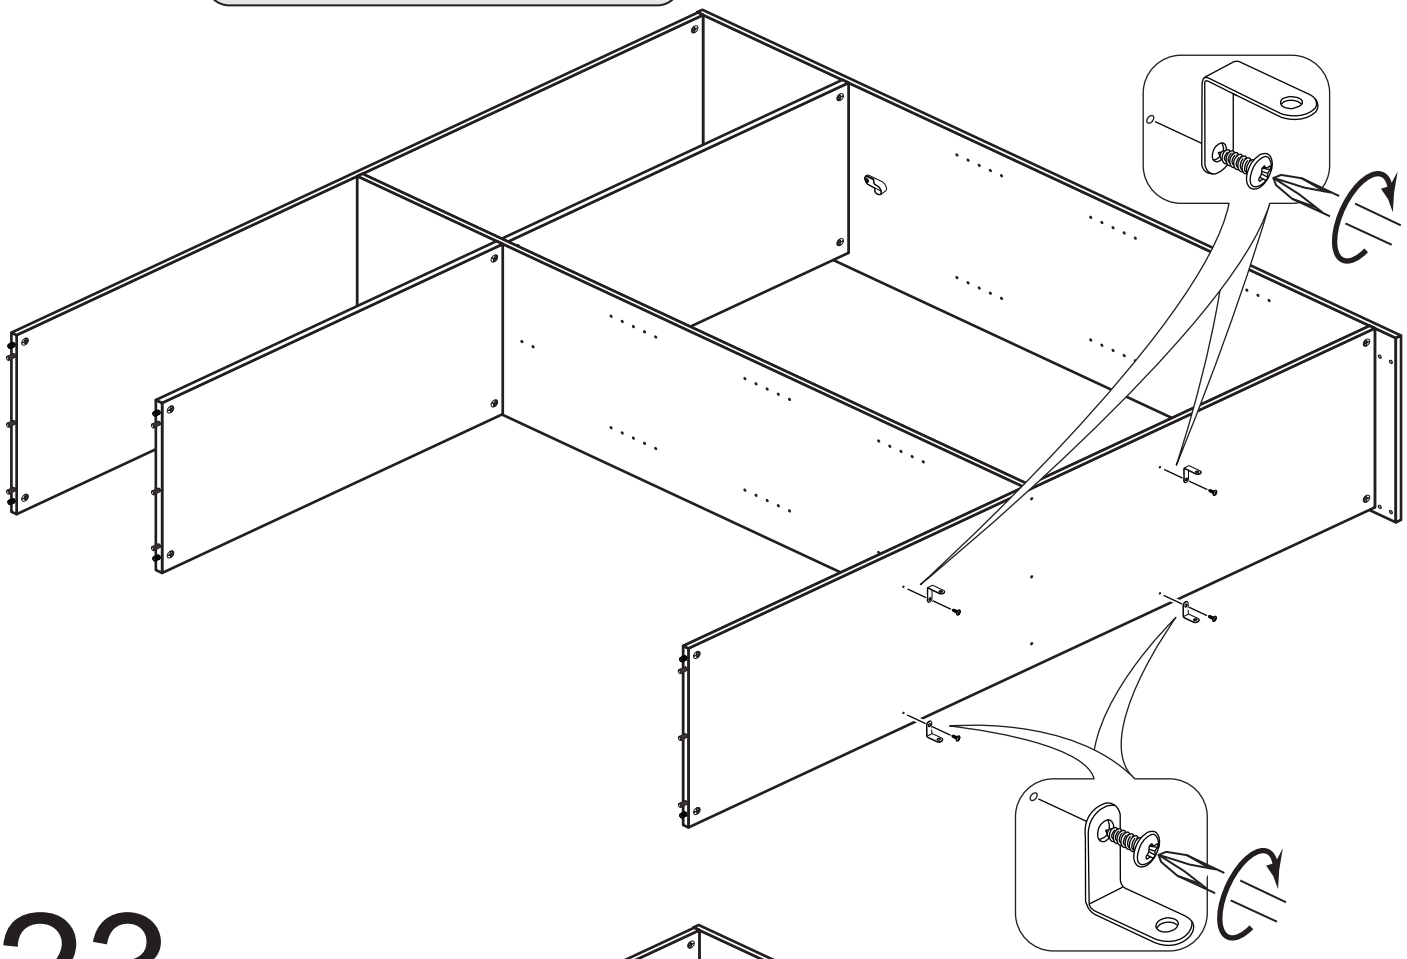


23

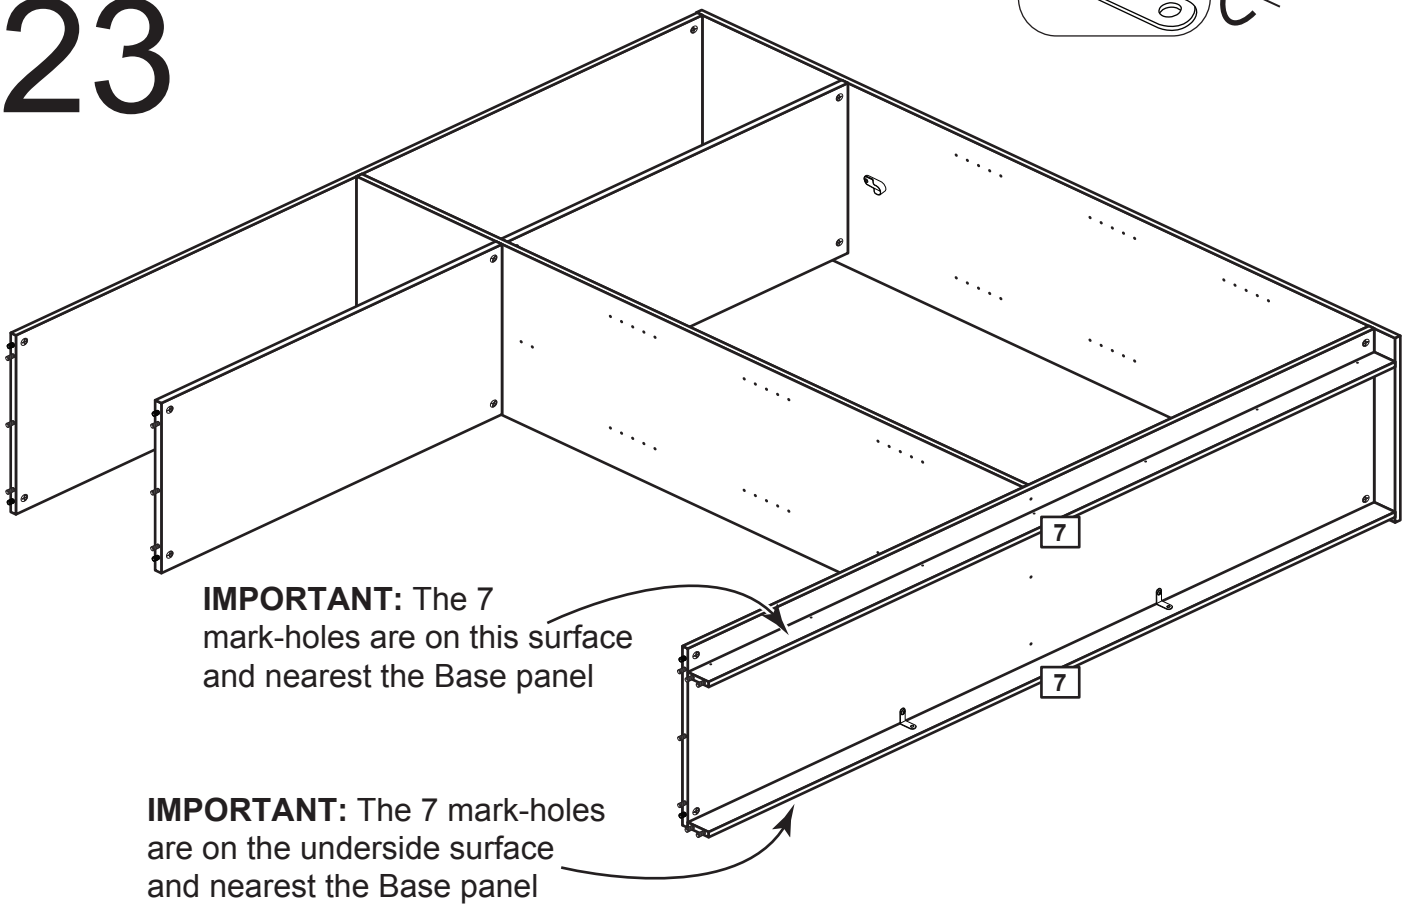



IMPORTANT: The 7 mark-holes are on this surface and nearest the Base panel

IMPORTANT: The 7 mark-holes are on the underside surface and nearest the Base panel


24

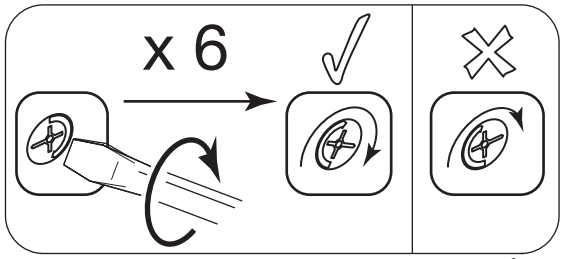

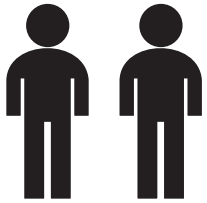

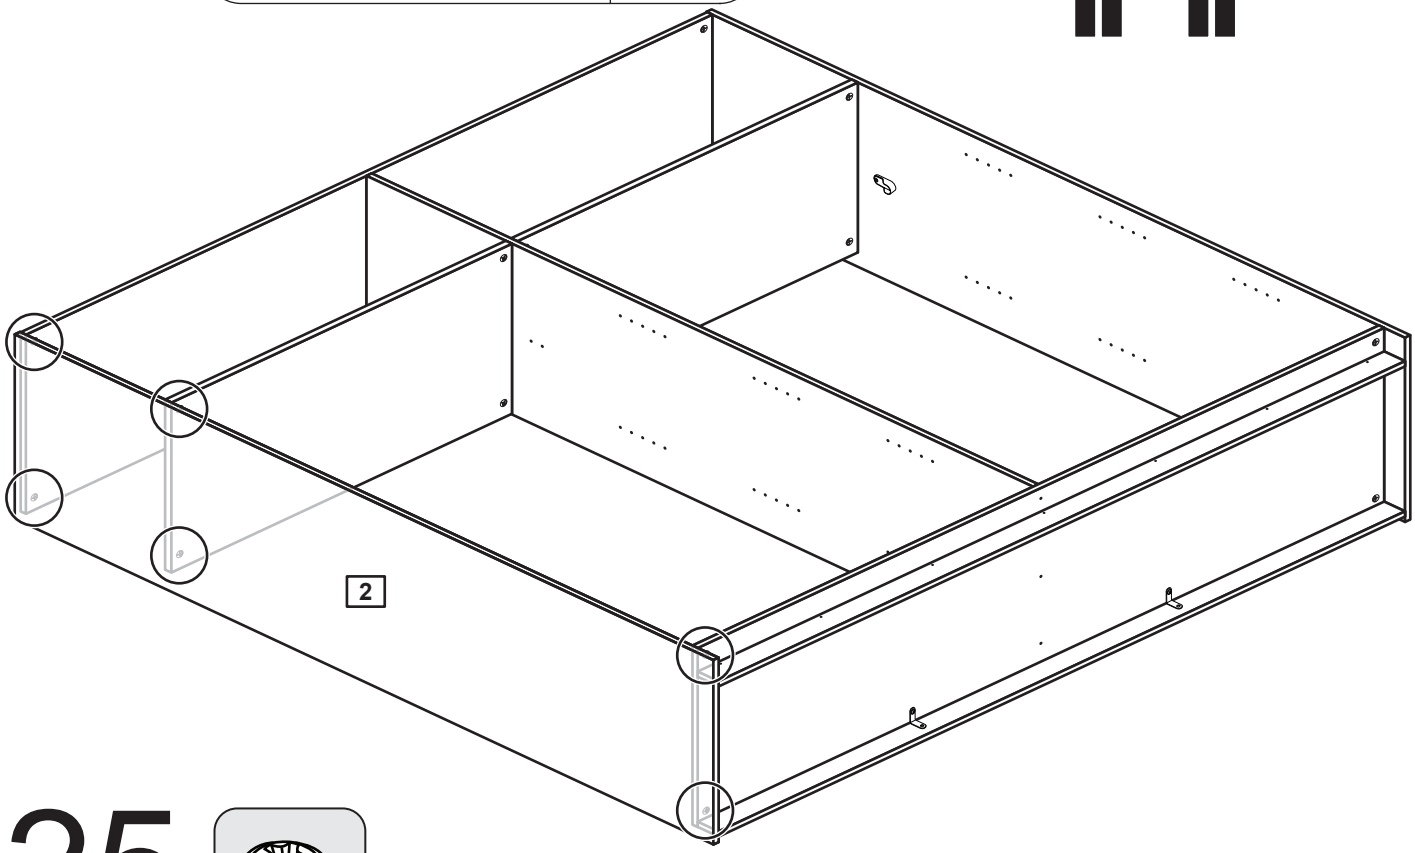

25

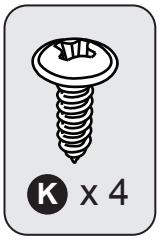

26


Squaring up a Robe and fitting the Back Panel

www.youtube.com/watch?v=udEKmXmPEW0



Make sure measurement A and B are the same before attaching parts 4

27

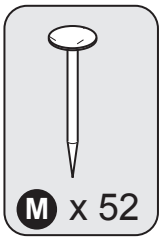



IMPORTANT:
You will need to keep 6 nails for the next step




IMPORTANT:
DO NOT nail where the Back panels meet


28

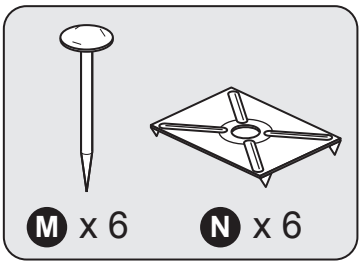

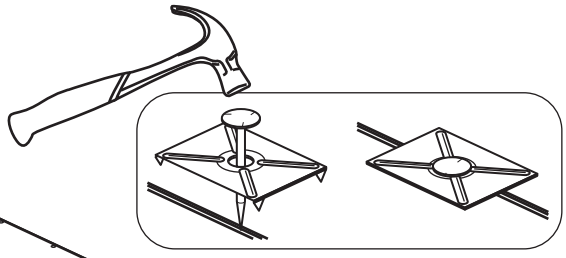


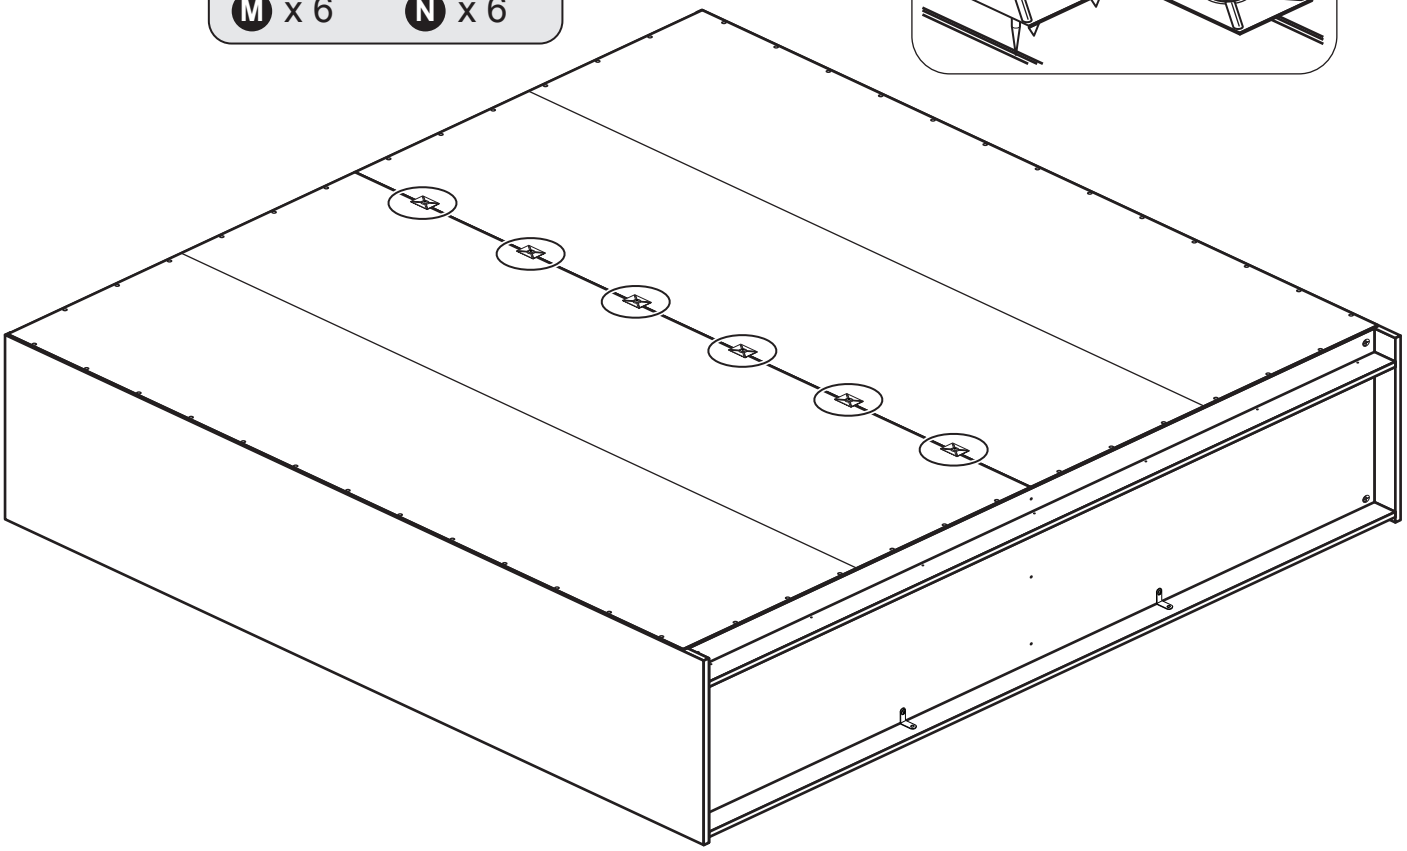



29

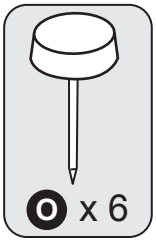


30

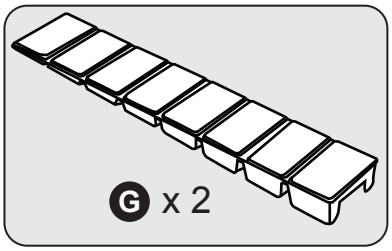

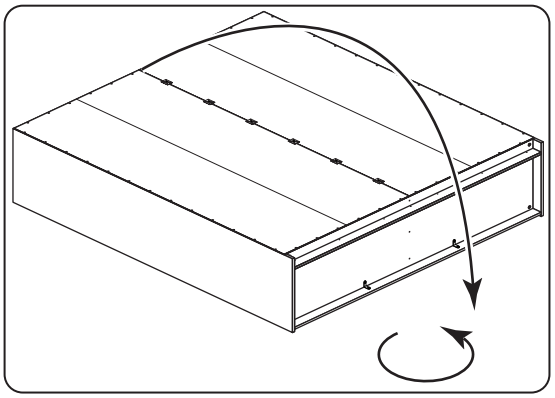


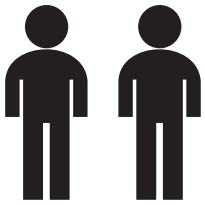


PLACE YOUR UNIT INTO ITS FINAL POSITION AND LEVEL IT UP

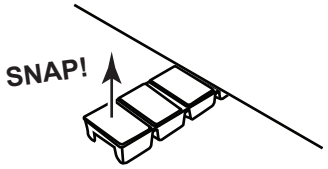

If the unit is not level, use the plastic wedges we have supplied.
Push the wedge(s) under the ends of the panel(s), where required.
The unused portion of the wedge can then be snapped off flush
with the edge of the panel.

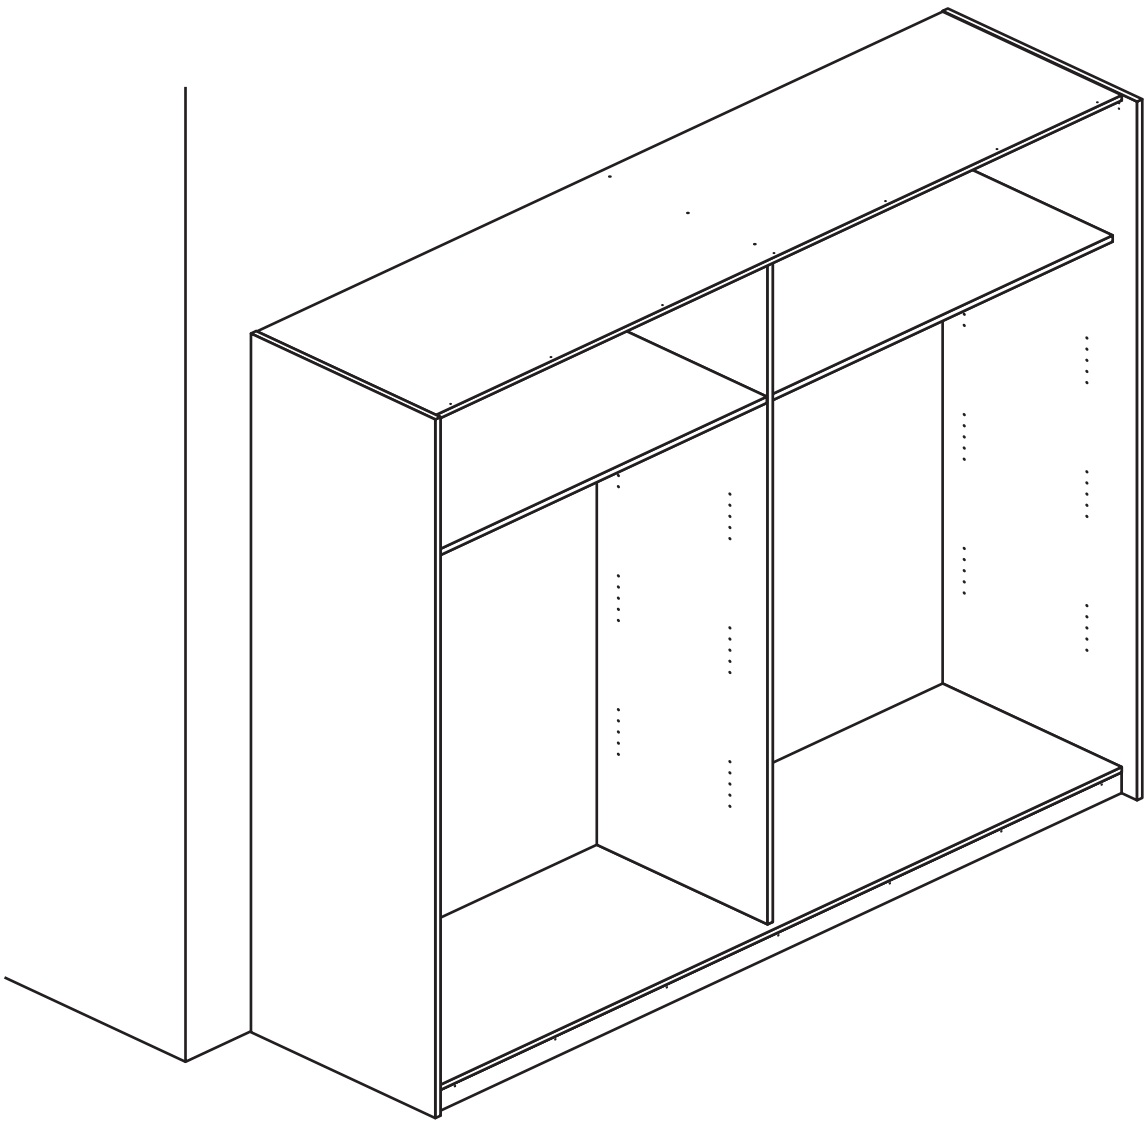

31

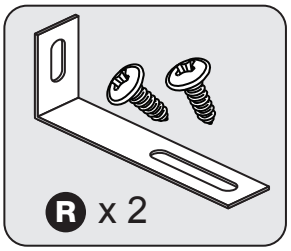

WARNING!

In order to prevent overturning this product must be used with the 2 wall attachment devices provided

See the next section for a guide to wall mounting and fixings

Loosely fit the 1st screw through the brackets into the top panel.


Slide the brackets against the wall and mark the slot at the back of the brackets for drilling into the wall.

Swivel the brackets away from the wall and drill the wall using a suitable drill-bit and fit your wall fixings (wall fixings are not supplied as they will need to suit the wall type).

Swivel the brackets back and fix them to the wall.

Fit the 2nd screw into top panel and tighten both screws from the kits.


Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

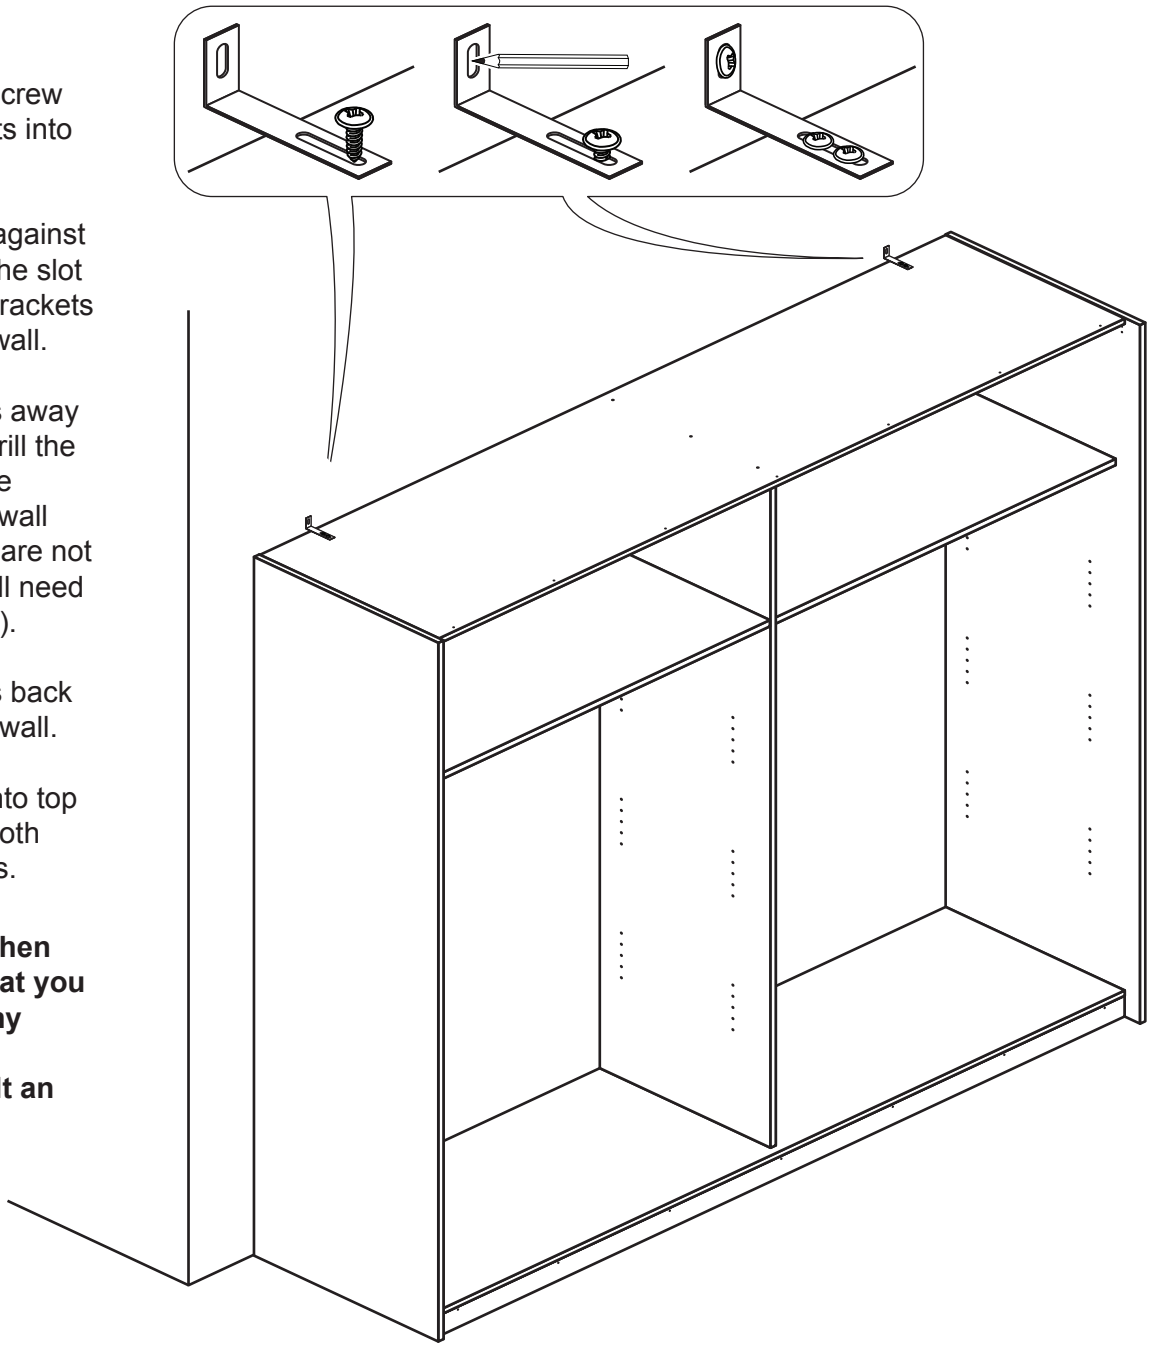

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 "General Purpose" wall plug

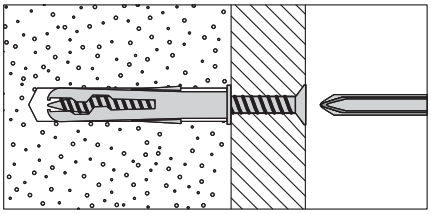


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 "Plasterboard" wall plug

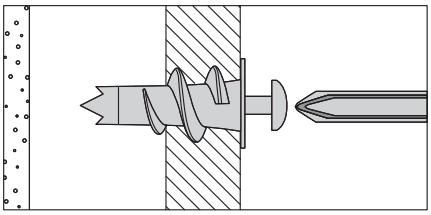


For use when attaching light loads on to plasterboard partitions.

No.3 "Cavity Fixing" wall plug

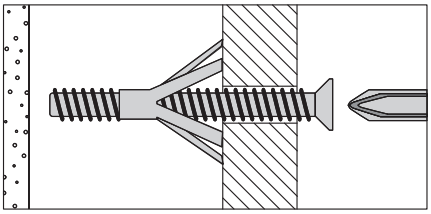


For use with plasterboard partitions or hollow wooden doors.

No.4 "Cavity Fixing-Heavy Duty" wall plug

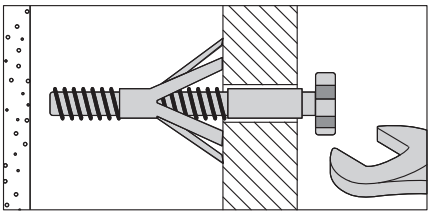


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 "Hammer Fixing" wall plug

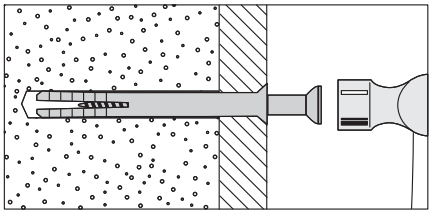

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 "Shield Anchor" wall plug Heavy loads

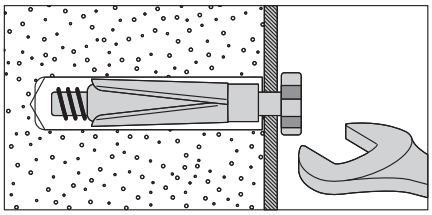


For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.


Care & Maintenance


Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.


32

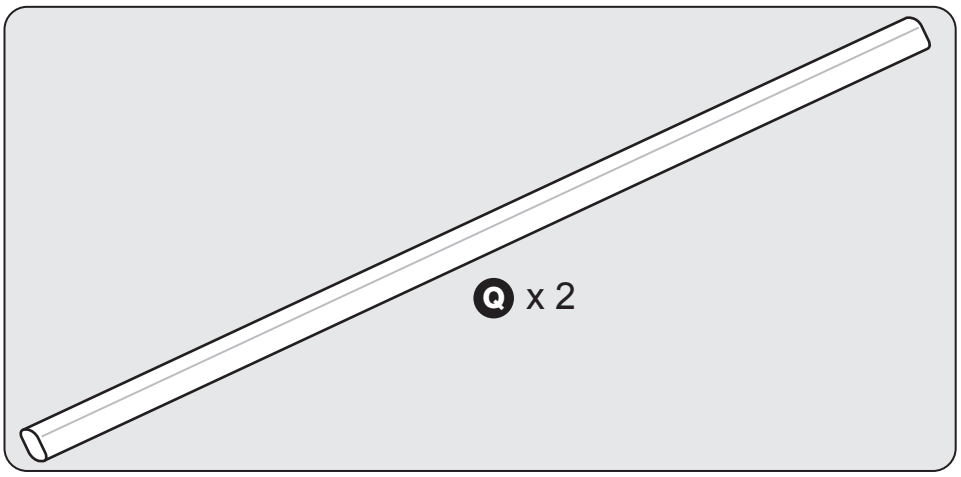

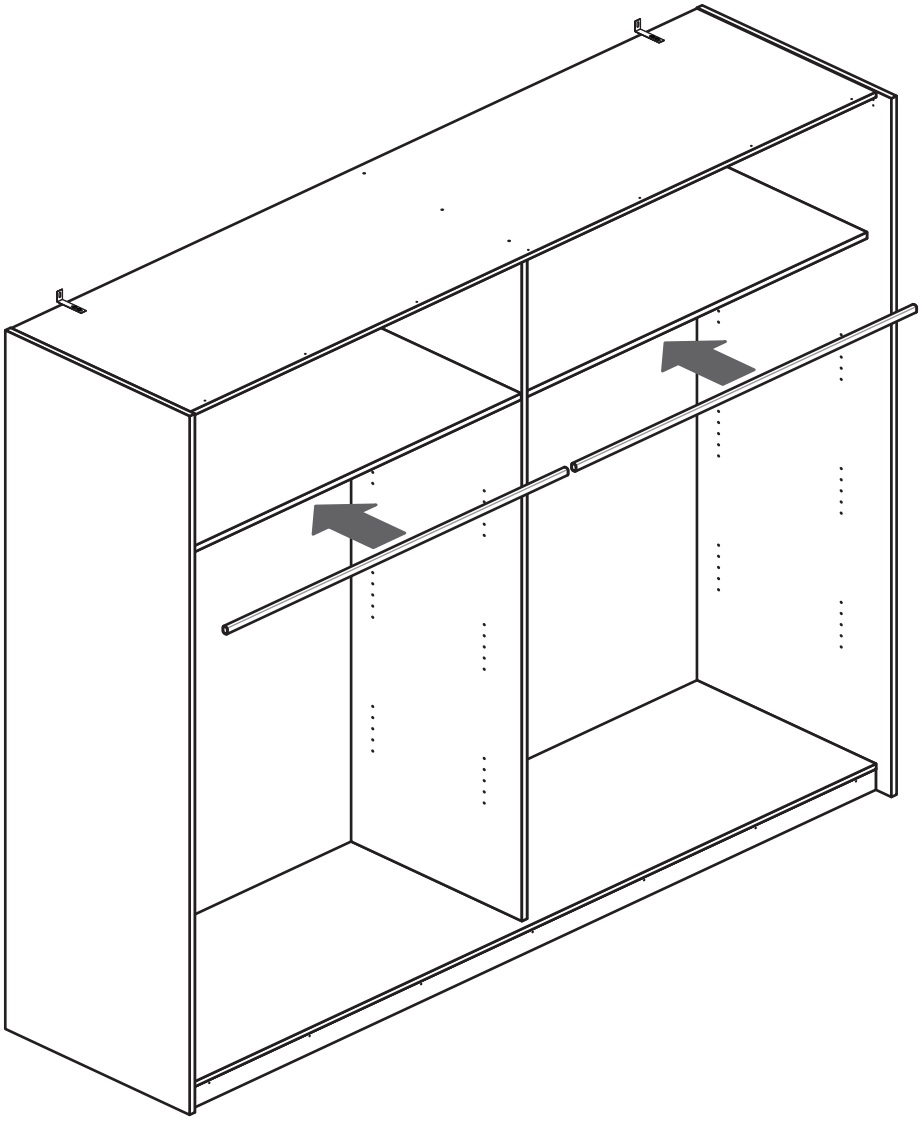

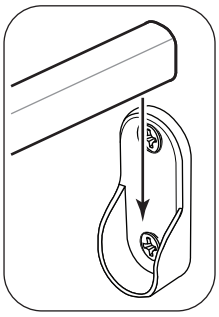


33

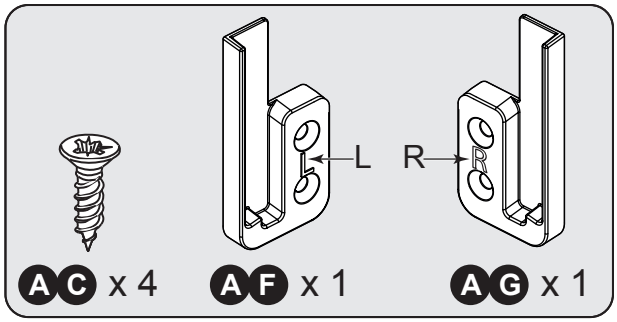


Marked as ‘R’


AG

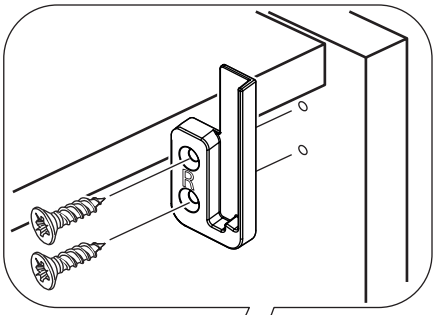


Marked as ‘L’


AF

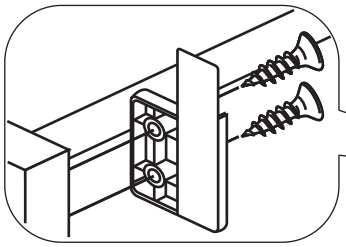

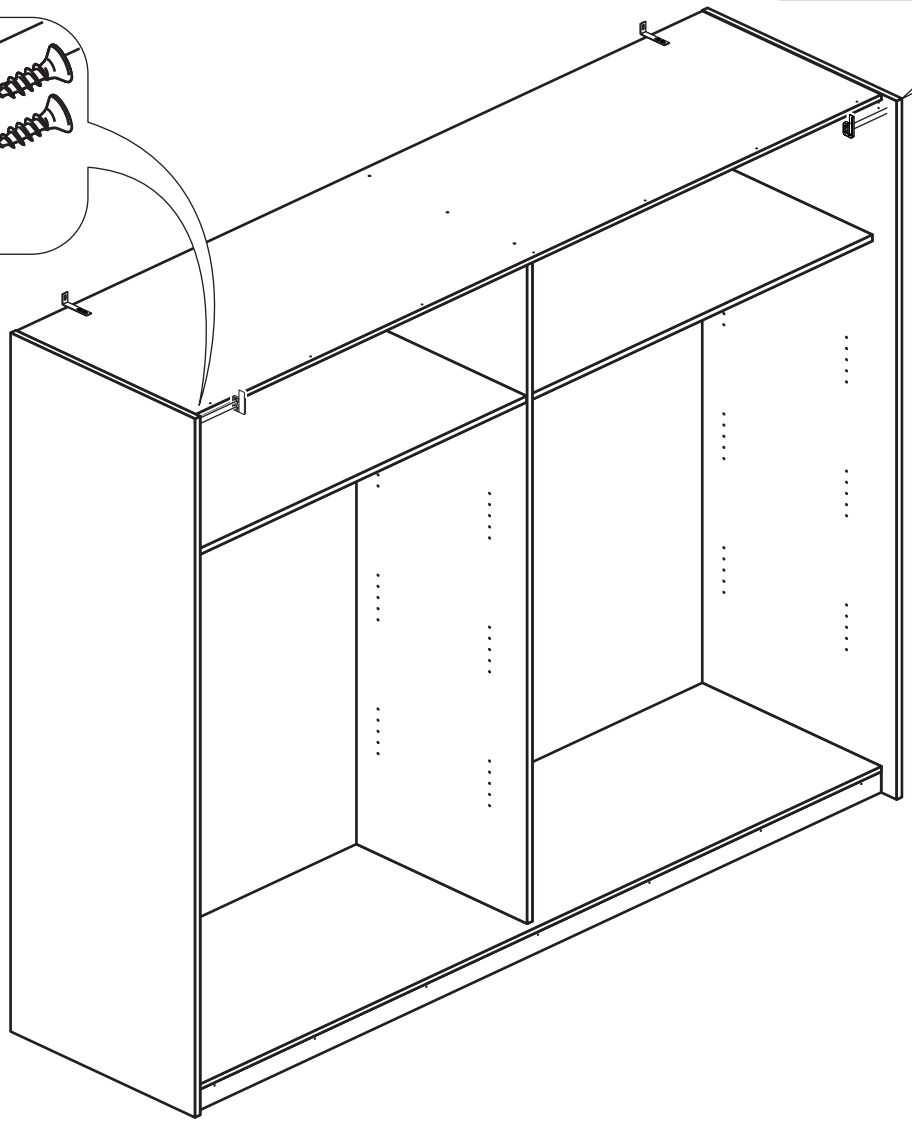



34

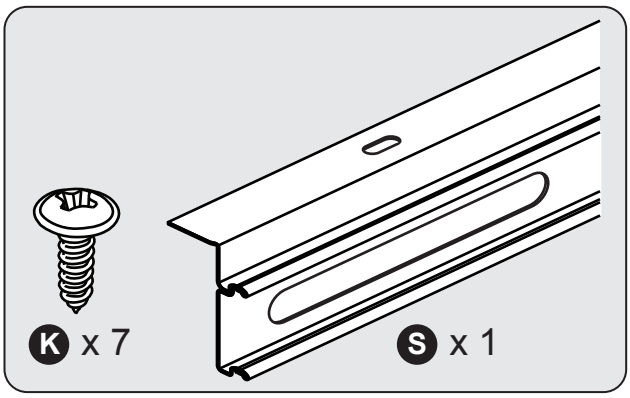


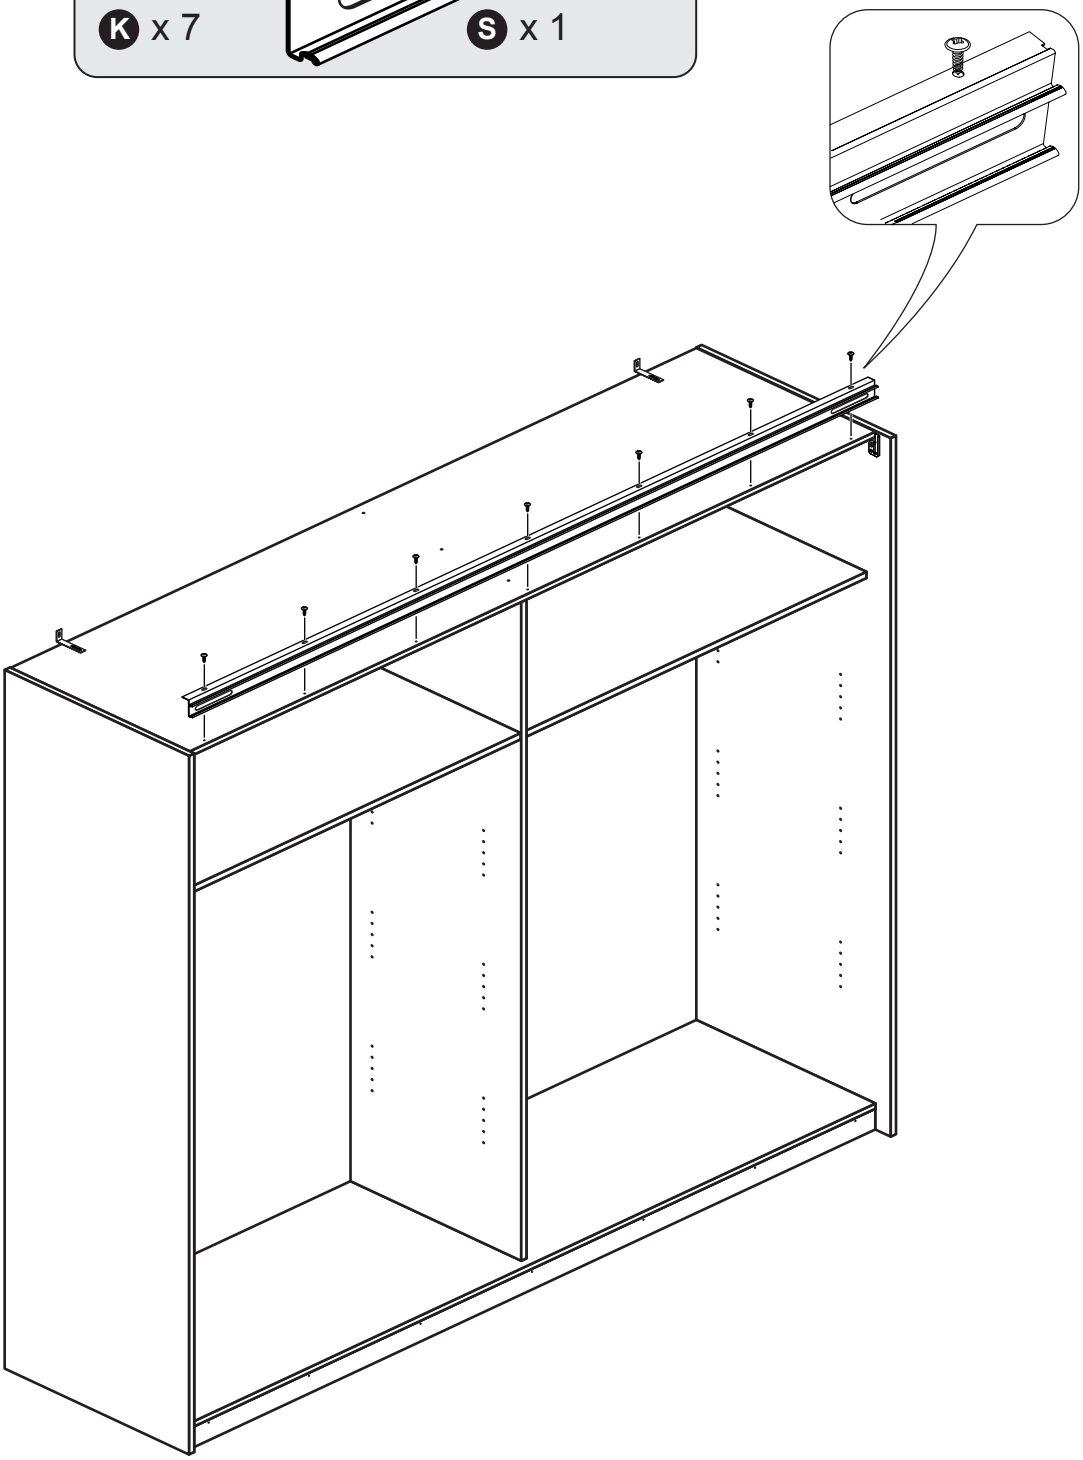


35

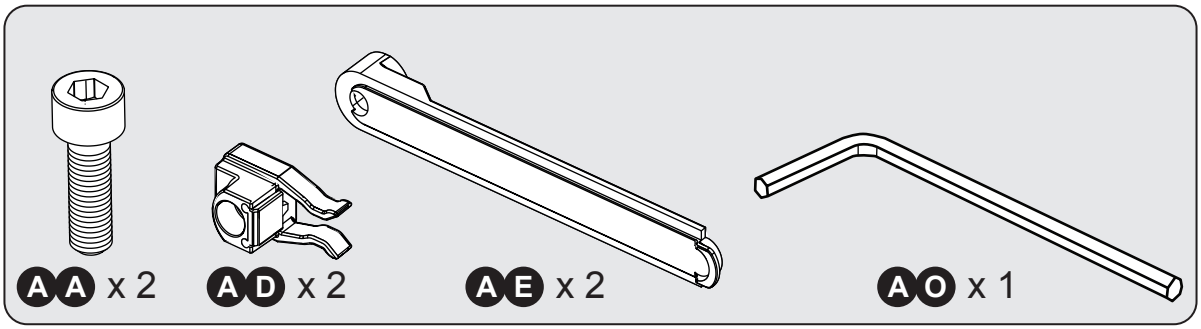


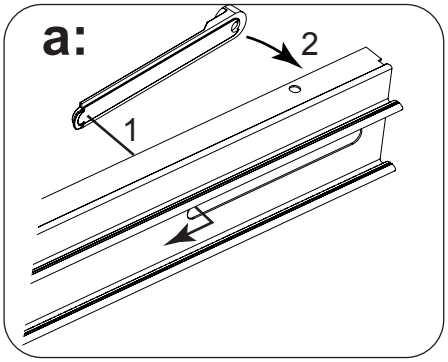


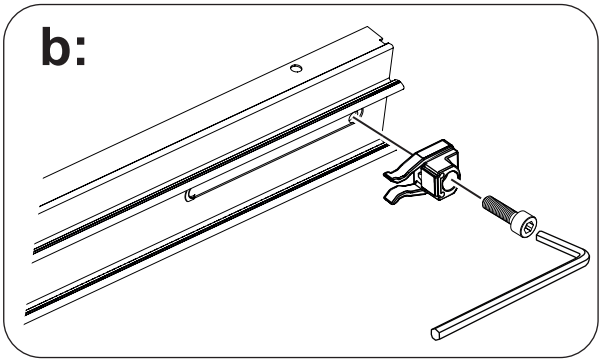

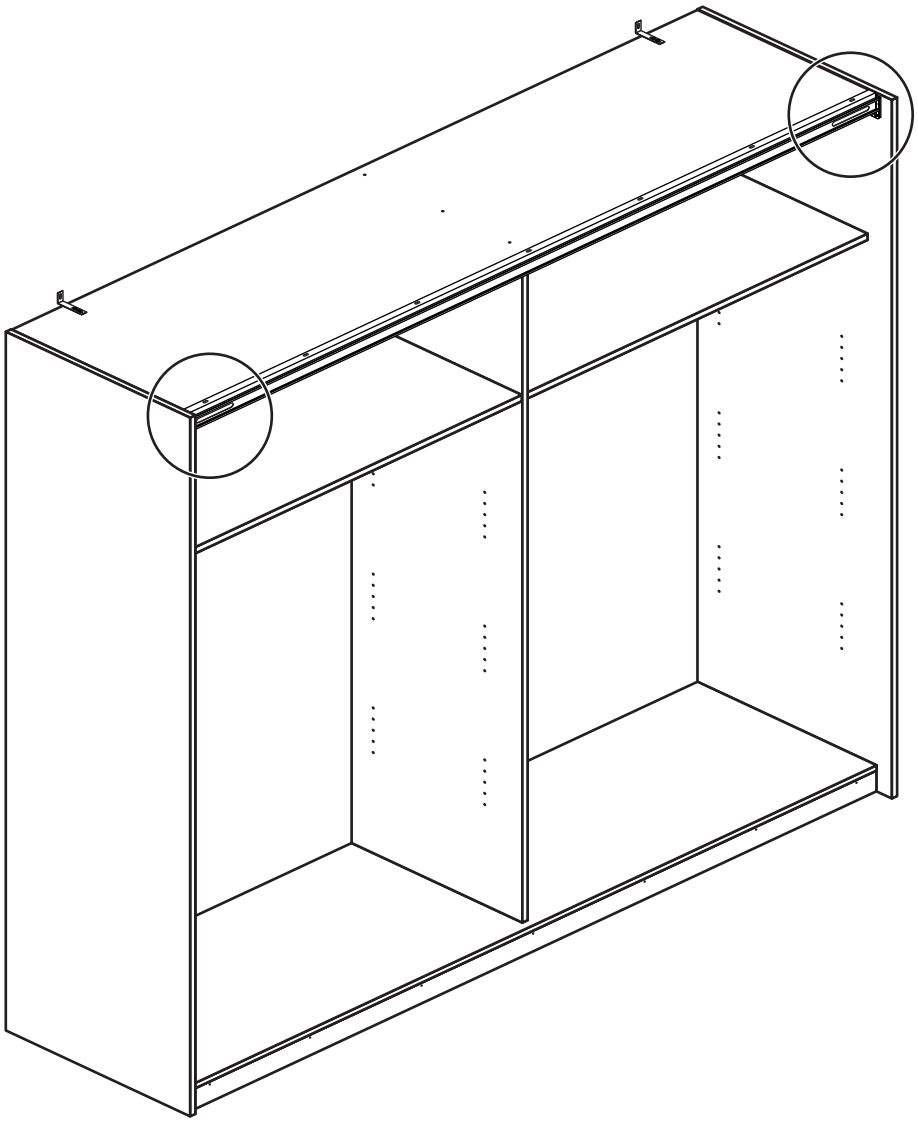



36

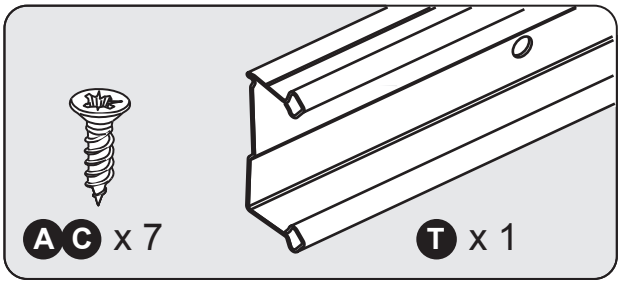
A C x 7
T x 1

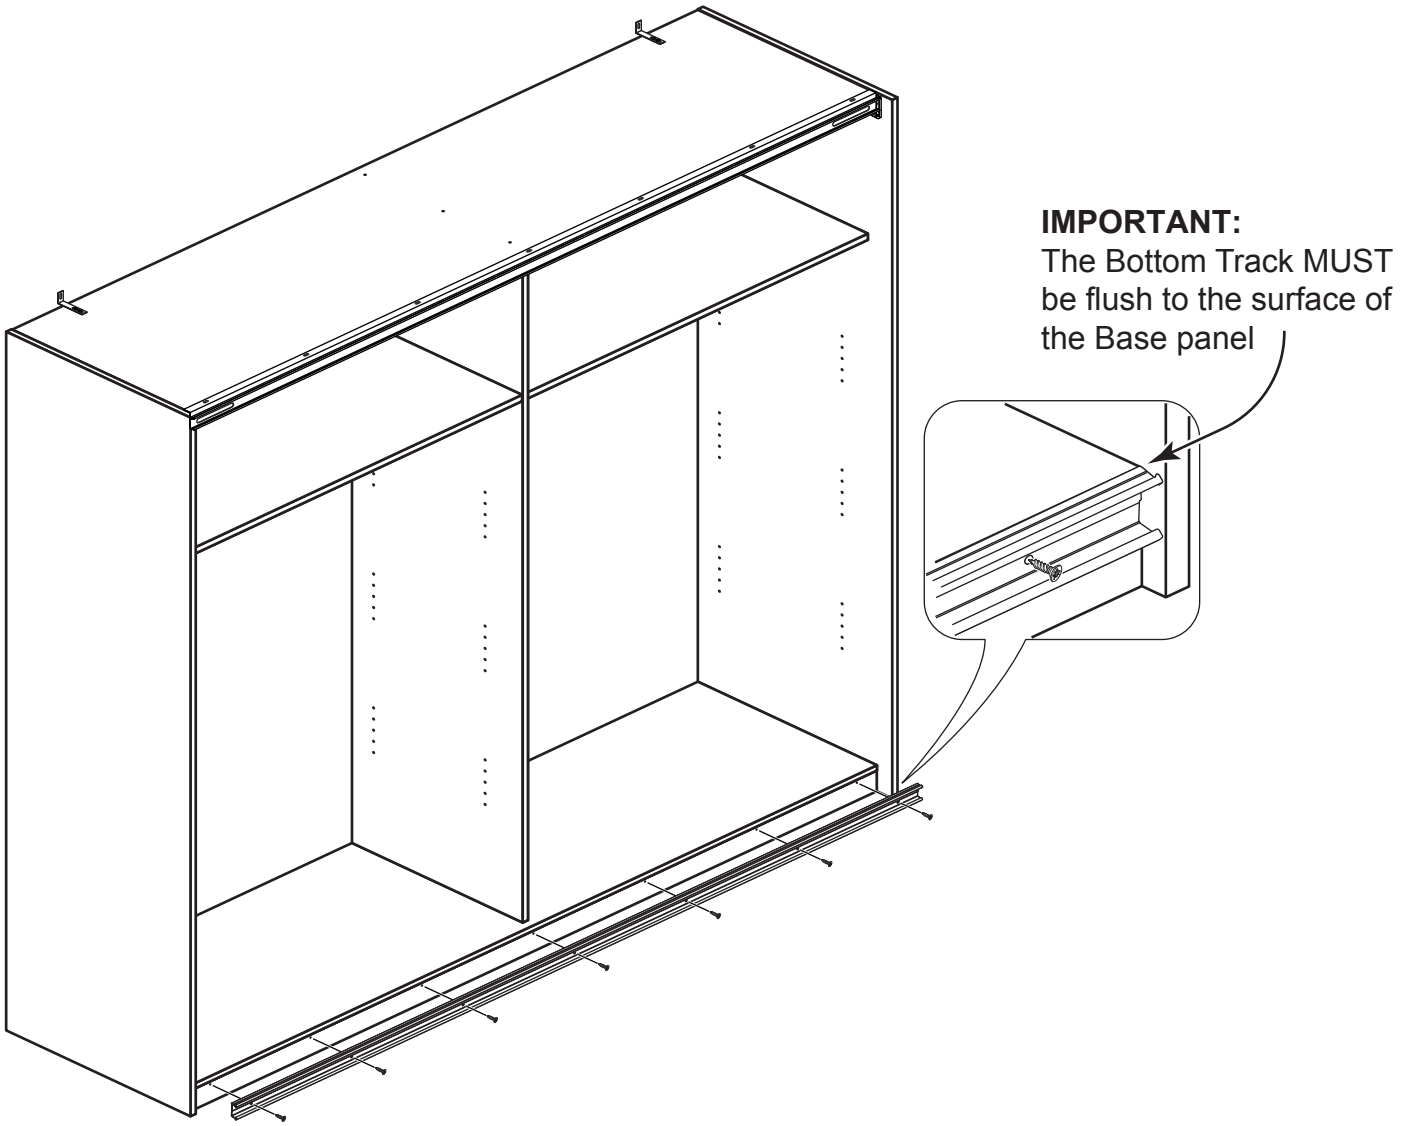

IMPORTANT:
The Bottom Track MUST be flush to the surface of the Base panel


37

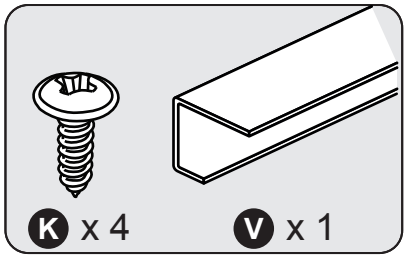

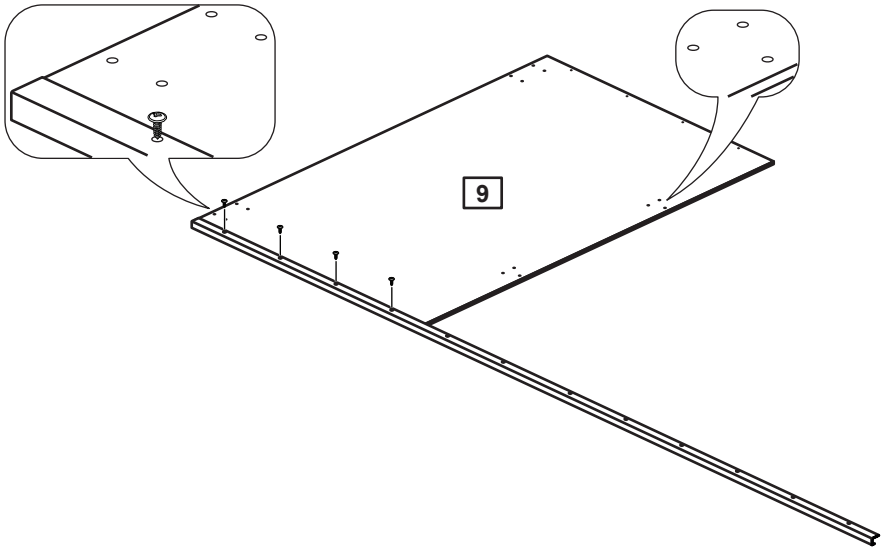



38

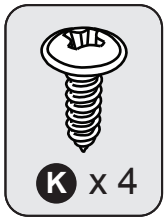

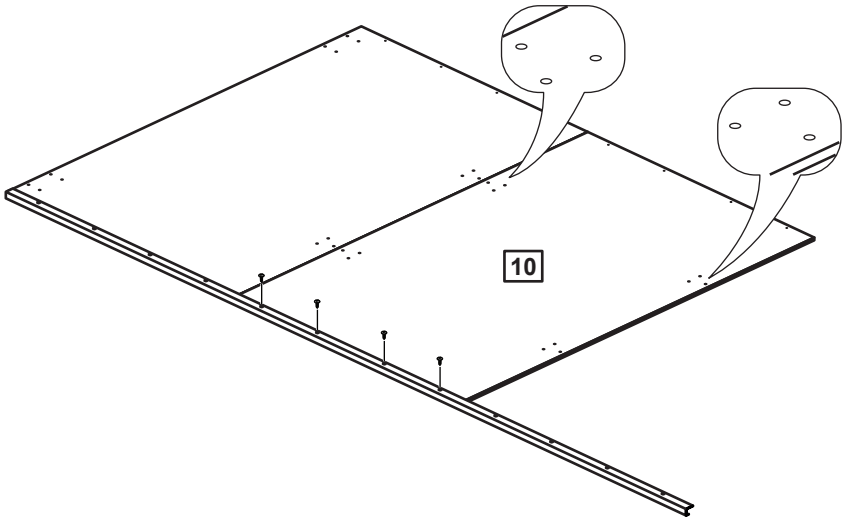



39

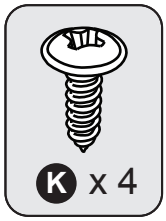

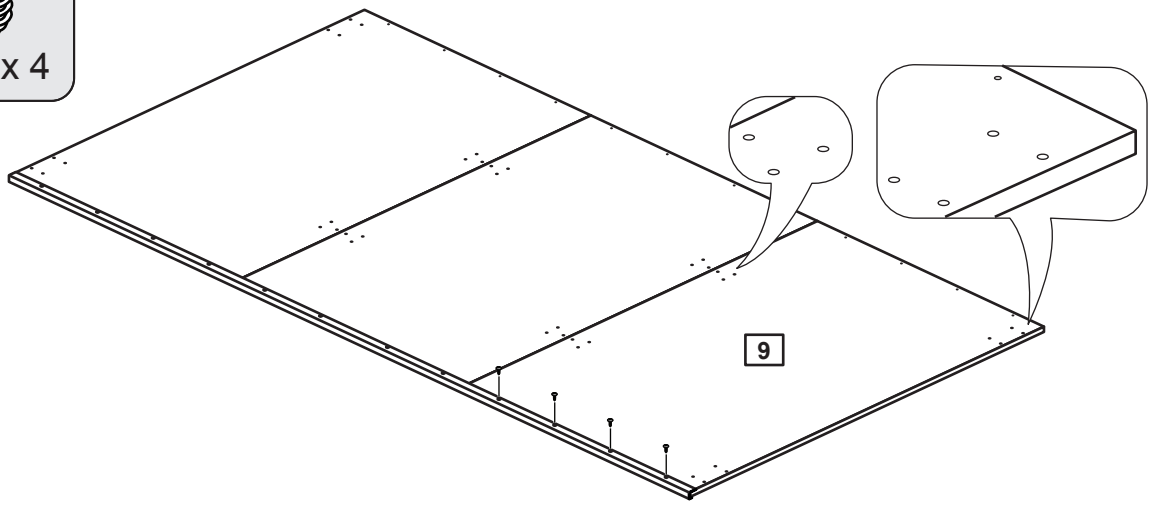



40

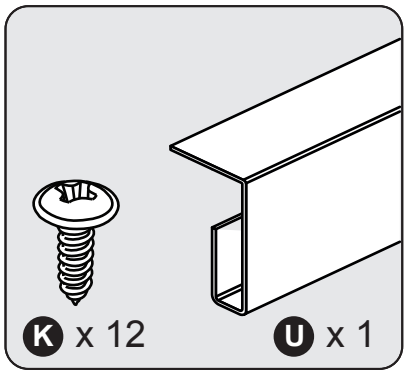

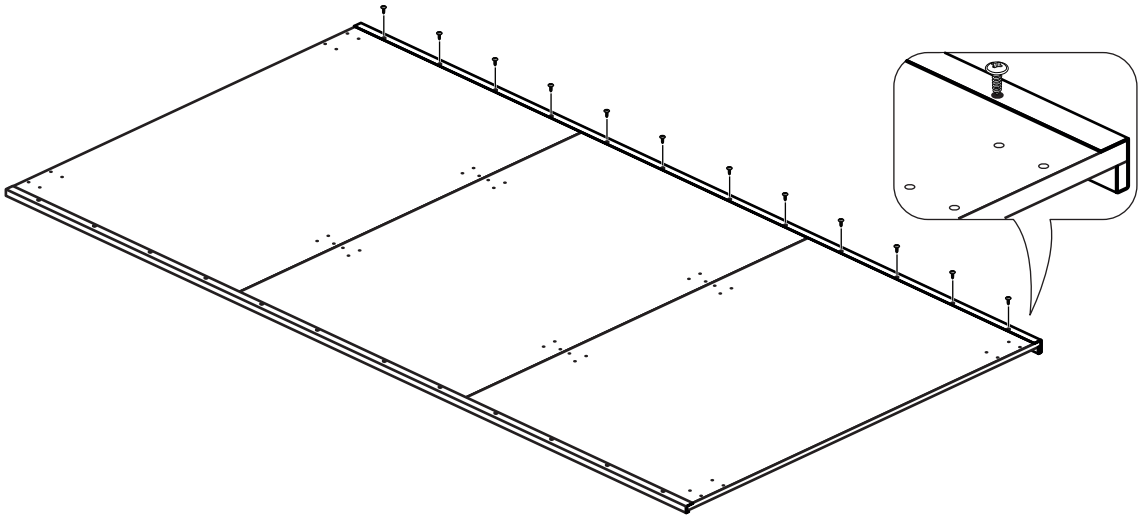



41

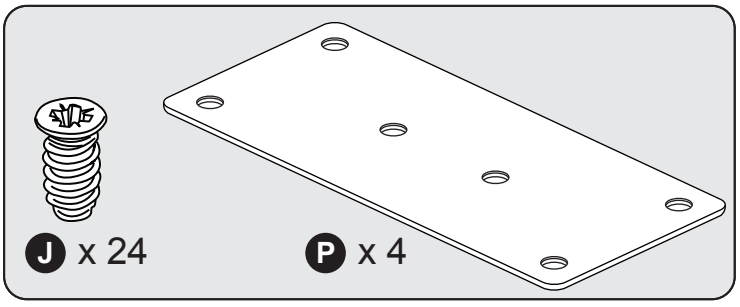

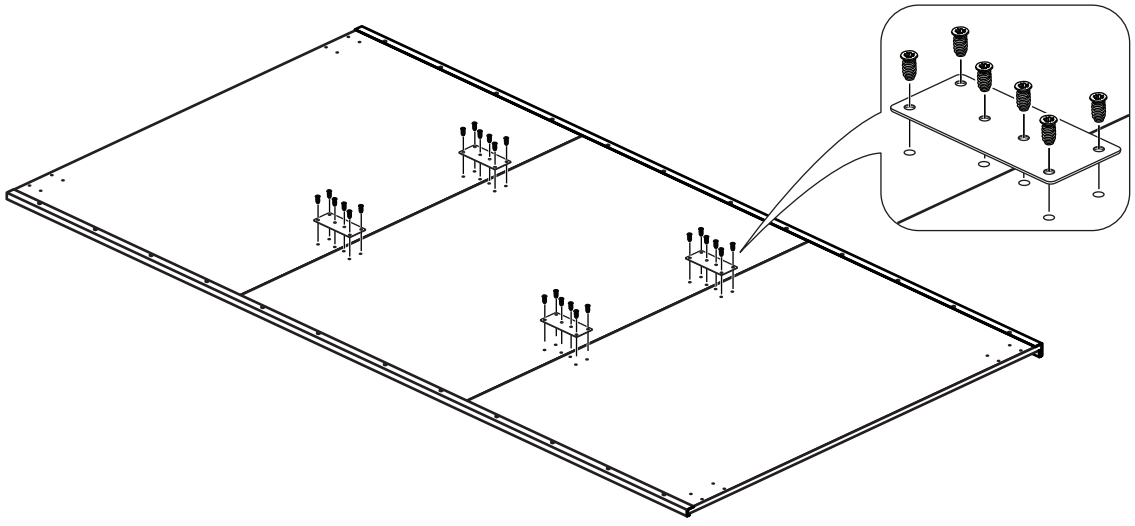



42

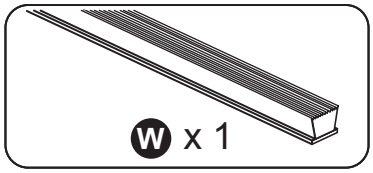
W x 1

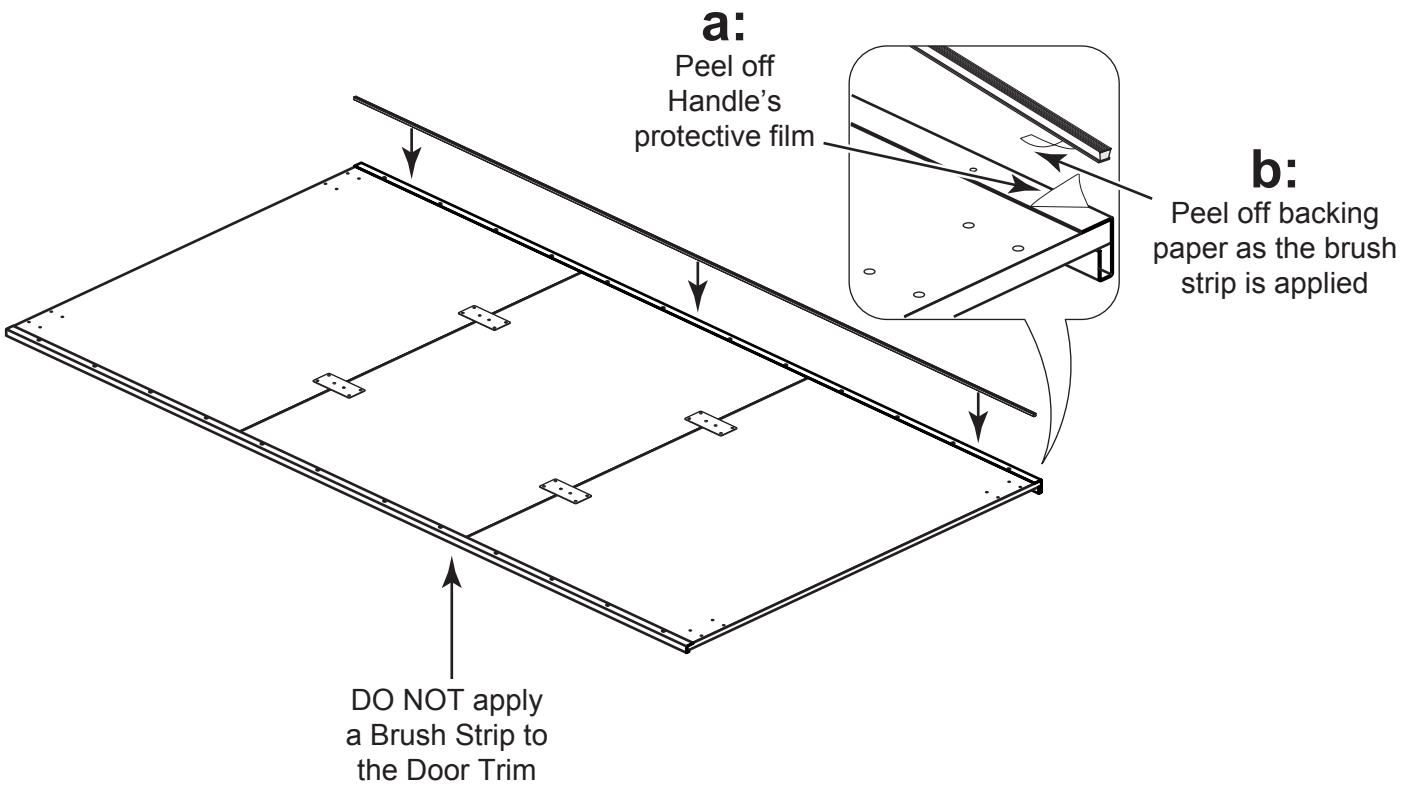

a:
Peel off
Handle's
protective film
b:
Peel off backing
paper as the brush
strip is applied
DO NOT apply
a Brush Strip to
the Door Trim

43

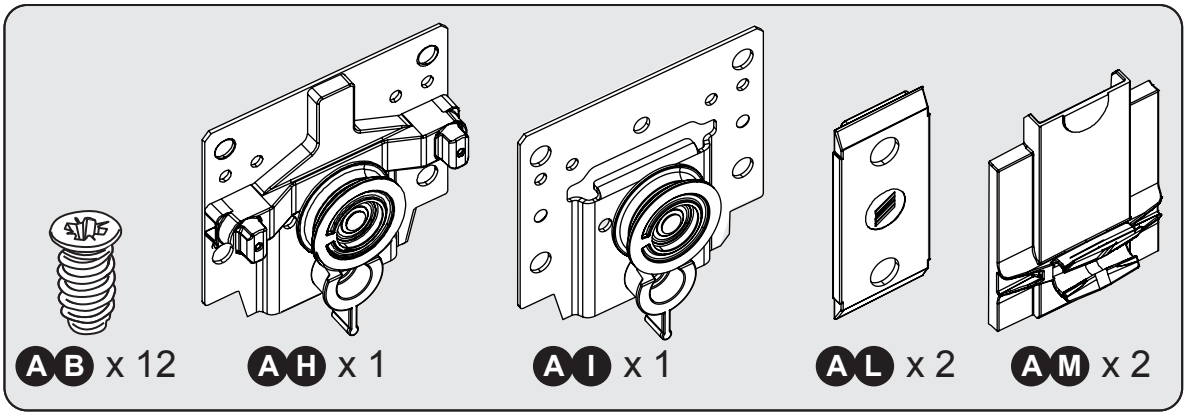


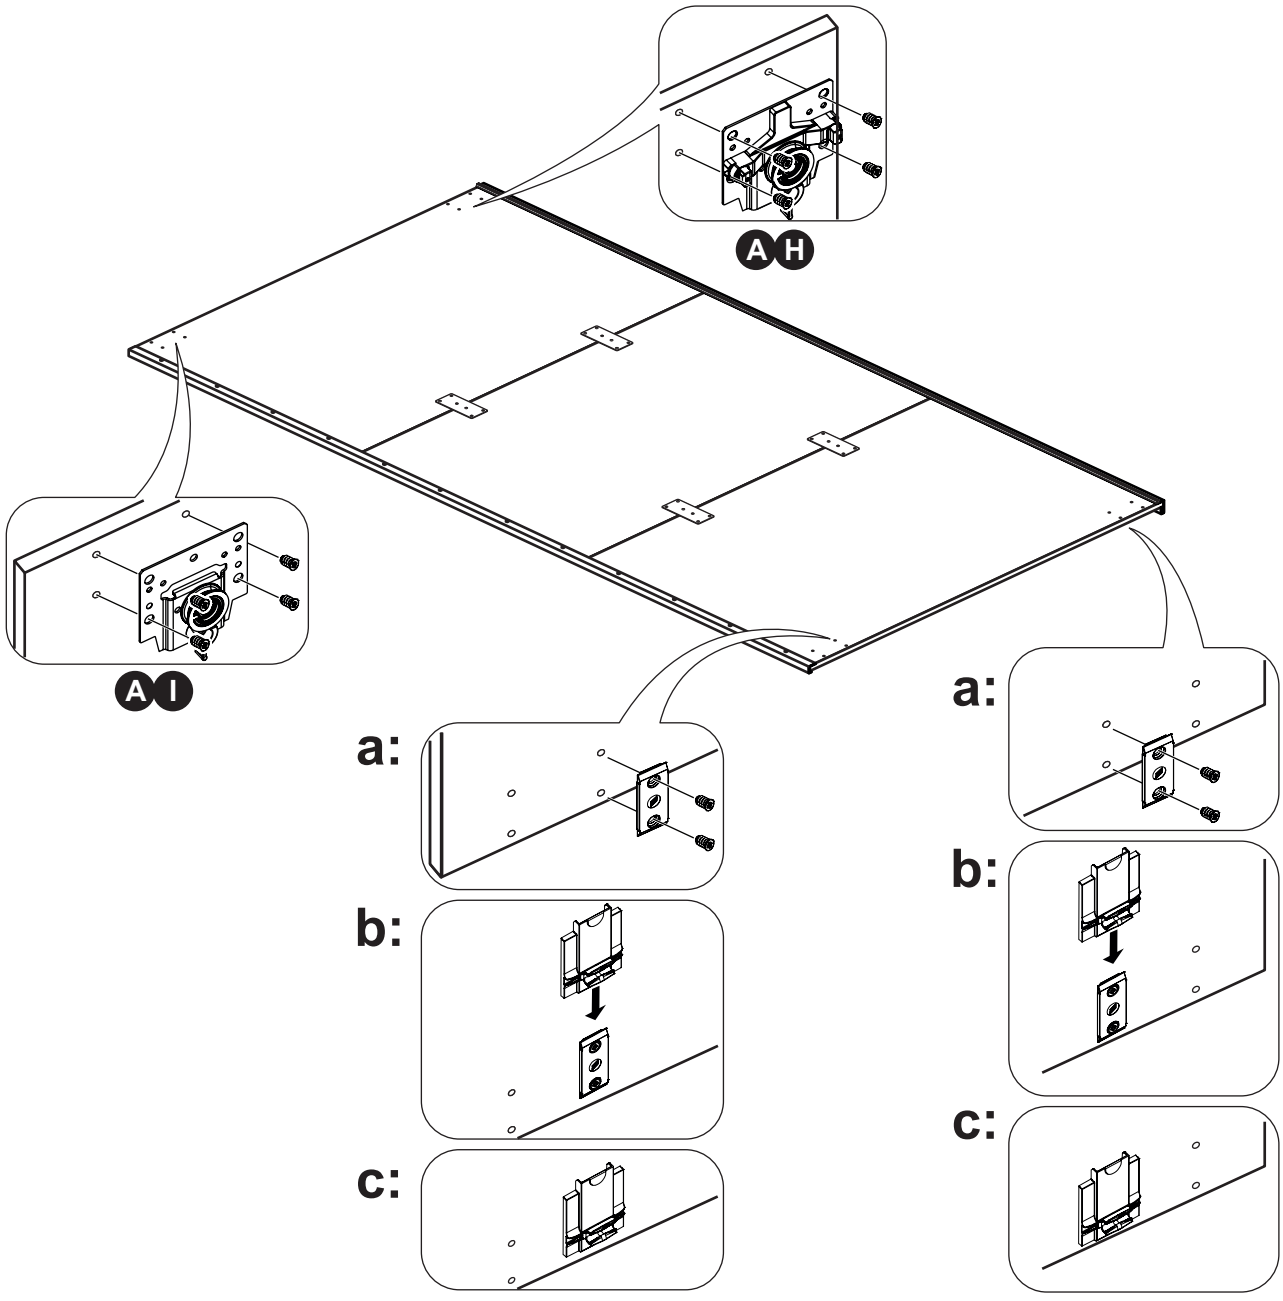


44

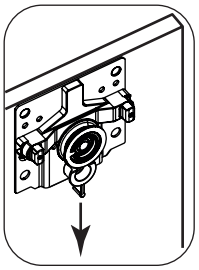


IMPORTANT:
Before you fit the Door, the yellow lock on both Rollers must be pointing down in the unlocked position

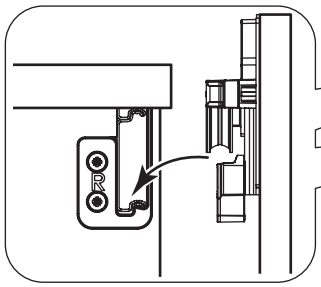

Hook the Rollers onto the lower part of the Track

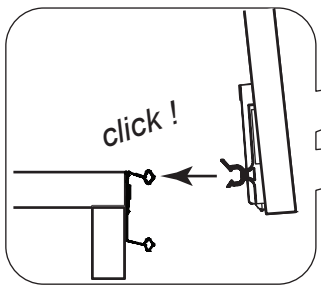



Line up the Bottom Guides with the top part of the Track and push the Door in until it clicks into place

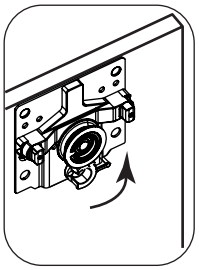


IMPORTANT:
When the Door has been fitted, the yellow lock on both Rollers must be pushed up into the locked position


45

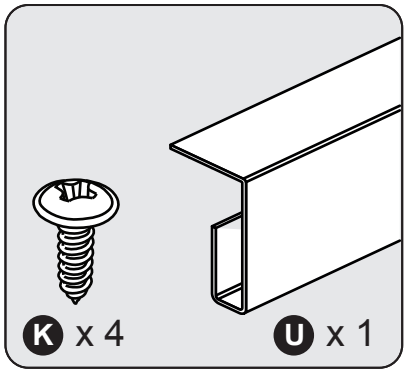

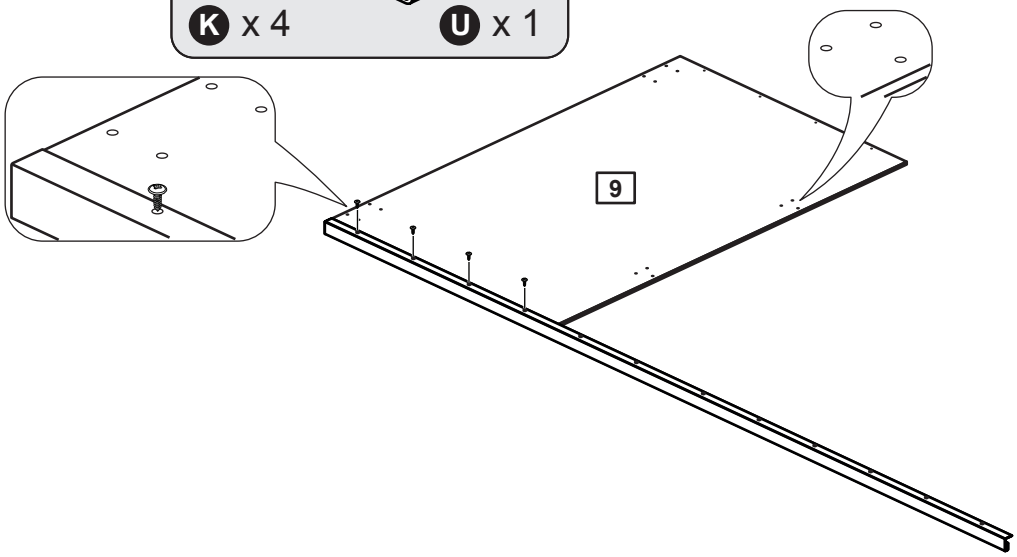



46

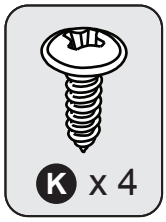

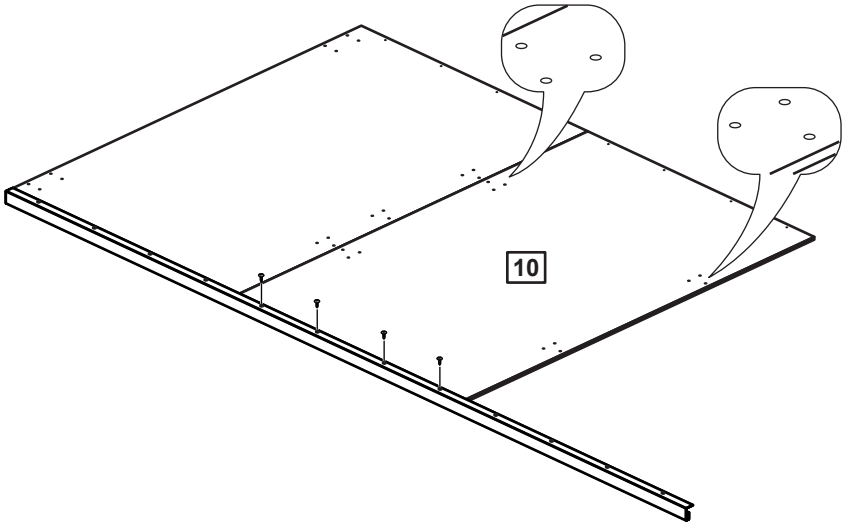



47

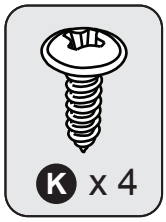

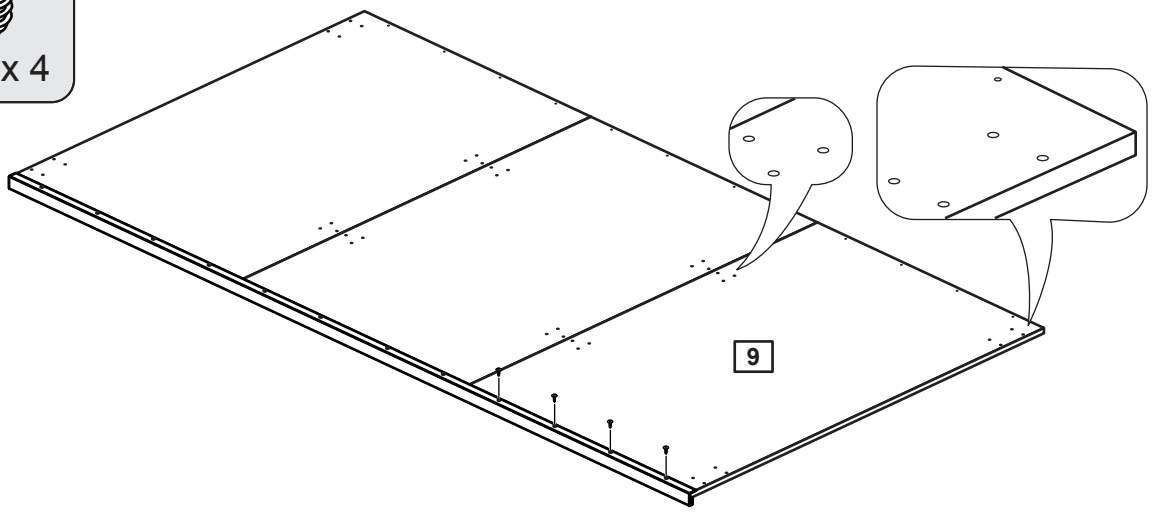



48

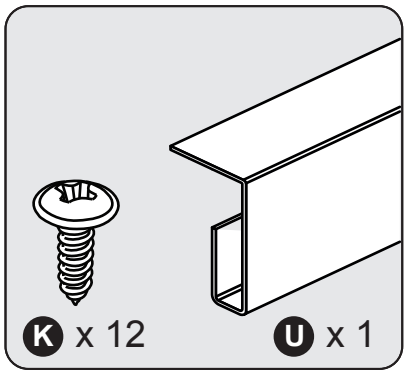

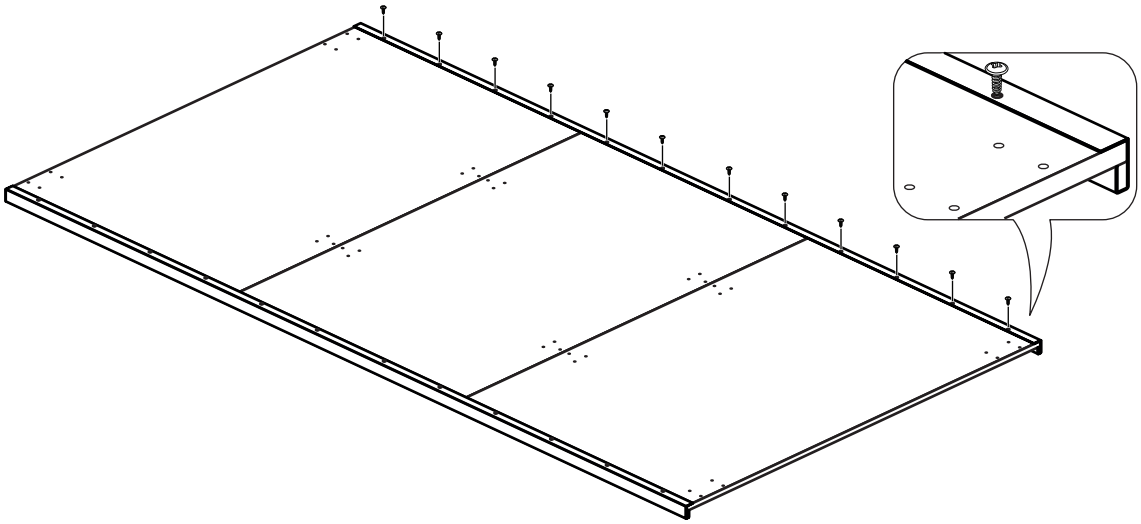



49

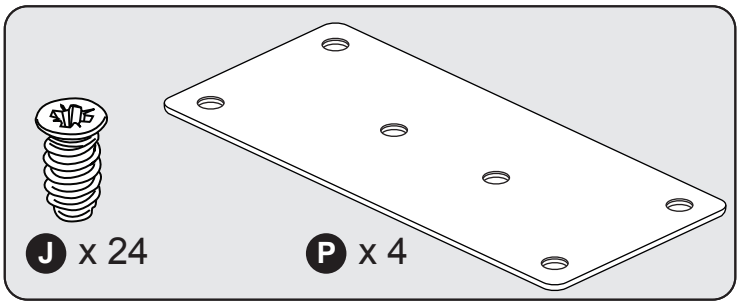

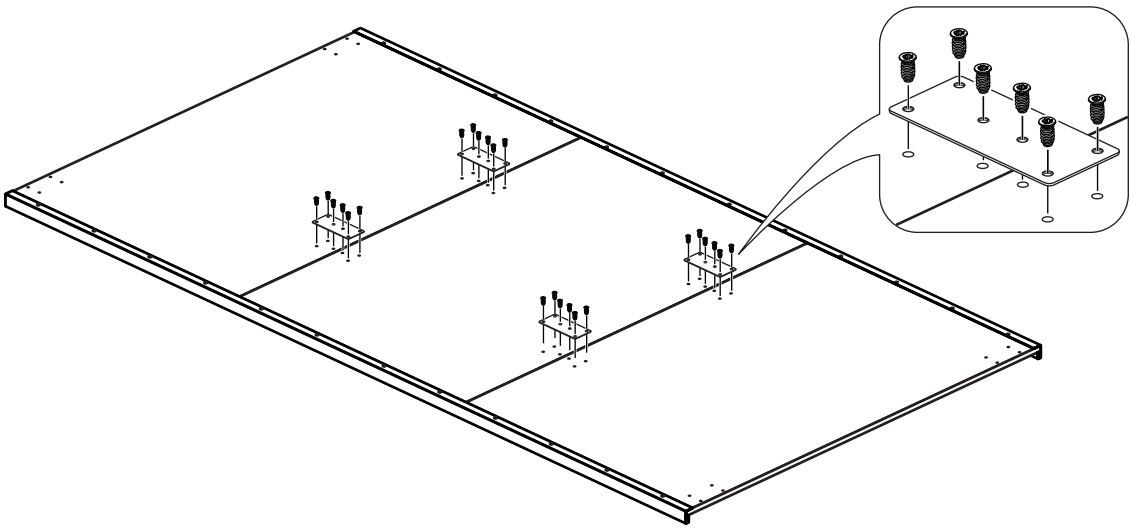



50

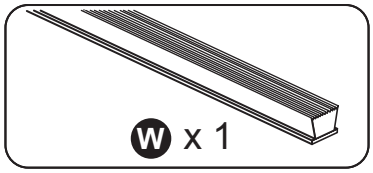
W x 1

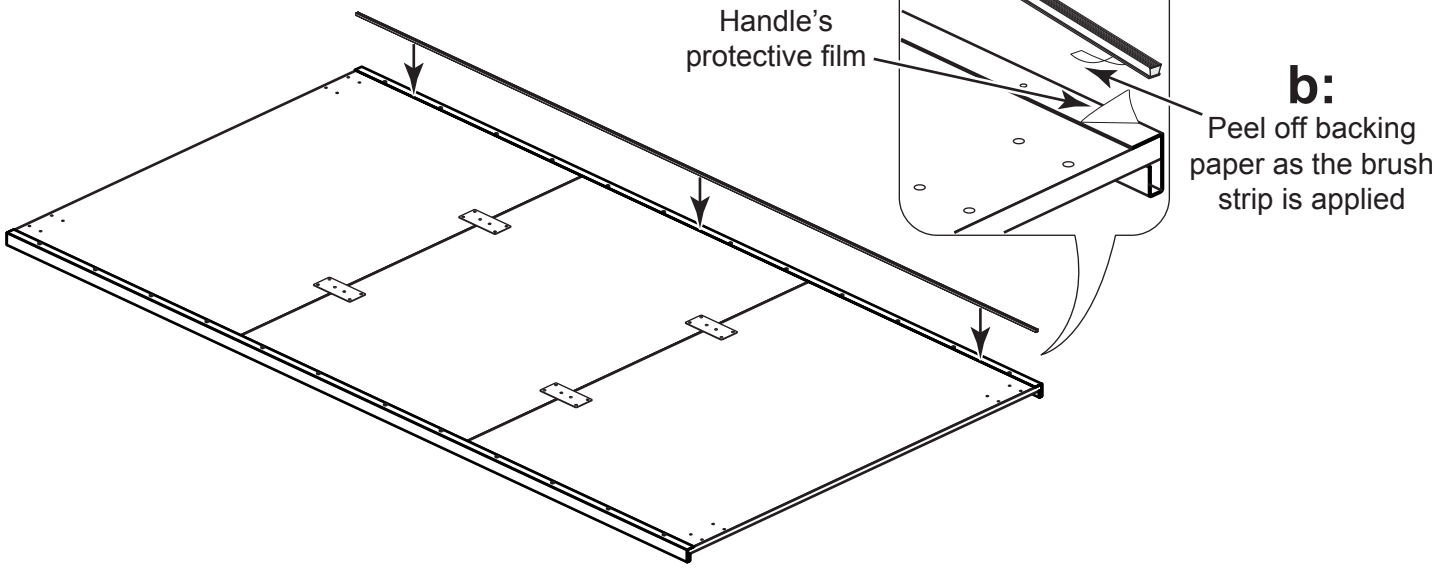

a:
Peel off
Handle's
protective film
b:
Peel off backing
paper as the brush
strip is applied


51

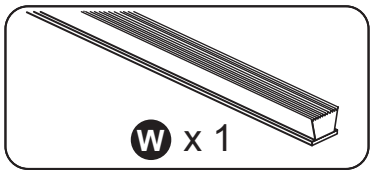
W x 1

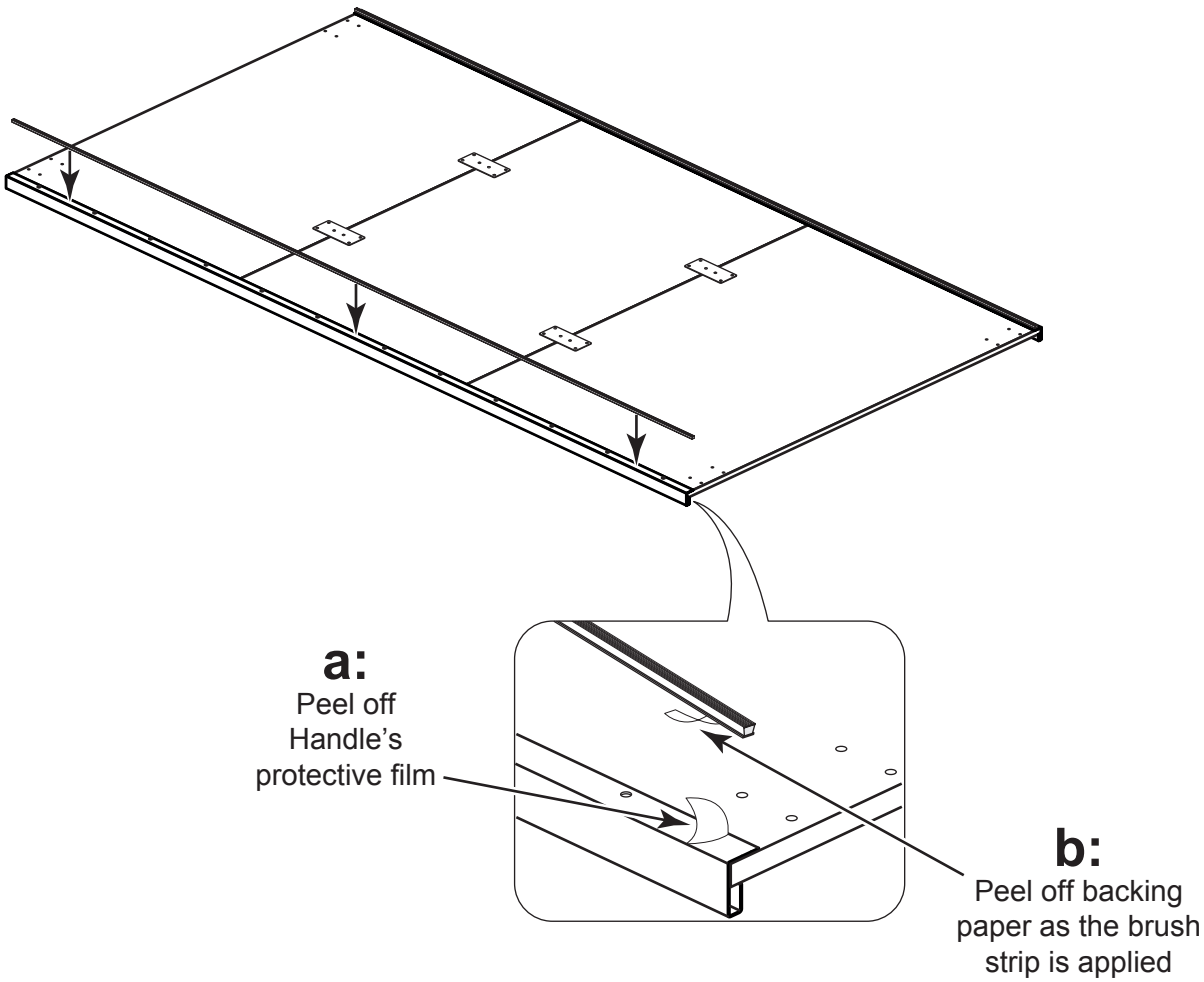

a:
Peel off
Handle's
protective film
b:
Peel off backing
paper as the brush
strip is applied

52

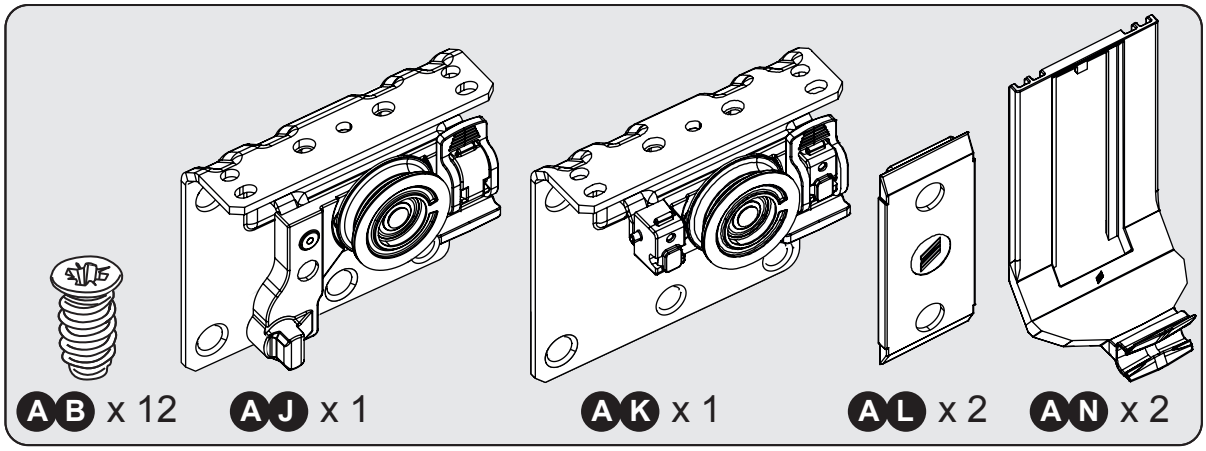

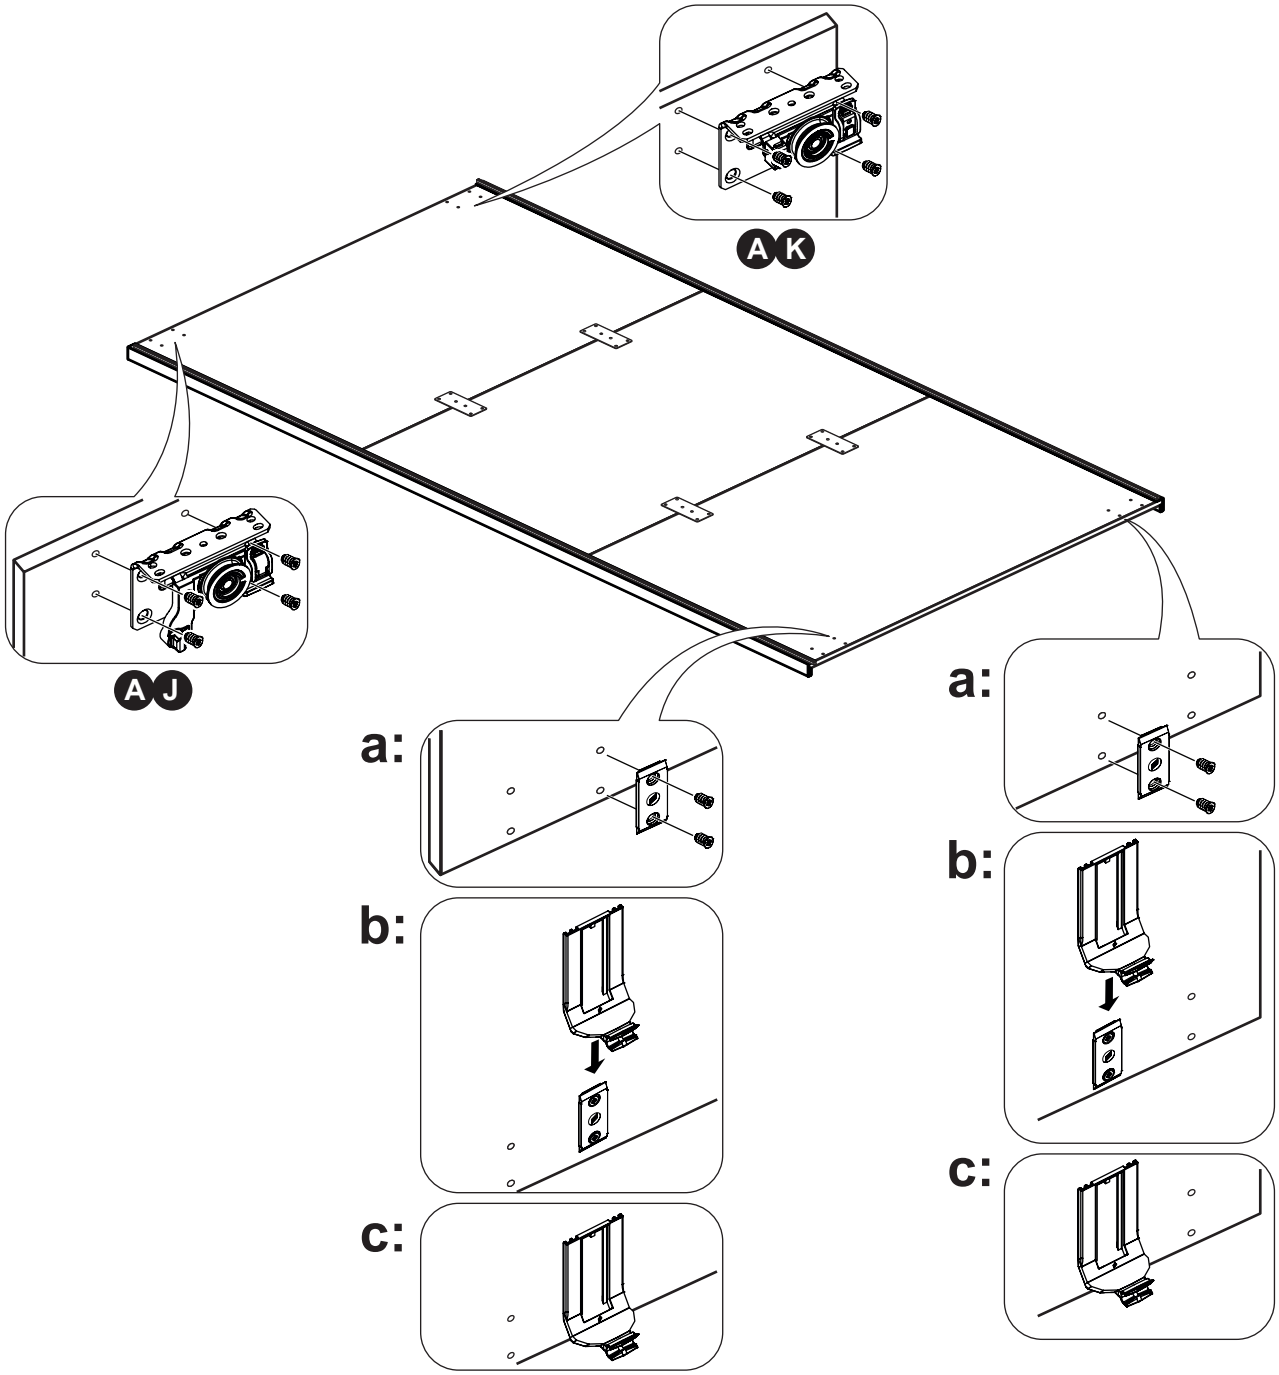


53

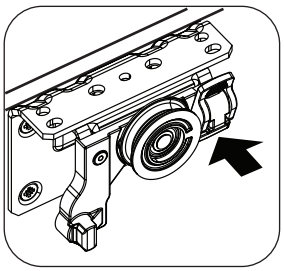

IMPORTANT:
Before you fit the Door, press in the base of the locks to unlock them


Hook the Rollers onto the upper part of the Track

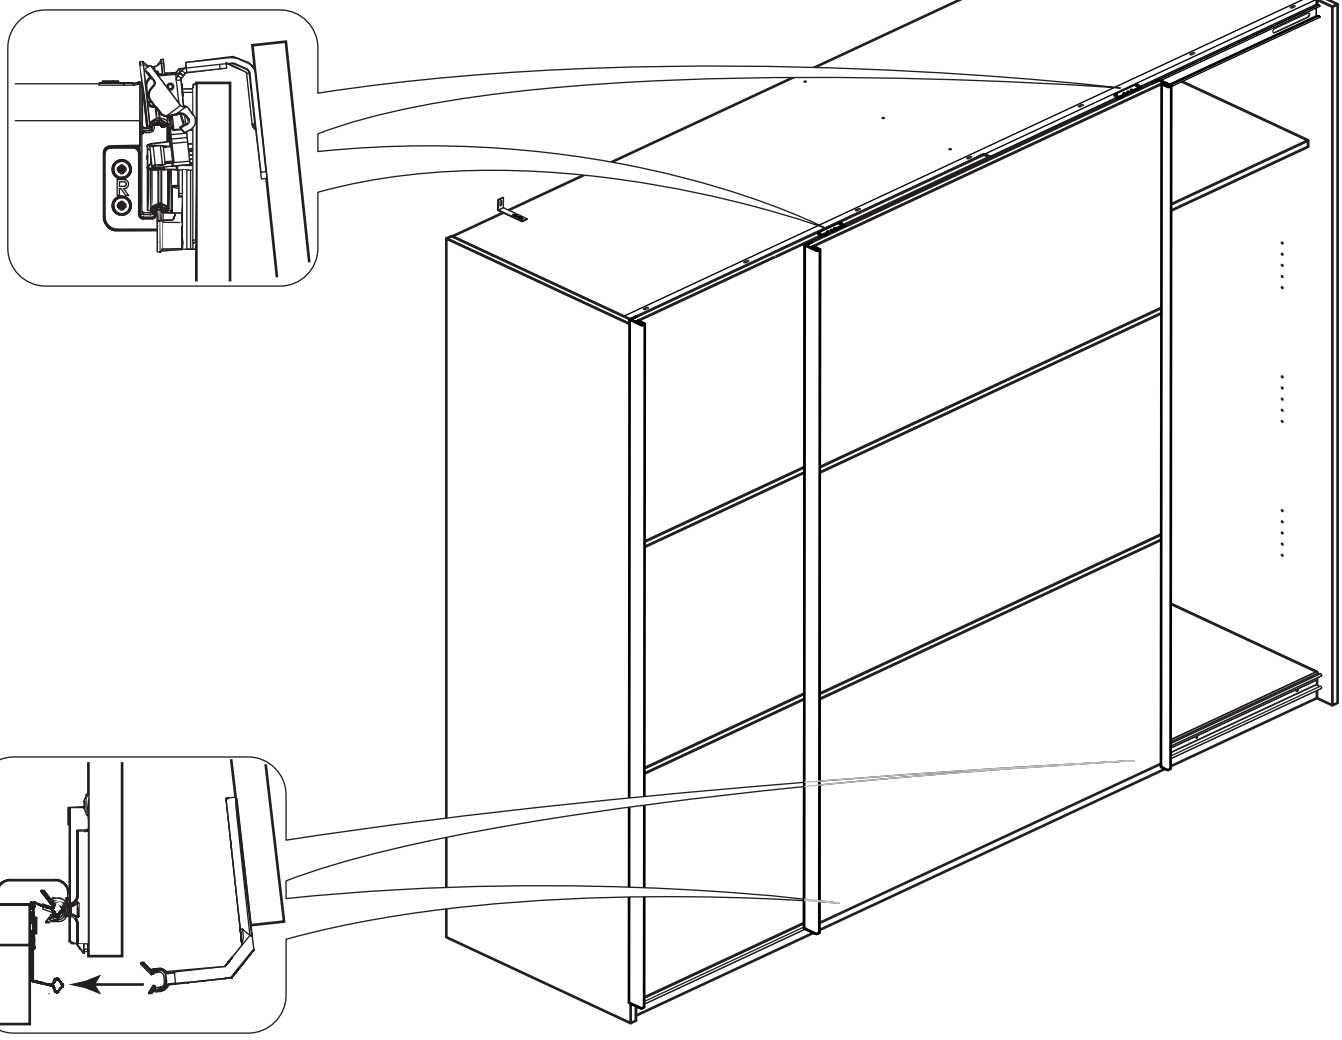


Line up the Bottom Guides with the lower part of the Track and push the Door in until it clicks into place

54

IMPORTANT:
Press in the top part of
the locks to lock them

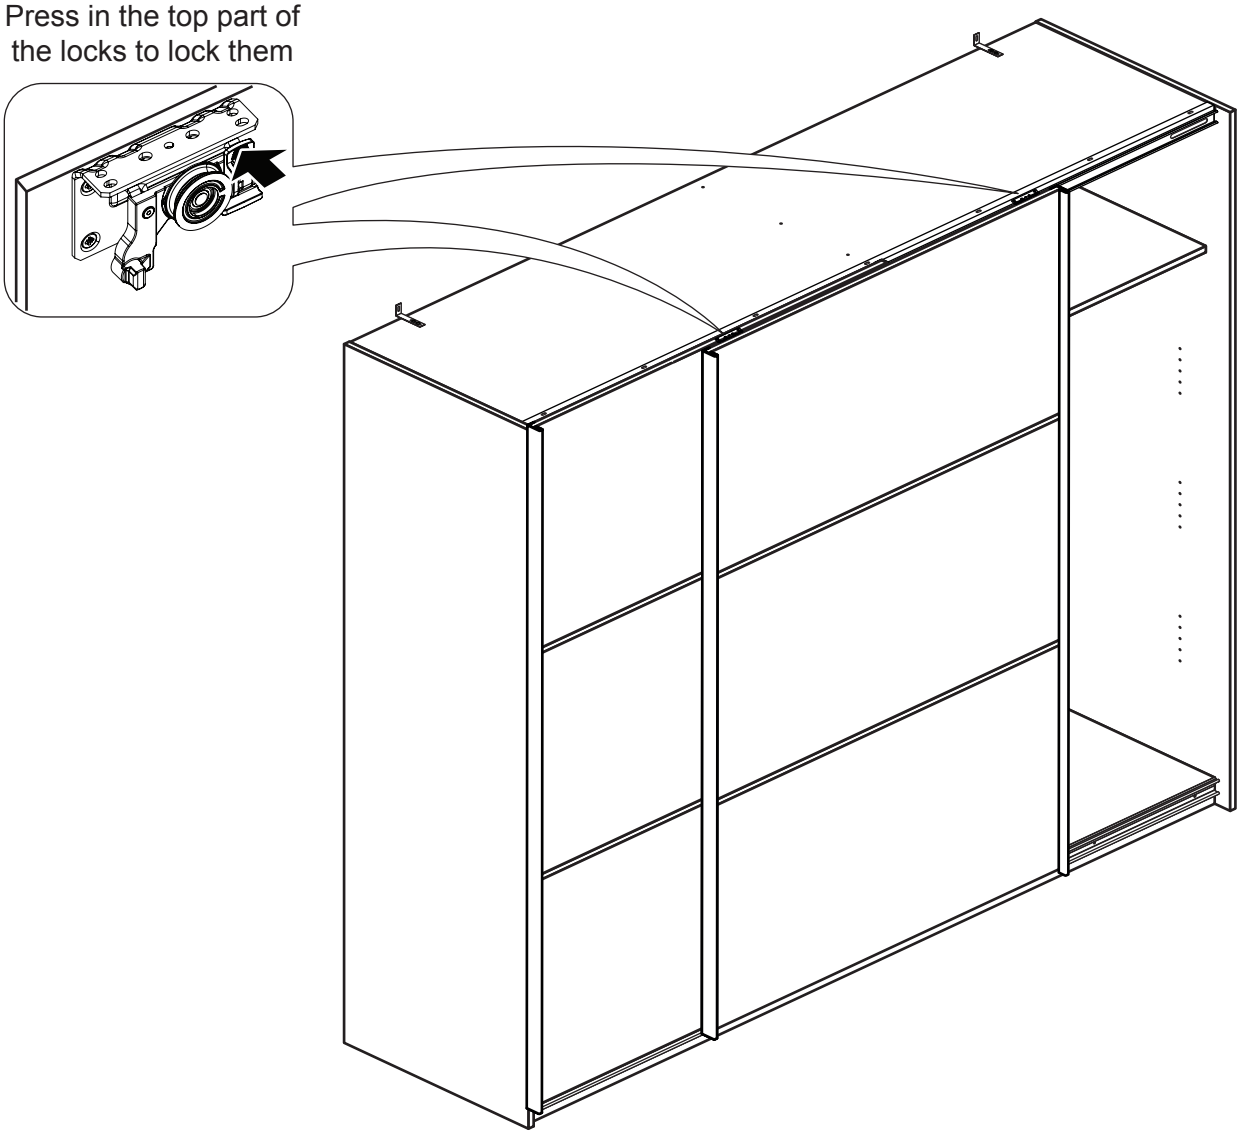

55

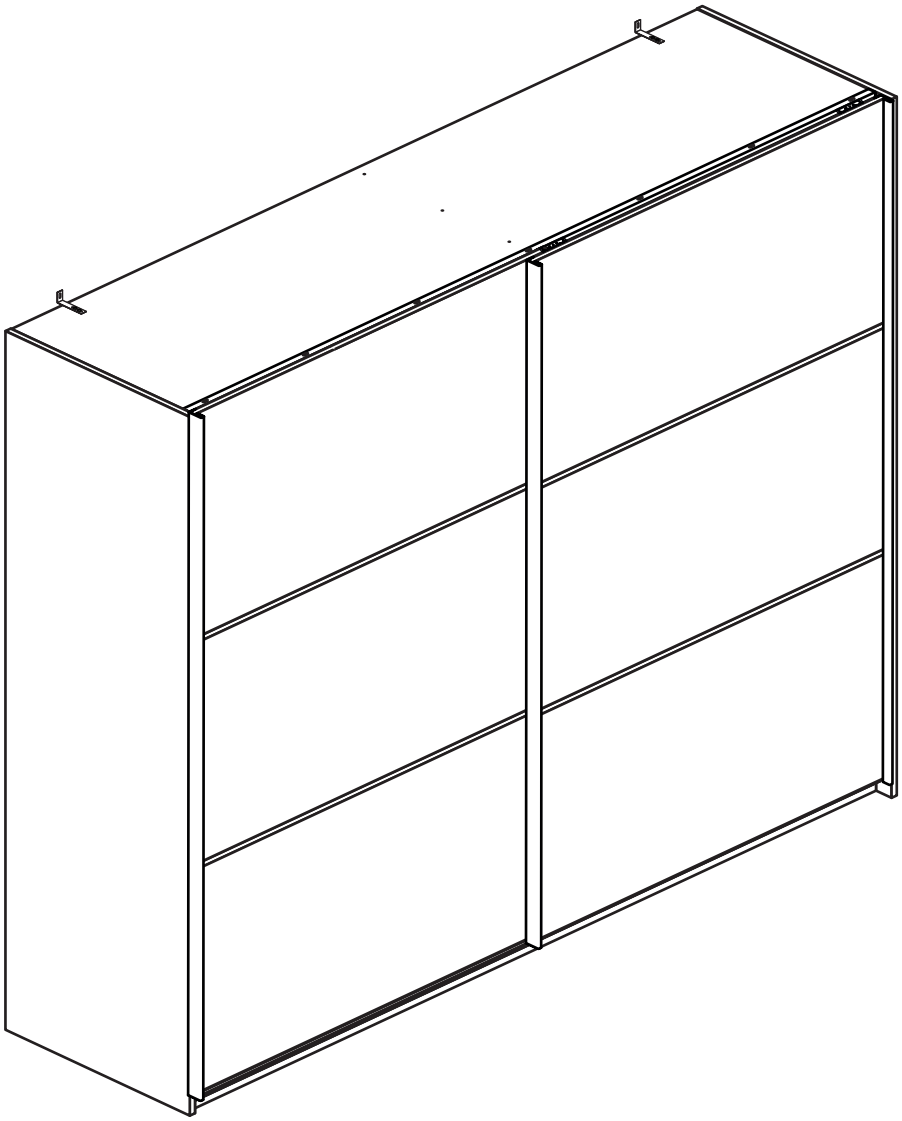

Assembly is complete

For Gloss Doors please remove any blue protective film and clear protective film

For Mirrored Doors please remove any blue protective film and clear protective film and clean the Mirrors