
Malibu - 4 Drawer 3 Door Mirror Robe

Assembly Instructions - Important: Retain these instructions for future reference

918/3636
918/4240
920/0100
791/9314
765/1885
341/1665
320/5015

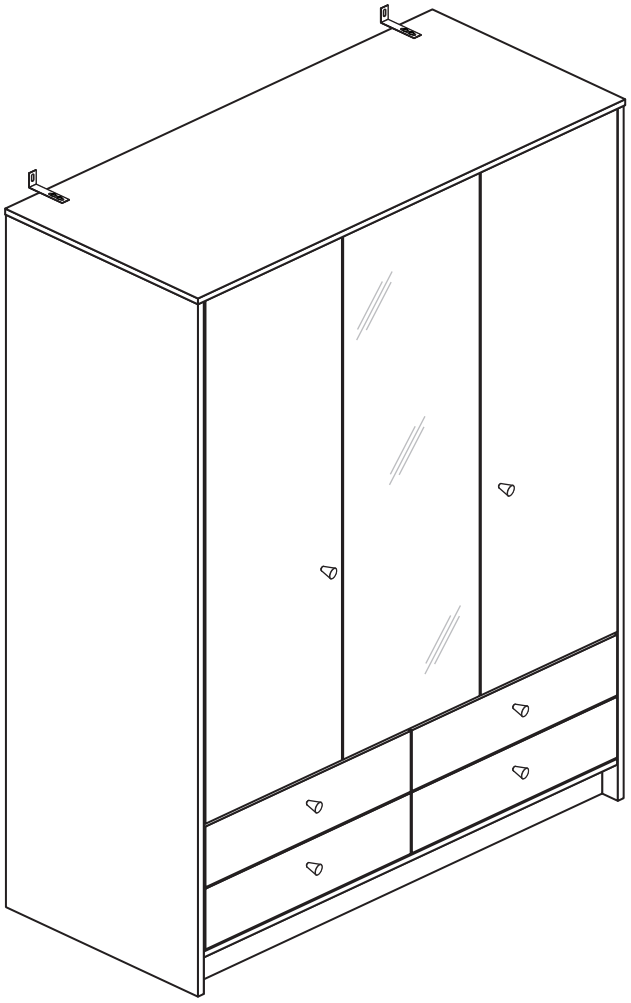

WARNING!

In order to prevent overturning, this product must be used with the 2 wall attachment devices provided

Dimensions
Width - 110.4cm
Depth - 49.8cm
Height - 180.5cm

More help is available throughout this booklet by scanning in the QR codes or typing in the links

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, please visit www.argos-support.co.uk
or email: Help@ClickSpares.co.uk (quoting your original order number)
Alternatively, call the Spares Helpline on: 0330 016 1114
For any other queries please contact the Customer Helpline on: 0345 640 2020

Issue 8 - 23/09/22

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 85kgs.
Please lift with care.

• Assembly to be carried out by a competent adult only.

• Check you have all the components and tools listed on pages 2 to 5.

• Remove all fittings from the plastic bags and separate them into their groups.

• During assembly children should be kept away from the product due to possible risk of injury.

• Installation shall only be carried out exactly according to the manufacturer's instructions - otherwise a safety risk can occur if incorrectly installed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **WARNING:** To prevent possible overbalancing this unit **must be secured** to a wall using the 2 overbalance protector kits supplied.

• Dispose of all packaging carefully and responsibly.

• Do not use this item if any components are missing or damaged.

Care and maintenance


• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• Regularly check all fastenings to ensure that they are properly tightened.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels

Please check you have all the panels listed below



1 Left Drawer Front *(DF7359)*
(53 x 15.7cm) x 2



2 Right Drawer Front *(DF7362)*
(53 x 15.7cm) x 2



3 Left Drawer Side *(WRP-00000092)*
(45 x 13cm) x 4




4 Right Drawer Side *(WRP-00000093)*
(45 x 13cm) x 4




5 Drawer Back *(WRP-00000261)*
(47.8 x 13cm) x 4




6 Drawer Base *(TDF-00018677)*
(48.9 x 44.7cm) x 4

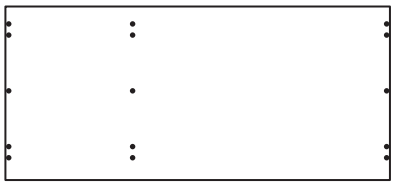


7 Top *(DF7347)*
(110.35 x 49.8cm)

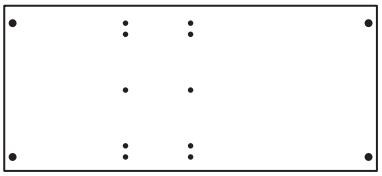


8 Horizontal *(DF7351)*
(106.95 x 47.4cm)

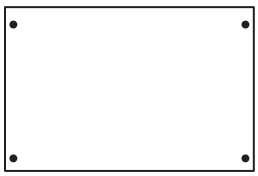


9 Wide Shelf *(DF7363)*
(71.4 x 47cm)

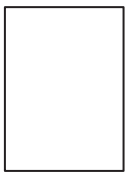


10 Loose Shelf *(DF7364)*
(34.05 x 47cm) x 3

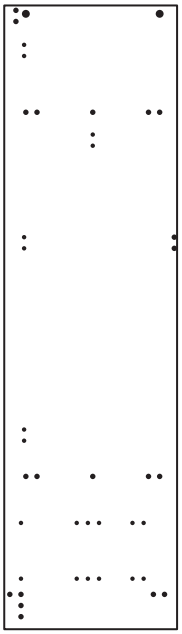


11 Left Side *(DF7348)*
(179 x 49.6cm)

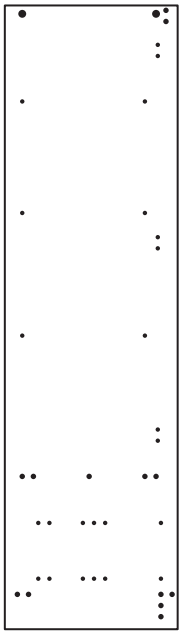

12 Right Side *(DF7349)*
(179 x 49.6cm)

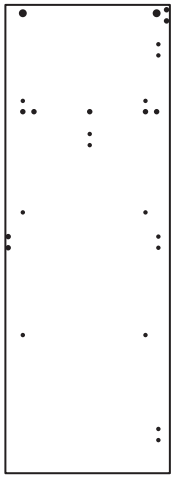


13 Divider *(DF7350)*
(134.4 x 47.2cm)

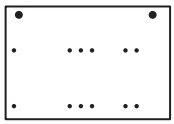


14 Drawer Divider *(DF7352)*
(32.35 x 47.2cm)

Components - Panels


Please check you have all the panels listed below



15 Plinth *(DF7353)*
(106.95 x 9.2cm)



16 Large Top Rail *(DF5858)*
(71.4 x 6cm)




17 Small Top Rail *(DF7356)*
(34.05 x 6cm)




18 Front Cross Rail *(DF7354)*
(106.95 x 9.2cm)




19 Back Cross Rail *(DF7355)*
(106.95 x 9.2cm)




20 Back Rail *(DF5866)*
(71.4 x 9.2cm)

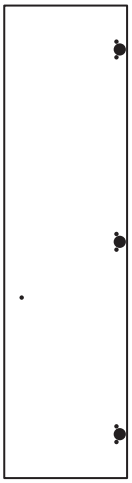


21 Left Door *(DF7357)*
(135.6 x 35.25cm)

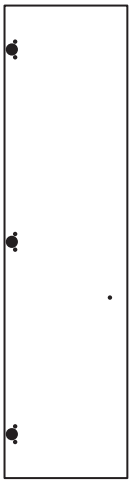


22 Right Door *(DF7358)*
(135.6 x 35.25cm)

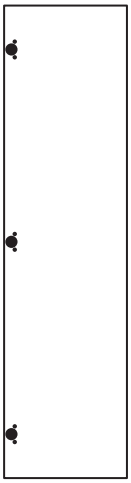

23 Mirror Door *(DF-00016990)*
(135.6 x 35.25cm)



24 Small Back *(X1709-360)*
(170.9 x 36cm)

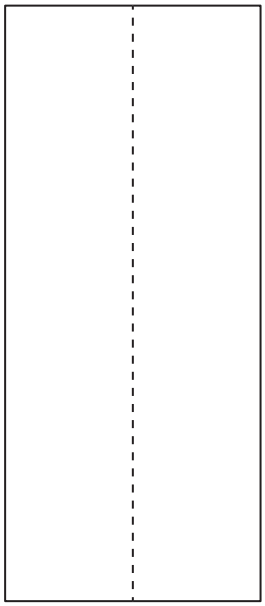



25 Large Back *(X1709-733)*
(170.9 x 73.3cm)

26 Long Hanging Rail *(FHR708)*
(70.8cm long)








Components - Fittings

Please check you have all the fittings listed below


Drawer Fittings Bag marked ‘Bag 2’

A  Quickfit dowel *(F545)* x 8	B  Large locking cam nut *(F607)* x 8	C  Knock-in Peg *(F171GY)* x 16
D  19mm Screw (*F461)* x 6	E  15mm Screw *(F284)* x 8	F  13mm Screw *(F63)* x 16

Main Fittings Bag marked ‘Bag 1’

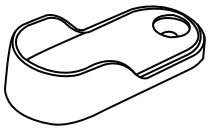A  Quickfit dowel *(F545)* x 22	B  Large locking cam nut *(F607)* x 22	E  15mm Screw *(F284)* x 5
F  13mm Screw *(F63)* x 8	G  13mm Screw *(F52)* x 4	H  9mm Screw (*F73)* x 24
I  50mm Screw *(F49)* x 4	J  Allen Key *(F36)* x 1	K  Plastic Nail *(F91)* x 6
L  Rail Holder (*F891)* x 2	M  Door Buffer *(F137)* x 6	N  Wooden dowel *(F22)* x 41
O  Large wooden dowel *(F40)* x 2	P  Shelf stud *(F110)* x 12	Q  Nail *(F51)* x 40	R  Back holder *(F276)* x 5

Ruler - Use this ruler to help correctly identify the screws

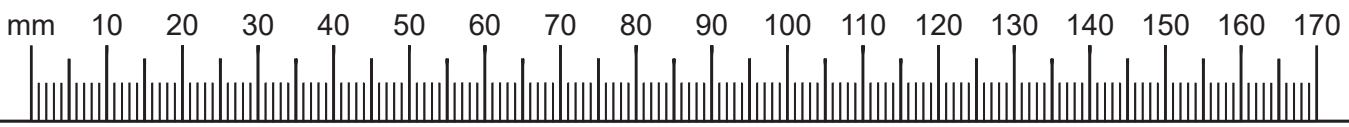

Components - Fittings


Individual Fittings Bags

S




Overbalance protector kit (*F474)* x 2

T

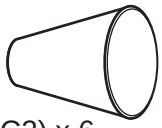


Handle (FBIC2) x 6
FBIC2GOLD - Dark Oak ONLY
FMC - Warm Grey ONLY

U

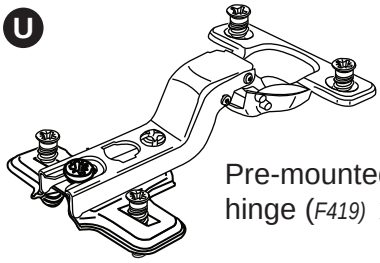

Pre-mounted hinge (*F419)* x 9

V




Drawer Brace *(F427)* x 4

Wa



CL Runner *(F608)* x 4



Wb



CR Runner (*F609)* x 4

Wc




DL Runner *(F610)* x 4

Wd



DR Runner *(F611)* x 4

Tools required




Rule




Spirit level



Eye protection (when using a hammer or drill)




Flat-head screwdriver



Bradawl



Electric drill (only use when drilling into walls)

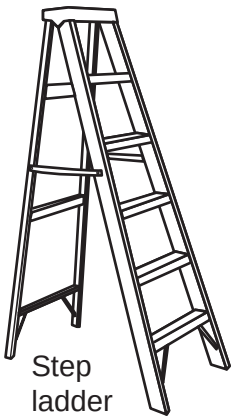

Step ladder




Square



Hammer



Scissors



Cross-head screwdriver

Assembly Instructions

Step 1

Prepare the 4 pair of drawer sides

Insert a large locking cam nut **B** into the 4 left drawer sides [3] and the 4 right drawer sides [4].


Note: The arrow on the locking cam nut **must** point towards the hole in the end of the panel.


Push 1 of the quickfit dowels **A** as far as it will go into each 4 left drawer sides [3] and 4 right drawer sides [4].

Note: Only the plastic thread of the quickfit dowel sticks out from the panel.


Use the Drawer Fittings Bag marked 'Bag 2' for Steps 1 - 7

Panel Assembly
https://www.youtube.com/watch?v=33kDsSSfxjw

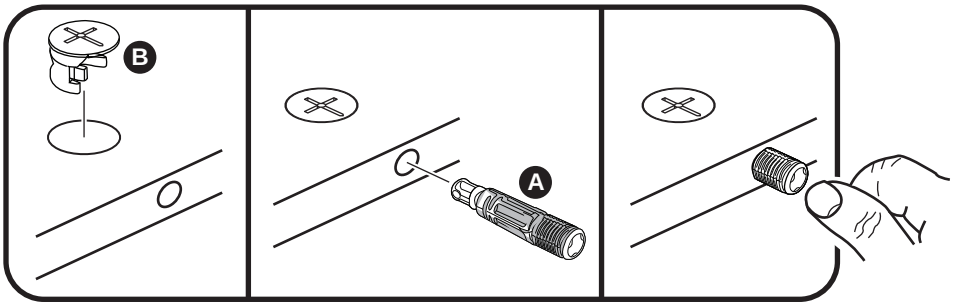

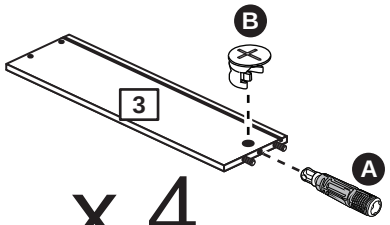

x 4

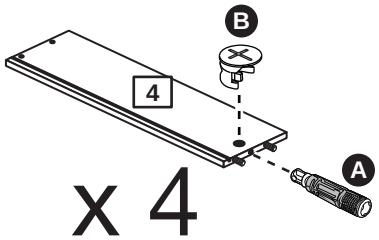

x 4


Step 2

Fit the drawer sides to the 4 drawer fronts


Push the left drawer sides [3] and right drawer sides [4] down onto the back of the 2 left drawer fronts [1] and 2 right drawer fronts [2].

IMPORTANT: Make sure there are no gaps between the fitted panels.


Using a flat-head screwdriver, turn the large locking cam nuts **B** clockwise **as far as they will go** to secure the panels.

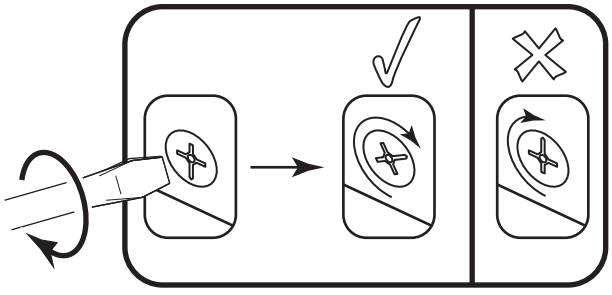


Note: The 2 right drawer fronts have a small identification hole (see panels page).

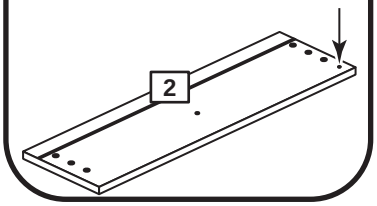

x 2

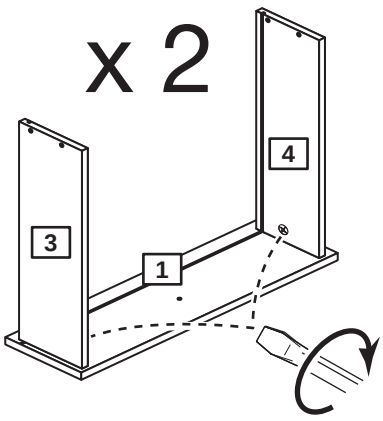

x 2

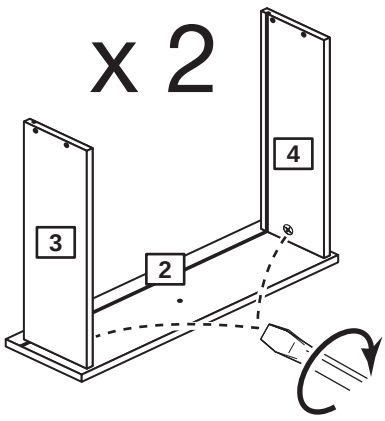


Assembly Instructions

Step 3

Fit the drawer bases

Slide a drawer base [6] down the grooves in the drawer sides [3] and [4] and down into the groove in the drawer front [1] and [2].

Standard Drawer Box Assembly
https://www.youtube.com/watch?v=HclfJdkm-Lg

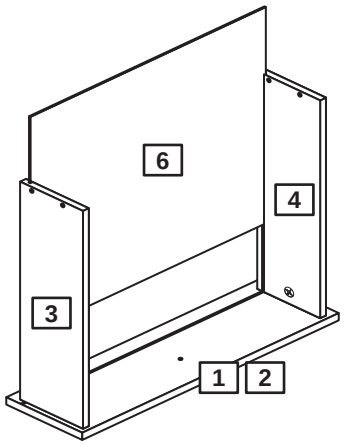

x 4

Step 4


Fit the drawer backs

Fit a drawer back [5] between the drawer sides [3] and [4].

Make sure that the drawer base [6] fits into the groove in the drawer back [5].

Hold the drawer back [5] in position and tap the knock-in pegs (C) through the holes in the drawer sides [3] and [4].

x 4

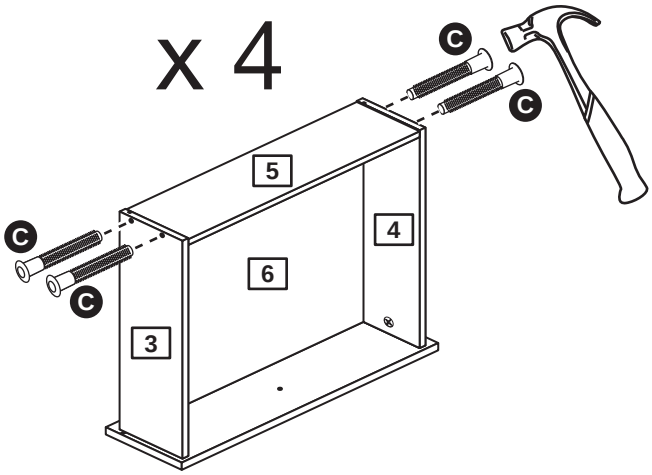


Step 5

Fit the handles

Attach a handle (T) to each of the 4 drawer fronts [1] and [2] using screws (D).

x 4

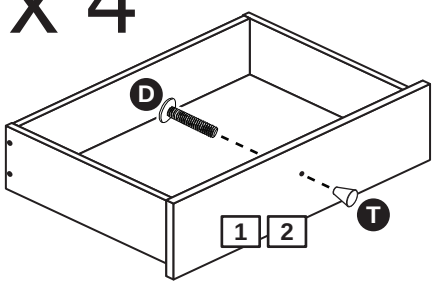

Important: You will need 2 more of these screws from the drawer fittings bag to fit the handles to the doors at a later step.


Assembly Instructions

Step 6

Fit the drawer braces

Turn the 4 drawer assemblies over and hook a drawer brace (V) onto the bottom edge of the drawer back [5].

Fix it to the drawer front and drawer back using 2 screws (E).

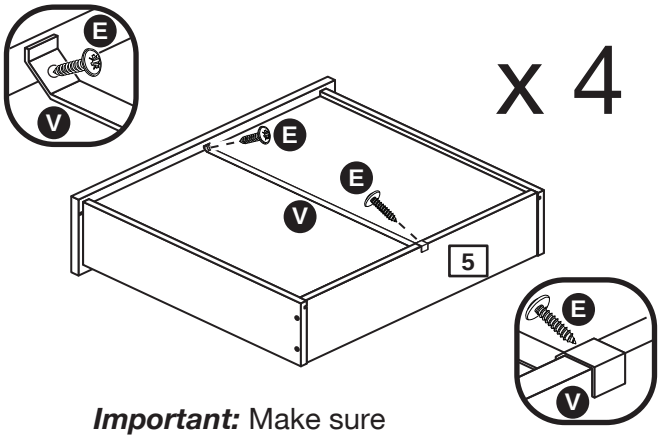

Important: Make sure that the drawer assembly is square before fitting the drawer brace.


Step 7

Fit runners to the drawers

Fit the DL runner (W c) to the bottom edge of the left drawer side [3], as shown, making sure that it is pushed up against the back of the drawer front [1] and [2]. Use a bradawl to mark the fixing positions, then secure with 2 screws (F).

Fit the DR runner (W d) to the bottom edge of the right drawer side [4] using the same method.

Fixing Bottom Mounted Runners
https://www.youtube.com/watch?v=Z6lGMy19h7Q

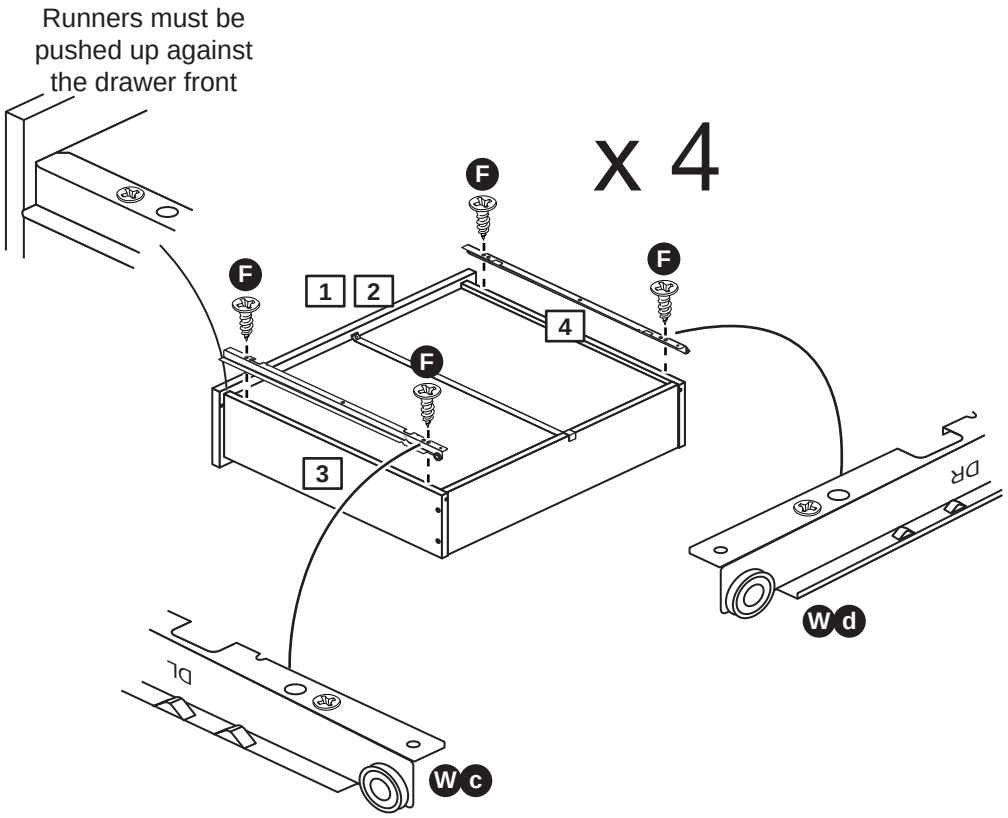

Assembly Instructions

Step 8

Prepare the divider

Fit a rail holder **L** to the divider 13 using 2 screws **G**.


Insert 2 large locking cam nuts **B** into the divider 13.

Push 2 of the quickfit dowels **A** as far as they will go into the divider 13.

Tap 6 wooden dowels **N** into the divider 13.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Use the Main Fittings Bag 'Bag 1' for Steps 8 - end

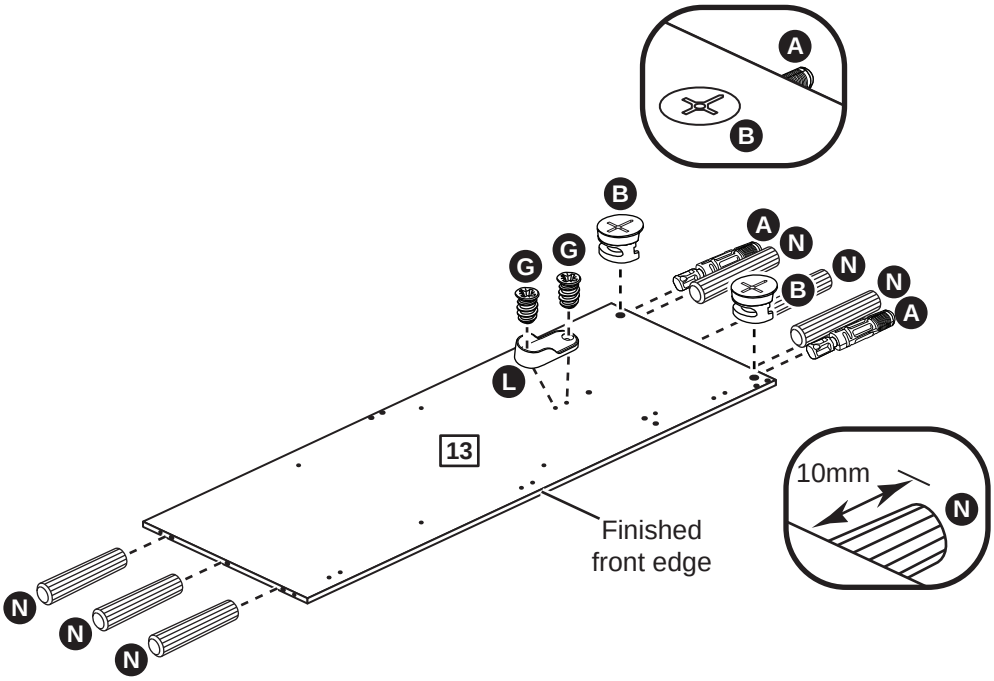


Step 9

Prepare the horizontal

Insert 4 large locking cam nuts **B** into the horizontal 8.

Push 4 of the quickfit dowels **A** as far as they will go into the horizontal 8.

Tap 6 wooden dowels **N** into the horizontal 8.

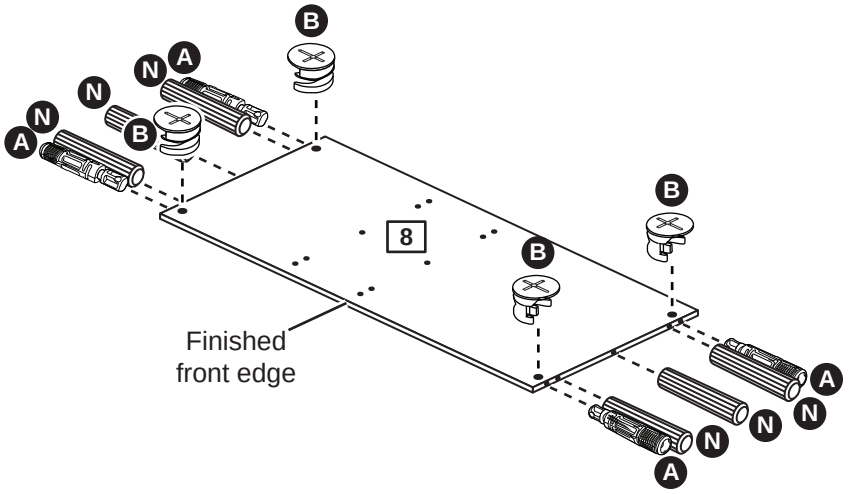


Assembly Instructions

Step 10

Fit the base

Push the horizontal 8 onto the divider 13 and fit it using 2 screws I and tighten them using the allen key J.

Note: To make the assembly easier, place polystyrene blocks from the packaging underneath the panels to raise the assembly.

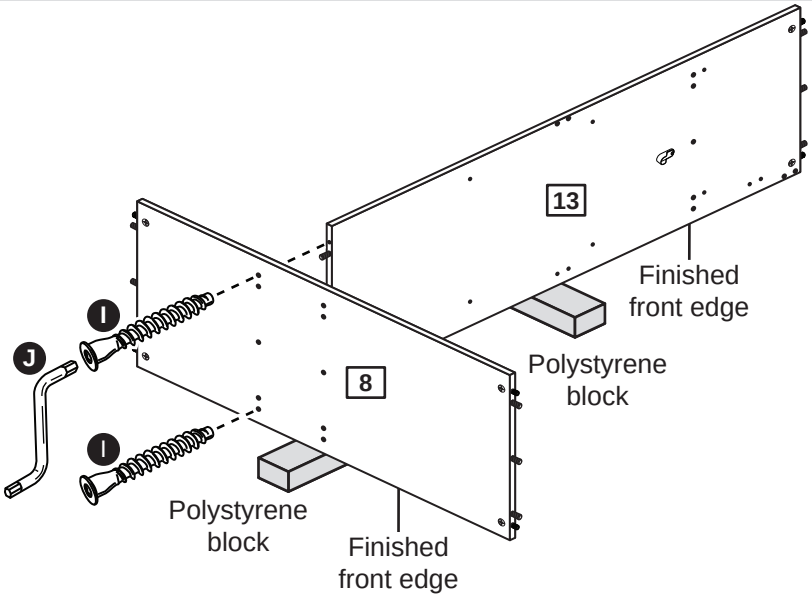


Step 11

Prepare the wide shelf

Insert 4 large locking cam nuts B into the wide shelf 9.

Push 4 of the quickfit dowels A as far as they will go into the wide shelf 9.

Tap 6 wooden dowels N into the wide shelf 9.

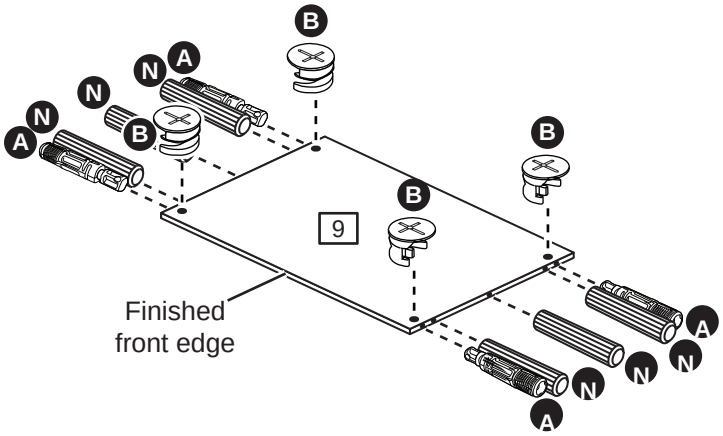

Step 12


Fit the wide shelf

Push the wide shelf 9 onto the divider 13.

IMPORTANT: Make sure there are no gaps between the fitted panels.

Using a flat-head screwdriver, turn the 2 large locking cam nuts B fited to the wide shelf 9 clockwise as far as they will go to secure the panels.

Panel Assembly
https://www.youtube.com/watch?v=33kDsSSfxjw

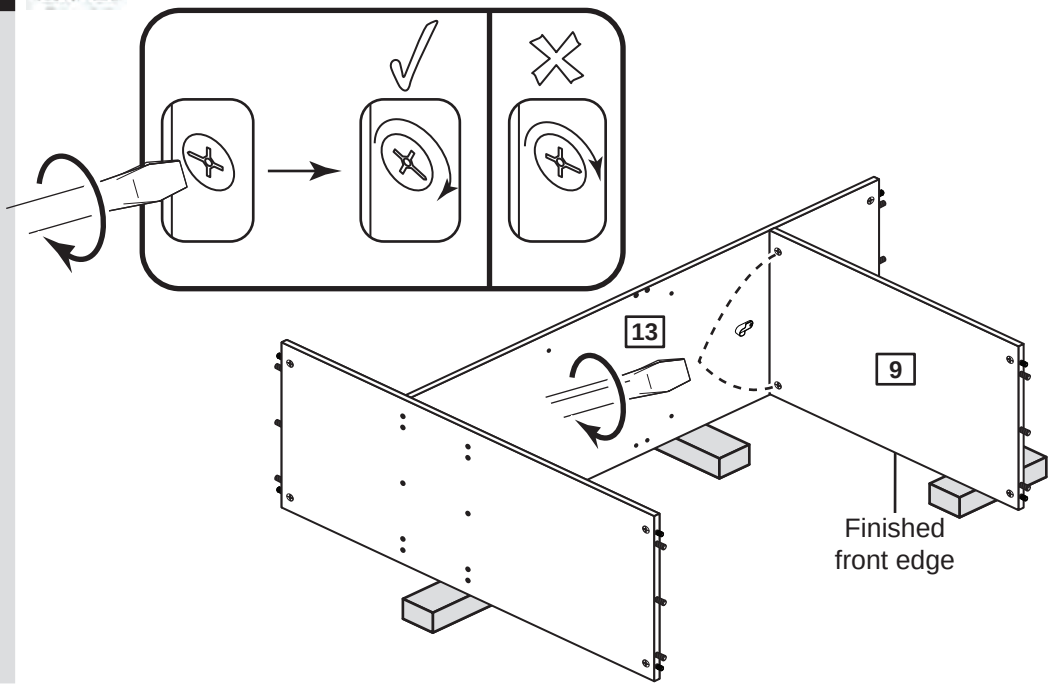

Assembly Instructions

Step 13

Prepare the drawer divider

a: Fit 2 CL runners (Wa) to the drawer divider [14].

The 1st screw (H) uses the 1st hole in from the front of the runner.

The 2nd and 3rd screws (H) use the holes that line up with the other panel holes.

b: Fit a screw (F) into the hole at the top of the runner (Wa).

c: Insert 2 large locking cam nuts (B) into the drawer divider [14].

Push 2 of the quickfit dowels (A) as far as they will go into the drawer divider [14].

Tap 3 wooden dowels (N) into the drawer divider [14] .

Turn the drawer divider over


d: Fit 2 CR runners (Wb) to the drawer divider [14].


The 1st screw (H) uses the 1st hole in from the front of the runner.


The 2nd and 3rd screws (H) use the holes that line up with the other panel holes.


e: Fit a screw (F) into the hole at the top of the runner (Wb).


Fixing Bottom Mounted Runners
https://www.youtube.com/watch?v=Z6lGMy19h7Q

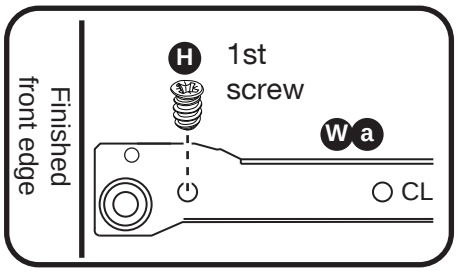


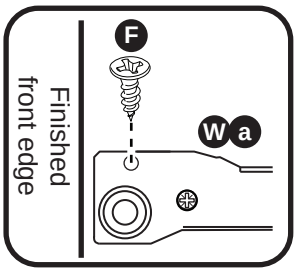

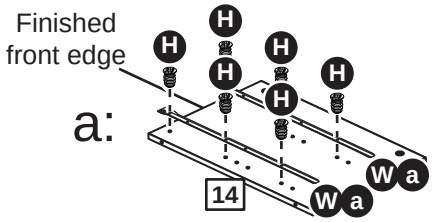


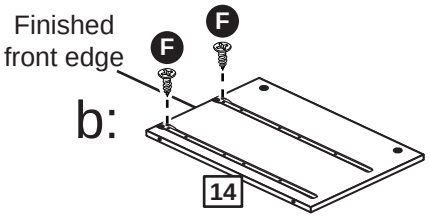


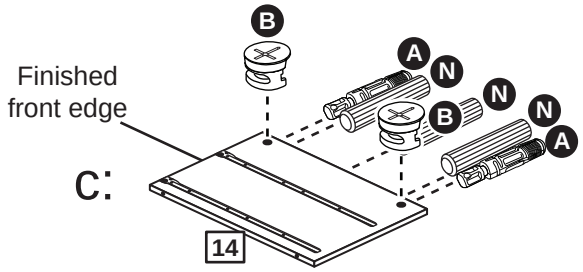


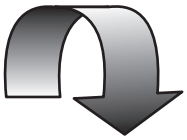


Turn the drawer divider over

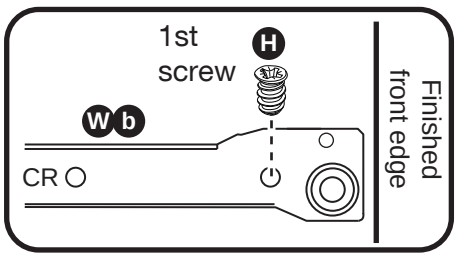

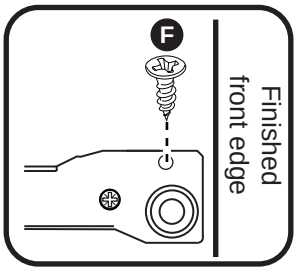

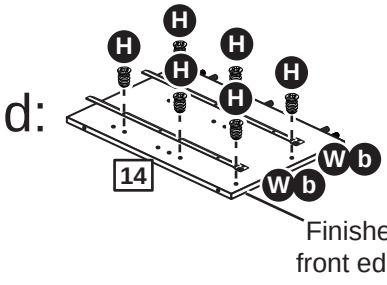

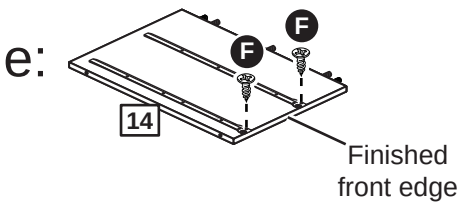

Assembly Instructions


Step 14

Fit the drawer divider

Push the drawer divider 14 onto the horizontal 8.

IMPORTANT: Make sure there are no gaps between the fitted panels.


Using a flat-head screwdriver, turn the 2 large locking cam nuts B fitted to the drawer divider 14 clockwise as far as they will go to secure the panels.

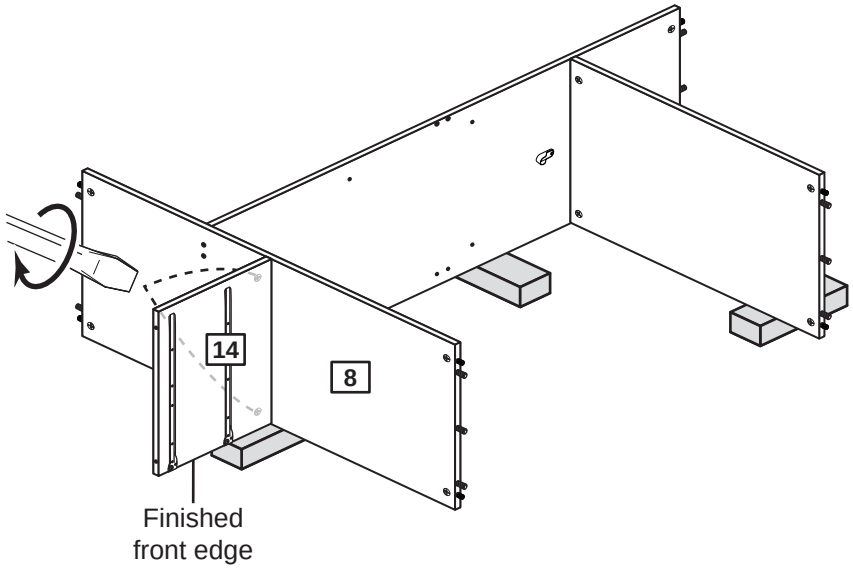

Step 15

Prepare the large top rail

Tap 2 wooden dowels N into the large top rail 16.

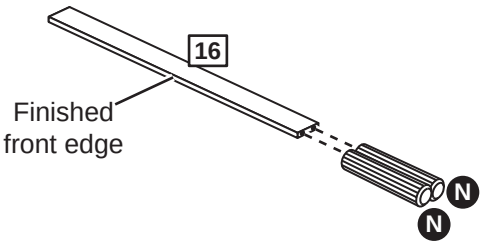


Step 16

Fit the large top rail

Push the large top rail 16 up against the divider 13.

Tap 2 large wooden dowels O through the divider 13 and into the large top rail 16 until they ''bottom out".

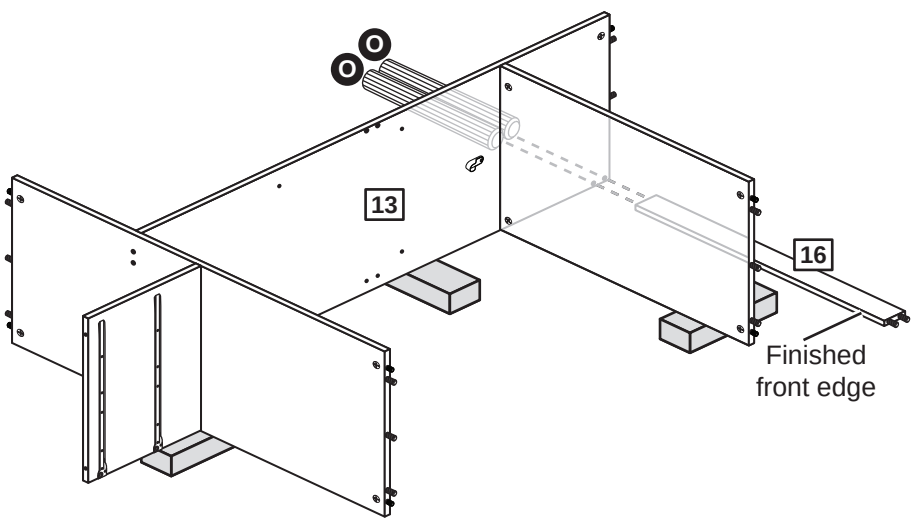

Assembly Instructions

Step 17

Prepare the right side

a: Fit 2 CR runners Wb to the right side 12.

The 1st screw H uses the 1st hole in from the front of the runner.


The 2nd and 3rd screws H use the holes that line up with the other panel holes.


b: Fit a screw F into the hole at the top of the runner Wb.

Insert 2 large locking cam nuts B into the right side 12.

Push 2 of the quickfit dowels A as far as they will go into the right side 12

Tap 3 wooden dowels N into the right side 12.

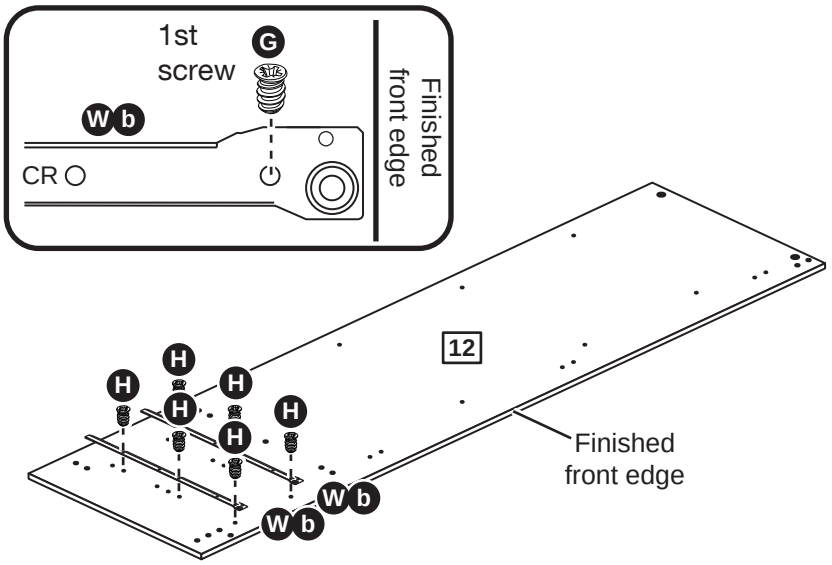


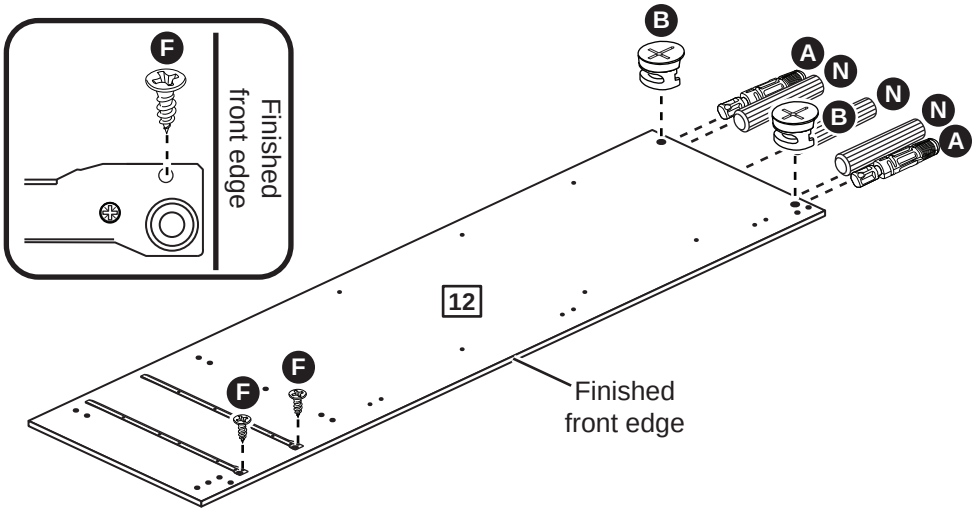

Step 18

Prepare the small top rail

Tap 2 wooden dowels N into the small top rail 17.

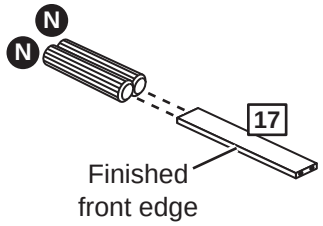


Assembly Instructions

Step 19

Fit the small top rail to the right side

Push the small top rail 17 down onto the right side 12.

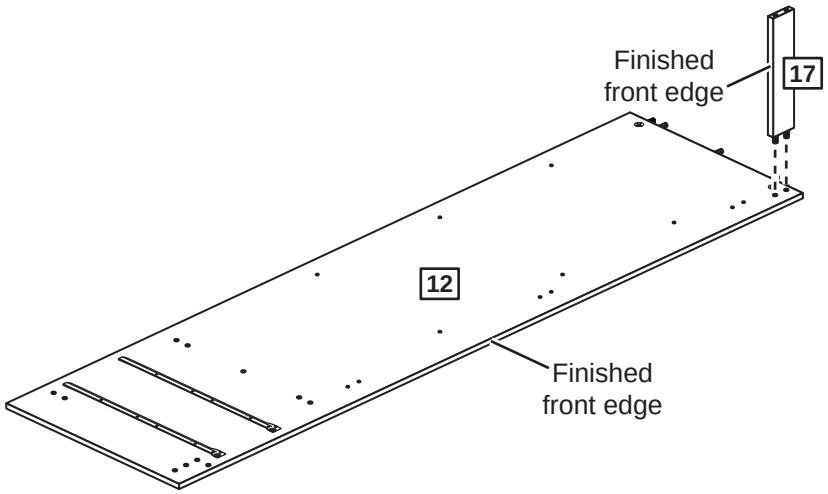

Step 20


Fit the right side

Push the right side 12 onto the horizontal 8.

Make sure that the small top rail 17 is pushed onto the 2 large wooden dowels O fitted through the divider 13.

IMPORTANT: Make sure there are no gaps between the fitted panels.

Using a flat-head screwdriver, turn the 2 large locking cam nuts B fitted to the horizontal 8 clockwise **as far as they will go** to secure the panels.

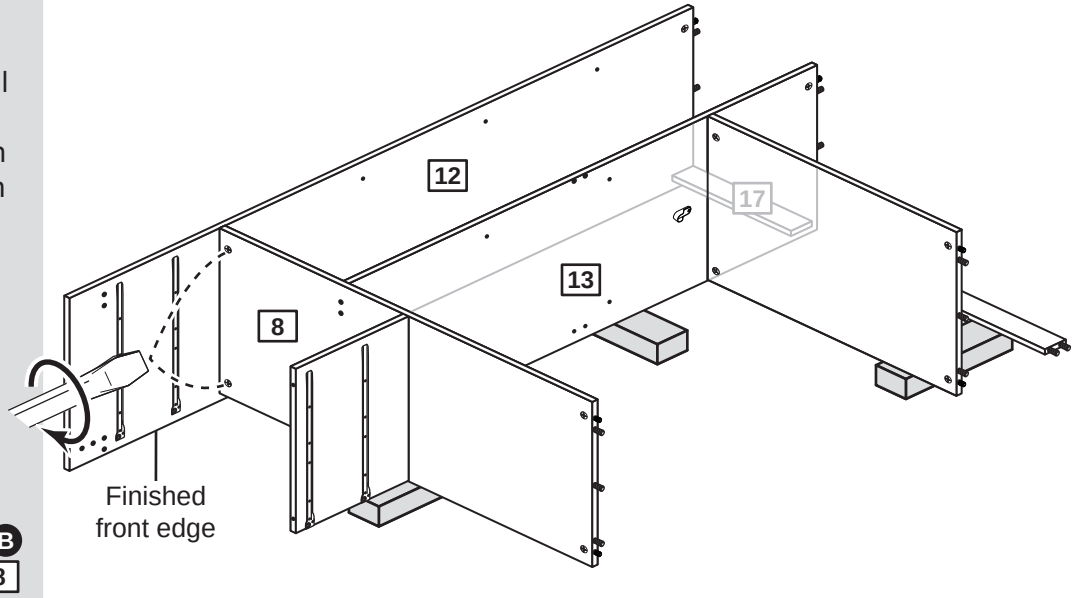


Step 21

Prepare the back cross rail

Insert 2 large locking cam nuts B into the back cross rail 19.

Push 2 of the quickfit dowels A as far as they will go into the back cross rail 19.

Tap 2 wooden dowels N into the back cross rail 9.

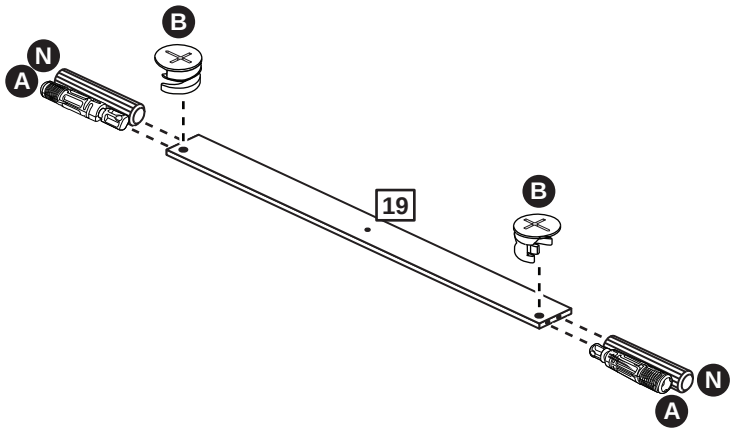

Assembly Instructions

Step 22


Fit the back cross rail

Push the back cross rail 19 onto the right side 12.

IMPORTANT: Make sure there are no gaps between the fitted panels.

Using a flat-head screwdriver, turn the large locking cam nut B fitted to the back cross rail 19 clockwise **as far as it will go** to secure the panels.

Secure the cross back rail 19 to the drawer divider 14 using screw I and tighten it using the allen key J.

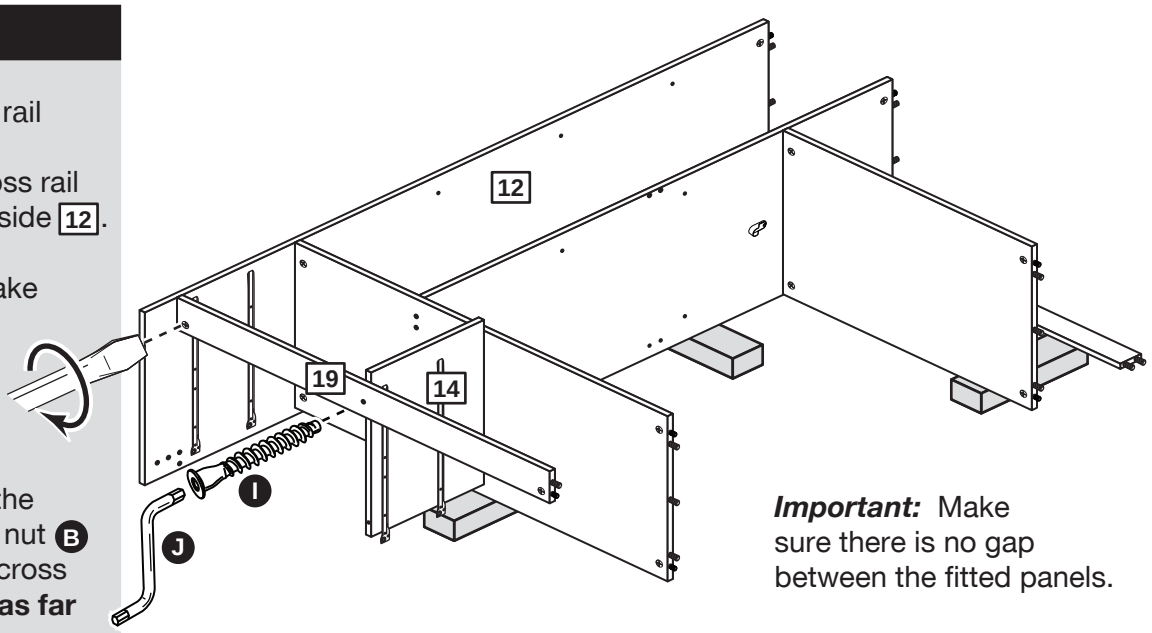


Important: Make sure there is no gap between the fitted panels.

Step 23

Prepare the front cross rail

Tap 4 wooden dowels N into the front cross rail 18.

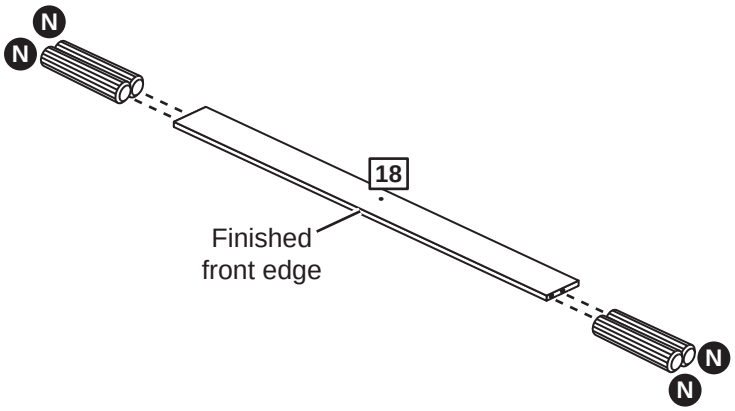


Step 24

Fit the front cross rail

Push the front cross rail 18 onto the right side 12.

Secure the front cross rail 18 to the drawer divider 14 using screw I and tighten it using the allen key J.

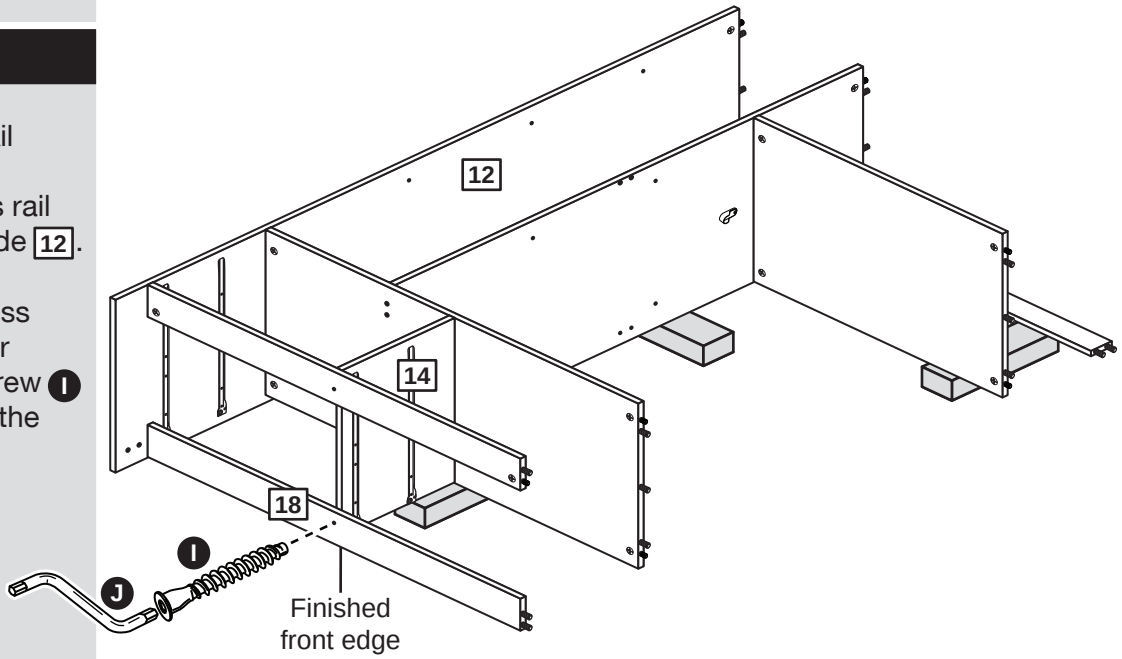

Assembly Instructions


Step 25

Prepare the plinth

Insert 2 large locking cam nuts **B** into the plinth 15.

Push 2 of the quickfit dowels **A** as far as they will go into the plinth 15.

Tap 2 wooden dowels **N** into the plinth 15.

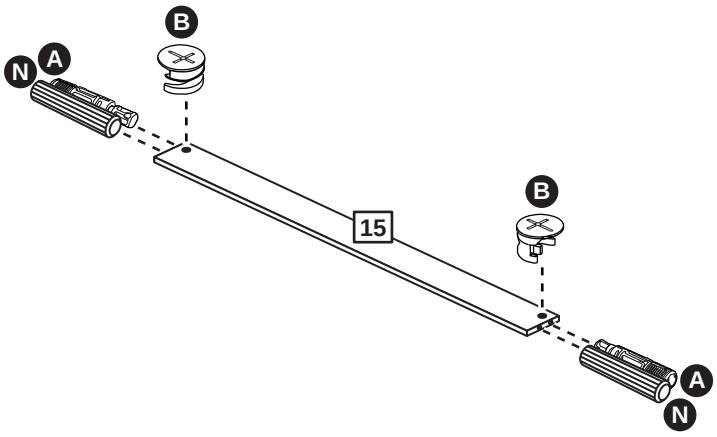


Step 26

Fit the plinth

Push the plinth 15 onto the right side 12.

IMPORTANT: Make sure there are no gaps between the fitted panels.

Using a flat-head screwdriver, turn the large locking cam nut **B** fitted to the plinth 15 clockwise **as far as it will go** to secure the panels.

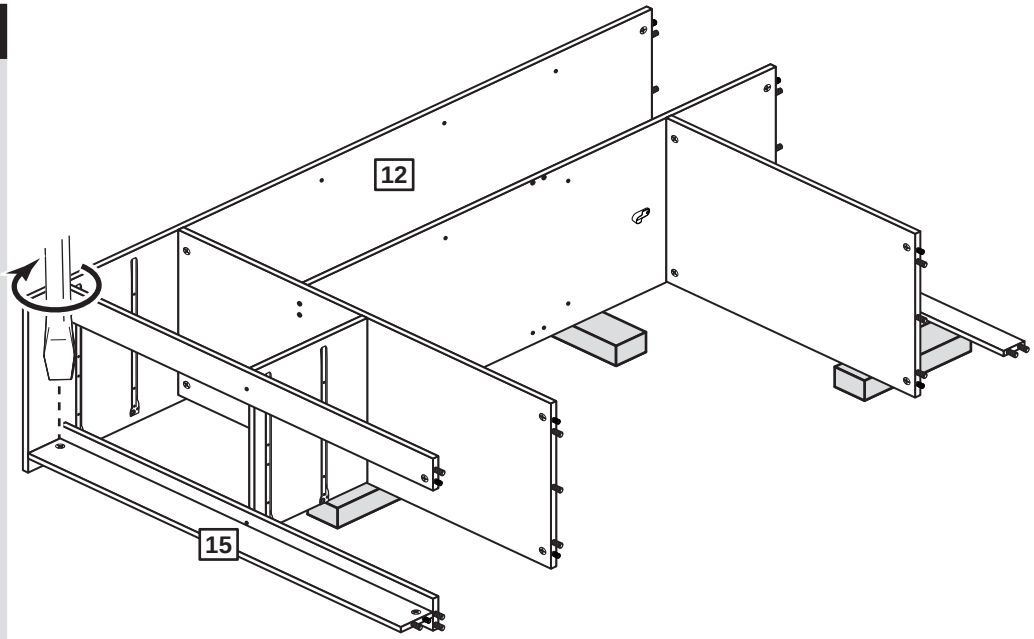


Step 27

Prepare the back rail

Insert 2 large locking cam nuts **B** into the back rail 20.

Push 2 of the quickfit dowels **A** as far as they will go into the back rail 20.

Tap 2 wooden dowels **N** into the back rail 20.

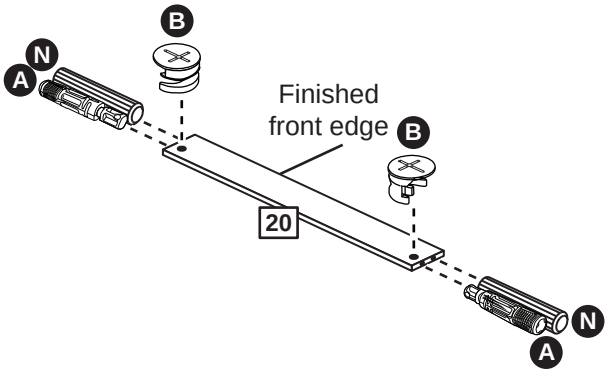

Assembly Instructions

Step 28

Prepare the left side

a: Fit 2 CL runners Wa to the left side 11.

The 1st screw H uses the 1st hole in from the front of the runner.

The 2nd and 3rd screws H use the holes that line up with the other panel holes.


b: Fit a screw F into the hole at the top of the runner Wa.


c: Insert 2 large locking cam nuts B into the left side 11.


Push 2 of the quickfit dowels A as far as they will go into the left side 11.


Tap 3 wooden dowels N into the left side 11.


Fit a rail holder L to the left side 11 using 2 screws G.

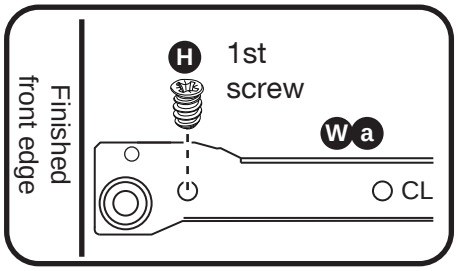

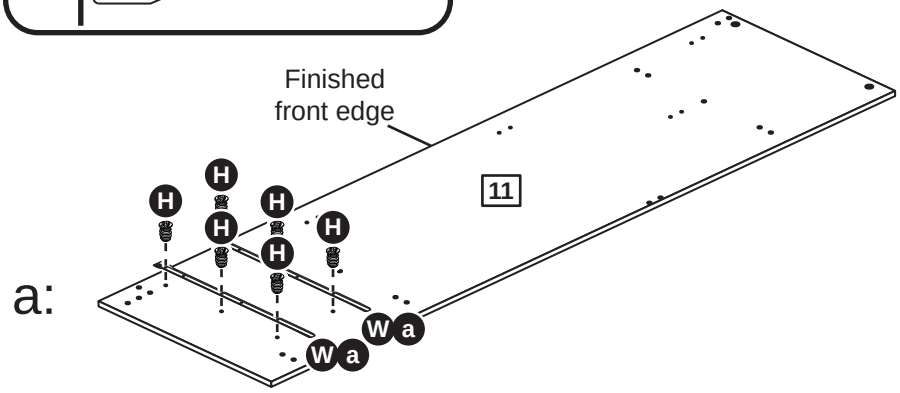

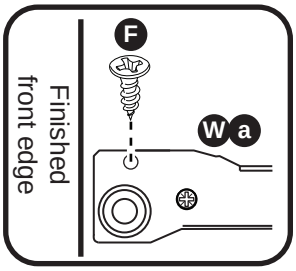

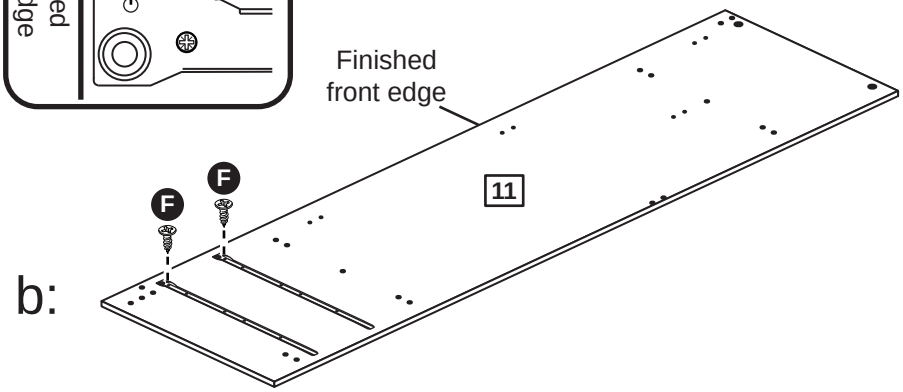

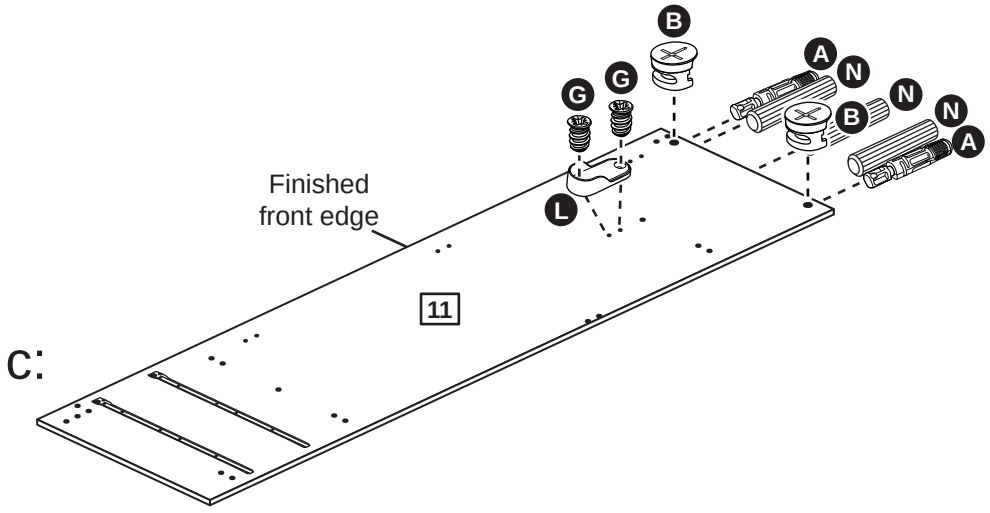

Assembly Instructions


Step 29

Fit the back rail

Push the back rail 20 onto the divider 13.

IMPORTANT: Make sure there are no gaps between the fitted panels.

Using a flat-head screwdriver, turn the large locking cam nut B fitted to the back rail 20 clockwise **as far as it will go** to secure the panels.

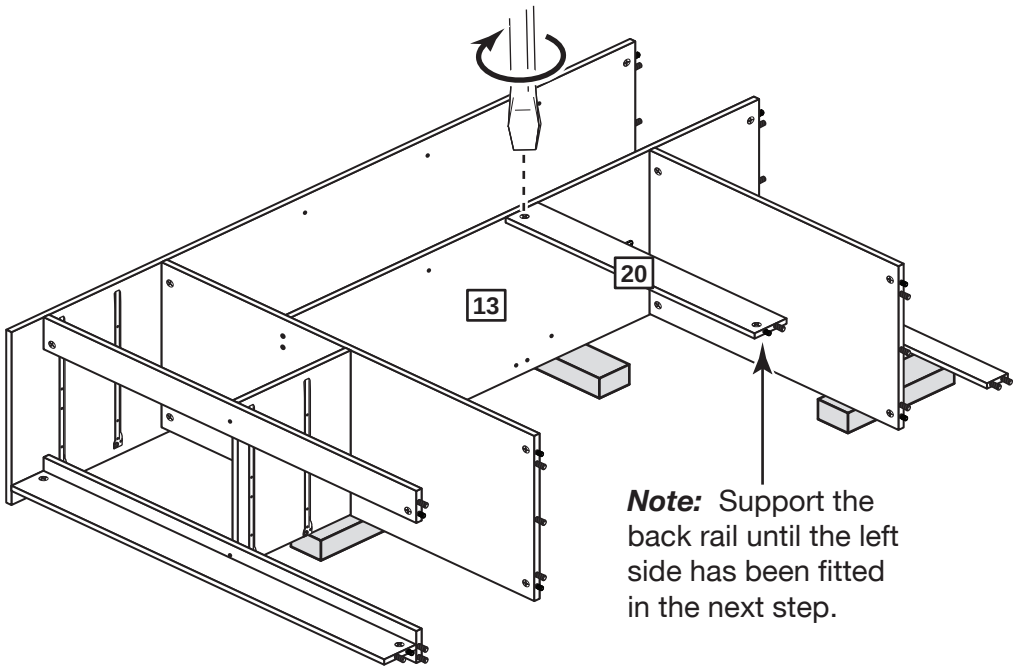


Step 30

Fit the left side

Push the left side 11 onto the assembly.

IMPORTANT: Make sure there are no gaps between the fitted panels.

Using a flat-head screwdriver, turn the 7 large locking cam nuts B clockwise **as far as they will go** to secure the panels.

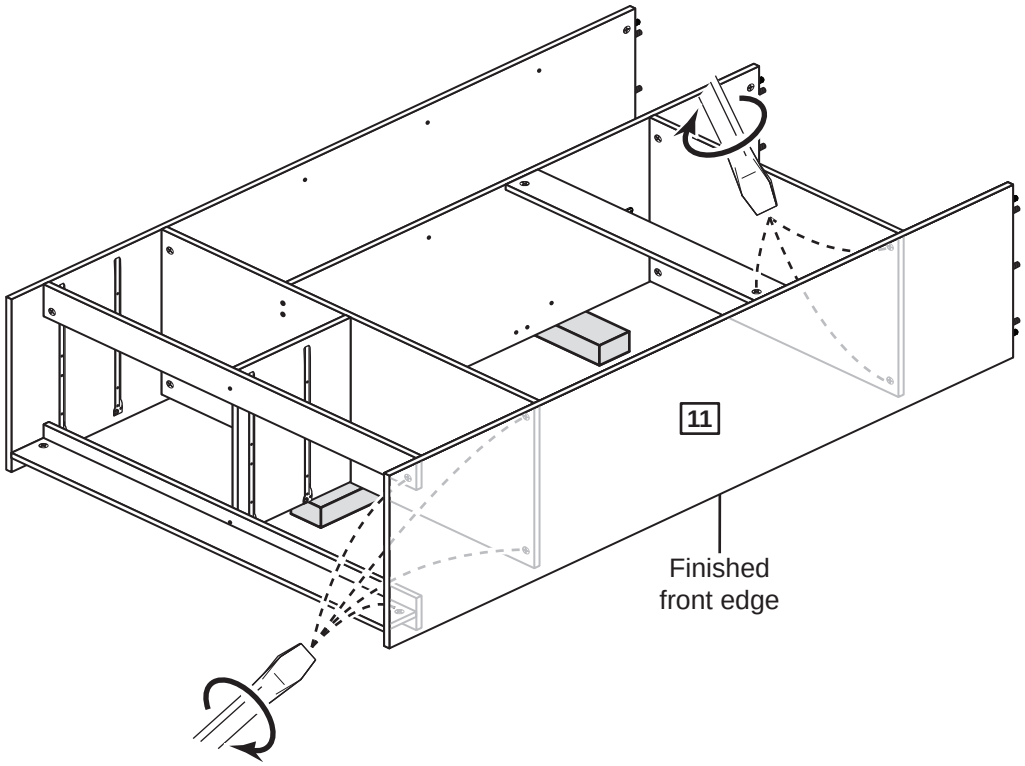

Assembly Instructions


Step 31

Fit the top

Push the top [7] onto the assembly.

IMPORTANT: Make sure there are no gaps between the fitted panels.

Using a flat-head screwdriver, turn the 6 large locking cam nuts (B) clockwise **as far as they will go** to secure the panels.

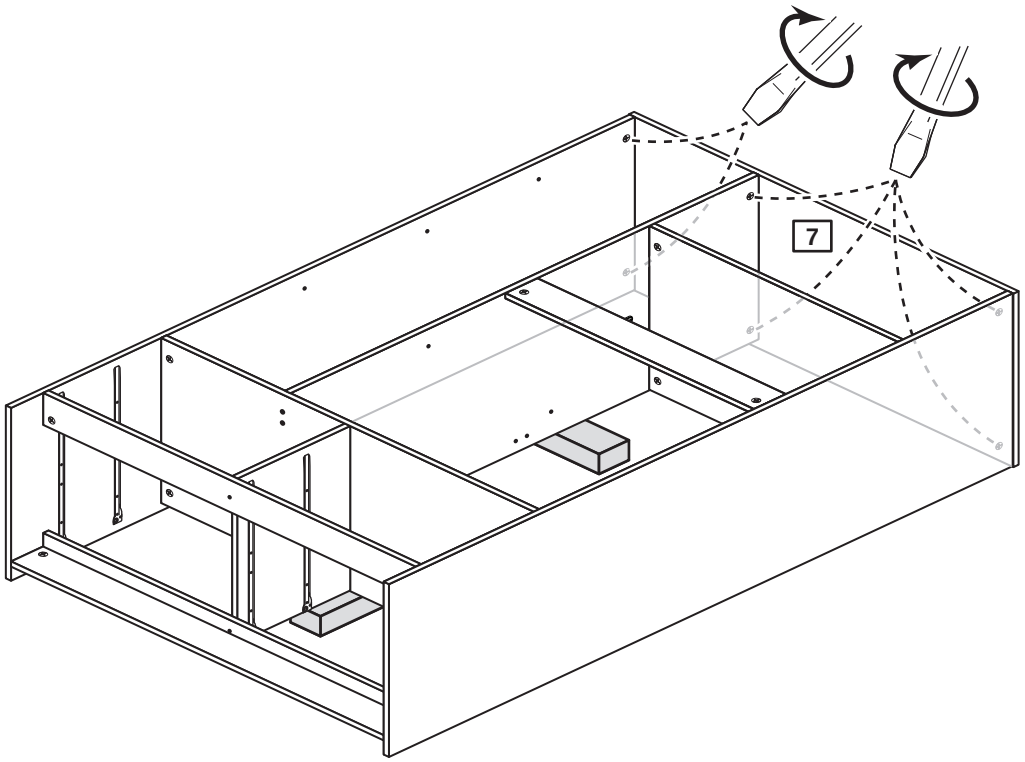


Step 32

Fit the 6 plastic nails

Tap 2 plastic nails (K) into the bottom edge of each side [11] and [12] as shown.

Tap 2 plastic nails (K) into the plinth [15] as shown.

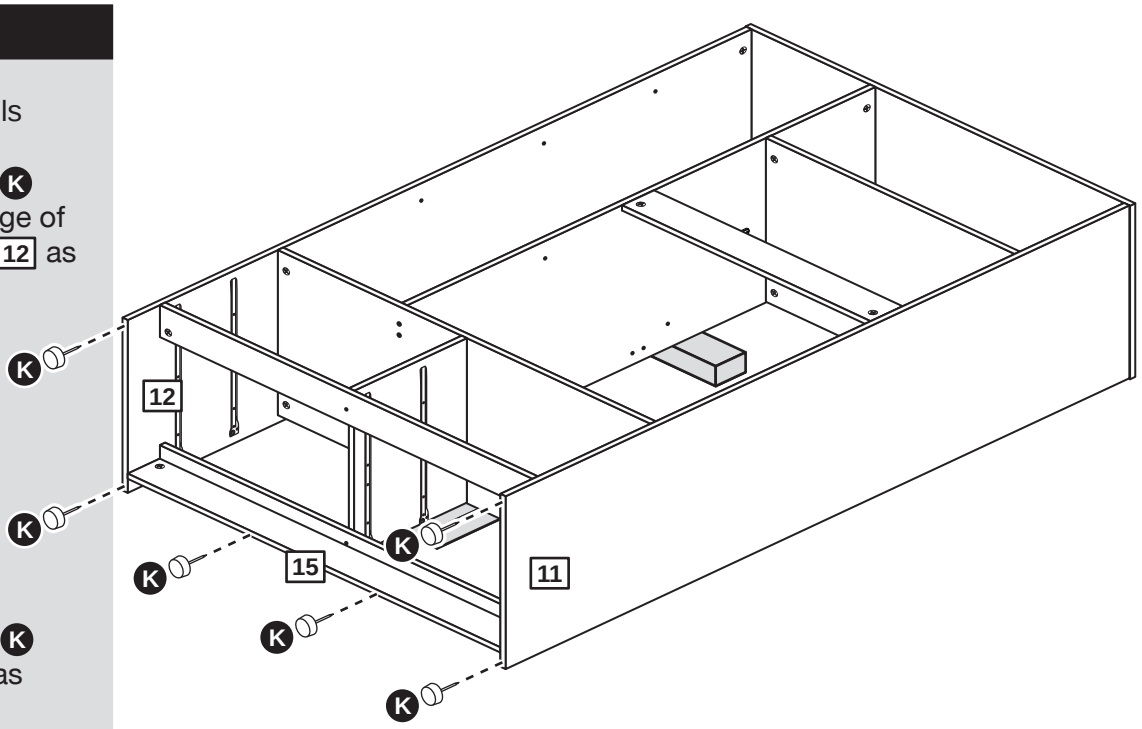

Assembly Instructions

Step 33

Fit the back panels

a: Square up the unit by making sure that measurement **x:x equals y:y.**

Place the small back 24 and the large back 25 down onto the unit as shown.


Make sure that the 2 backs are pushed up tight against each other and that they meet over the back edge of the divider.

b: Nail around the outside edges of the 2 backs using 40 nails Q.

Note: Do not nail where the backs meet. Nails should be spaced out evenly.

Squaring up a Robe and fitting the Back Panel
www.youtube.com/watch?v=udEKmXmPEW0

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

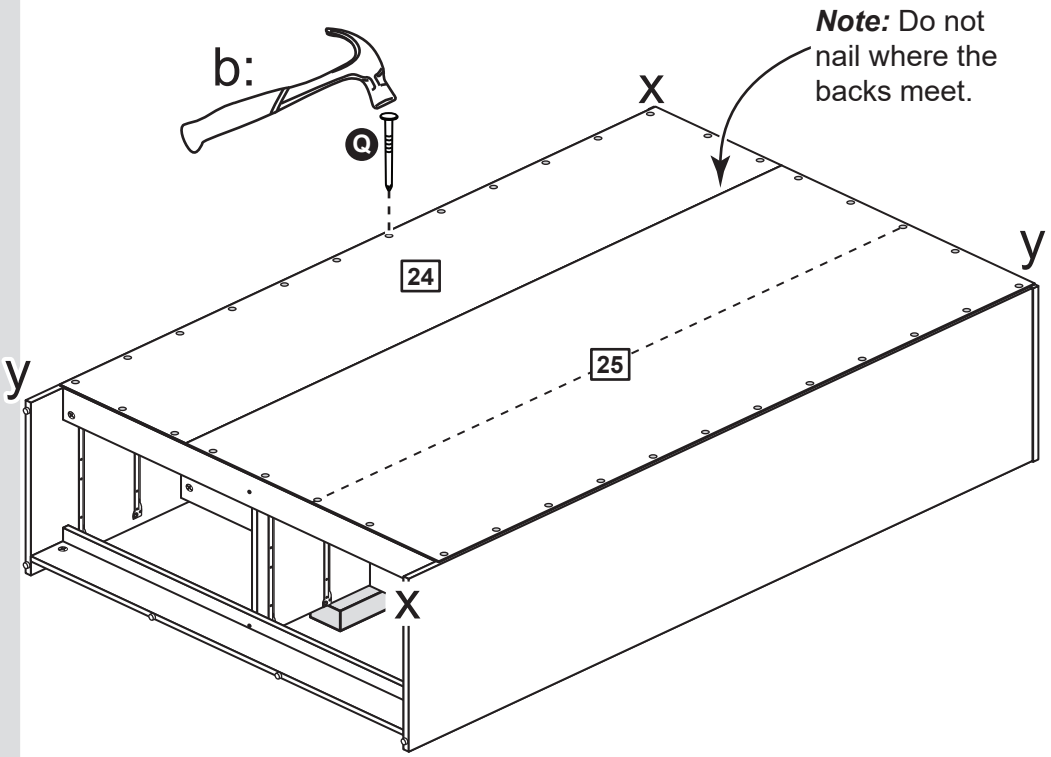


Step 34


Secure the backs to each other

Push a nail screw E into each back holder R and tap them down between the edges of the 2 backs 24 and 25 into the back edge of the divider 13 .

Using a screwdriver, screw the nail screws E down until the back holders R dig into the small and large backs.

Warning: The unit is heavy. Lift with care.

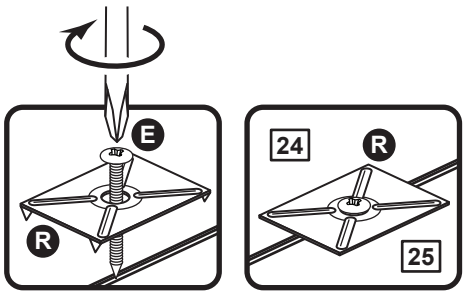

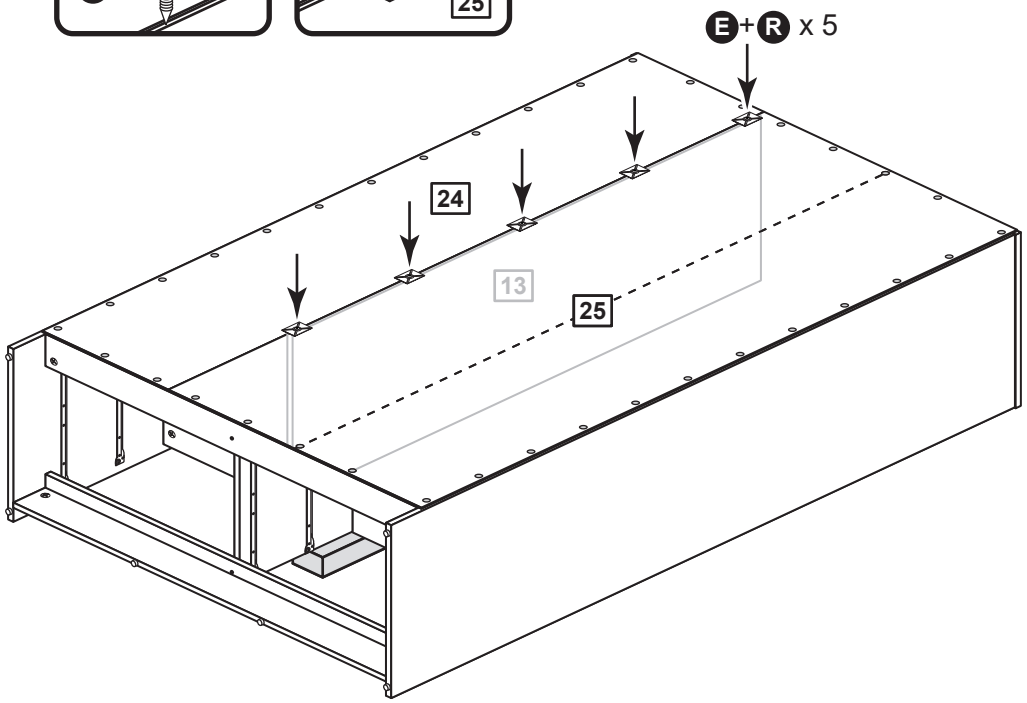

Assembly Instructions


Step 35


Fit the hanging rail and the drawers


Push the hanging rail 26 into the rail holders L.

Slide the wheels of the runners fitted to the drawers, over the wheels of the runners fitted to the side panels and push the drawers into position.

Fixing Bottom Mounted Runners
https://www.youtube.com/watch?v=Z6lGMy19h7Q

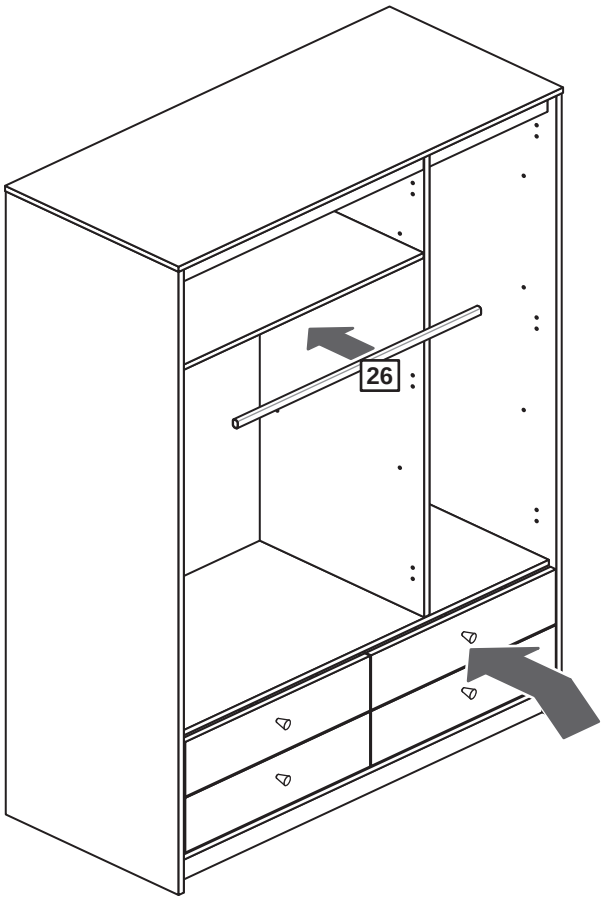

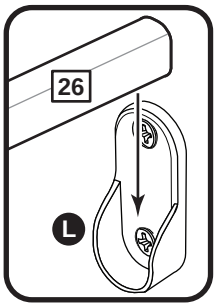


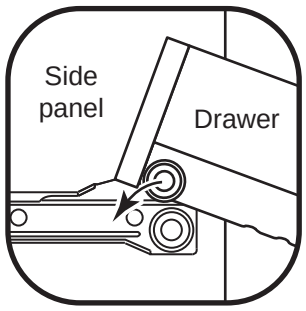

Step 36

Fit the shelf studs

For each of the 3 loose shelves 10, insert 4 shelf studs P into the holes shown.

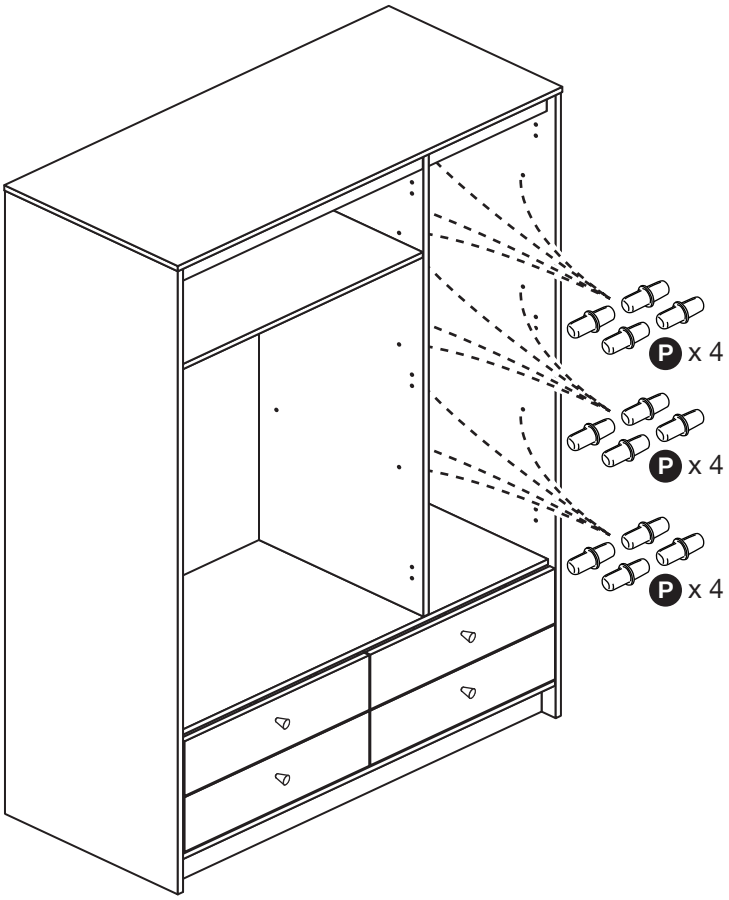


Assembly Instructions

Step 37

Fit the shelves

Lower the 3 loose shelves [10] down onto the shelf studs (P).

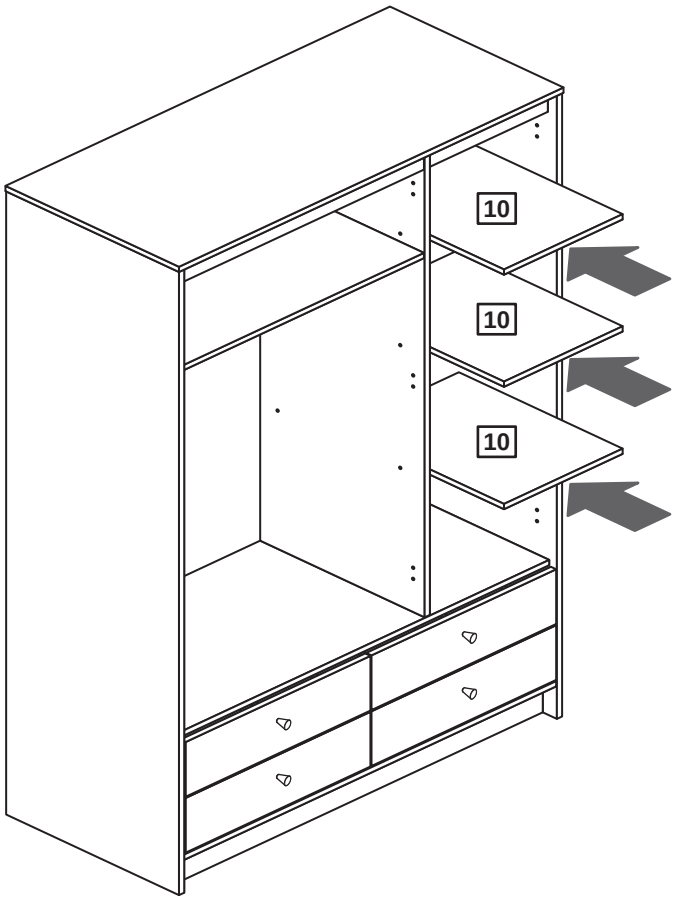


Step 38

Prepare the 3 doors

Push fit 3 hinges (U) into the left door [21], the right door [22] and the mirror door [23].

Secure each hinge by tightening up its 2 screws.

Pre-mounted Hinge Fitting & Adjustment
https://www.youtube.com/watch?v=b4NeCGnpjP8

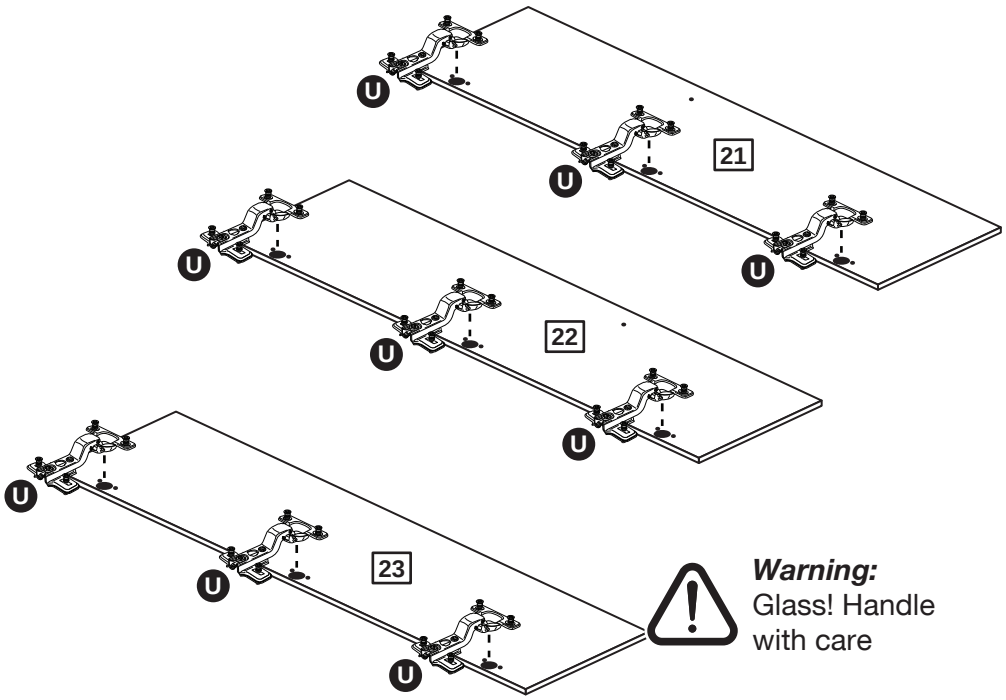

Warning:
Glass! Handle with care

Assembly Instructions

Step 39

Fit the doors and the handles

2 people are needed here


Fit 1 door 21, 22 and 23 at a time, by lining up the 2 screws in the top hinge U with the 2 holes at the top of the panel and push them in. Tighten the 2 screws on the hinge.

Fix the bottom hinge next, followed by the other hinge.


Attach a handle T to doors 21 and 22 using screws D.

Pre-mounted Hinge Fitting & Adjustment
https://www.youtube.com/watch?v=b4NeCGnpjP8


Press the screws into the holes in the panels

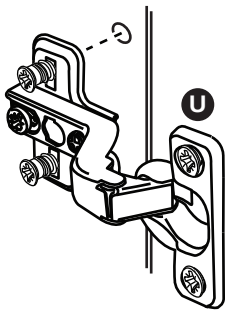

When the hinges have been pushed in, tighten up their screws

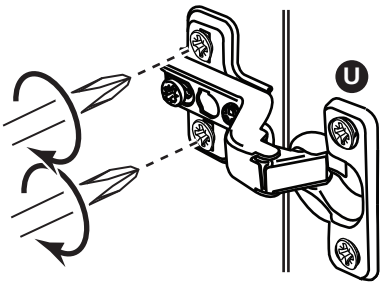

Important: As soon as you have tightened up the 1st screw on the top hinge, the door tends to drop. Bring the door back up so that the door does not clash with the drawers.

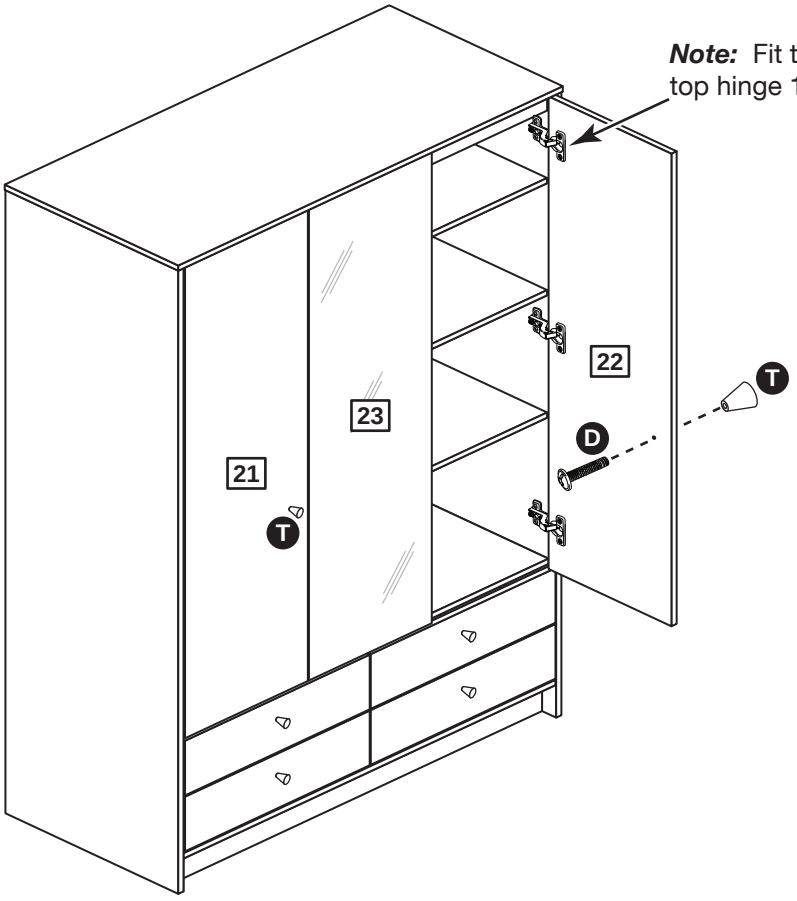

Assembly Instructions

Step 40

Adjust the doors if needed


a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.
Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: **Height adjustment.**
Loosen screws A on hinge plates and move door up or down as required.
Retighten screw A.

c: **Forward and Back adjustment**.
Loosen screw B on hinge plate and move door in or out as required.
Retighten screw B.

d: **Sideways adjustment**.
To move door ‘out’ loosen screw C.
To move door ‘in’ tighten screw C.

Pre-mounted Hinge Fitting & Adjustment
https://www.youtube.com/watch?v=b4NeCGnpjP8

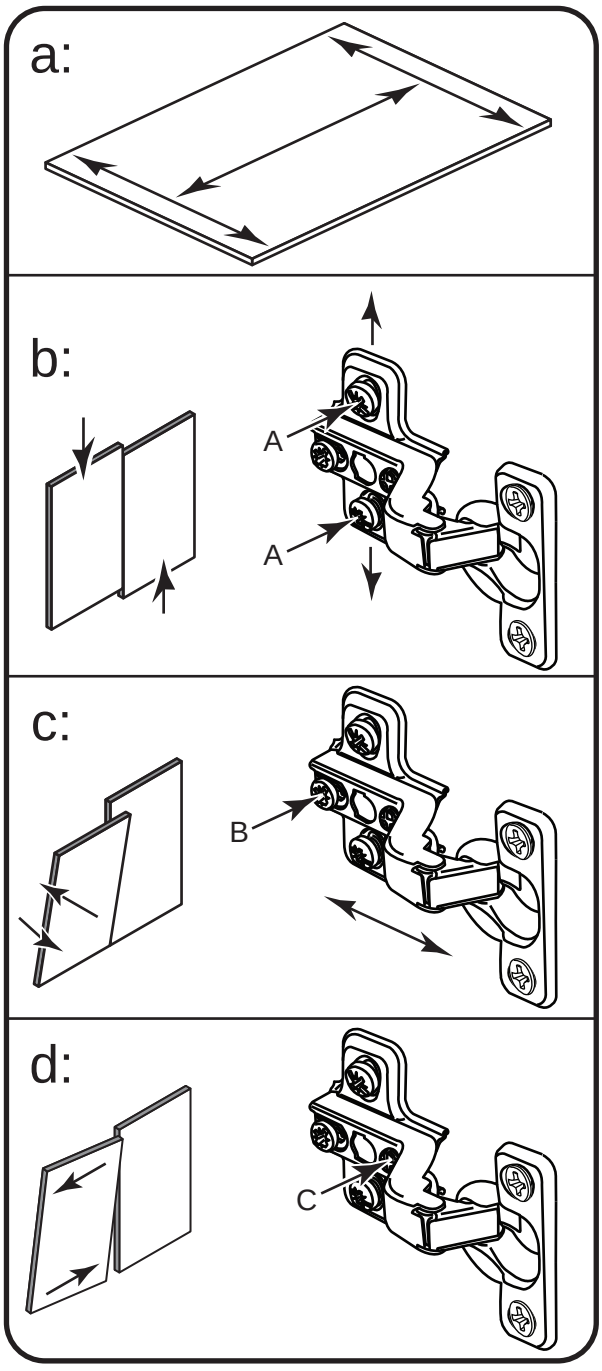


Assembly Instructions

Step 41

Fit the door buffers

Stick a door buffer (M) onto the top corner of each door 21, 22 and 23 about 50mm in from the edge.

Stick a door buffer (M) onto the bottom corner of each door 21, 22 and 23 about 50mm in from the edge.

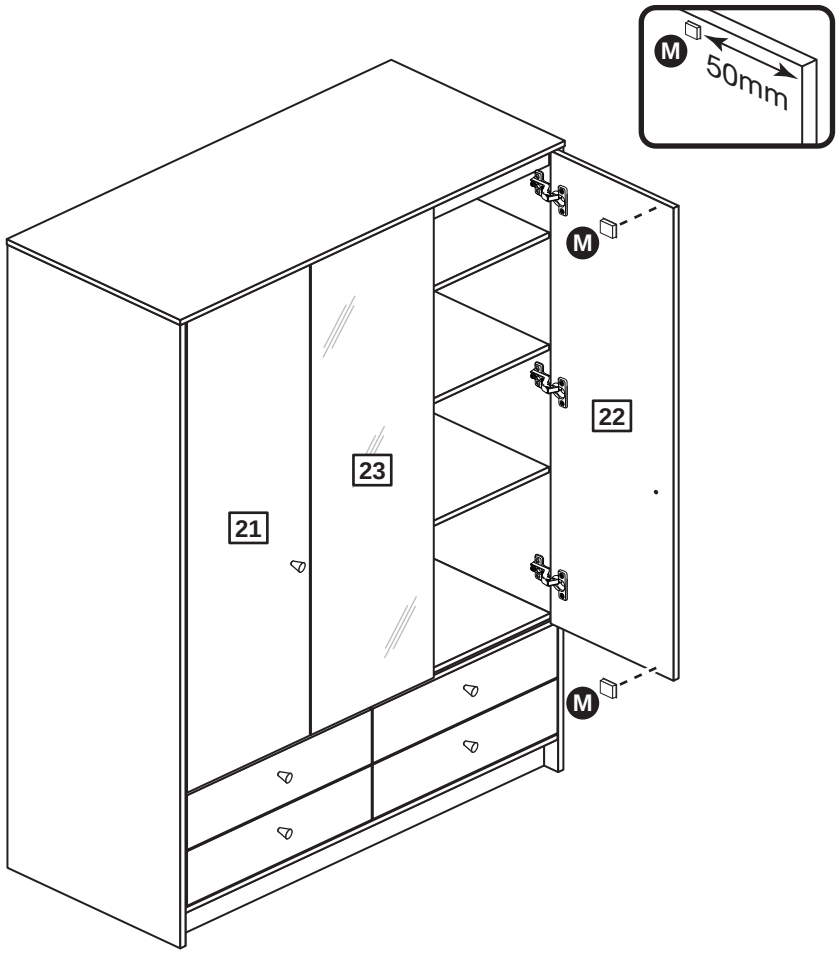

Assembly Instructions

Step 42

Fit the 2 overbalance protector kits

To prevent possible overbalancing this unit **must be secured** to a suitable wall by fitting of the 2 overbalance protector kits (S) to the unit.

a: Before fitting the overbalance protector kits, use a spirit level to check the top of the unit is level, front-to-back and side-to-side in the 3 positions shown.
Use suitable packing pieces (not supplied) to make the unit level.

b: Push the unit up against the wall and loosely fit the 1st screw through the brackets into the top panel.

Slide the brackets against the wall and mark the slot at the back of the brackets for drilling into the wall.


Swivel the brackets away from the wall and drill the wall using a suitable drill-bit and fit your wall fixings (wall fixings are not supplied as they will need to suit the wall type).

Swivel the brackets back and fix them to the wall.


Fit the 2nd screw into top panel and tighten both screws from the kits.

WARNING!
In order to prevent overturning this product must be used with the 2 wall attachment devices provided


a:

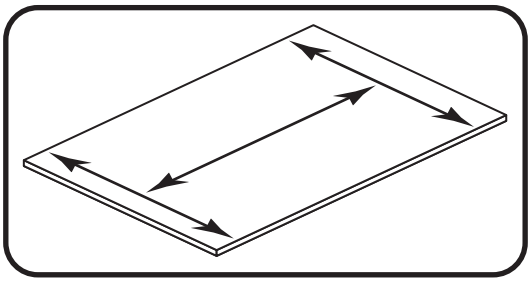

b:

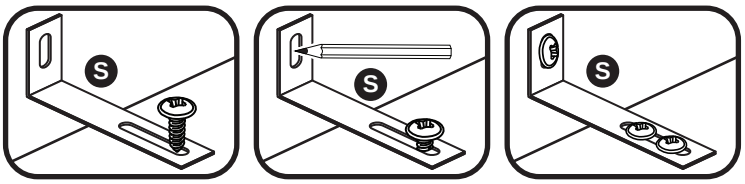

See the next page for a guide to wall mounting and fixings

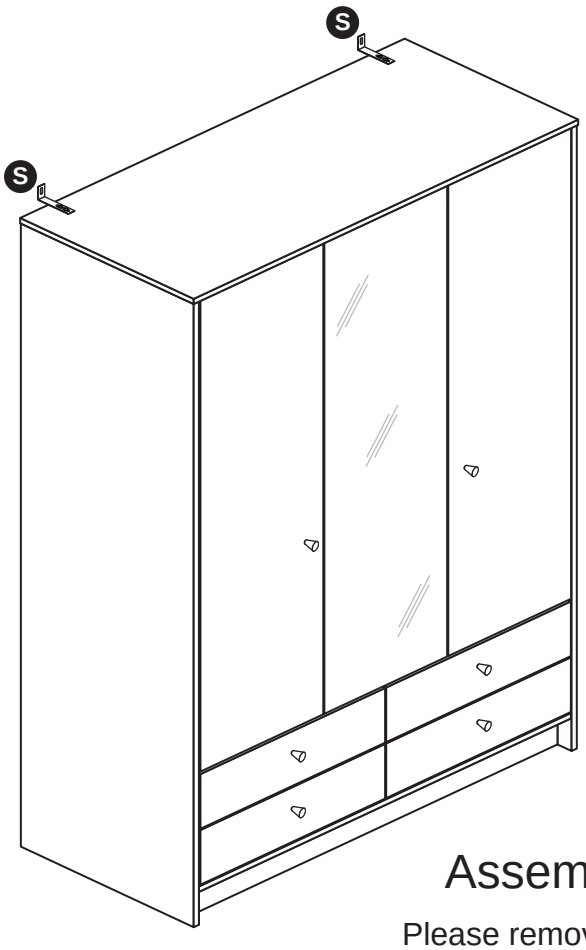

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.


Assembly is complete

Please remove any blue protective film from panel edges and clear protective film from panel surfaces and clean the mirror

A Guide to Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

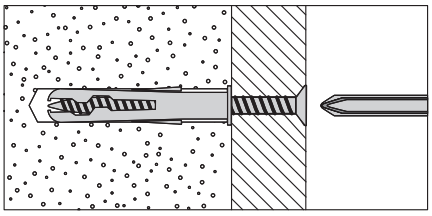


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

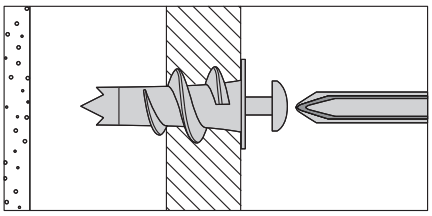


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

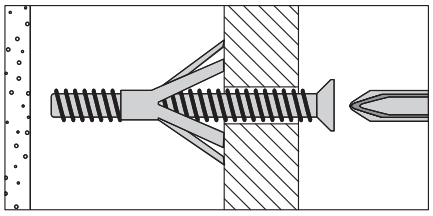


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

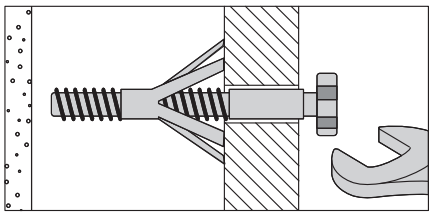


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

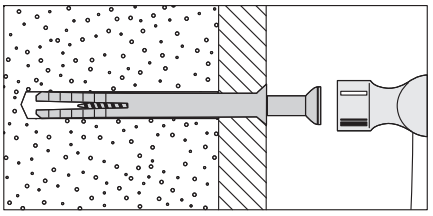

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug** Heavy loads

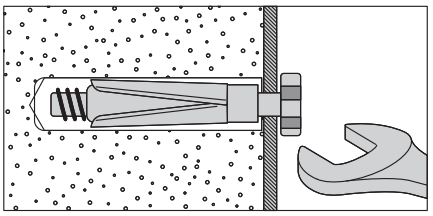

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.