
Malibu - Desk

Assembly Instructions - Please keep for future reference

617/1225
617/1139
617/2107
617/3876
305/0253
305/0260
122/7545
170/8356
173/8821
144/3642
171/7110
181/7467
151/9514

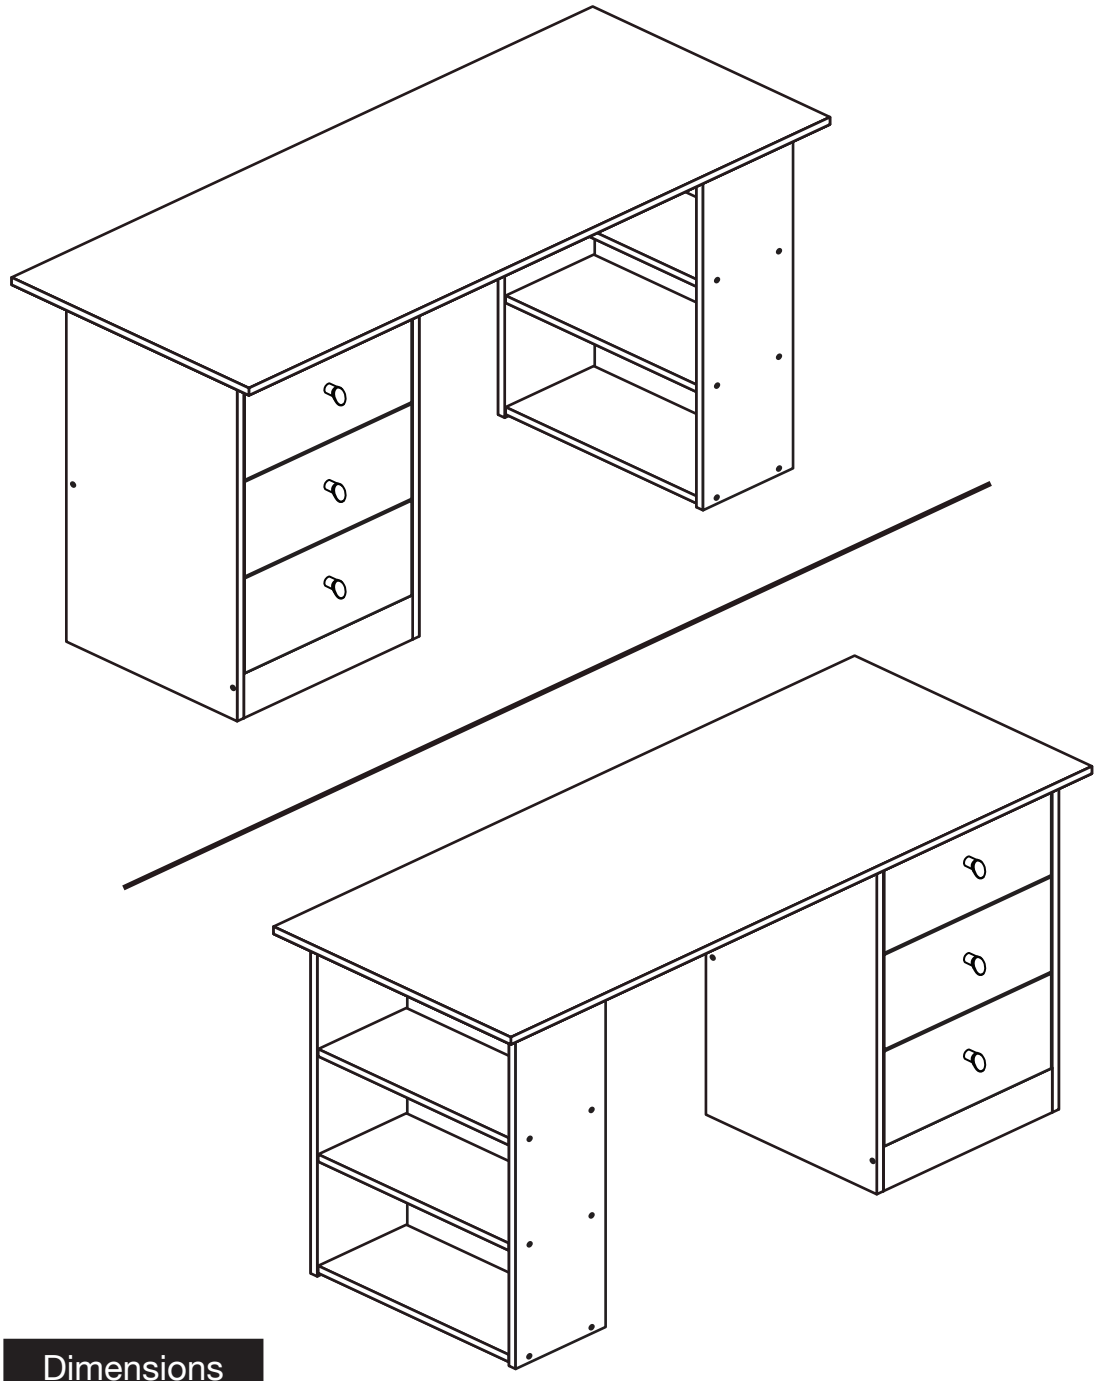

Dimensions
Width - 120cm
Depth - 49cm
Height - 72cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 8 - 10/10/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 21kgs. Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

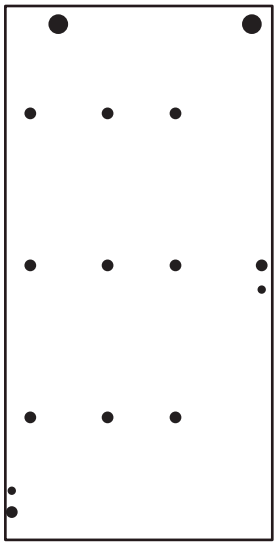


1 Left Side *(D0094A)*
(706 x 353mm)

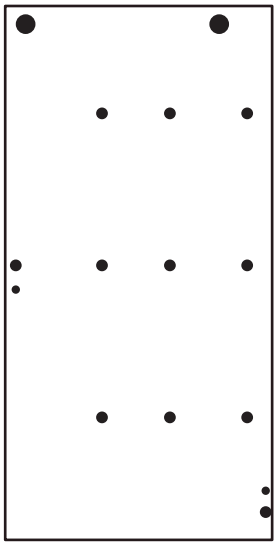

2 Right Side *(D0095A)*
(706 x 353mm)

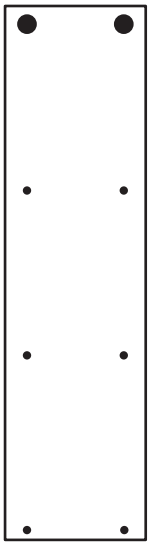

3 Bookcase End *(D0097A)*
(706 x 186mm) x 2

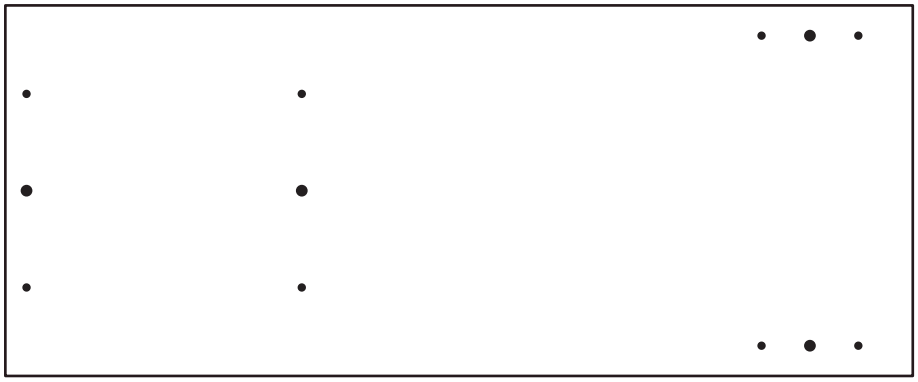


4 Top *(D0096A)*
(1200 x 490mm)




5 Shelf *(D0098A)*
(394 x 182mm) x 3




6 Plinth *(D0099A)*
(349 x 92mm)




7 Rail *(D0100A)*
(349 x 80mm)

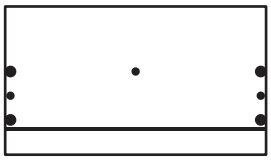


8 Drawer Front *(D0101A)*
(345 x 196mm) x 3



9 Drawer Base x 3 *(T161)*
(299 x 330mm)



10 Drawer Wrap *(W161)*
(943 x 95mm) x 3

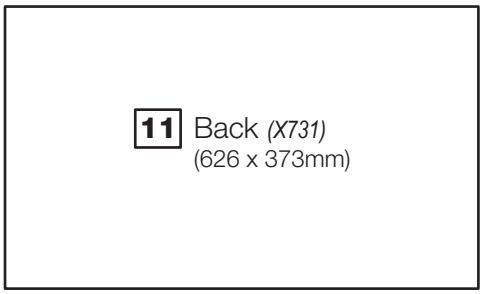

11 Back *(X731)*
(626 x 373mm)


Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A




Wooden dowel *(F22)* x 8

B



Metal dowel *(F901)* x 14

C



Nail *(F51)* x 9

D



Handle *(F631)* x 3

E



Large locking nut *(F900)* x 8

F



Small locking nut *(F3)* x 6

G



40mm Screw *(F910)* x 16

H




25mm Screw (*F50)* x 3

I




Nail holder *(F149)* x 1

J

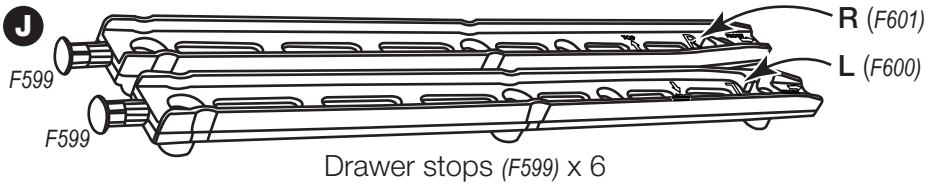

Drawer stops *(F599)* x 6
Runners *(F600)* x 3 *and (F601)* x 3

Tools required

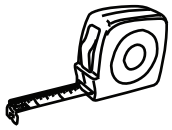


Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

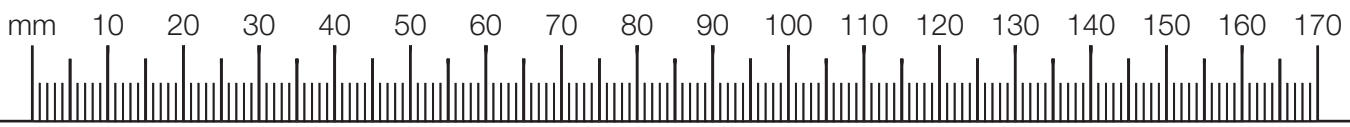

Assembly Instructions

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1


Prepare drawer fronts and wraps x 3


a: Screw 2 x metal dowels (B) into the holes shown on the back of the drawer front [8].

Note: Tighten metal dowels up fully against the panels.

b: Insert 2 small locking nuts (F) into the holes shown on the drawer wrap [10].

Note: Arrow on locking nut **must** point towards hole in edge of panel.

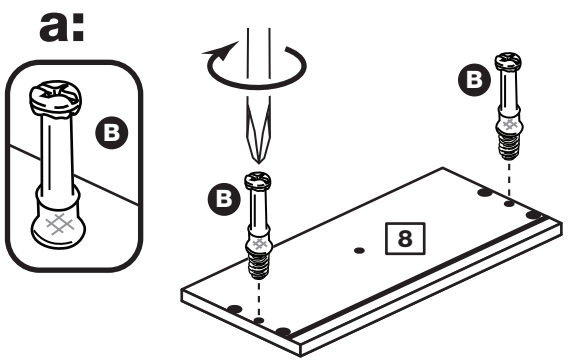

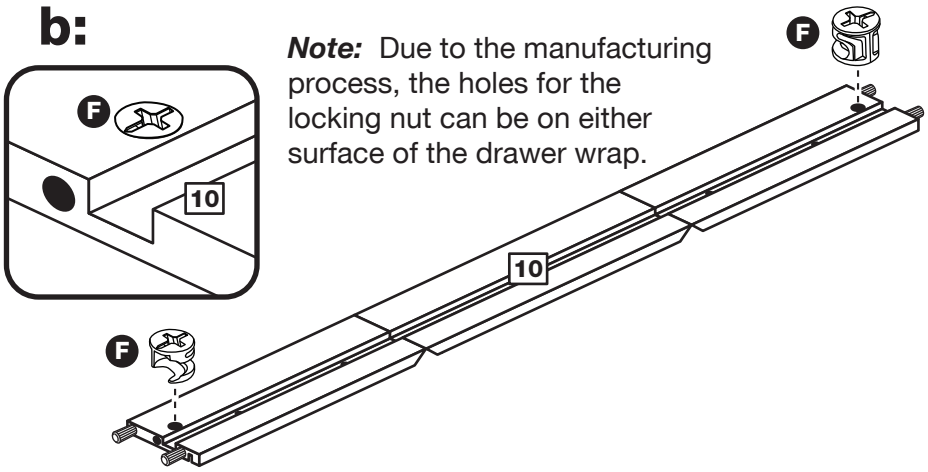

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer wrap.


Step 2

Assemble drawers x 3


a: Place drawer base [9] into the narrow slot on the drawer wrap [10]. Fold wrap around the base.


b: Turn drawer wrap assembly over and push onto the back of the drawer front [8].

Note: Turn locking nuts (F) clockwise to secure panels - more than 1/2 a turn.

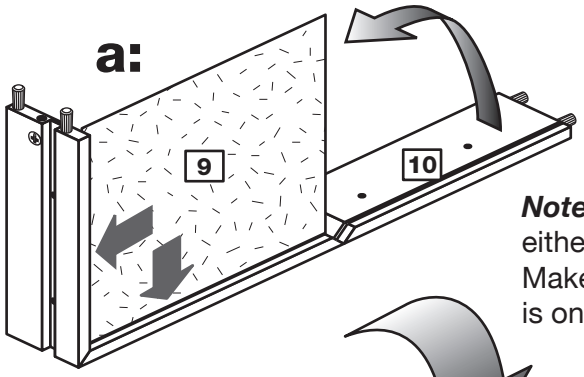

Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

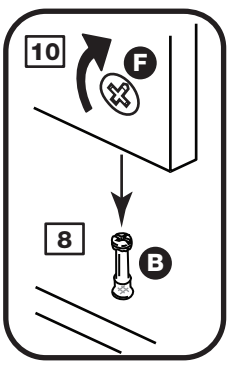

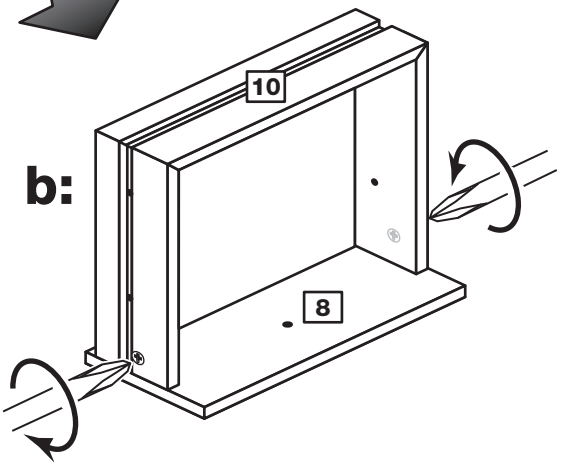


Step 3

Attach drawer stops

Carefully break off the 2 drawer stops *(F599)* from each pair of the drawer runners **J**.

Push the drawer stops fully through the drawer wraps **10** from the inside.

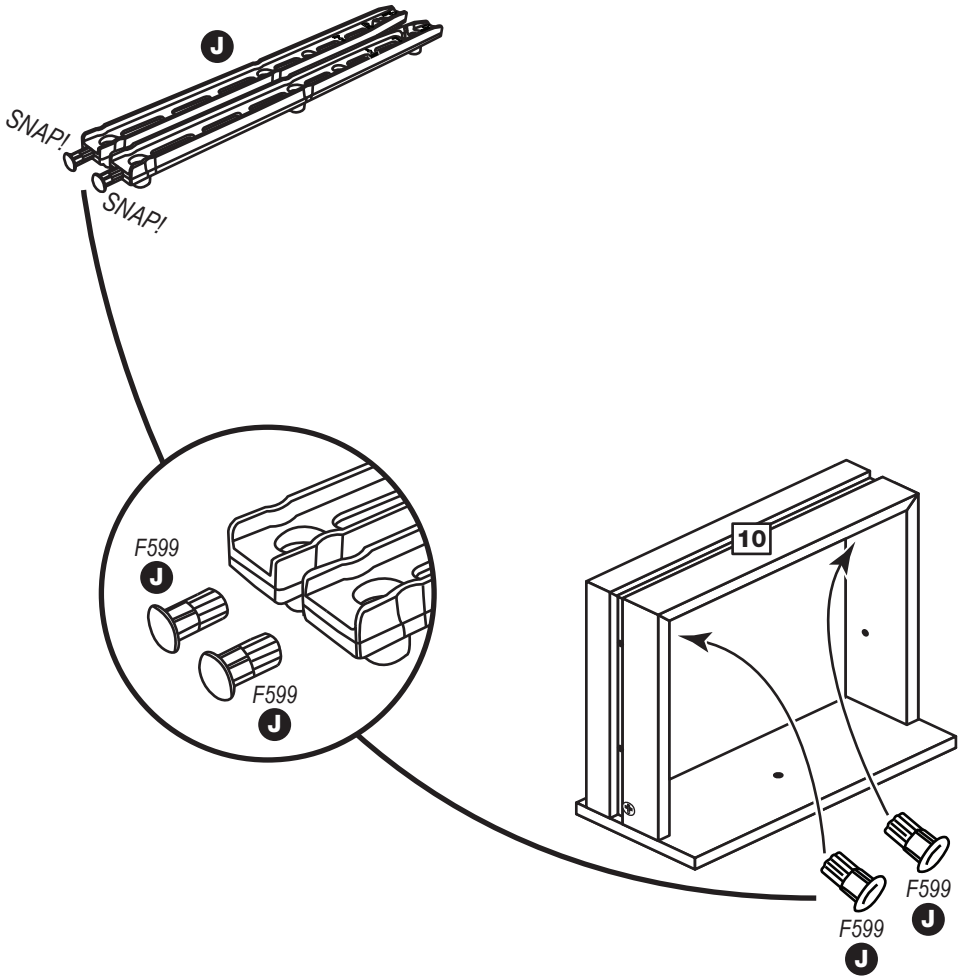


Step 4

Attach the handles

Attach a handle **D** to each drawer front using screw **H**.

Note: Do not overtighten the screw.

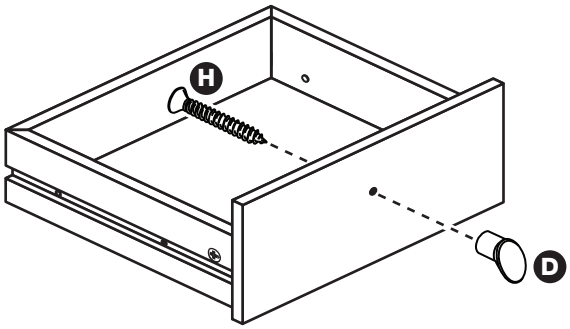

Assembly Instructions

Step 5

Prepare left and right side

Separate runners J.

a: Push fit 3 left runners J marked '**L**' into the holes shown on left side 1.

Note: Runners must be be fitted flat against the panel. If necessary gently tap into final position.

Insert 2 large locking nuts E as shown.

Note: Arrow on locking nut **must** point towards hole in edge of panel.


Tap in wooden dowel A as shown.


Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.


b: Push fit 3 right runners J marked '**R**' into the holes shown on right side 2.


Insert 2 large locking nuts E as shown.


Tap in wooden dowel A as shown.

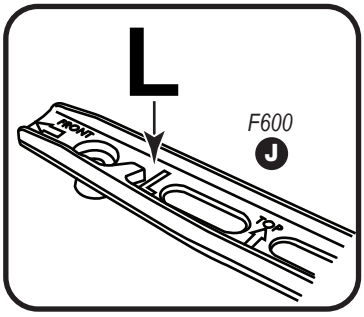


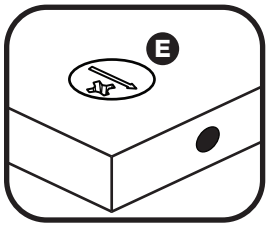

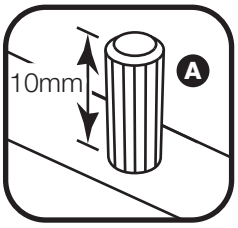

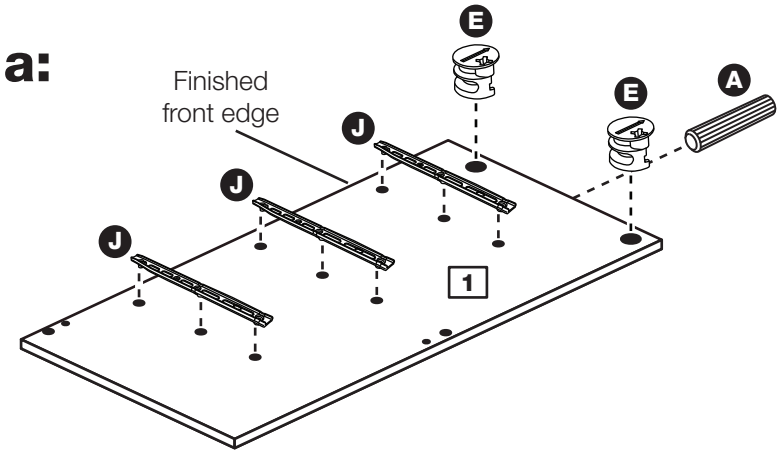

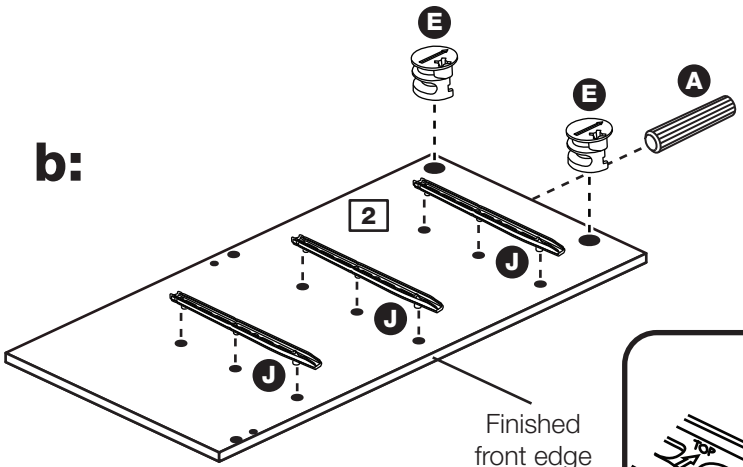

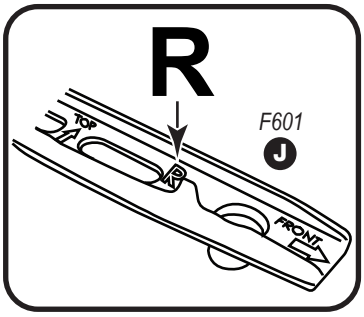

Assembly Instructions


Step 6

Prepare plinth and rail

Tap 2 wooden dowels A into the ends of both the plinth 6 and rail 7

Note: The plinth 6 will be finished with the main unit colour on one surface.


Note: The rail 7 may be plain chipboard or its colour may differ from the main unit colour.

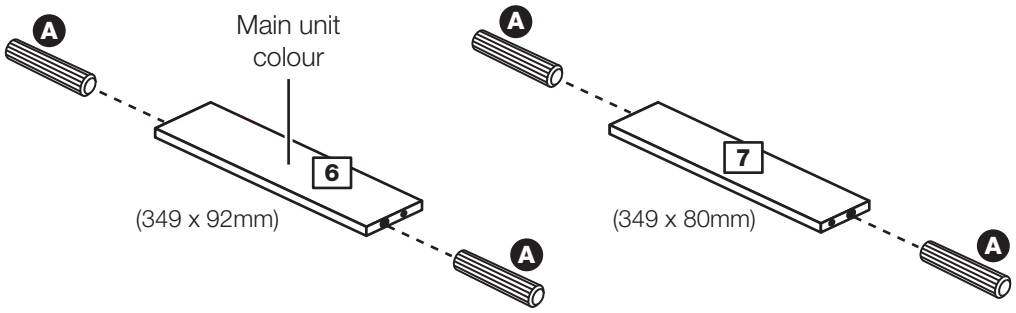

Step 7

Fit plinth to the right side


Attach the plinth 6 to the right side 2 with the dowel already fitted and secure with screw G.

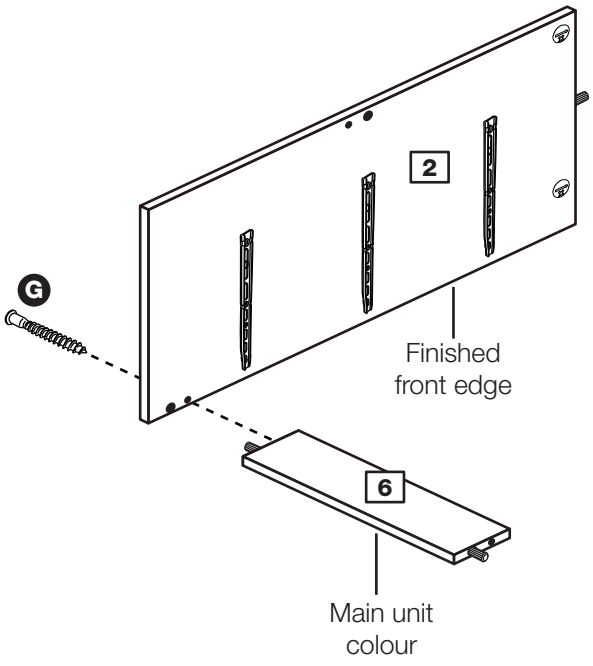

Step 8

Fit rail to the right side


Attach the rail 7 to the right side 2 with the dowel already fitted and secure with screw G.

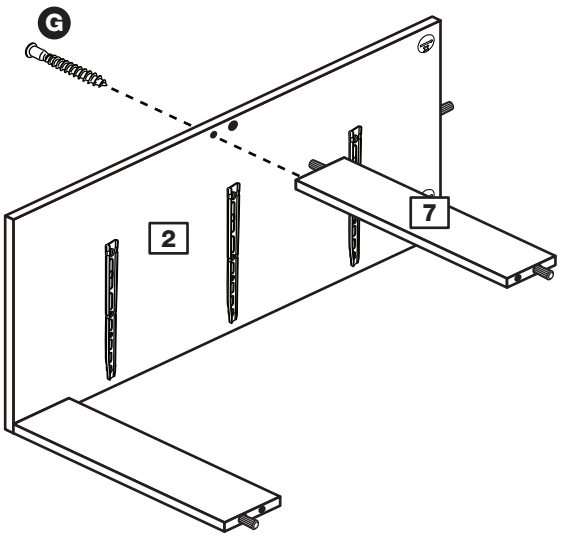

Step 9

Fit left side

Attach the left side 1 to the plinth 6 and rail 7 using 2 x screws G.

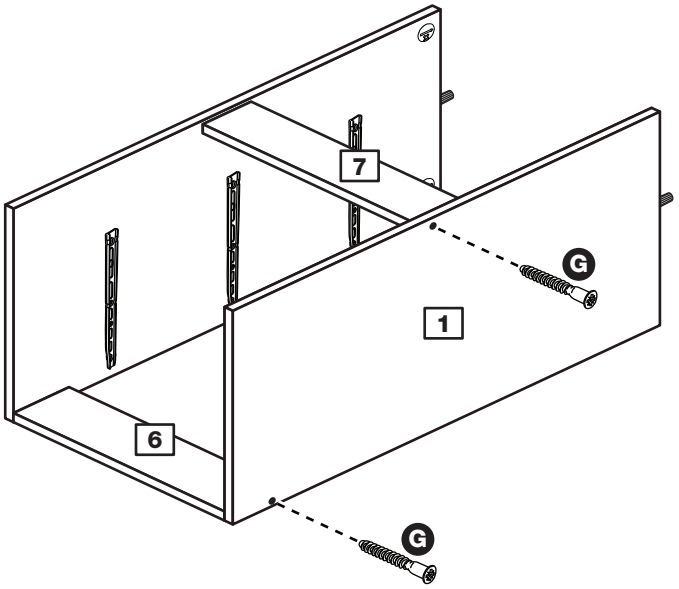

Step 10

Fit back panel

a: Square up the unit by making sure that measurement **x to x equals y to y.**


b: Place the back 11 onto the unit 5mm down from the top of the side panels.

Use the nail guide I to hold the nails C vertical and at the correct distance whilst you nail down the sides of the back 11.

Note: Nails should be spaced about 150mm apart.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

b:

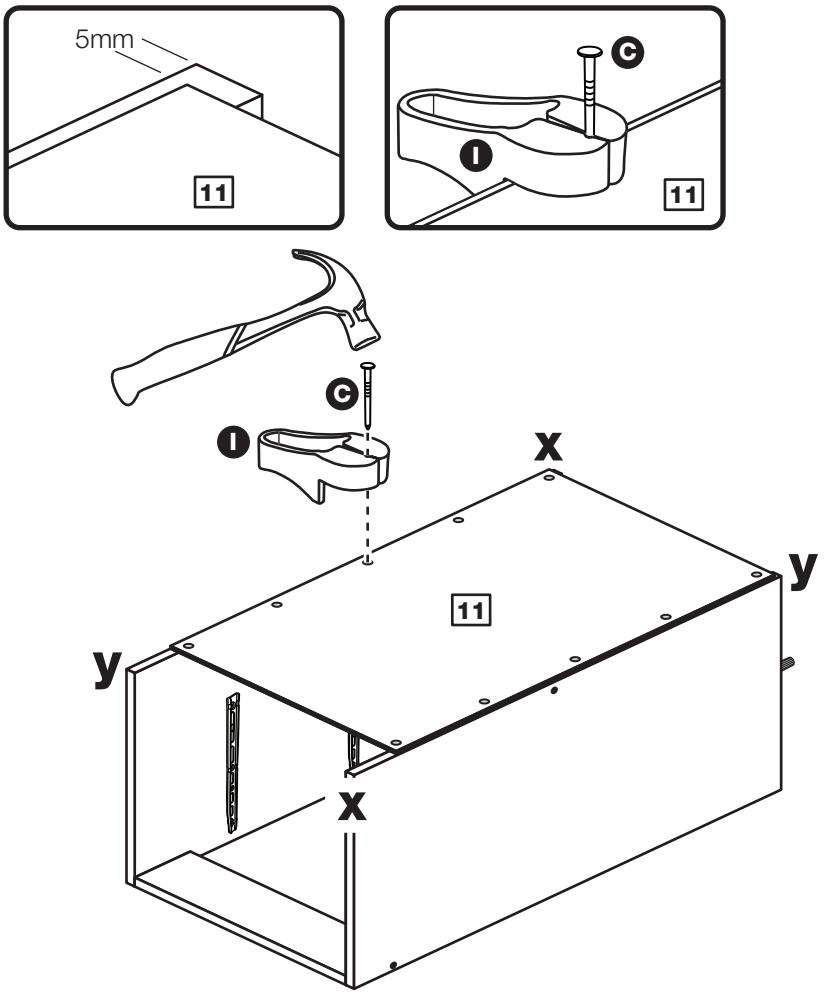


Step 11

Prepare the 2 bookcase ends

Insert 2 large locking nuts E into each bookcase end 3.


Tap a wooden dowel A into the end of each bookcase end 3.

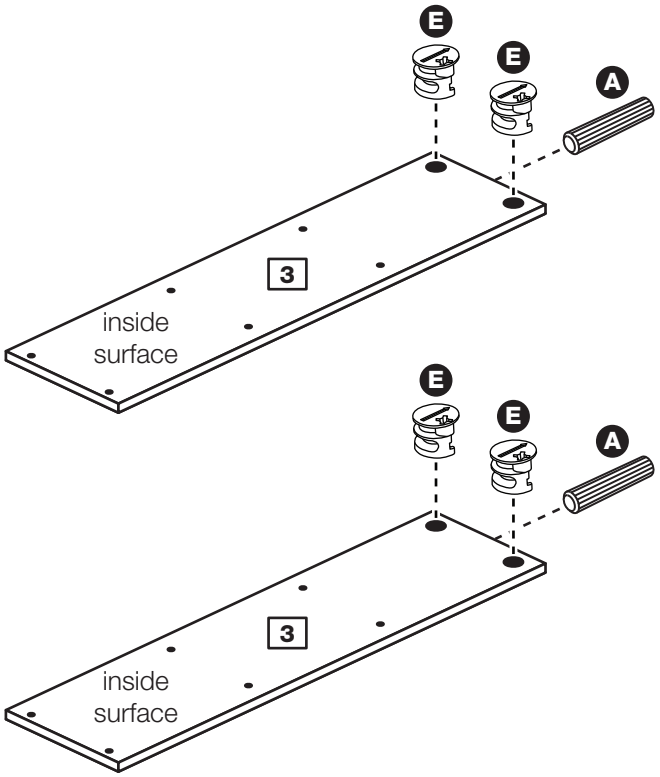

Step 12

Fit shelves

Attach 3 shelves 5 to the bookcase ends 3 using 12 x screws G.

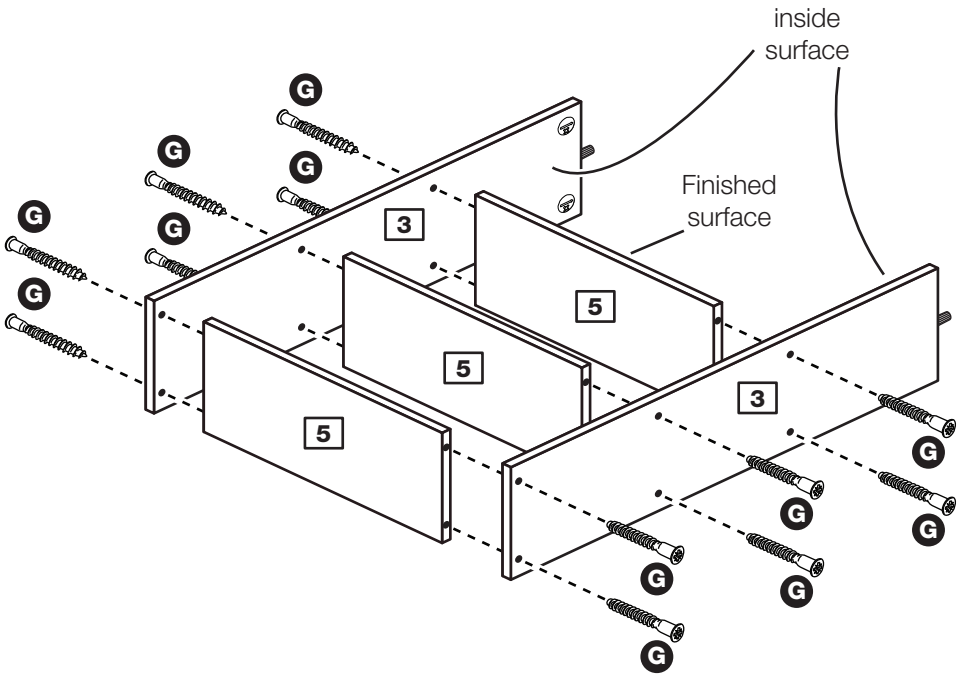


Step 13

Choose desk layout

Before going onto the next step, decide which way around you would like your desk to be.

Place the 2 assemblies where the desk will be used, so that the unit does not have to be moved once the top panel has been secured into place.

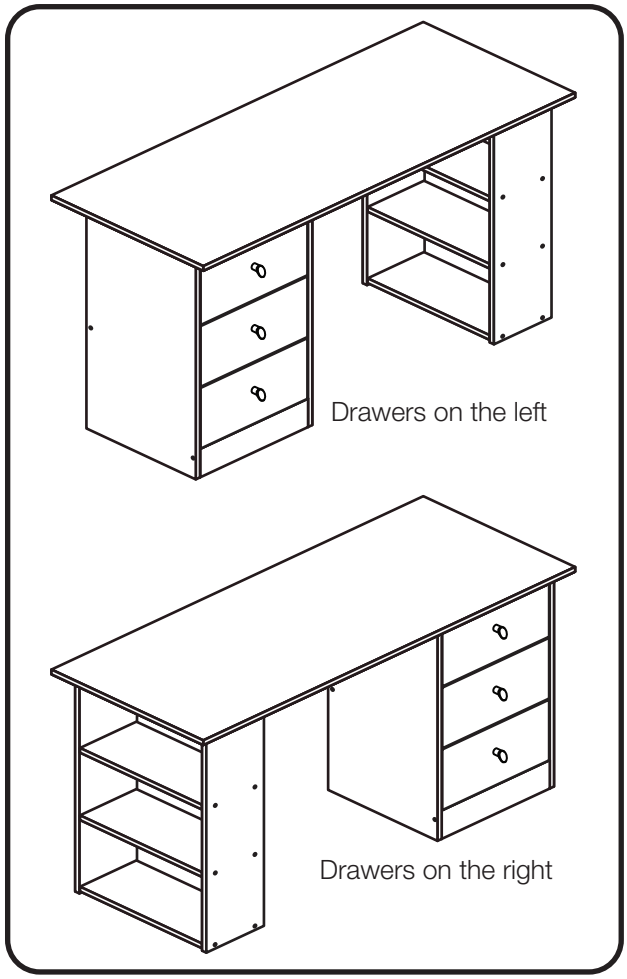


Step 14

Prepare top panel

a: Screw 8 x metal dowels (B) into the holes on the top [4].

Note: Tighten metal dowels up fully against the panel.

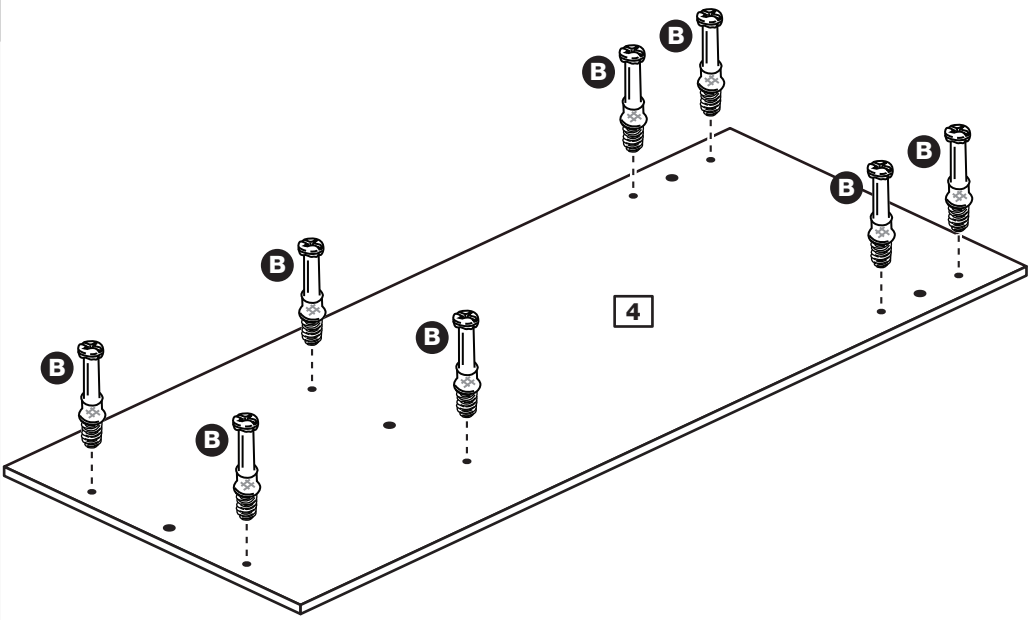

Step 15


Fit top

2 people are needed here

Lift the top 4 and push the 8 metal dowels B fitted to the top 4 down into the holes in the top edge of the sides and bookcase ends 1 , 2 and 3.

Use a screwdriver to tighten the 8 large locking nuts E fitted to the sides and bookcase end panels 1 , 2 and 3.

Note: Turn the large locking nuts E as far as they will go - more than 1/2 a turn.

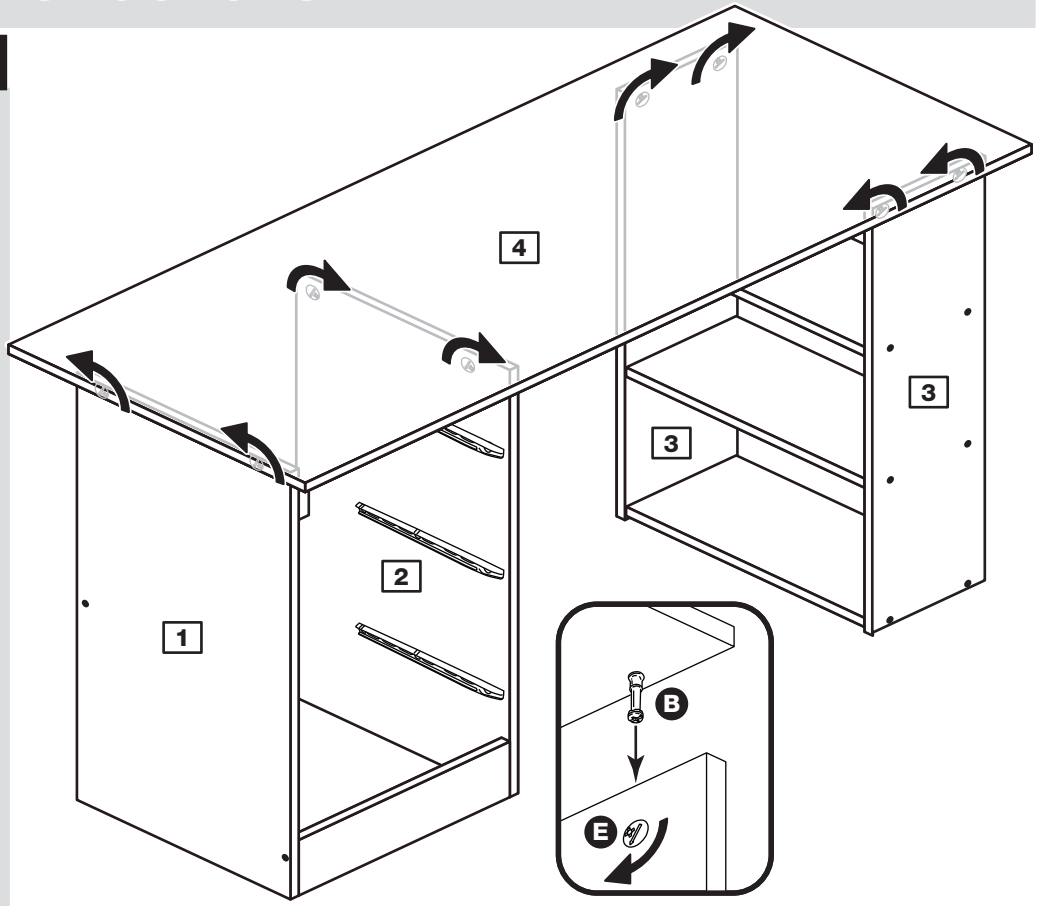

Step 16


Insert drawers

Lift front of drawer whilst inserting to overcome the ‘stop’ system.

Note: To ensure that your drawers run smoothly, spray a small amount of furniture polish into the grooves.

Warning: The desk is heavy. Lift with care.

Assembly is complete

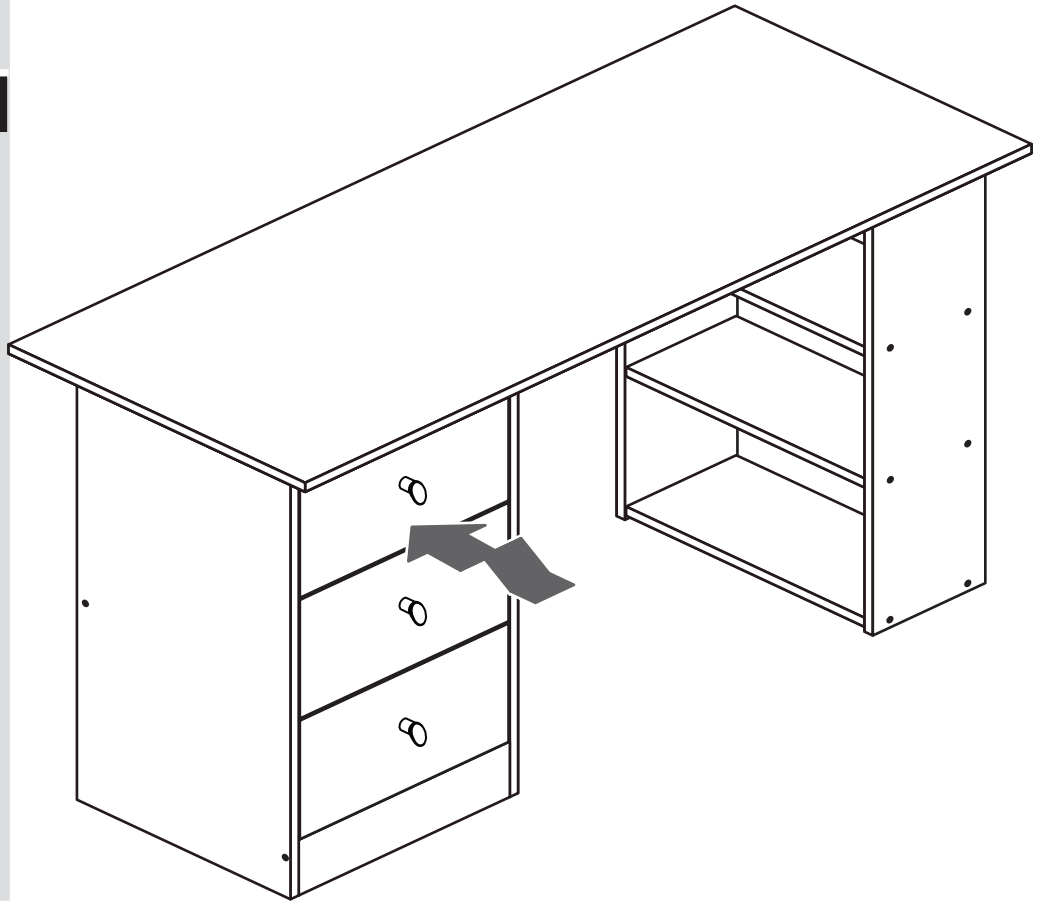


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

Malibu - Desk

Assembly Instructions - Please keep for future reference

617/1225
617/1139
617/2107
617/3876
305/0253
305/0260
122/7545
170/8356
173/8821
144/3642
171/7110
181/7467
151/9514
719/1716
719/1675

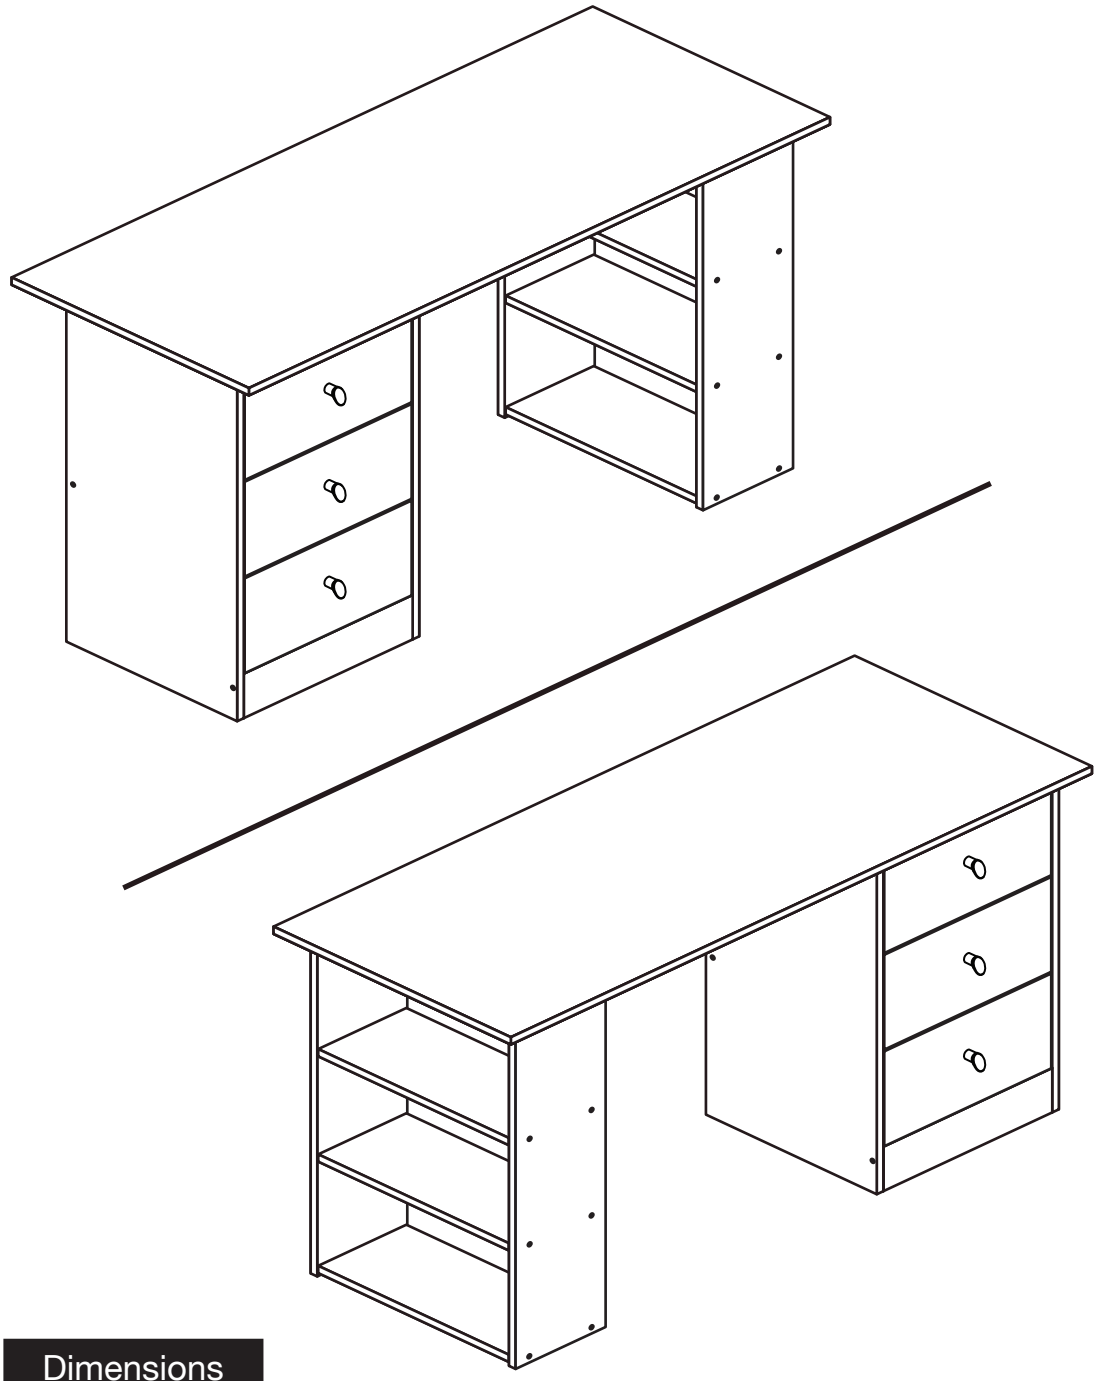

Dimensions
Width - 120cm
Depth - 49cm
Height - 72cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 9 - 22/11/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 21kgs. Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

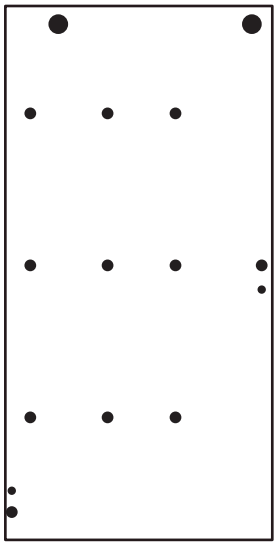


1 Left Side *(D0094B)*
(706 x 353mm)

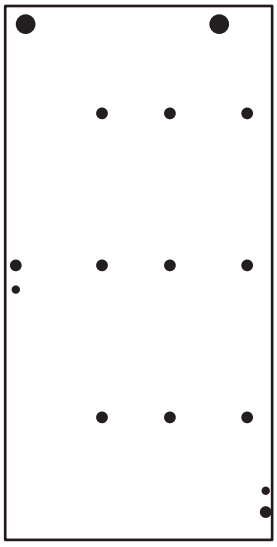

2 Right Side *(D0095B)*
(706 x 353mm)

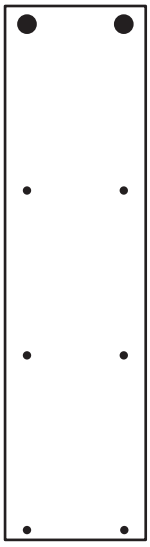

3 Bookcase End *(D0097B)*
(706 x 186mm) x 2

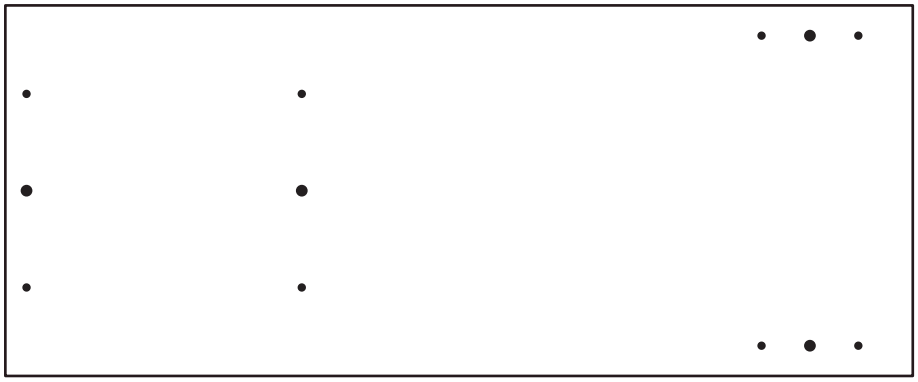


4 Top *(D0096B)*
(1200 x 490mm)




5 Shelf *(D0098B)*
(394 x 182mm) x 3




6 Plinth *(D0099B)*
(349 x 92mm)




7 Rail *(D0100B)*
(349 x 80mm)

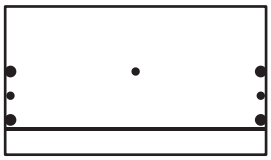


8 Drawer Front *(D0101B)*
(345 x 196mm) x 3



9 Drawer Base x 3 *(T161)*
(299 x 330mm)



10 Drawer Wrap *(W161)*
(943 x 95mm) x 3

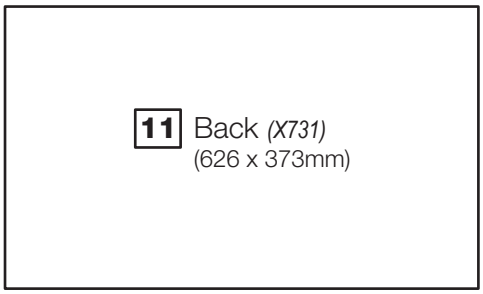

11 Back *(X731)*
(626 x 373mm)


Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A




Wooden dowel *(F22)* x 8

B



Metal dowel *(F901)* x 14

C



Nail *(F51)* x 9

D



Handle *(F631)* x 3

E



Large locking nut *(F900)* x 8

F



Small locking nut *(F3)* x 6

G



40mm Screw *(F910)* x 16

H




25mm Screw (*F50)* x 3

I




Nail holder *(F149)* x 1

J

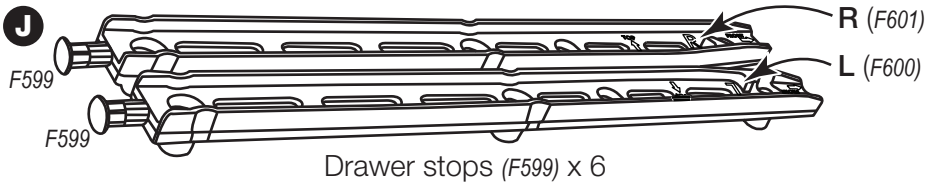

Drawer stops *(F599)* x 6
Runners *(F600)* x 3 *and (F601)* x 3

Tools required

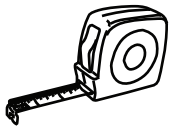


Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

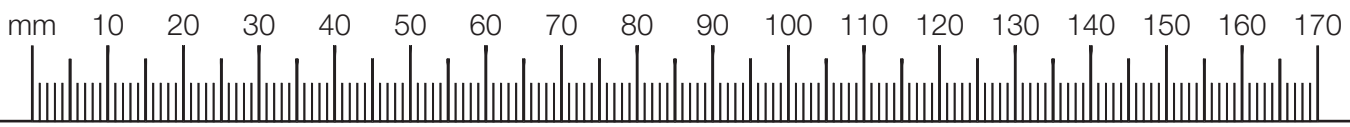

Assembly Instructions

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1


Prepare drawer fronts and wraps x 3


a: Screw 2 x metal dowels (B) into the holes shown on the back of the drawer front [8].

Note: Tighten metal dowels up fully against the panels.

b: Insert 2 small locking nuts (F) into the holes shown on the drawer wrap [10].

Note: Arrow on locking nut **must** point towards hole in edge of panel.

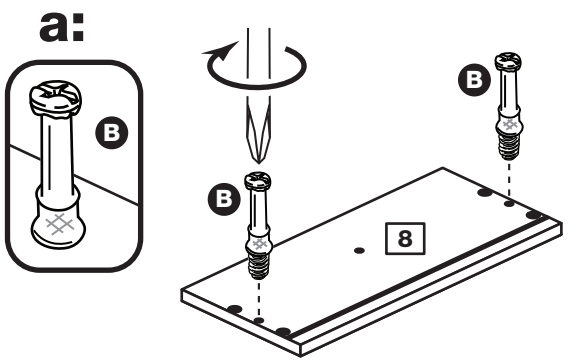

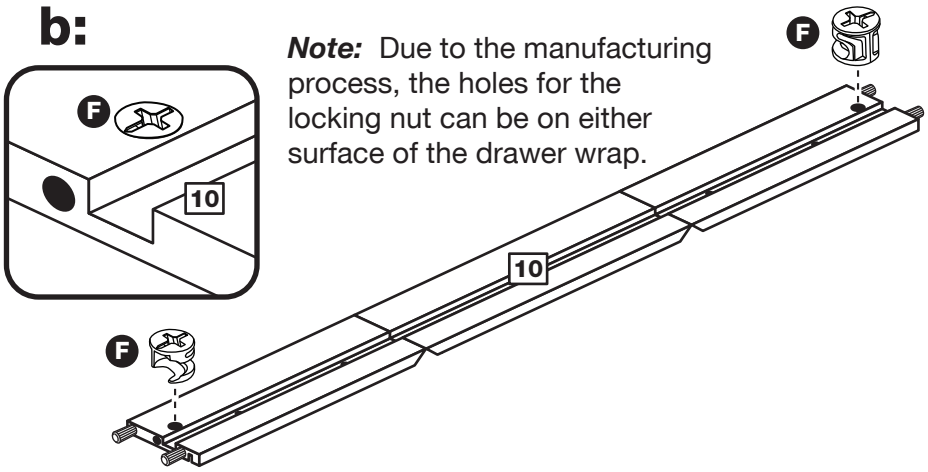

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer wrap.


Step 2

Assemble drawers x 3


a: Place drawer base [9] into the narrow slot on the drawer wrap [10]. Fold wrap around the base.


b: Turn drawer wrap assembly over and push onto the back of the drawer front [8].

Note: Turn locking nuts (F) clockwise to secure panels - more than 1/2 a turn.

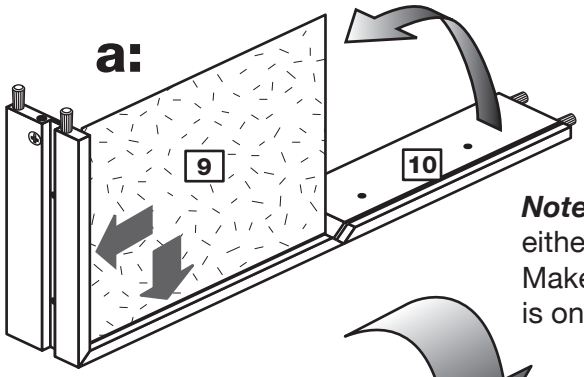

Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

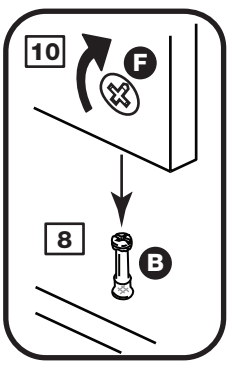

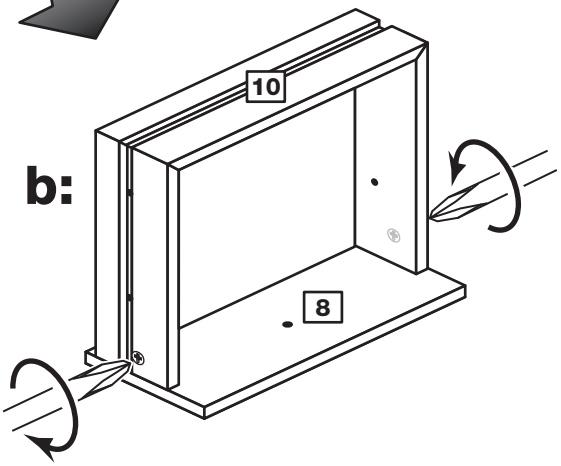


Step 3

Attach drawer stops

Carefully break off the 2 drawer stops *(F599)* from each pair of the drawer runners **J**.

Push the drawer stops fully through the drawer wraps **10** from the inside.

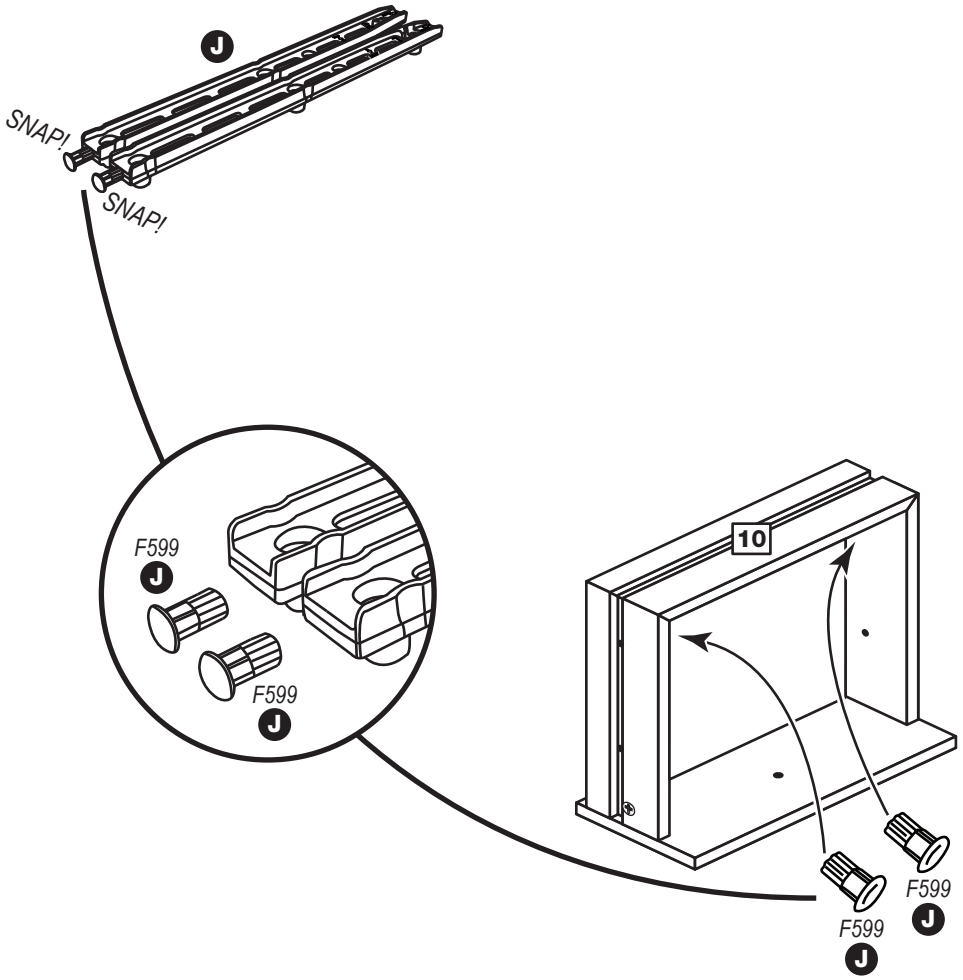


Step 4

Attach the handles

Attach a handle **D** to each drawer front using screw **H**.

Note: Do not overtighten the screw.

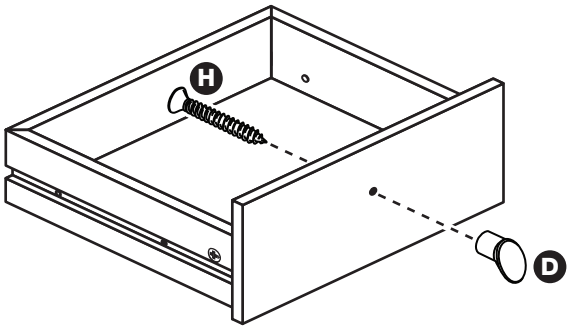

Assembly Instructions

Step 5

Prepare left and right side

Separate runners J.

a: Push fit 3 left runners J marked '**L**' into the holes shown on left side 1.

Note: Runners must be be fitted flat against the panel. If necessary gently tap into final position.

Insert 2 large locking nuts E as shown.

Note: Arrow on locking nut **must** point towards hole in edge of panel.


Tap in wooden dowel A as shown.


Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.


b: Push fit 3 right runners J marked '**R**' into the holes shown on right side 2.


Insert 2 large locking nuts E as shown.


Tap in wooden dowel A as shown.

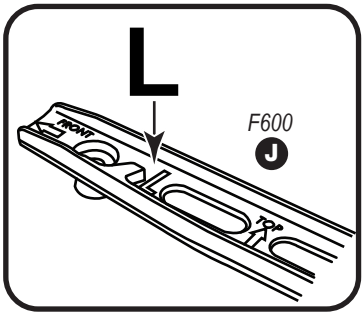


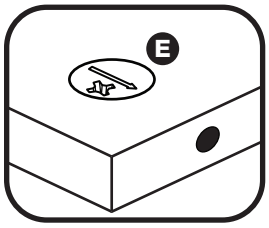

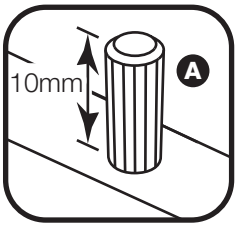

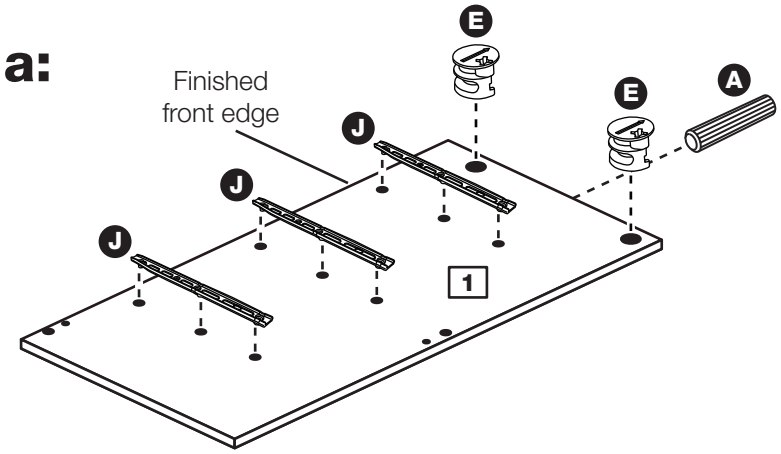

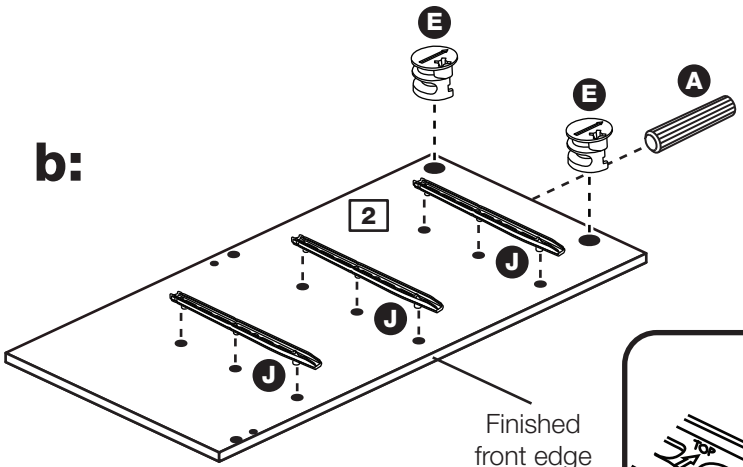

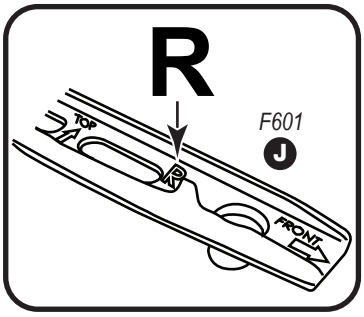

Assembly Instructions


Step 6

Prepare plinth and rail

Tap 2 wooden dowels A into the ends of both the plinth 6 and rail 7

Note: The plinth 6 will be finished with the main unit colour on one surface.


Note: The rail 7 may be plain chipboard or its colour may differ from the main unit colour.

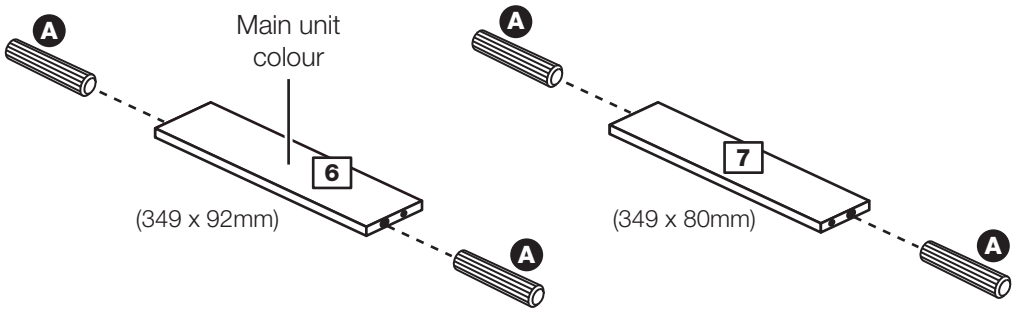

Step 7

Fit plinth to the right side


Attach the plinth 6 to the right side 2 with the dowel already fitted and secure with screw G.

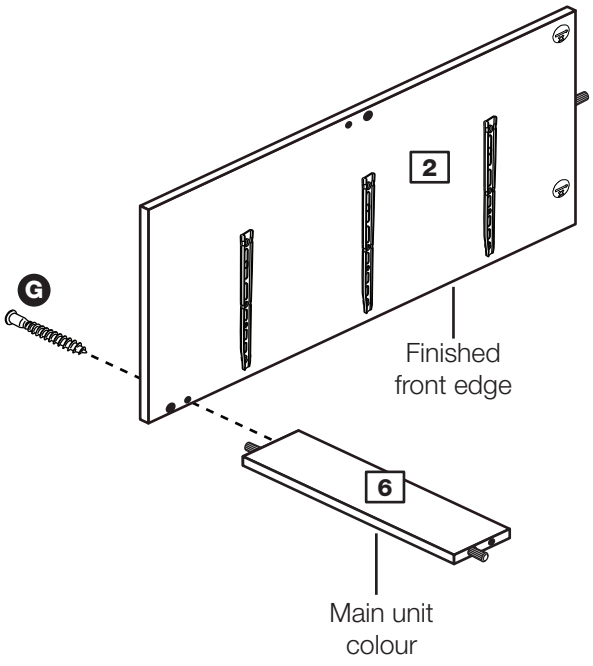

Step 8

Fit rail to the right side


Attach the rail 7 to the right side 2 with the dowel already fitted and secure with screw G.

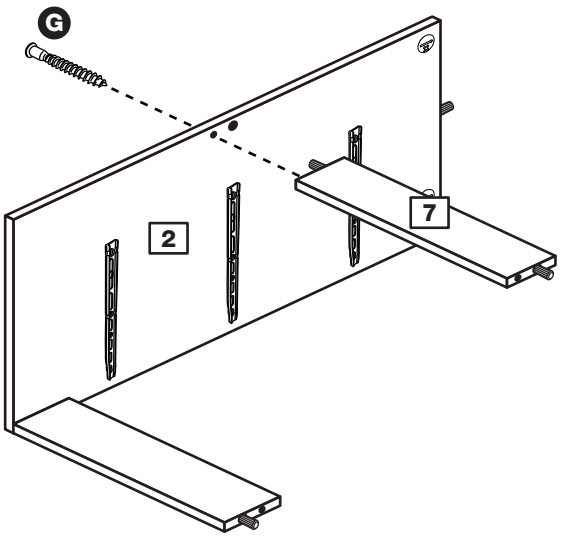

Step 9

Fit left side

Attach the left side 1 to the plinth 6 and rail 7 using 2 x screws G.

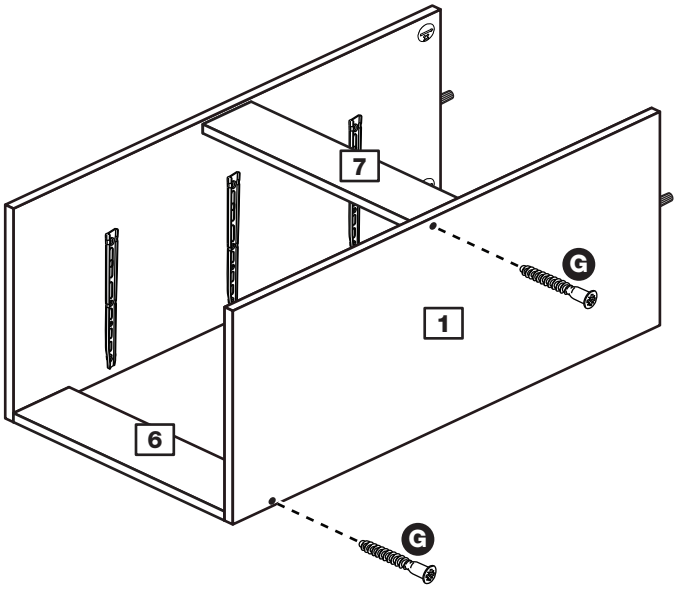

Step 10

Fit back panel

a: Square up the unit by making sure that measurement **x to x equals y to y.**


b: Place the back 11 onto the unit 5mm down from the top of the side panels.

Use the nail guide I to hold the nails C vertical and at the correct distance whilst you nail down the sides of the back 11.

Note: Nails should be spaced about 150mm apart.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

b:

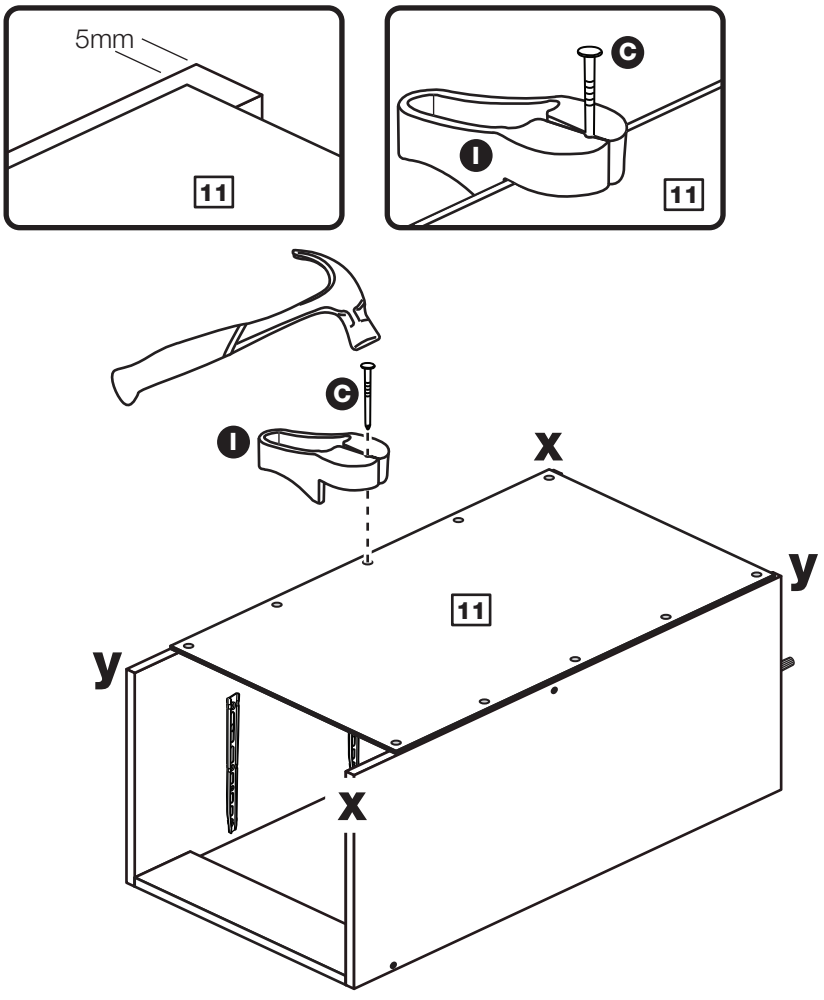


Step 11

Prepare the 2 bookcase ends

Insert 2 large locking nuts E into each bookcase end 3.


Tap a wooden dowel A into the end of each bookcase end 3.

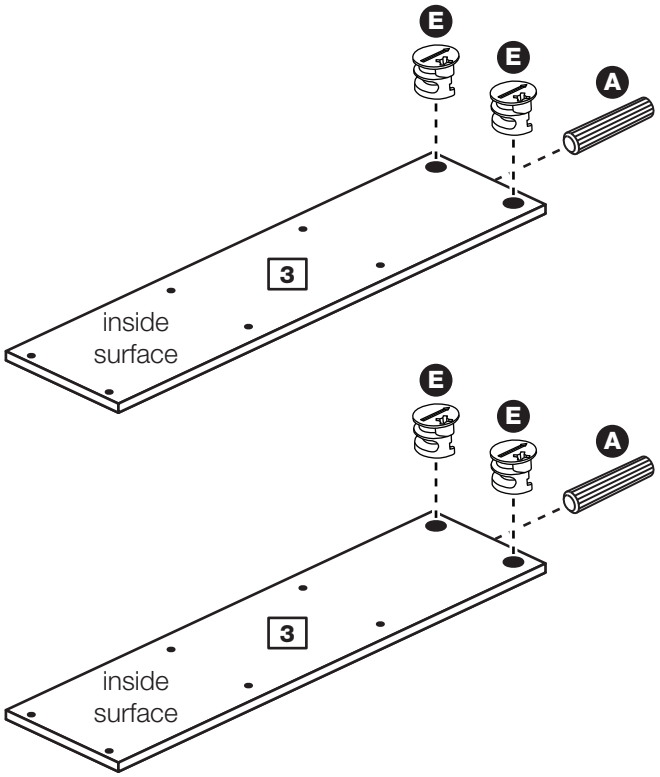

Step 12

Fit shelves

Attach 3 shelves 5 to the bookcase ends 3 using 12 x screws G.

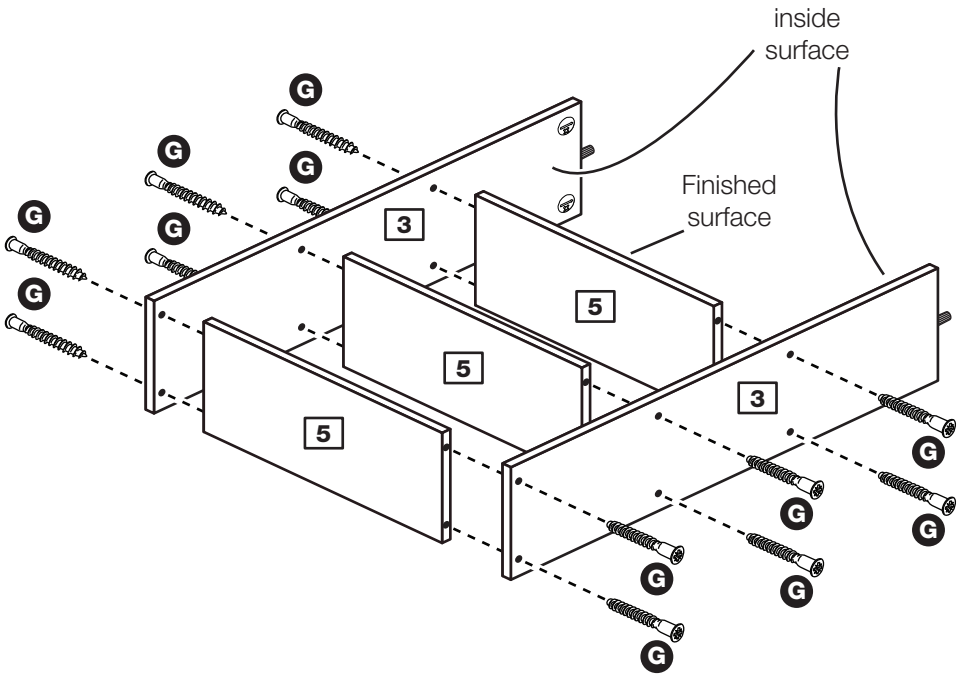


Step 13

Choose desk layout

Before going onto the next step, decide which way around you would like your desk to be.

Place the 2 assemblies where the desk will be used, so that the unit does not have to be moved once the top panel has been secured into place.

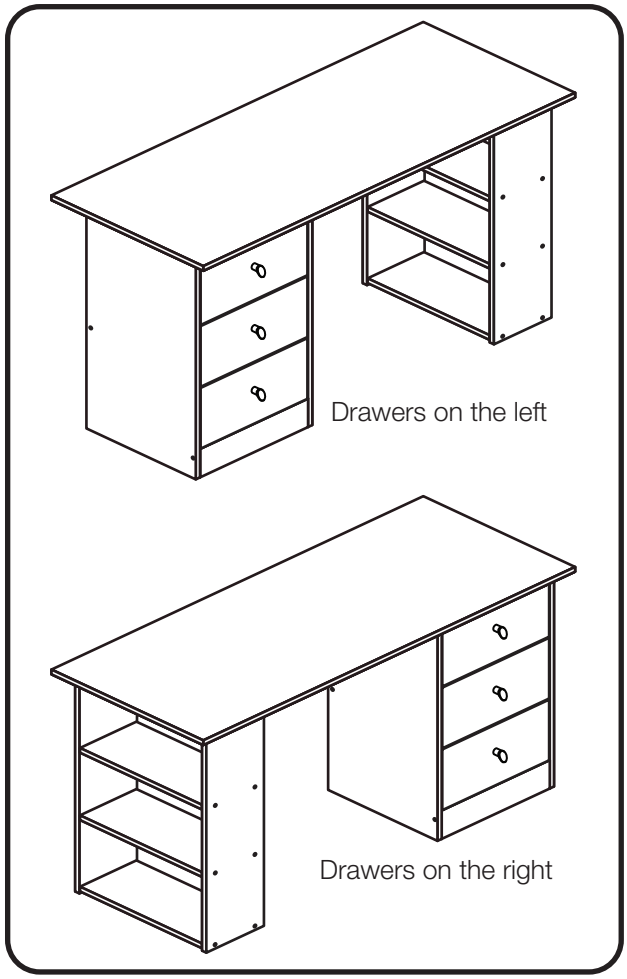


Step 14

Prepare top panel

a: Screw 8 x metal dowels (B) into the holes on the top [4].

Note: Tighten metal dowels up fully against the panel.

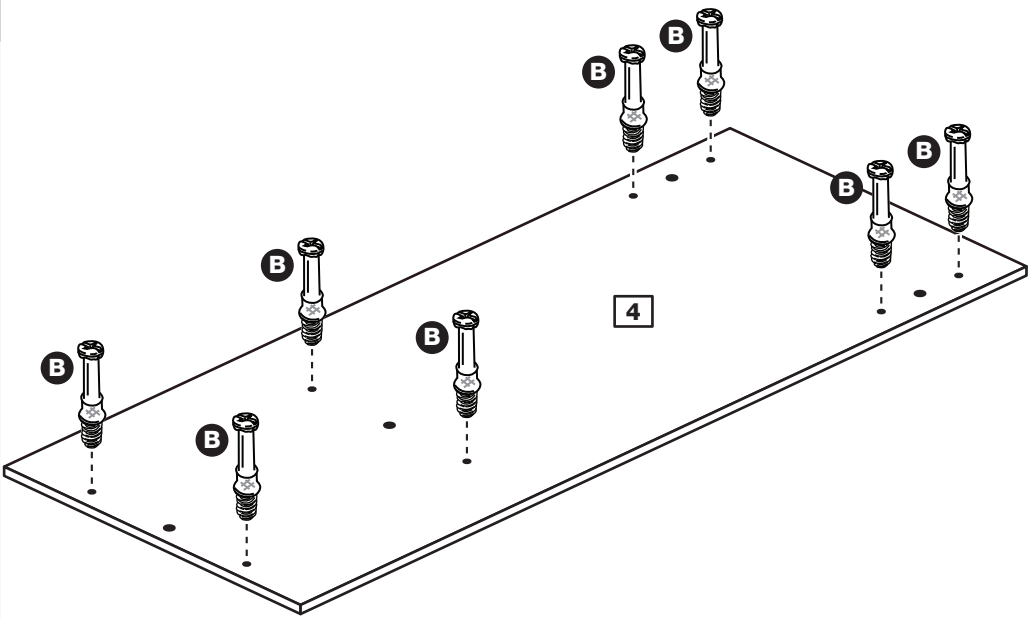

Step 15


Fit top

2 people are needed here

Lift the top 4 and push the 8 metal dowels B fitted to the top 4 down into the holes in the top edge of the sides and bookcase ends 1 , 2 and 3.

Use a screwdriver to tighten the 8 large locking nuts E fitted to the sides and bookcase end panels 1 , 2 and 3.

Note: Turn the large locking nuts E as far as they will go - more than 1/2 a turn.

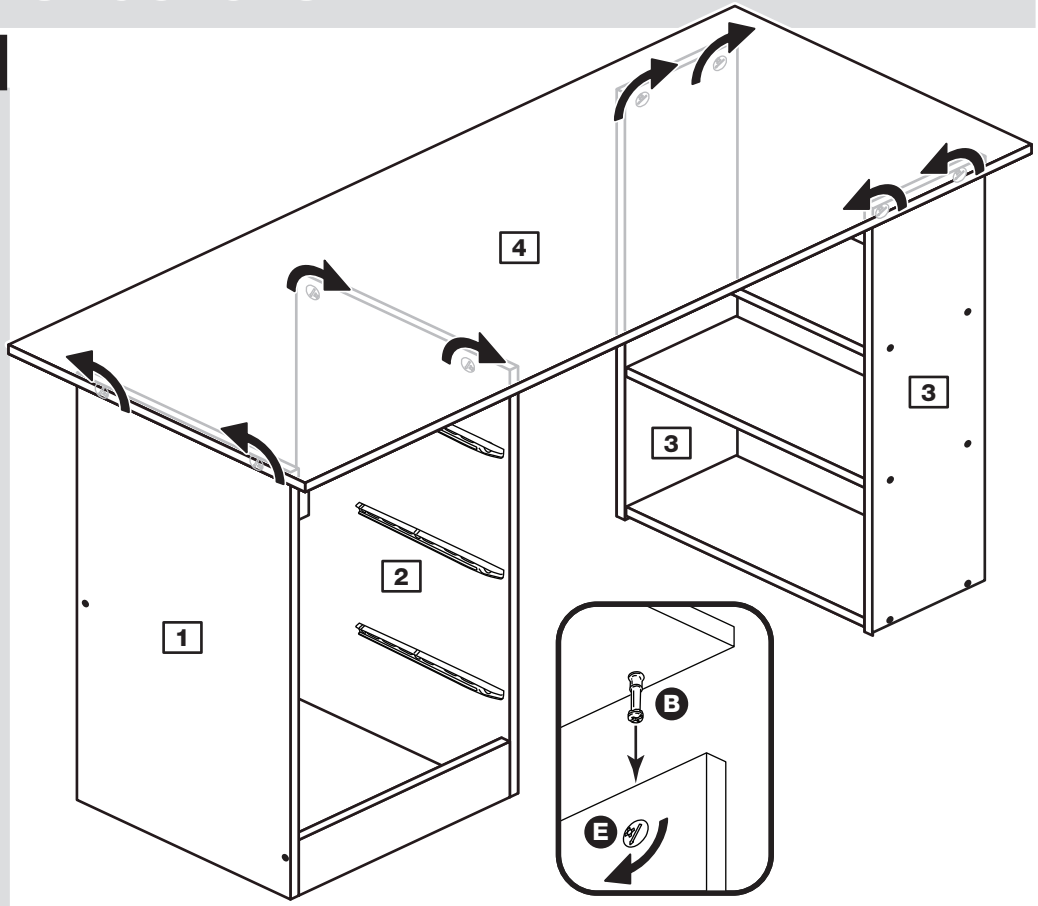

Step 16


Insert drawers

Lift front of drawer whilst inserting to overcome the ‘stop’ system.

Note: To ensure that your drawers run smoothly, spray a small amount of furniture polish into the grooves.

Warning: The desk is heavy. Lift with care.

Assembly is complete

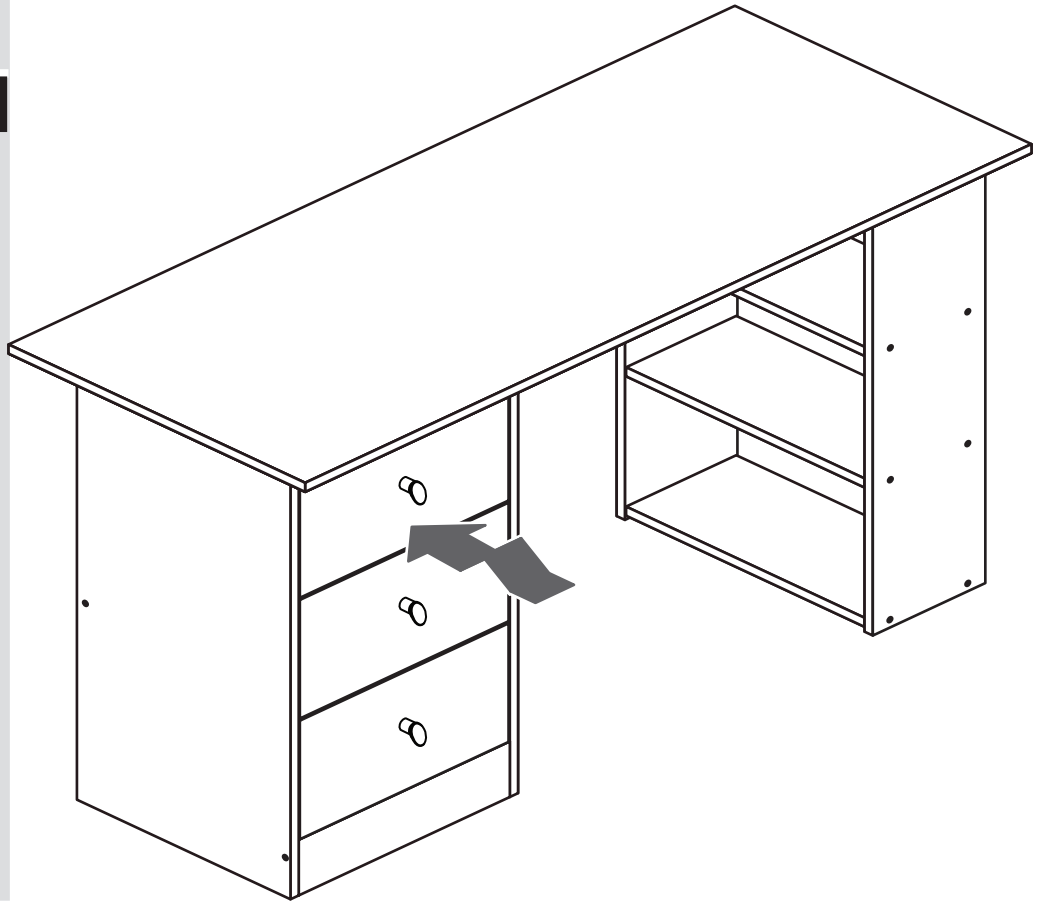

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW