

Hamlin - Bedside


Assembly Instructions - Please keep for future reference

143/4235

152/5230

hygena

145/6103

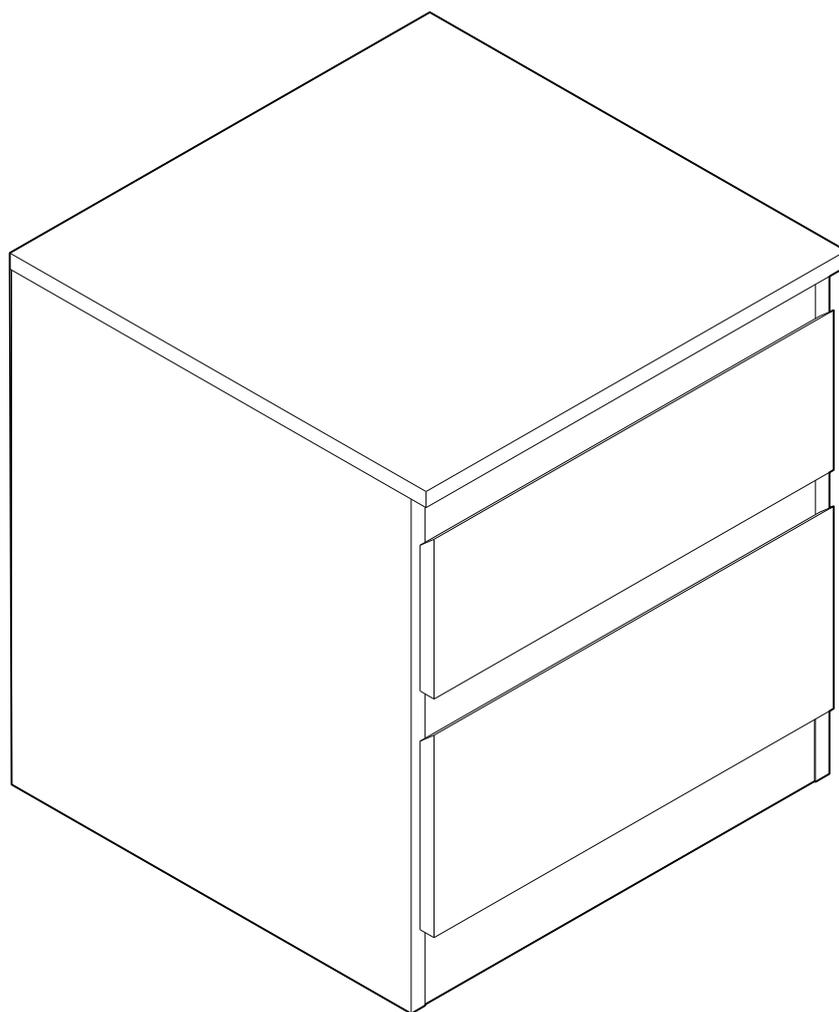

Dimensions

Width - 45,2cm

Depth - 44,8cm

Height - 50,5cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Parts of the assembly will be easier with 2 people.
- Dispose of all packaging carefully and responsibly.


Care and maintenance

- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.
- Use a dry cloth to clean the product, furniture polish is not recommended.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels


Please check you have all the panels listed below

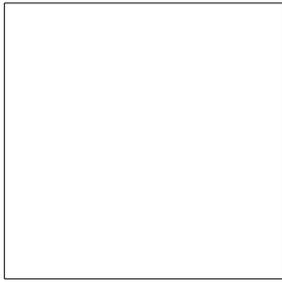


1 Top panel
(45.2 x 44.8cm)

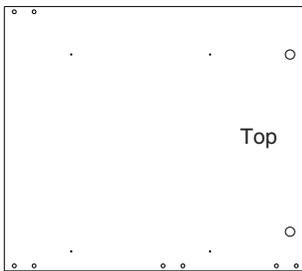

2 Right side panel
(48.5 x 43cm)

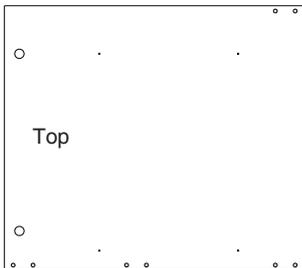

3 Left side panel
(48.5 x 43cm)

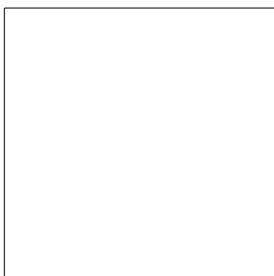


4 Back panel
(44 x 44cm)



5 Large drawer front
(43 x 19cm)



7 Large drawer back
(36.6 x 12cm)



9 Large drawer right side
(40 x 12cm)




11 Small drawer right side
(40 x 8cm)




13 Bottom frame
(42 x 7cm)



15 Top front frame x 2
(42 x 6cm)

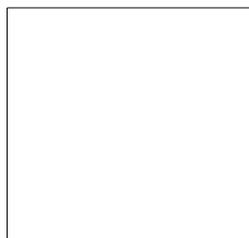


16 Drawer bottom x 2
(39.8 x 37.9cm)



6 Small drawer front
(43 x 15cm)



8 Small drawer back
(36.6 x 8cm)



10 Large drawer left side
(40 x 12cm)



12 Small drawer left side
(40 x 8cm)











14 Unfinished bottom frame
(42 x 7cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

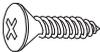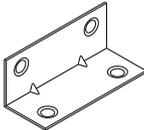A  Wooden dowel x 32	B  14mm Screw x 32	C  20mm Screw x 4
D  40mm Screw x 4	E  Metal dowel x 8	F  Locking nut x 8
G  Nail x 23	H  Nail x 4	I  Plastic feet x 4
J  Plastic bracket x 4	K  L shaped bracket x 4	L  Plastic cap x 8
M  Right runner x 4 pair	N  Left runner x 4 pair	


Tools required




Phillips screwdriver
(small & medium)

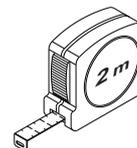

Ruler/tape
measure




Small
hammer

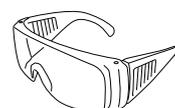

Eye protection
(when using a
hammer or glue)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Insert dowels **A** into the indicated parts.

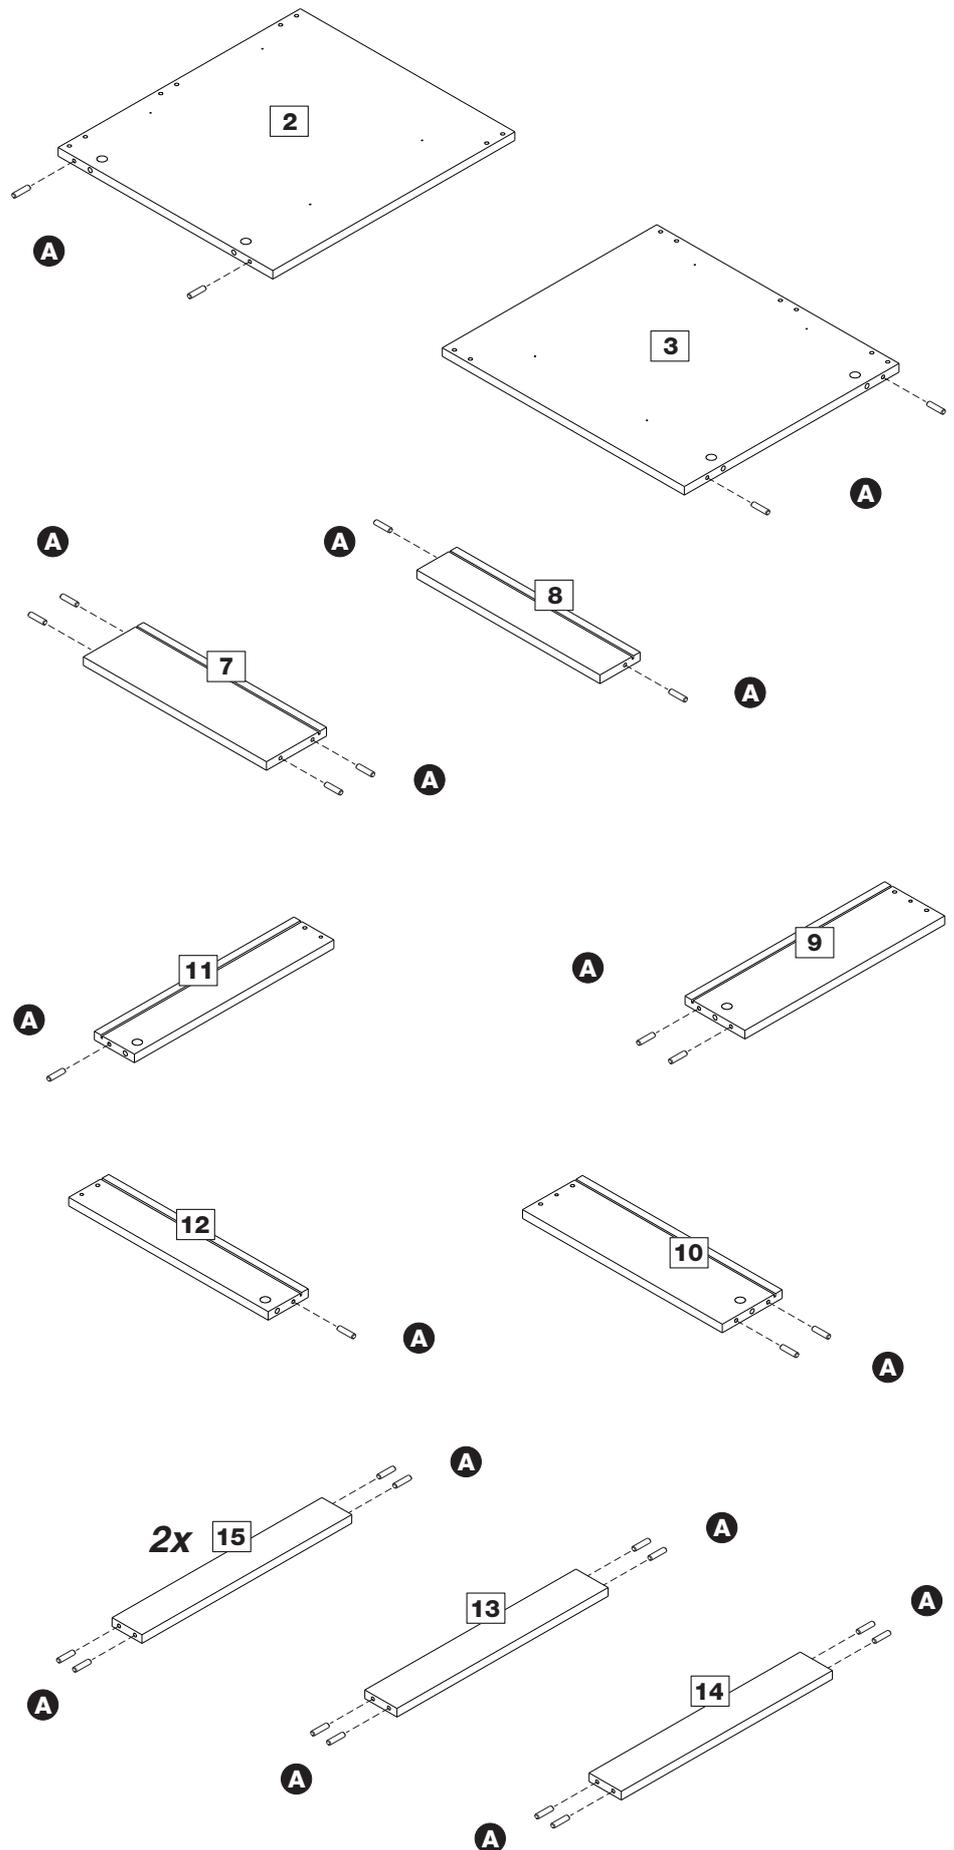



Assembly Instructions

Step 2

Fixing runners.

Attach right runners **M** to the pre drilled holes on the right side panel **2** using screws **B**.

Attach left runners **N** to the pre drilled holes on the left side panel **3** using screws **B**.

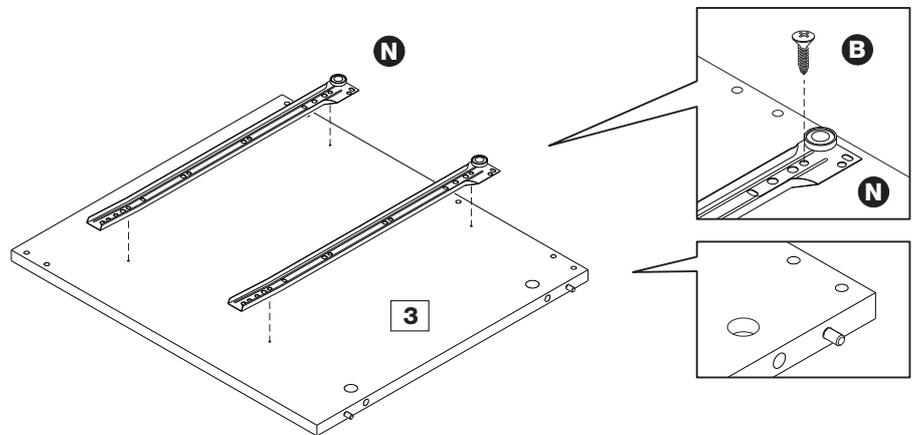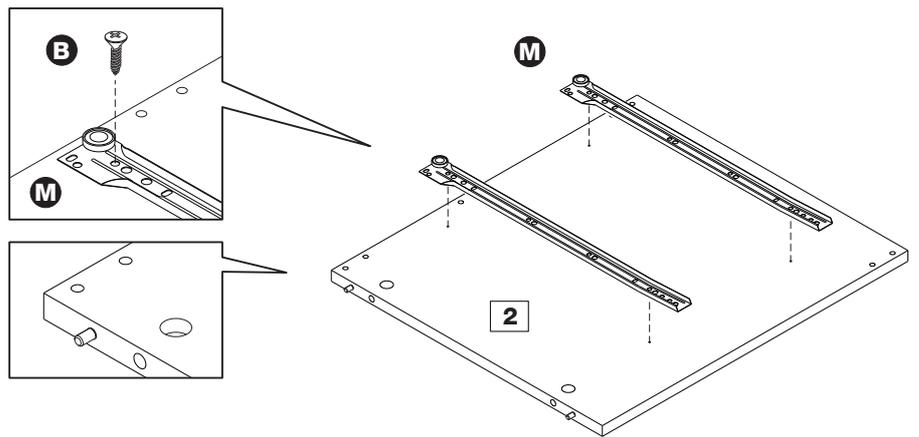


Step 3

Fitting Metal dowels.

Screw metal dowels **E** into top panel **1**, large drawer front **5** and small drawer front **6**.

 **Note:** Insert metal dowels as far as shown.

Do not over tighten.

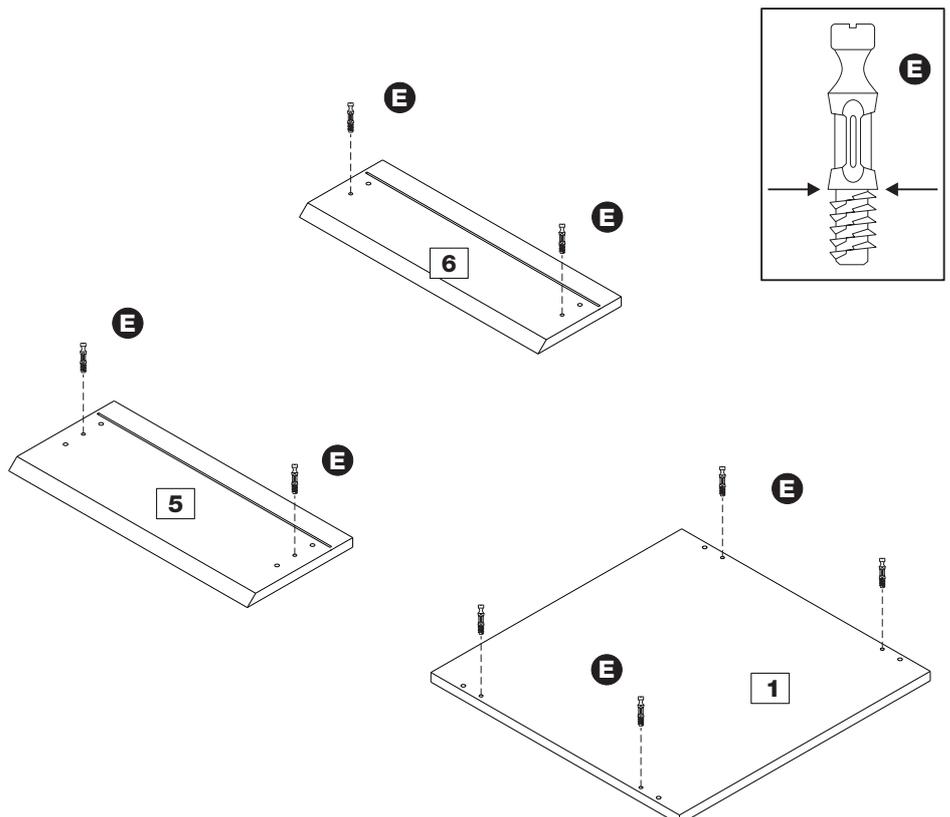


Assembly Instructions

Step 4

Fixing L shaped brackets.

Fix L shaped brackets **K** in the bottom frame **13** and unfinished bottom frame **14** using screws **B**, as shown.

 **Attention:** Leave **1mm** space from the edge of the bars as shown. L shaped brackets must be fixed to the unfinished side in bottom frame **13**.

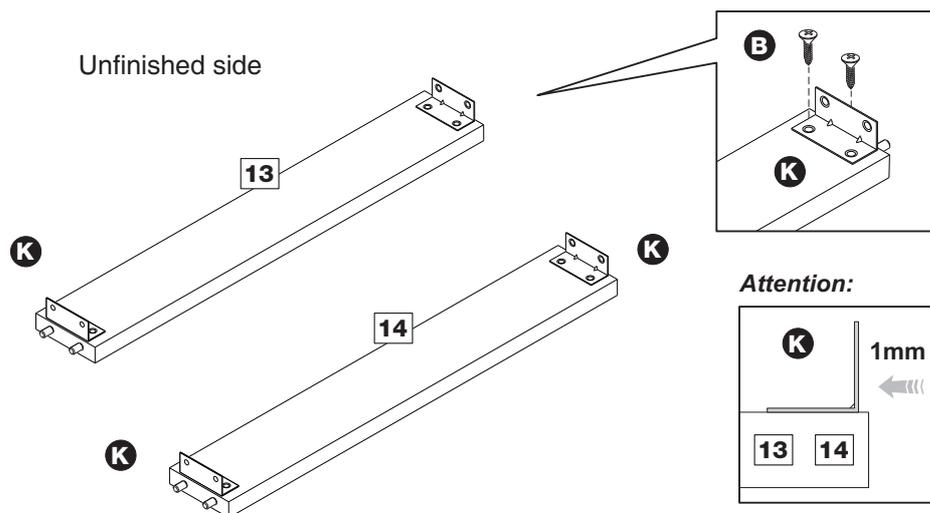


Step 5

Assembling frames.

Fit bottom frame **13** and **14** and top front frames **15** into holes on right side panel **2**, as shown. Then, fix bottom frames **13** and **14** in the right side panel through L shaped brackets **K** using screws **B**.

 Finished sides to face outside and finished edges to face up.

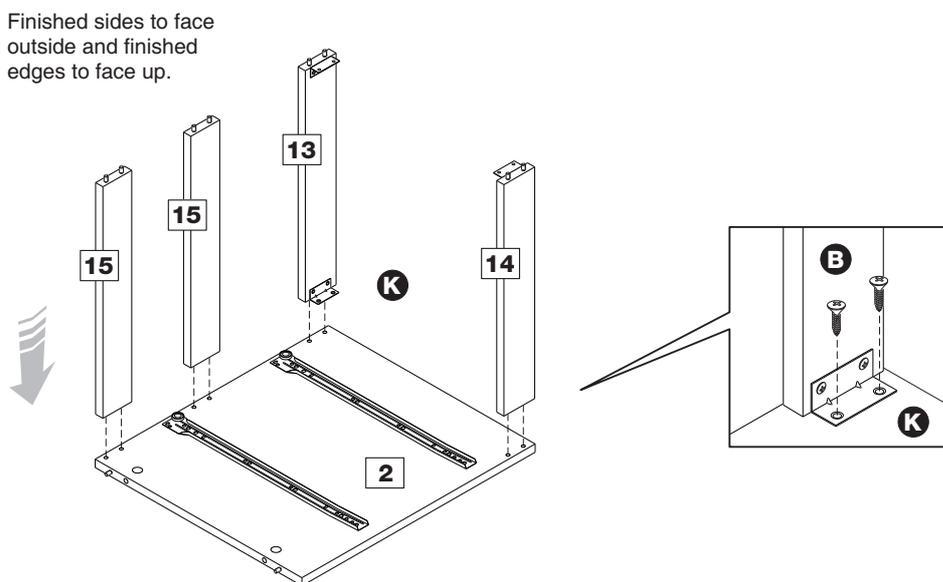


Step 6

Fixing left side panel.

Place left side panel **3** properly ensuring dowels and front frames are all fitted into their holes at the same time.

Fix bottom frames **13** and **14** in the left side panel **3** through L shaped brackets **K** using screws **B**, as shown.

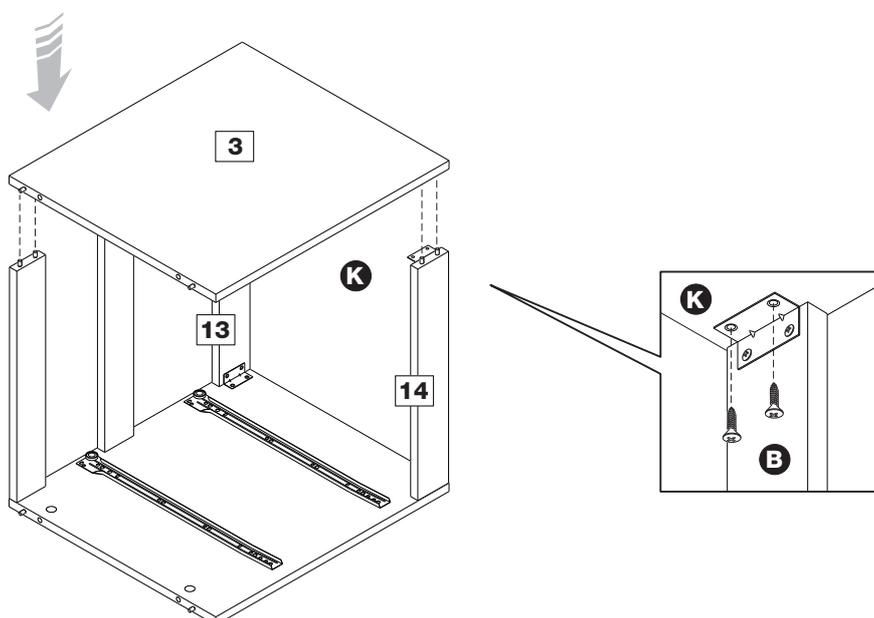

Assembly Instructions

Step 7

Fixing top panel.

With help, carefully stand the product upright.





With help, fit top panel **1** to the cabinet.

Insert 4 locking nuts **F** into side panels where shown.

Use a screwdriver to turn locking nuts **F** clockwise to lock.

Do not over tighten.

After screwing locking nuts, insert plastic caps **L**.

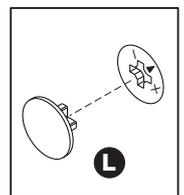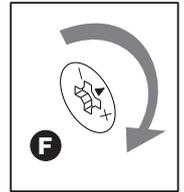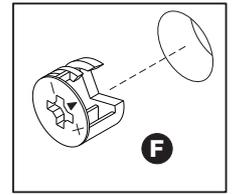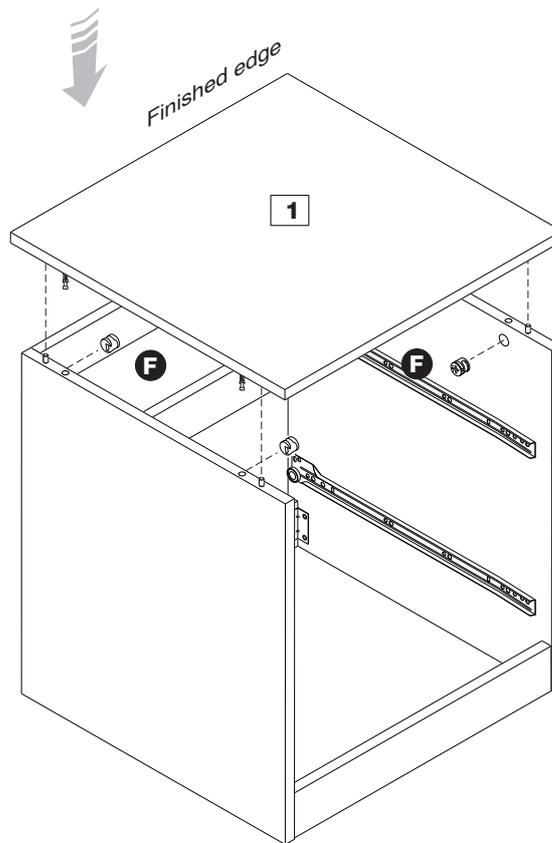

Step 8




Fixing back panel.



Important:

Cabinet **MUST** be 'square' when back panel is attached.

Attach back panel **4** using nails **G**.

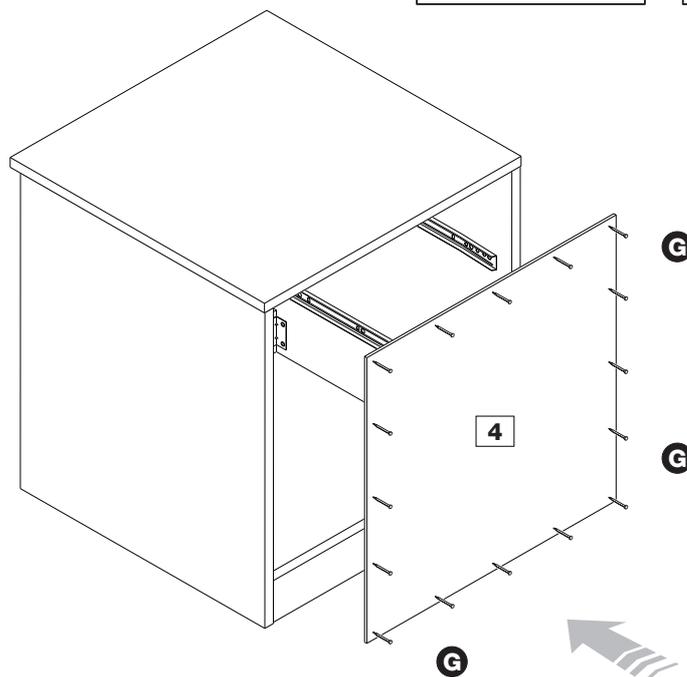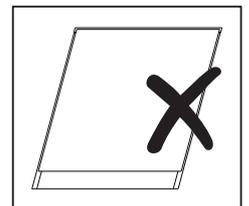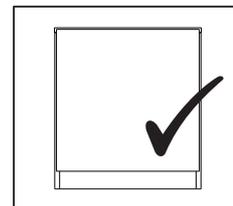

Assembly Instructions

Step 9

Attach plastic feet.


With help, carefully lay down the product.

Attach plastic feet **I** in the bottom edge of the right and left side panels using nails **H**.



Make sure nails are fully nailed.


After attach plastic feet, with help, carefully stand the product upright.

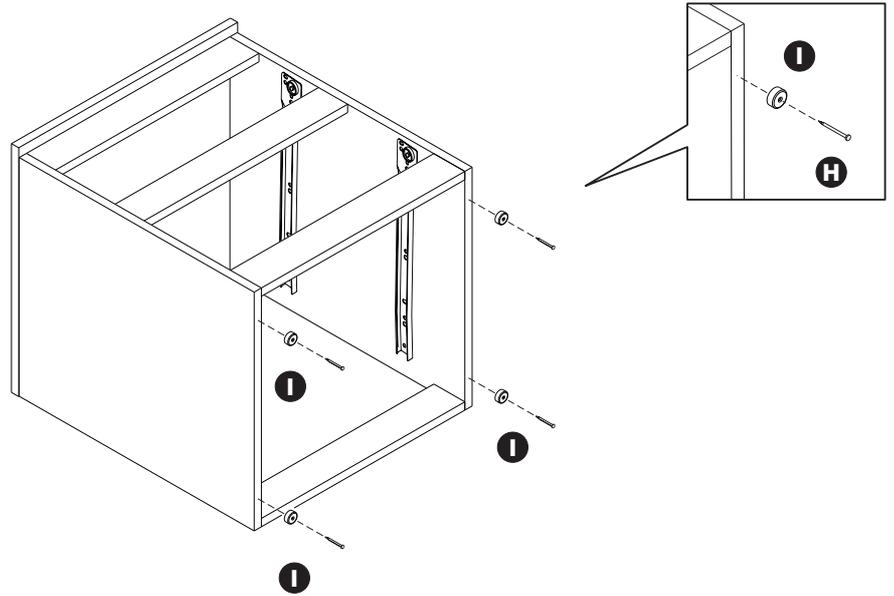


Step 10

Large drawer assembly.


a: Fix large drawer sides **9** and **10** to the large drawer back **7** using screws **D**.

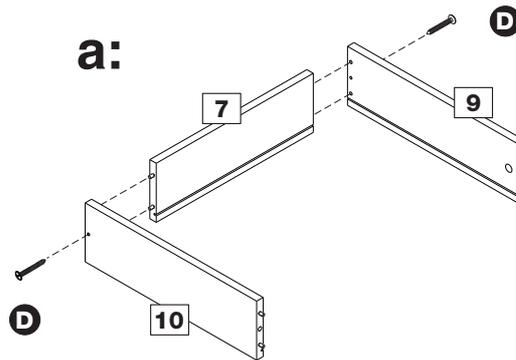

b: Slide drawer bottom **16** into slots on drawer sides.

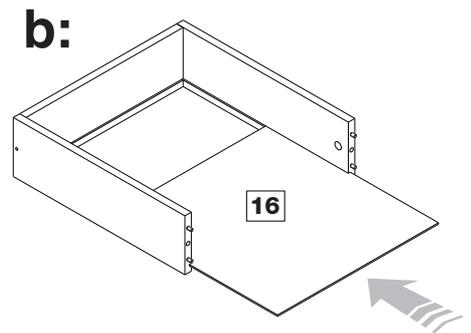

c: With help, fit large drawer front **5** to the drawer sides.

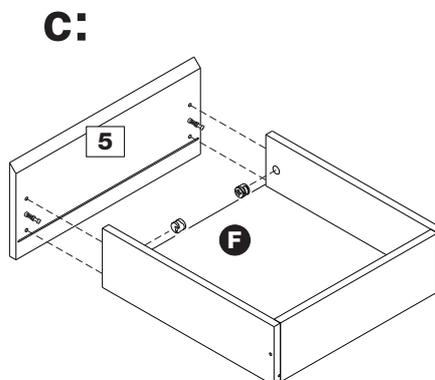


Insert 2 locking nuts **F** into drawer sides where shown.

Use a screwdriver to turn locking nuts **F** clockwise to lock.

Do not over tighten.

After screwing locking nuts, insert plastic caps **L**.

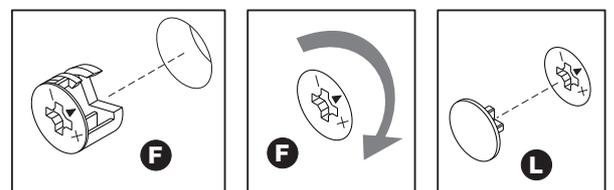

Assembly Instructions

Step 11

Small drawer assembly.

a: Fix small drawer sides **11** and **12** to the small drawer back **8** using screws **D**.

b: Slide drawer bottom **16** into slots on drawer sides.





c: With help, fit small drawer front **6** to the drawer sides.

Insert 2 locking nuts **F** into drawer sides where shown.

Use a screwdriver to turn locking nuts **F** clockwise to lock.

Do not over tighten.


After screwing locking nuts, insert plastic caps **L**.

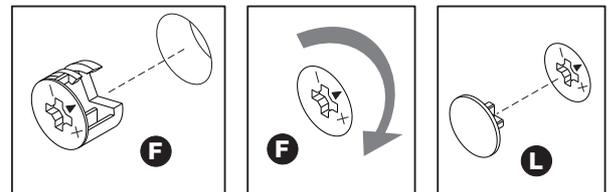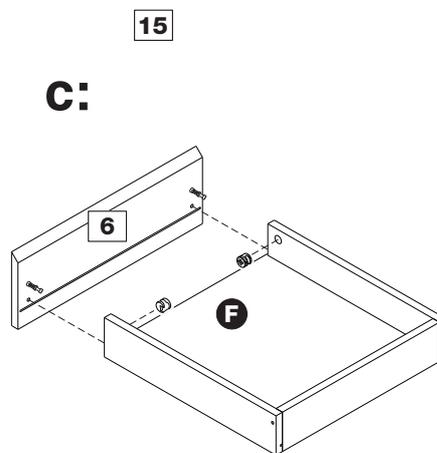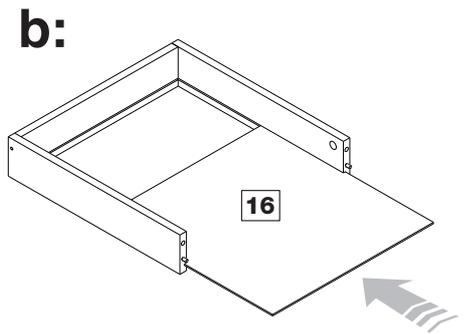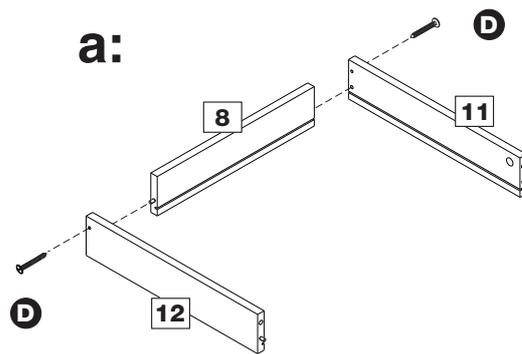

Step 12

Attach plastic bracket.

Attach plastic bracket **J** in the bottom of the large and small drawers using screws **C**.

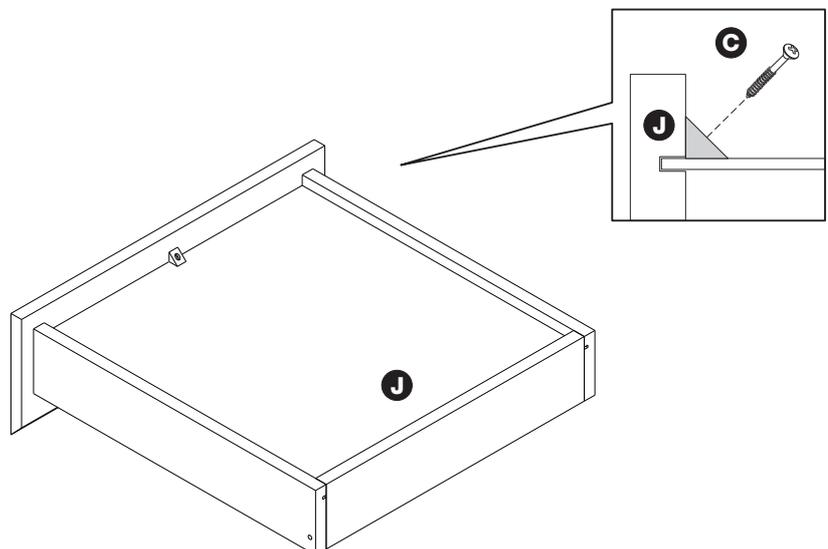

Assembly Instructions



Step 13

Fixing runners.

Attach right runners **M** and left runners **N** in the bottom edge of the large and small drawers using screws **B**, as shown.




Make sure runners are correctly positioned according to the diagram prior to fixing.

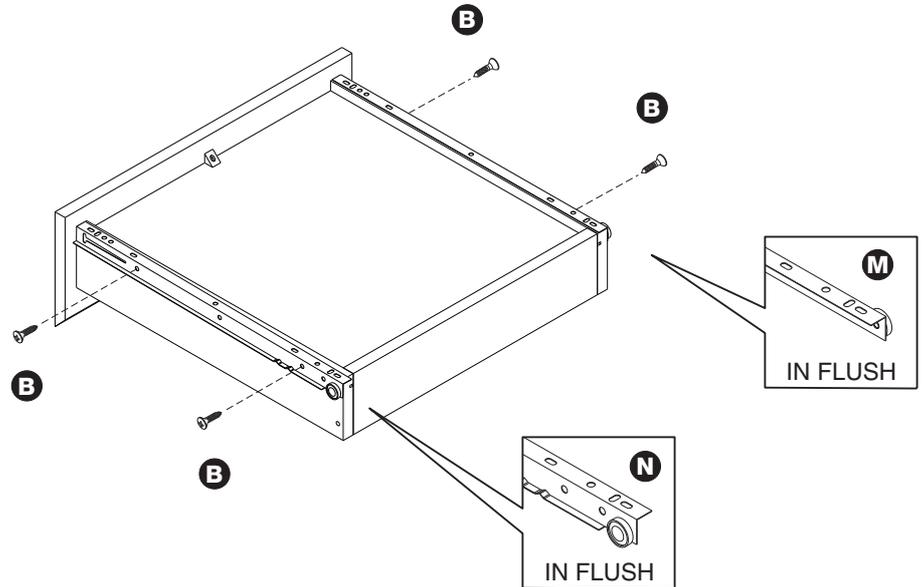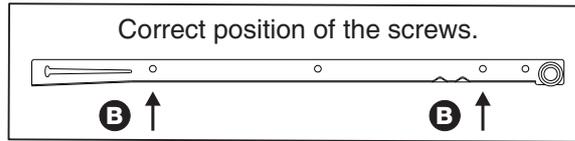

Step 14

Hook the wheels of the runner on the back of the drawers over the wheels of the runners on the left and right sides, then hold the drawers level and slide backwards into position.

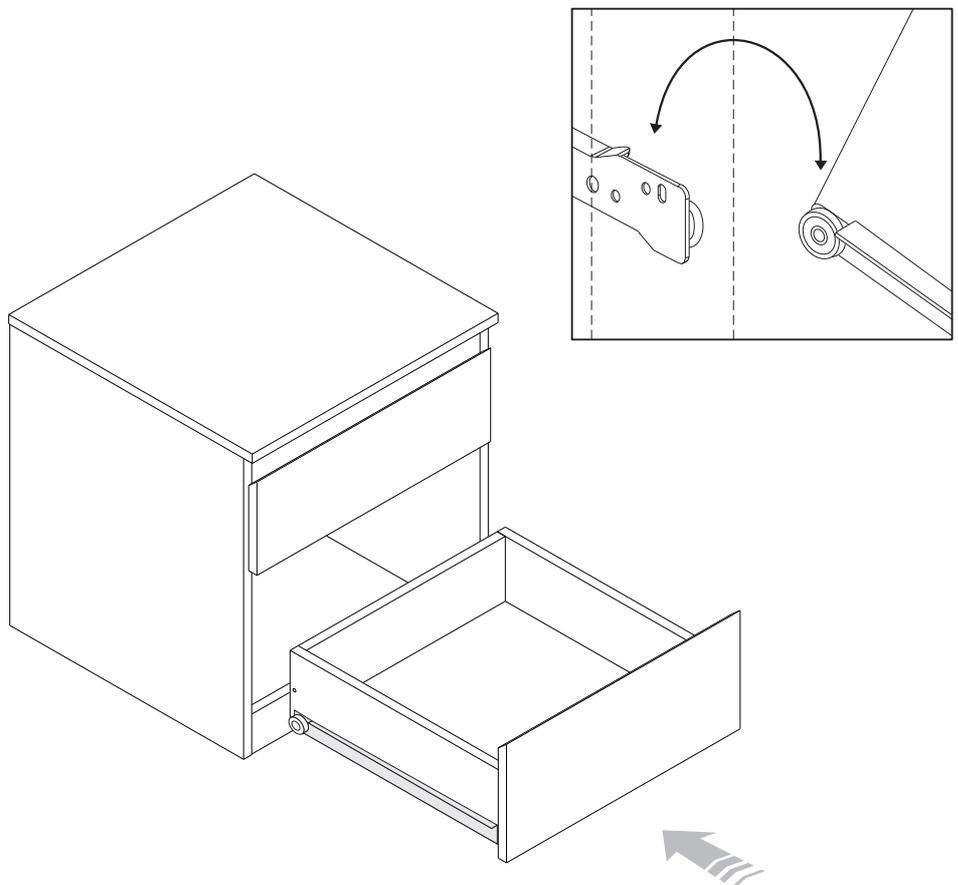

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**