
Alicia - 2 Door Robe

Assembly Instructions - Please keep for future reference

171/5875

145/1256

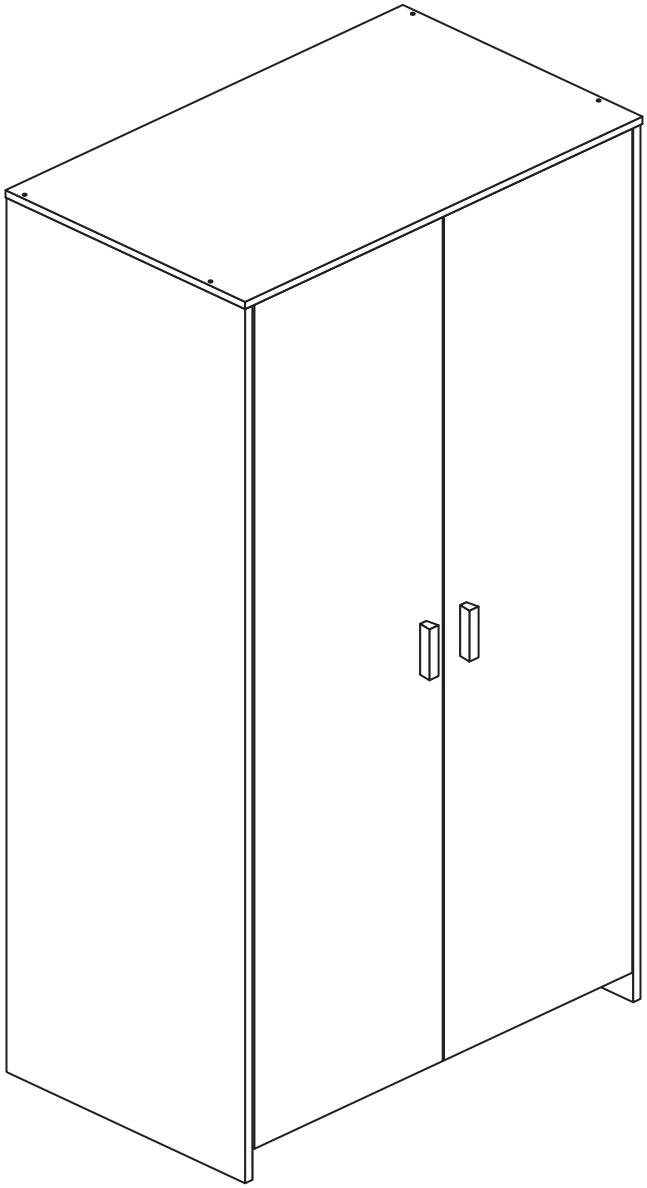

Dimensions
Width - 82cm
Depth - 49.5cm
Height - 182.5cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 10/02/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 44kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the panels listed below

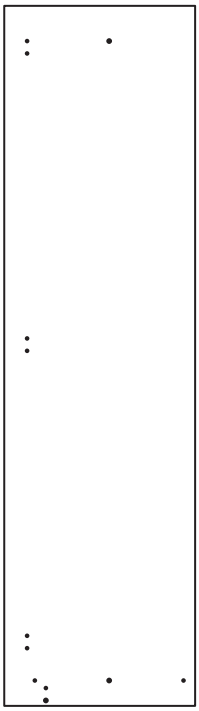

1 Left Side *(D2668A)*
(1808 x 493mm)

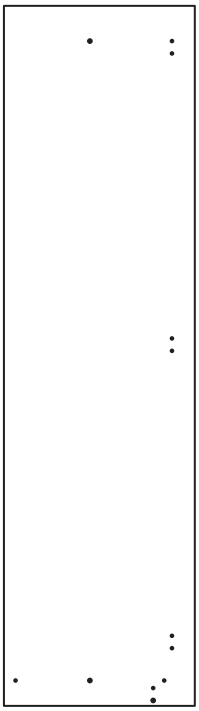

2 Right Side *(D2669A)*
(1808 x 493mm)



3 Top *(D2667A)*
(821 x 495mm)




4 Base *(D2670A)*
(787 x 470mm)




5 Plinth *(D2671A)*
(787 x 58mm)

6 Hanging Rail *(FHR779)*
(779mm long)

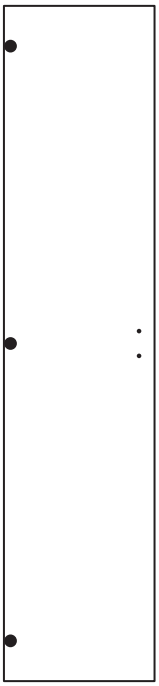

7 Door *(D2672A)*
(1744 x 389mm) x 2

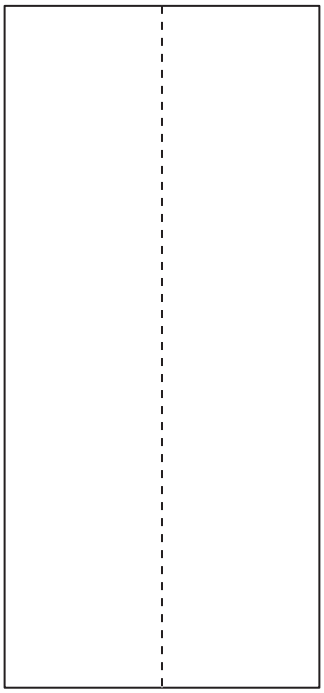

8 Back *(X1761-813)*
(1761 x 813mm)


Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A



Wooden dowel *(F22)* x 6

B



Metal dowel *(F901)* x 6

C



Large locking nut *(F900)* x 6

D



25mm Screw (*F50)* x 4

E



13mm Screw *(F79)* x 1

F




13mm Screw *(F63)* x 14

G




40mm Screw *(F910)* x 4

H

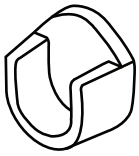


Rail holder *(F1014)* x 2

I

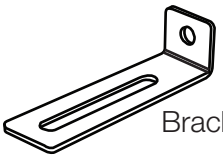

Bracket (*F327)* x 1

J




Nail *(F51)* x 33

K




Hinge plate (*F523)* x 6

L

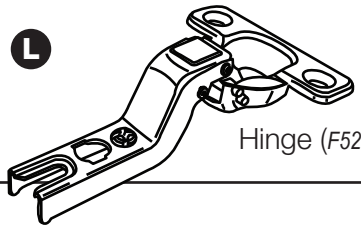


Hinge (*F522)* x 6

M

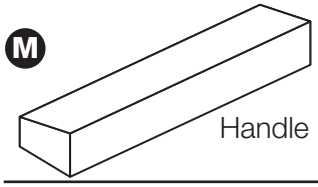


Handle *(F319)* x 2

Tools required

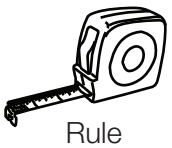


Rule



Spirit level




Eye protection (when using a hammer or drill)




Cross-head screwdriver



Electric drill (only use when drilling into walls)

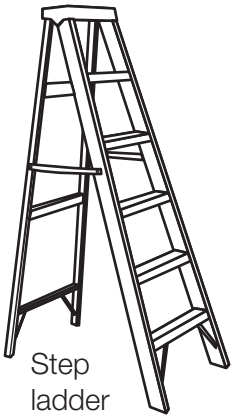

Step ladder

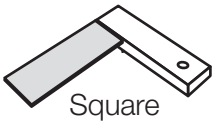


Square



Scissors




Hammer



Bradawl

Ruler - Use this ruler to help correctly identify the screws

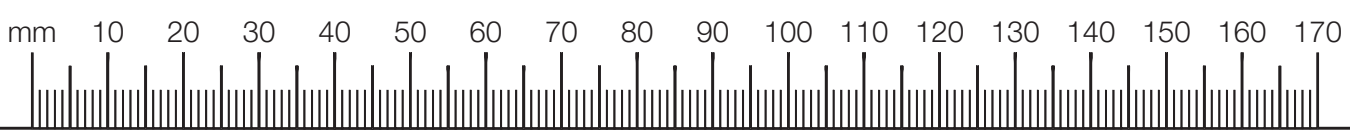

Assembly Instructions

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare the left side

Tap a wooden dowel **A** into the left side **1**.


Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Screw 3 metal dowels **B** into the left side **1**.

Note: Tighten the metal dowels up fully against the panels.

Fit 3 hinge plates **K** onto the left side **1**, making sure that the slot is facing towards the finished front edge.

Push a rail holder **H** into the left side **1** Make sure that it is fitted straight, in line with the panel edges and then secure with screw **F**.

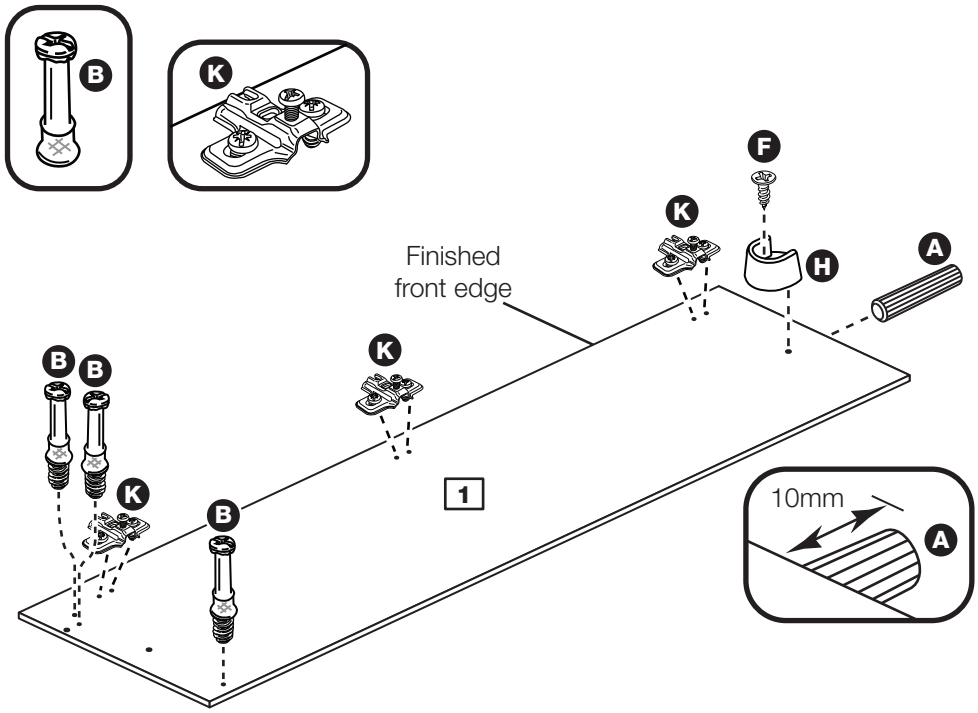

Step 2


Prepare the right side

Tap a wooden dowel **A** into the right side **2**.

Screw 3 metal dowels **B** into the right side **2**.

Fit 3 hinge plates **K** onto the right side **2**.

Push a rail holder **H** into the right side **2** and secure with screw **F**.

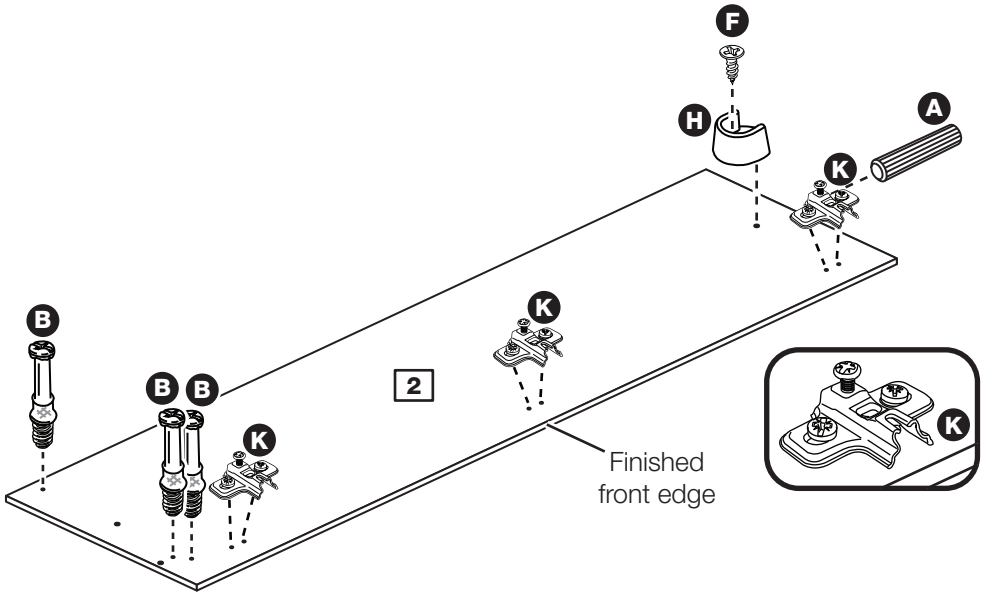

Assembly Instructions


Step 3

Prepare the base

Tap 2 wooden dowels **A** into the base **4**.

Insert 4 large locking nuts **C** into the base **4**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

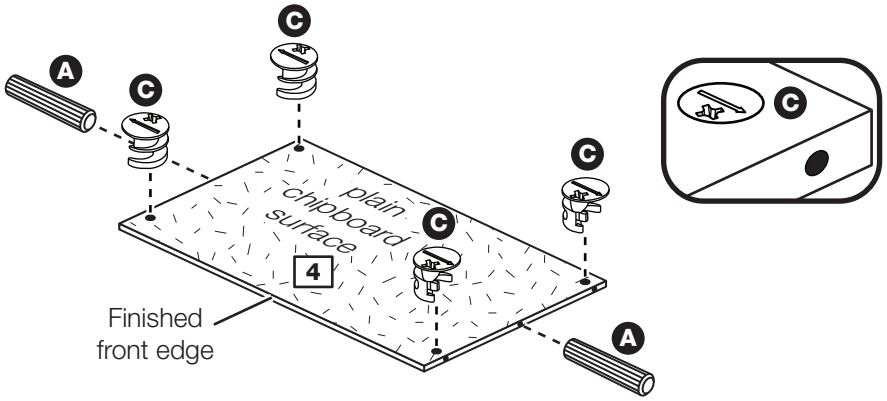


Step 4

Fit the base to the right side

Push the base **4** onto the right side **2**.

Use a screwdriver to tighten the 2 large locking nuts **C** fitted to the base **4**.

Note: Turn the large locking nuts **C** as far as they will go - more than 1/2 a turn.

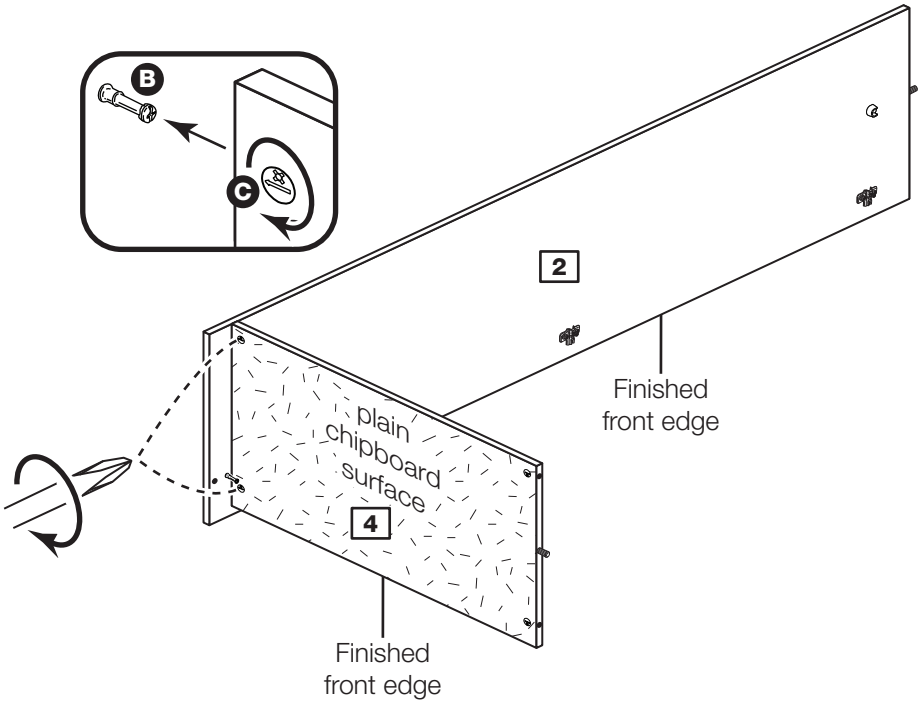


Step 5

Prepare the plinth

Tap 2 wooden dowels **A** into the plinth **5**.

Insert 2 large locking nuts **C** into the plinth **5**.

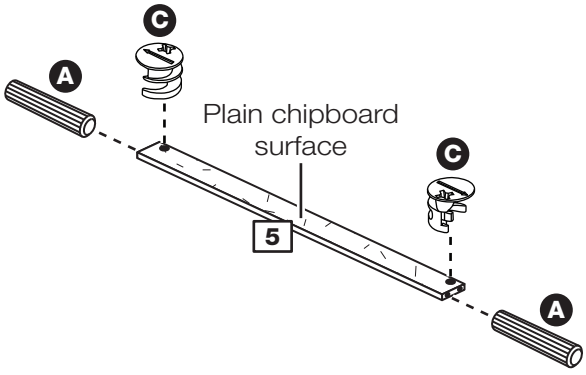


Step 6

Fit the plinth

Push the plinth 5 onto the right side 2.

Use a screwdriver to tighten the large locking nut C fitted to the plinth 5.

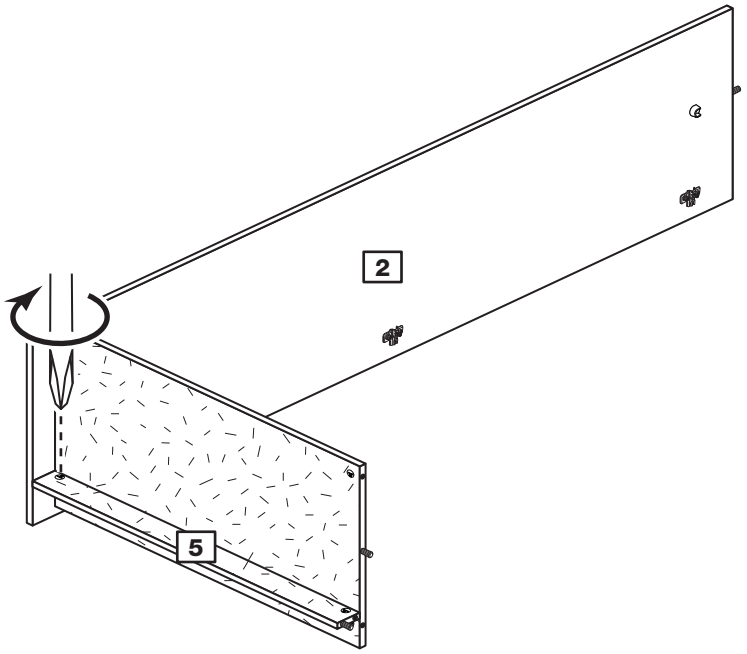


Note: Support the plinth until the left side has been fitted in the next step.

Step 7

Fit the left side

Push the left side 1 onto the base 4 and the plinth 5.


Use a screwdriver to tighten the 3 large locking nuts C fitted to the base 4 and the plinth 5.

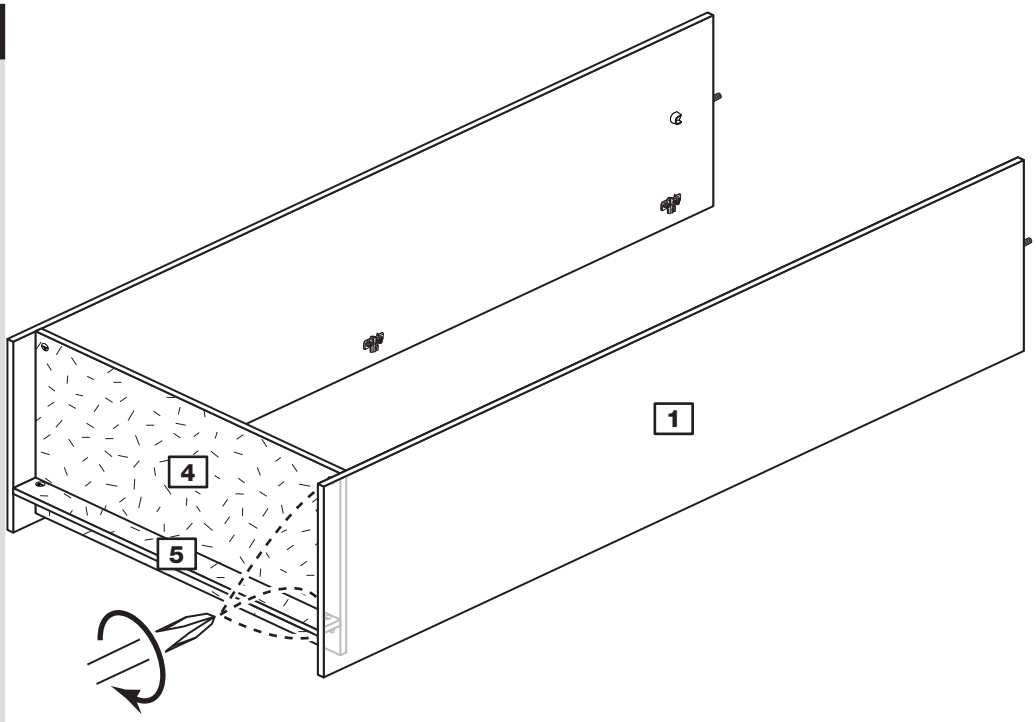

Step 8

Fit the top

Push the top 3 onto the assembly and secure with 4 screws G.

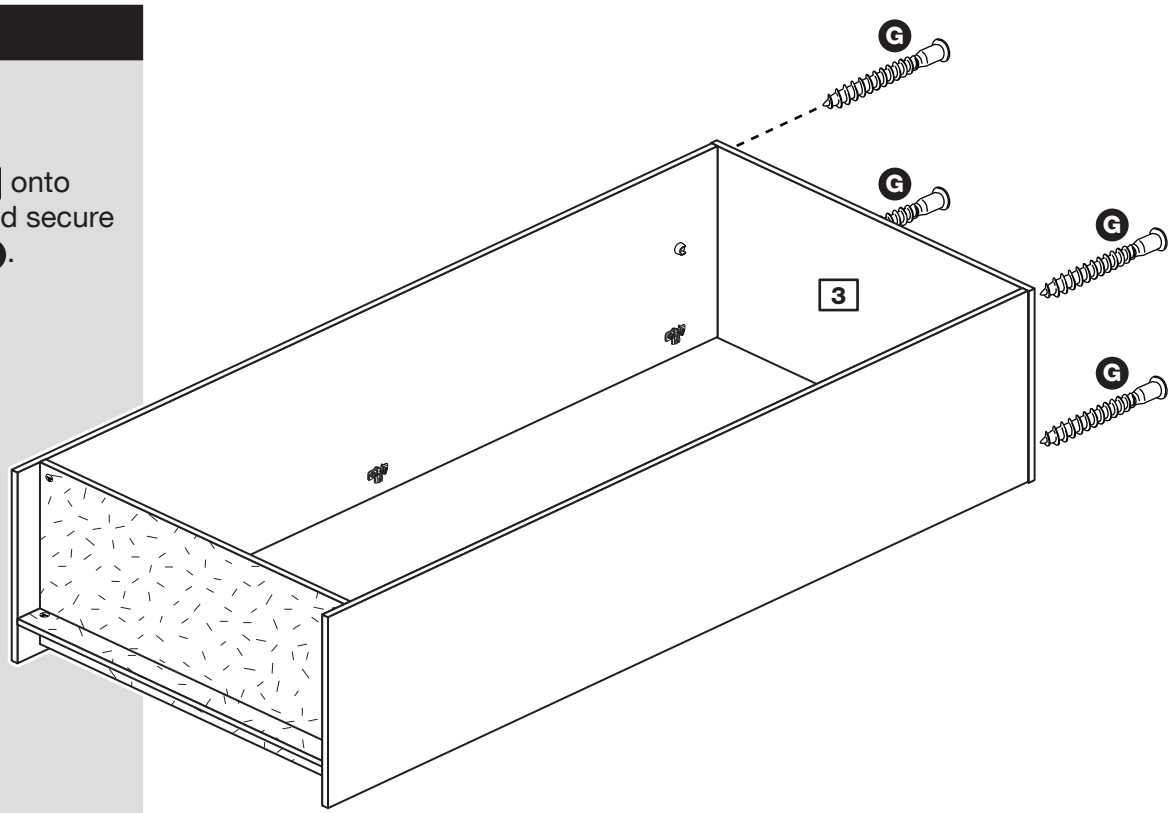

Step 9

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 8 onto the unit.


Nail J around the outside edges of the back 8.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.


a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

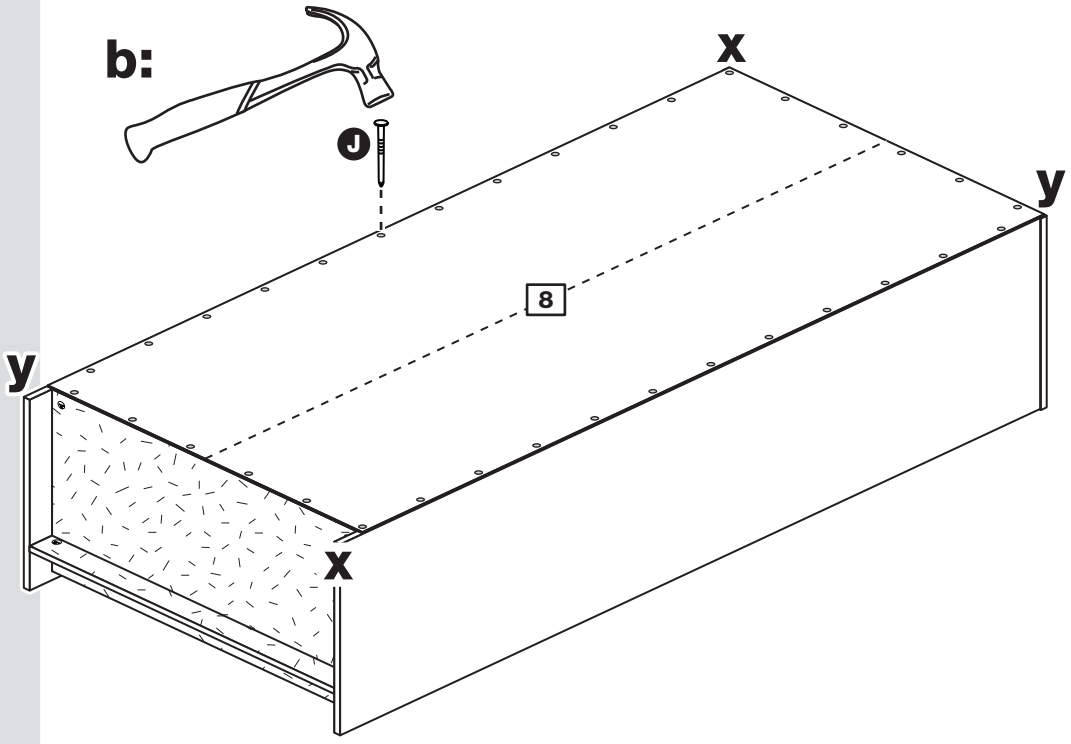


Step 10

Fit the hanging rail

Push the hanging rail 6 into the rail holders H fitted to the side panels.

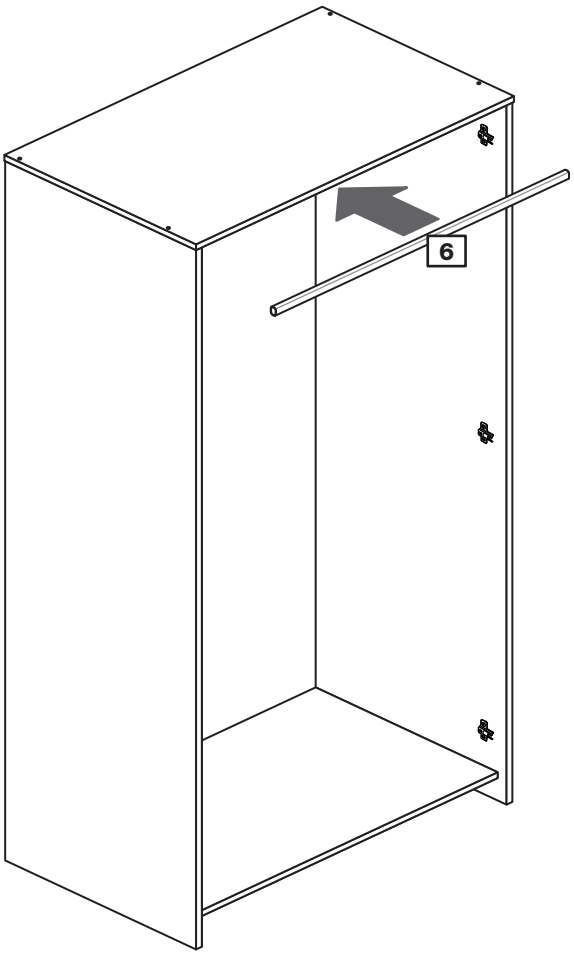

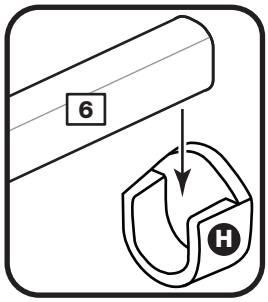


Step 11

Prepare the 2 doors

Push fit 3 hinges L into each of the 2 doors 7.

Secure each hinge with 2 screws F.

Note: Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the edge of the door.

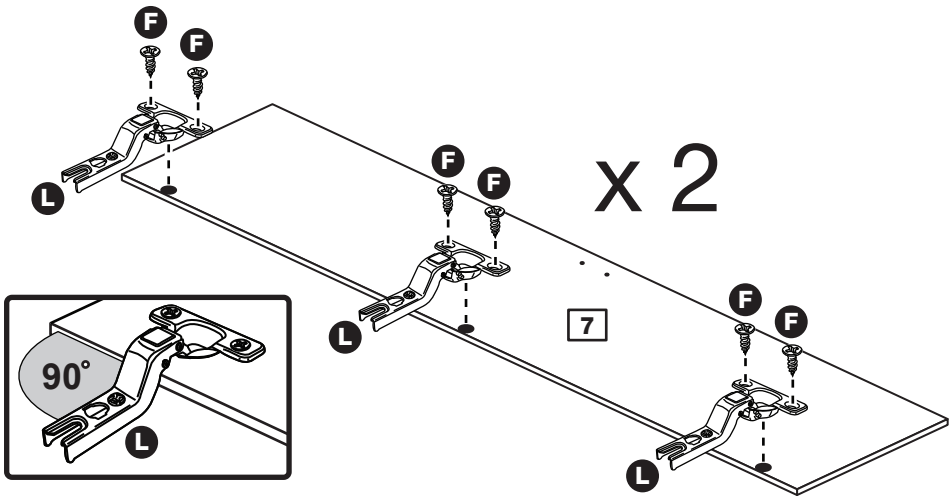

Note: Remove the protective film from the doors before Step 12.

Step 12

Fit doors and handles

Note: The easiest way to attach each door [7] is to fit the top hinge first, then align and fit the other hinges.


a: Push the hinge (L) onto the front part of the hinge plate (K).
The recess at the bottom of screw B goes into the slot in the hinge plate.


b: Keep the hinge (L) FLAT against the hinge plate (K) as you slide it across as far as it will go. Tighten screw A.

c: The hinge (L) must be flat against the hinge plate (K) prior to any adjustment.

d: The hinge (L) must NOT be AT AN ANGLE to the hinge plate (K) when assembled.
This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure. Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

e: Attach a handle (M) to each door [7] using 2 screws (D).

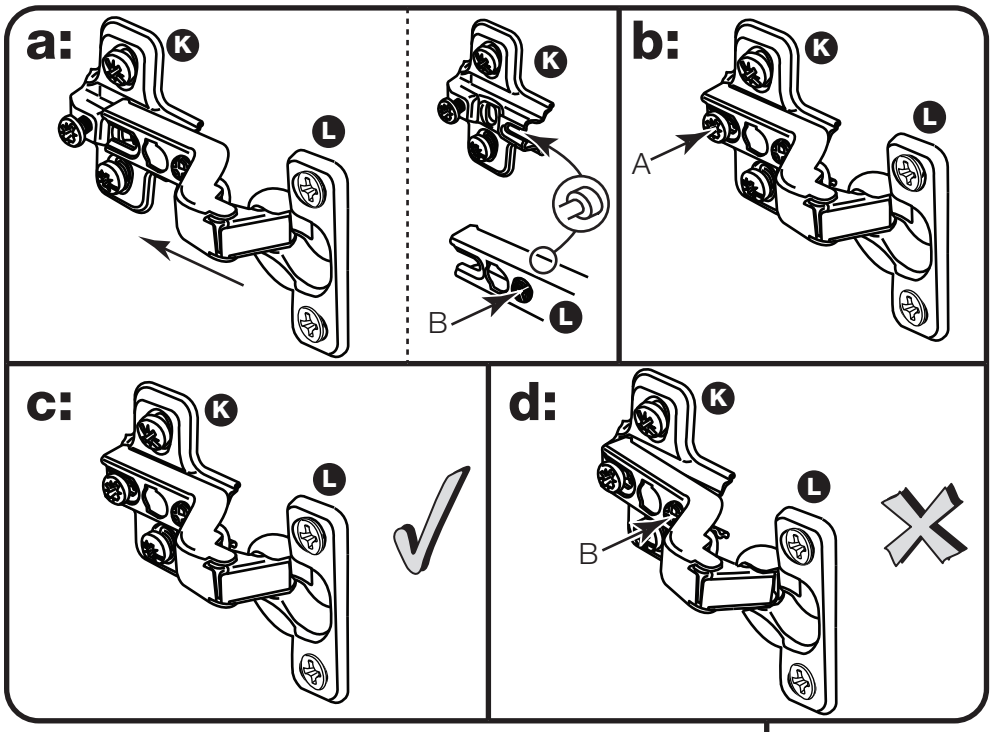

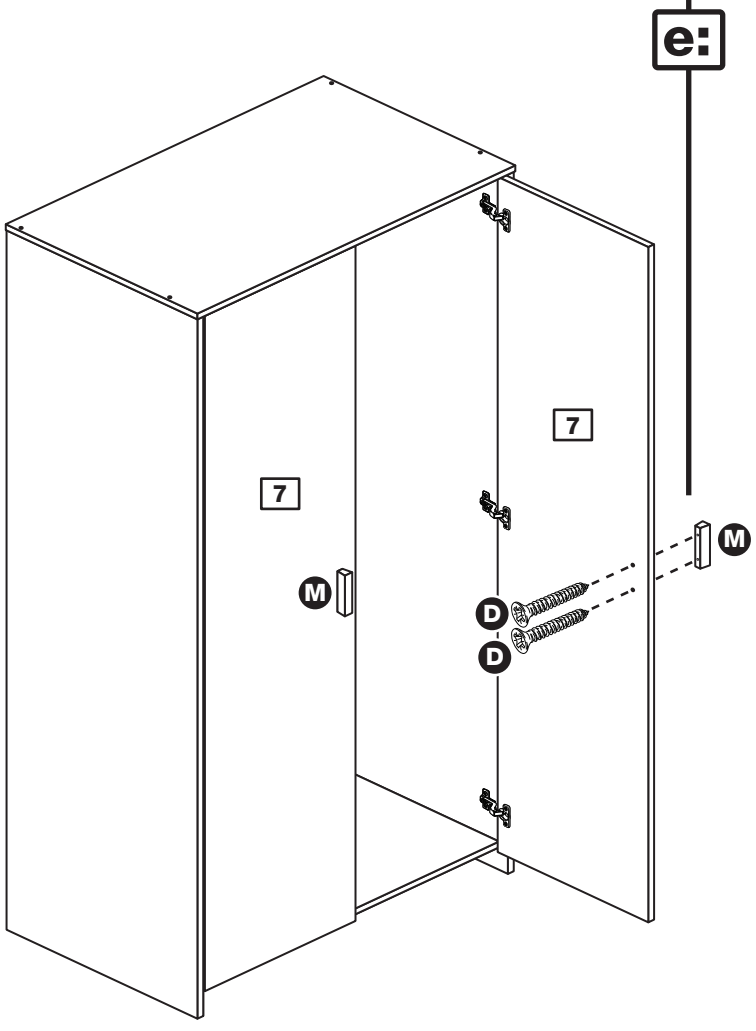

Step 13


Adjust the doors if needed

a: Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.
Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

b: Height adjustment.
Loosen screws A on hinge plates and move door up or down as required.
Retighten screw A.

c: Forward and Back adjustment.
Loosen screw B on hinge plate and move door in or out as required.
Retighten screw B.

d: Sideways adjustment.
To move door ‘out’ loosen screw C.
To move door ‘in’ tighten screw C.

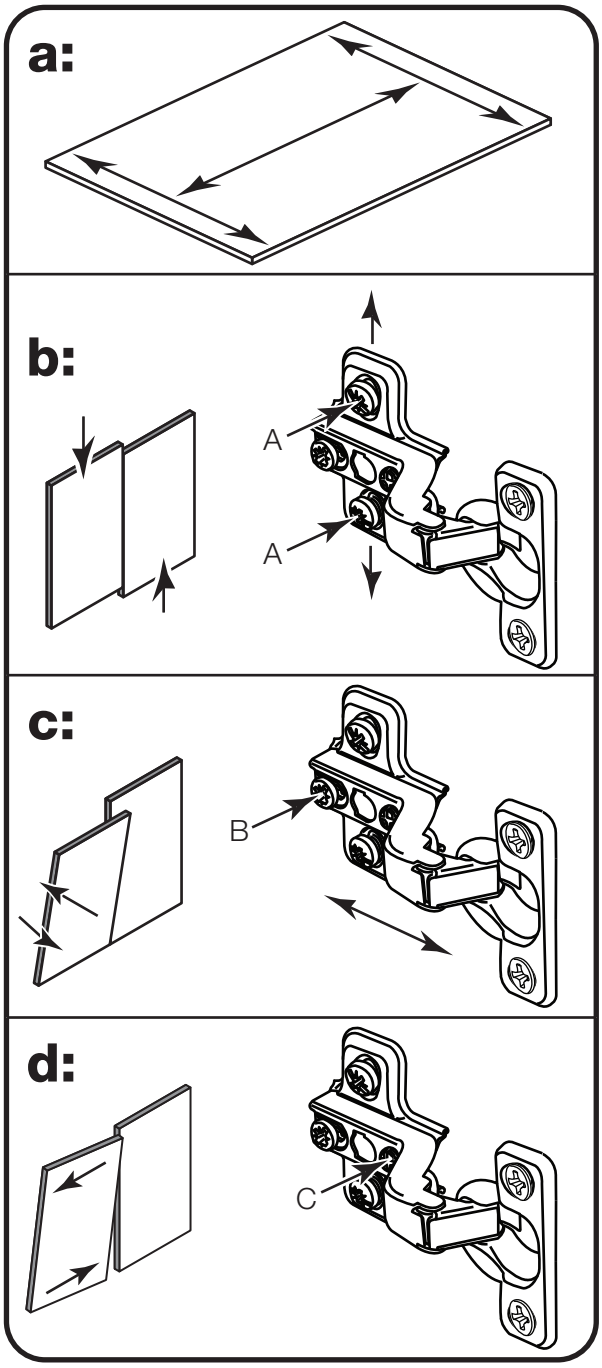

Step 14

Fit the bracket

To prevent possible overbalancing, we recommend that this unit is secured to a suitable wall by use of the bracket I fitted to the top of the unit.

Fixings are not supplied, as they will need to suit the wall type and the length of screw will depend on the distance from the back of the unit to the wall.

Fix the bracket I loosely onto the top of the unit using screw E and mark the wall for the wall fixing.


Swivel the bracket I away from the wall and drill a hole in the wall using a suitable drill bit and fit your wall fixing.

Swivel the bracket I back and fix the bracket to the wall, then tighten screw E.

Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

Warning: The unit is heavy. Lift with care.

Assembly is complete

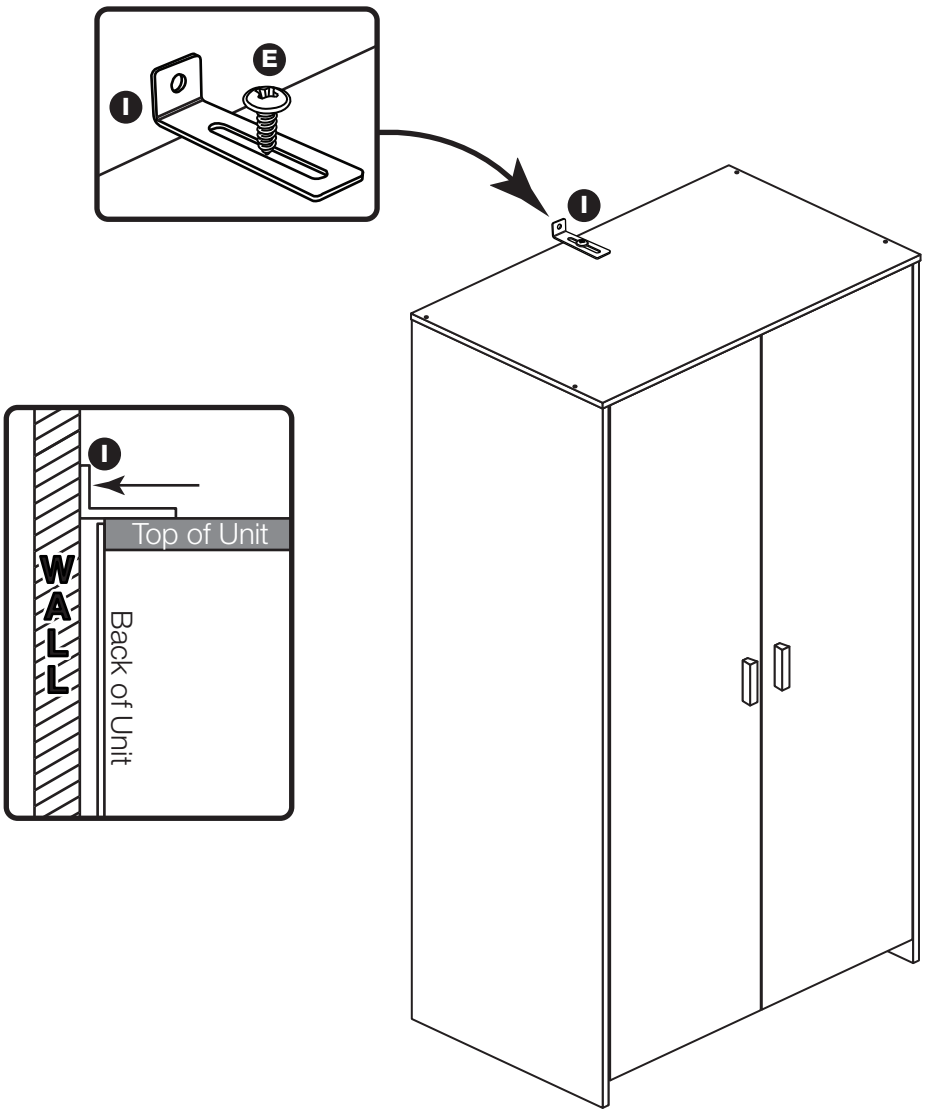

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW