
New Sywell - 5 Drawer Chest

Assembly Instructions - Please keep for future reference

184/6438
146/5589
190/6842
184/4203

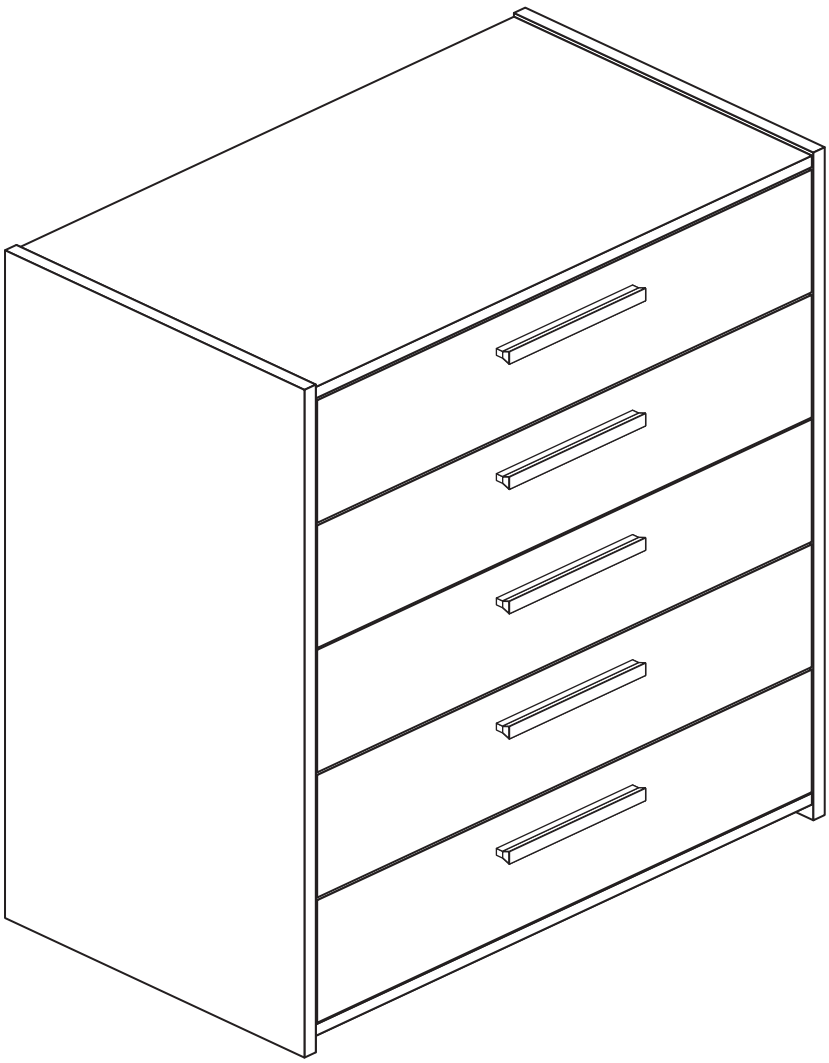

Dimensions

Width - 69cm

Depth - 40cm

Height - 88.5cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 25/11/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 25kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

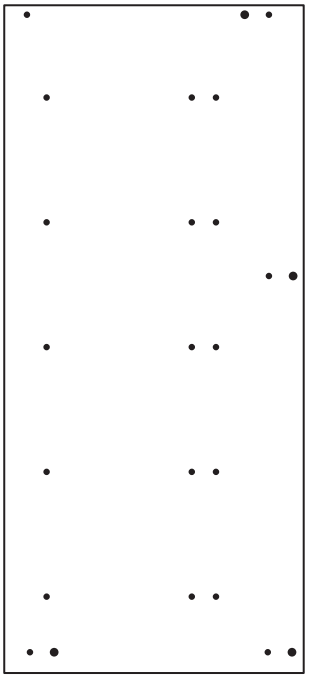


1 Left Side *(D2552A)*
(883 x 396mm)

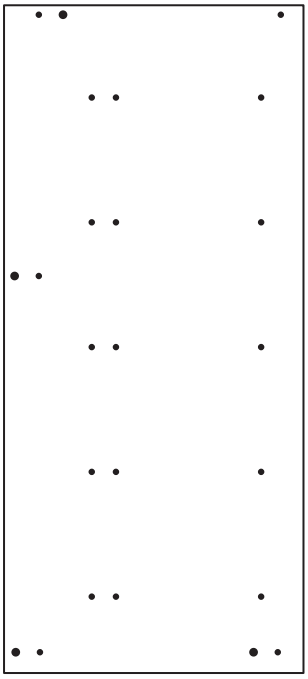


2 Right Side *(D2555A)*
(883 x 396mm)

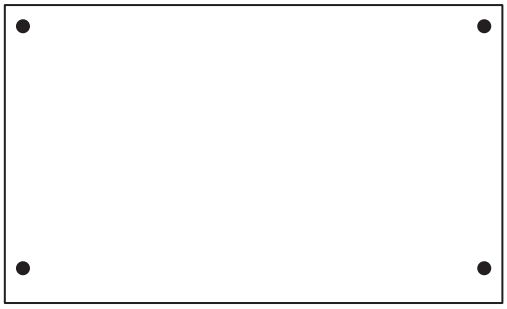


3 Top *(D2546A)*
(658 x 394mm)




4 Rail *(D2549A)*
(658 x 78mm) x 3

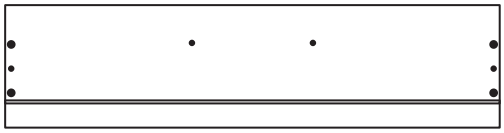


5 Drawer Front *(D2550A)*
(654 x 162mm) x 5



6 Drawer Back *(W625-95)*
(625 x 95mm) x 5




7 Left Drawer Side *(W453LH)*
(330 x 95mm) x 5



8 Right Drawer Side *(W453RH)*
(330 x 95mm) x 5



9 Drawer Base *(T636-327)*
(636 x 327mm) x 5



10 Back *(X684-524)*
(854 x 684mm)


Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A



Wooden dowel *(F22)* x 8

B



Metal dowel *(F901)* x 20

C



Knock-in Peg *(F171)* x 20

D



Large locking nut *(F900)* x 10

E



Small locking nut *(F3)* x 10

F



25mm Screw *(F95)* x 10

G



13mm Screw *(F79)* x 1

H




9mm Screw *(F74)* x 10

I




9mm Screw (*F73)* x 20

J




Nail *(F51)* x 21

K

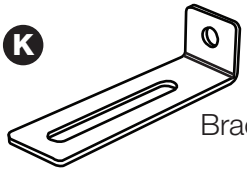

Bracket (*F327)* x 1

L

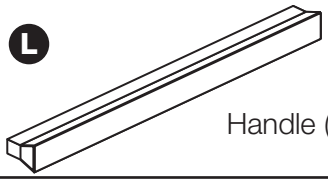


Handle (*F315)* x 5

M



Drawer runner *(F1004)* x 10

Tools required

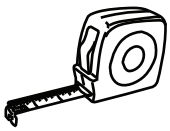


Rule



Cross-head screwdriver




Scissors



Hammer




Eye protection (when using a hammer or drill)

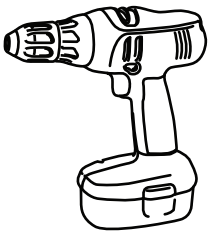

Electric drill (do not use for fitting screws)

Ruler - Use this ruler to help correctly identify the screws

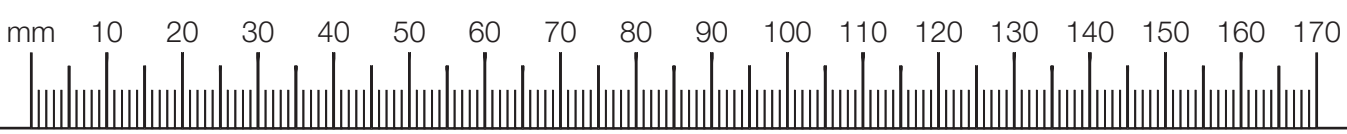

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare the drawer fronts

Screw 2 metal dowels B into the holes shown on the back of each drawer front 5.

Note: Tighten the metal dowels up fully against the panels.

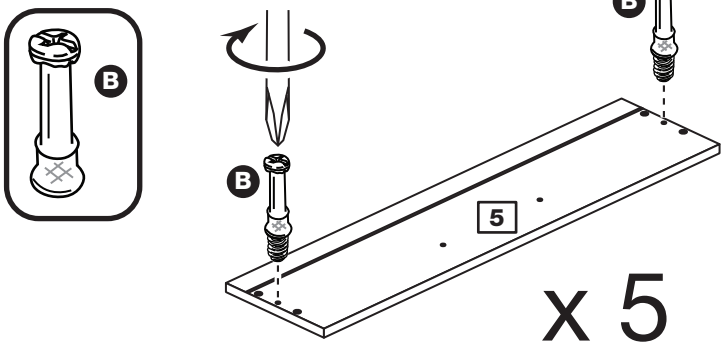


Step 2

Prepare the drawer sides

Insert a small locking nut E into the hole shown on the left drawer side 7 and right drawer side 8.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

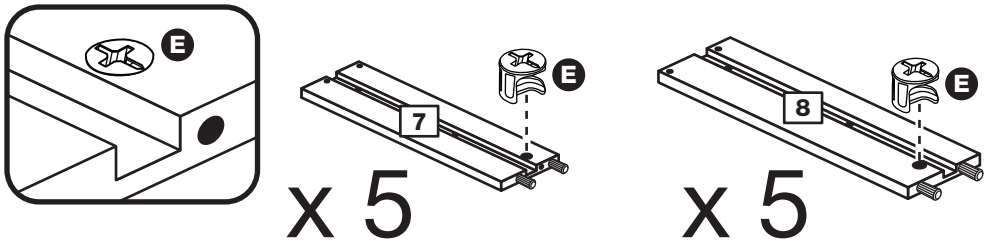


Step 3

Attach the drawer sides to the drawer front

Push the left drawer side 7 and right drawer side 8 onto the back of the drawer front 5.

Turn the small locking nuts E on the left drawer side 7 and right drawer side 8.

Note: Turn the locking nuts E clockwise to secure panels - more than 1/2 a turn.

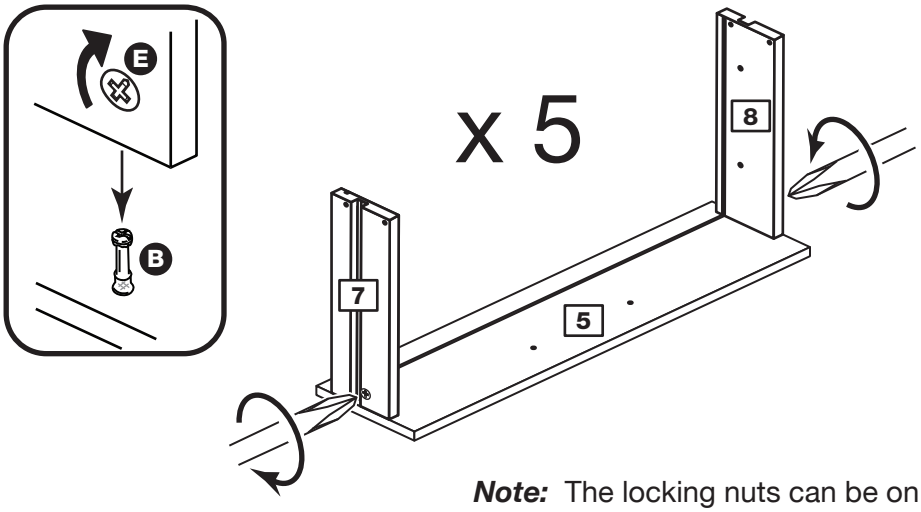


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base [9] down the grooves in the drawer sides [7] and [8] and down into the groove in the drawer front [5].

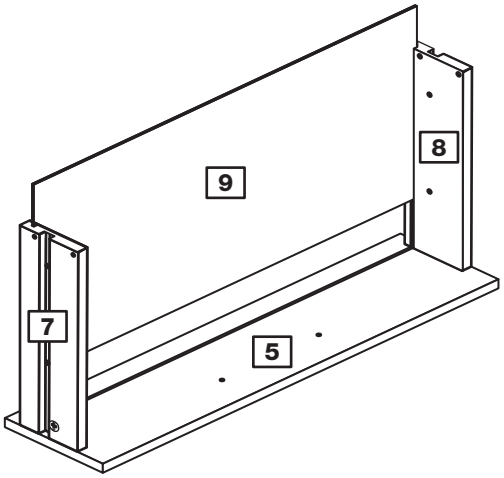

x 5


Step 5

Fit the drawer back

Fit the drawer back [6] down onto the drawer base [9].

Make sure that the drawer base [9] fits into the groove in the drawer back [6].

Hold the drawer back [6] in position and tap the knock-in pegs (C) through the holes in the drawer sides [7] and [8].

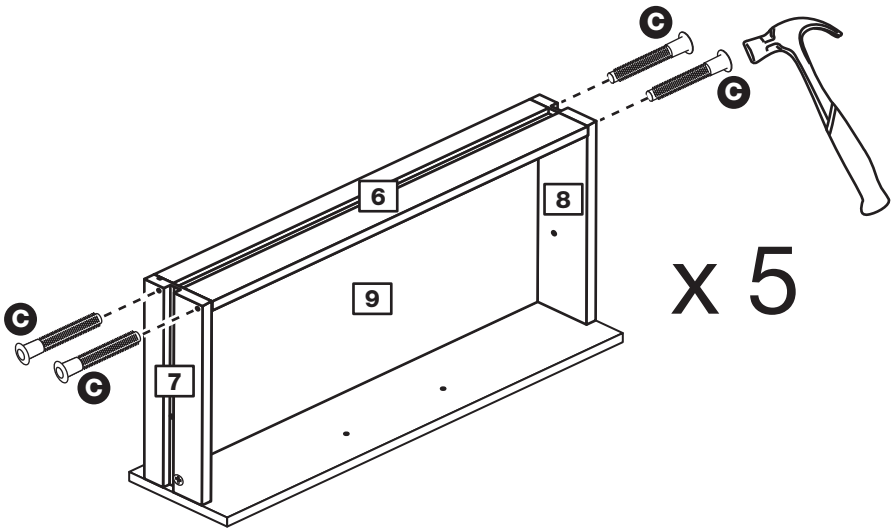


x 5

Step 6

Attach the handles

Attach a handle (L) to each drawer front [5] using 2 screws (F).

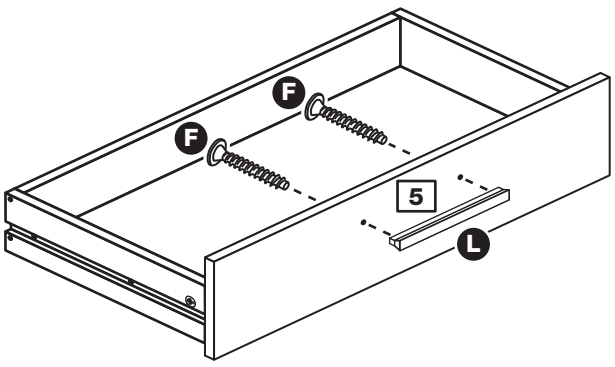

x 5

Assembly Instructions


Step 7

Prepare the left side

a: Place 5 runners M on the left side 1. Slide back the top of the runner and use the 2nd hole from the front to fit the 1st screw I.

Screw 5 metal dowels B into the left side 1.

b: Slide the runner M back the other way and fit the 2nd screw I into the corresponding hole in the left side 1.

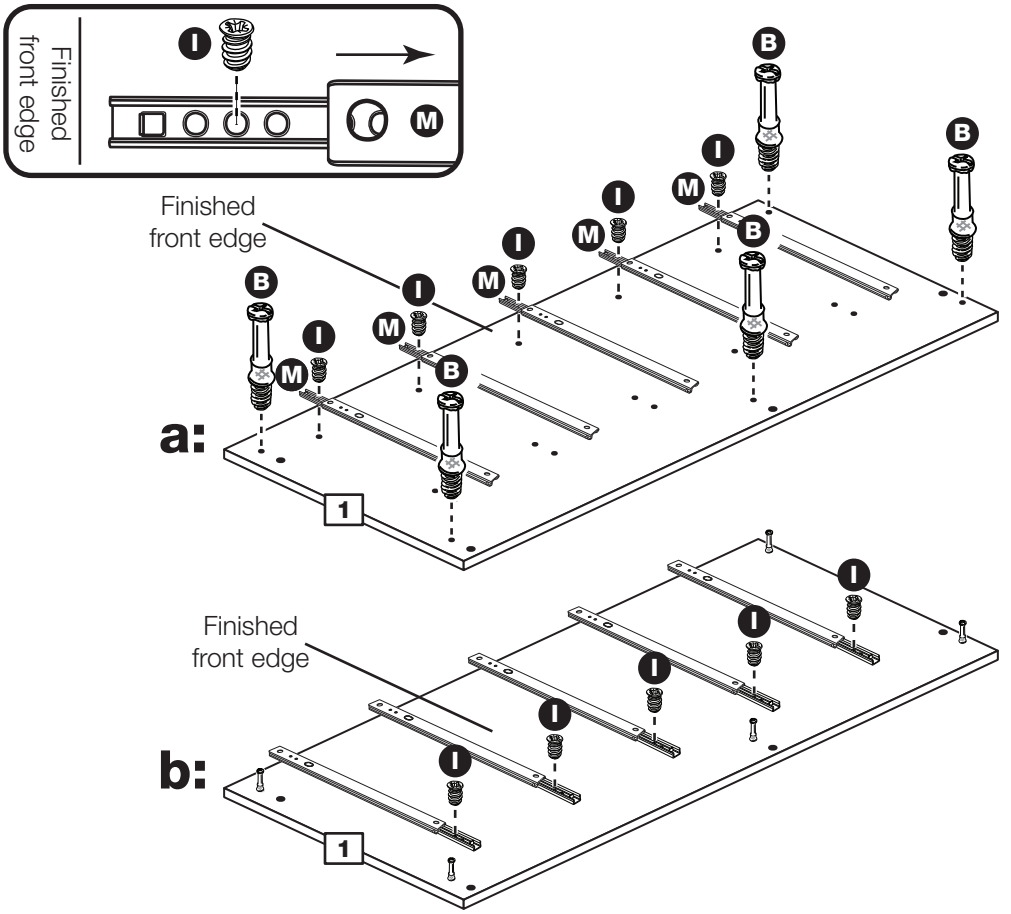


Step 8

Prepare the right side

a: Place 5 runners M on the right side 2. Slide back the top of the runner and use the 2nd hole from the front to fit the 1st screw I.

Screw 5 metal dowels B into the right side 2.

b: Slide the runner M back the other way and fit the 2nd screw I into the corresponding hole in the right side 2.

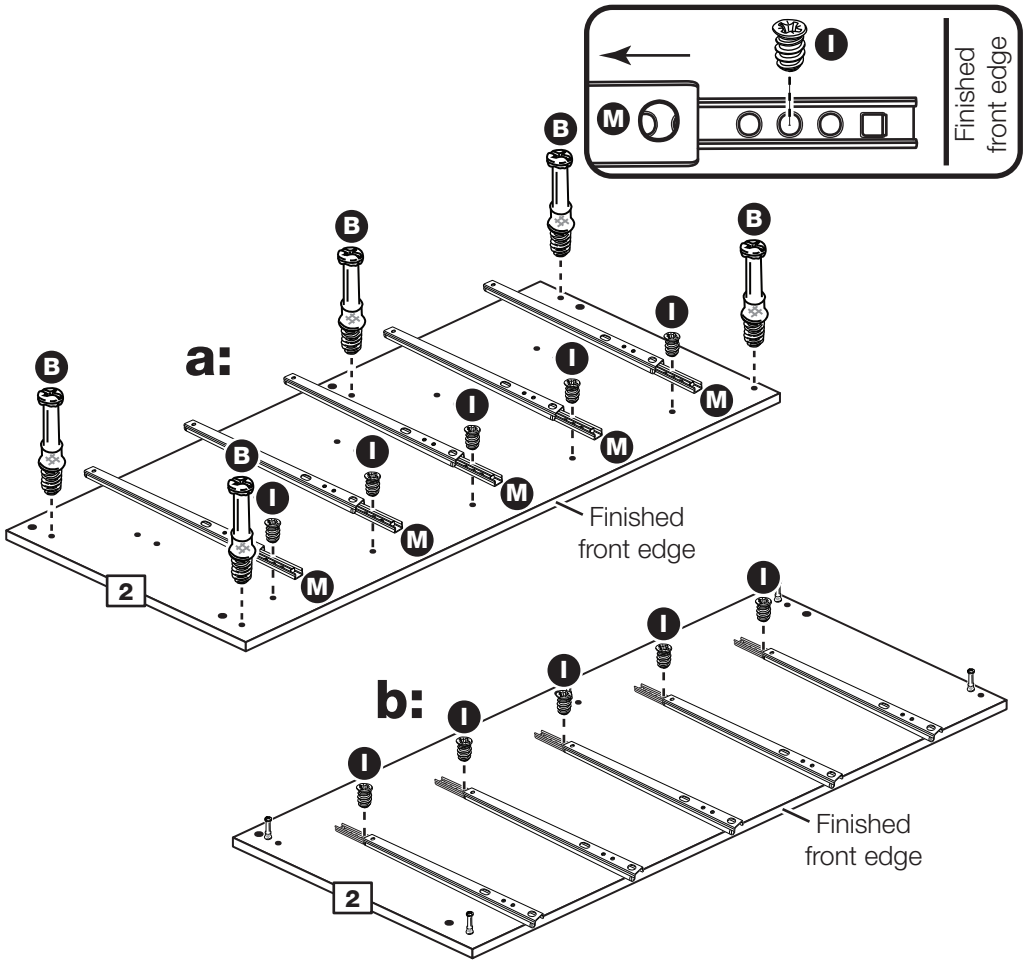

Step 9

Prepare the top


Tap 2 wooden dowels A into the top 3.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 4 large locking nuts D into the top 3.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Fix the bracket K in the middle of the top 3, flush to the back edge using screw G.

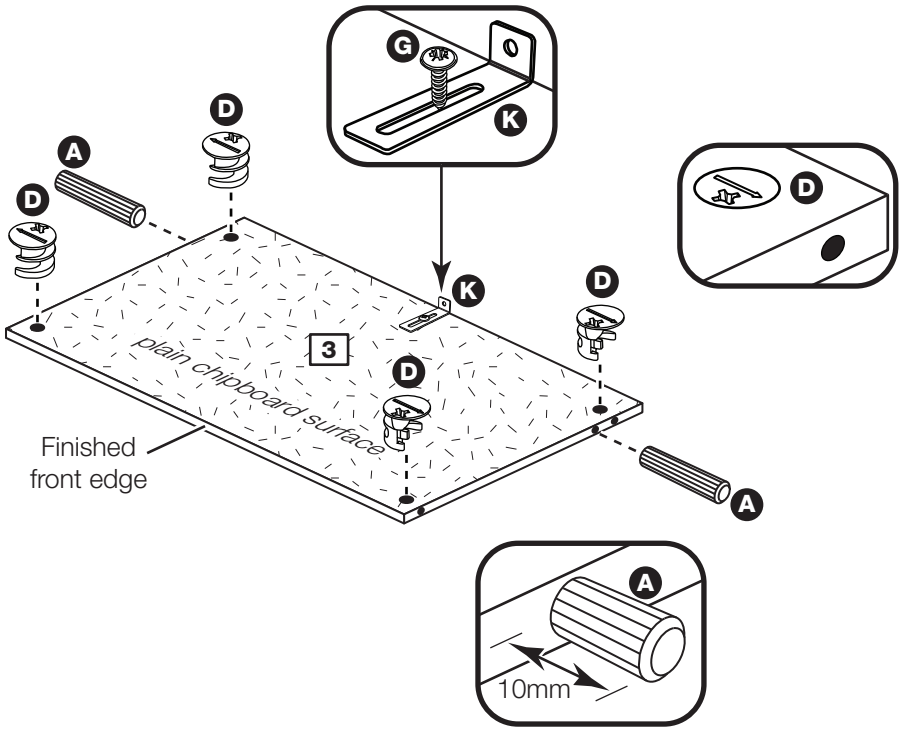


Step 10

Fit the top to the right side

Push the top 3 onto the right side 2.

Use a screwdriver to tighten the 2 large locking nuts D fitted to the top 3.

Note: Turn the large locking nuts D as far as they will go - more than 1/2 a turn.

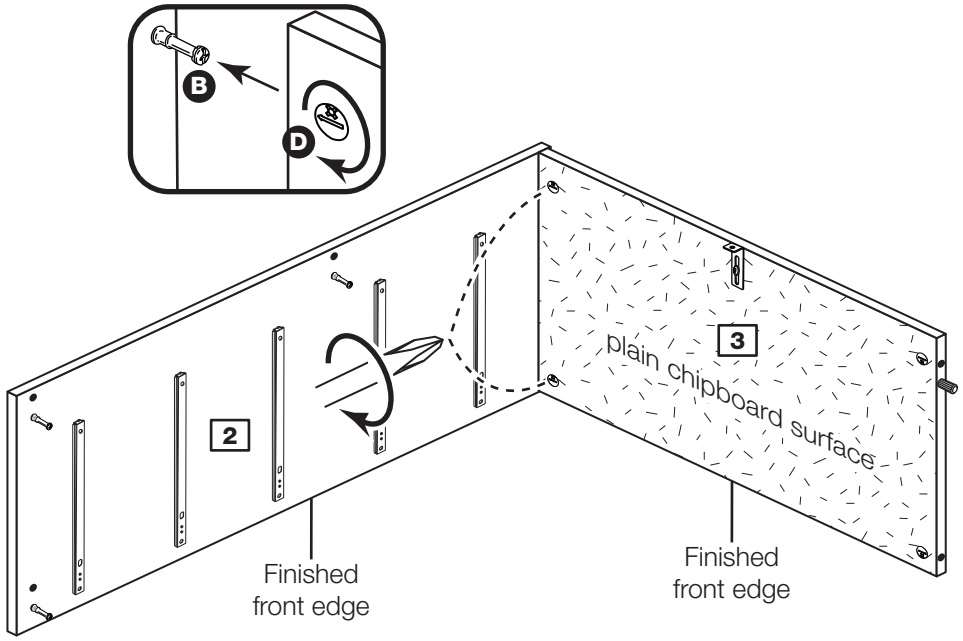


Step 11

Prepare the 3 rails

Tap 2 wooden dowels A into each of the 3 rails 4.

Insert 2 large locking nuts D into each of the 3 rails 4.

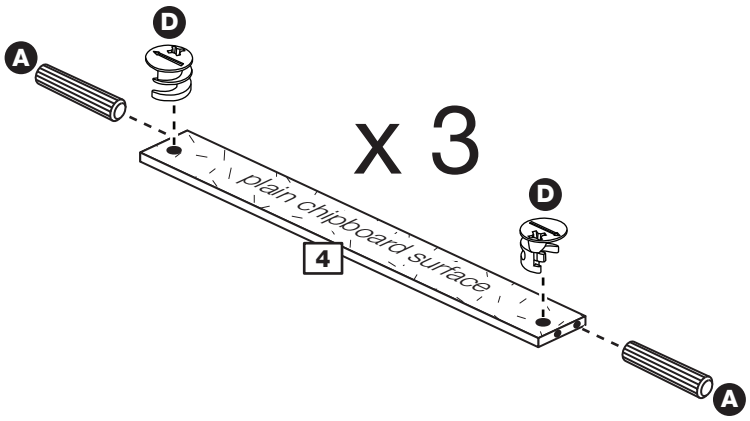


Step 12

Fit the 3 rails

Push the 3 rails 4 onto the right side 2.

Use a screwdriver to tighten the large locking nut D fitted to each of the 3 rails 4.

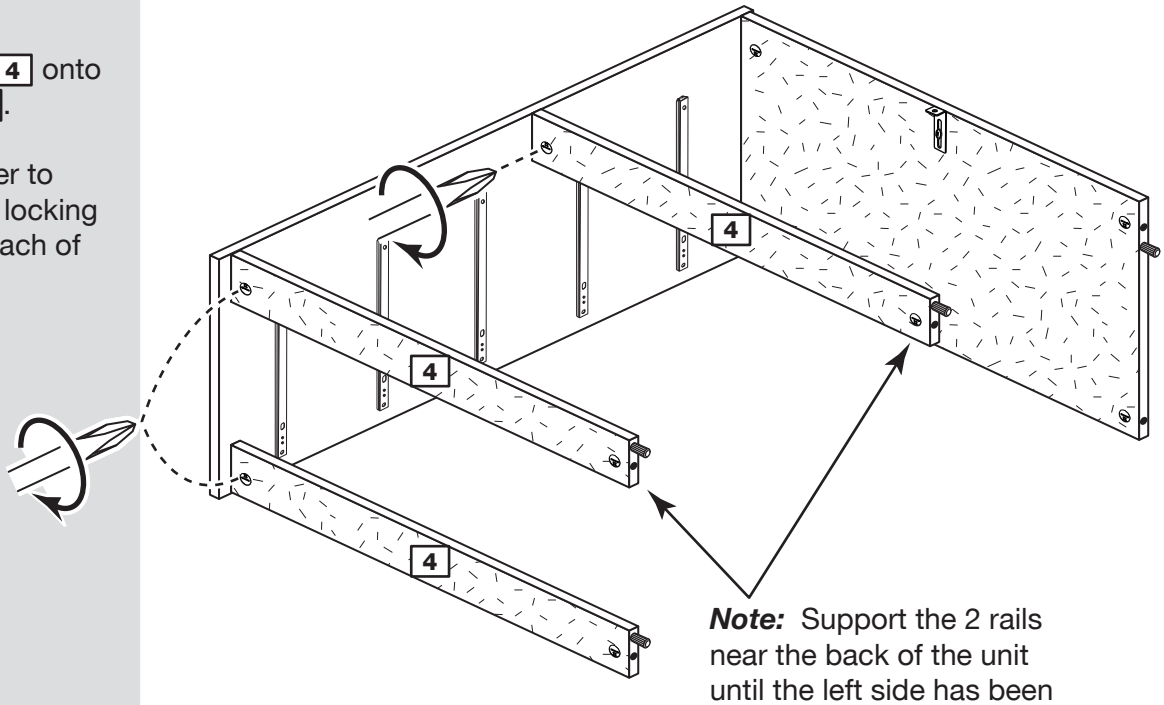


Note: Support the 2 rails near the back of the unit until the left side has been fitted in the next step.

Step 13

Fit the left side

Push the left side 1 onto the assembly.

Use a screwdriver to tighten the 5 large locking nuts D fitted to the top 3 and the 3 rails 4.

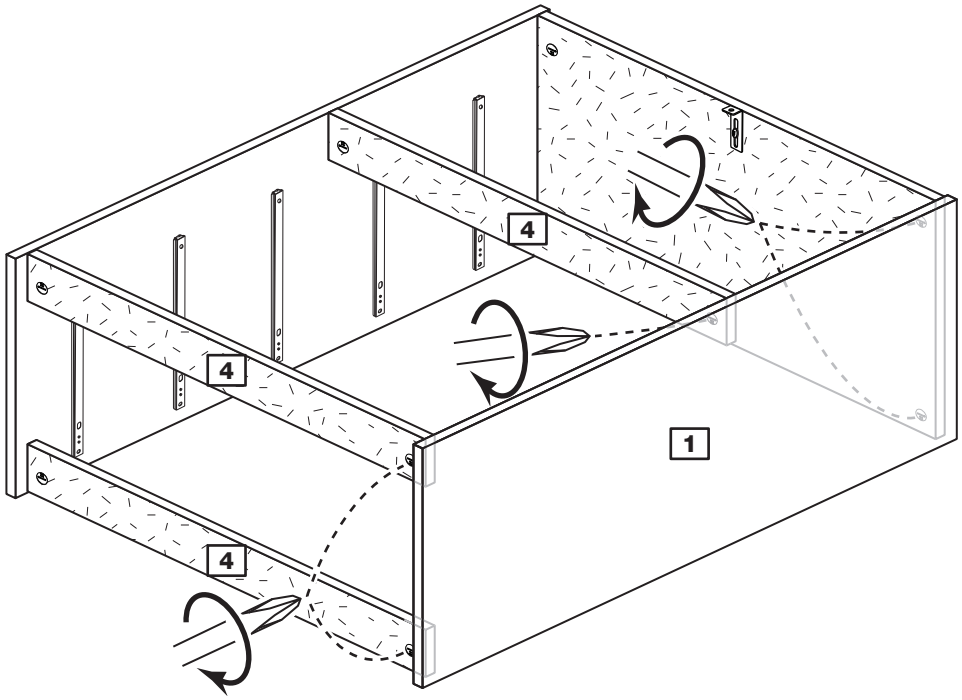

Step 14

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**


b: Place the back 10 onto the unit.

Nail J around the outside edges of the back 10.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

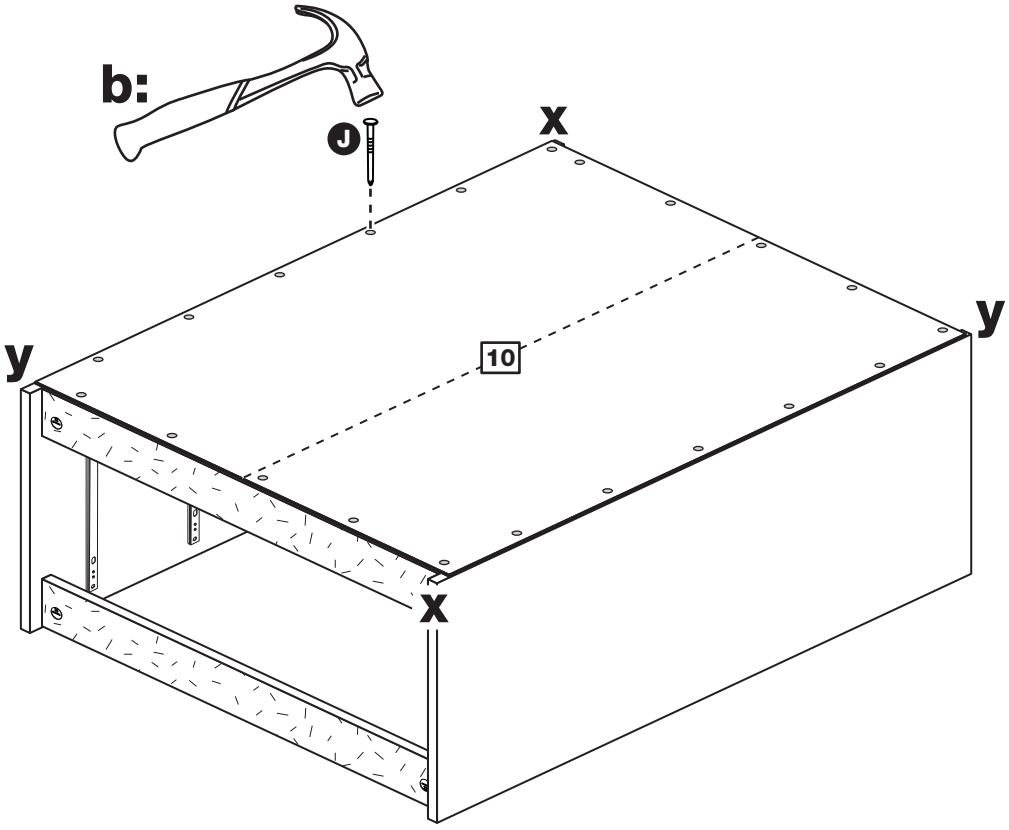

Step 15

Fit the drawers

Starting with the bottom drawer, slide both the runners (M) forward and locate the drawer sides 7 and 8 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners (M).

Working from the inside of the drawer, insert 2 screws (H) through the sides and out into the 2nd threaded hole in the runner.

Note: Do not over-tighten the screws (H). If they catch on the runner you may need to loosen them slightly.

Assembly is complete

