
New Sywell - 3+3 Drawer Chest

Assembly Instructions - Please keep for future reference

147/1676
170/9324
146/9200
161/9940

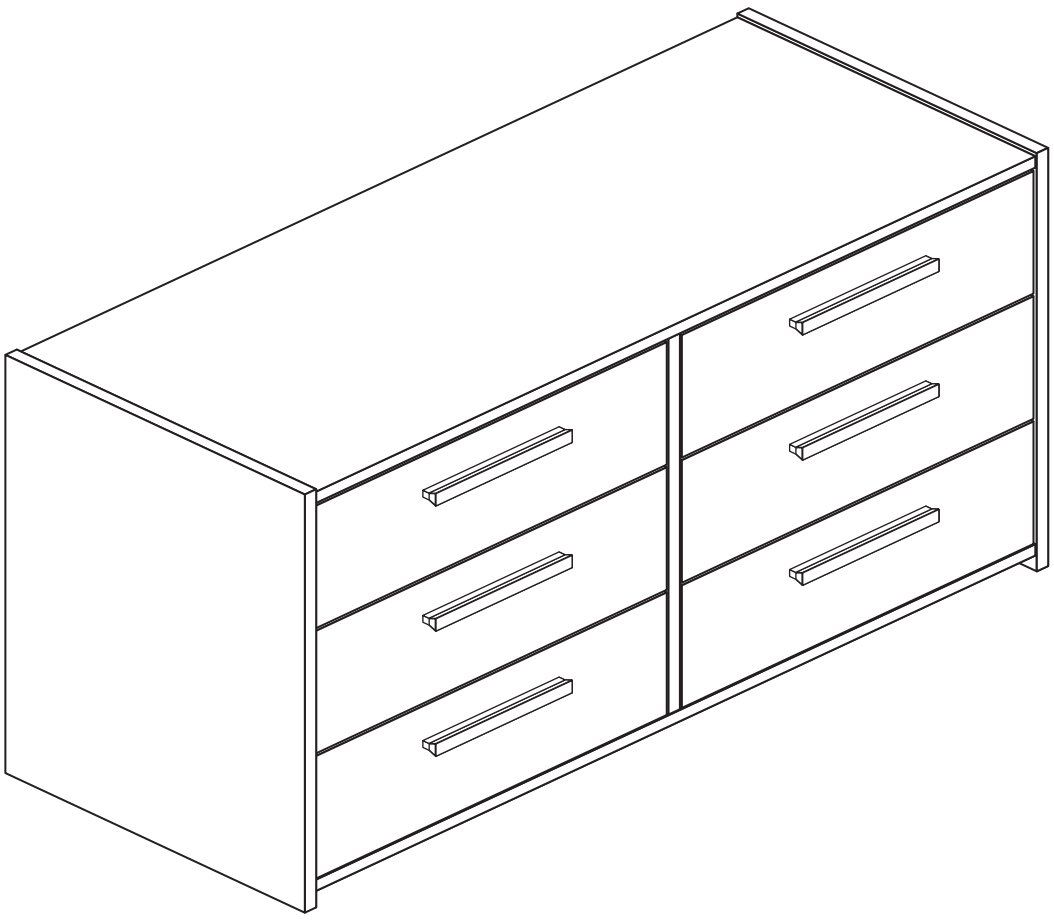

Dimensions

Width - 98.5cm

Depth - 40cm

Height - 55.5cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 21/11/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 27kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

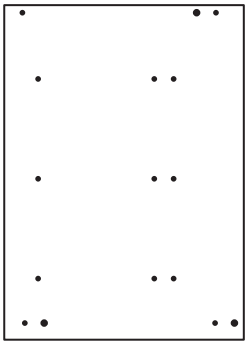


1 Left Side *(D2547A)*
(553 x 396mm)

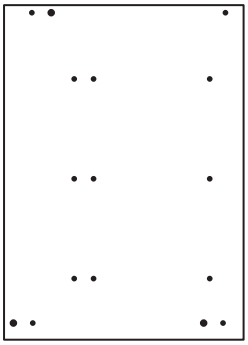


2 Right Side *(D2548A)*
(553 x 396mm)

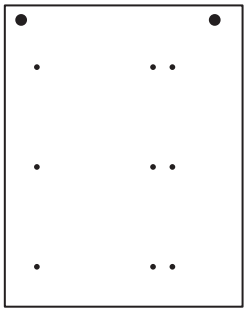


3 Divider *(D2565A)*
(498 x 393mm)




5 Rail *(D2566A)*
(953 x 78mm) x 2

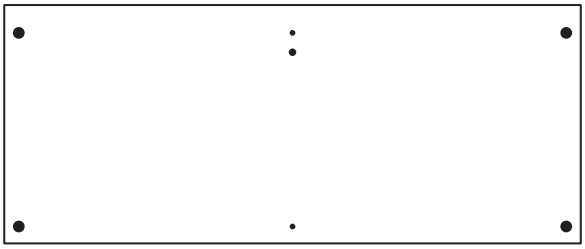


4 Top *(D2564A)*
(953 x 394mm)




6 Drawer Front *(D2567A)*
(465 x 162mm) x 6



7 Left Drawer Side *(W453LH)*
(330 x 95mm) x 6




8 Right Drawer Side *(W453RH)*
(330 x 95mm) x 6



9 Drawer Back *(W436-95)*
(436 x 95mm) x 6



10 Drawer Base *(T447-327)*
(447 x 327mm) x 6

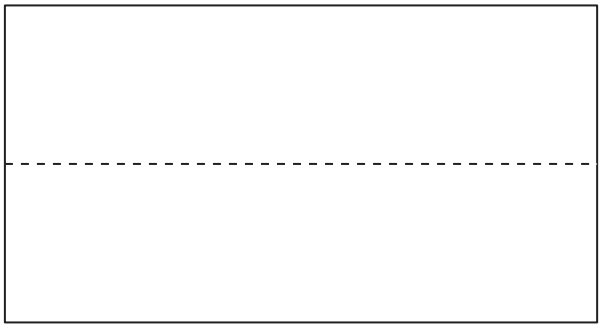


11 Back *(X979-524)*
(979 x 524mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 7

B 

Metal dowel *(F901)* x 22

C 

Knock-in Peg *(F171)* x 24

D 

Large locking nut *(F900)* x 10

E 

Small locking nut *(F3)* x 12

F 

45mm Screw *(F65)* x 2

G 


25mm Screw *(F95)* x 12

H 


9mm Screw *(F74)* x 12

I 


9mm Screw (*F73)* x 24

J 

Nail *(F51)* x 20

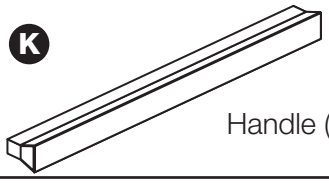K 

Handle (*F315)* x 6

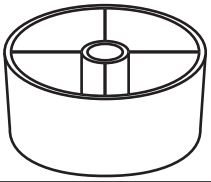
L 

Feet *(F854)* x 2

M 

Drawer runner *(F1004)* x12

Tools required

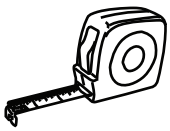


Rule



Cross-head screwdriver



Scissors



Hammer




Eye protection (when using a hammer or drill)



Electric drill (do not use for fitting screws)

Ruler - Use this ruler to help correctly identify the screws

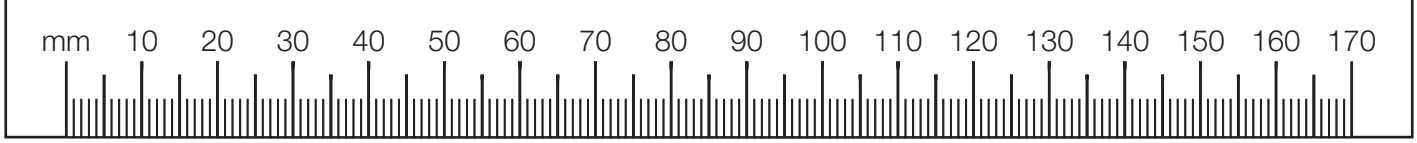

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Step 1

Prepare the 6 drawer fronts

Screw 2 metal dowels B into the holes shown on the back of each drawer front 6.

Note: Tighten the metal dowels up fully against the panels.

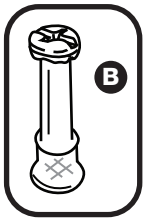

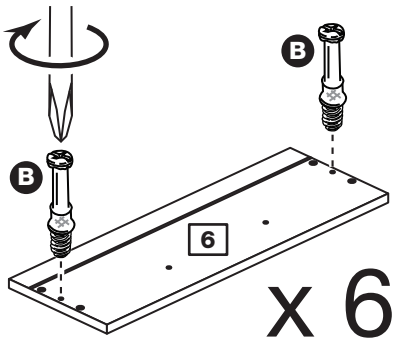


Step 2


Prepare the drawer sides


Insert a small locking nut E into the hole shown on the left drawer side 7 and right drawer side 8.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

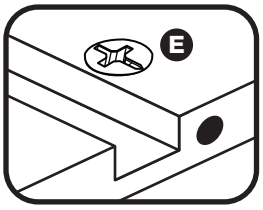

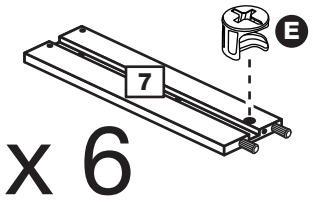

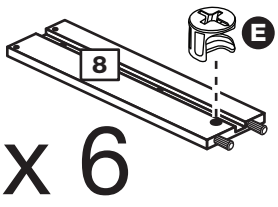


Step 3


Attach the drawer sides to the drawer front

Push the left drawer side 7 and right drawer side 8 onto the back of the drawer front 6.

Turn the small locking nuts E on the left drawer side 7 and right drawer side 8.

Note: Turn the locking nuts E clockwise to secure panels - more than 1/2 a turn.

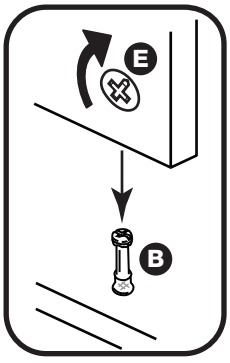

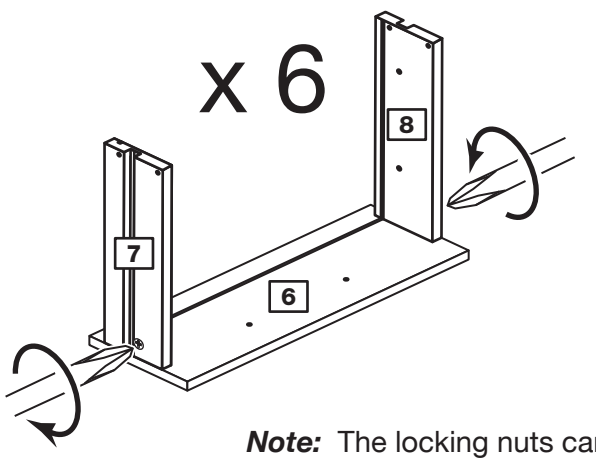


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

Step 4

Fit the drawer base

Slide the drawer base 10 down the grooves in the drawer sides 7 and 8 and down into the groove in the drawer front 6.

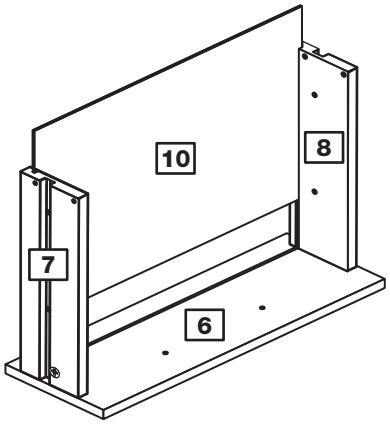

x 6


Step 5

Fit the drawer back

Fit the drawer back 9 down onto the drawer base 10.

Make sure that the drawer base 10 fits into the groove in the drawer back 9.

Hold the drawer back 9 in position and tap the knock-in pegs C through the holes in the drawer sides 7 and 8.

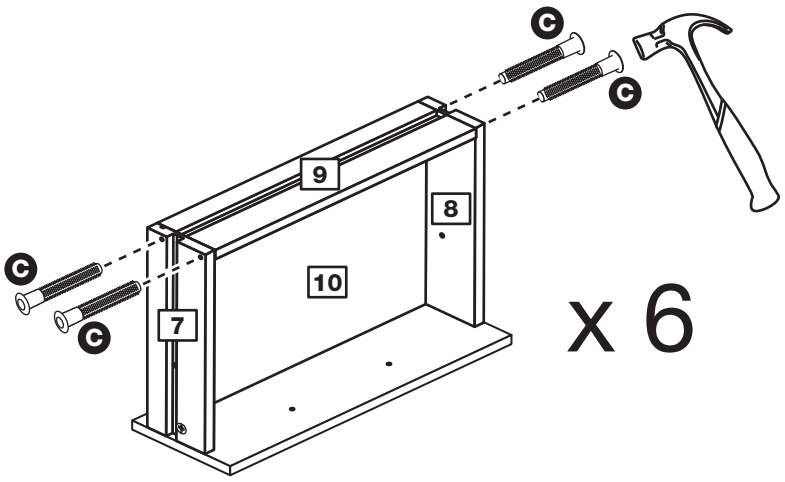


x 6

Step 6

Attach the handles

Attach a handle K to each drawer front 6 using 2 screws G.

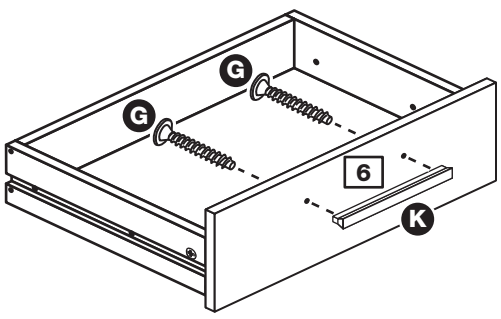

x 6

Assembly Instructions


Step 7


Prepare the left side


a: Place 3 runners M on the left side 1. Slide back the top of the runner and use the 2nd hole from the front to fit the 1st screw I.

Screw 4 metal dowels B into the left side 1.

b: Slide the runner M back the other way and fit the 2nd screw I into the corresponding hole in the left side 1.

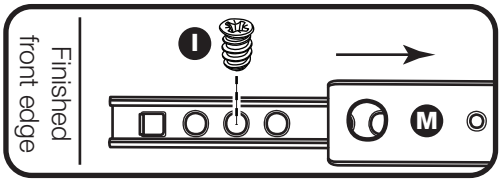

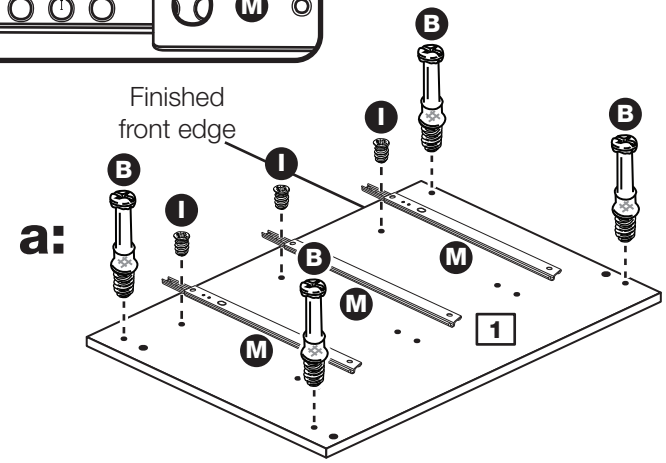

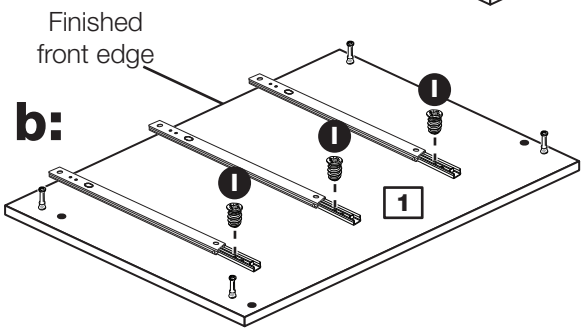


Step 8


Prepare the right side


a: Place 3 runners M on the right side 2. Slide back the top of the runner and use the 2nd hole from the front to fit the 1st screw I.

Screw 4 metal dowels B into the right side 2.

b: Slide the runner M back the other way and fit the 2nd screw I into the corresponding hole in the right side 2.

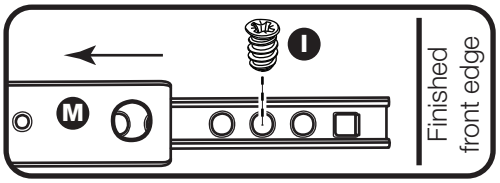

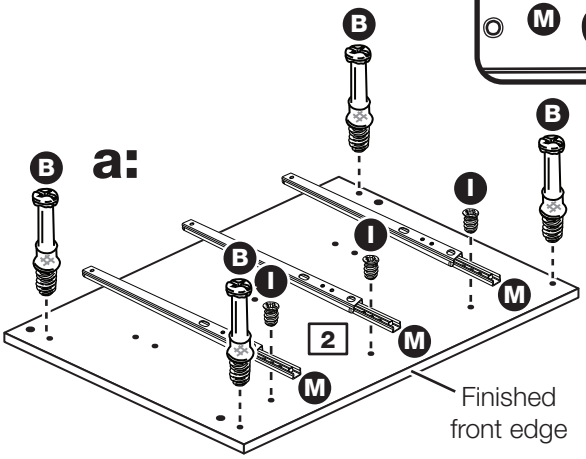

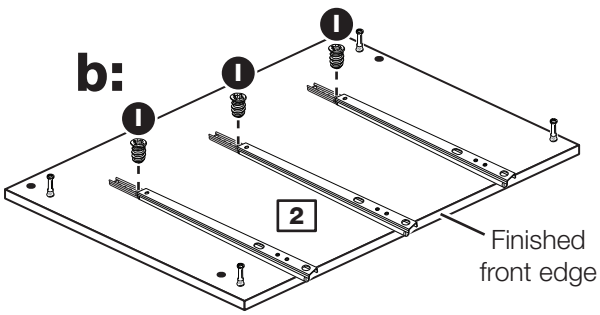

Step 9

Prepare the top


Tap 2 wooden dowels **A** into the top **4**.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 4 large locking nuts **D** into the top **4**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Screw 2 metal dowels **B** into the top **4**.

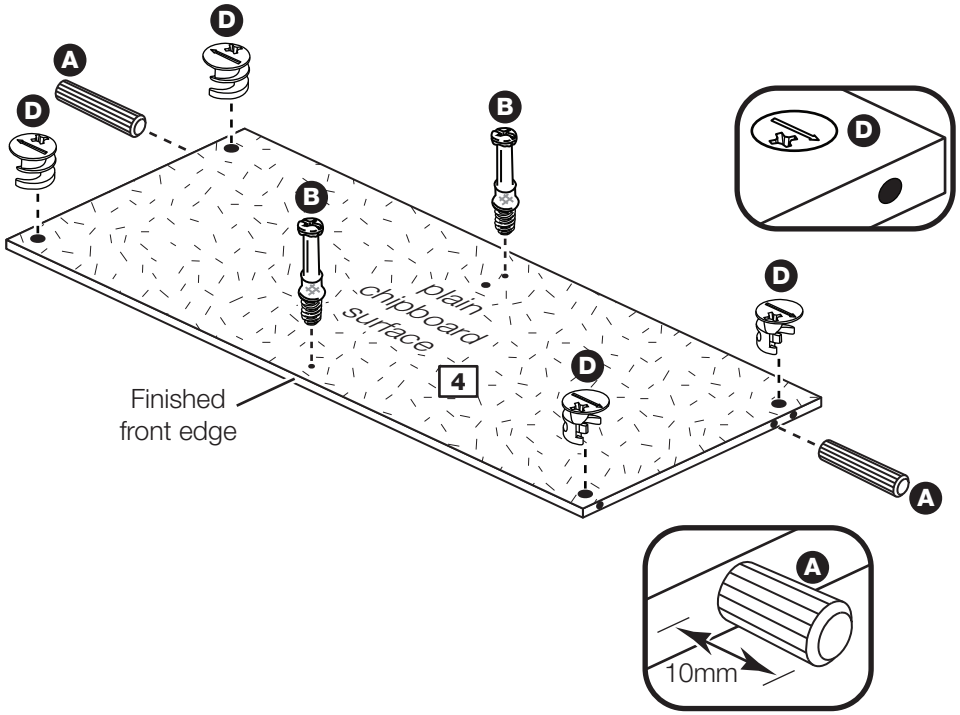


Step 10

Fit the top to the right side

Push the top **4** onto the right side **2**.

Use a screwdriver to tighten the 2 large locking nuts **D** fitted to the top **4**.

Note: Turn the large locking nuts **D** as far as they will go - more than 1/2 a turn.

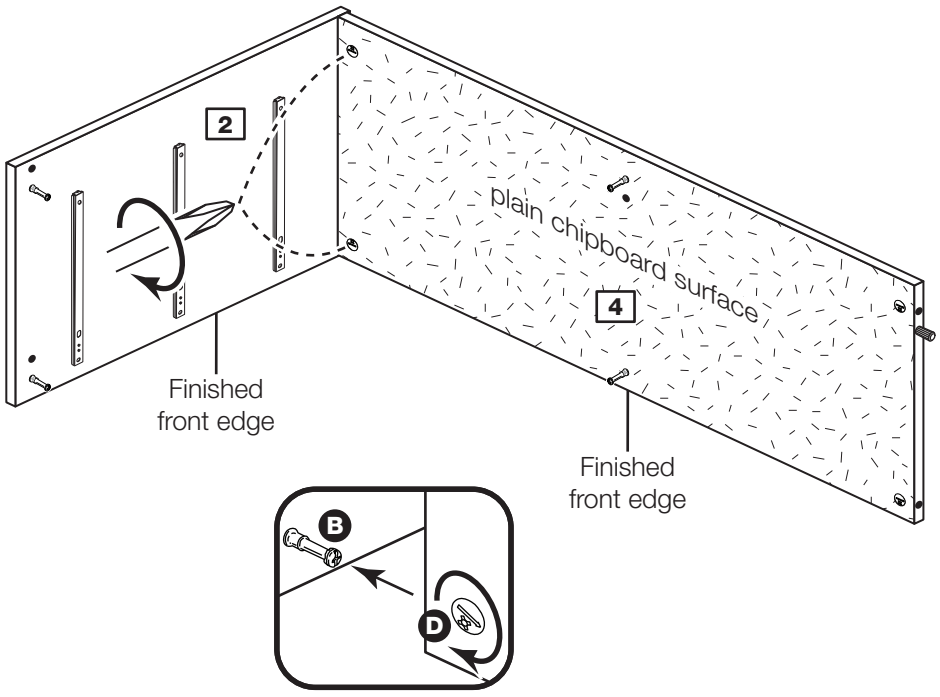

Step 11

Prepare the divider

a: Place 3 runners M on the divider 3. Slide back the top of the runner and use the 2nd hole from the front to fit the 1st screw I.


Insert 2 large locking nuts D into the divider 3.


b: Slide the runner M back the other way and fit the 2nd screw I into the corresponding hole in the divider 3.


Turn the divider over

c: Place 3 runners M on the divider 3. Slide back the top of the runner and use the 2nd hole from the front to fit the 1st screw I.


d: Slide the runner M back the other way and fit the 2nd screw I into the corresponding hole in the divider 3.

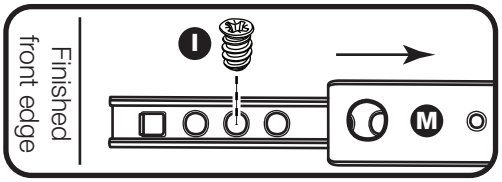


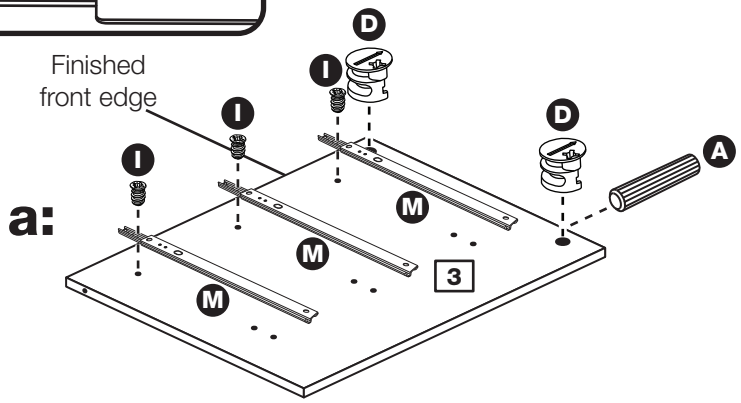


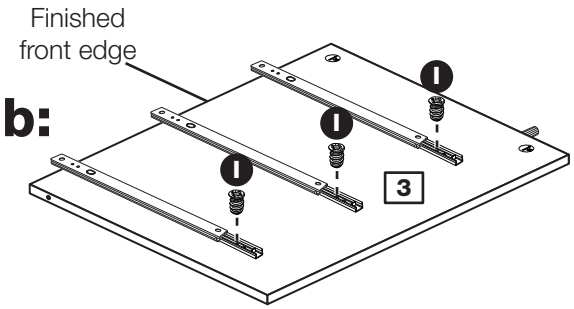



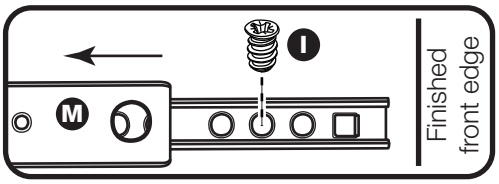

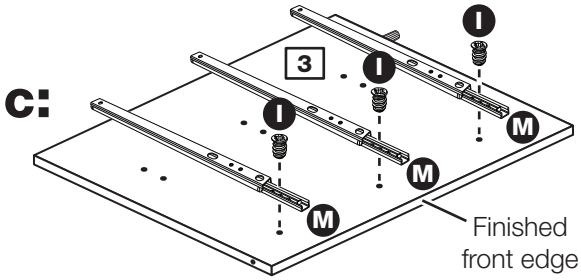

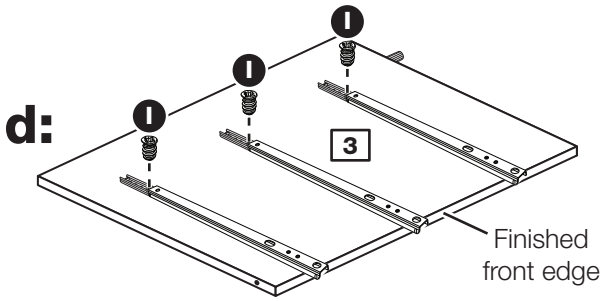


Step 12

Fit the divider

Push the divider [3] onto the top [4].

Use a screwdriver to tighten the 2 large locking nuts (D) fitted to the divider [3].

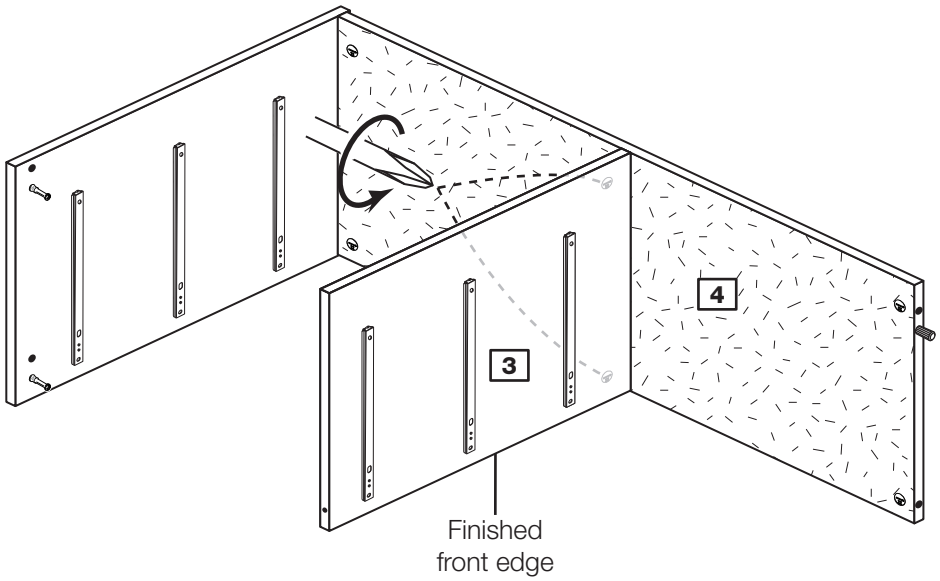


Step 13

Prepare the 2 rails

Tap 2 wooden dowels (A) into each of the 2 rails [5].

Insert 2 large locking nuts (D) into each of the 2 rails [5].

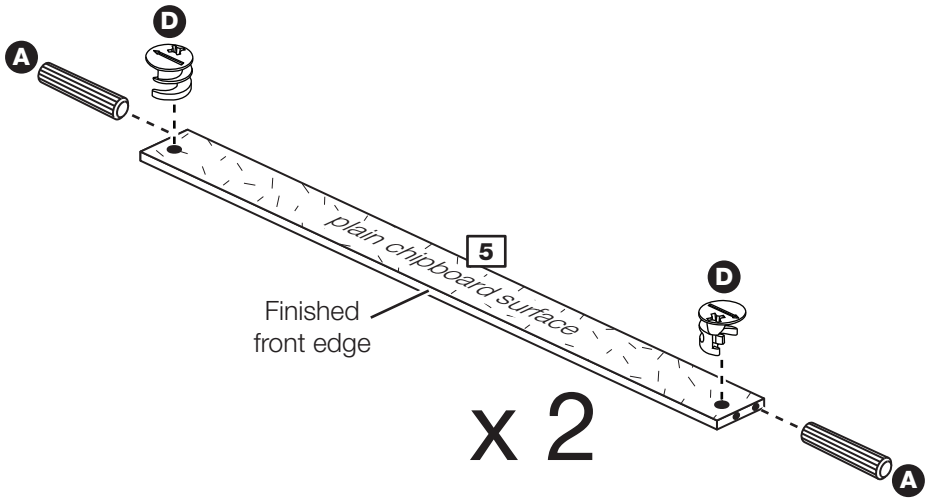


Step 14

Fit the rails

Push the 2 rails [5] onto the right side [2].

Use a screwdriver to tighten the 2 large locking nuts (D) fitted to the rails [5].

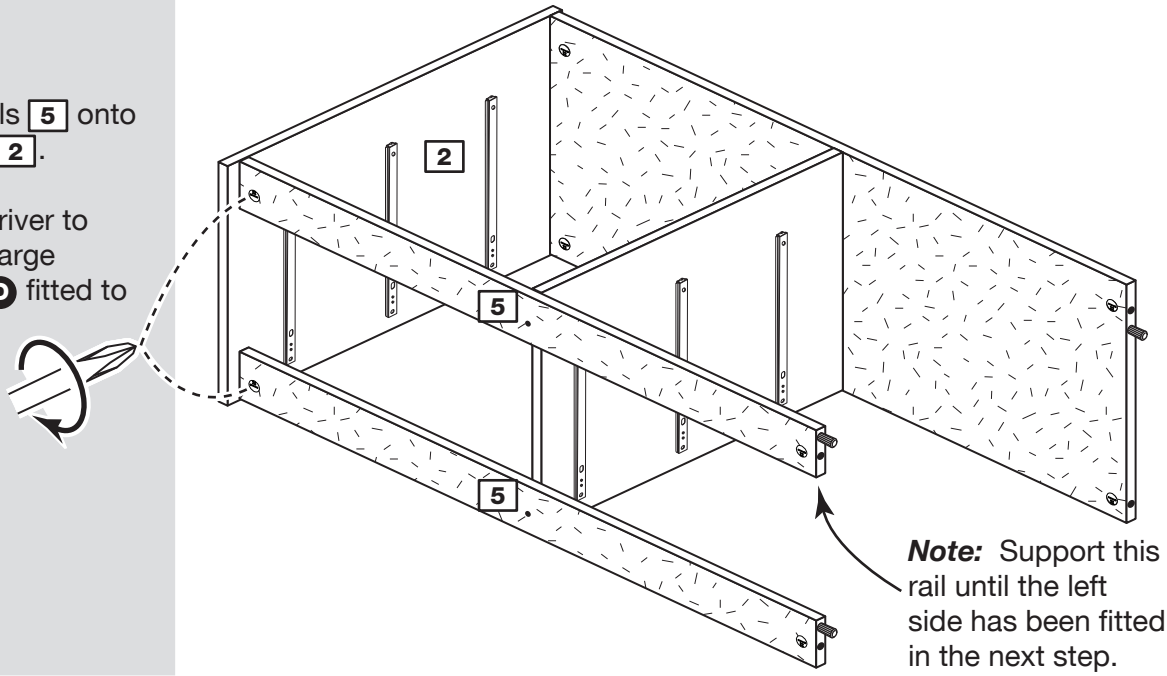


Note: Support this rail until the left side has been fitted in the next step.

Step 15

Fit the left side

Push the left side 1 onto the assembly.


Use a screwdriver to tighten the 4 large locking nuts D fitted to the top 4 and rails 5.

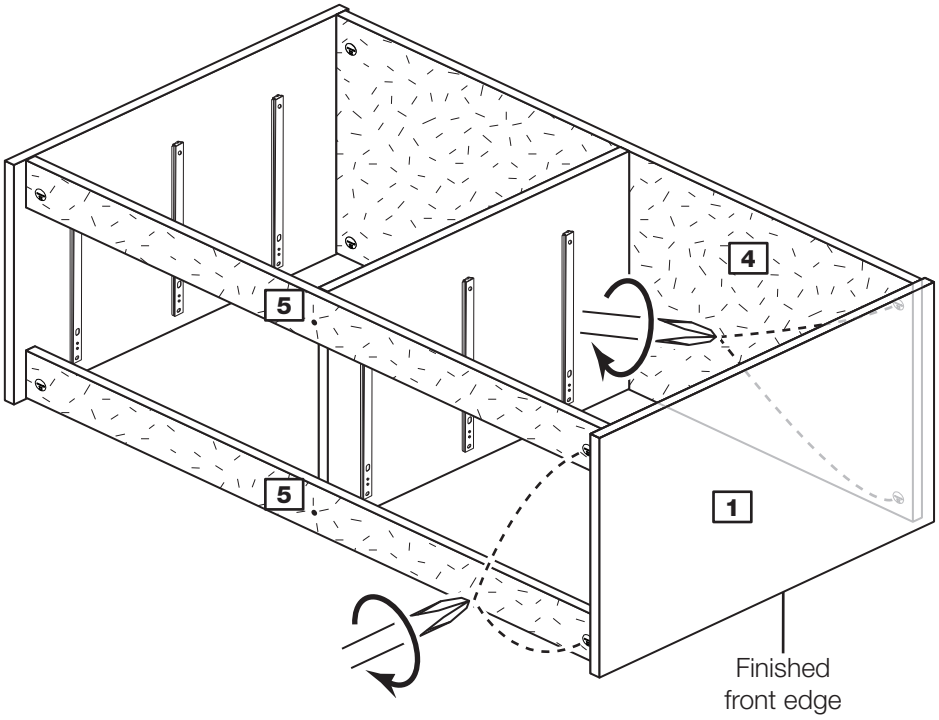

Step 16

Fit the feet

Screw the feet L onto the rails 5 and on into the bottom edge of the upright 3 using screws F.

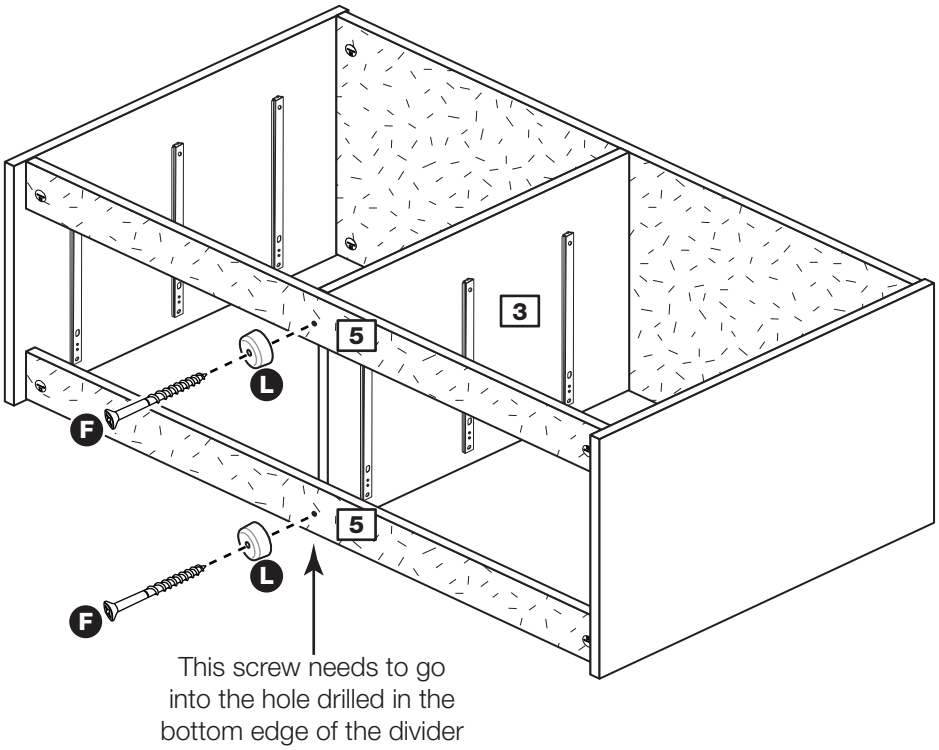

Step 17

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 11 onto the unit.


Nail J around the outside edges of the back 11.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

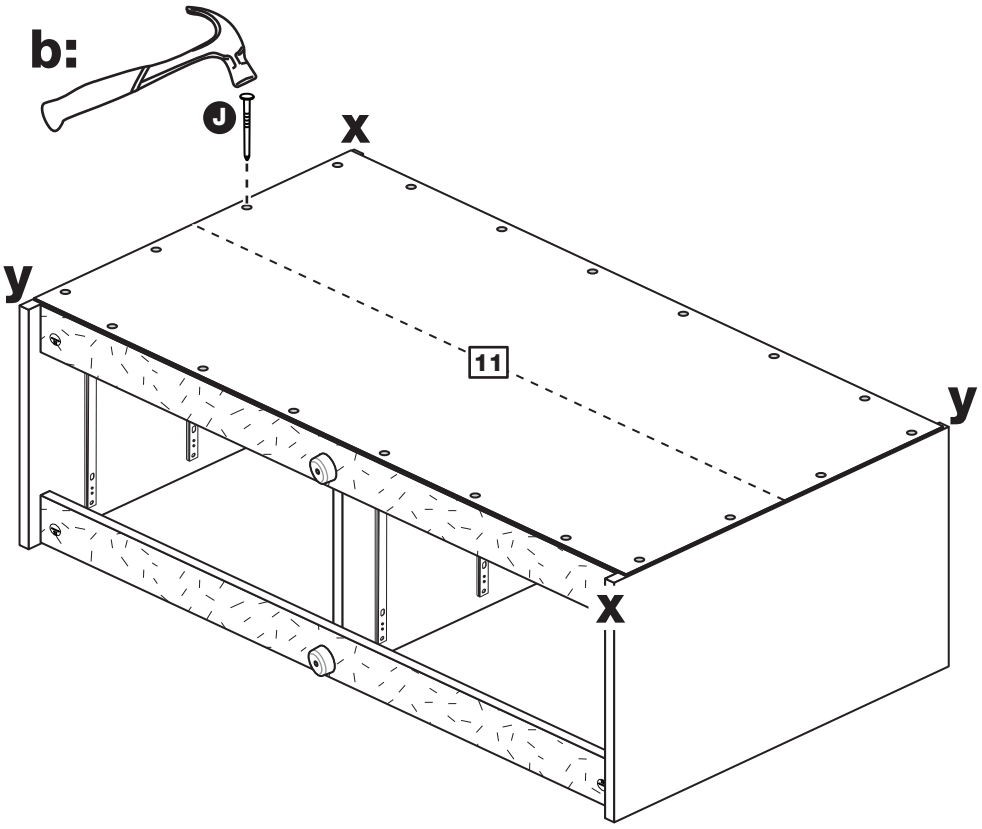


Step 18

Fit the drawers

Starting with the bottom drawers, slide both the runners M forward and locate the drawer sides 7 and 8 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners M.

Working from the inside of the drawer, insert 2 screws H through the sides and out into the 2nd threaded hole in the runner.

Assembly is complete

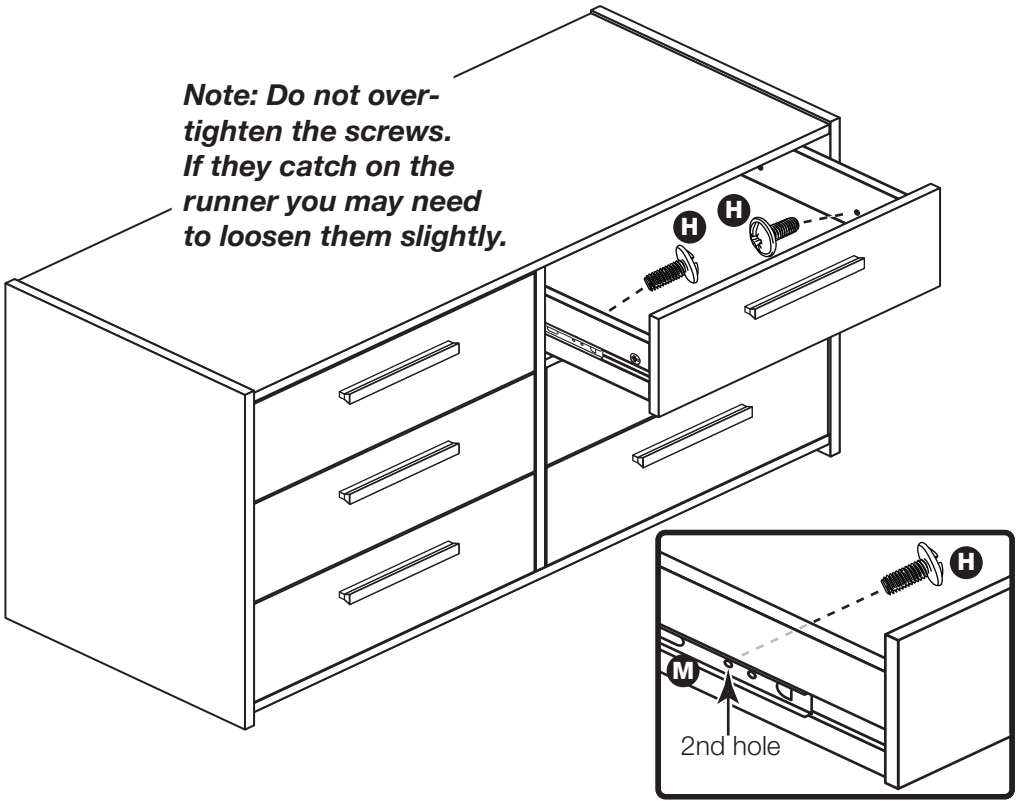

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW