
Long Drawer - White

Assembly Instructions - Please keep for future reference

1911215

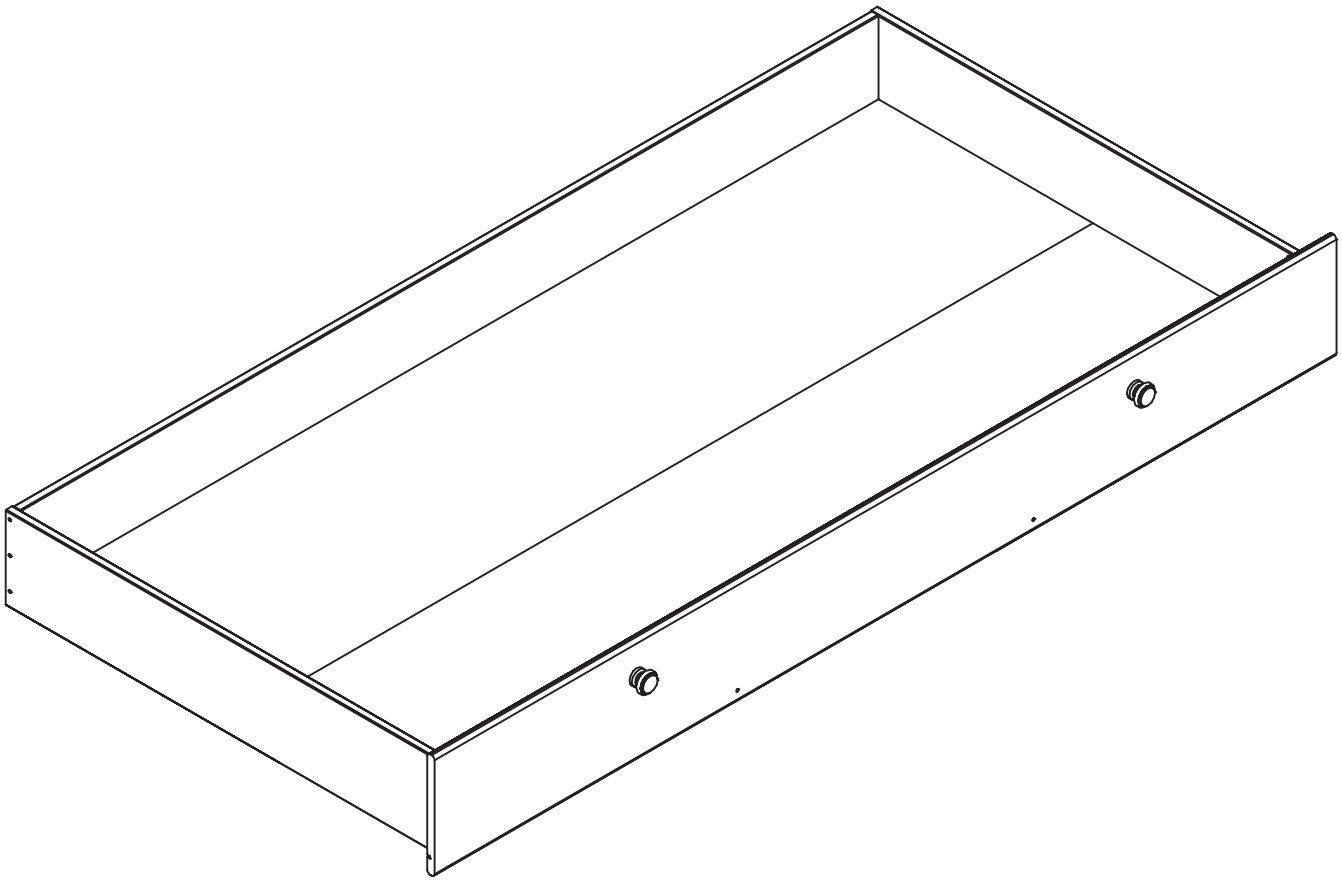

Dimensions

Length - 186cm
Depth - 91cm
Height - 21.5cm
Weight - 15kg

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
0045 7668 8055 or e-mail: order@flexa.dk

Issue 1 - 15/05/14

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 0045 7668 8055**


Please check you have all the parts listed below

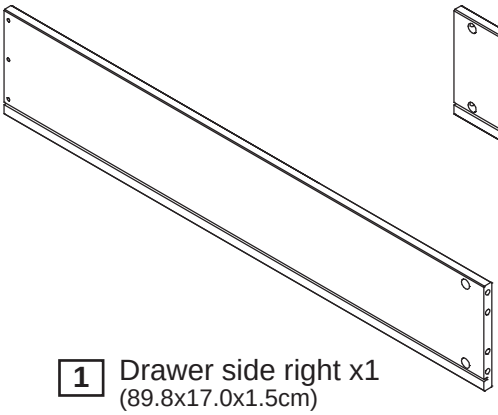


1 Drawer side right x1
(89.8x17.0x1.5cm)
No. 15-01508981-20

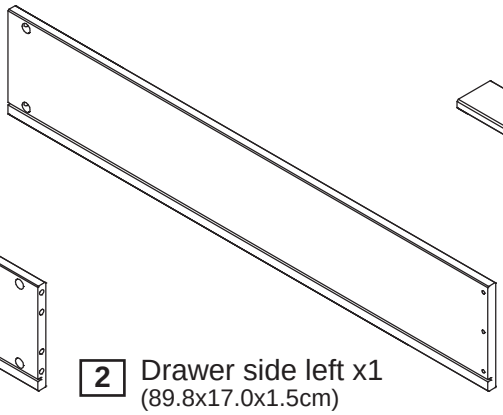


2 Drawer side left x1
(89.8x17.0x1.5cm)
No. 15-01508982-20

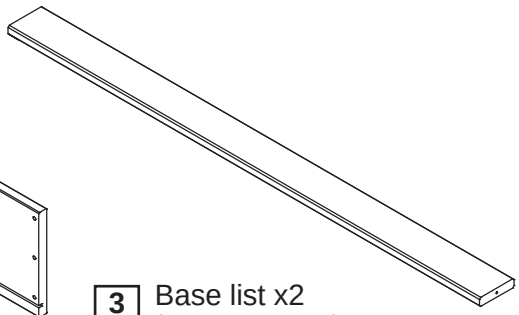


3 Base list x2
(88.2x6.5x1.5cm)
No. 12-01508821

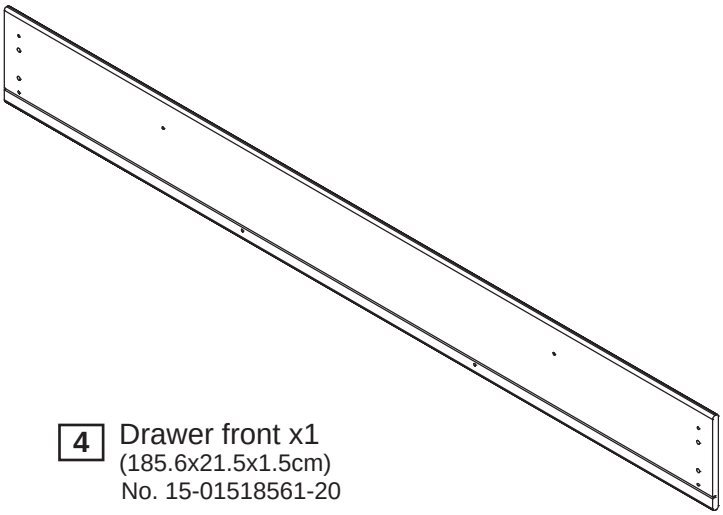

4 Drawer front x1
(185.6x21.5x1.5cm)
No. 15-01518561-20

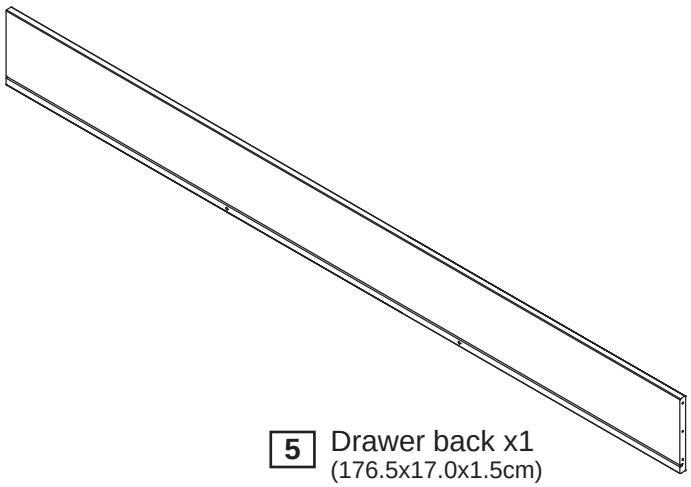

5 Drawer back x1
(176.5x17.0x1.5cm)
No. 12-01517651-20






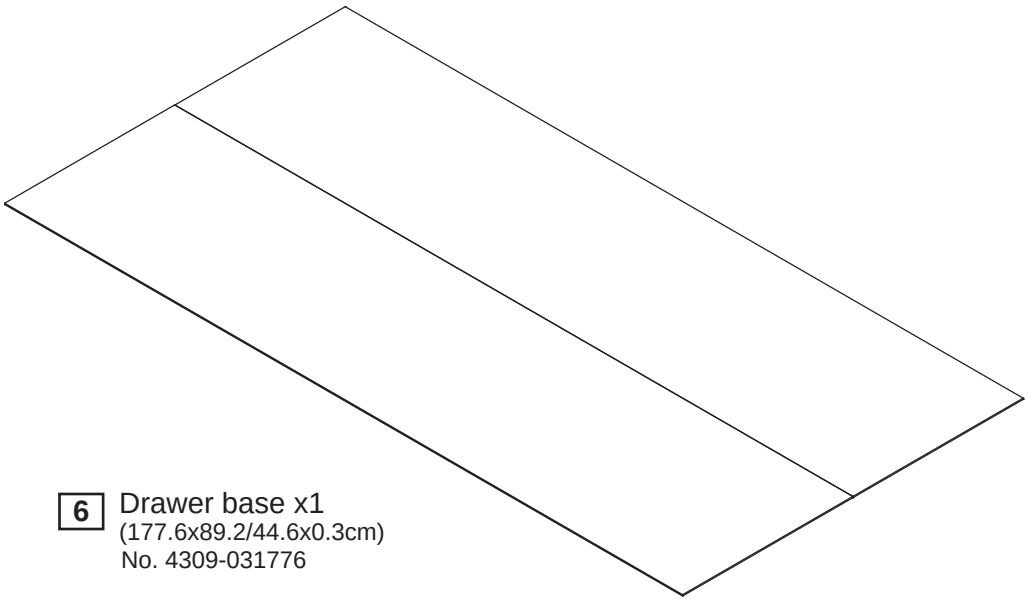


6 Drawer base x1
(177.6x89.2/44.6x0.3cm)
No. 4309-031776

Components - Fittings


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

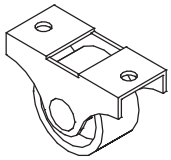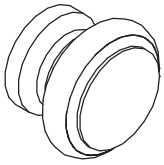
No. 3901-40040 **A**  4,0x40mm Chipboard screw x12	No. 3902-35015 **B**  3,5x15mm Chipboard screw x8	No. 3903-40045 **C**  4,0x45mm Chipboard screw x2
No. 3930-08030 **D**  8x30mm Dowel x4	No. 3933-15010 **E**  Ø15x9,5mm Minifix cam x4	No. 3940-000241 **F**  Ø15/Ø6x24mm Spacer x2
No. 4020-005 **G**  Ø7x34mm Minifix bolt x4	No. 4003-002 **H**  Ø26x28,5mm Castor x4	No. 4001-022-20 **I**  Ø40x30mm Knob x2


Tools required

Phillips screwdriver (medium)




Flatblade screwdriver (medium)




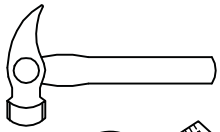

Small hammer

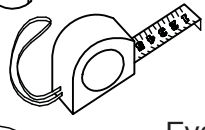

Ruler/tape measure

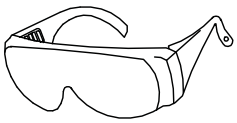


Eye protection (when using a hammer or glue)

Assembly Instructions

Step 1


Attach dowels D to the drawer sides 1 and 2. It may be necessary to tap the dowels in very gently with small hammer.

Attach minifix bolts G to the drawer front 4.

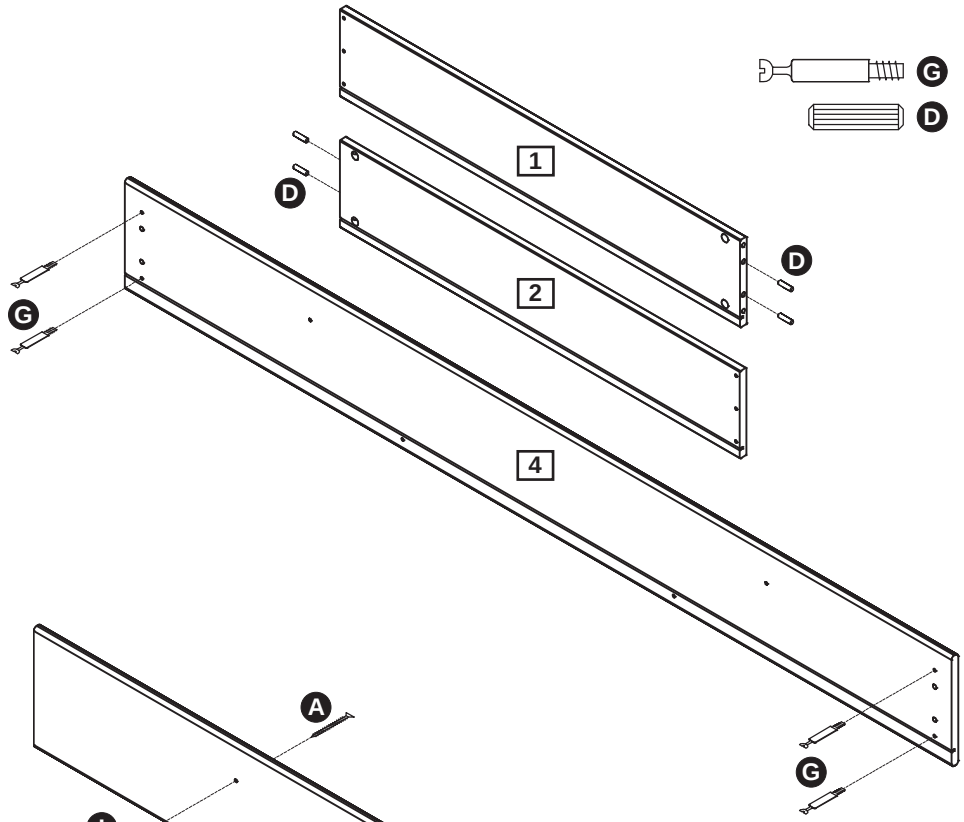


Step 2

drawer front 4 with screws A.

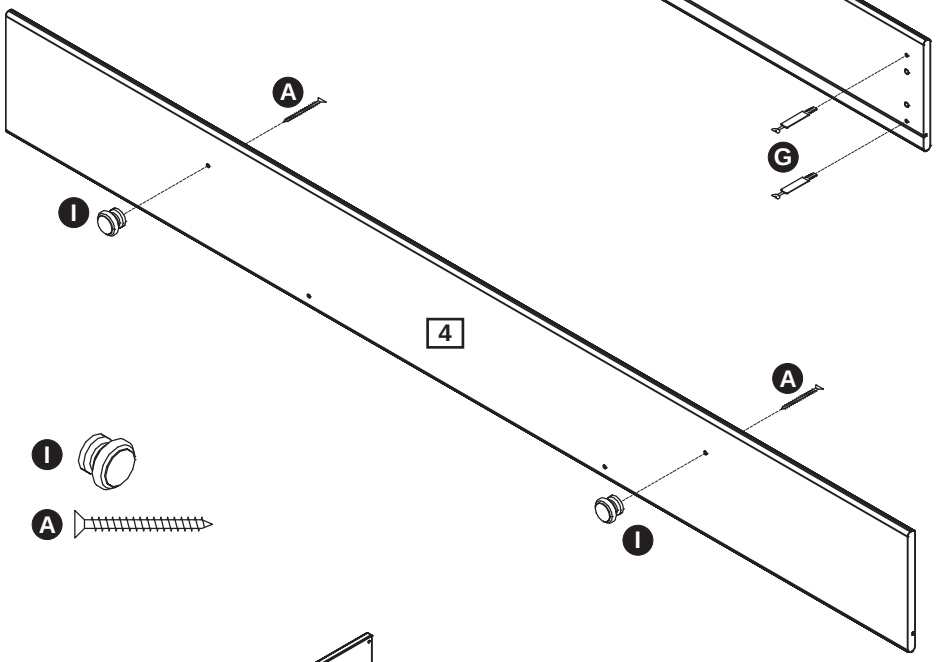

Step 3


1 and 2 to the drawer front 4 with the minifix cams E.

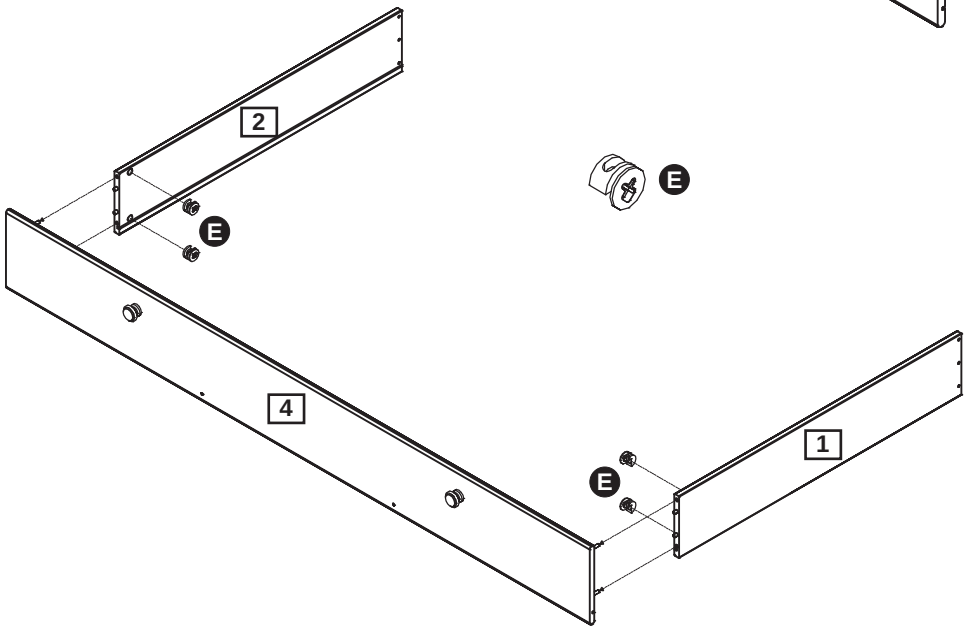

Assembly Instructions


Step 4

Push the drawer base 6 carefully into the grooves of drawer sides 1 and 2 so that it is placed into the groove on the drawer front 4.

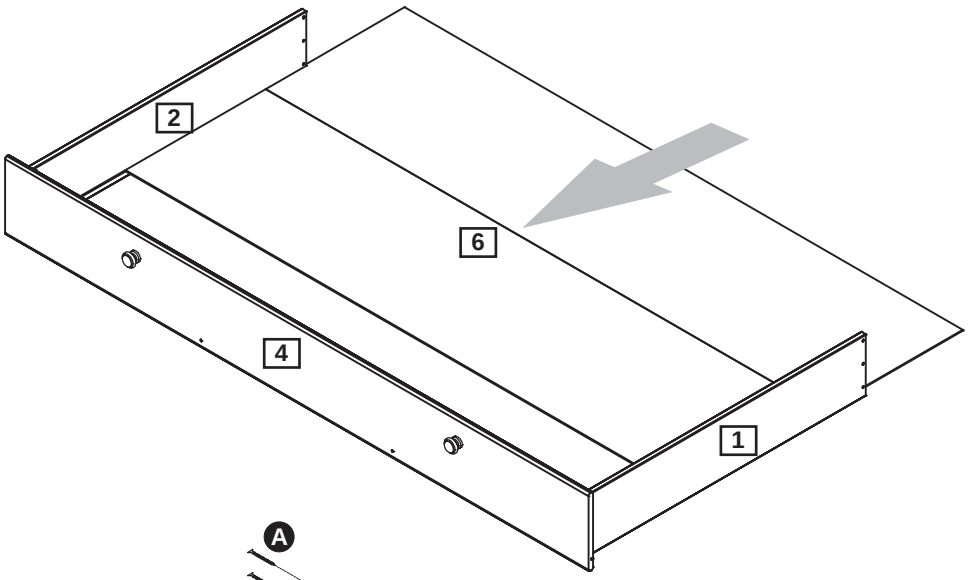

Step 5


Attach the drawer back 5 to the drawer sides 1 and 2 with the screws A.

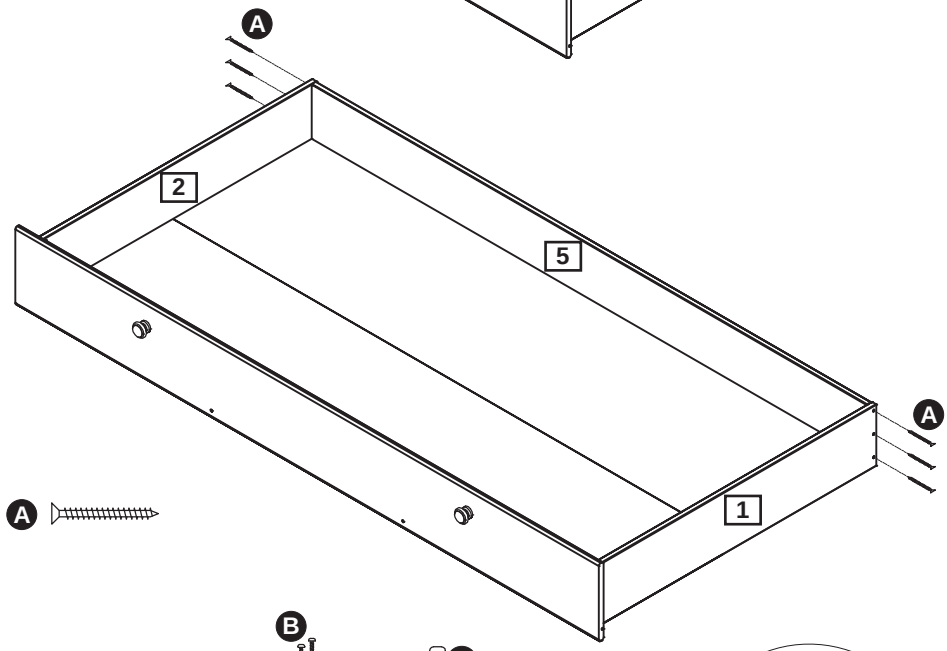

Step 6

Turn the drawer so that bottom side is up. Attach base lists 3 to the drawer front 4 and to the drawer back 5 with screws A.


Attach the castors H to the drawer sides 1 and 2 with screws B. Follow the measurements.

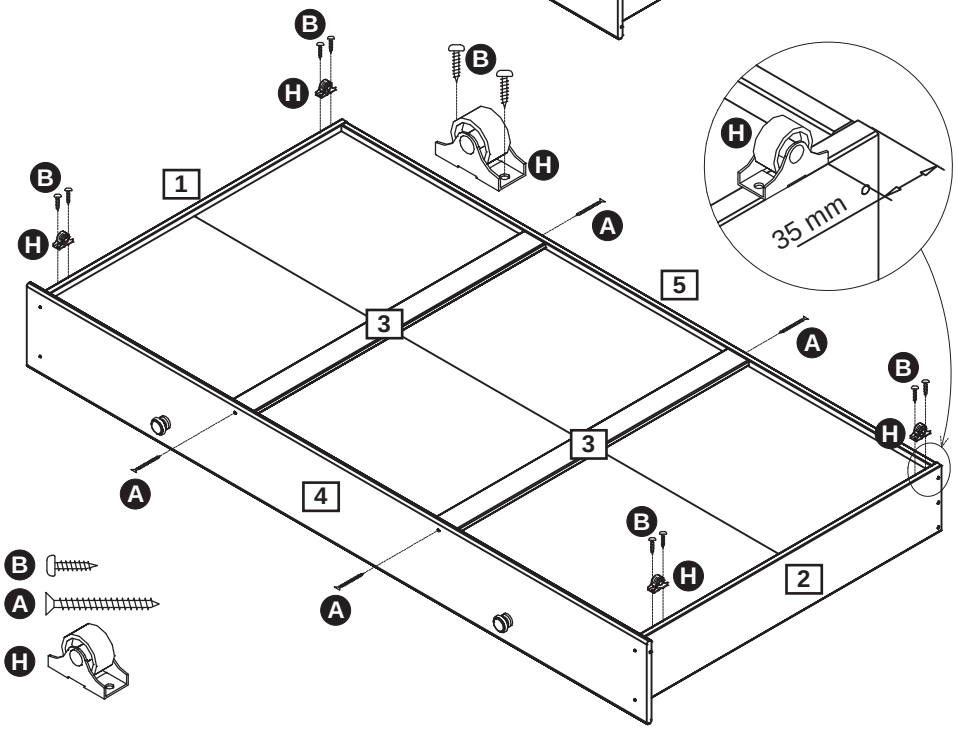


Assembly Instructions

Step 7

Attach spacers F to the front legs of your bed with screws C.
Follow the measurements.

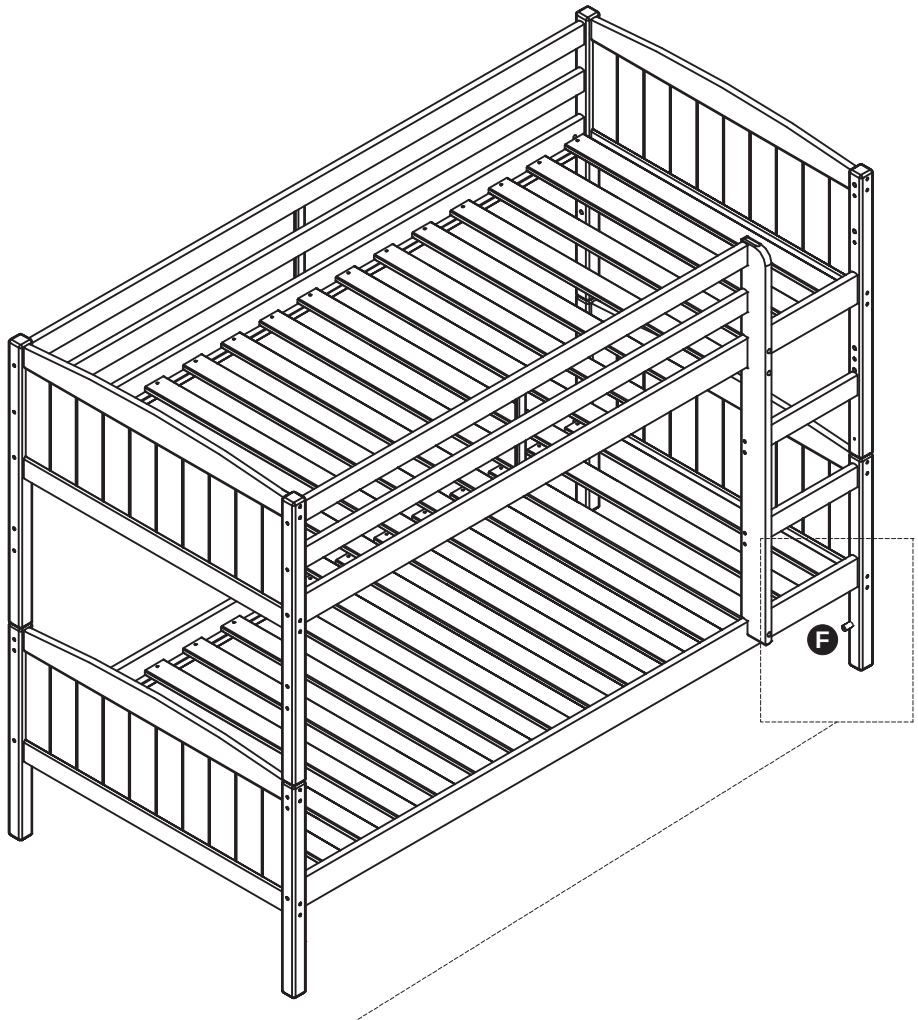

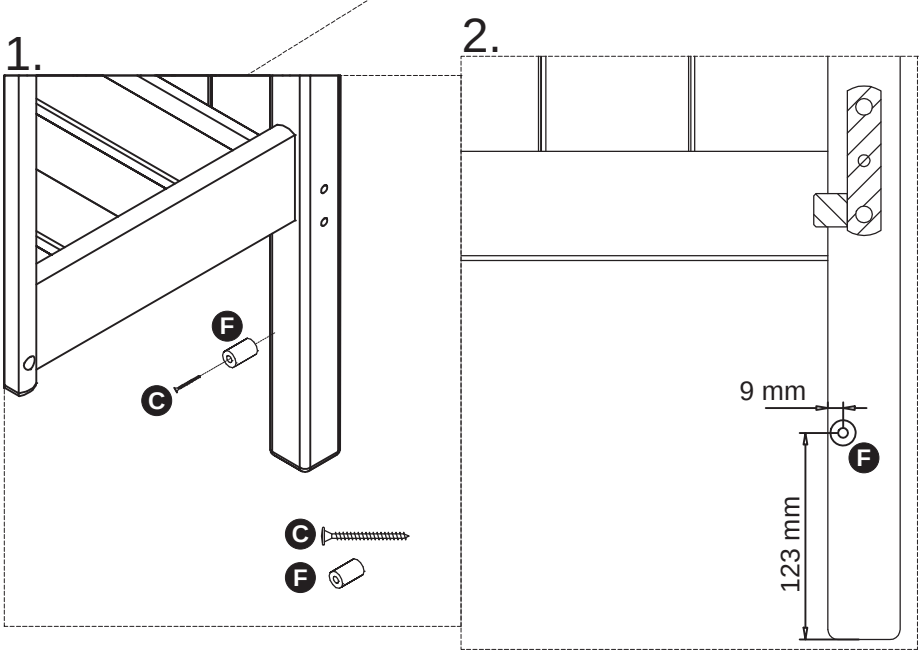


Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 0045 7668 8055**
E-mail: order@flexa.dk

Classic white bunkbed frame - 190x90 cm

Assembly Instructions - Please keep for future reference

1914425

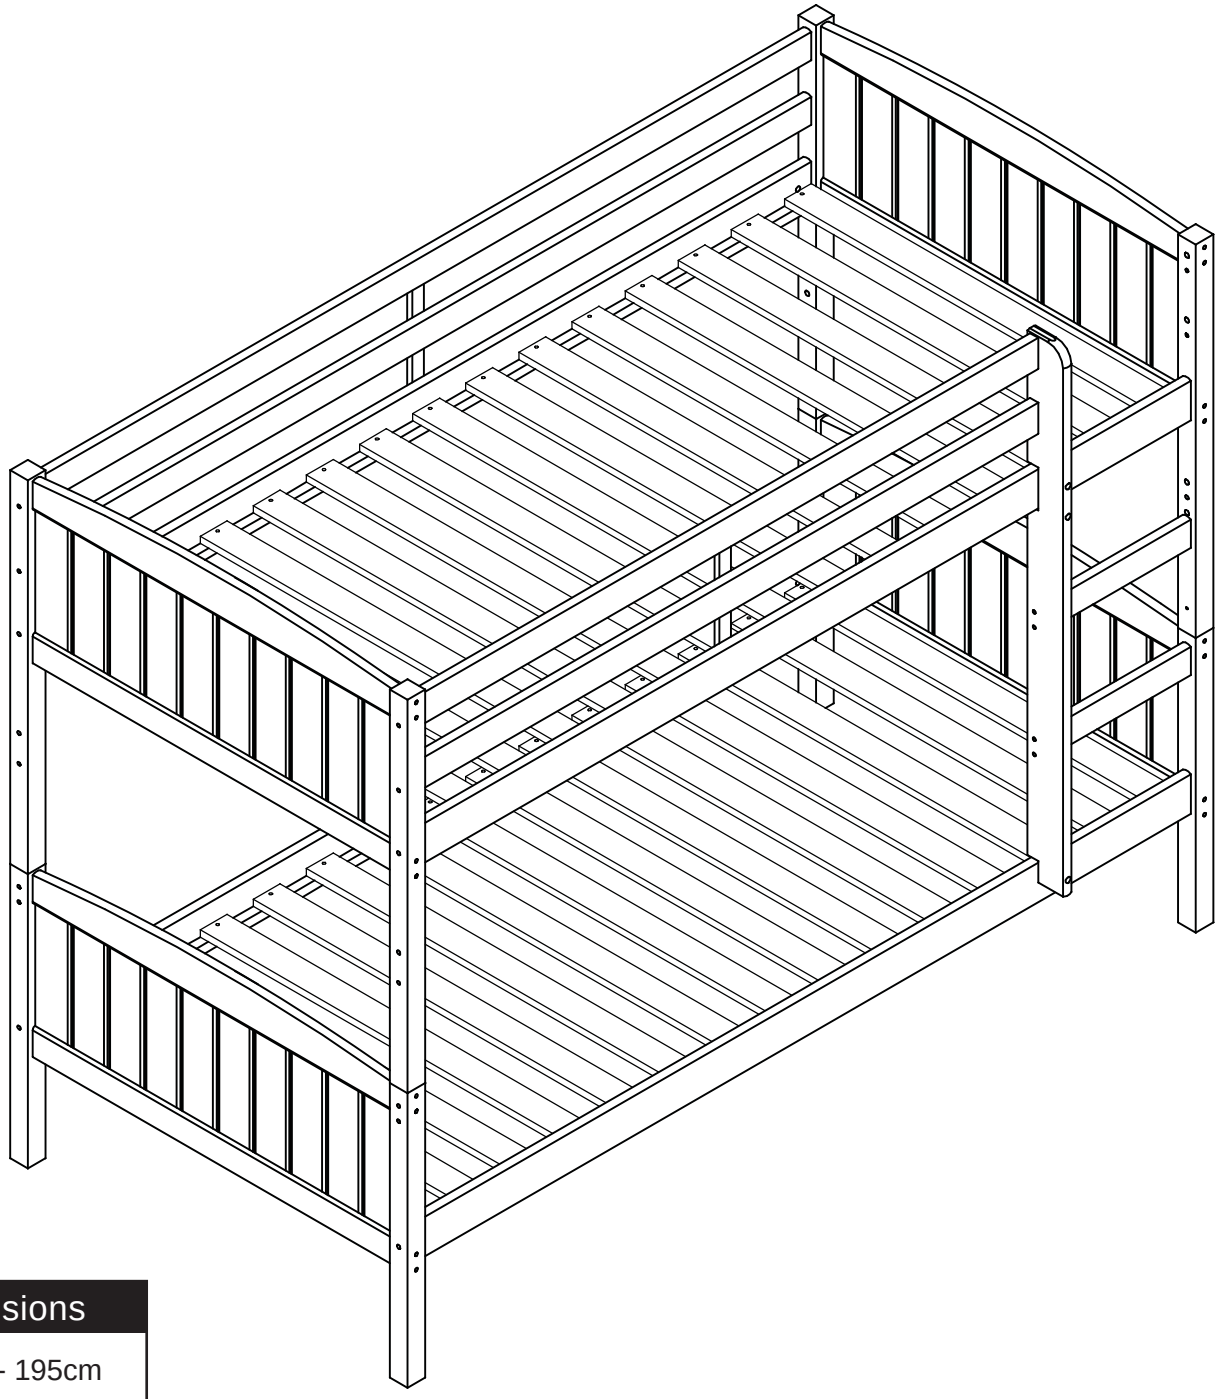

Dimensions

Length - 195cm
Depth - 96/102cm
Height - 146cm
Weight - 43kg

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**

0045 7668 8055 or e-mail: order@flexa.dk

Issue 2 - 15/05/14

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2, 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


IMPORTANT, READ CAREFULLY -RETAIN FOR FUTURE REFERENCE.

ASSEMBLY:
Current legislation requires that the bunk bed must be fitted with 4 safety-rails and a ladder or platform for the upper bunk bed. The bunk bed meets the European EN 747-2012 standards for security and durability.
MATTRESS:
This bed is designed to use a mattress size **190** cm. long and **90** cm. wide. The total thickness must not exceed **16,1** cm. The mattress top must not pass the marking on the ladder / the post for the safety-rail.
WARNING:
High beds and the upper bed of bunk beds are not suitable for children under six years due to the risk of injury from falls. Do not use the bed if any structural part is broken or missing. Be aware that children can strangle in items such as ropes, strings, cords, harnesses and belts attached to or hung on a bunk bed/high bed.
WARNING:
Children can become trapped between the bed and the wall. To avoid risk of serious injury the distance between the top safety barrier and the wall shall not exceed 75 mm. or shall be more than 230 mm.
MAINTENANCE INSTRUCTIONS:
All assembly fastenings should always be tightened properly and that care should be taken that no fittings are loose.
CLEANING:
LACQUERED: Wooden, lacquered and painted as well as laminated surfaces should be wiped over with a cloth and a mild soap.
OIL: Oiled surfaces can be cleaned with soapy water, e.g. brown soap. Wipe with a clean cloth. To maintain the natural life in the furniture which is provided by the oil treatment, we recommend an oil aftercare of the furniture 1-2 times a year. The colourless natural oil for maintenance of oil-treated furniture is available at your local furniture store.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 0045 7668 8055**


Please check you have all the parts listed below

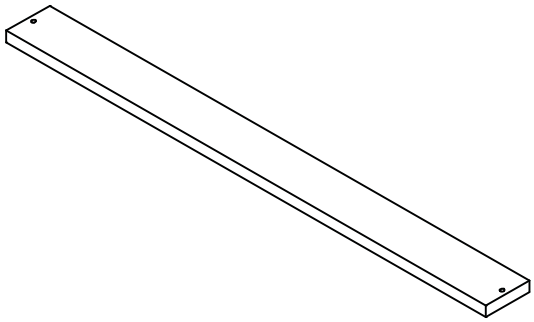


1 Slat x30 (89.7x6.5x1.5cm)
No. 12-01508971




2 List f.safety x2 (31.8x2.8x1.2cm)
No. 12-01203181-20

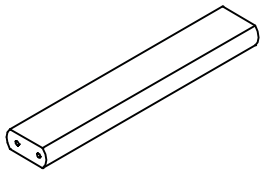


3 Tread (w.4 holes) x1
(35.0x6.5x2.0cm)
No. 12-02003503-20

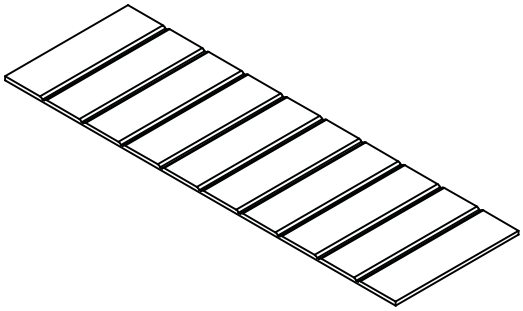


4 End panel x4 (87.7x27.6x0.8cm)
No. 4301-0808771-20

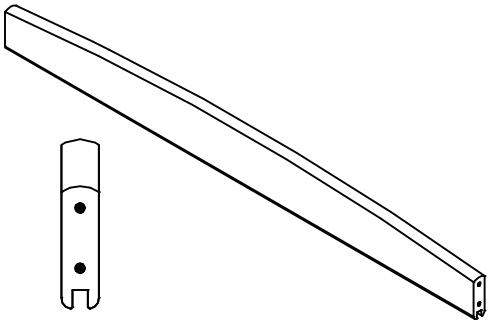


5 Endrail x4 (87.7x9.2x2.0cm)
No. 12-02008771-20

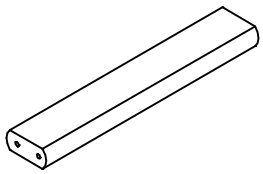

6 Tread (w.3 holes) x1
(35.0x6.5x2.0cm)
No. 12-02003504-20

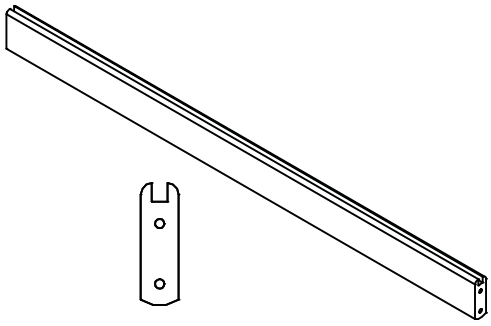


7 Endrail x 4 (87.7x6.5x2.0cm)
No. 12-02008772-20

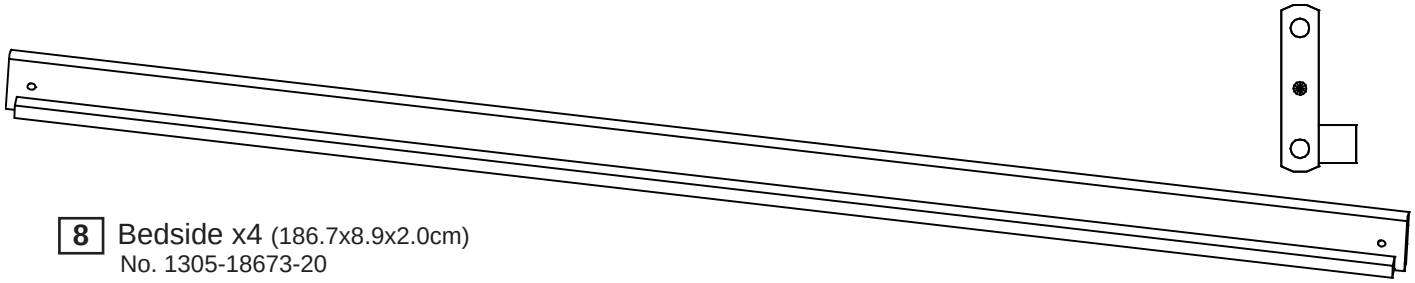


8 Bedside x4 (186.7x8.9x2.0cm)
No. 1305-18673-20

Components - Parts


Please check you have all the parts listed below

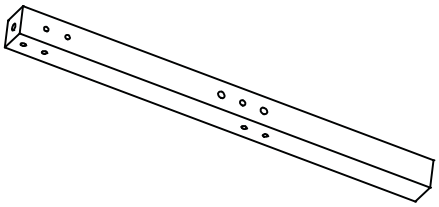

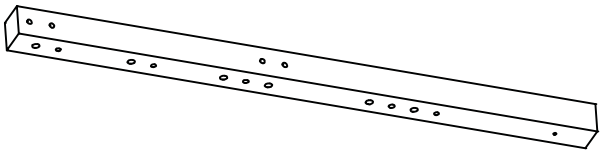


9 Leg short x4 (61.8x4.3x4.3cm)
No. 12-04306181-20


11 Leg long x4 (82.6x4.3x4.3cm)
No. 12-04308262-20

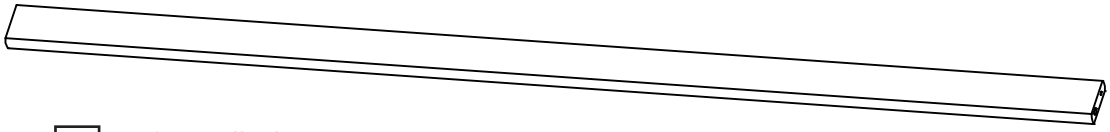

10 Safety rail 3/4 x2 (149.7x6.5x2.0cm)
No. 12-02014971-20

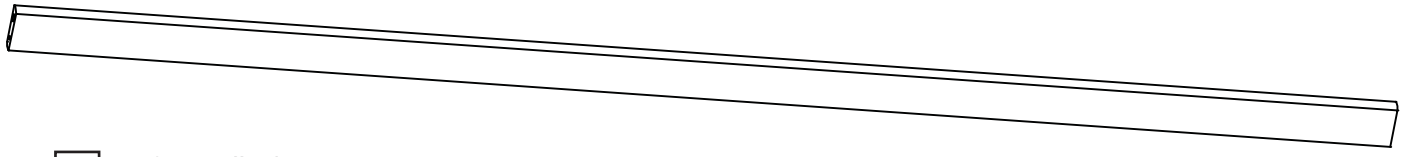

12 Safety rail 1/1 x2 (186.7x6.5x2.0cm)
No. 12-02018673-20





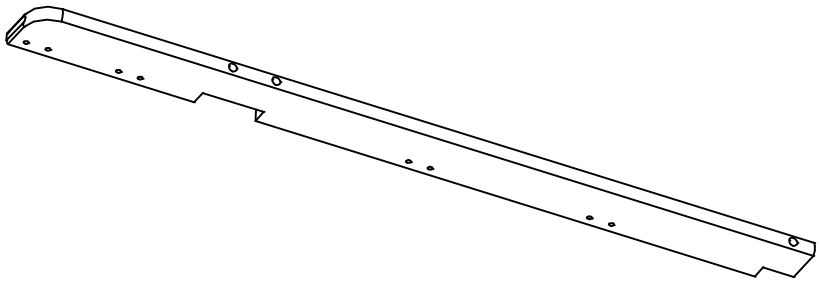


13 Ladderside bunkbed x1 (114.8x8.9x2.0cm)
No. 12-02011481-20

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A No. 3913-06090  M6x90mm Connecting bolt x8	**B** No. 3922-06014  M6 Ø10x14mm Barrel nut x8	**C** No. 3901-45040  4,5x40mm Chipboard screw x4
D No. 3930-10045  10x45mm Dowel x22	**E** No. 3901-40030  4,0x30mm Chipboard screw x68	**F** No. 3909-63050  6,3x50mm Assembly screw x8
G No. 3939-00012-20  ø12x10mm Cover cap wood x3	**H** No. 3938-00010-2  ø10mm Cover cap x10	**J** No. 3909-63090  6,3x90mm Assembly screw x41
K No. 3938-00007-2  ø7mm Cover cap x22	**M** No. 3901-45060  4,5x60mm Chipboard screw x3	**N** No. 3934-10088  ø10x88mm Connecting double bolt x4
L No. 3938-000081-2  ø8mm Cover cap x8		


Tools required

Phillips screwdriver (medium)


Flatblade screwdriver (medium)

Allen key 4mm incl.
No. 4033-004

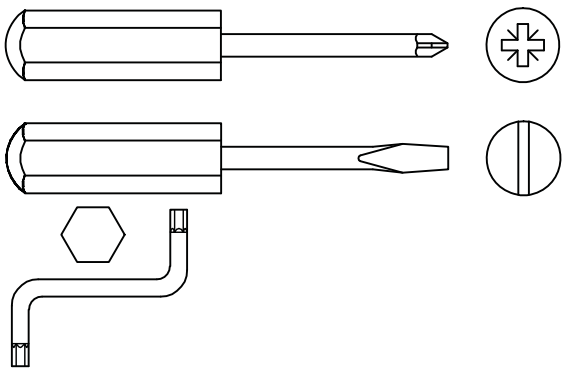

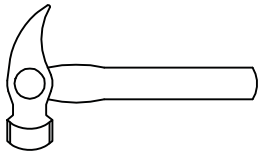

Small hammer

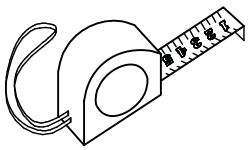

Ruler/tape measure


Assembly Instructions

Step 1

Insert dowels **D** to bedsides 8 – and to all the safety rails 10 and 12.

It may be necessary to tap the dowel in very gently with a small hammer.

Repeat same procedure for all bedsids 8 and all safety rails 10 and 12.

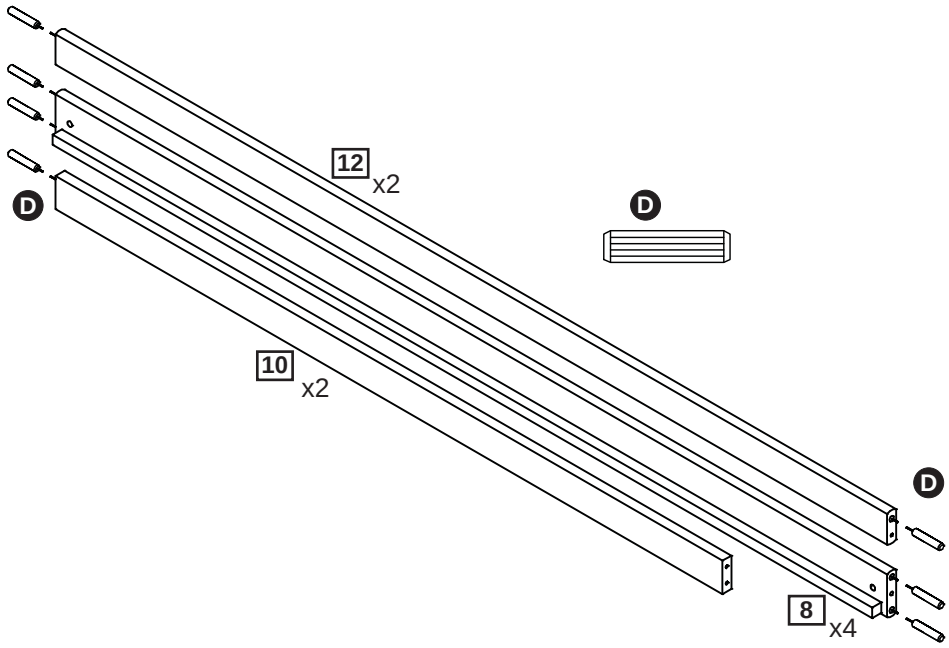


Step 2

Insert the connecting double bolts **N** to all the short legs 9

Twist /turn the bolt to follow the hole ø6,8 mm

Counter sunk 5 mm hole should face same direction as bedside drilling

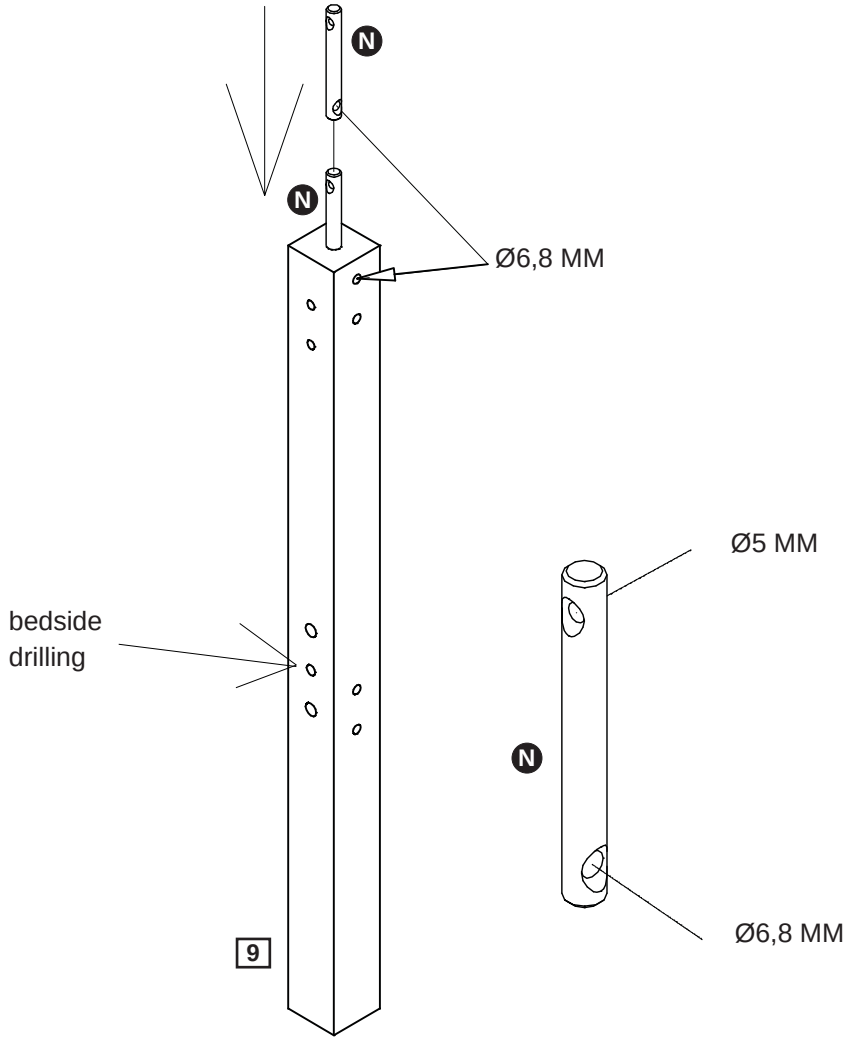

Assembly Instructions

Step 3

Attach leg 11 to endrails 5 and 7 with 4 screws J using the allen key

Attach leg 9 to endrails 5 and 7 with 4 screws J using the allen key

Repeat same procedure for both headboard and footboard


Step 4

During assembly of headboard and footboard, you must decide if the grooves in the MDF panels, should face in or out of the bed

Slide panel 4 between endrail 5 and 7.

Attach legs 9/11 to endrails 5 and 7 with screws J using the allen key

Repeat same procedure for both headboard and footboard

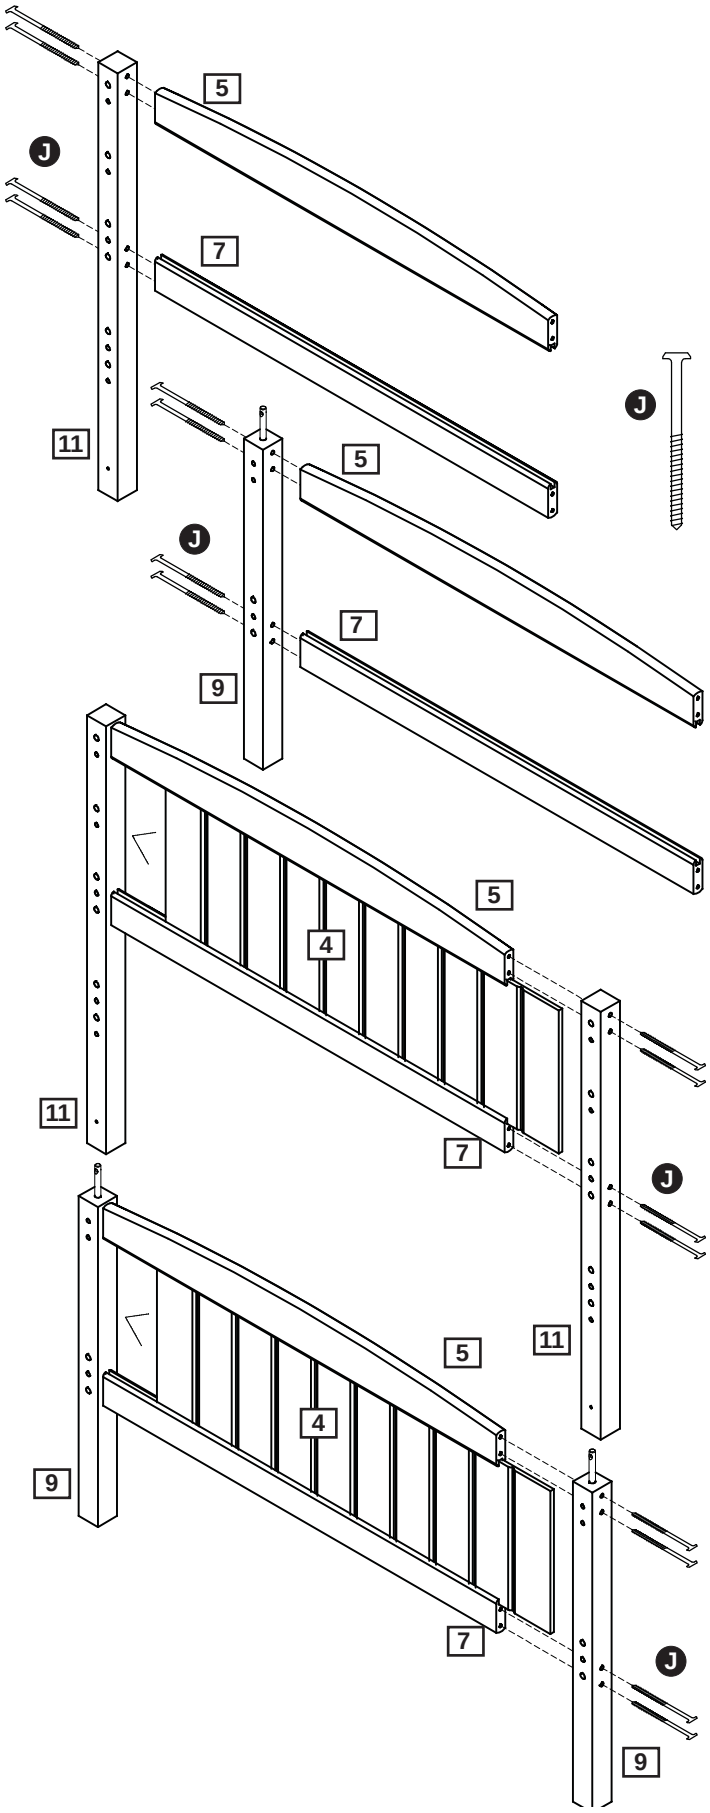

Assembly Instructions

Step 5

Attach bedside 8 and both safety rails 12 to the bed firstly by placing the dowels in holes in the legs.

Push barrel nuts B into the 2 small holes in bedside 8 push 1 connecting bolt A through each leg 11 to meet barrel nuts B and then fasten with the allen key.

Push 4 assembly screws J through legs 11 to meet the safety rails 12 and then fasten with the allen key.

Step 6


Attach bedside 8 to the bed firstly by placing the dowels in the holes in the legs.

Push 2 barrel nuts B into the small holes in bedside 8 push 1 connecting bolt A through each leg 11 to meet barrel nuts B then fasten with the allen key.

Step 7

Attach bedside 8 to the bed firstly by placing the dowels in the holes in the leg.

Push 2 barrel nuts B into the small holes in bedsides 8 push one connecting bolt A through each leg 9 to meet barrel nuts B and then fasten with the allen key.

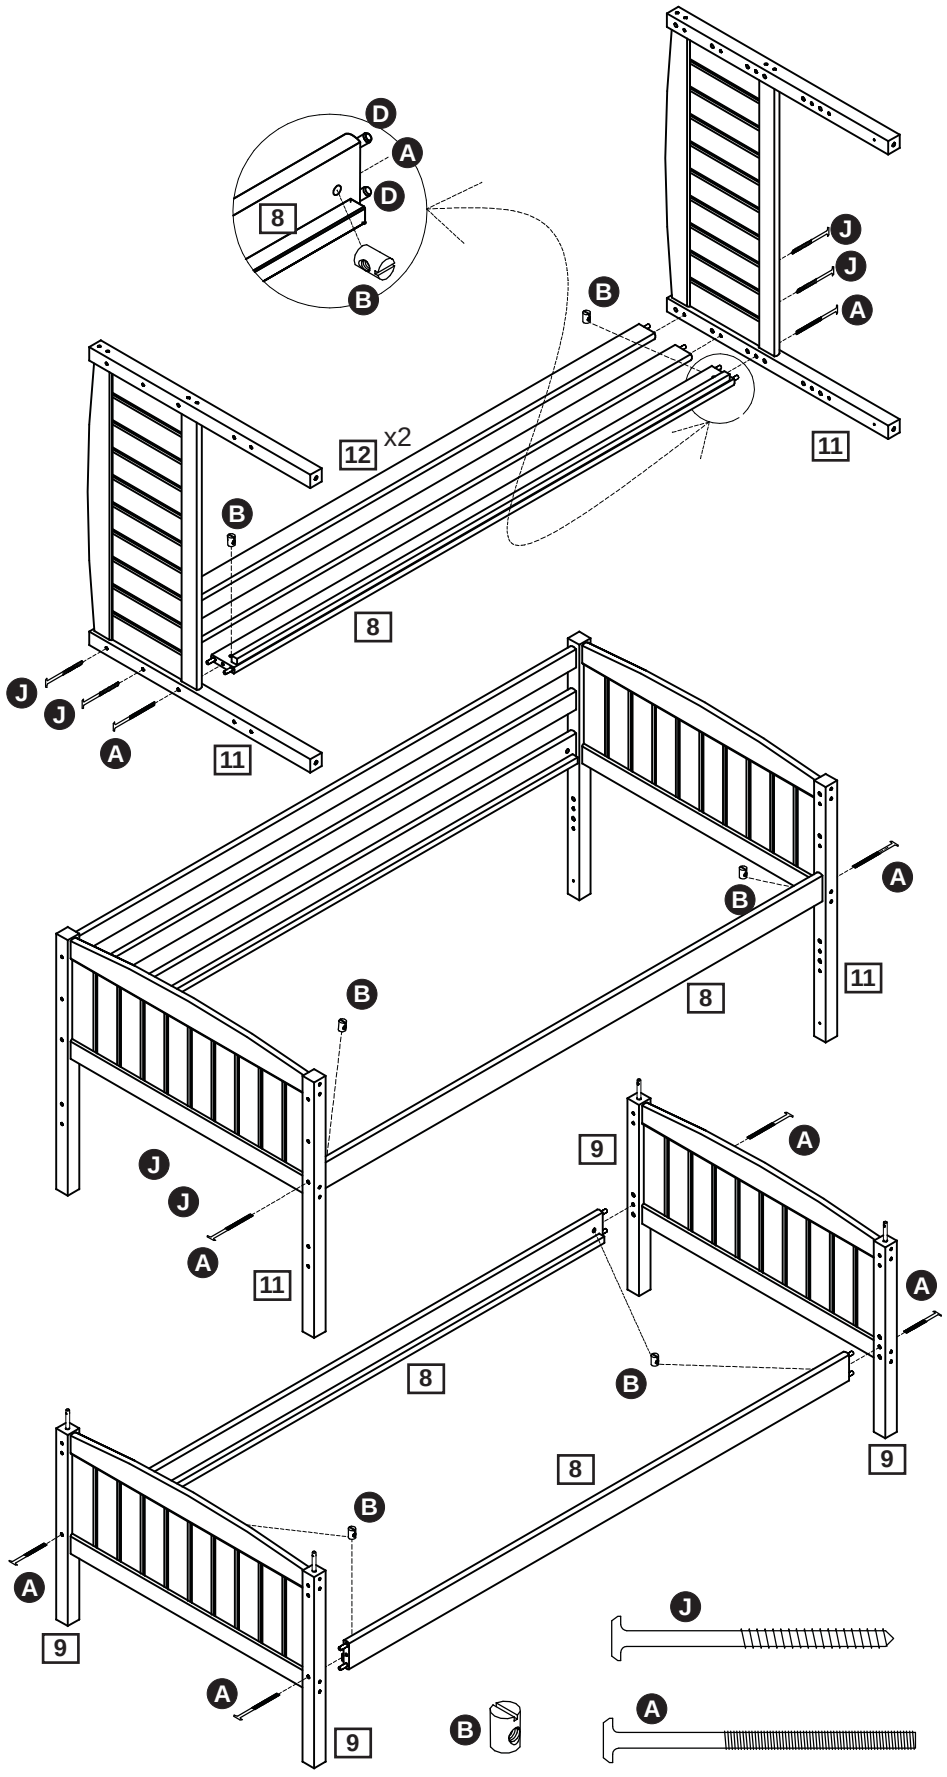

Assembly Instructions

Step 8

Attach the 2 beds by putting the one bed (with legs 11) in top of the other bed.

Attach the connecting double bolt N in legs 9 with the upper bed by screws C through legs 11

Step 9

Push 2 assembly screws J through the leg 11 to meet the safety rails 10 and then fasten with the allen key.

Ladder can be positioned left or right !


Step 10


Attach the tread 3 and 6 to the ladderside 13 with the screws F


Attach the treads 3 and 6 to the leg 9 and 11 with screws J

Attach the ladderside 13 with the safety rails 10 with screws F

Attach the ladderside 13 with the bedsides 8 with screws M. Insert cover caps G in the holes.

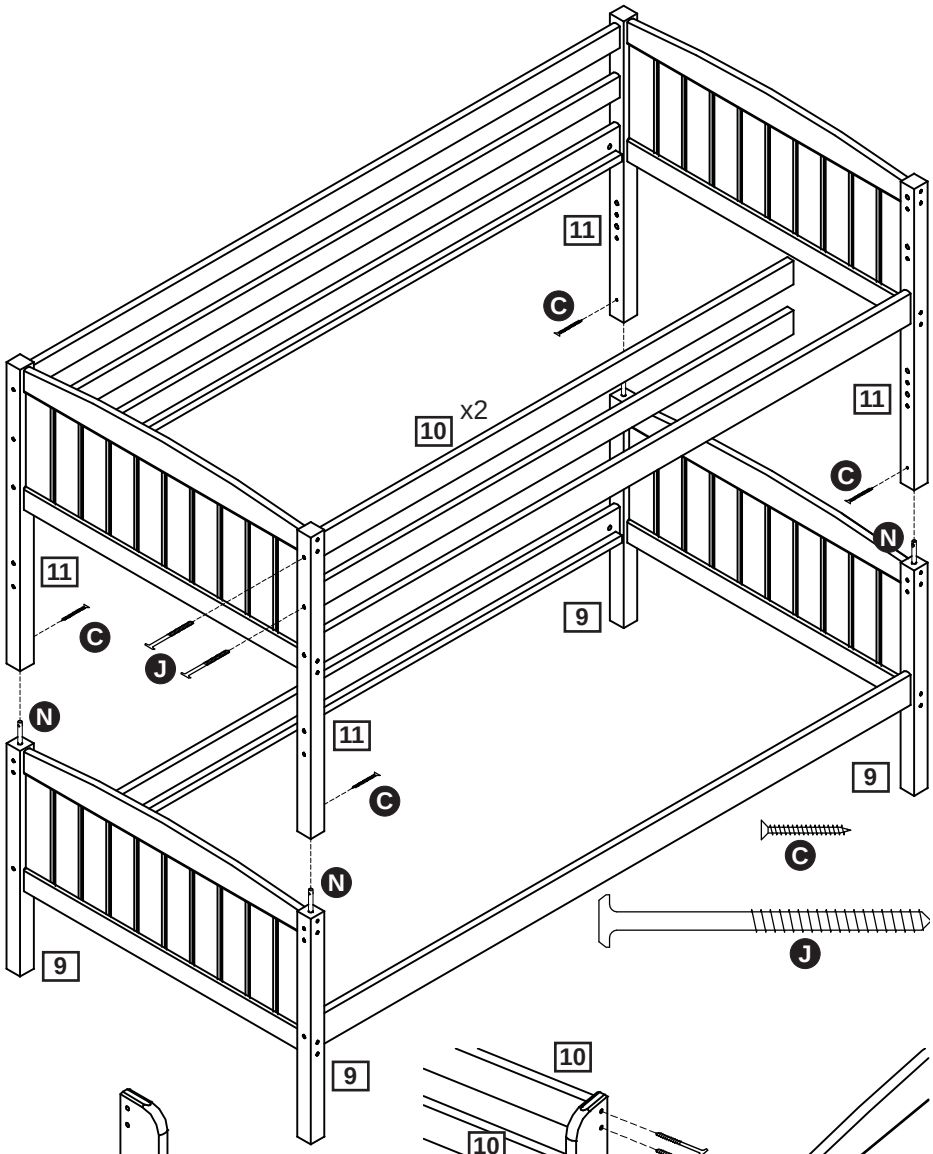

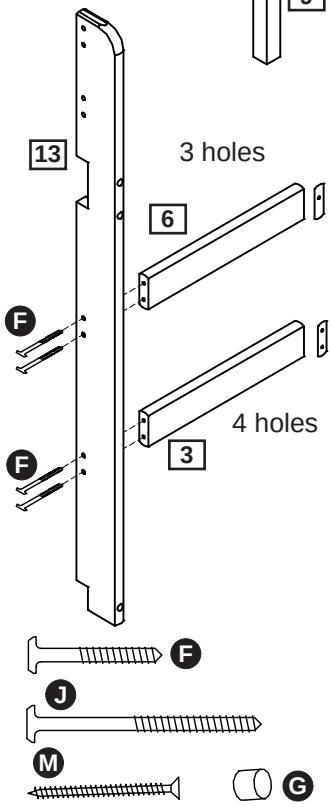

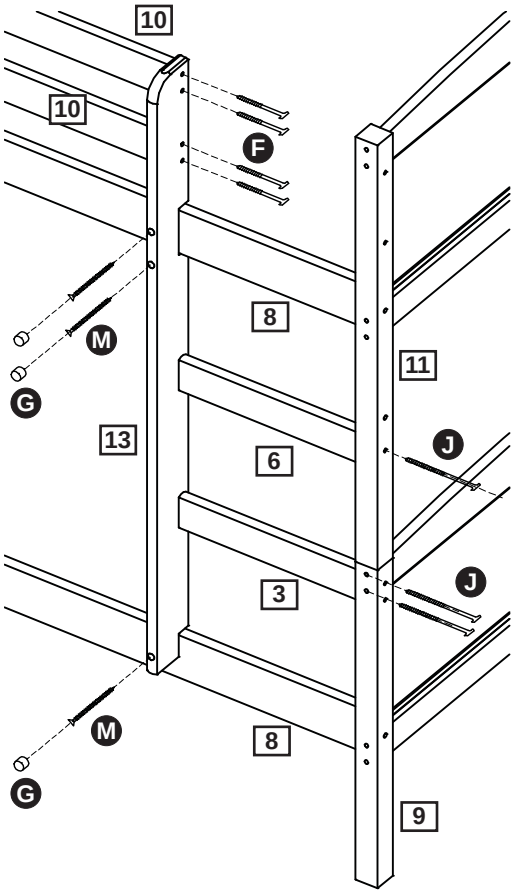


Step 11

Place 1 slat [1] (No.8) in the bed, follow the measurement.

Push the bedsides [8] together when attaching the slat [1] to the bed with 2 screws Ⓔ Position the remaining 14 slats [1] in the bed with a distance of 64 mm between each.

Fasten each slat with 2 x screws Ⓔ

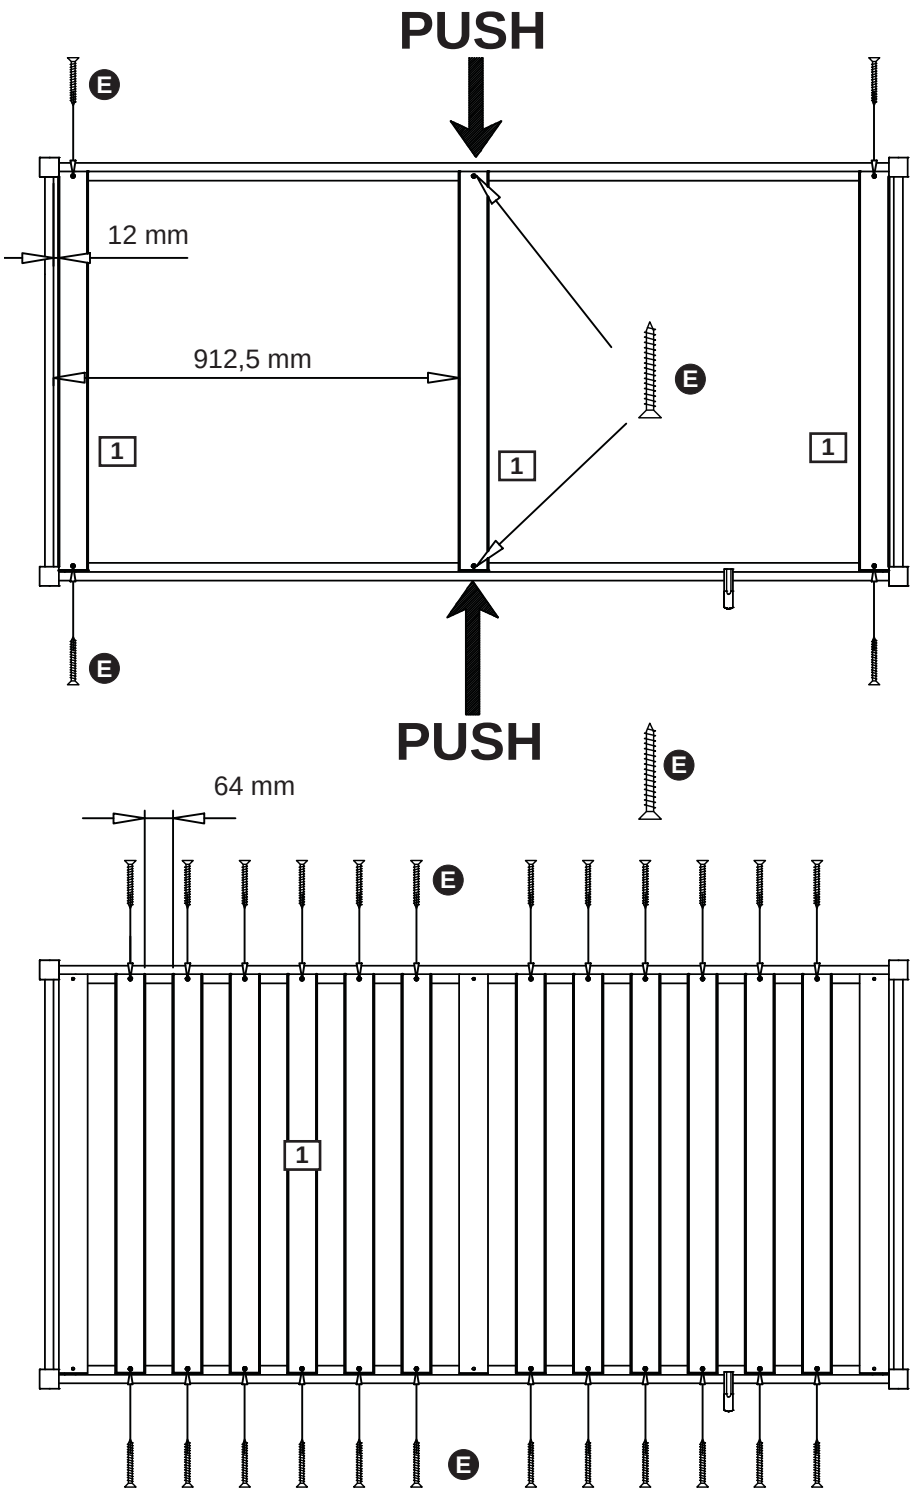

Step 12

Attach the safety list [2] inside the bed, on the front safety rails [10]. Should be in the center of the front guards between the slats.

Attach it [2] to the safety rails [10] and bedside [8] with chipboard screws (E)

Follow the measurement.

Attach the safety list [2] on the outside of the bed, on the back safety rails [12]. Should be in the center of the back guards.

Attach it [2] to the safety rails [12] and bedside [8] with chipboard screws (E)


Follow the measurement.


Max. mattress height !

Assembly is complete.



Max mattress height !

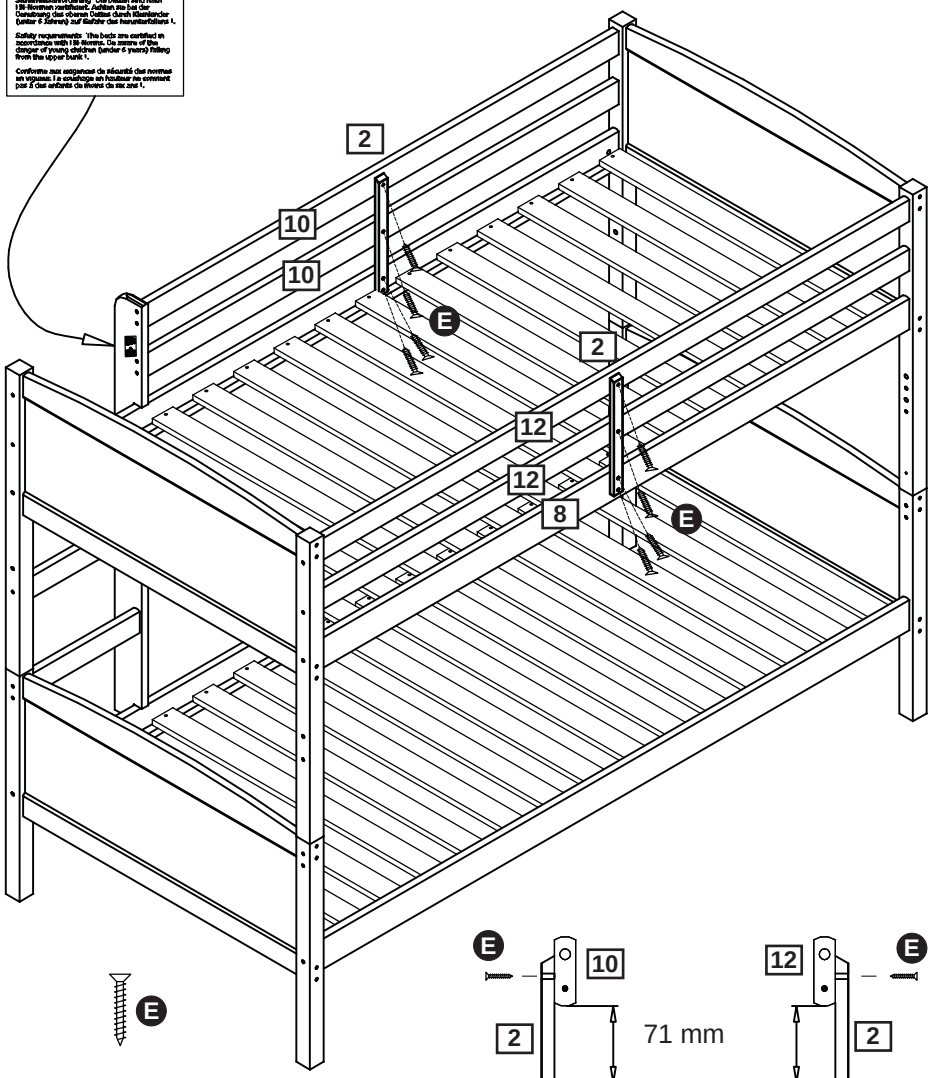


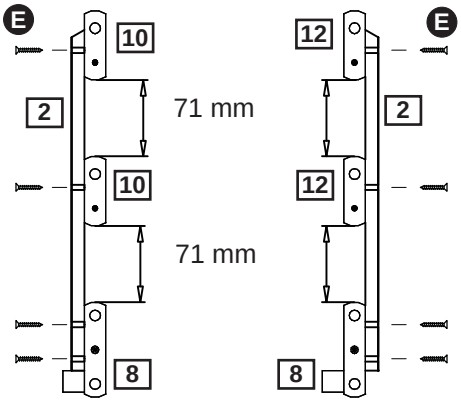

Assembly Instructions

Note: To acheive the single bed look shown on the picture, one end of the upper bunk (assembled parts 4, 5 7 and 11) should be swapped over with the lower bunk (assembled parts 4, 5, 7 and 9).

Bunkbed as 2 single beds

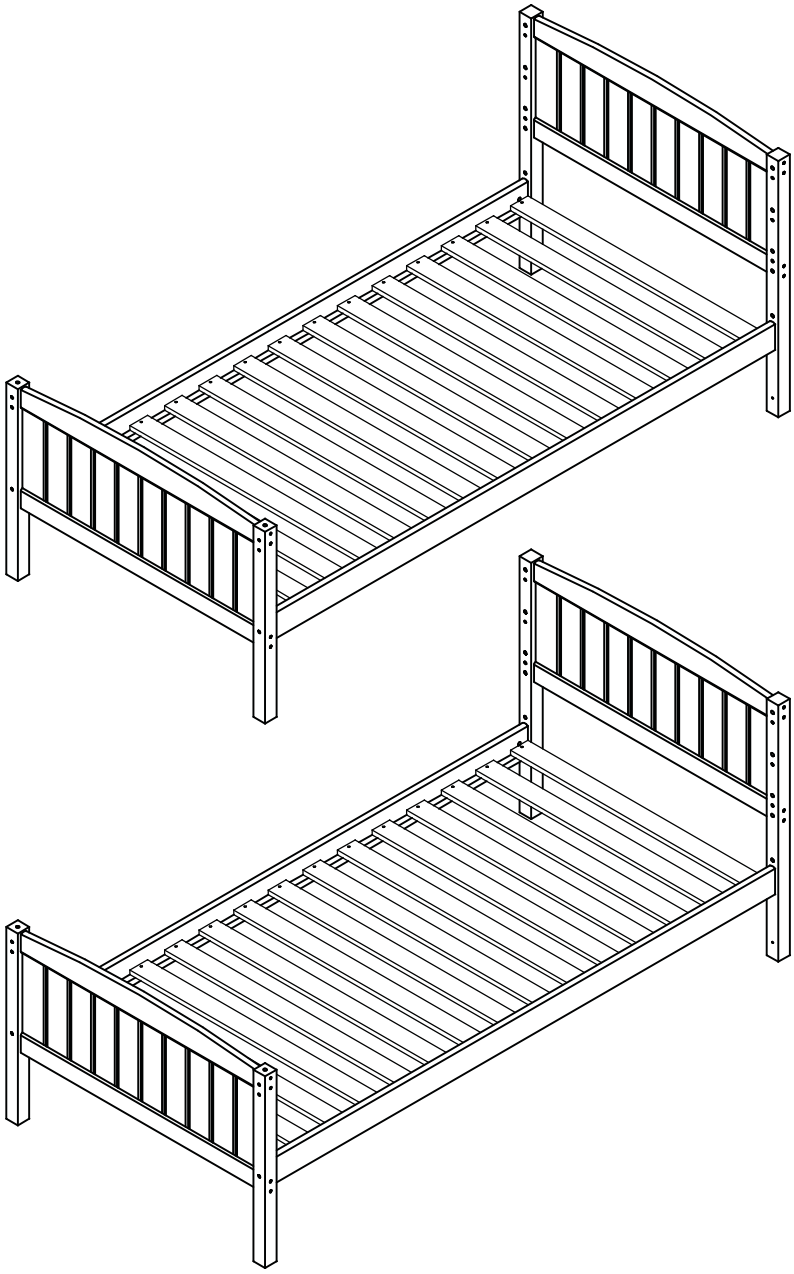

If you need help or have damaged or missing parts, call the **Customer Helpline: 0045 7668 8055**
E-mail: order@flexa.dk