
# Alicia - 5 Drawer Chest

## Assembly Instructions - Please keep for future reference

151/7949

157/9286

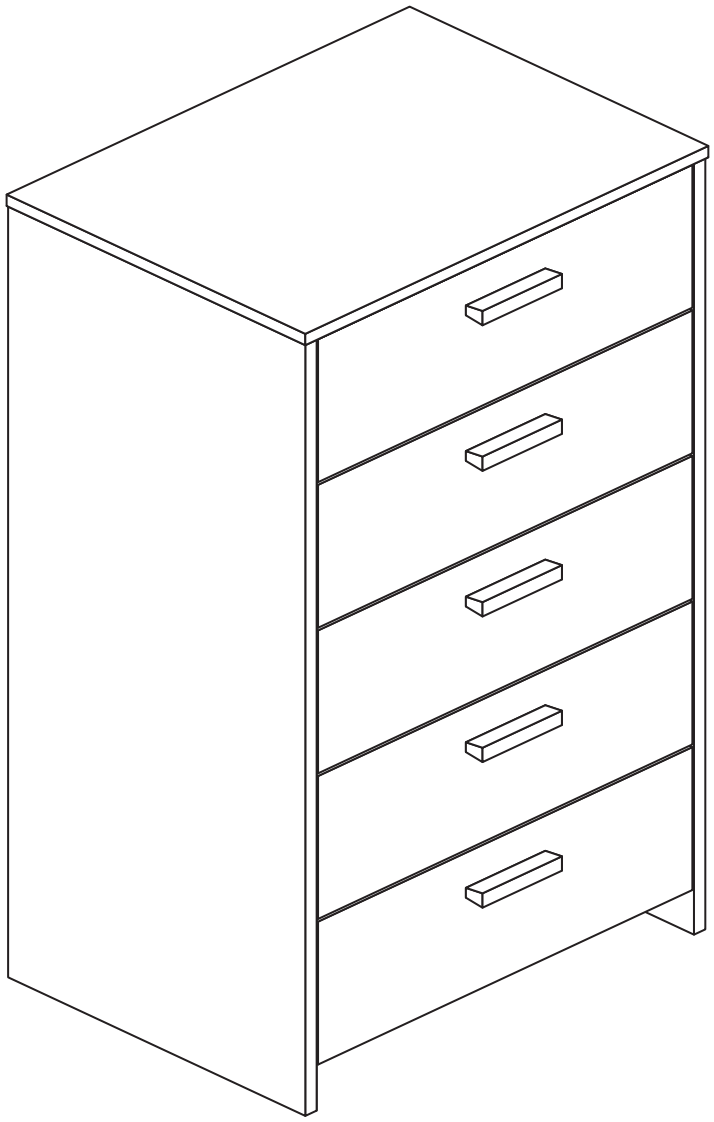

| Dimensions |
| --- |
| Width - 53.5cm |
| Depth - 39.5cm |
| Height - 104cm |

MADE IN BRITAIN

## Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 03/12/13

# Safety and Care Advice

## **Important -** Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 24kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

## Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

***Note:*** If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


## Please check you have all the panels listed below

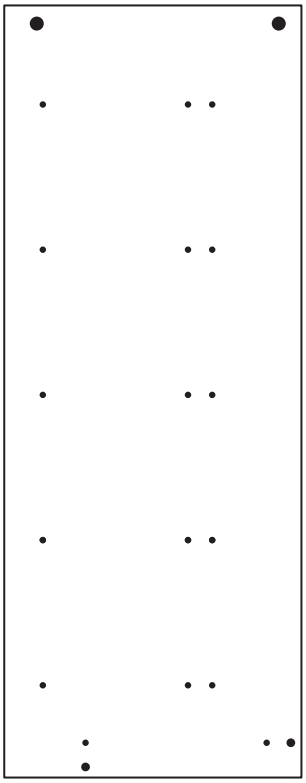

**1** Left Side *(D2685A)*
(1021 x 393mm)

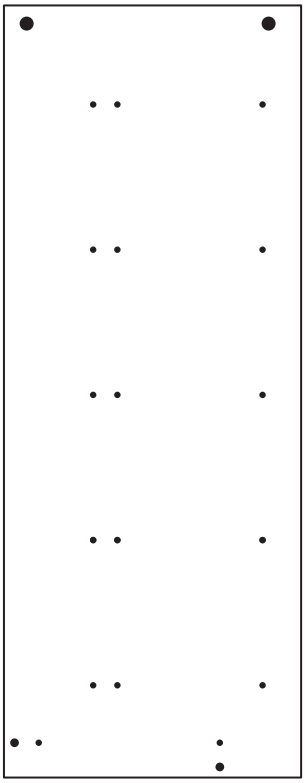


**2** Right Side *(D2686A)*
(1021 x 393mm)

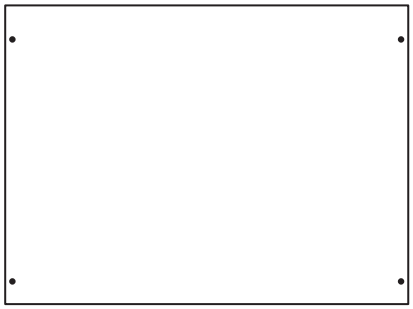


**3** Top *(D2683A)*
(533 x 395mm)



**4** Rail *(D2684A)*
(499 x 58mm) x 2

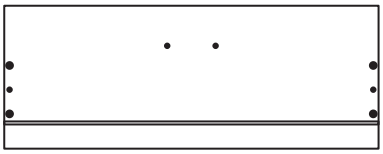


**5** Drawer Front *(D2666A)*
(495 x 189mm) x 5




**7** Left Drawer Side *(W330-115LH)*
(330 x 115mm) x 5




**6** Drawer Back *(W468-115)*
(468 x 115mm) x 5



**8** Right Drawer Side *(W330-115RH)*
(330 x 115mm) x 5



**9** Drawer Base *(T479-327)*
(479 x 327mm) x 5

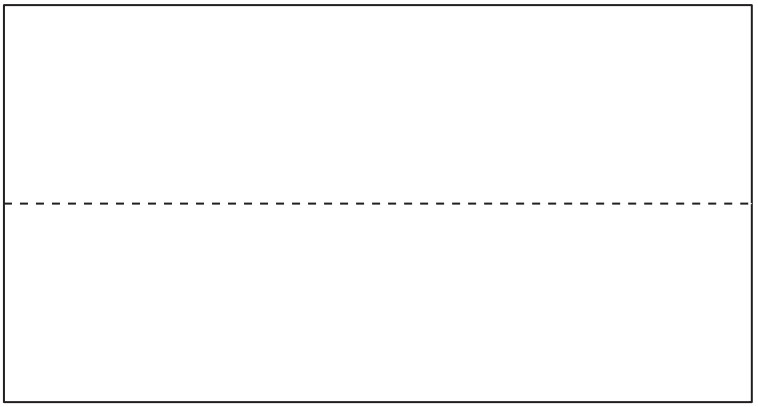


**10** Back *(X989-525)*
(989 x 525mm)

# Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

## Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

**A** 

Wooden dowel *(F22)* x 4

**B** 

Metal dowel *(F901)* x 18

**C** 


Large locking nut *(F900)* x 8

**D** 

Small locking nut *(F3)* x 10

**E** 

Knock-in Peg *(F171)* x 20

**F** 

Nail *(F51)* x 20

**G** 

25mm Screw (*F50)* x 10

**H** 


9mm Screw *(F74)* x 10

**I** 


9mm Screw (*F73)* x 20

**J** 

13mm Screw *(F79)* x 1

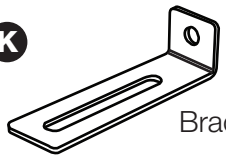**K** 

Bracket (*F327)* x 1

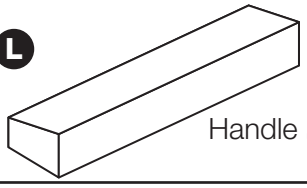
**L** 

Handle *(F319)* x 5

**M** 

Drawer runner *(F1004)* x 10

## Tools required

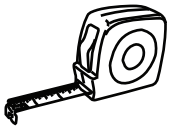


Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

## Ruler - Use this ruler to help correctly identify the screws

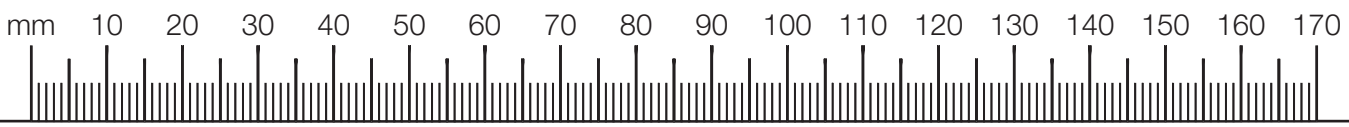

# Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

## Step 1

**Prepare the 5 drawer fronts**

Screw 2 metal dowels **B** into the holes shown on the back of the drawer front **5**.

***Note:*** Tighten the metal dowels up fully against the panels.

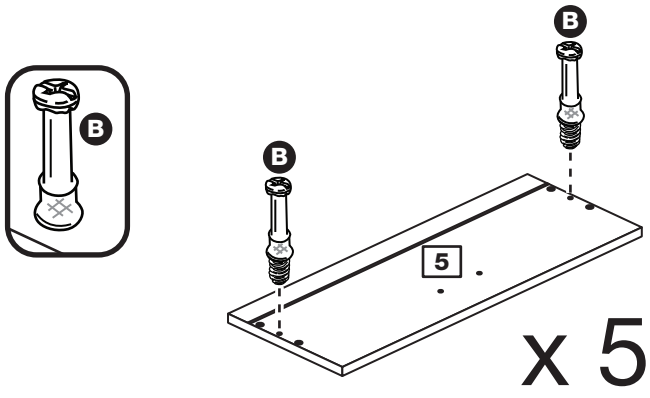



## Step 2

**Prepare the drawer sides**

Insert a small locking nut **D** into the hole shown on the left drawer side **7** and right drawer side **8**.

***Note:*** The arrow on the locking nut **must** point towards the hole in the edge of the panel.

***Note:*** Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

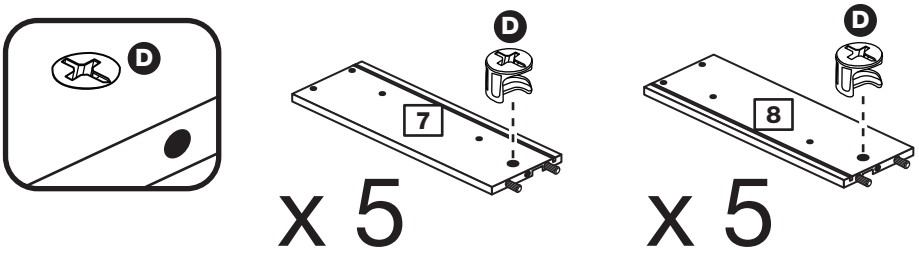


## Step 3


**Attach the drawer sides to the drawer front**

Push the left drawer side **7** and right drawer side **8** onto the back of the drawer front **5**.

Turn the small locking nuts **D** on the left drawer side **7** and right drawer side **8**.

***Note:*** Turn the locking nuts **D** clockwise to secure panels - more than 1/2 a turn.


***Note:*** The locking nuts can be on either surface of the drawer sides. Make sure that the groove is on the inside, as shown.

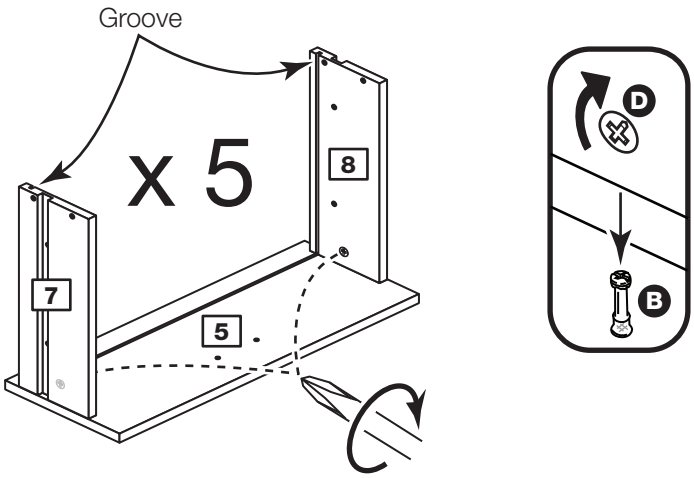

## Step 4

**Fit the drawer base**

Slide the drawer base [9] down the grooves in the drawer sides [7] and [8] and down into the groove in the drawer front [5].

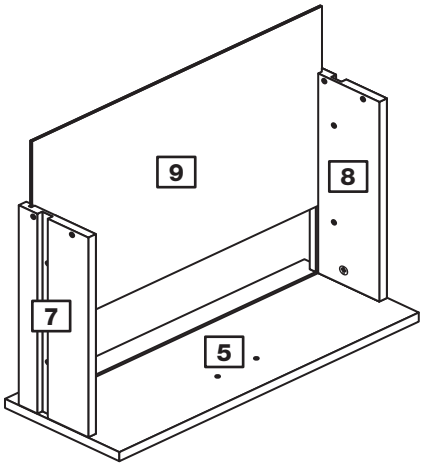


x 5


## Step 5

**Fit the drawer back**

Fit the drawer back [6] between the drawer sides [7] and [8].

Make sure that the drawer base [9] fits into the groove in the drawer back [6].

Hold the drawer back [6] in position and tap the knock-in pegs (E) through the holes in the drawer sides [7] and [8].

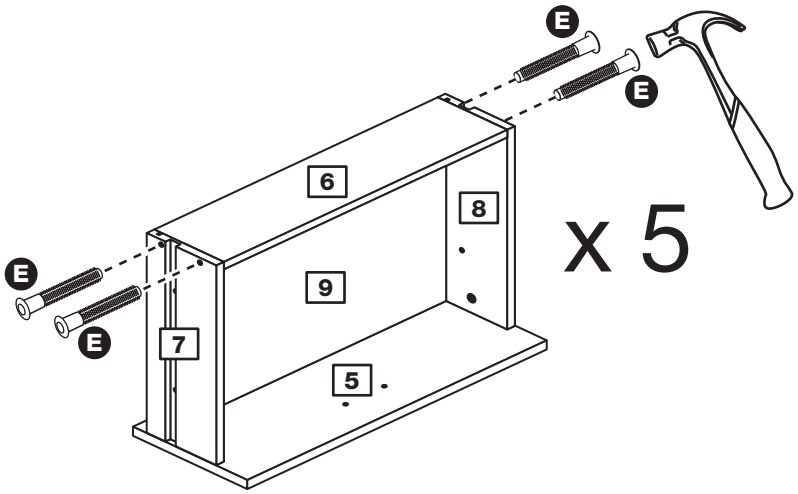



x 5

## Step 6

**Attach the handle**

Attach a handle (L) to the drawer front [5] using 2 screws (G).

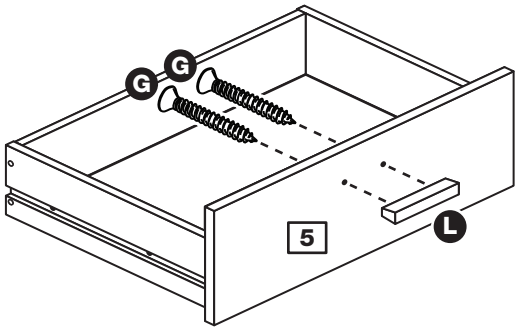


x 5

## Step 7

**Prepare the left side**


**a:** Place 5 runners (M) on the left side [1] as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (I).

**b:** Slide the runner (M) back the other way and fit the 2nd screw (I) into the corresponding hole in the left side [1].


**c:** Screw 2 metal dowels (B) into the left side [1].

Insert 2 large locking nuts (C) into the left side [1].


***Note:*** The arrow on the locking nuts **must** point towards the hole in the edge of the panel.

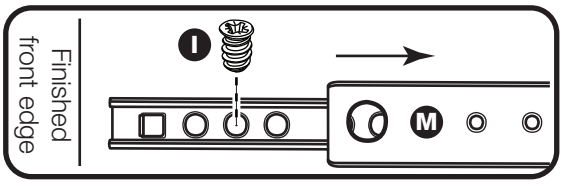



a:

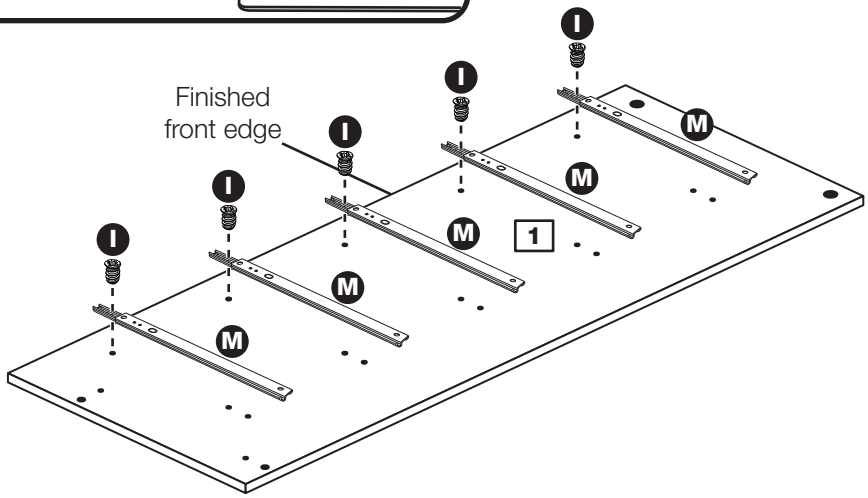


b:

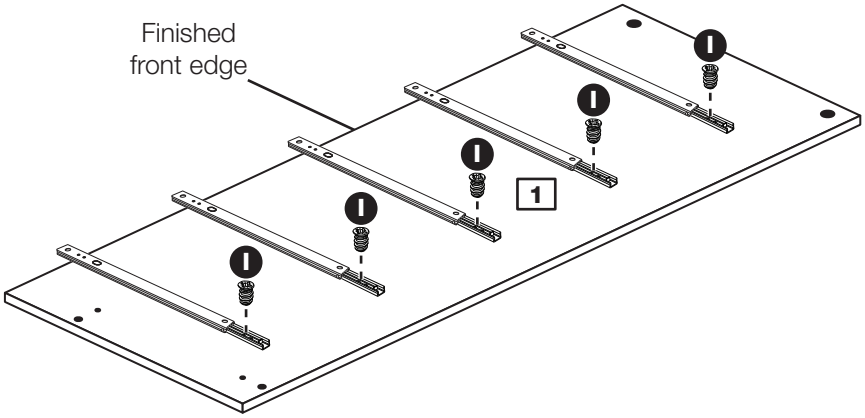


c:

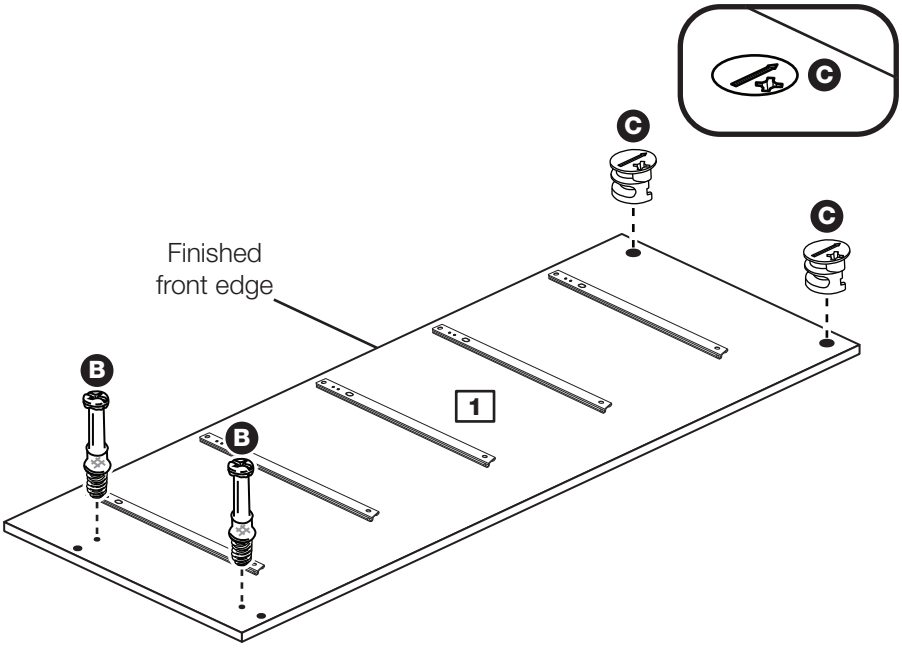

## Step 8


**Prepare the right side**

**a:** Place 5 runners (M) on the right side [2] as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (I).


**b:** Slide the runner (M) back the other way and fit the 2nd screw (I) into the corresponding hole in the right side [2].

**c:** Screw 2 metal dowels (B) into the right side [2].


Insert 2 large locking nuts (C) into the right side [2].

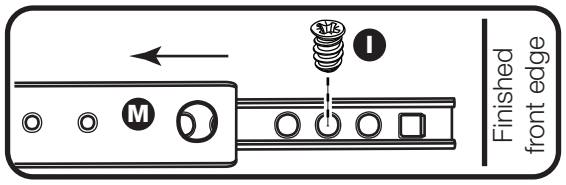



a:

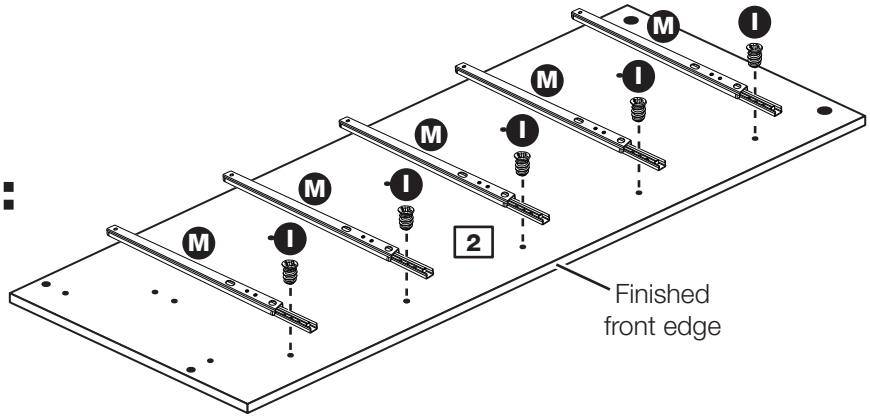


b:

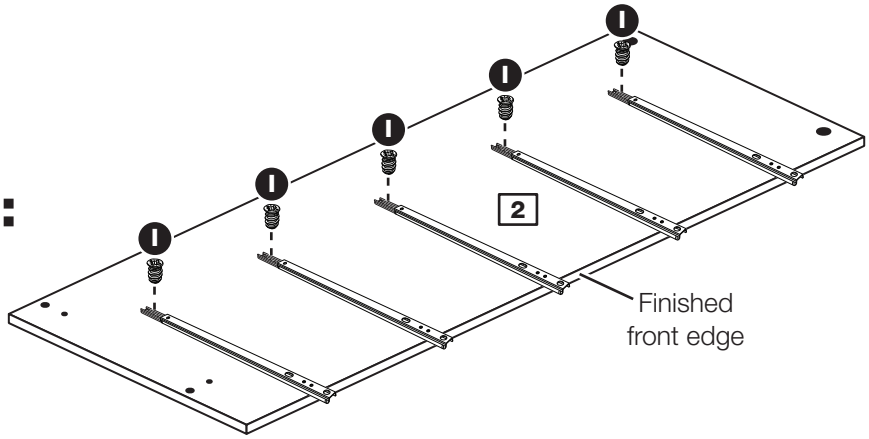


c:

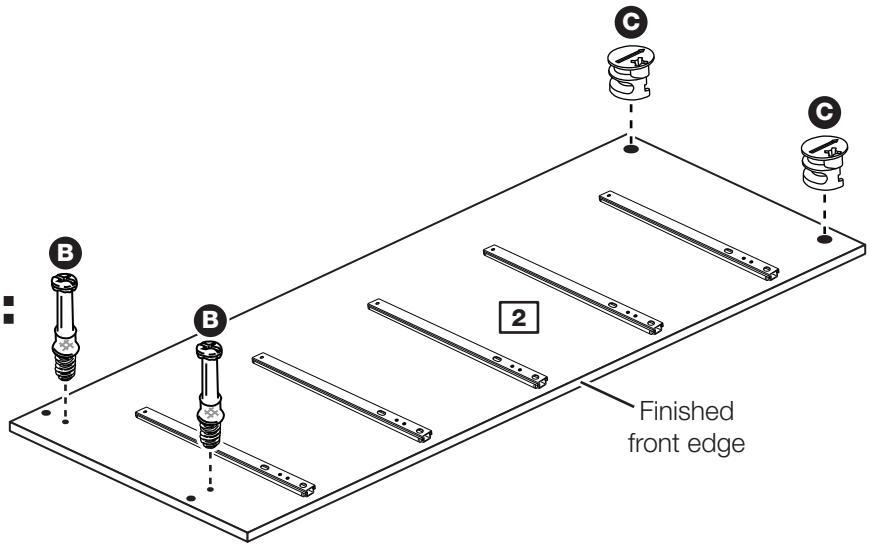


## Step 9

**Prepare the 2 rails**

Tap 2 wooden dowels **A** into each of the rails 4.

***Note:*** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 2 large locking nuts **C** into each of the rails 4.

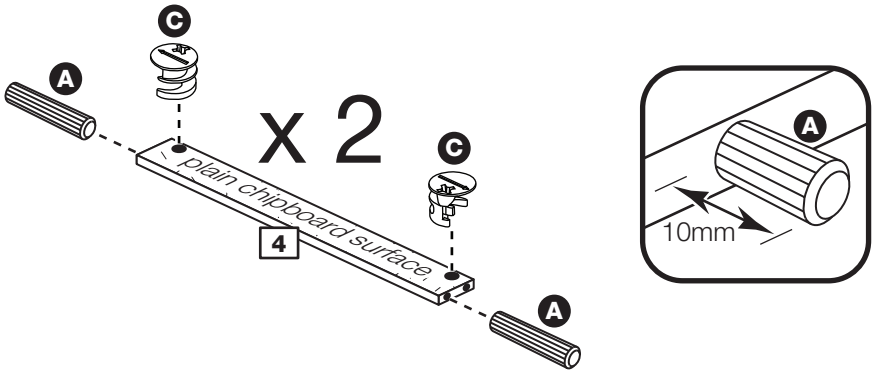



## Step 10

**Fit the 2 rails to the right side**

Push the rails 4 onto the right side 2.

Use a screwdriver to tighten the 2 large locking nuts **C** fitted to the rails 4.

***Note:*** Turn the large locking nuts **C** as far as they will go - more than 1/2 a turn.

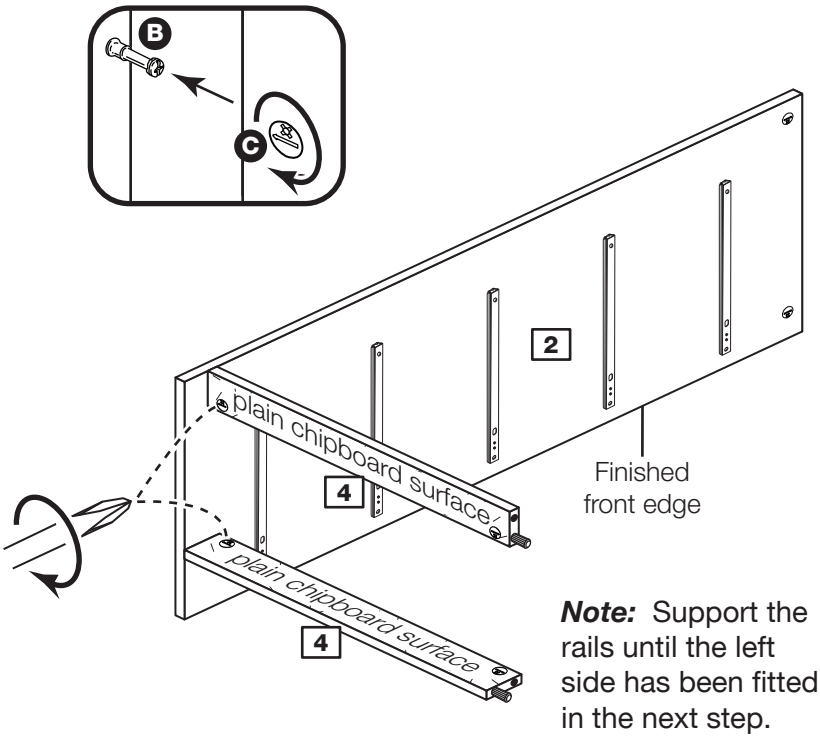



***Note:*** Support the rails until the left side has been fitted in the next step.

## Step 11

**Fit the left side**

Push the left side 1 onto the assembly.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the rails 4.

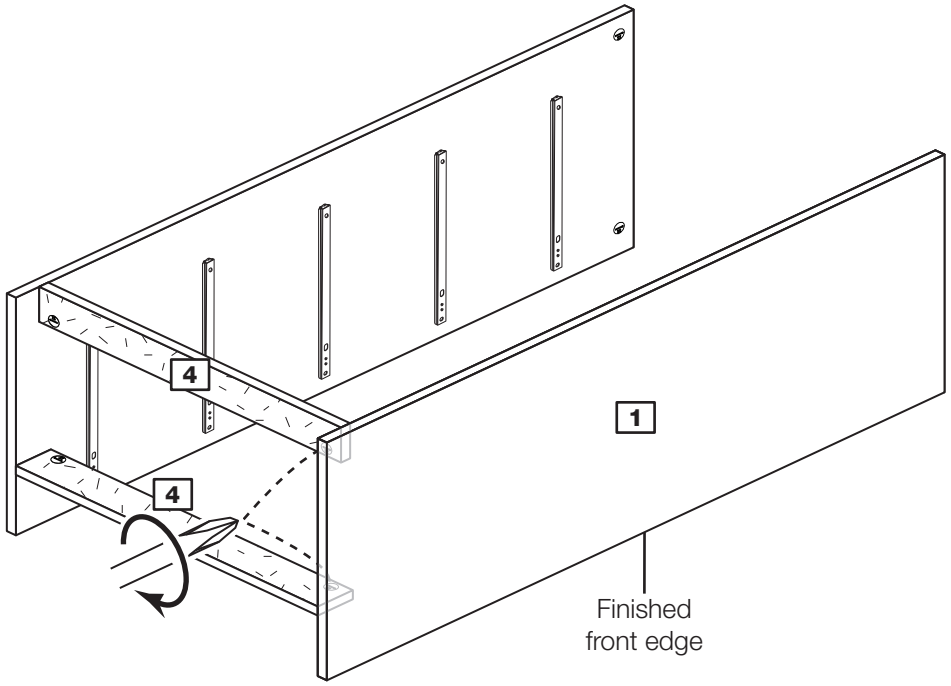



## Step 12

**Prepare the top**

Screw 4 metal dowels B into the top 3.

Fix the bracket K in the middle of the top 3, flush to the back edge, using screw J.

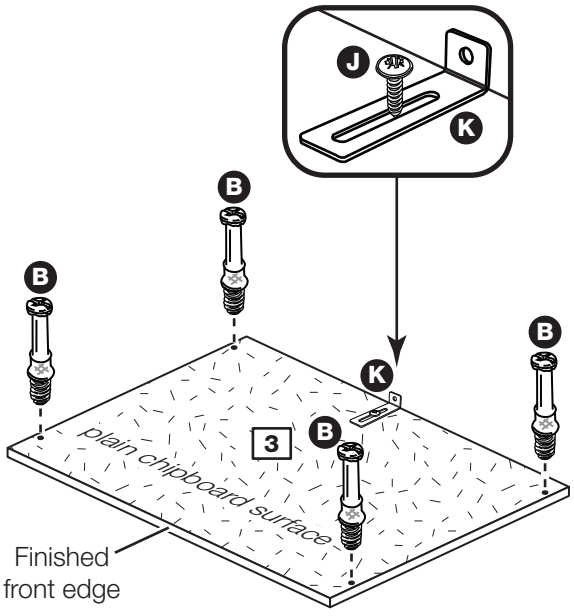


## Step 13

**Fit the top**

Push the top [3] onto the assembly.

Use a screwdriver to tighten the 4 large locking nuts (C) fitted to the left side [1] and right side [2].

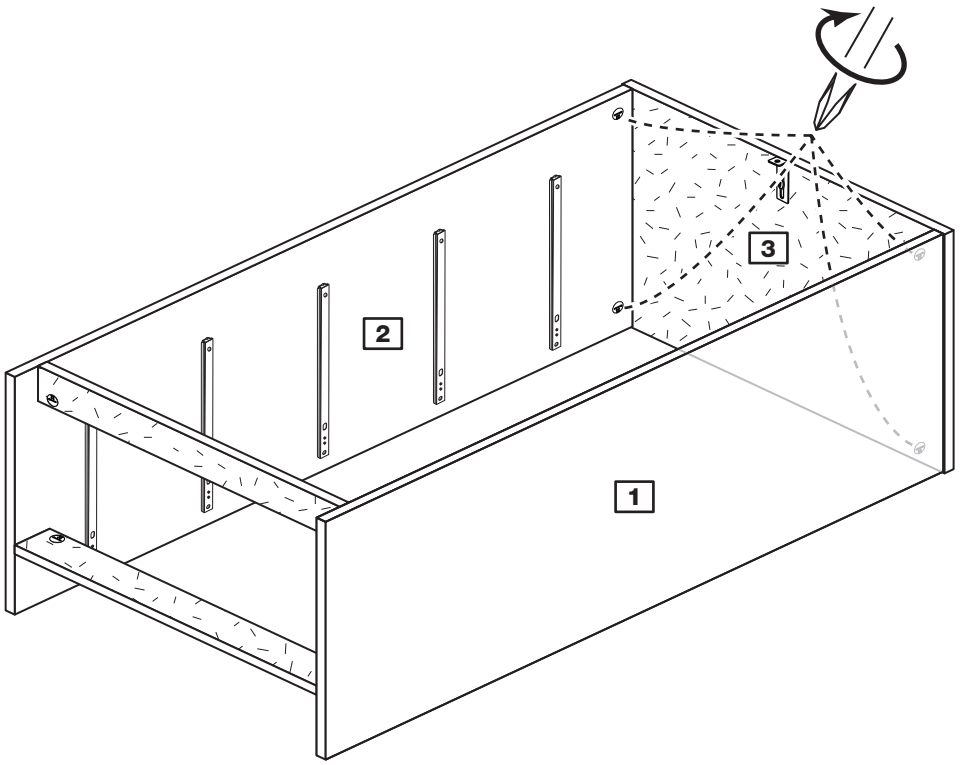


## Step 14

**Fit the back**

**a:** Square up the unit by making sure that measurement **x to x equals y to y.**

**b:** Place the back [10] onto the unit.


Nail (F) around the outside edges of the back [10].

***Note:*** Nails should be evenly spaced out.

**Stand the unit up for the next step.**

***Warning:*** The unit is heavy. Lift with care.

**a:** The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

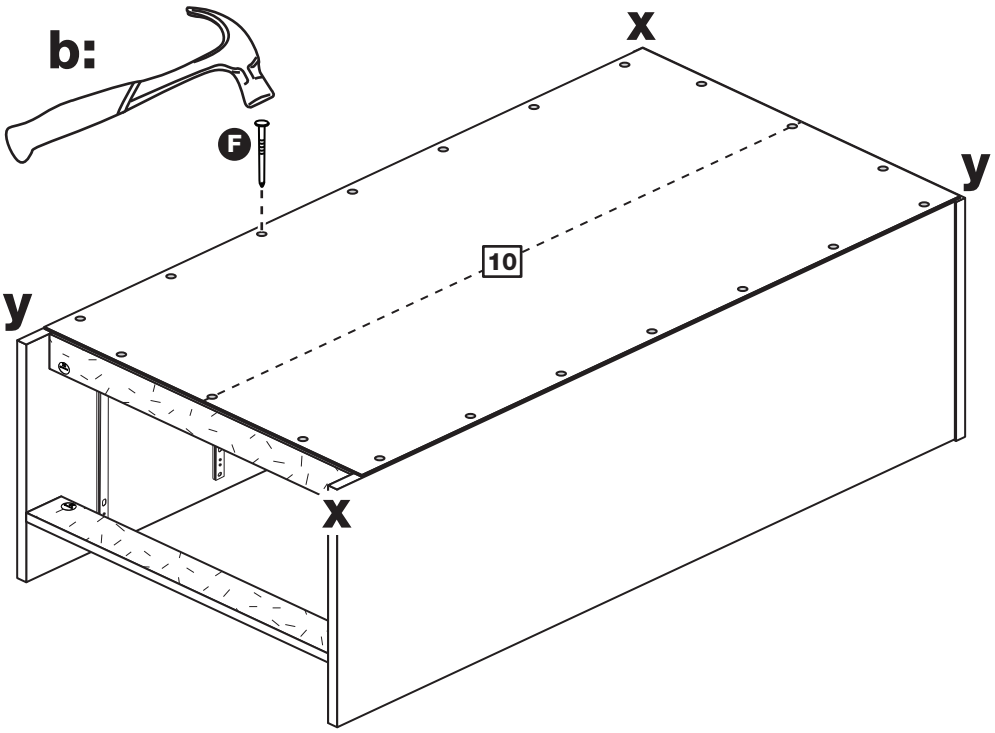

## Step 15


**Fit the drawers**


Starting with the bottom drawer ,slide both the runners J forward and locate the drawer sides 7 and 8 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners J.

Working from the inside of the drawer, insert 2 screws H through the drawer sides and out into the 2nd threaded hole in the runner.

***Note:*** Do not overtighten the screws H.
If they catch on the runner you may need to loosen them slightly.

**Assembly is complete**

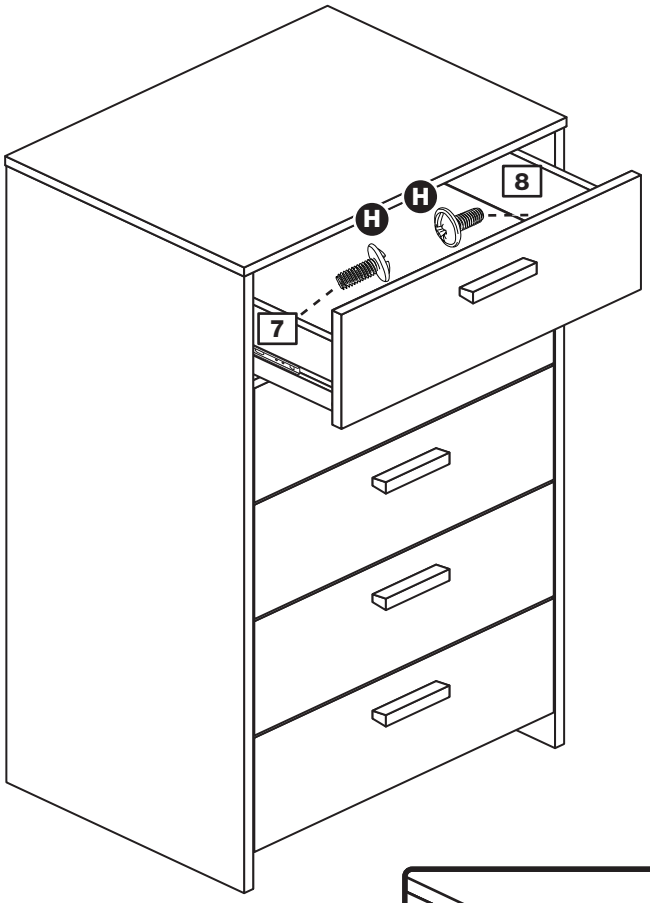

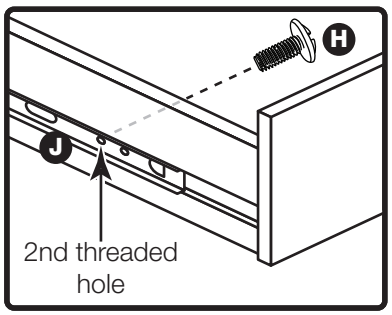
If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
*and quote the reference numbers on the component pages.*
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW