
Puerto Rico - 1 Drawer Bedside Chest

Assembly Instructions - Please keep for future reference

641/7697

643/1831

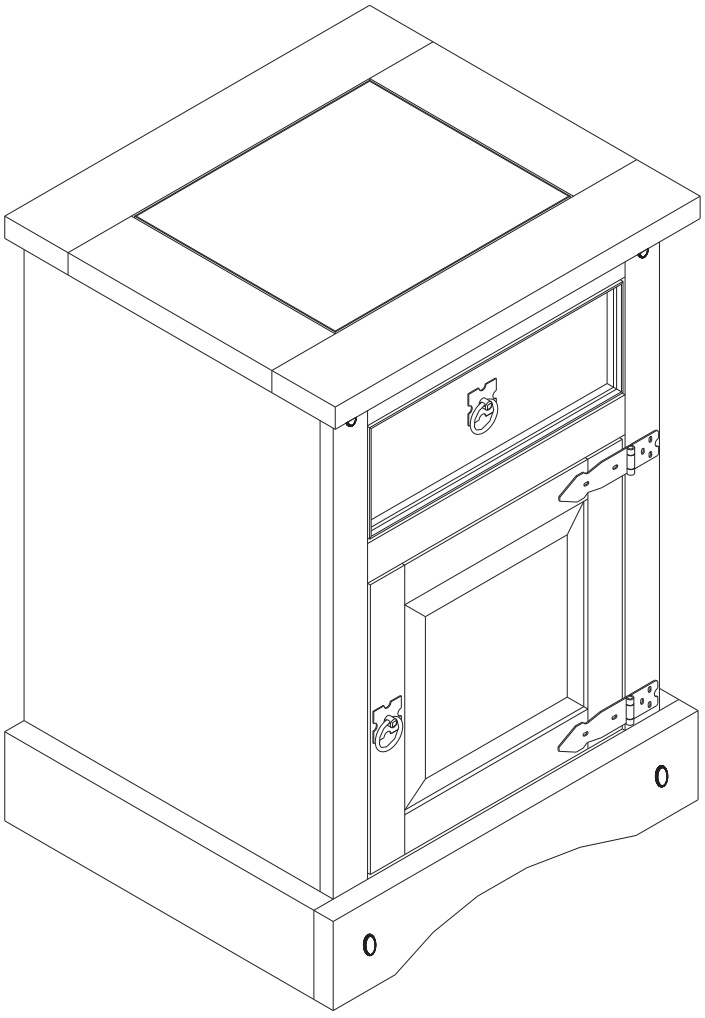

Dimensions

Width - 53cm
Depth - 48cm
Height - 76cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 19/07/10

Safety and Care Advice

Important Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fttings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

- The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

- On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

- This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.



- We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

- Parts of the assembly will be easier with 2 people.

- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

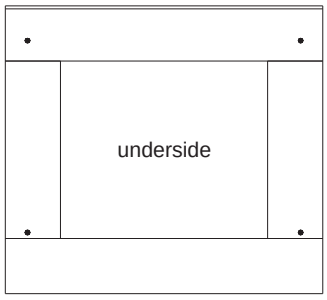


1 Top panel (53 x 48cm)

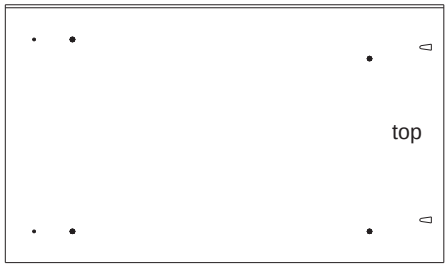


2 Right side panel (73.2 x 43cm)

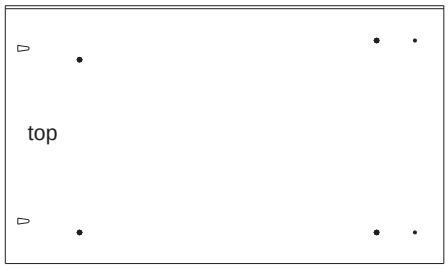


3 Left side panel (73.2 x 43cm)

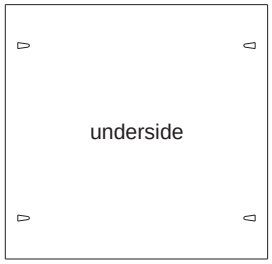

4 Base panel (43.8 x 42.4cm)

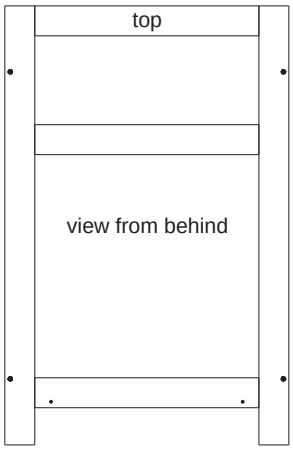

5 Front panel
(73.2 x 47.4cm)

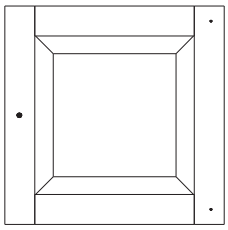


6 Door
(36.4 x 36.6cm)




7 Front plinth
(53 x 11.2cm)



8 Side plinth x 2
(45 x 11.2cm)



9 Drawer front
(36.8 x 14cm)




10 Drawer side x 2
(36 x 14cm)




11 Drawer back
(34.4 x 14cm)



12 Drawer runner x 2
(37.6 x 4cm)



13 Back panel
(65 x 45.6cm)



14 Drawer bottom
(34.7 x 35.5cm)










15 Blocks x 4
(10 x 2cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

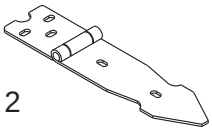
A  Wooden dowel x 18	**B**  14mm Screw x 15	**C**  30mm Screw x 14
D  35mm Screw x 24	**E**  40mm Screw x 4	**F**  19mm Bolt x 2
G  Door / Drawer handle x 2	**H**  Door hinge x 2	**J**  Metal stud x 4
K  Clip x 1	**L**  Plug x 1	**M**  Nail x 16
N  Washer x 2	**O**  Wall strap x 1	


Tools required


Phillips screwdriver (medium & large)

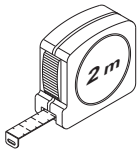


Ruler/tape measure


Small hammer


Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1


Fixing blocks to the right side panel.
(Two people required for an easier assembly)

a: Place blocks 15 in the positions shown.

Attention:
The blocks must be aligned to the side edge.


b: Attach blocks 15 into right side panel using screws D.

Repeat above procedures for the left side panel 3 and blocks 15.

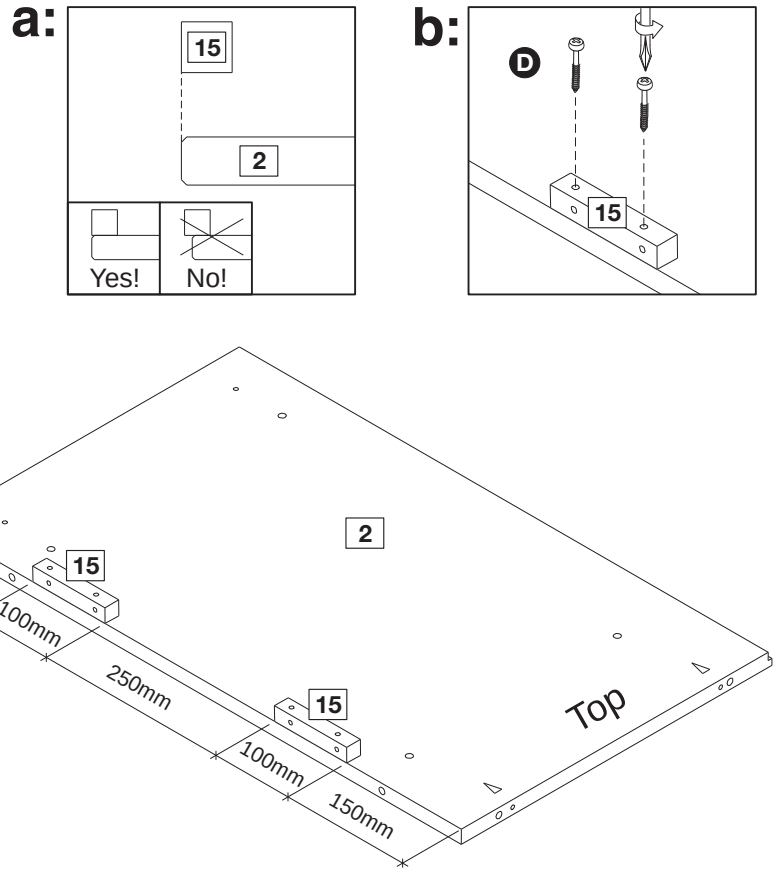

Step 2

Insert dowels A into the indicated parts.

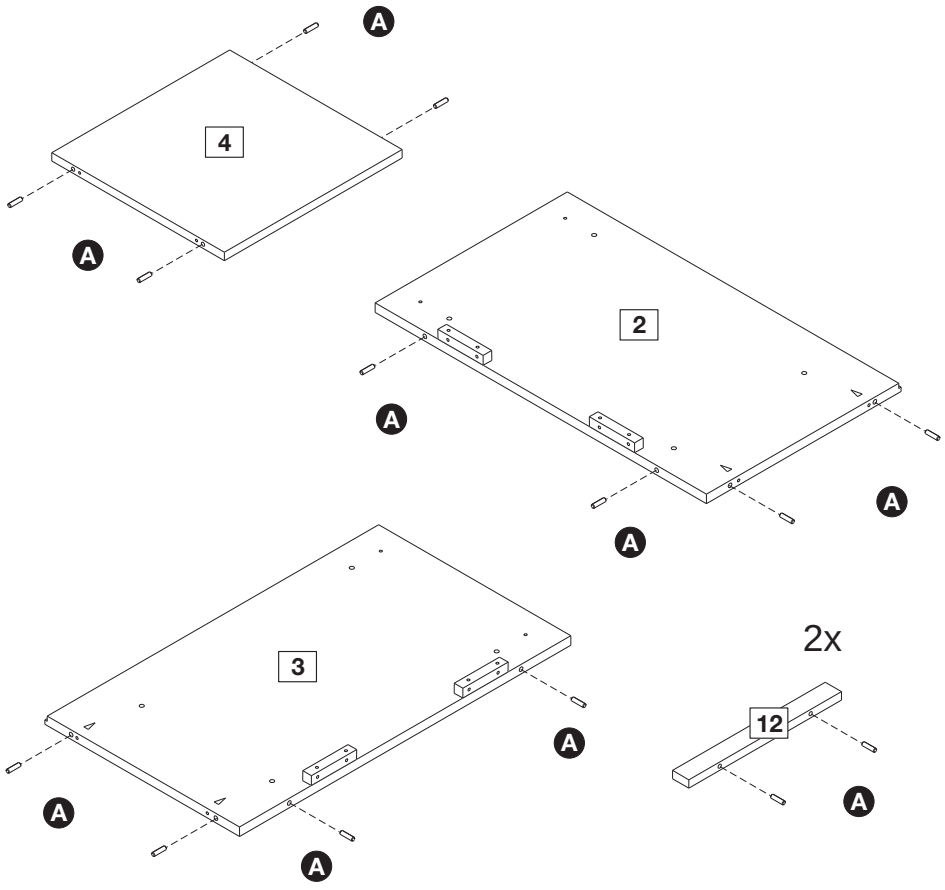


Assembly Instructions

Step **3**

Assembling the cabinet.

Fit base panel 4 to the side panels 2 and 3 then fix using screws D.

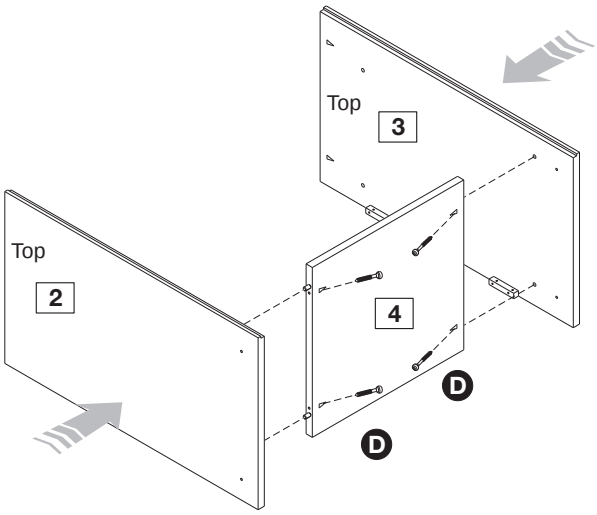


Step **4**

Fixing panels.

Two people required for an easier assembly.

Fit side panels 2 and 3 on the front panel 5.

Attach side panels 2 and 3 on the front panel 5 using screws D.

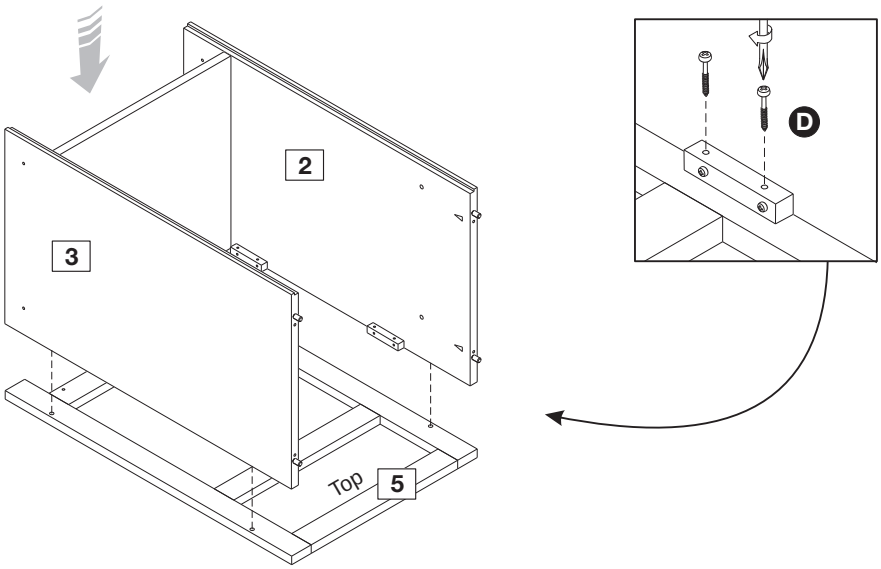


Step **5**

Fixing top.

Two people required for an easier assembly.

Attach cabinet to the top panel 1 using screws D.

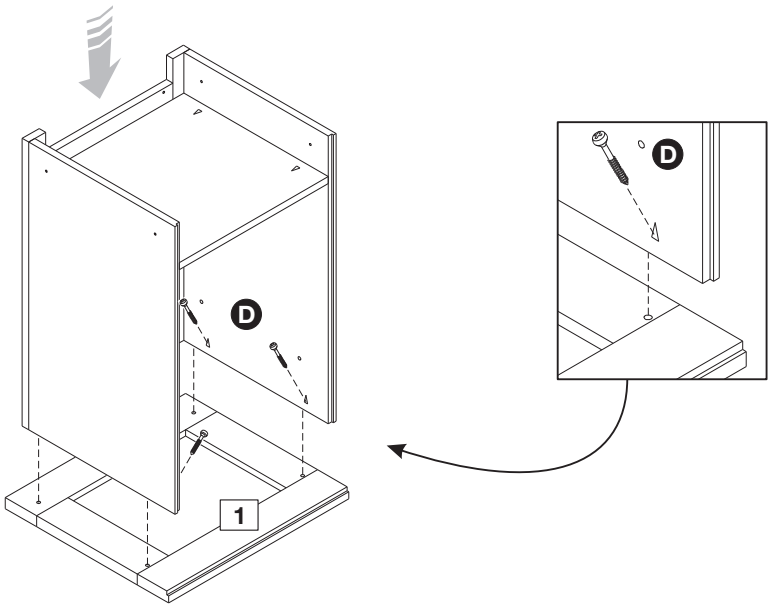



Assembly Instructions

Step 6

Fixing drawer runners.

Fix side drawer runners 12 to the side panels using screws E as shown.

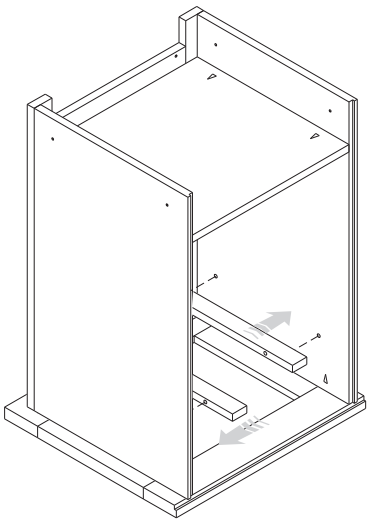

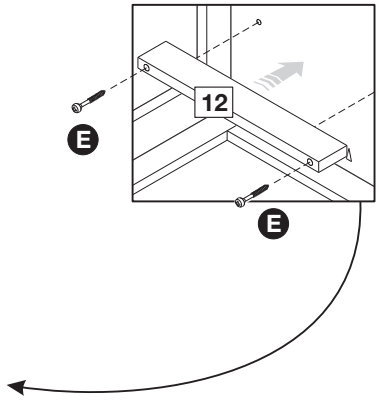


Step 7

a: Fix side plinths 8 to the side panels using screws C.

Note: Make sure side plinths are aligned to the bottom and front edges of the side panels.

b: Fix front plinth 7 to the bottom front panel 5 using screws C.


Note: Make sure front plinth 7 is aligned to the bottom edge of the side panels and in line to the side plinths.

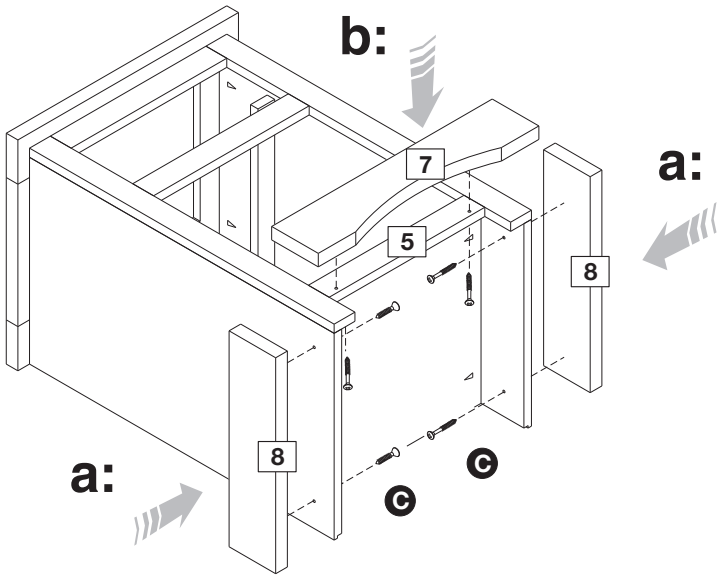



Step 8

Important: With help, carefully stand the product upright.

Fix metal studs J into the pre drilled holes in the top panel 1 and front plinth 7.

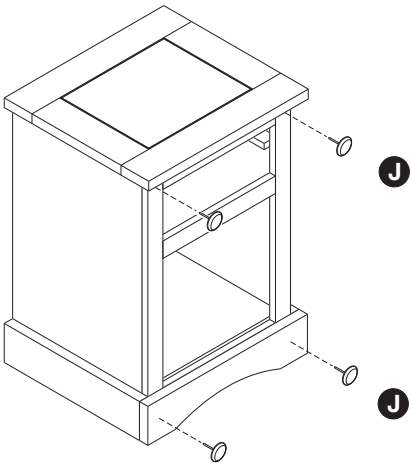

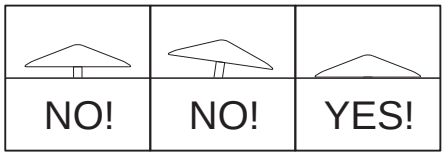

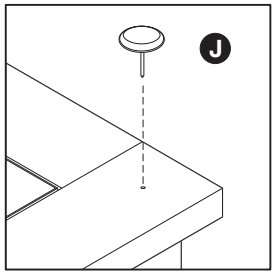

Assembly Instructions

Step 9


Drawer assembly.


a: Attach drawer sides 10 to the drawer front 9 using screws C.


b: Slide drawer bottom into slots on drawer sides and position drawer back 11 in place.


c: Holding the drawer back 11, press the drawer sides and fix them using screws C.

d: Using screw F attach the drawer handle G to the drawer front.

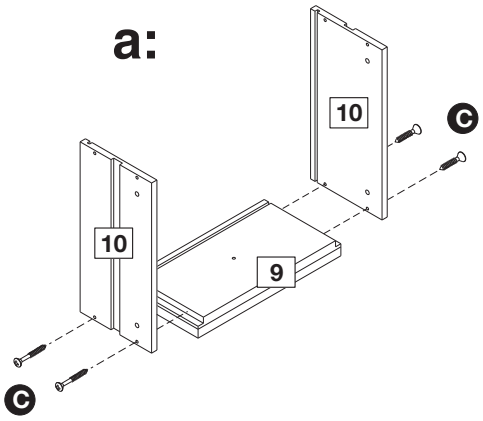

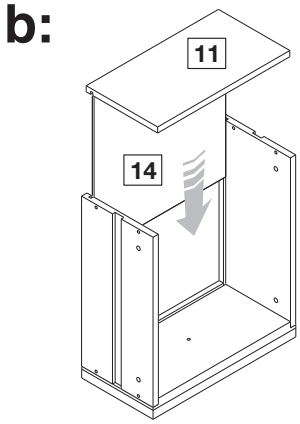

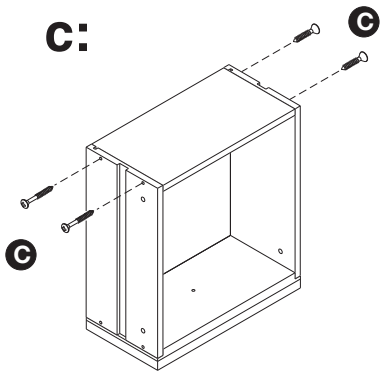

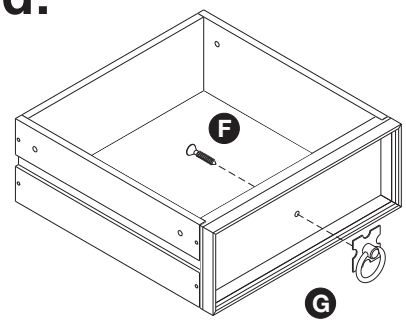


Step 10

Fitting hinges to door.

Attach hinges H to the pre drilled holes in the door using screws B.

Attach handle G to the door using screw F.

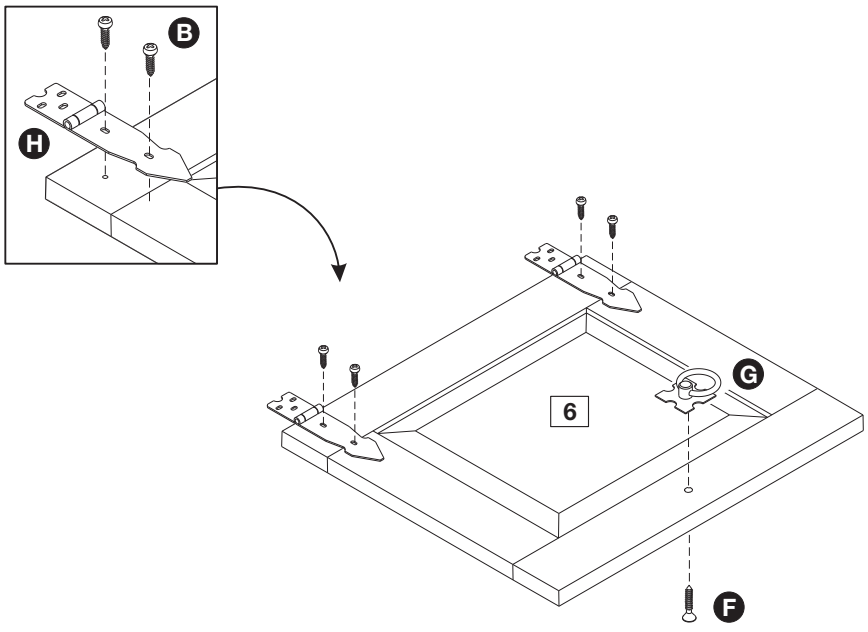

Assembly Instructions


Step **11**

Hanging door.

Attention:
Door can be fitted left hand or right hand.

Fix the hinges using screws **B** as shown.

Note:
To ensure the alignment of the door is correct, centralise the door in the opening before attaching to the cabinet.

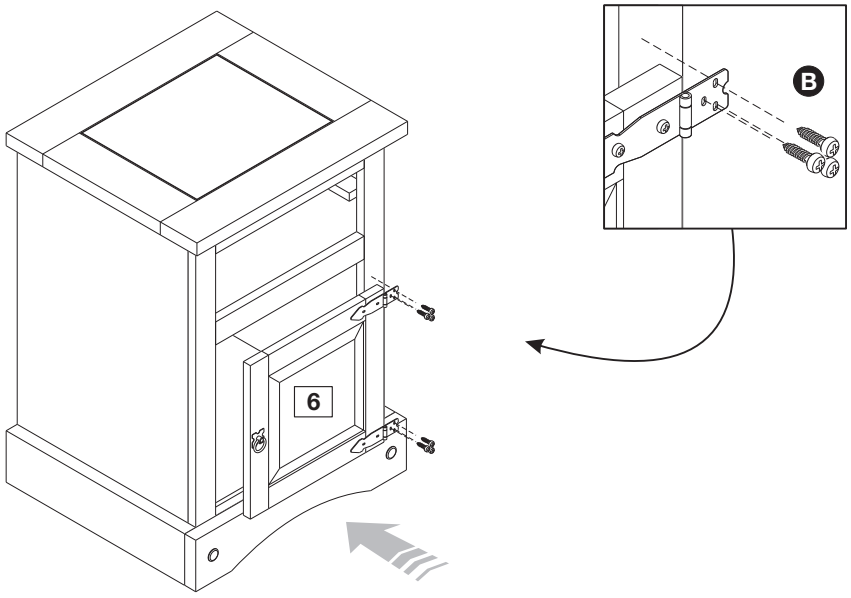

Step **12**


Fitting door lock.


a: Screw clip **K** in place using screws **B**. Ensure that the 2 small wheels are flush with the edge of the base.

b: Insert plug **L** into clip **K**, ensuring they are leveled.

c: Push the door against the plug **L** . This will make 4 small marks on the door.


d: The door can then be opened and plug **L** can be screwed into place using the 4 marks made as a guide. This will ensure that the 2 parts of the door clip are lined up correctly.

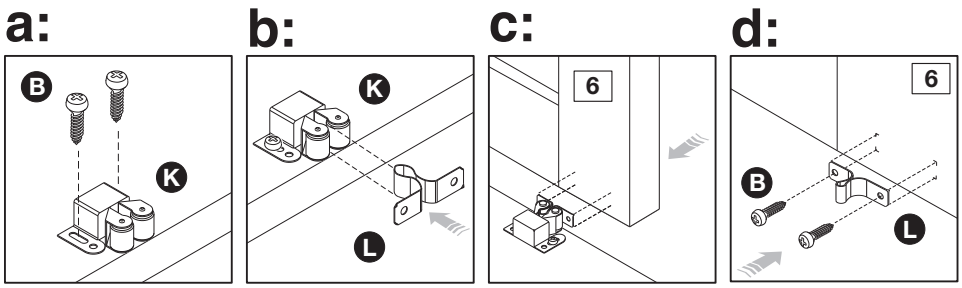

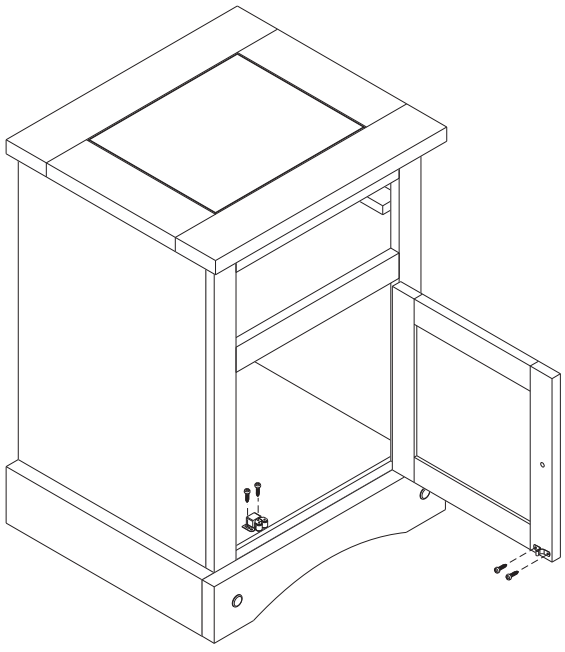

Step **13**

Insert drawer into unit. With the back of the drawer past the front frame, use a hammer to tap dowels Ⓐ in flush to drawer sides. This is a safety catch to stop drawer falling out.

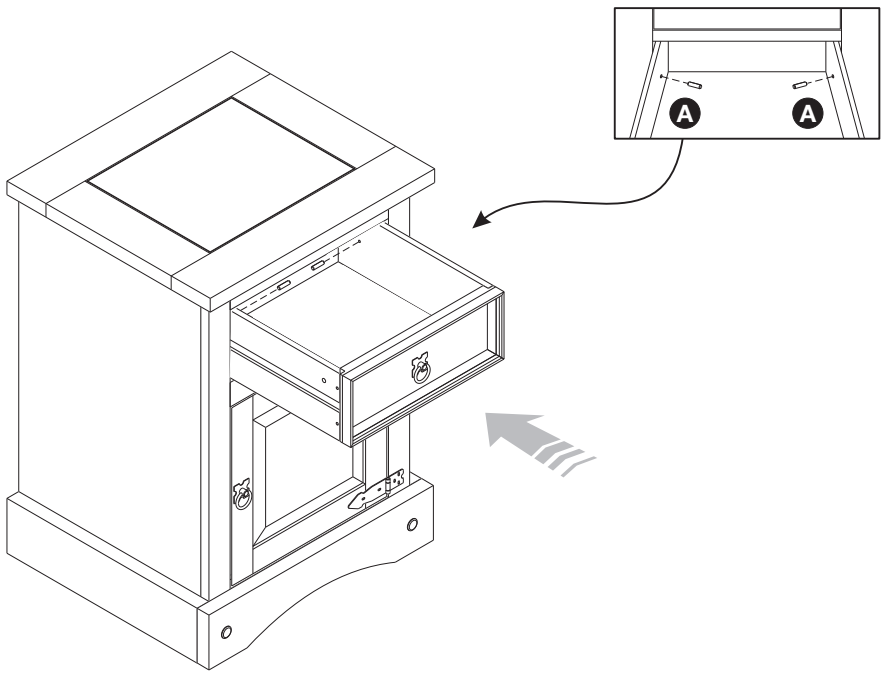



Step **14**

Fixing back panel.

Important: Cabinet **MUST** be up right and 'square' when back panel is attached.

Attach the back panel 13 using nails Ⓜ.

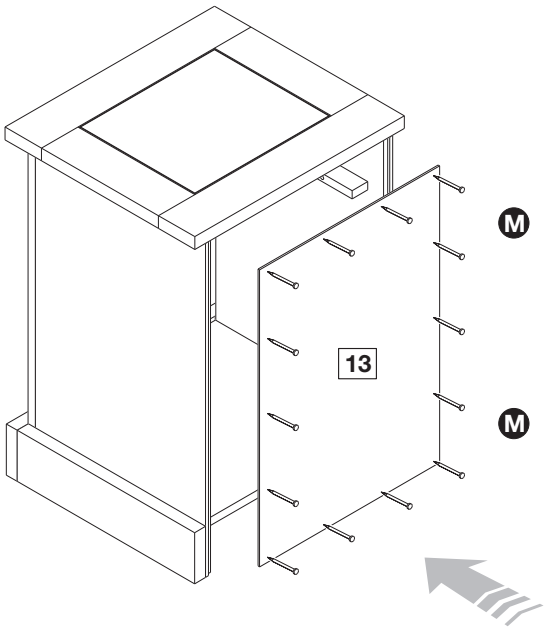

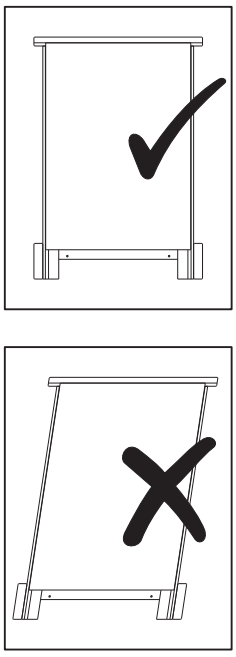

Step **15**

Fixing to wall.

It is recommended that the furniture is fixed to a wall. Fix wall strap **O** to top of furniture using washer **N** and screw **B**. With help, move furniture into position.

Lift with care.


Mark fixing hole on wall and remove furniture. Drill hole and insert wall plug (not supplied).


Warning: Before drilling check wall for hidden pipes and cables.

Reposition furniture and fix wall strap using washer **N** and suitable screw.

Assembly is complete.

Note: Wall plugs not supplied. The correct type of fxing must be used for your wall, seek professional advice if in doubt.

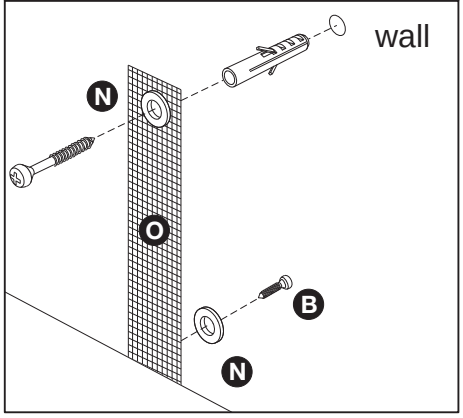

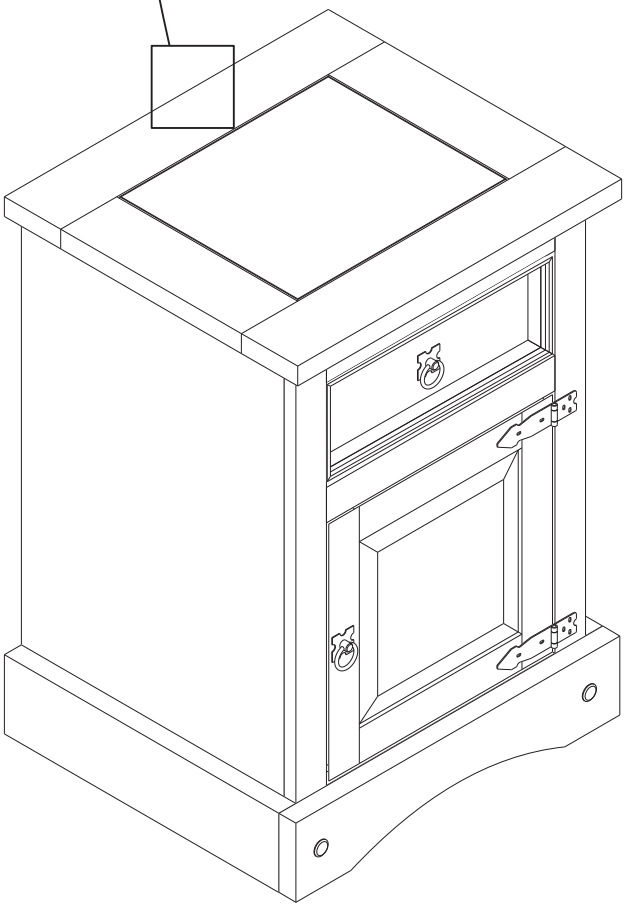


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

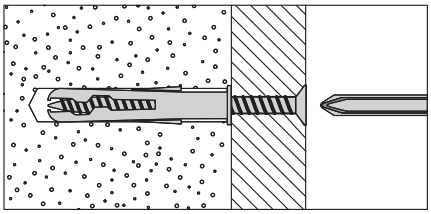


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

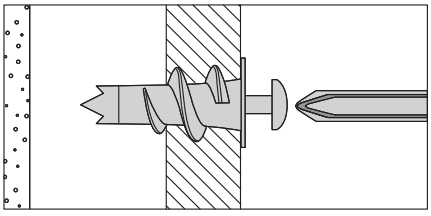


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

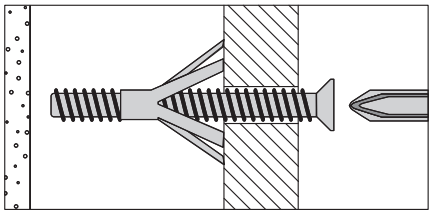


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

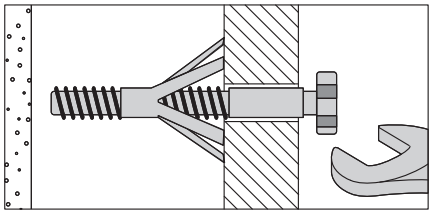


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

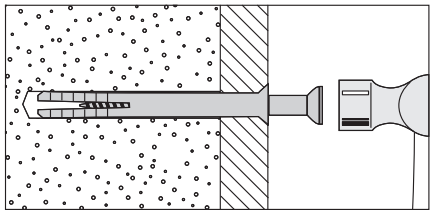

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

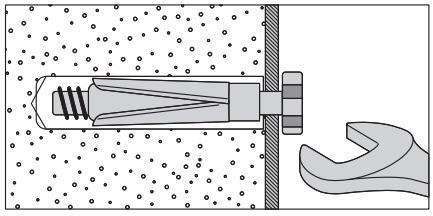

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Puerto Rico - 3+3 Drawer Chest

Assembly Instructions - Please keep for future reference

641/7707

643/1848



Dimensions

Width - 132cm
Depth - 48cm
Height - 104cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 12/07/10

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fttings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

- The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

- On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

- This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.



- We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

- Parts of the assembly will be easier with 2 people.

- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

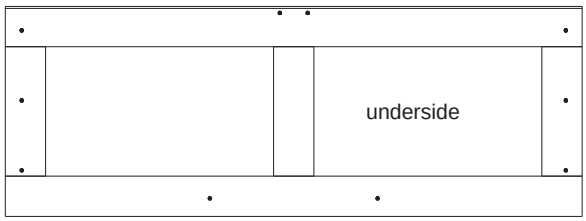


1 Top panel (132 x 48cm)

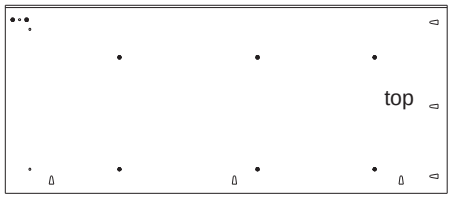

2 Right side panel (101 x 43cm)

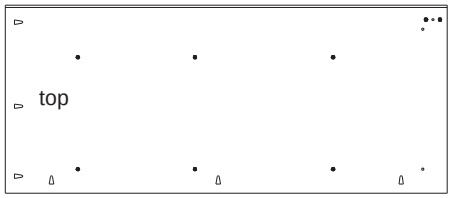


3 Left side panel (101 x 43cm)

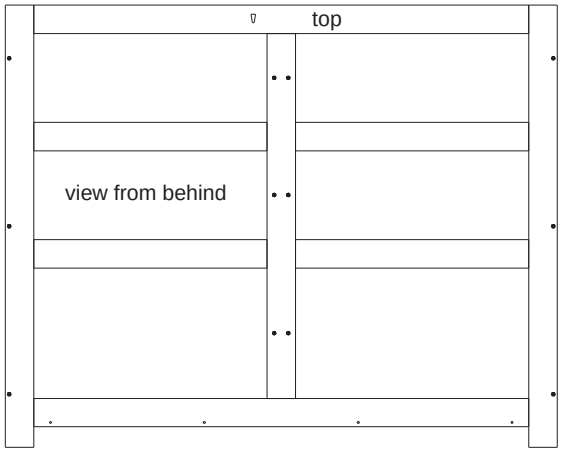


4 Front panel (101 x 126.3cm)



5 Front plinth (132 x 11.2cm)

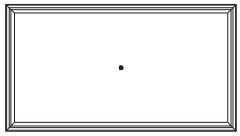


6 Larger drawer front x 2 (52.8 x 29cm)

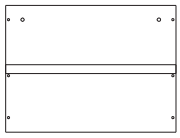

8 Larger drawer side x 4 (39 x 29cm)



10 Larger drawer back x 2 (50 x 29cm)



12 Side plinth x 2 (45 x 11.2cm)



15 Cross rail (122.7 x 6.5cm)




16 Bottom support (101 x 9.2cm)




17 Back panel x2 (100 x 59.3cm)



18 Drawer bottom x 6 (51 x 37.3cm)



7 Smaller drawer front x 4 (52.8 x 19.5cm)



9 Smaller drawer side x 8 (39 x 19.5cm)



11 Smaller drawer back x 4 (50 x 19.5cm)



13 Side drawer runner x 6 (35.4 x 5.5cm)












14 Middle drawer runner x 3 (40.5 x 8.1cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A  Wooden dowel x 58	**B**  14mm Screw x 1	**C**  35mm Screw x 64
D  35mm Screw x 19	**E**  40mm Screw x 8	**F**  50mm Screw x 18
G  19mm Bolt x 6	**H**  Drawer handle x 6	**J**  Nail x 56
K  Round Metal stud x 10	**L**  Square Metal stud x 1	**M**  Washer x 2
N  Wall strap x 1		


Tools required


Phillips screwdriver (medium & large)

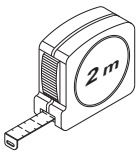


Ruler/tape measure


Small hammer


Eye protection (when using a hammer or glue)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Insert dowels (A) into the indicated parts.

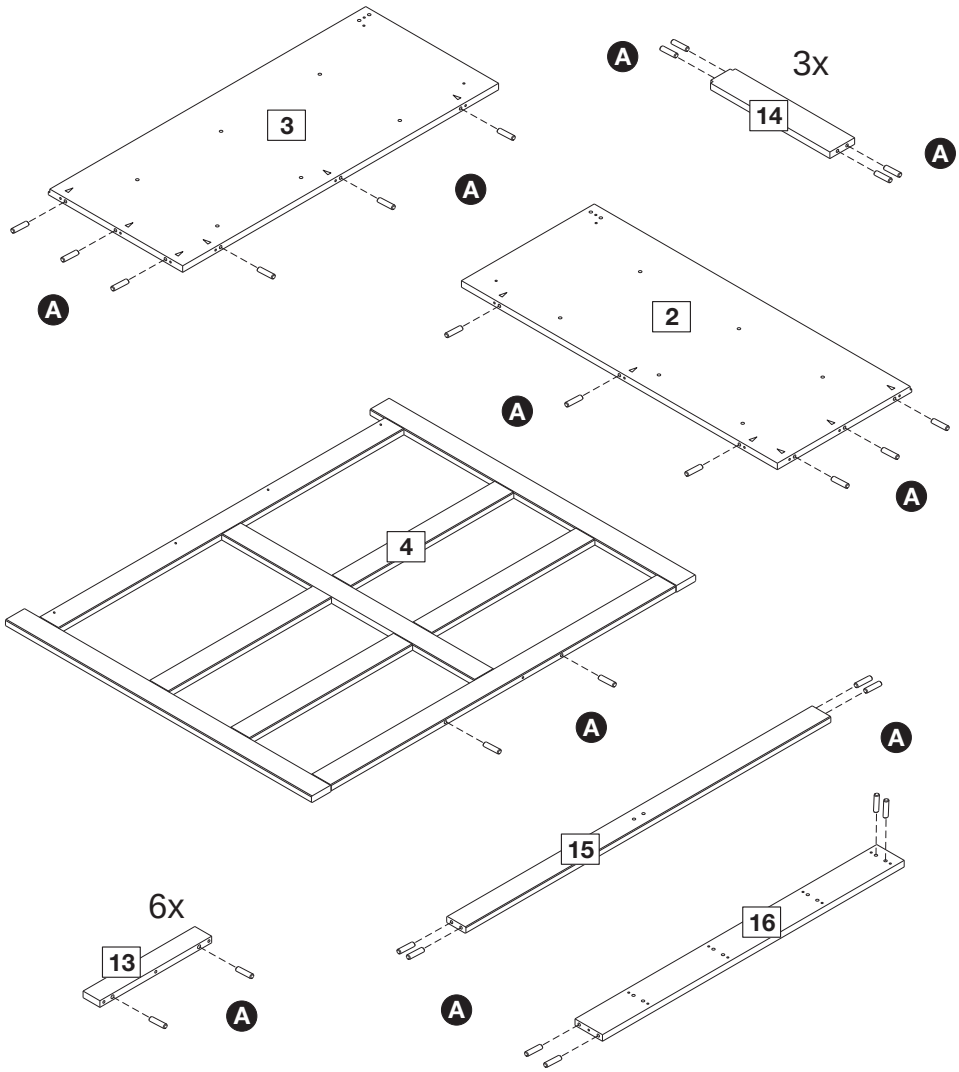


Step 2

Fixing drawer runners.

Attach 2 drawer runners 13 in right side panel 2 using screws (F).

Note:
Leave top drawer runner assembly for later.

Repeat above procedures for the left side panel 3 and 2 drawer runners 13.

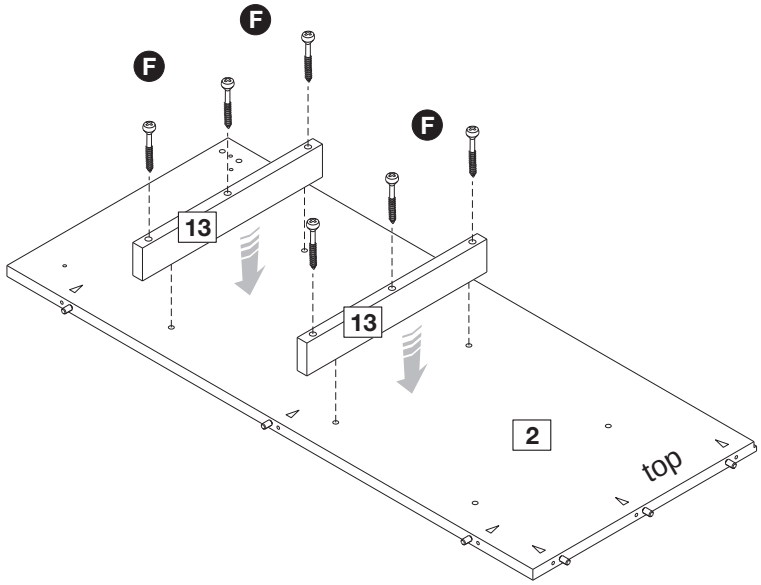


Assembly Instructions

Step **3**

Fixing cross rail.

Fit cross rail 15 to the side panels 2 and 3 then fix using screws E.

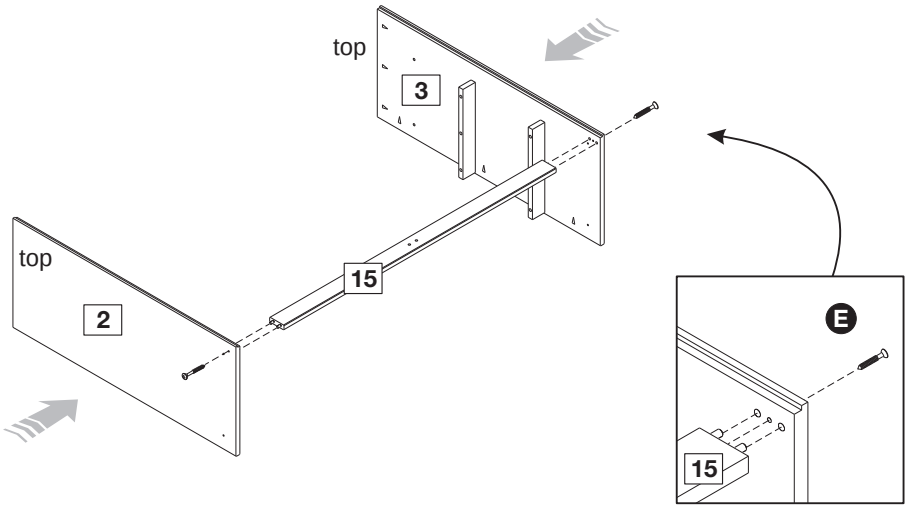


Step **4**

Fixing panels.

Two people required for an easier assembly.

Fit side panels 2 and 3 on the front panel 4.

Attach side panels 2 and 3 on the front panel 4 using screws D.

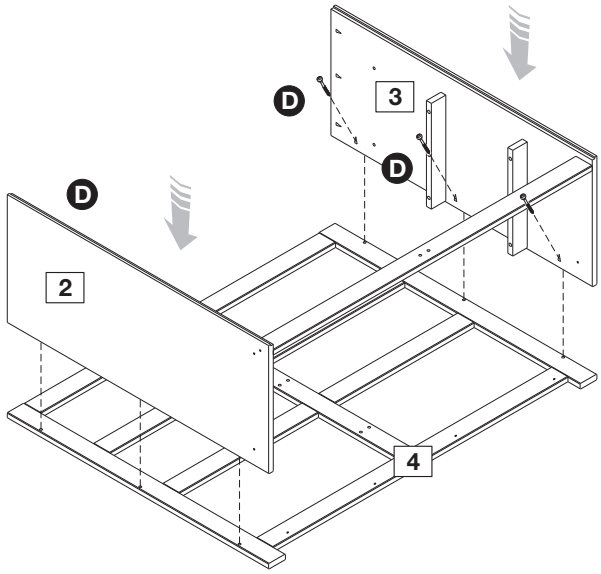


Step **5**

Fixing middle drawer runner.

Fit middle drawer runners 14 at the front panel 4 then fix using screws D.

Attention:
Make sure middle drawer runners 14 are positioned as shown in the diagram prior to fixing.

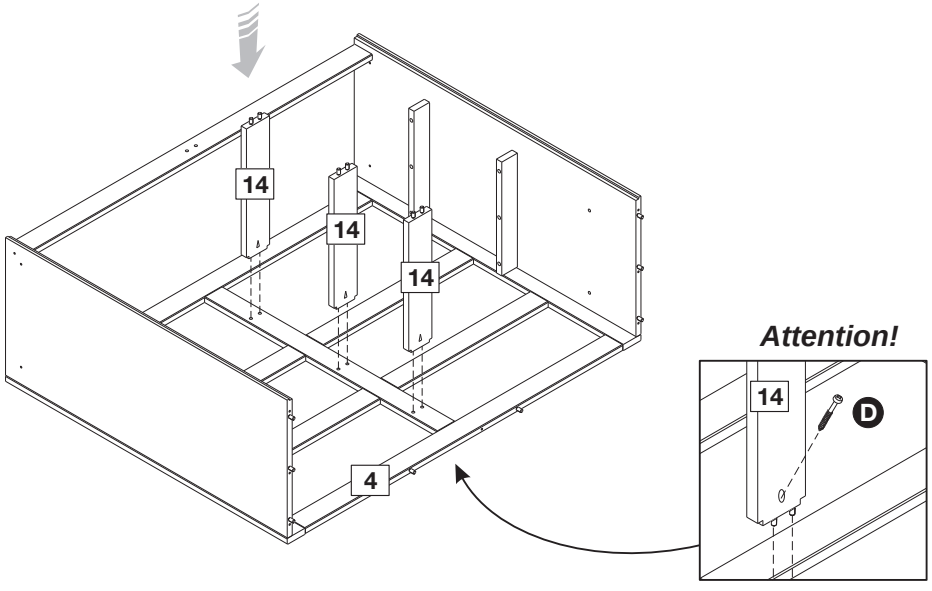

Assembly Instructions


Step 6

Fixing bottom suport.

Fit bottom suport 16 at the middle drawer runners 14 and cross rail 15.

Attach bottom suport and middle drawer runners using screws E.

Attach bottom suport and cross rail using screws D.

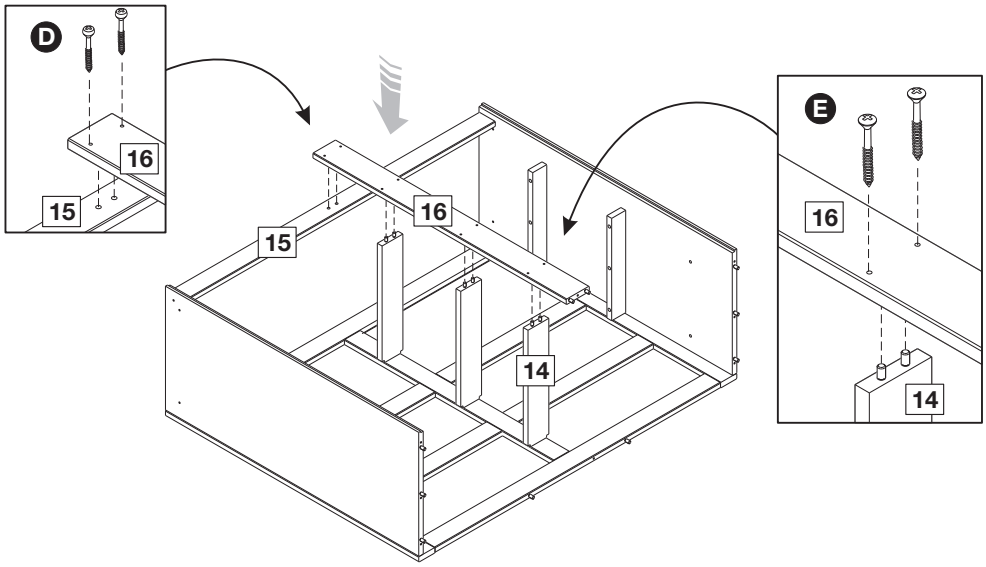


Step 7

Fixing top.


Two people required for an easier assembly.

Attach cabinet to the top panel 1 using screws D.

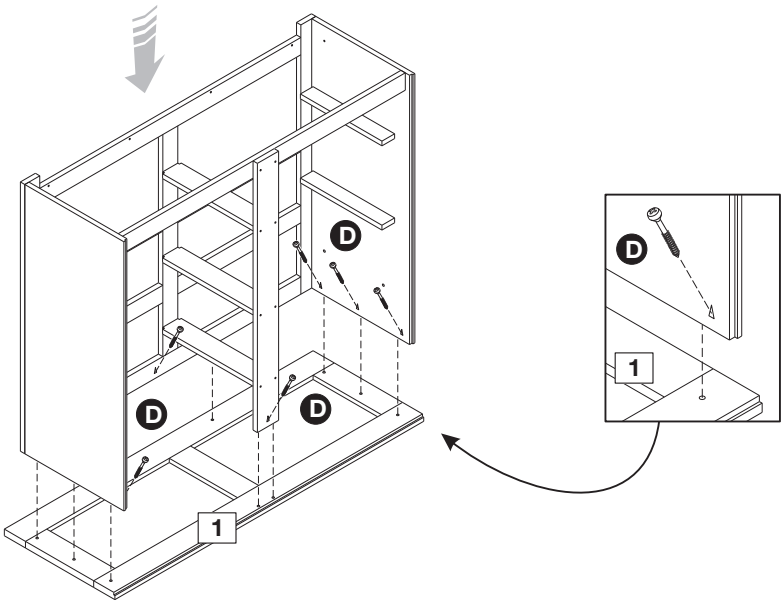

Step 8

Fix 2 side drawer runners 13 to the side panels using screws F as shown.

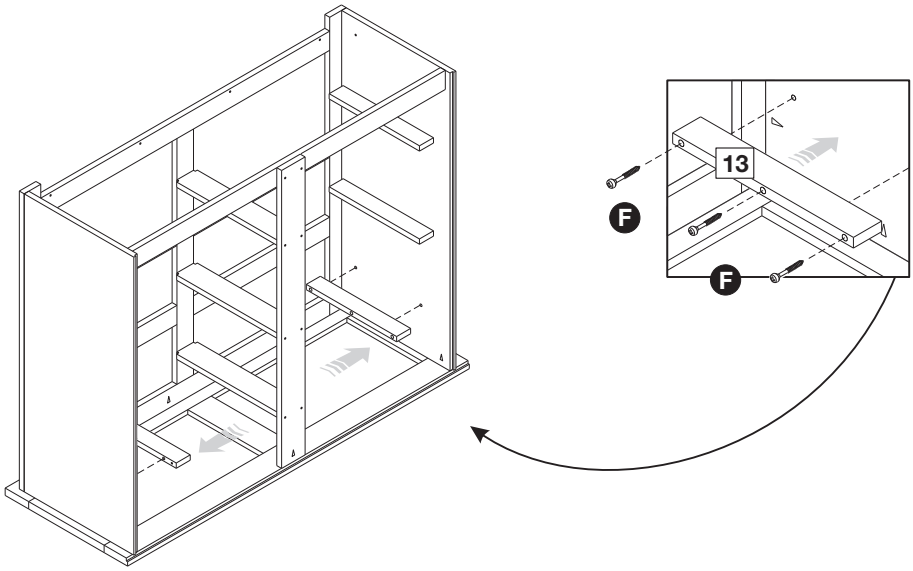

Assembly Instructions


Step **9**

a: Fix side plinths 12 to the side panels using screws C.

Note: Make sure side plinths are aligned to the bottom and front edges of the side panels.

b: Fix front plinth 5 to the bottom front panel 4 using screws C.

Note: Make sure front plinth 5 is aligned to the bottom edge of the side panels and in line to the side plinths.

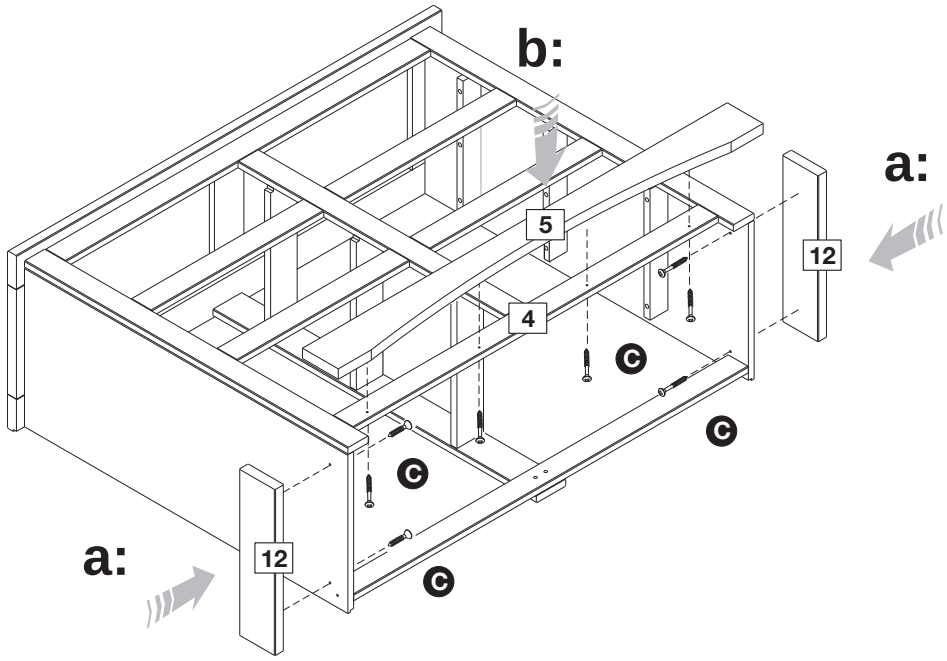

Step **10**

Larger drawer assembly.


a: Attach drawer sides 8 to the drawer front 6 using screws C.


b: Slide drawer bottom into slots on drawer sides and position drawer back 10 in place.

c: Holding the drawer back 10, press the drawer sides and fix them using screws C.

d: Using screw G attach the drawer handle H to the drawer front.

Repeat above procedures for the other larger drawer.

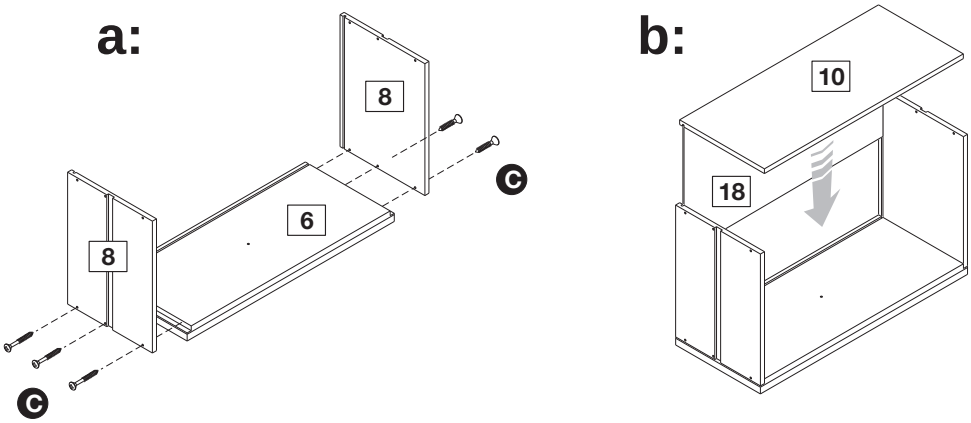

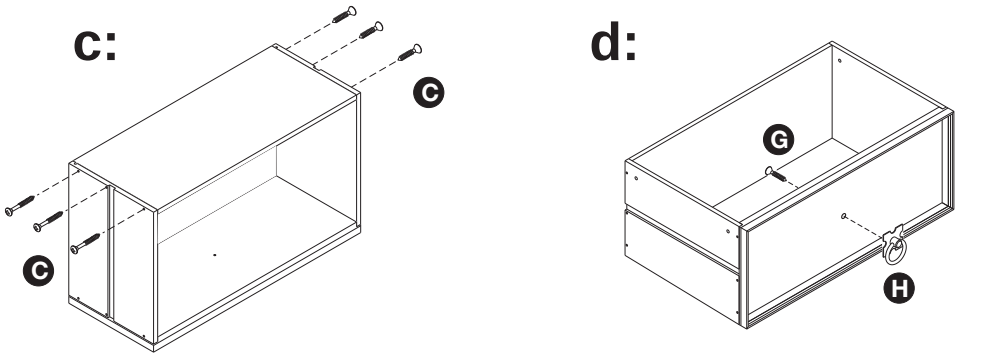

Step **11**

Smaller drawer assembly.


a: Attach drawer sides 9 to the drawer front 7 using screws C.

b: Slide drawer bottom into slots on drawer sides and position drawer back 11 in place.

c: Holding the drawer back 11, press the drawer sides and fix them using screws C.

d: Using screw G attach the drawer handle H to the drawer front.

Repeat above procedures for the other smaller drawers.

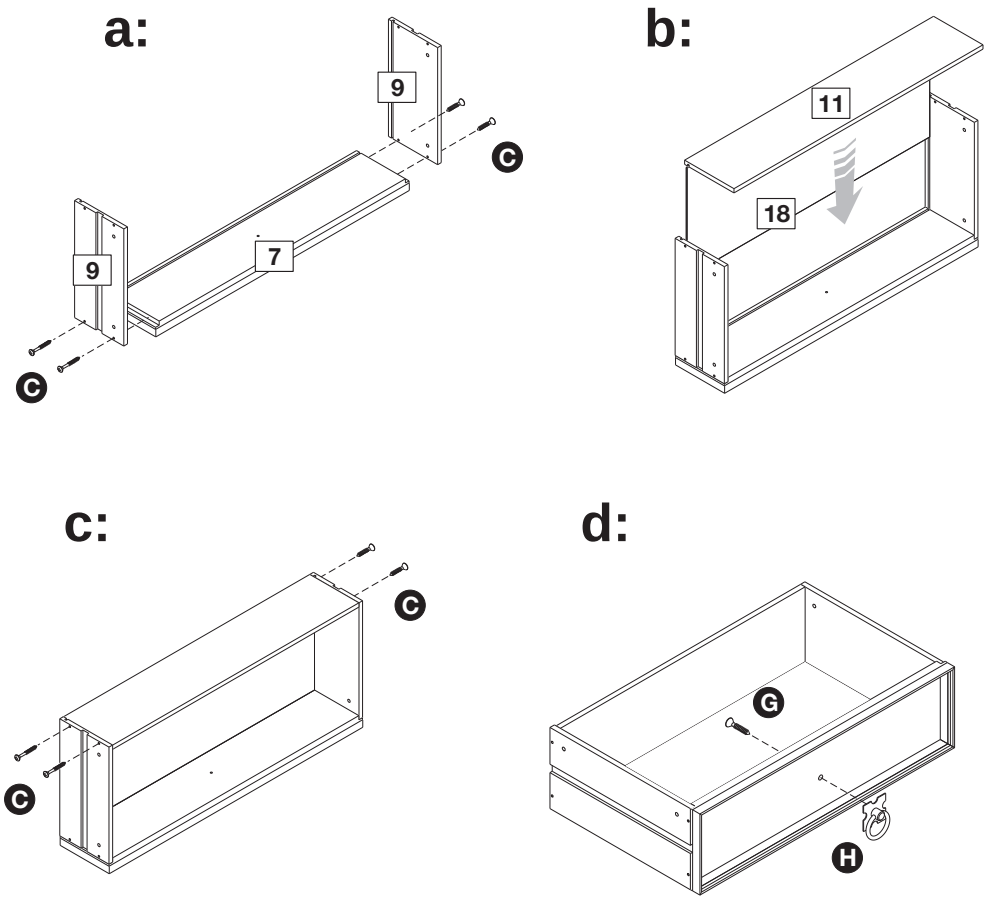


Step **12**

Fixing back panels.

Important:
With help, carefully stand the product upright.


Important:
Cabinet **MUST** be up right and square when back panel are attached.

Attach the back panels 17 using nails J.

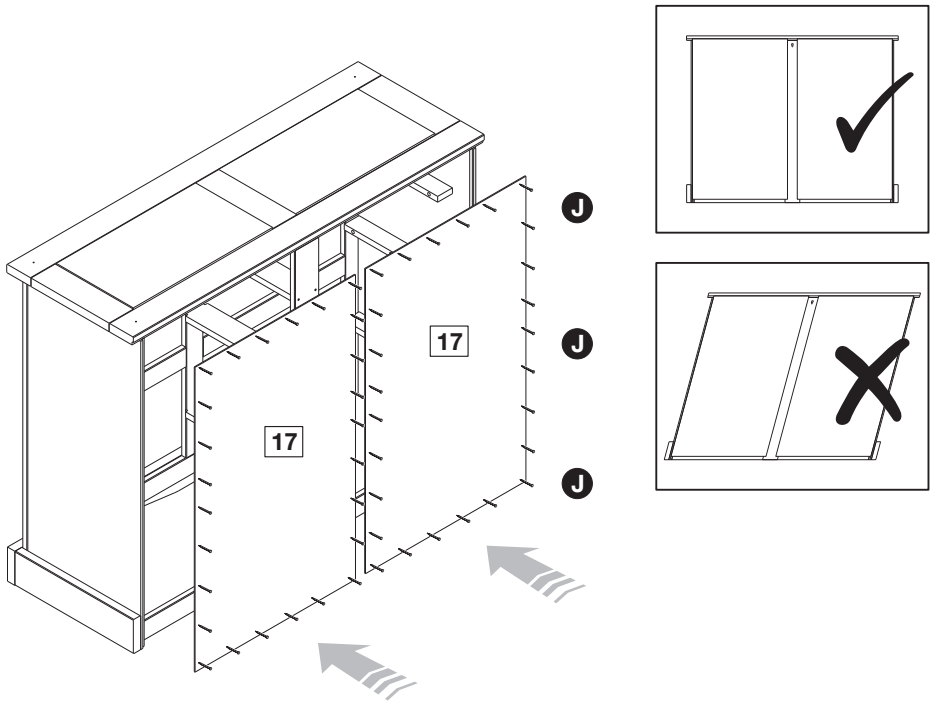


Step **13**


Insert drawers into unit. With the back of the drawers past the front frames, use a hammer to tap dowels Ⓐ in flush to drawer sides. This is a safety catch to stop drawer falling out.

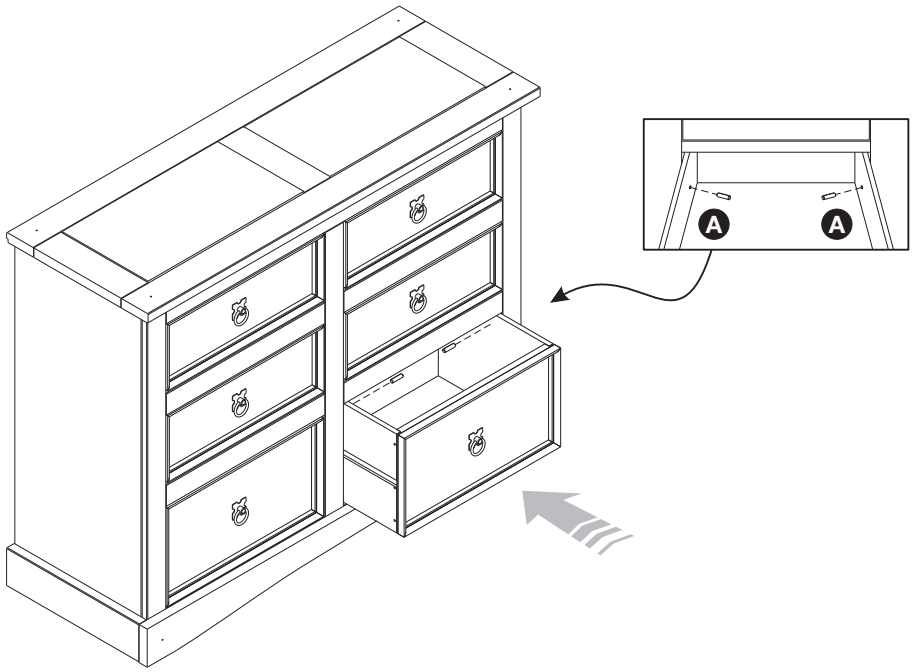


Step **14**

a: Fix round metal studs Ⓚ into the pre drilled holes in the top panel 3, front frame 4 and front plinth 13.

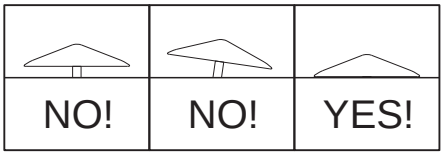

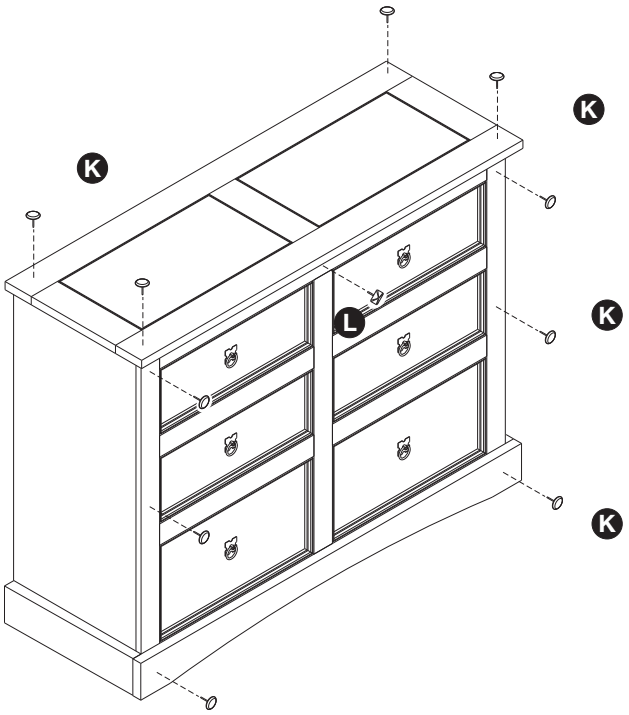


a:

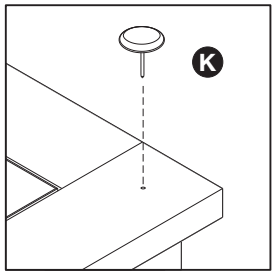

b: Fix square metal stud Ⓛ to the product as shown in the diagram.

Important: Make sure Ⓛ is fixed right in the middle of top front pane.

b:

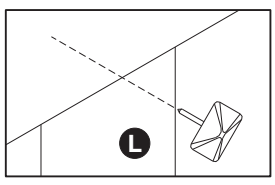

Step **15**

Fixing to wall.

It is recommended that the furniture is fixed to a wall. Fix wall strap **N** to top of furniture using washer **M** and screw **B**. With help, move furniture into position.

Lift with care.


Mark fixing hole on wall and remove furniture. Drill hole and insert wall plug (not supplied).


Warning: Before drilling check wall for hidden pipes and cables.

Reposition furniture and fix wall strap using washer **M** and suitable screw.

Assembly is complete.

Note: Wall plugs not supplied. The correct type of fxing must be used for your wall, seek professional advice if in doubt.

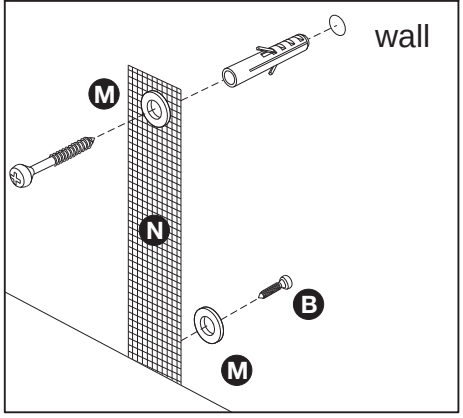

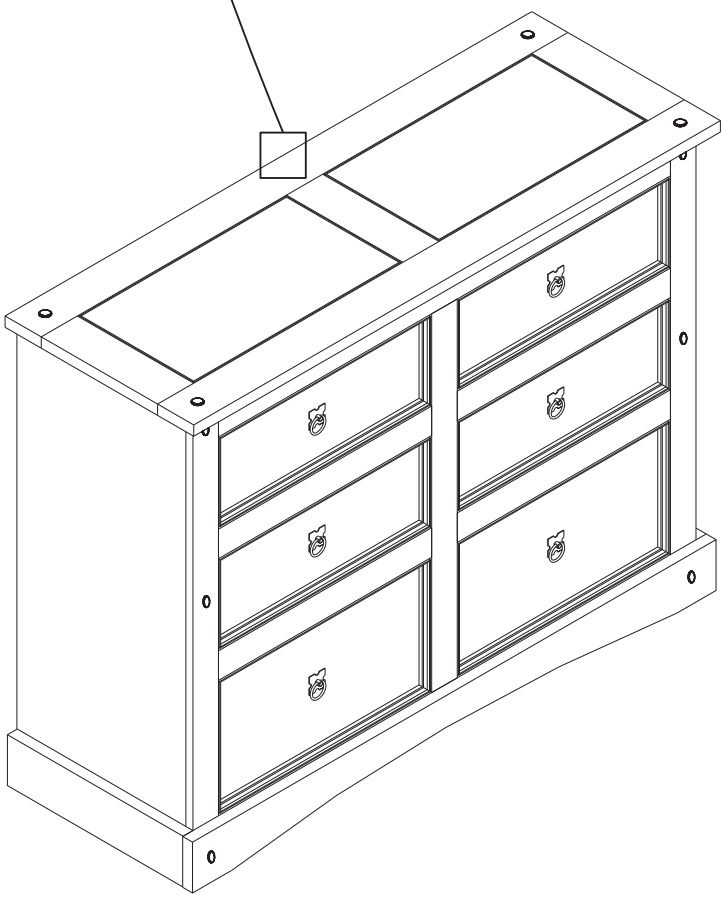

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

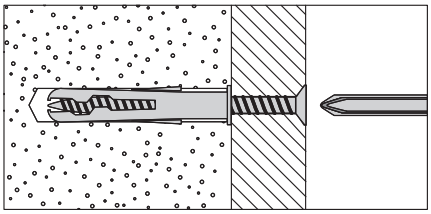


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

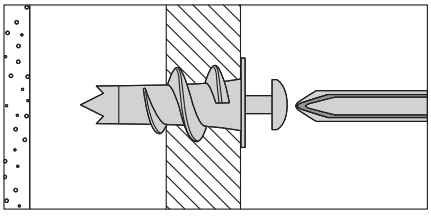


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

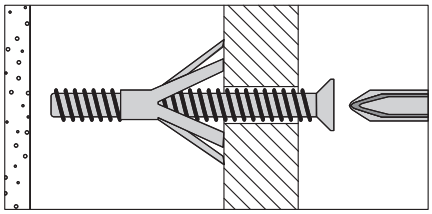


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

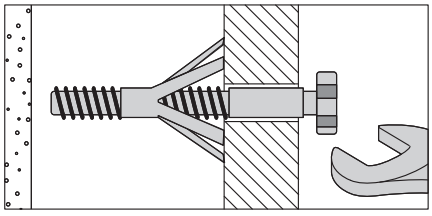


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

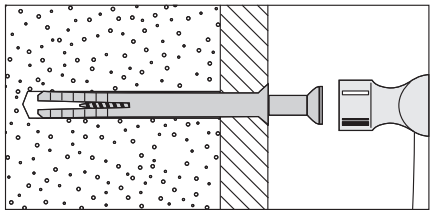

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

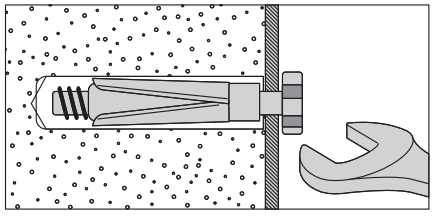

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Puerto Rico - 3+3 Drawer Chest

Assembly Instructions - Please keep for future reference

641/7707

643/1848



Dimensions

Width - 132cm
Depth - 48cm
Height - 104cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400 800**

Issue 1 - 20/06/11

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below

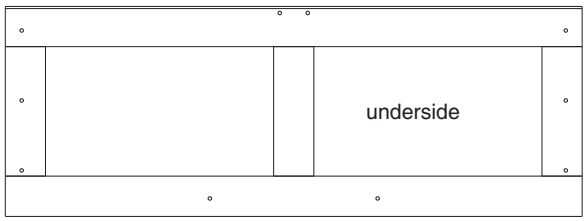


1 Top panel (132 x 48cm)

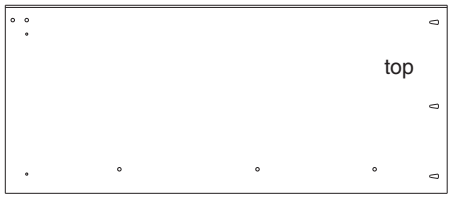

2 Right side panel (101 x 43cm)

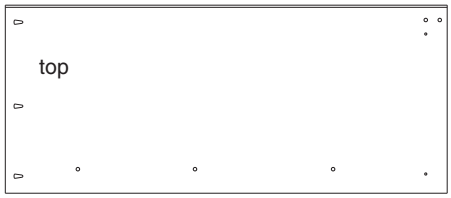


3 Left side panel (101 x 43cm)

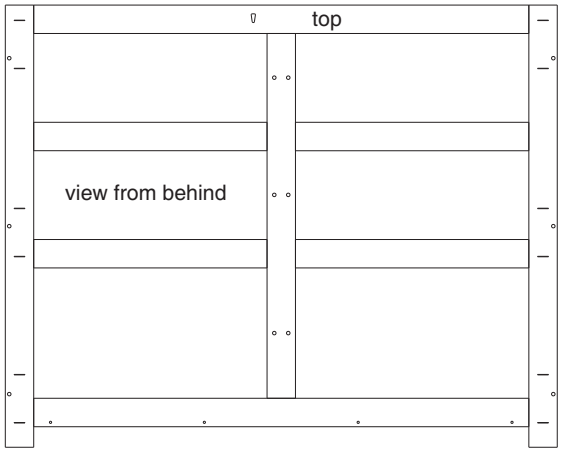


4 Front frame (101 x 126.3cm)



5 Front plinth (132 x 11.2cm)

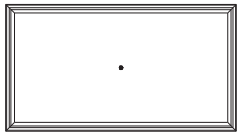


6 Larger drawer front x 2 (52.8 x 29cm)

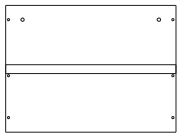

8 Larger drawer side x 4 (39 x 29cm)



10 Larger drawer back x 2 (50 x 29cm)



12 Side plinth x 2 (45 x 11.2cm)




15 Cross rail (122.7 x 6.5cm)



16 Back column (101 x 9.2cm)




17 Block x 6 (10 x 2cm)




18 Back panel x2 (100 x 59.3cm)



19 Drawer bottom x 6 (51 x 37.3cm)




7 Smaller drawer front x 4 (52.8 x 19.5cm)



9 Smaller drawer side x 8 (39 x 19.5cm)



11 Smaller drawer back x 4 (50 x 19.5cm)



13 Side drawer runner x 6 (35.4 x 5.5cm)












14 Middle drawer runner x 3 (40.5 x 8.1cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 03456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Wooden dowel x 58	**B**  14mm Screw x 1	**C**  35mm Screw x 64
D  35mm Screw x 39	**E**  40mm Screw x 6	**F**  50mm Screw x 18
G  19mm Bolt x 6	**H**  Drawer handle x 6	**J**  Nail x 56
K  Round Metal stud x 10	**L**  Square Metal stud x 1	**M**  Washer x 2
N  Wall strap x 1		


Tools required




Phillips screwdriver (medium & large)

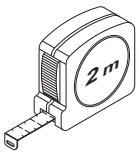

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

Fixing blocks to right side panel.
(Two people required for an easier assembly)

a: Place blocks 17 in the positions shown.

Attention:
The blocks must be aligned to the side edge.

b: Attach blocks 17 into right side panel 2 using screws D.

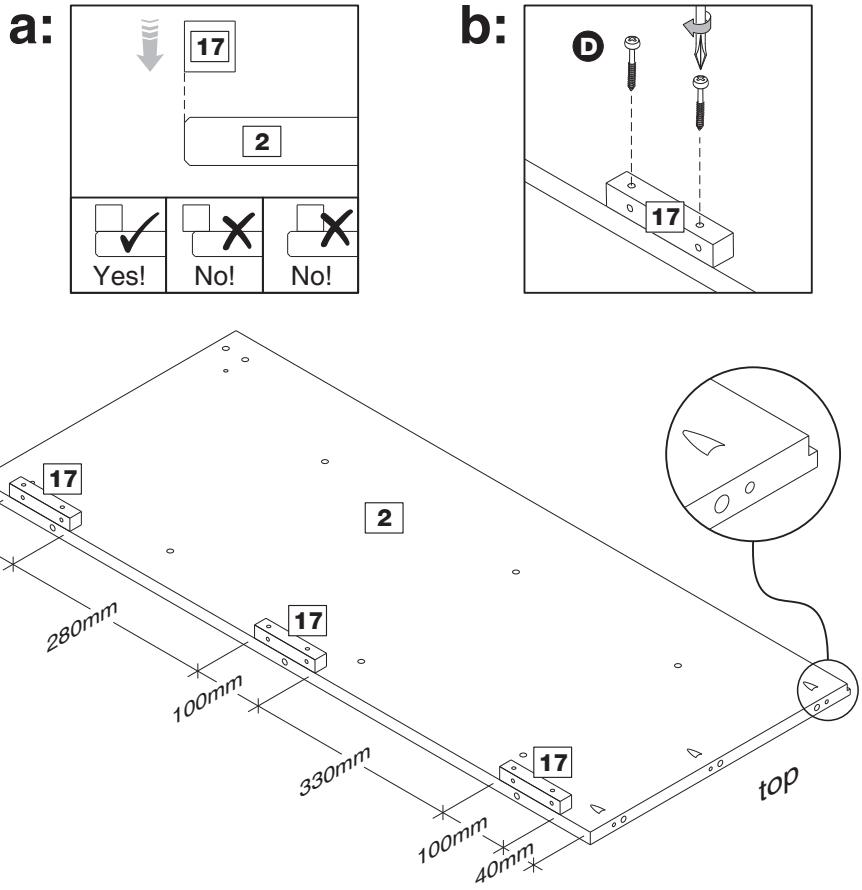


Step 2

Fixing blocks to left side panel.
(Two people required for an easier assembly)

a: Place blocks 17 in the positions shown.


Attention:
The blocks must be aligned to the side edge.

b: Attach blocks 17 into left side panel 3 using screws D.

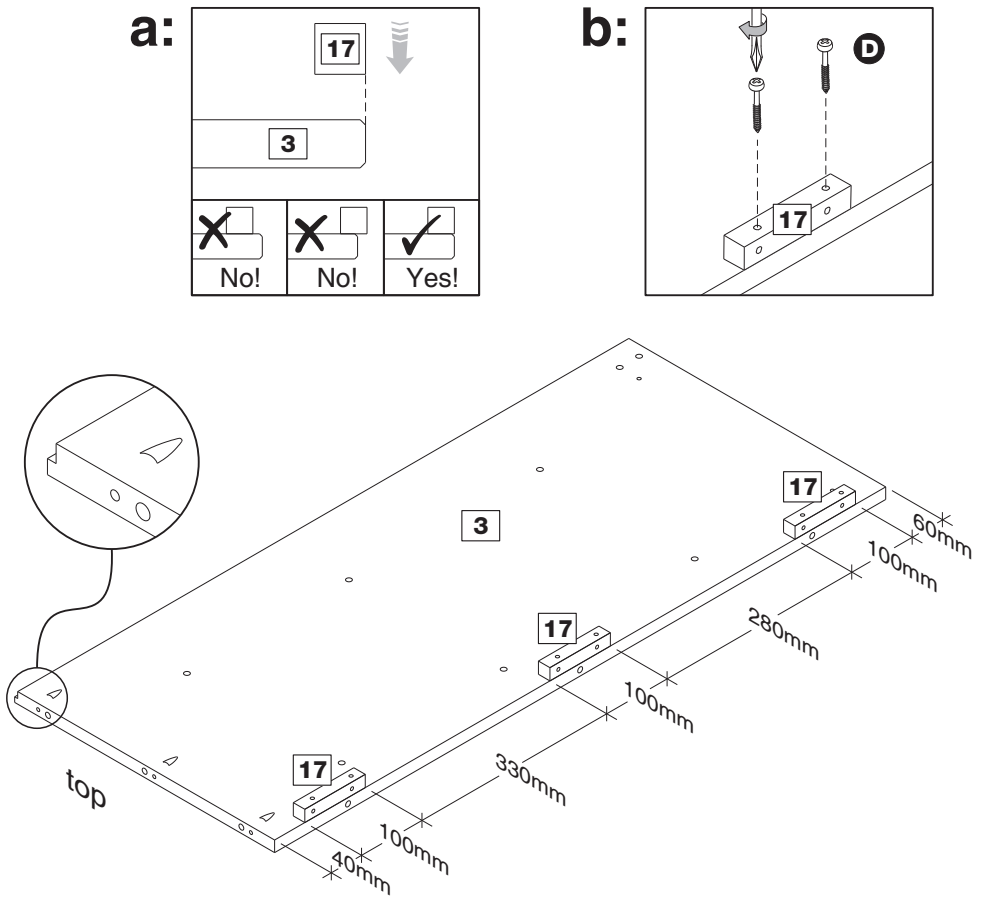

Step 3

Insert dowels (A) into the indicated parts.

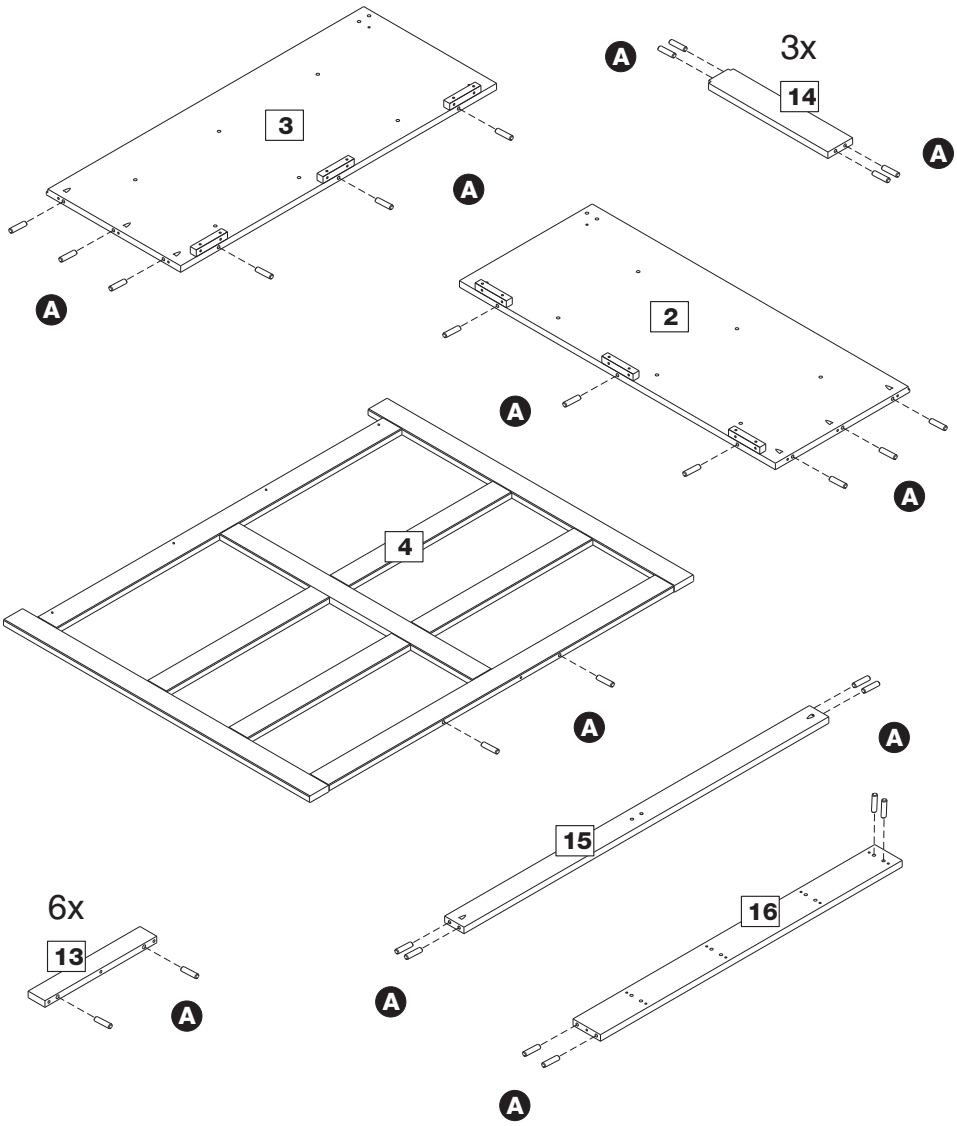


Step 4

Fixing drawer runners.

Attach 2 drawer runners 13 in right side panel 2 using screws (F).

Note:
Leave top drawer runner assembly for later.

Repeat step 4 for the left side panel 3 and 2 drawer runners 13.

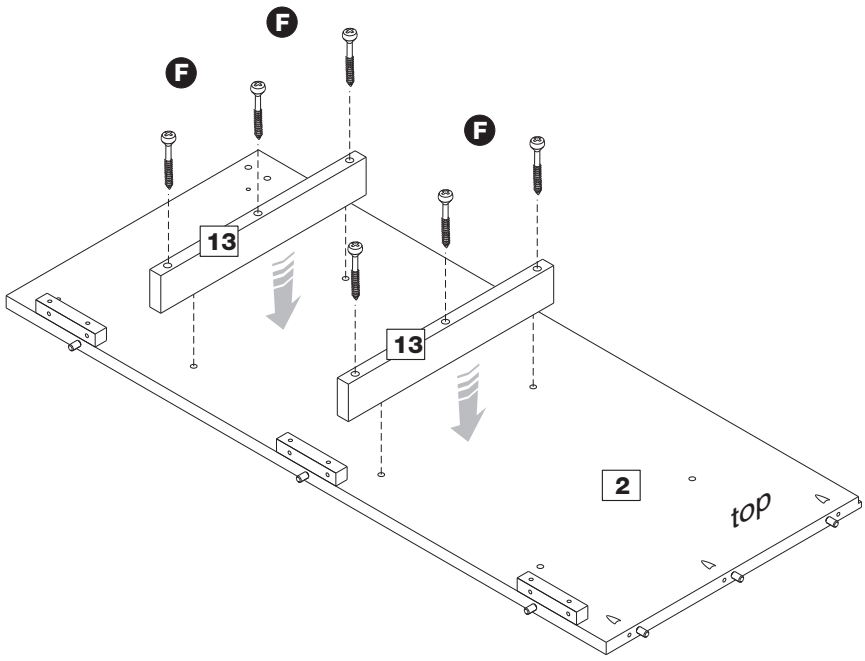

Assembly Instructions


Step 5

Fixing side panels.

Attention:
Place front frame with its front facing down in a clean and free from damage surface.

Fit side panels 1 and 2 on the front frame 4 .


Attach side panels 1 and 2 to the front frame 4 using screws D.

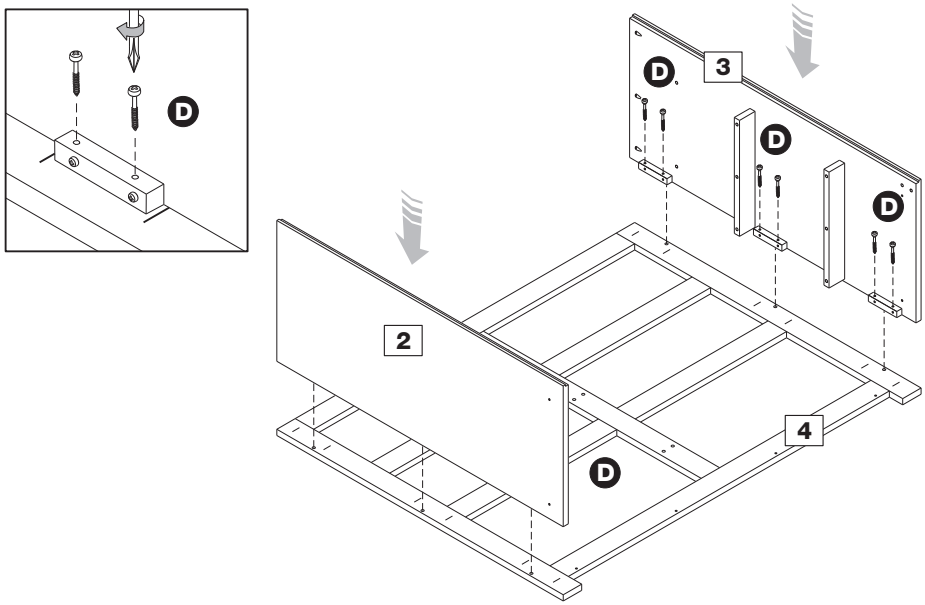


Step 6

Fixing cross rail.

Fit cross rail 15 to the side panels 2 and 3 then fix using screws D.

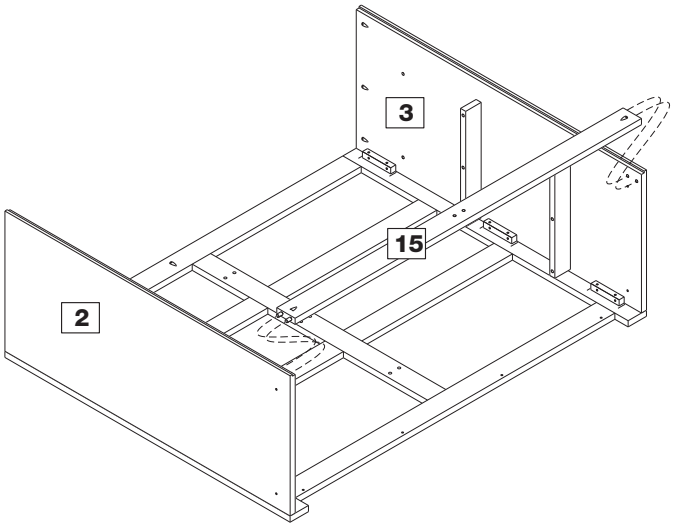

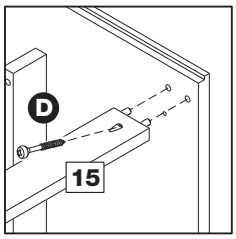


Step 7


Fixing middle drawer runner.

Fit middle drawer runners 14 at the front frame 4 then fix using screws D.

Attention:
Make sure middle drawer runners 14 are positioned as shown in the diagram prior to fixing.

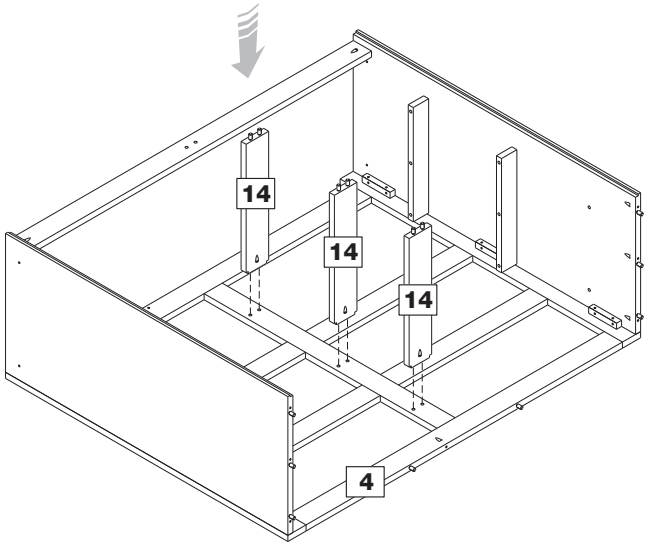

Attention!

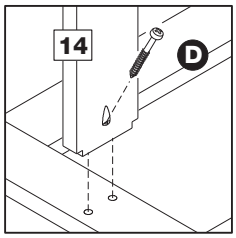

Assembly Instructions


Step 8

Fixing back column.


Fit back column 16 at the middle drawer runners 14 and cross rail 15.

a: Attach back column 16 to the cross rail 15 using screws D.


b: Attach back column 16 to the middle drawer runners 14 using screws E.

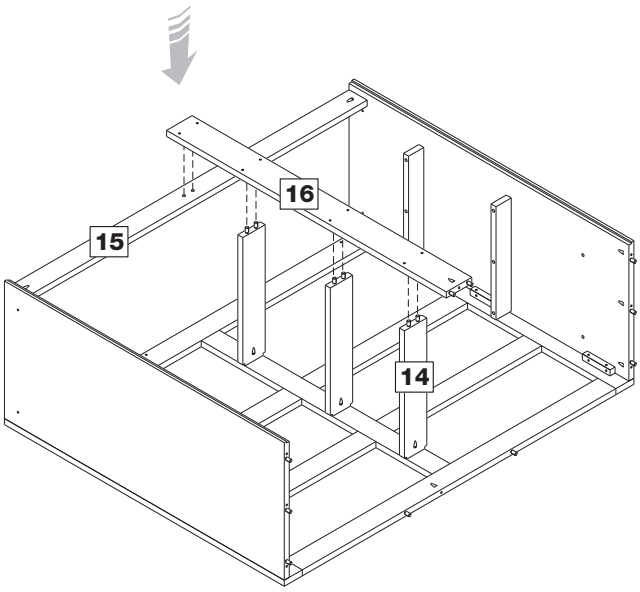

a:

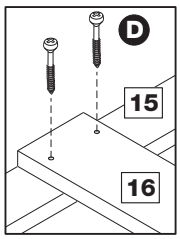

b:

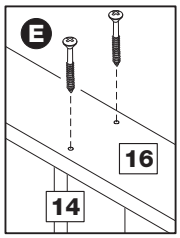


Step 9


Fixing top.

Two people required for an easier assembly.

Attention: Place top panel with its top facing down in a clean and free from damage surface. With help, carefully turn the cabinet upside down and fit it to the top panel as shown.


Attach cabinet to the top panel 1 using screws D.

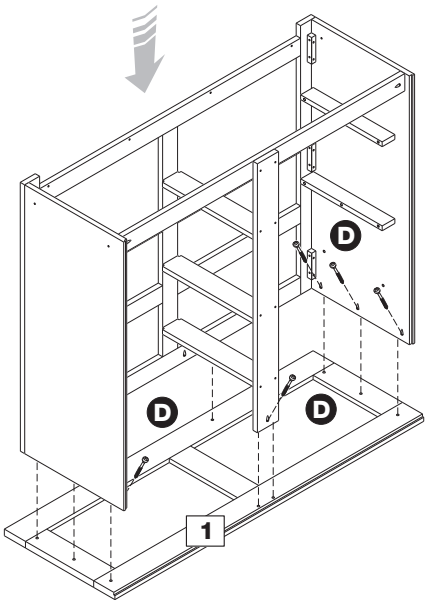


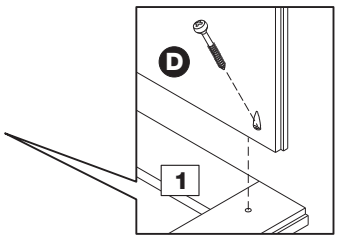

Step 10

Fix 2 side drawer runners 13 to the side panels using screws F as shown.

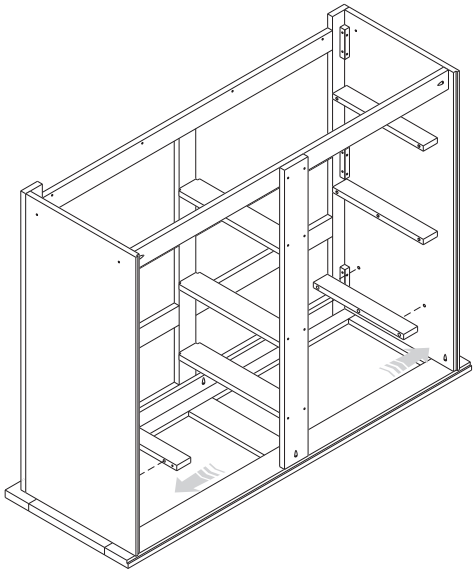

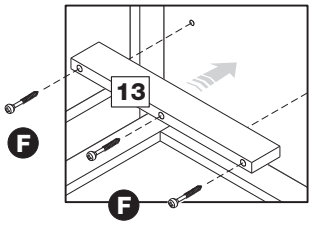

Important: With help, carefully lay down the product.


Step 11

a: Fix side plinths 12 to the side panels using screws C.

Note: Make sure side plinths are aligned to the bottom and front edges of the side panels.

b: Fix front plinth 5 to the bottom front panel 4 using screws C.

Note: Make sure front plinth 5 is aligned to the bottom edge of the side panels and in line with the side plinths.

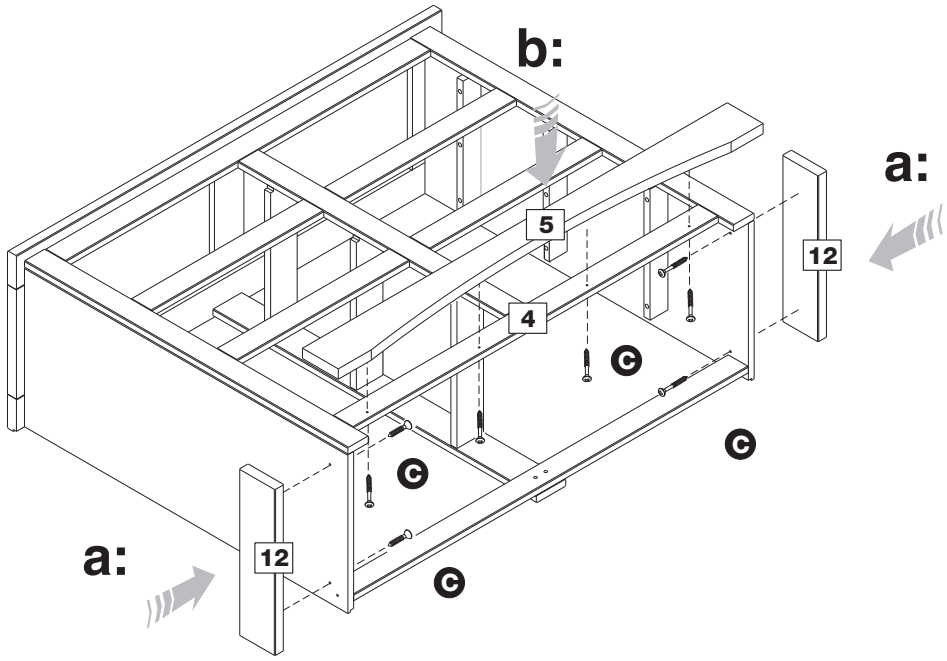

Step 12

Larger drawer assembly.


a: Attach drawer sides 8 to the drawer front 6 using screws C.

b: Slide drawer bottom into slots on drawer sides and position drawer back 10 in place.

c: Holding the drawer back 10, press the drawer sides and fix them using screws C.

d: Using bolt G attach the drawer handle H to the drawer front.

Repeat step 12 for the other larger drawer.

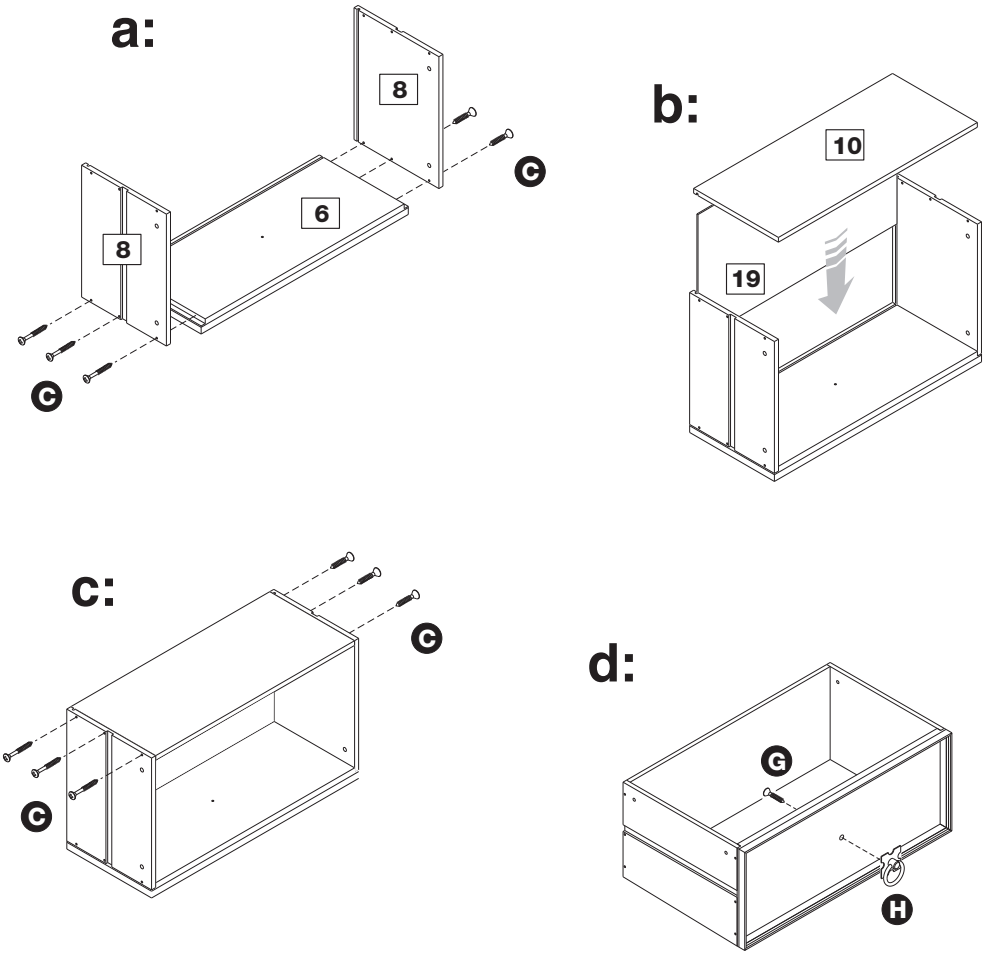

Step 13

Smaller drawer assembly.


a: Attach drawer sides 9 to the drawer front 7 using screws C.

b: Slide drawer bottom into slots on drawer sides and position drawer back 11 in place.

c: Holding the drawer back 11, press the drawer sides and fix them using screws C.

d: Using bolt G attach the drawer handle H to the drawer front.

Repeat step 13 for the other smaller drawers.

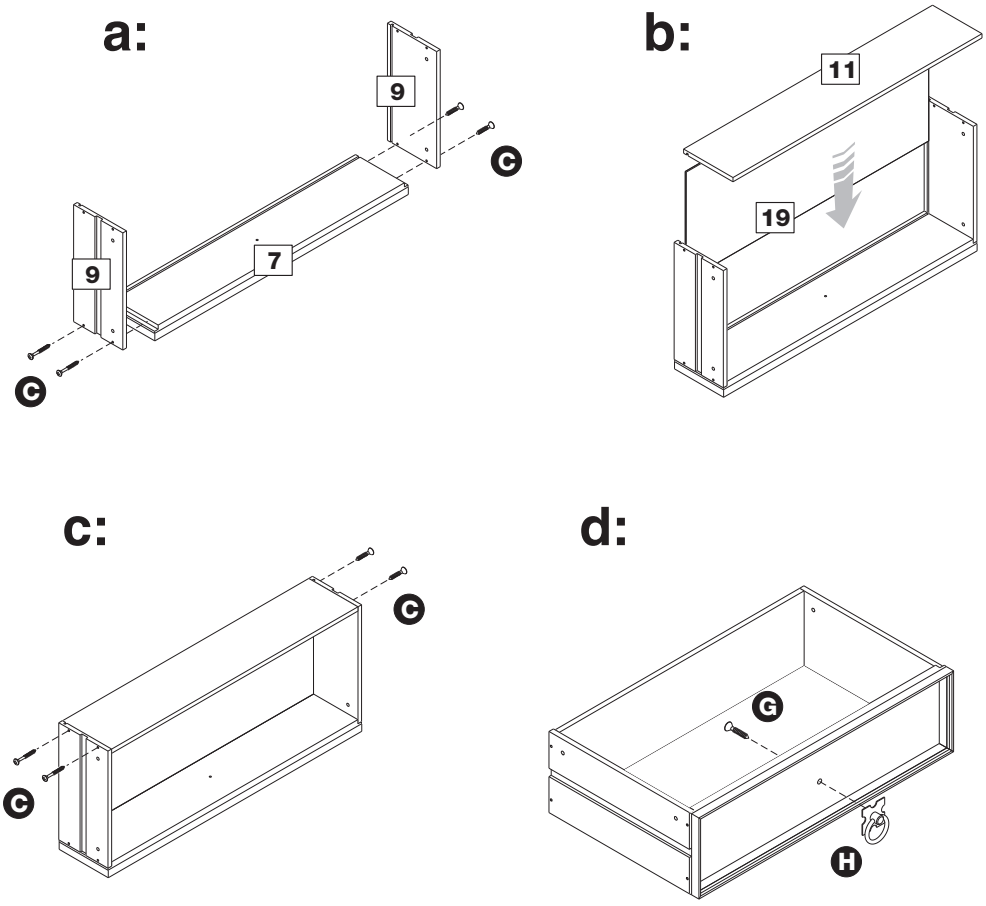


Step 14

Fixing back panels.

Important: With help, carefully stand the product upright.


Important: Cabinet **MUST** be 'square' when back panels are attached.

Attach the back panels 18 using nails J.

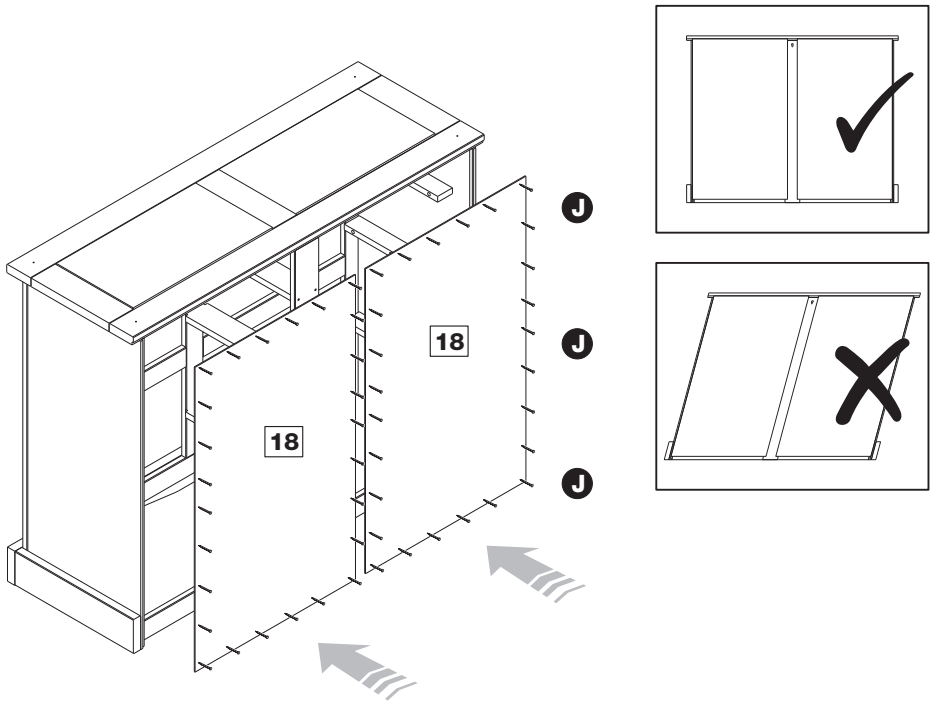


Step **15**


Insert drawers into unit. With the back of the drawers past the front frames, use a hammer to tap dowels Ⓐ in flush to drawer sides. This is a safety catch to stop drawer falling out.

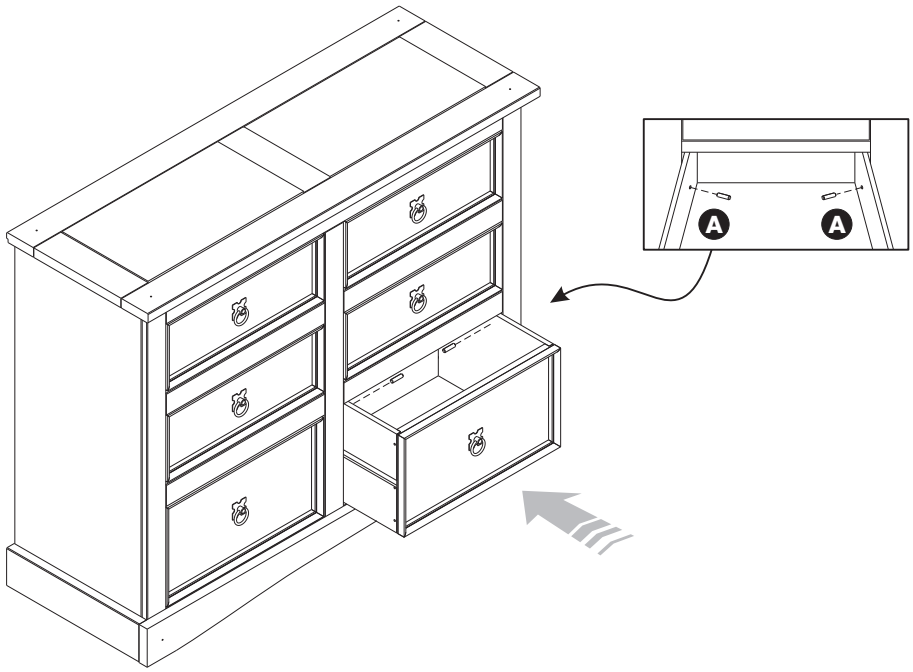


Step **16**

a: Fix round metal studs Ⓚ into the pre drilled holes in the top panel 3, front frame 4 and front plinth 13.

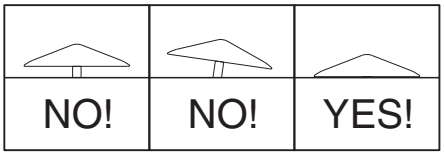

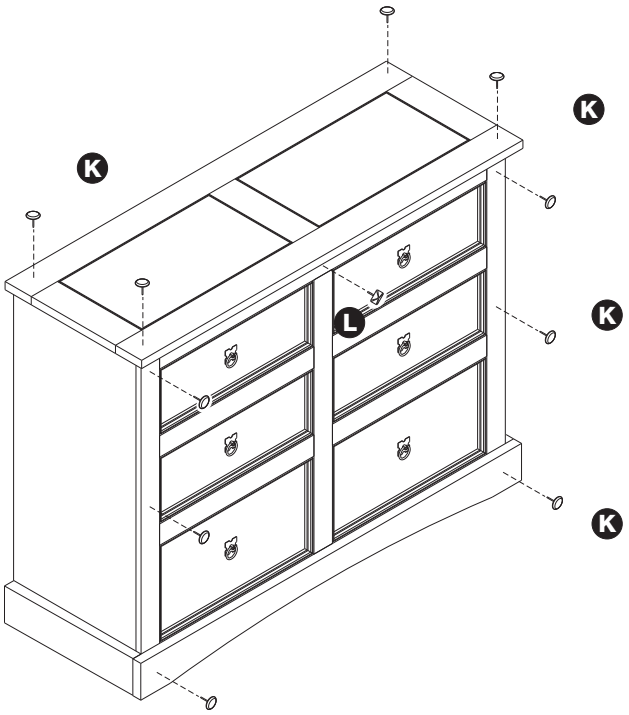


a:

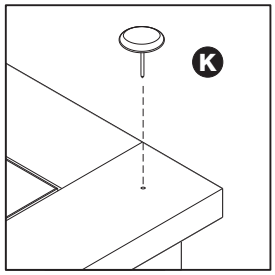

b: Fix square metal stud Ⓛ to the product as shown in the diagram.

Important: Make sure Ⓛ is fixed right in the middle of top front frame rail.

b:

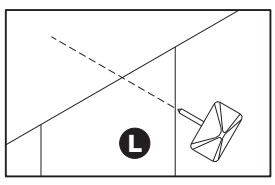



Step **17**

Fixing to wall.

Furniture must be fixed to a wall. Fix wall strap N to top of furniture using washer M and screw B. With help, move furniture into position.

Note: Wall plugs not supplied. The correct type of fixing must be used for your wall, seek professional advice if in doubt.

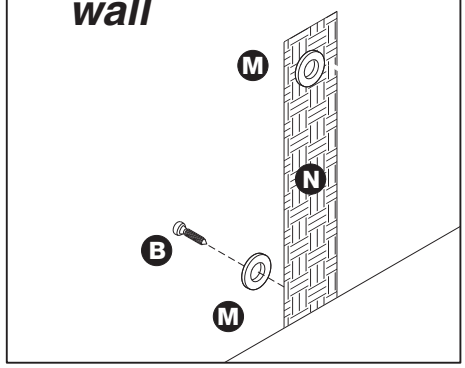

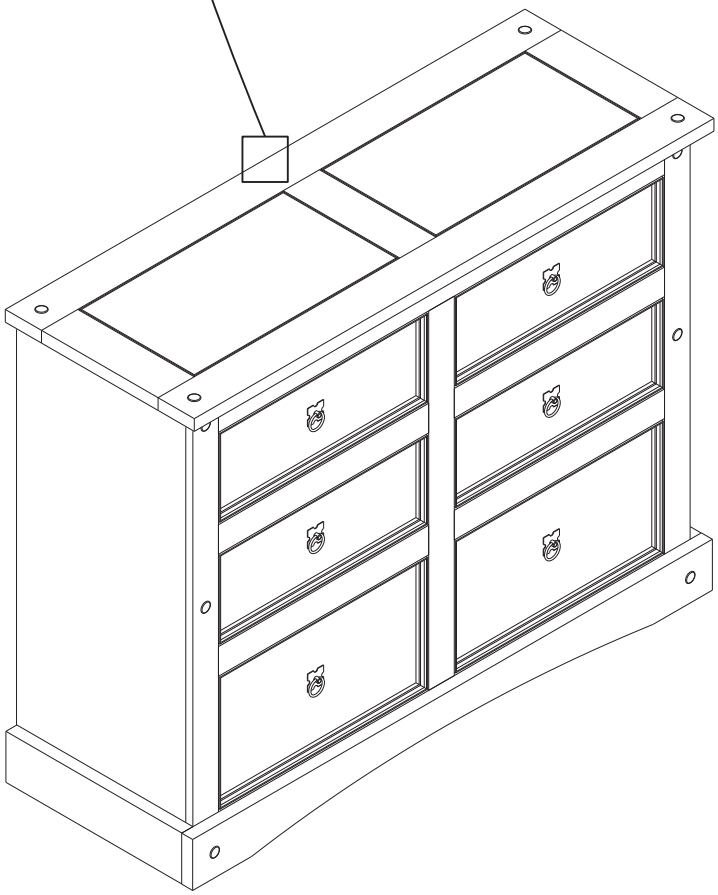


Assembly is complete.

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

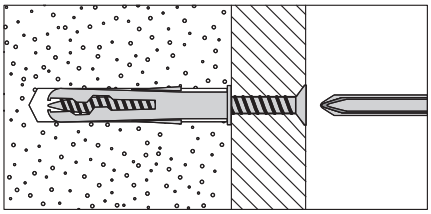


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

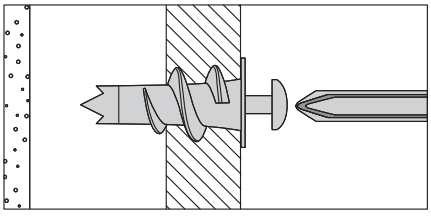


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

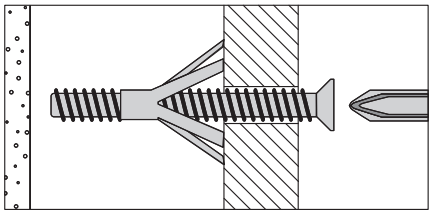


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

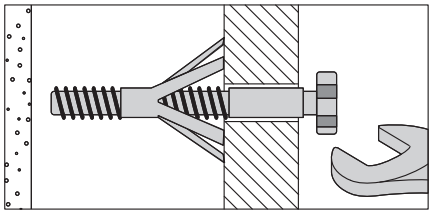


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

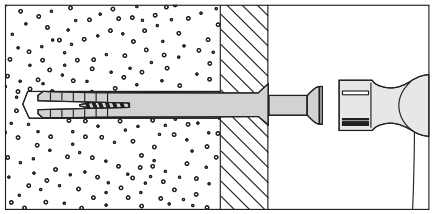

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

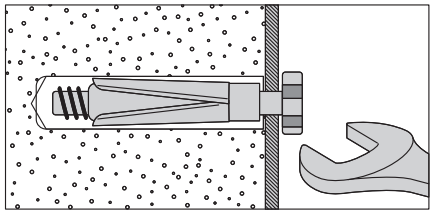

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.


Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Puerto Rico - 2 Door Wardrobe

Assembly Instructions - Please keep for future reference

641/7721

643/1958

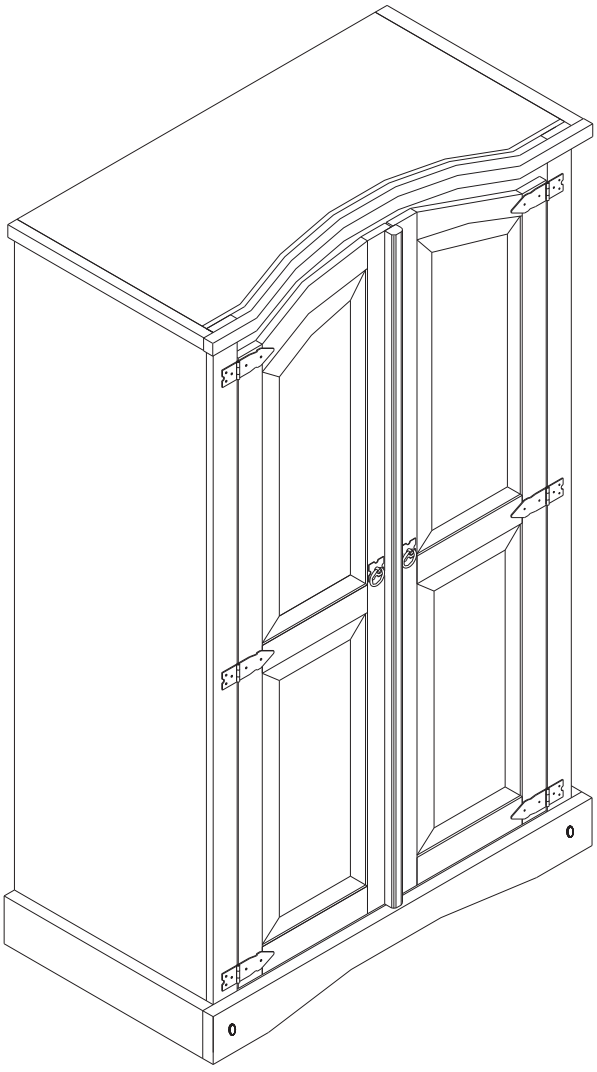

Dimensions

Width - 103.5cm
Depth - 57cm
Height - 188cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 25/06/10

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fttings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor.

- This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

- The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

- On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

- This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.



- We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

- Parts of the assembly will be easier with 2 people.

- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

- Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.

- From time to time check that there are no loose screws on this unit.

- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels

Please check you have all the panels listed below



1 Right side panel (177.3 x 53cm)

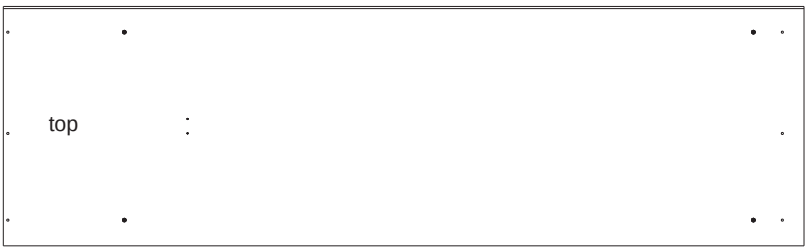


2 Left side panel (177.3 x 53cm)




5 Right front frame (178 x 6.5cm)



6 Left front frame (178 x 6.5cm)

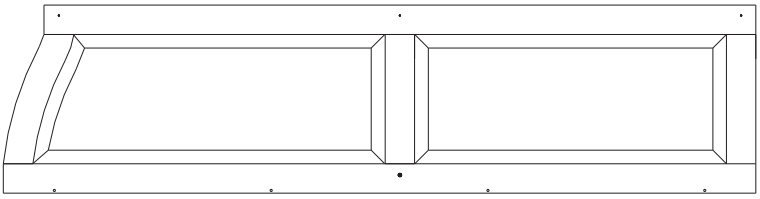

9 Right door (166.6 x 41.6cm)

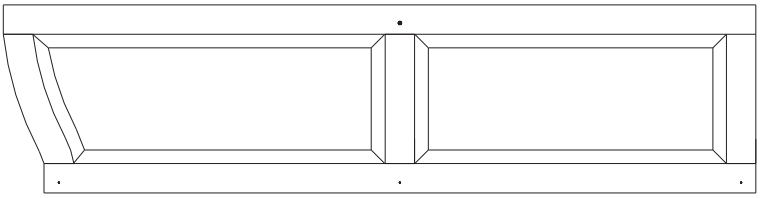


10 Left door (166.6 x 41.6cm)




15 Door knocker (166.6 x 3cm)




16 Back panel x 2 (167 x 47.6cm)

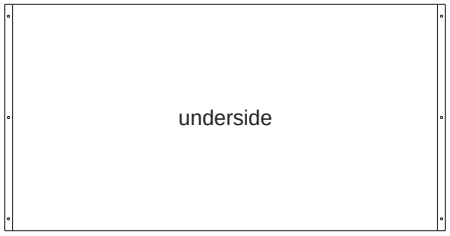

3 Top panel (97.6 x 50cm)

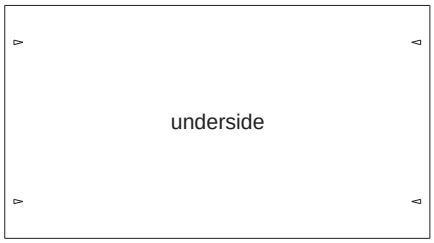


4 Base panel x 2 (94 x 51.5cm)




7 Curved top rail (93.7 x 21cm)



8 Curved top moulding (103.5 x 12.6cm)



11 Horizontal front frame (84.7 x 6.5cm)




12 Front plinth (103.5 x 11.2cm)



13 Side plinth x 2 (54 x 11.2cm)

14 Side top moulding x 2 (54 x 2.8cm)



17 Hanging rail (93.5 x 2.8cm)

18 Larger H profile (137 x 2cm)

19 Smaller H profile (25 x 2cm)

20 Block (20 x 2.5cm)



21 Hanging rail support x 2 (7 x 6.5cm)











22 Blocks x 8 (10 x 2cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

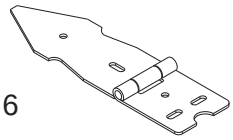A  Wooden dowel x 12	**B**  14mm Screw x 39	**C**  25mm Screw x 10
D  35mm Screw x 19	**E**  35mm Screw x 48	**F**  50mm Screw x 3
G  Door handle x 2	**H**  19mm Bolt x 2	**J** Door hinge x 6 
K Clip x 2 	**L** Plug x 2 	**M** Metal stud x 2 
N  Nail x 36	**O**  Washer x 2	**P**  Wall strap x 1


Tools required




Phillips screwdriver (medium & large)

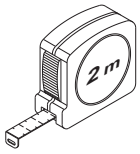

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

Fixing right front frame to the right side panel.
(Two people required for an easier assembly)


a: Position right front frame 5 to the right side panel 1 through joints.

Note:
Before fixing the blocks 22 into place it is important to ensure that the slot and groove of parts 1 and 5 are fully pushed together and lined up correctly at the top and bottom.

b: Place blocks 22 in the positions shown. First fix to the side panel using screws E.

c: Fix through blocks 22 into front frame using screws E .

Repeat **a**, **b** and **c** on left side panel 2 and left front frame 6 .

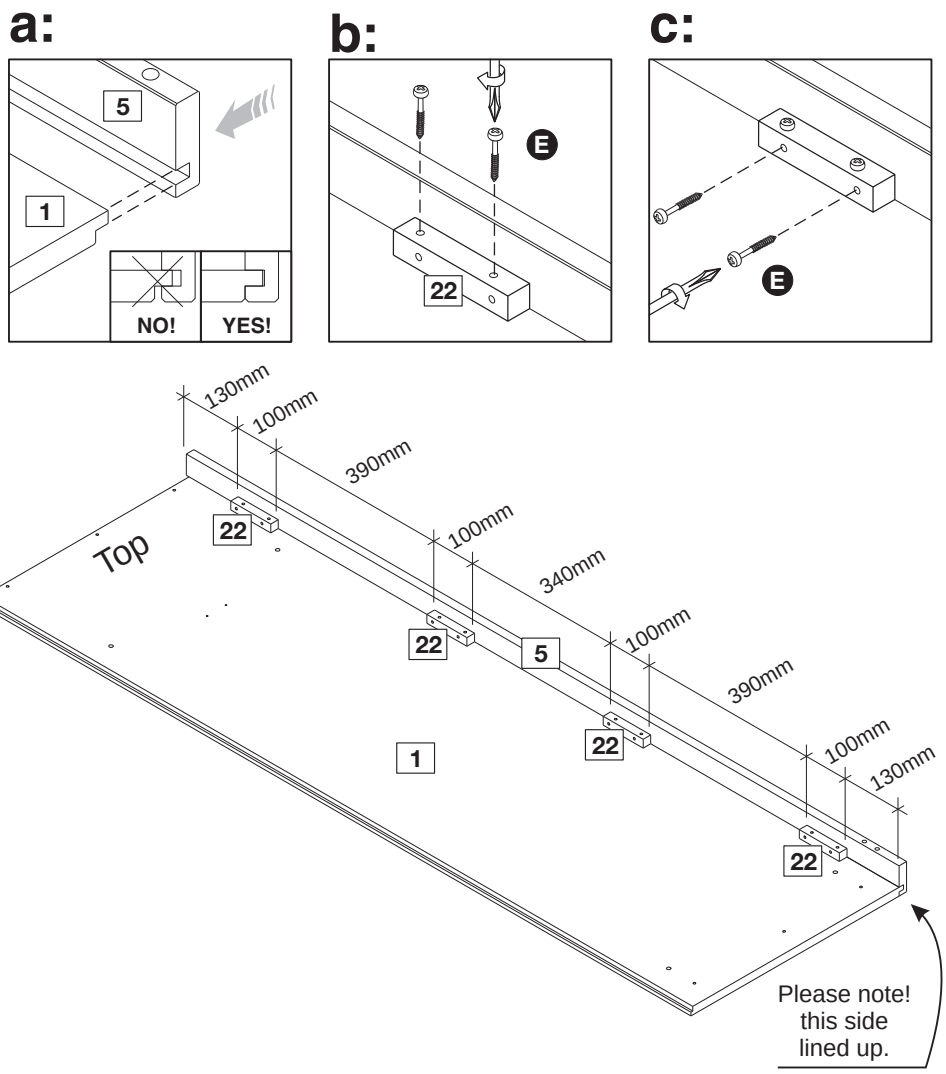


Step 2

Attach hanging rail supports 21 to the side panel 1 and 2 using screws E in the pre drilled holes.

Insert 8 dowels into base panels 4 .

Insert 4 dowels into horizontal front frame 11.

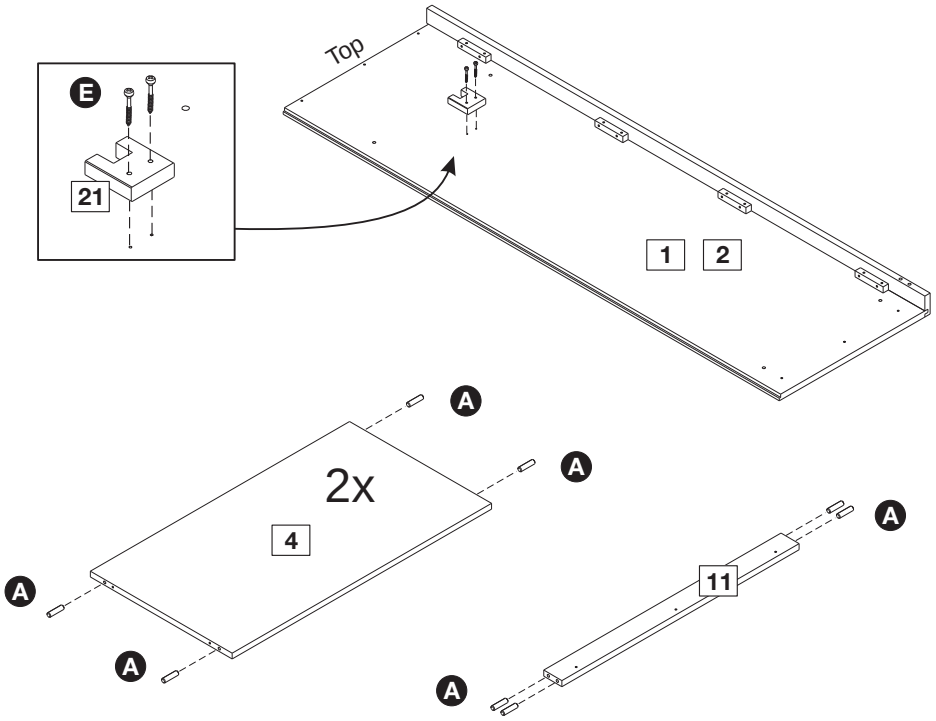


Step **3**

Assembling the cabinet.

Two people required for an easier assembly.

a: Attach panels 4 in left side panel 2 using screws E.


Insert horizontal front frame 11 to the left front frame 6.

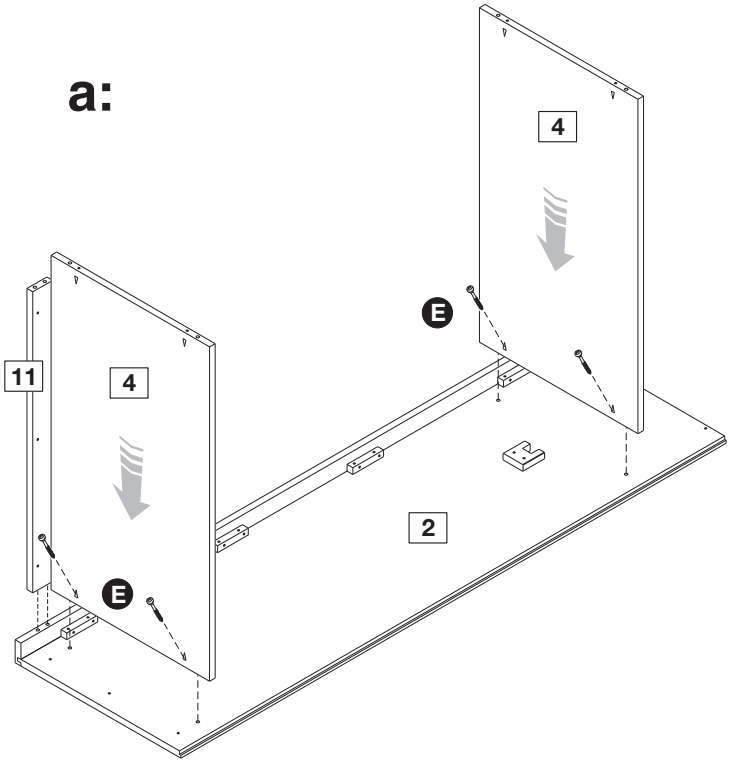

b: Place right side 1 properly ensuring dowels are all fit into their holes at the same time.

Fix panels 4 to the right side panel 1 using screws E .


Attach the block 20 in base panel 4 and to the horizontal front frame 11 using screws D as shown in the diagram.

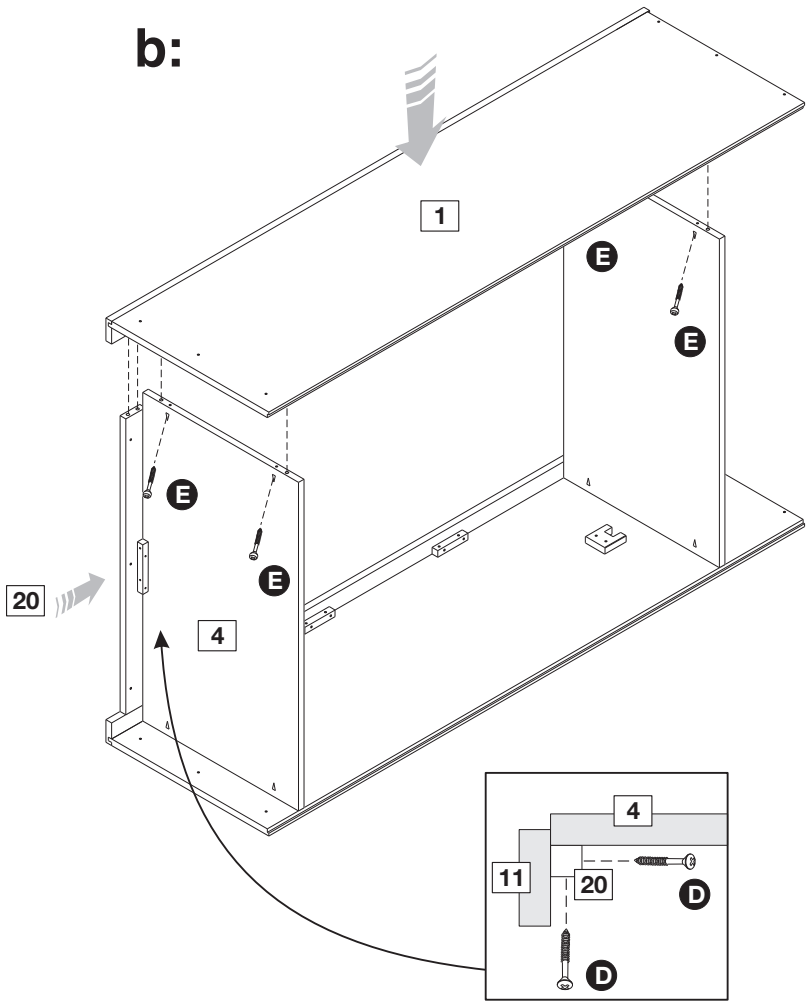

Assembly Instructions

Step **4**


Fix curved top rail 7 to the right front frame 5 and left front frame 6 using screws C .

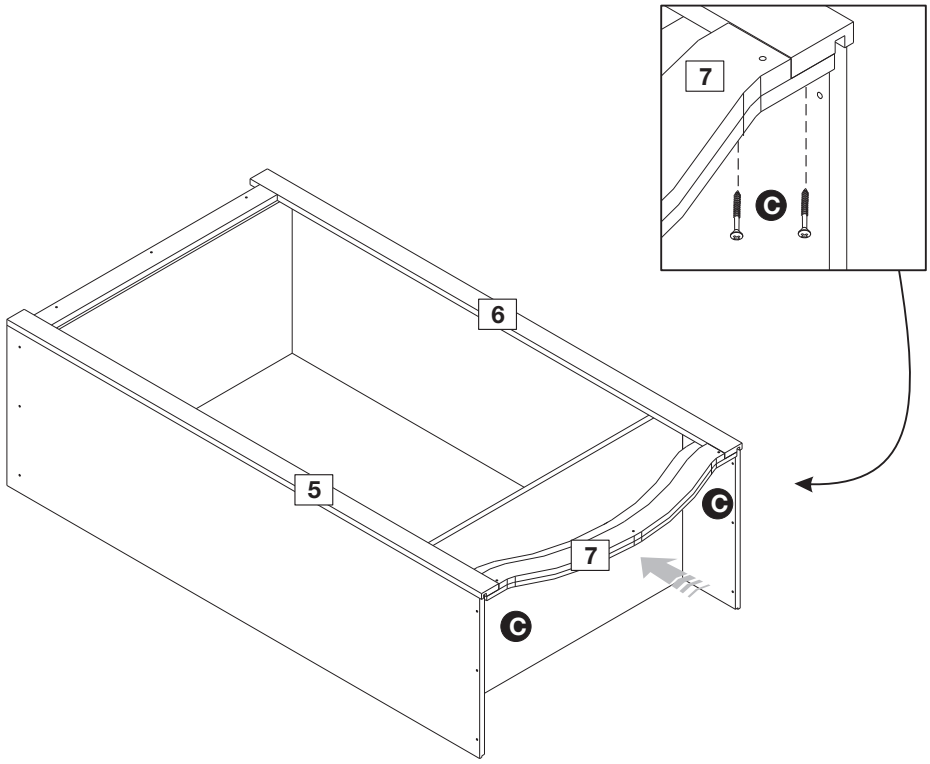

Step **5**


a: Fix side top mouldings 14 to the sides using screws D.

Attention:
Ensure top mouldings are fixed in the correct position in a height of 7mm from the top edge of the side panels and aligned to the side panels.

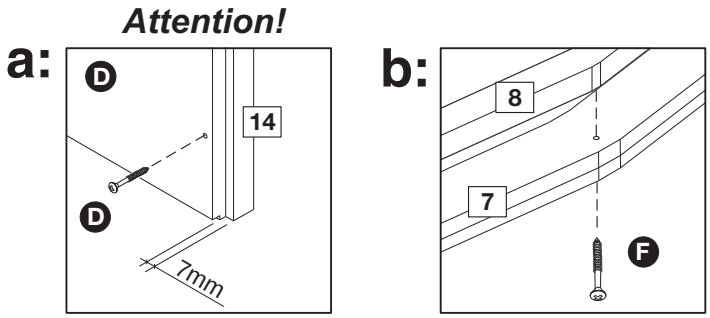

b: Fix curved top moulding 8 to the curved top rail 7 using screws F.

Note:
Make sure moulding is aligned to the top rail and to the side mouldings.

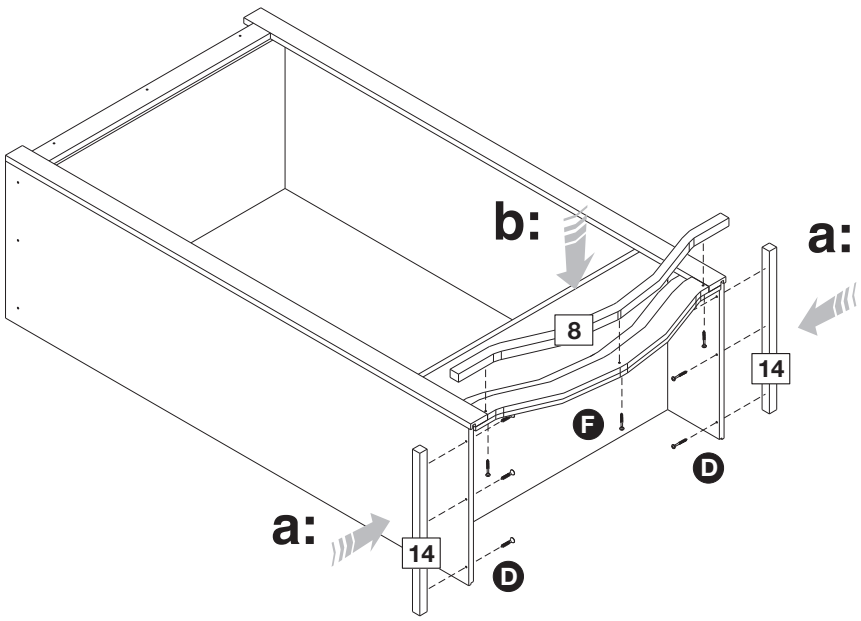


Step **6**

a: Fix side plinths 13 to the sides using screws D.

Note:
Make sure plinths are aligned to the bottom edge and to the front of the side panels prior to fixing.

b: Fix front plinth 12 to the horizontal front frame 11 using screws D .


Note:
Align plinth 12 to the sides and bottom edge of the side panels before fixing.

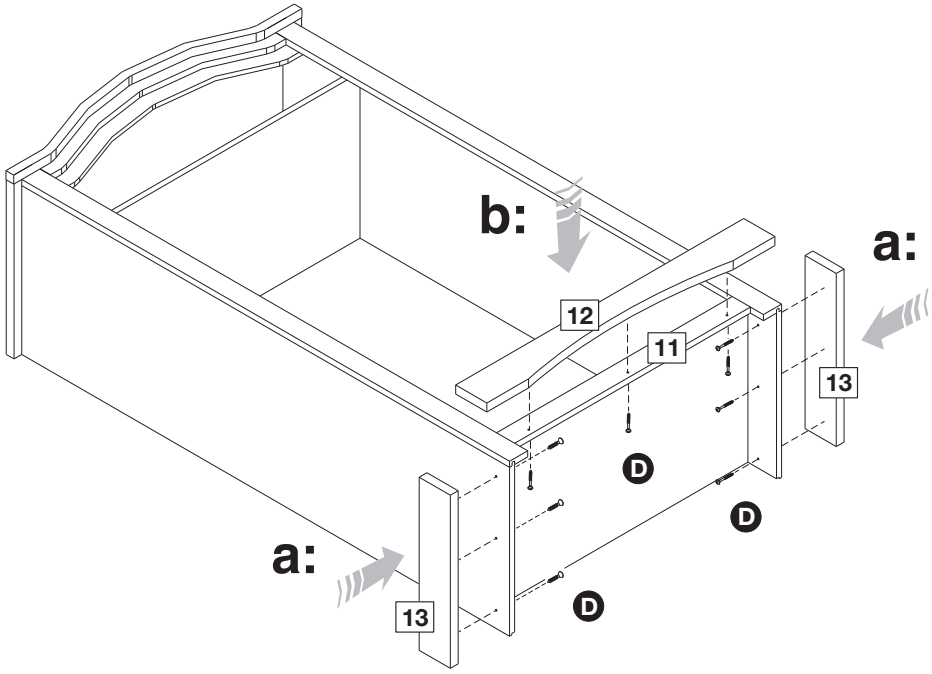

Step **7**


Important:
With help, carefully stand the product upright.


Attach top panel 3 to the cabinet using screws C .

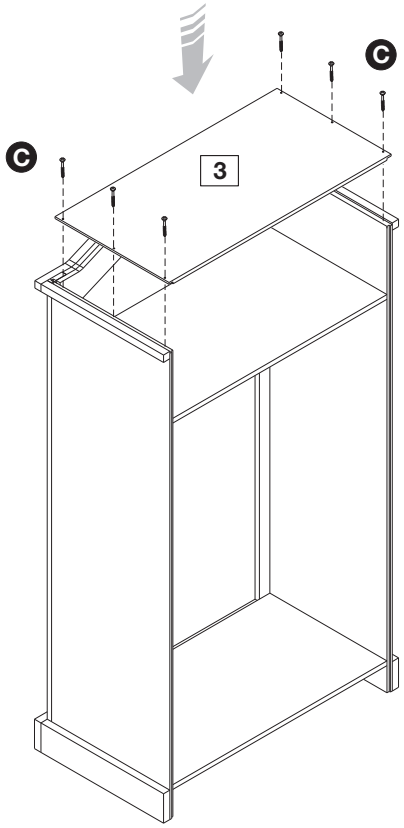

Step **8**


Insert hanging rail 17 into the supports.

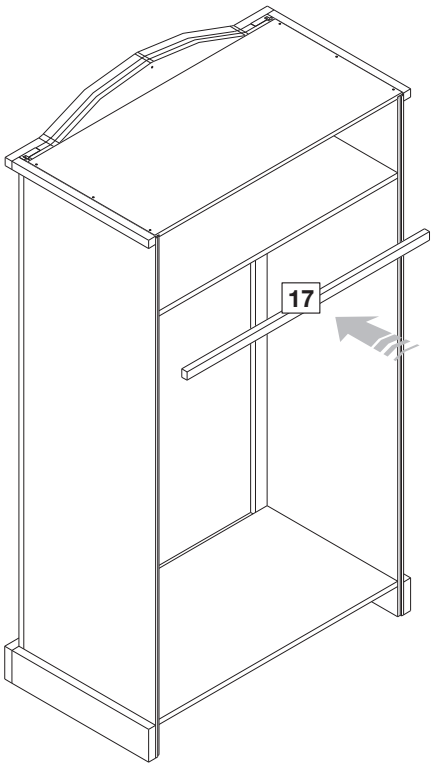

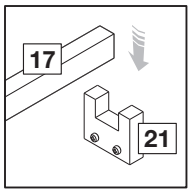

Step **9**

Fix metal studs Ⓜ into the pre drilled holes in the front plinth.

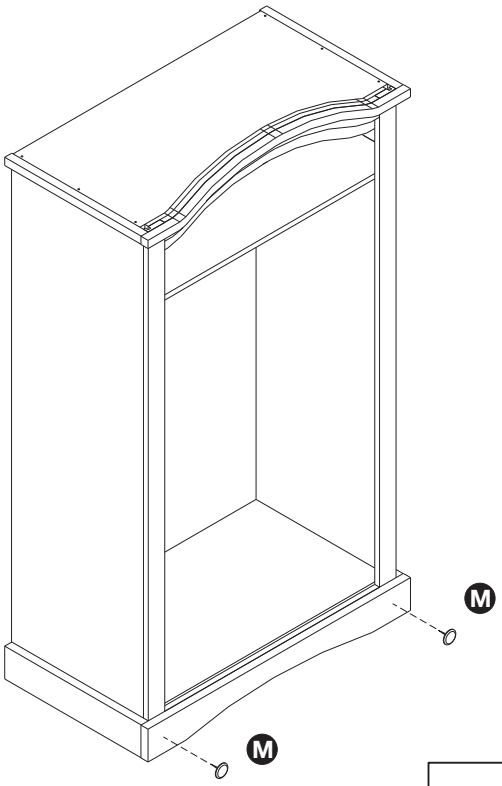




Step **10**

Fitting hinges to the doors.

Attach hinges **J** to the pre drilled holes in the doors using screws **B** .

Attach the door knocker **15** to the pre drilled holes in the right door **9** using screws **E**.

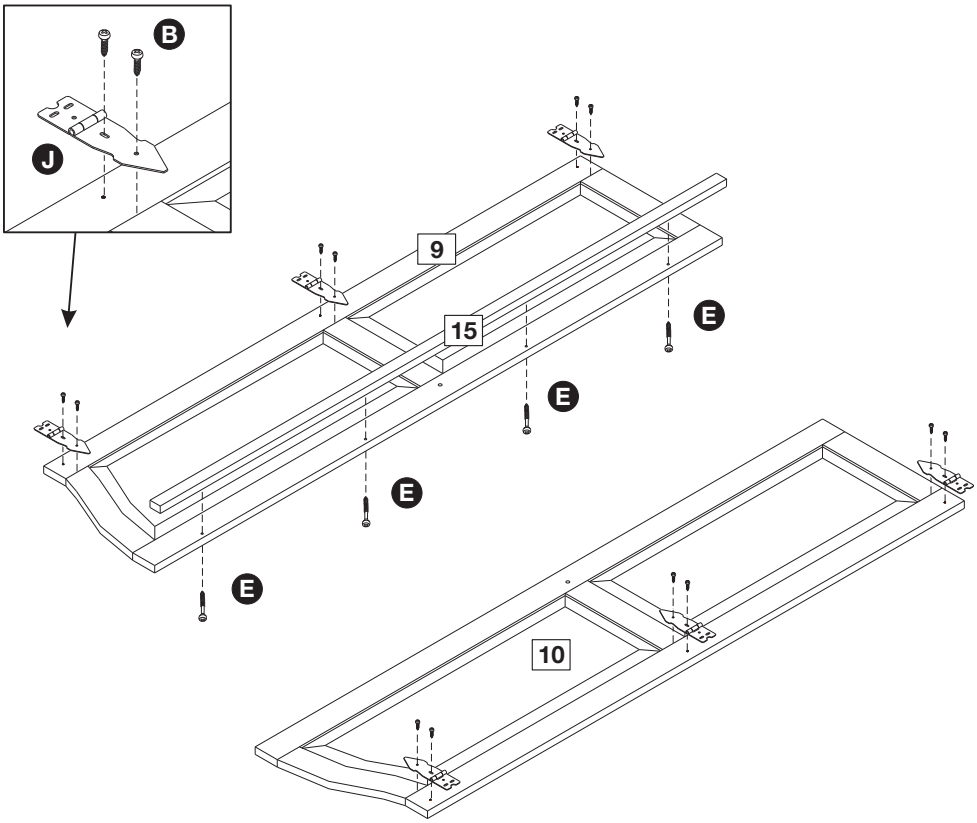


Step **11**

Hanging door.

With help centralise the doors in the opening of the cabinet then fix the hinges **J** using screws **B** as shown.

Note:
To ensure the alignment of the door is correct, centralise the door in the opening before attaching to the cabinet.

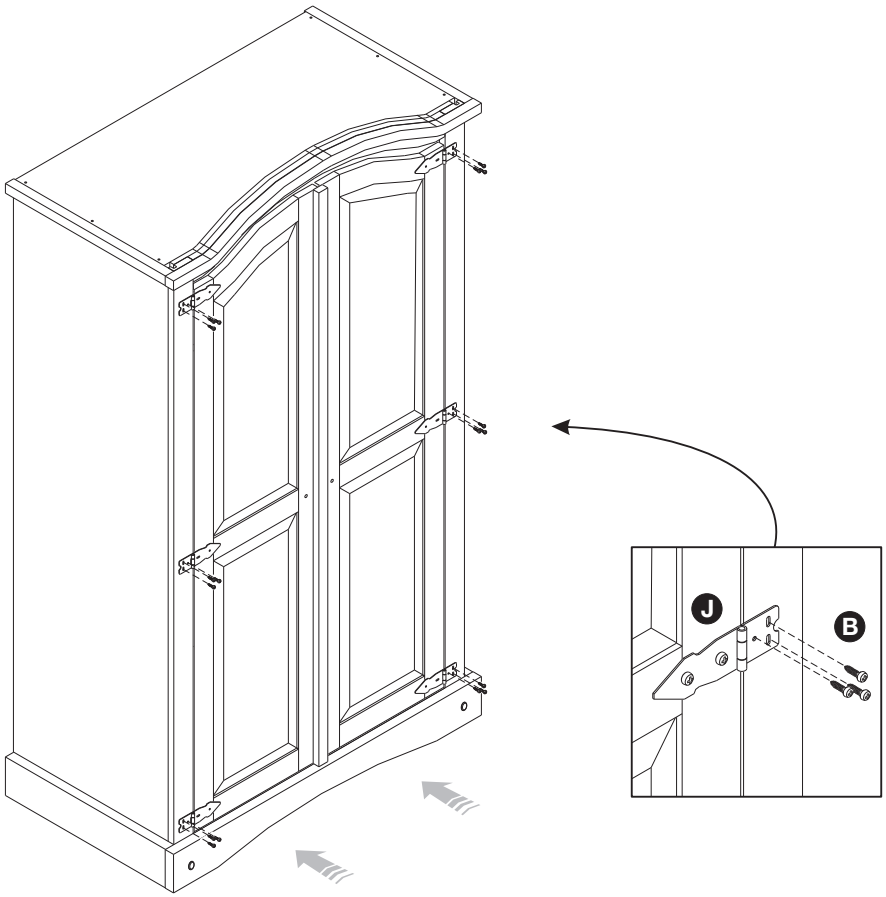

Step 12


Fitting door locks.


a: Screw clips K in place using screws B. Ensure that the 2 small wheels are flush with the edge of the base.

b: Insert plugs L into clips K, ensuring they are leveled.

c: Push the door against the plugs L. This will make 4 small marks on the doors.


d: The doors can then be opened and plugs L can be screwed into place using the 4 marks made as a guide. This will ensure that the 2 parts of the door clips are lined up correctly.

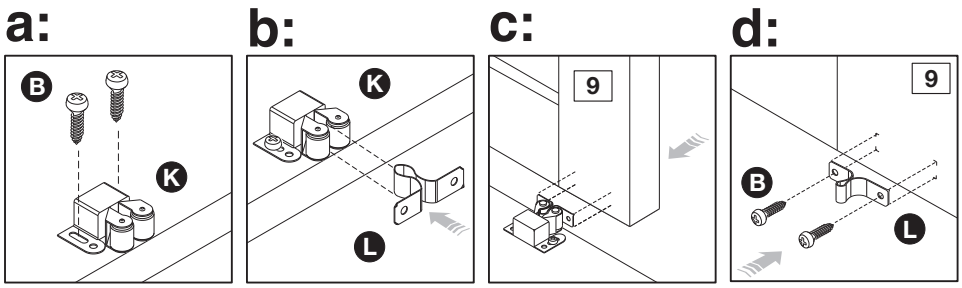

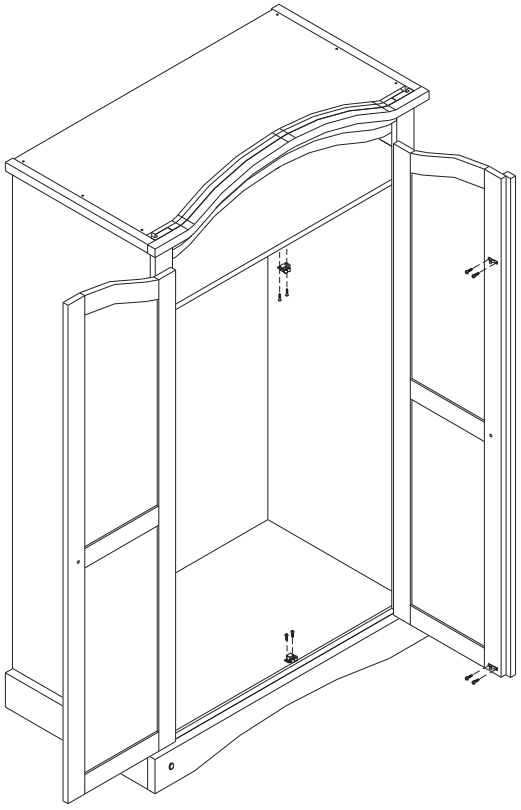

Step 13

Attach handles G to the doors using screws H.

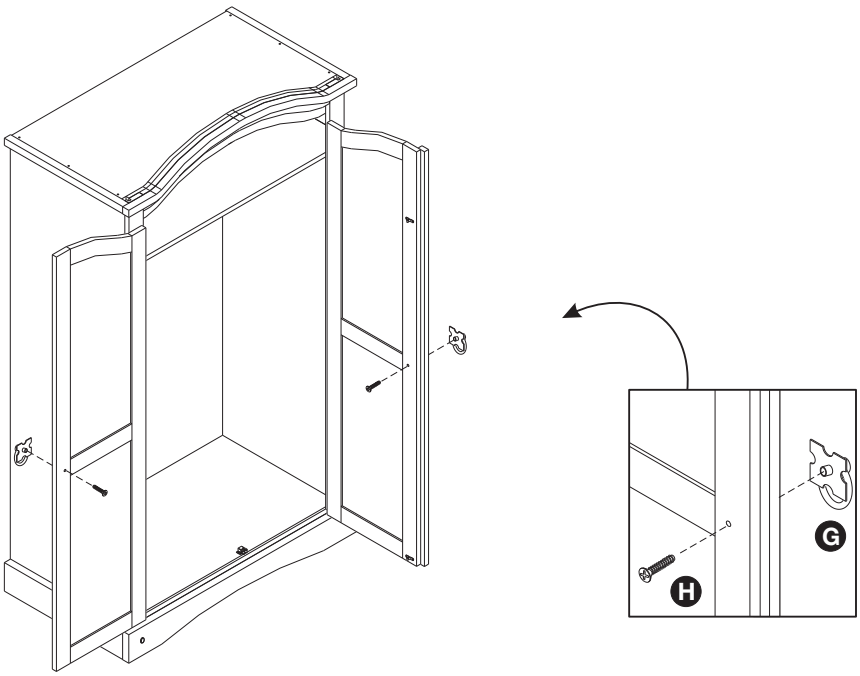

Step **14**


Fixing back panels.


Important: Cabinet **MUST** be up right and 'square' when back panels are attached.


a: Attach the right back panel 16 first using nails N.

b: Position profiles 18 and 19 onto back panel 16 (just attached).

c: Carefully slot the second back panel 16 into the profiles and fix it to the cabinet using nails N.

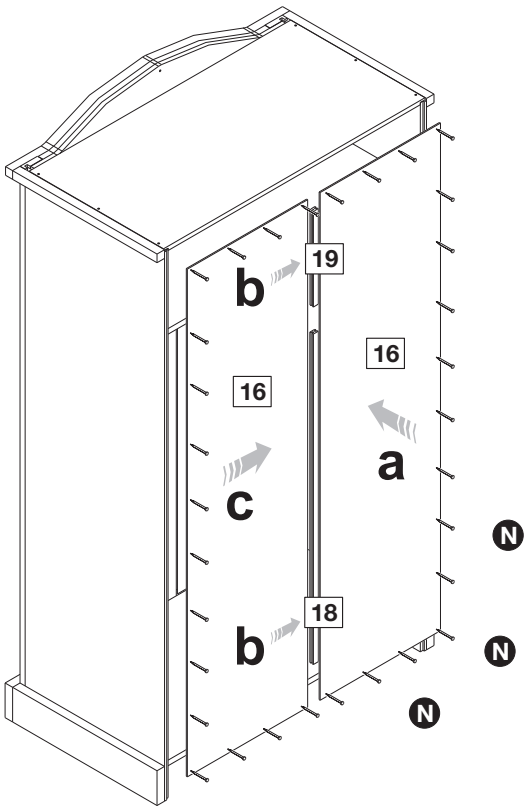

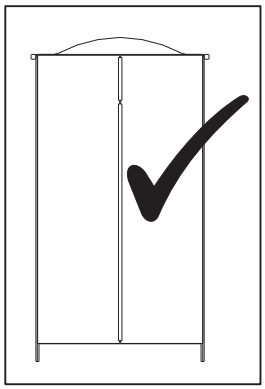

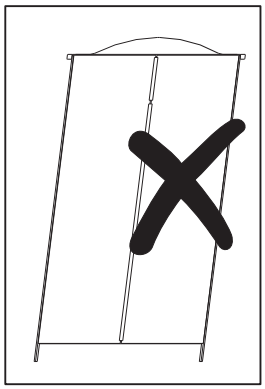

Step **15**

Fixing to wall.

It is recommended that the furniture is fixed to a wall. Fix wall strap P to top of furniture using washer O and screw B.
With help, move furniture into position.


Lift with care.

Mark fixing hole on wall and remove furniture. Drill hole and insert wall plug (not supplied).


Warning: Before drilling check wall for hidden pipes and cables.

Reposition furniture and fix wall strap using washer O and suitable screw.

Assembly is complete.

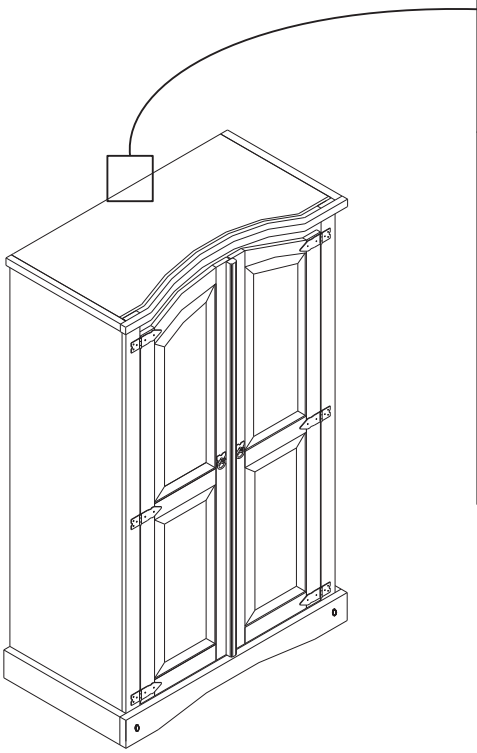

Note: Wall plugs not supplied. The correct type of fxing must be used for your wall, seek professional advice if in doubt.

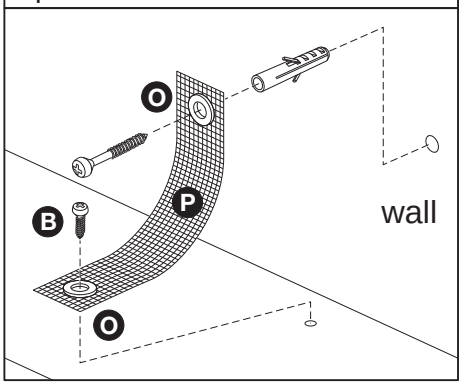


If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

A Guide to - **Wall Mounting & Fixings**

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: When drilling into walls always check that there are no hidden wires or pipes etc.

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualifed tradesperson if you are unsure.


Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.
2: Ensure you use the recommended drill bit to match the wall plug and hole size.
3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.
5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

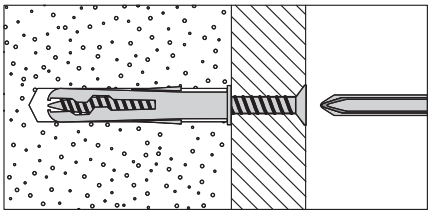


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

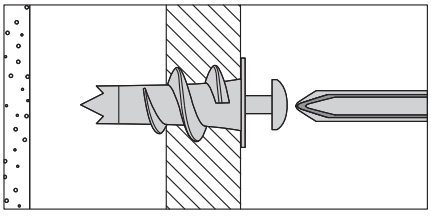


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

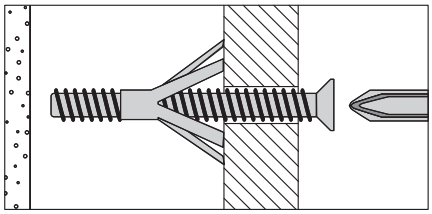


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

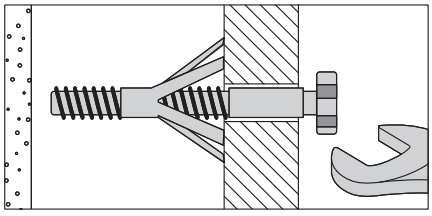


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

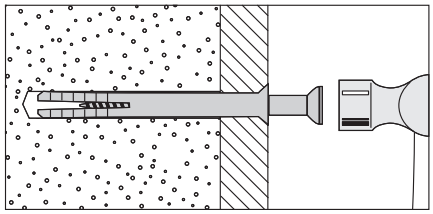

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

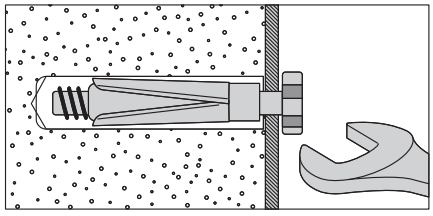

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.