
Double Universal Robe

Assembly Instructions - Please keep for future reference

345905

SCHREIBER

356923 (x2)
only for
Hinged version

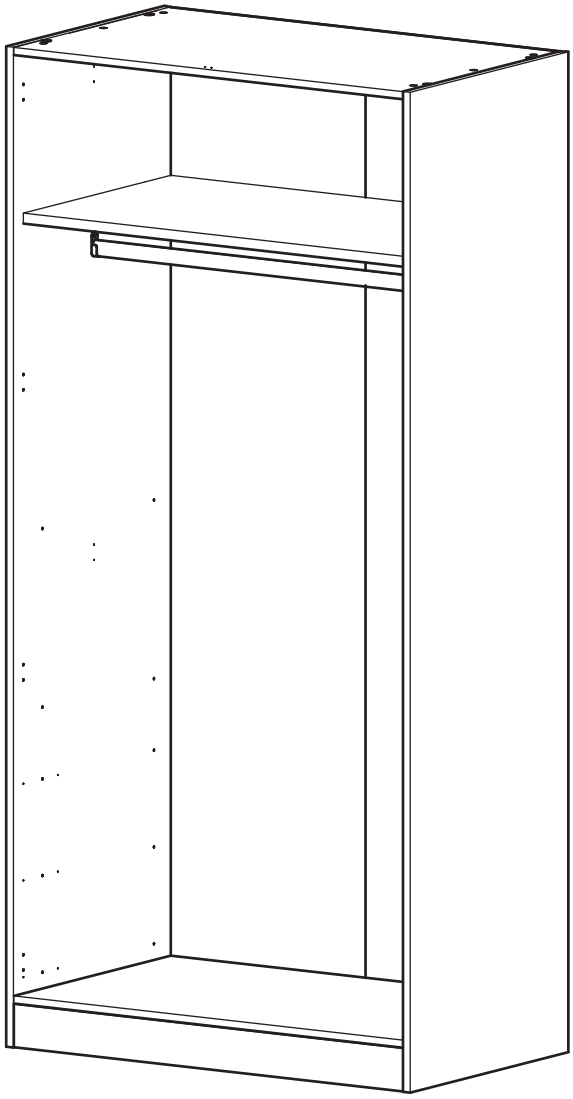

Dimensions

Width - 100cm

Depth - 59cm

Height - 210cm

Important - Please read these instructions fully before starting assembly

For all enquiries please contact : **0845 600 24 20**

Ref. no HB 02.13 Date: 13/07/12

Safety and care advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the panels, this could cause damage.

• Assemble the unit as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• ***Note:*** Only apply the glue once you are sure of the assembly.

• The wall plugs supplied are suitable for solid walls only.

It is important that the correct type of fixing is used for your wall, seek professional advice if in doubt.

• Parts of the assembly will be easier with 2 people.

• If using power tools, please follow the safety instructions supplied with the tools.



• We do not recommend the use of power drill/ drivers for inserting screws, as this could damage the unit. Only use hand screwdrivers.

• ***Warning:*** Before drilling, check the wall for hidden pipes and cables.

• Dispose of all packaging carefully and responsibly.

• ***Warning:*** The unit weighs approximately 62kgs.
Please lift with care.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately. If possible show product information or label to the medical advisor.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - Panels

Please check you have all the panels listed below


















1) Left end panel x1
2) Right end panel x1
3) Back panel x1
4) Top Panel x1
5) Shelf x1
6) Structural plinth x1
7) Rear base support rail x1
8) Bottom Panel x1

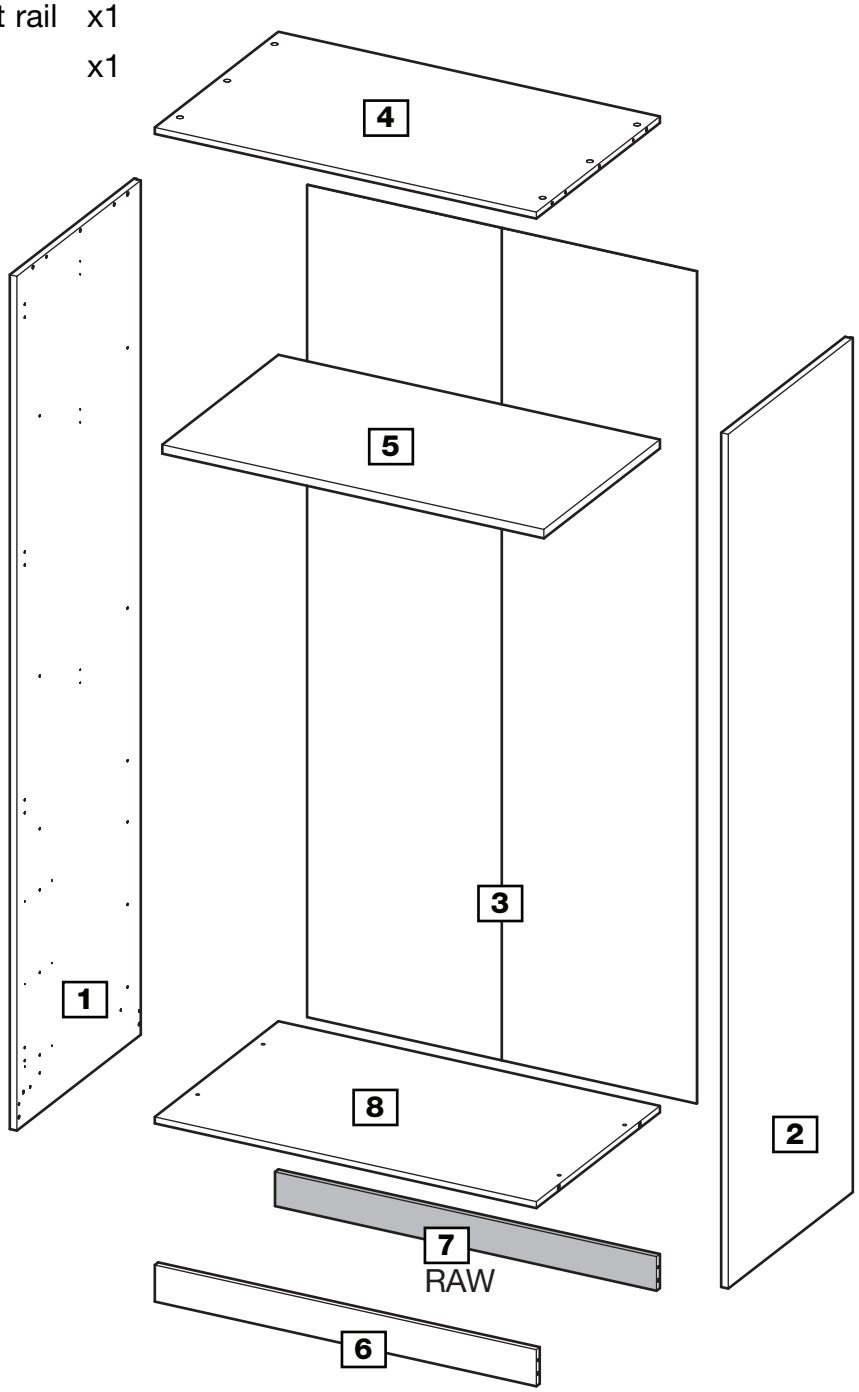

Components - Fittings


Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more -ttings may be supplied than are required.

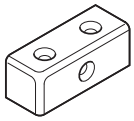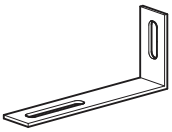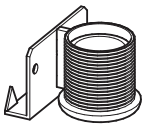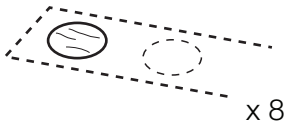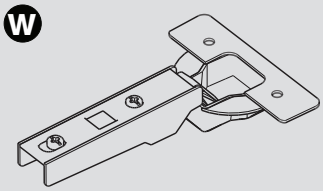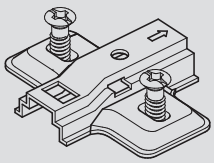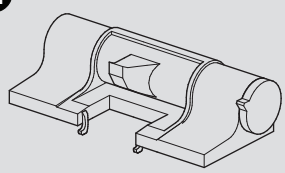
A  Wooden dowel x 8	**B**  Metal dowel x 10	**C**  15mm Screw x 14	**D**  30mm Screw x 8
E  Long locking nut x 10	**F**  Block x 1	**G**  x 4	**H**  25mm Nail x 30
I  x 2	**J**  4MAx15 Screw x4	**K**  27mm x4	**L**  Spacer x2
M  Hanger rail support x 2	**N**  x 4	**O**  x 4	**P**  x 4
Q  12mm Screw x 8	**R**  25mm Screw x 16	**S**  x 40	**T**  x 4
U  x 1	**V**  hanging rail x 1	**X**  x 4	**X1**  x 8
W  clip hinge x 8	**C**  15mm Screw x 16	**Y**  hinge mounting plate x 8	**Z**  soft close x 4


SOLD SEPARATLY


Tools required


Phillips screwdriver (medium & large)


Flatblade screwdriver (medium)


Spirit level




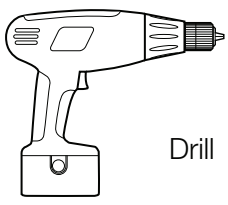
Drill


Ø 5mm Suitable drill bit (for use with wall plug)


Small hammer


Ruler/tape measure


Eye protection (when using a hammer or glue)


Ruler - Use this ruler to help correctly identify the screws





Assembly Instructions


Step 1

Prepare panels

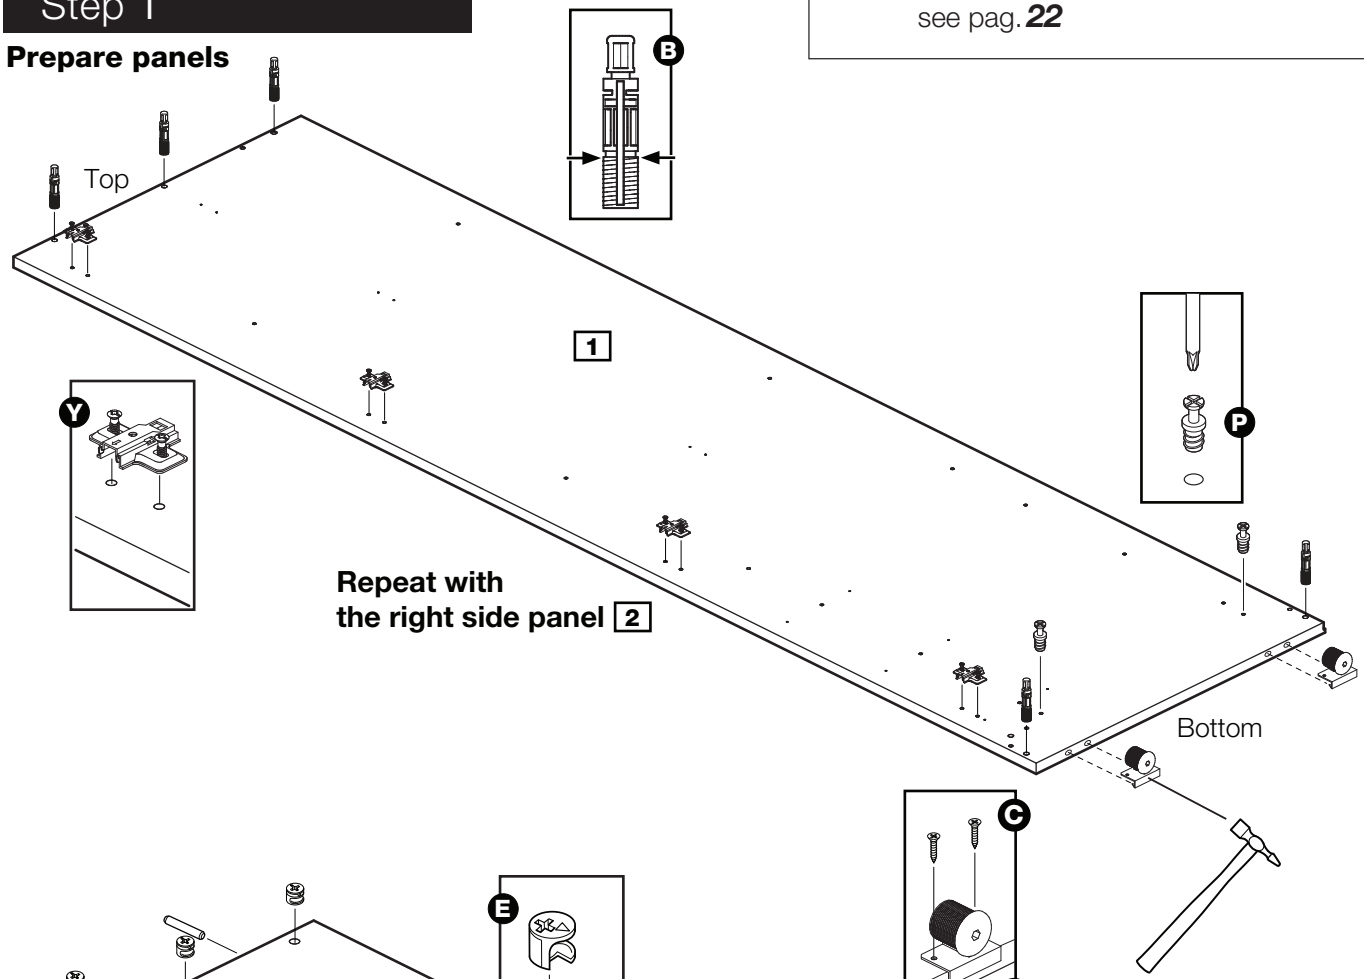

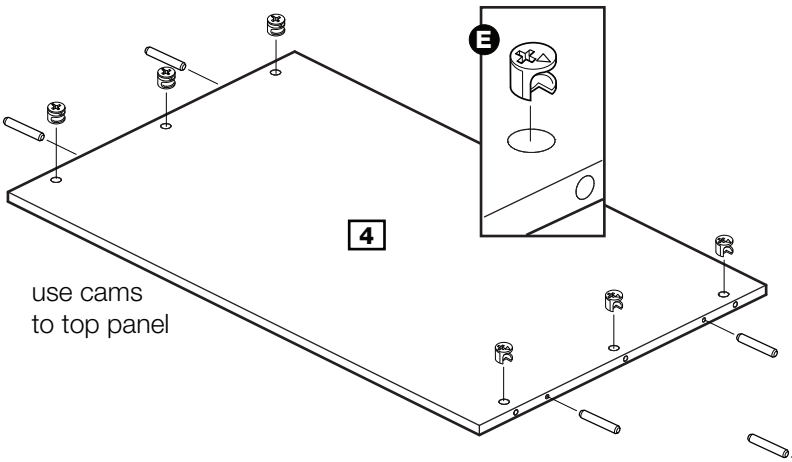

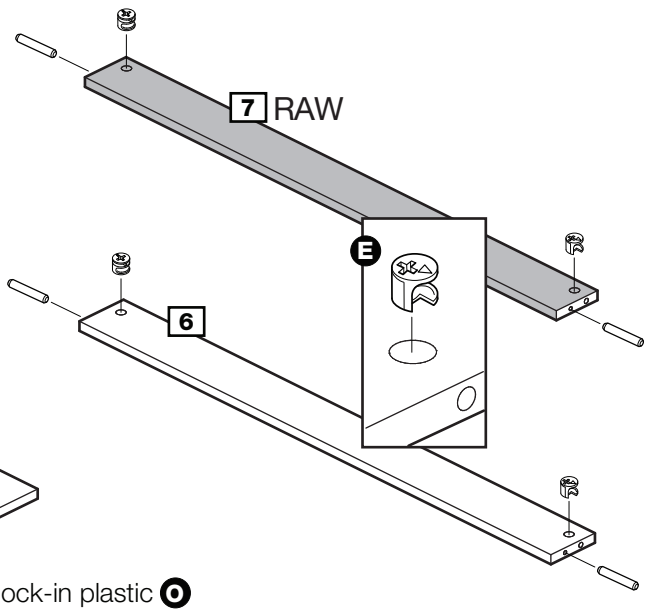

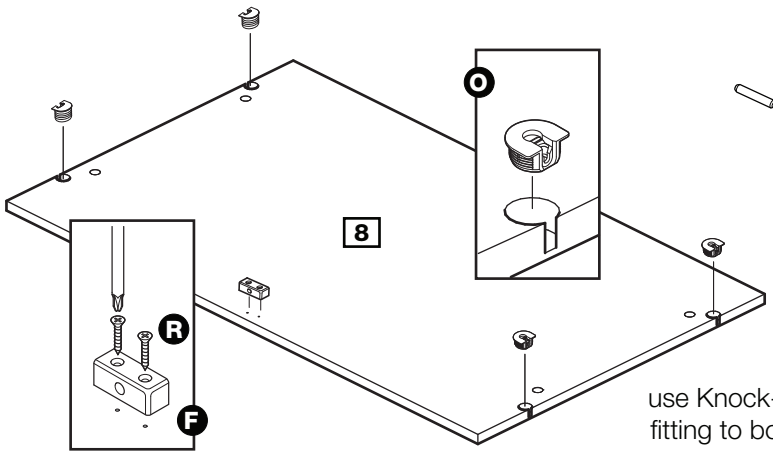


important


When assembling plinth for free standing double ivory classic wardrobe see pag. ***22***

Assembly Instructions

Step 2

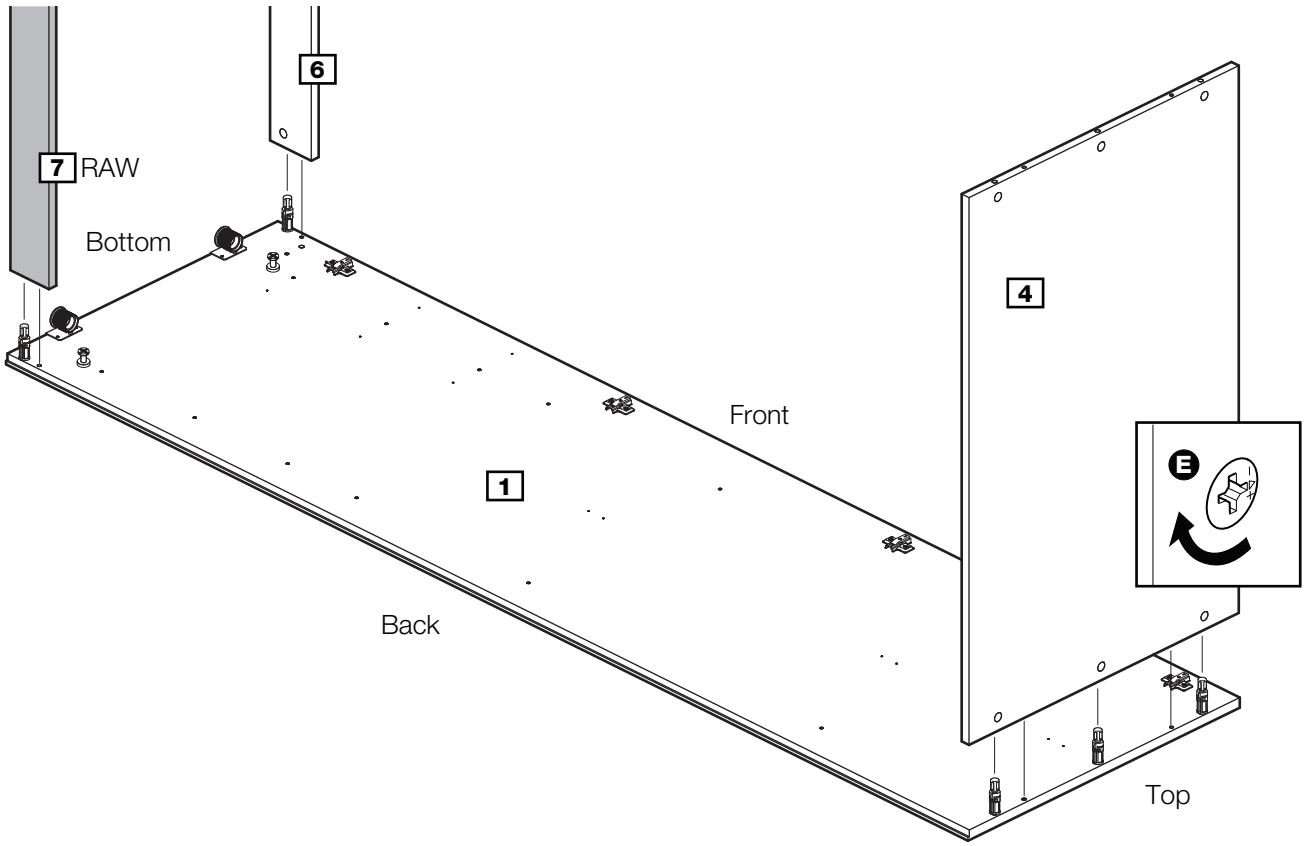


Step 3

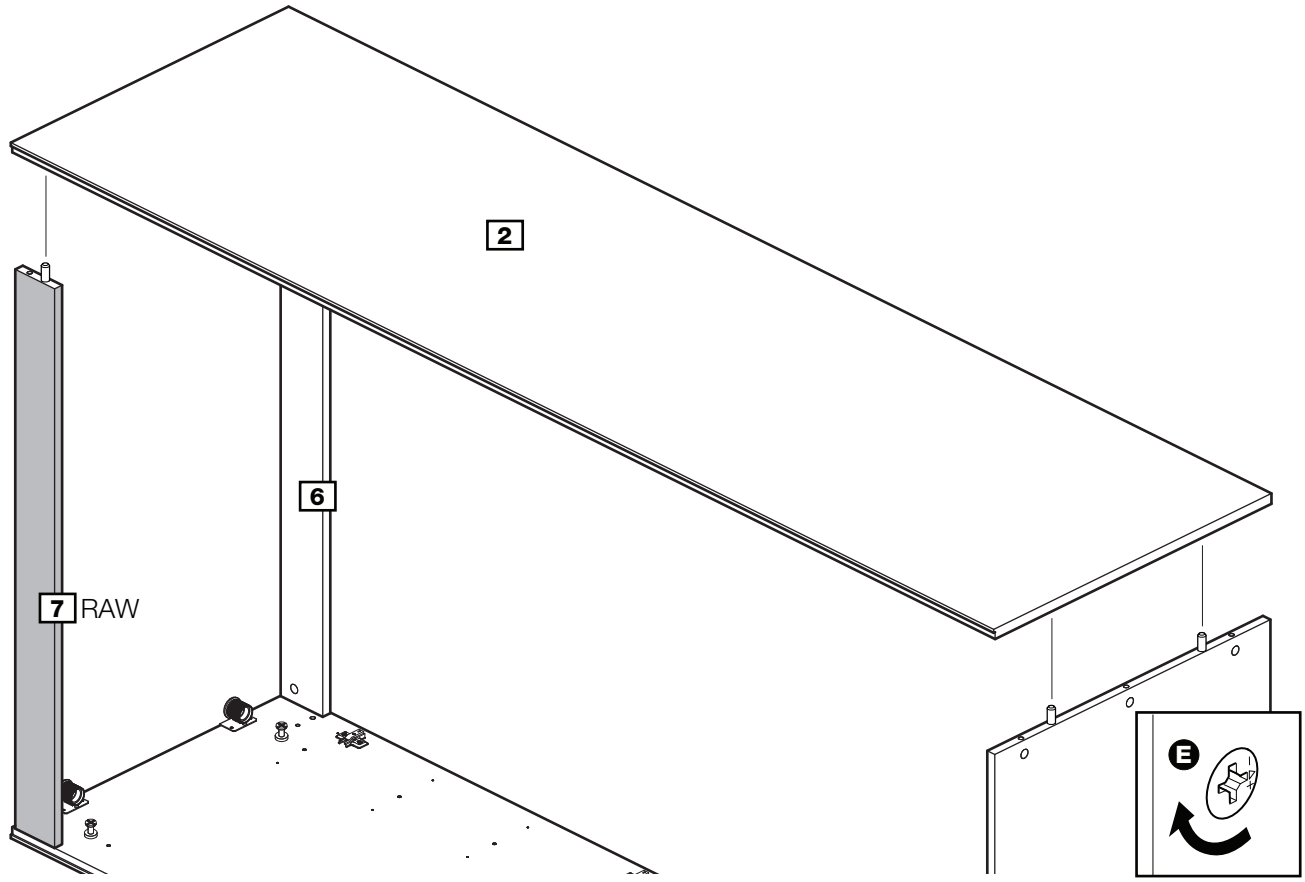

Assembly Instructions


Step 4

Insert back panels

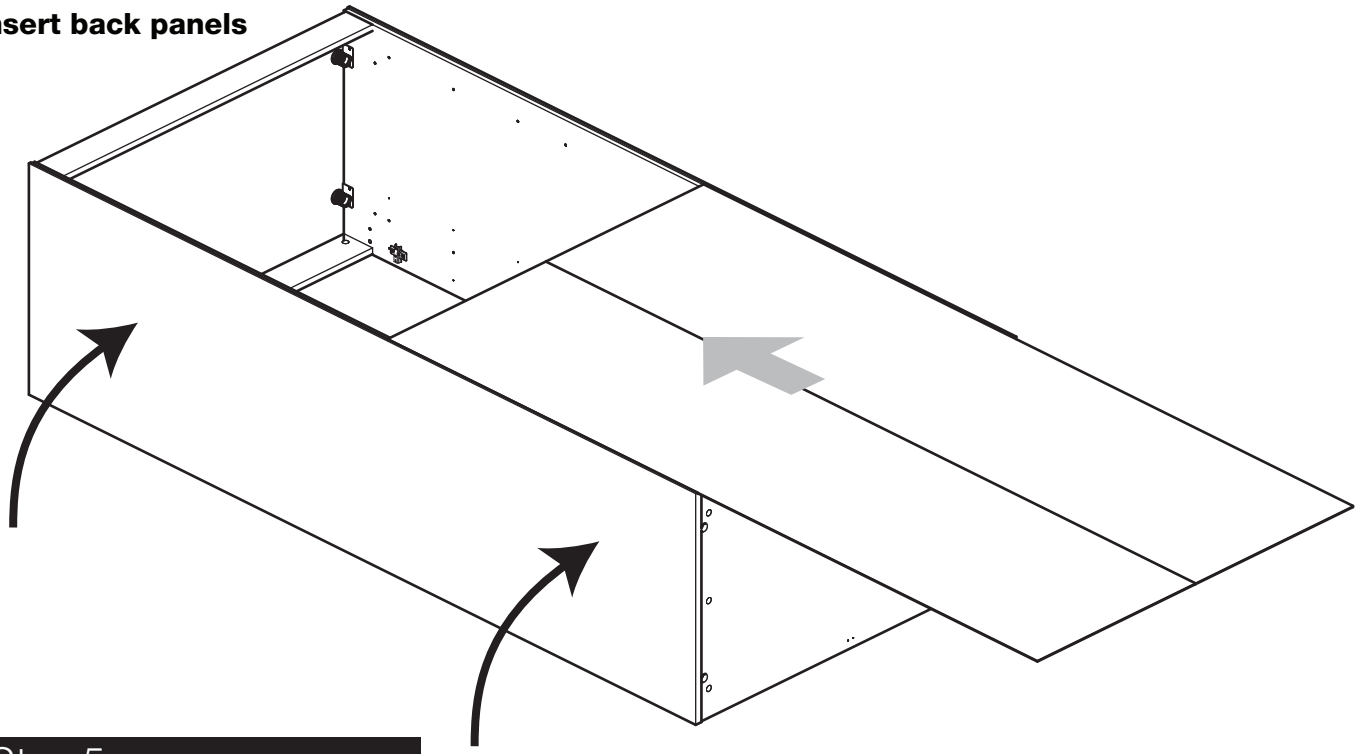

Step 5

Fixing back panels

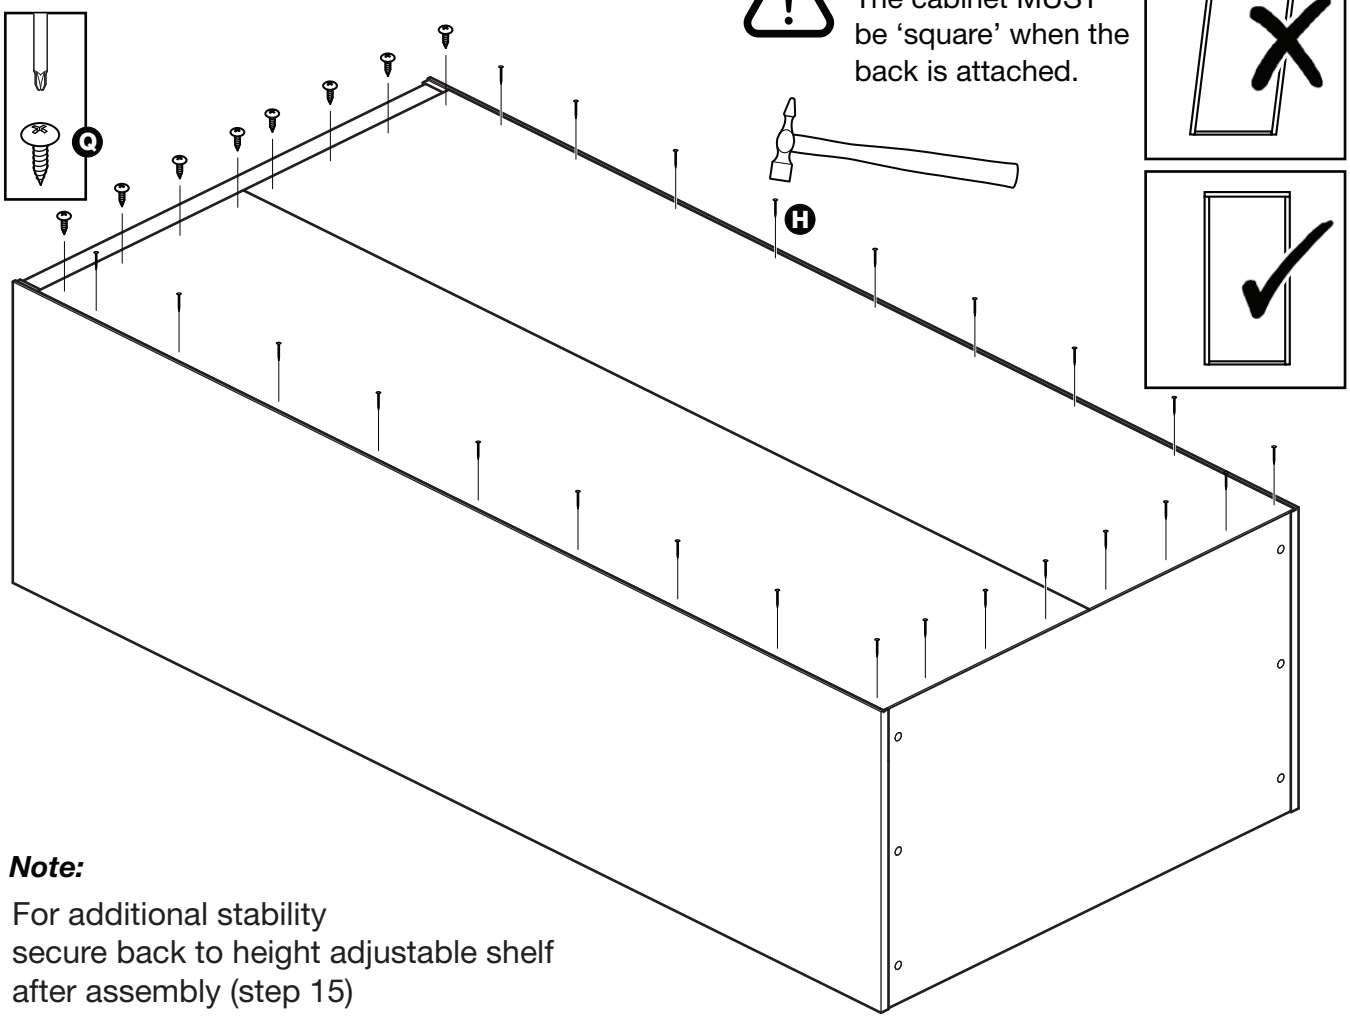


Important:
The cabinet MUST be 'square' when the back is attached.

Note:


For additional stability
secure back to height adjustable shelf
after assembly (step 15)


Assembly Instructions


Step 6

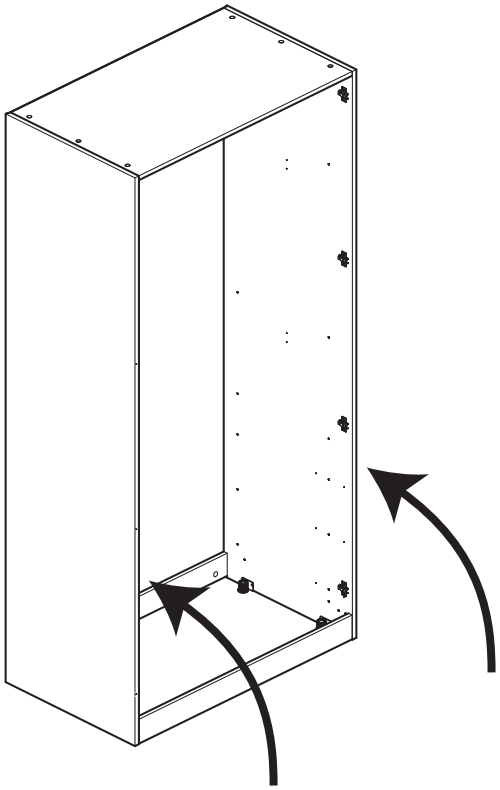


Step 7

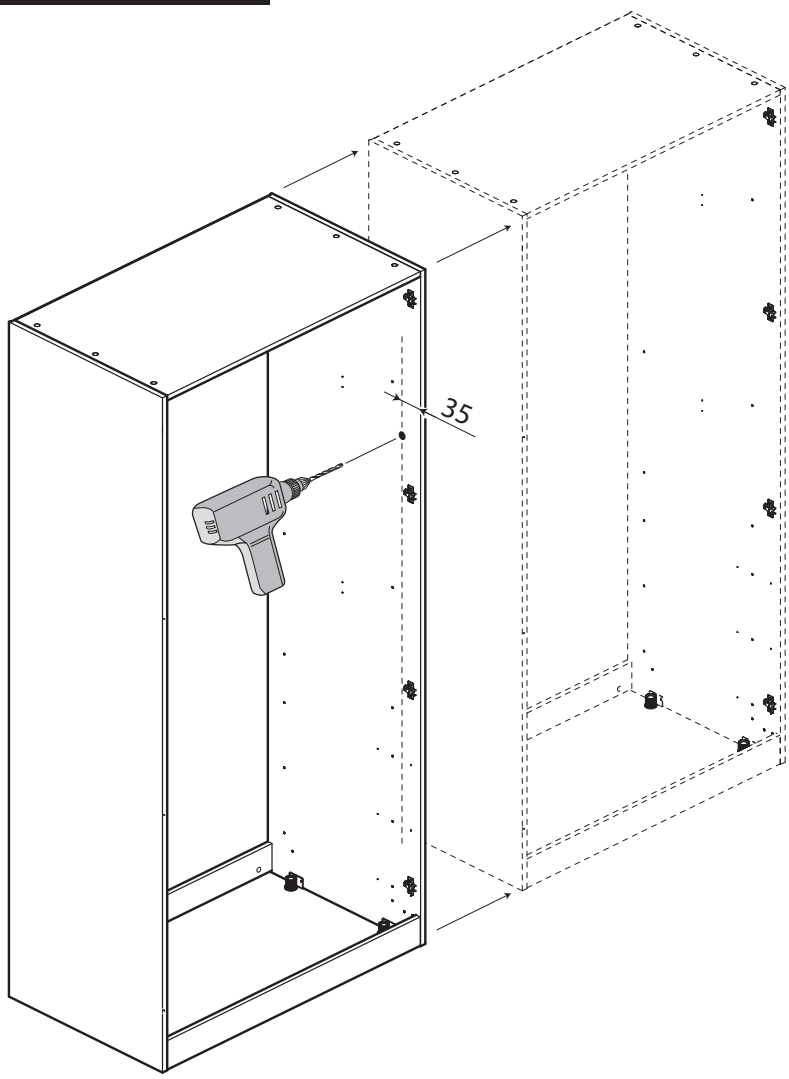

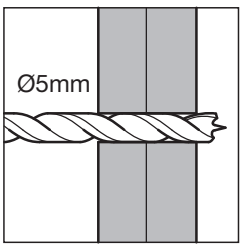


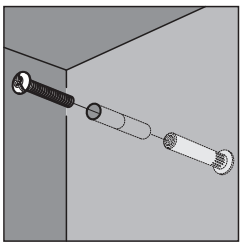

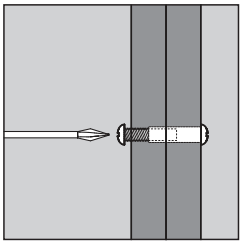

Assembly Instructions


Step 8

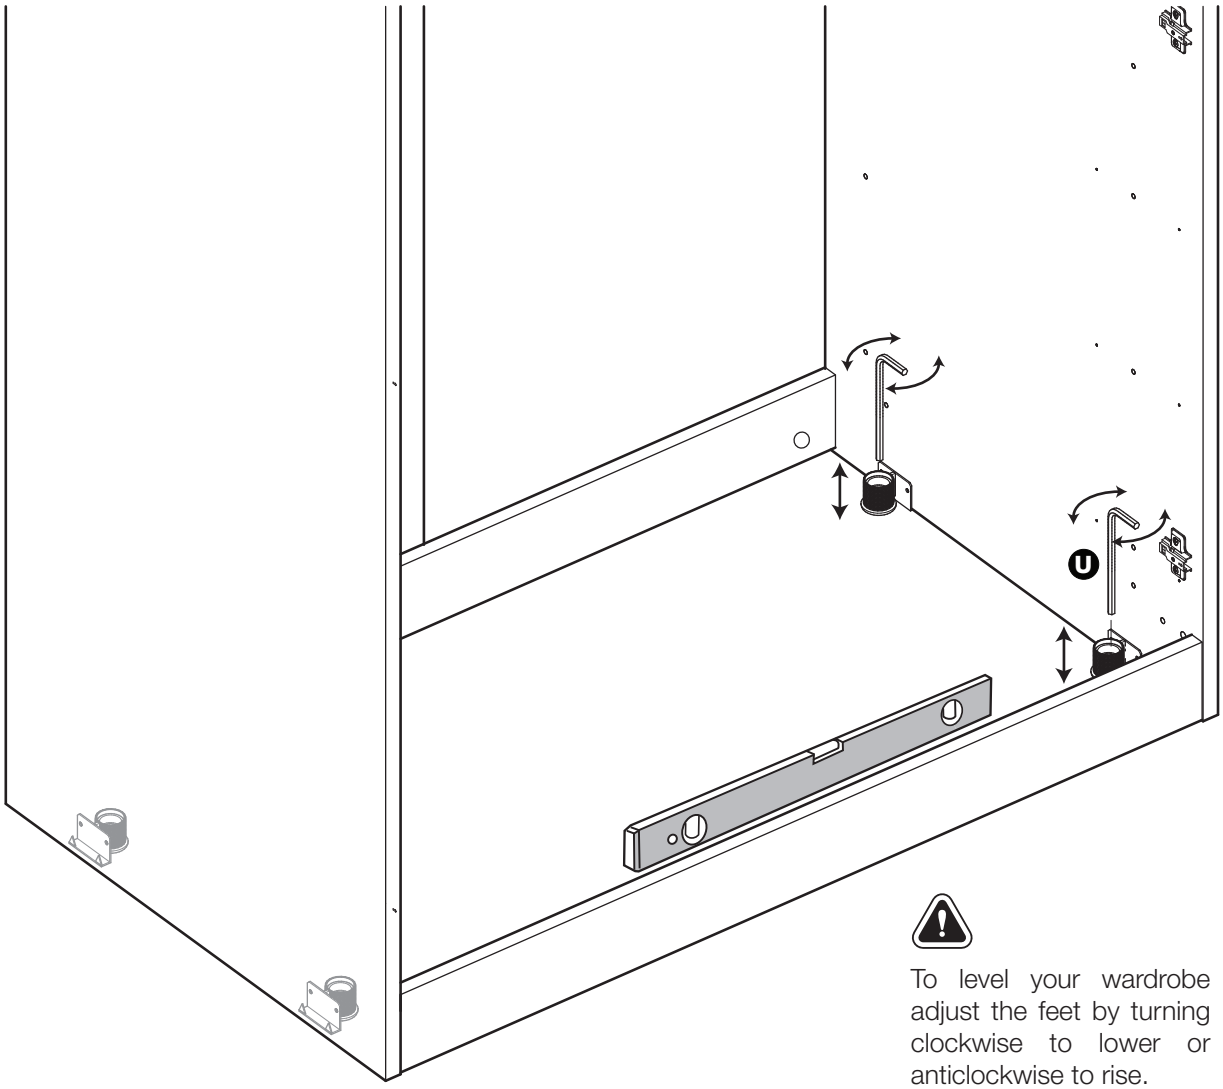

To level your wardrobe adjust the feet by turning clockwise to lower or anticlockwise to rise.

A Guide to

Wall Mounting & Fixings

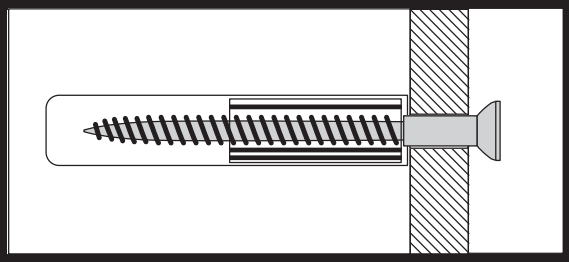

IMPORTANT:
When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


HINTS:

1) General Rule ⚠ Always use a larger screw and wall plug if you are not sure.
2) Ensure you use the recommended drill bit to match the wall plug and hole size.
3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug
General Wall Materials

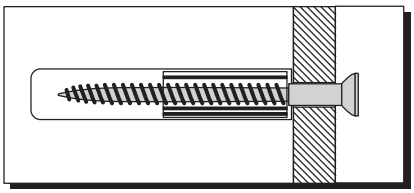


These come in various sizes and are made from plastic or sometimes wood fiber.

No.2 "General Purpose" Wall Plug
Aerated / Breeze Block

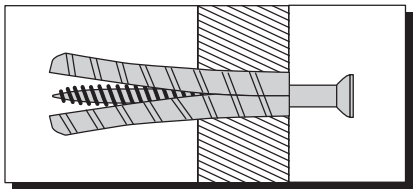


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.
For light loads, a General Purpose Plug can be used.

No.3 "Shield Anchor" Wall Plug
Heavy Loads

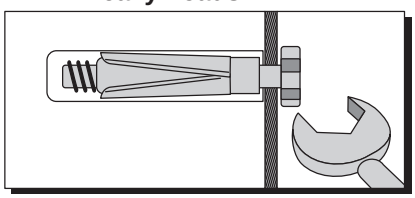


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No.4 "Cavity Fixing" Wall Plug

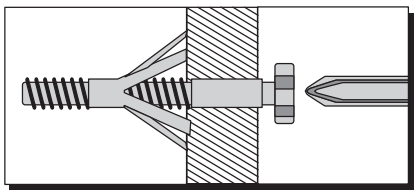


For use with plaster board partitions or hollow wooden doors.

No.5 "Cavity Fixing - Heavy Duty" Wall Plug

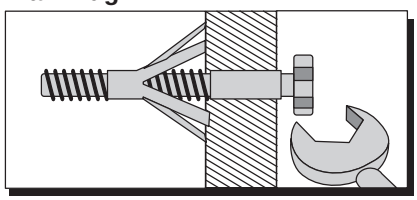

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No.6 "Hammer Fixing" Wall Plug

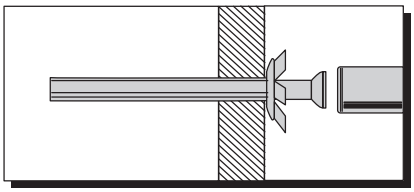

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE


⚠ **SAFETY**
Always check the fitting and location to ensure your safety in and around the home.


⚠ **FITTING**
From time to time check the fitting to ensure the wall plugs or screws do not become loose.

Assembly Instructions

Step 9


Wall fixing

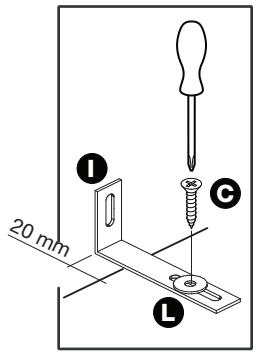

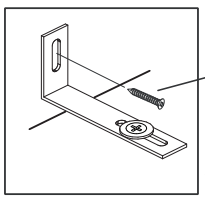

WALL PLUG
AND SCREW
NOT INCLUDED

Please see
Guide to
wall mounting

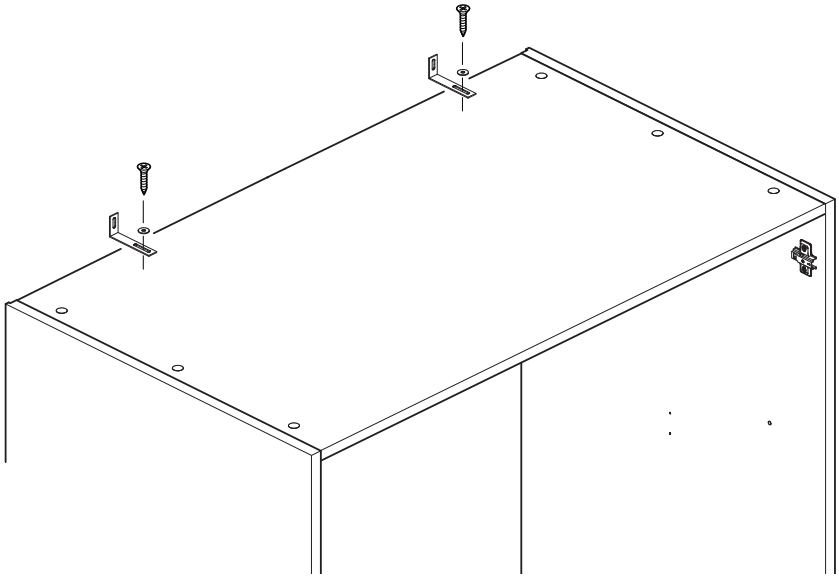


Step 10


Colour coordinated plinth option for sliding configuration

To be applied prior to sliding gear. Please refer to instruction leaflet included with cover strip

2 sliding doors

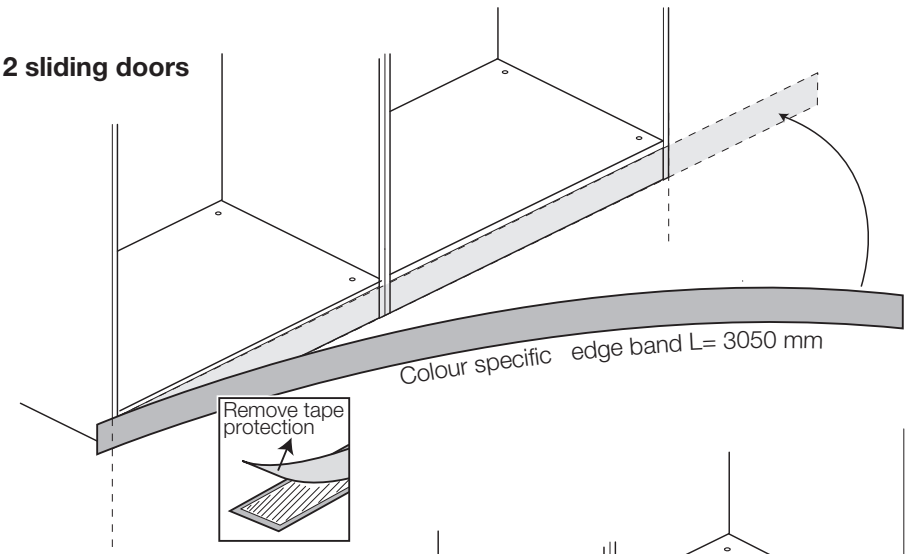



3 sliding doors

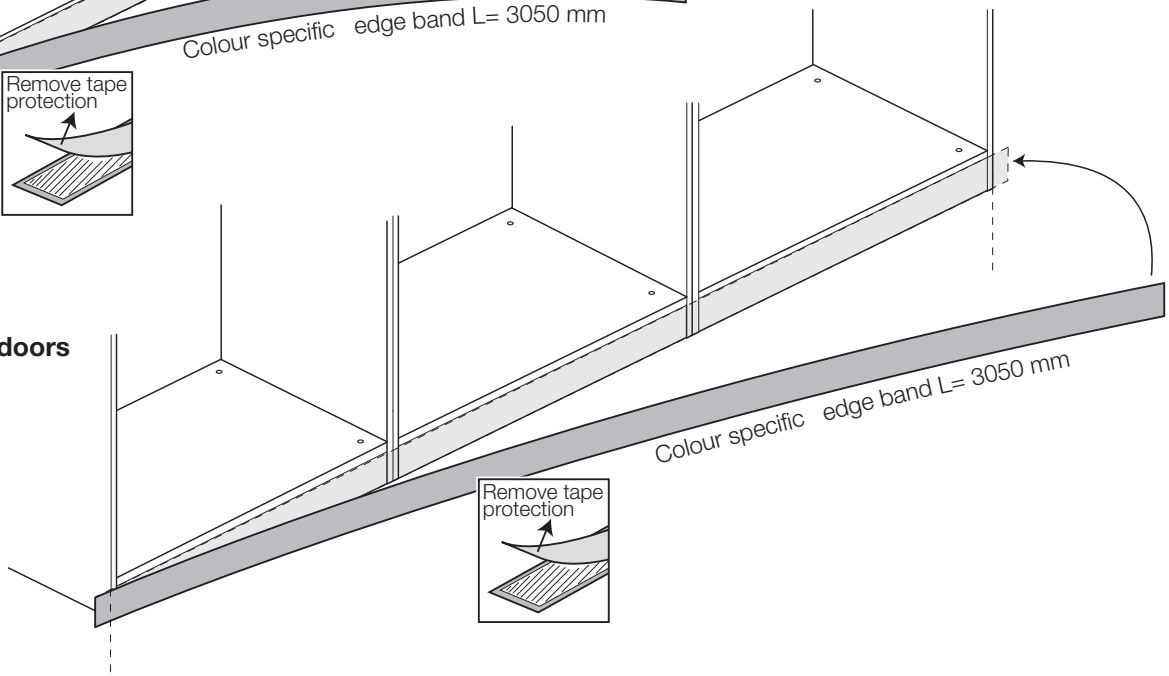


Step 11


Decor end fixing

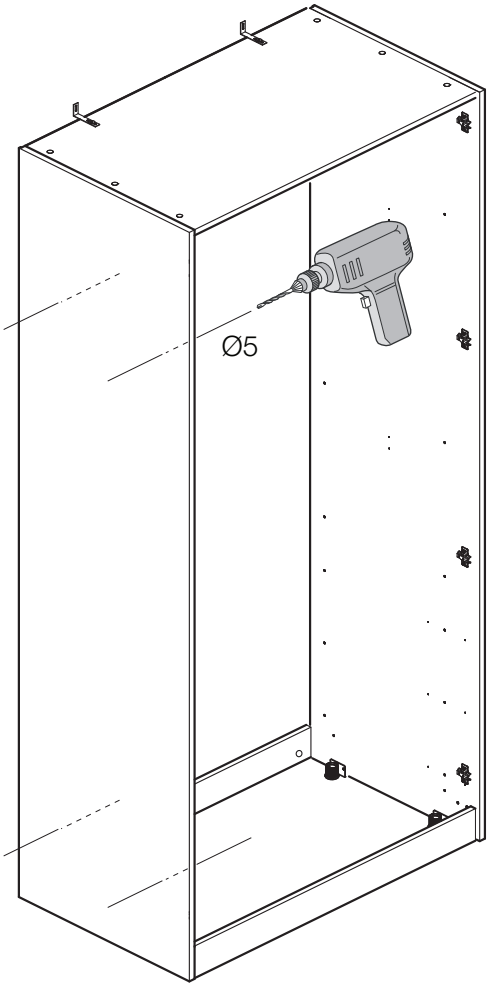

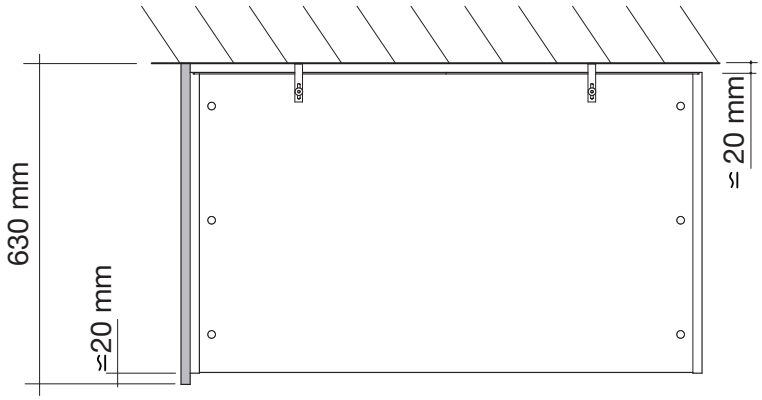


Skirting Profile

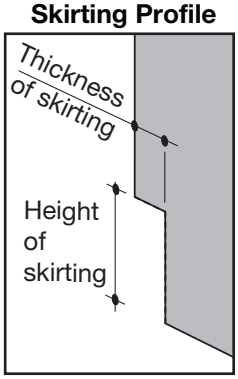


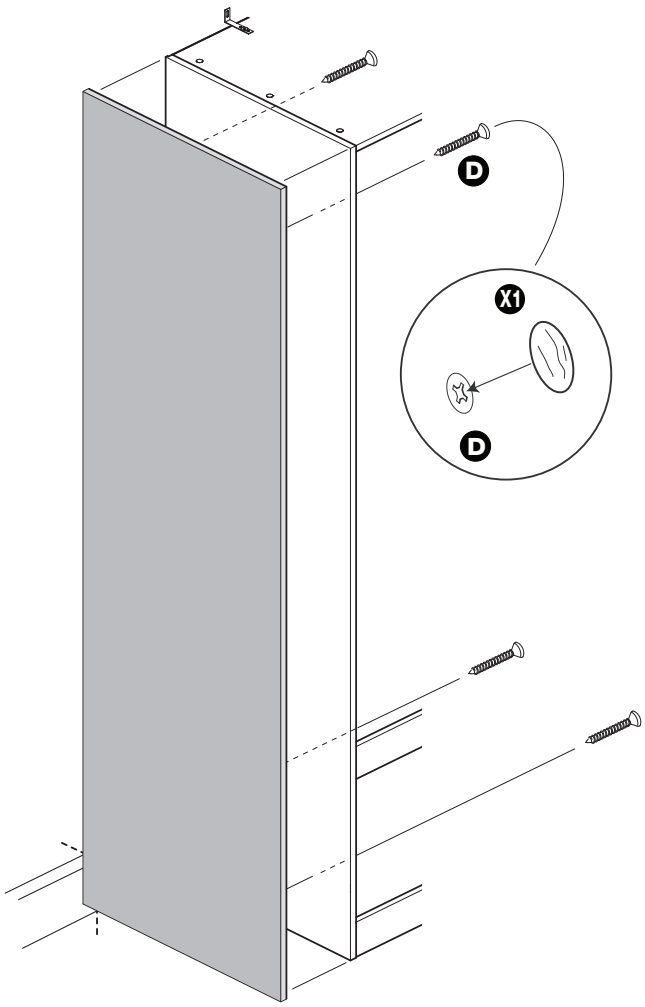


Step 12


Breakfronted configuration

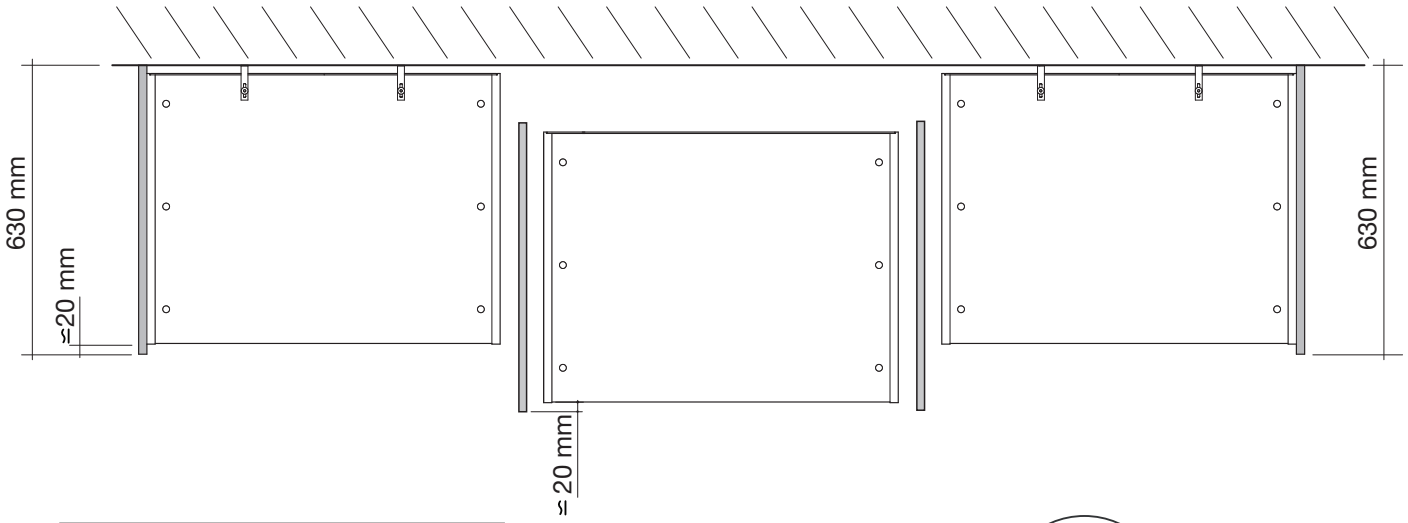

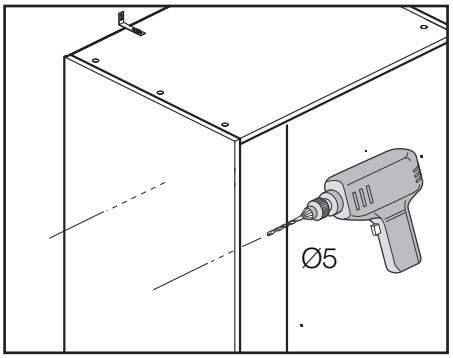

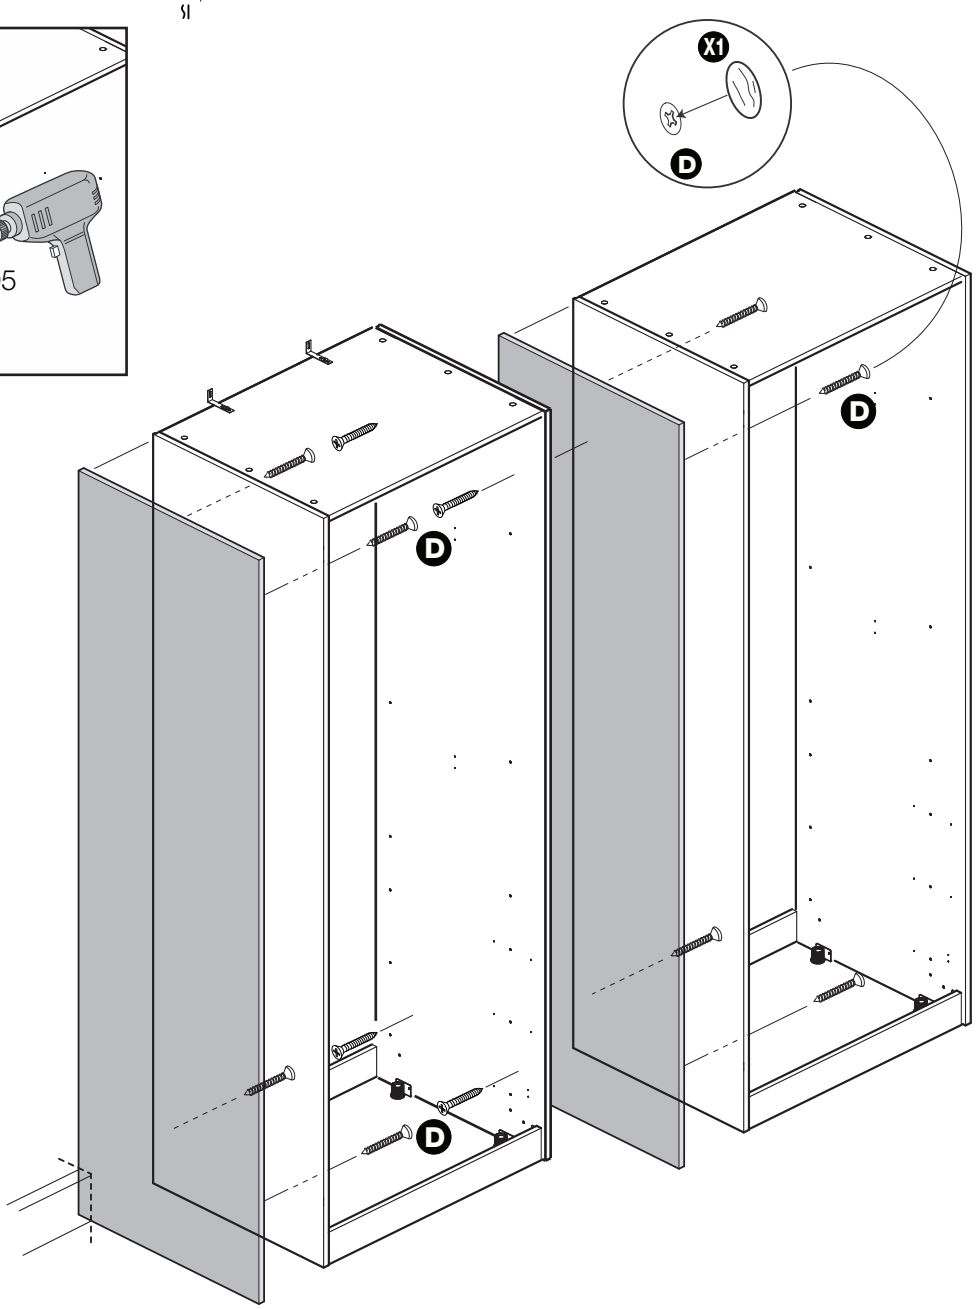



Skirting Profile

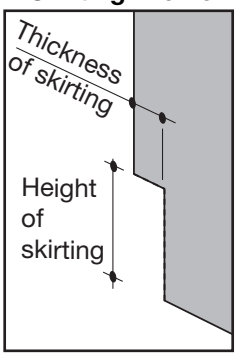

Step 12 A


Sliding configuration

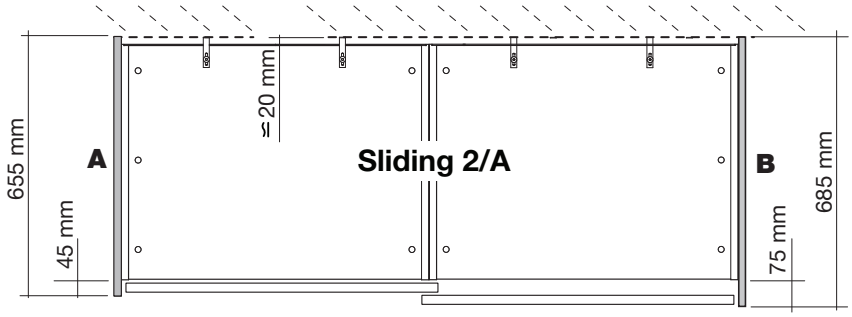

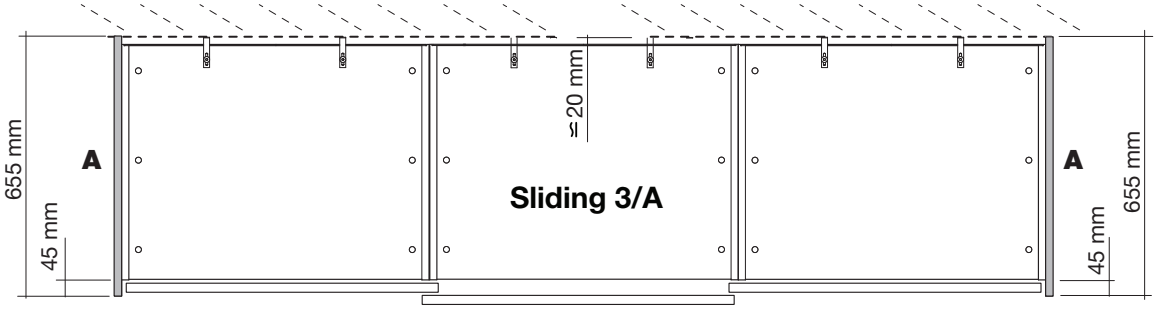


SIDE "A"

- Cut 30 mm from back edge
- Cut out skirting profile

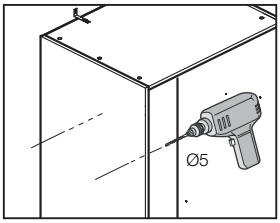


SIDE "B"


- Cut out skirting profile

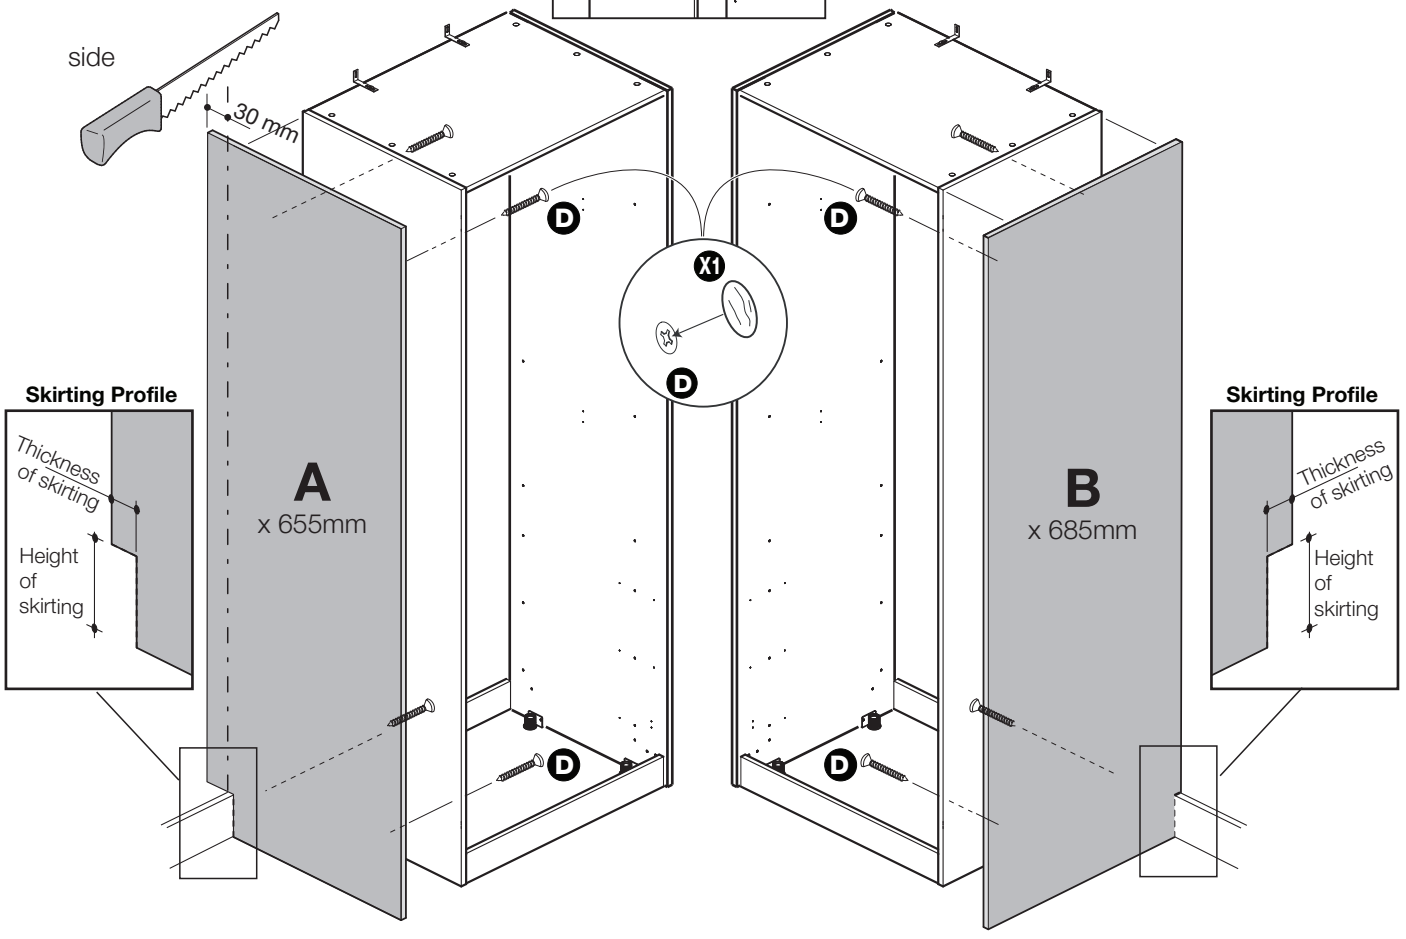


Step 13

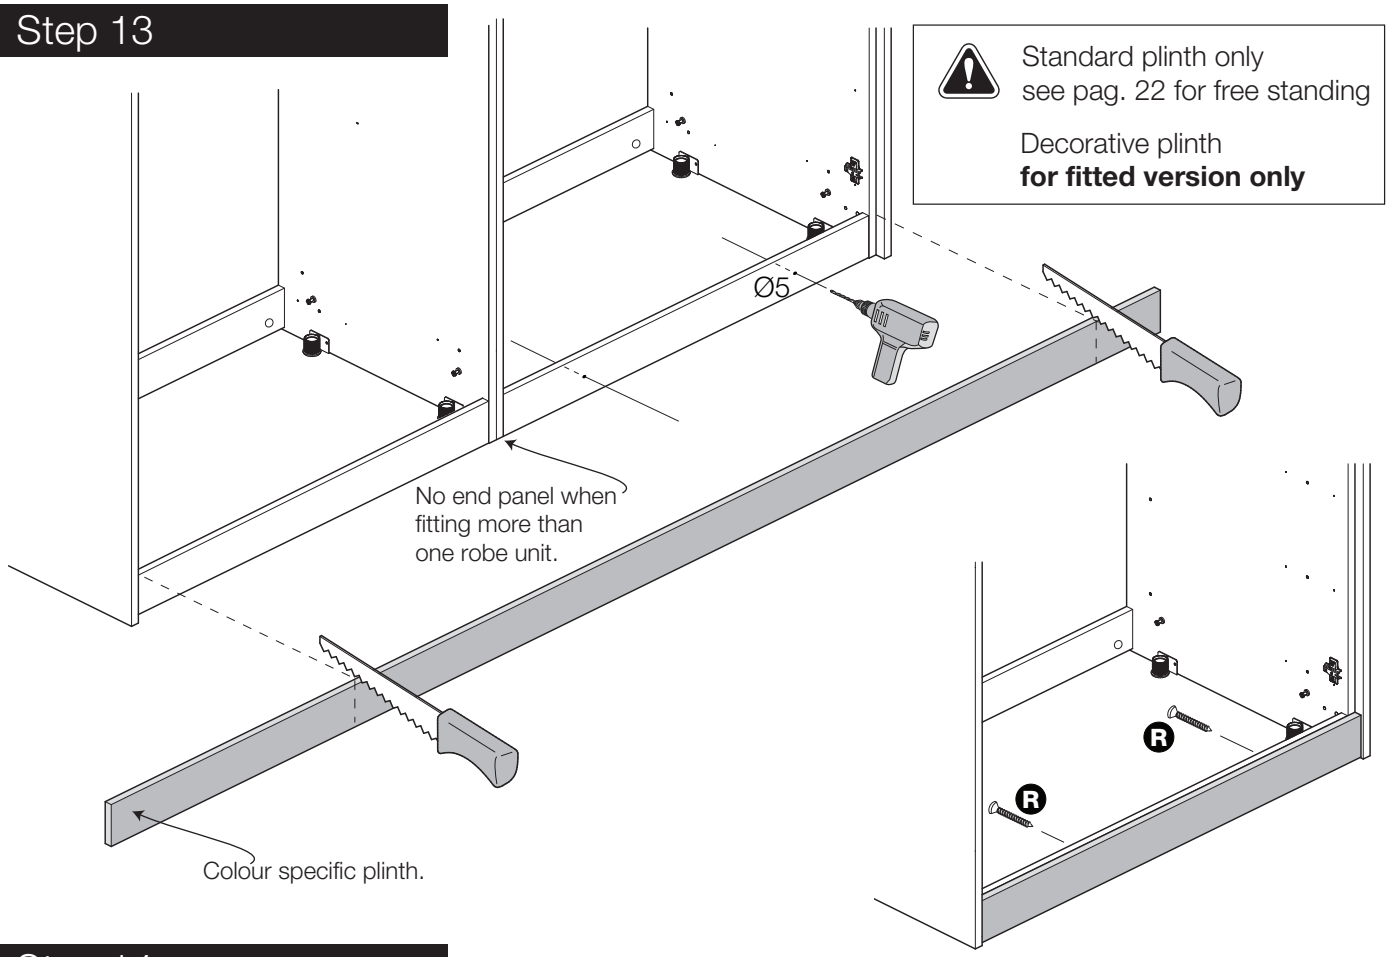

Step 14

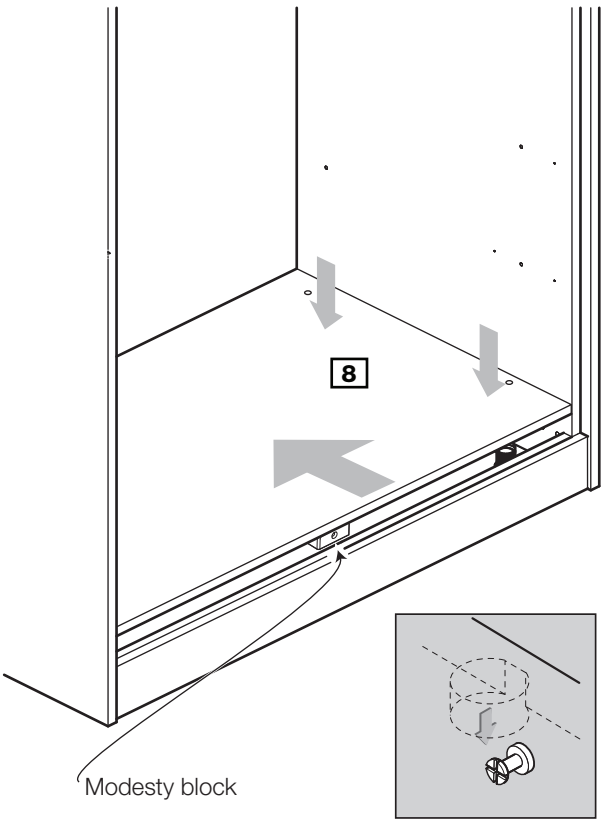


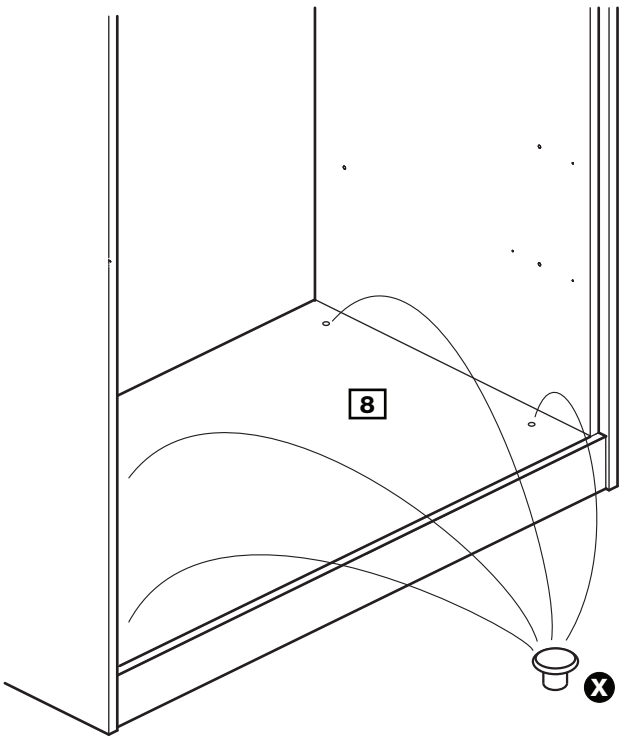


Assembly Instructions


Step 15


Shelf positioning

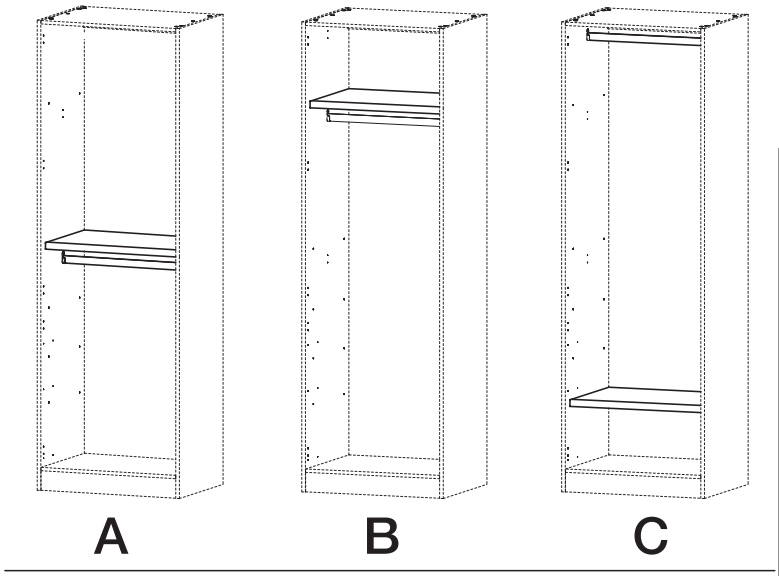



The recommended weight limit for this design of rail is 38,5 kgs. Weights heavier than this may result in a slight bow in the metal rail. The rail will still perform but to help avaoid this, it is advised to distribute the weight evenly across the entire length of the rail.

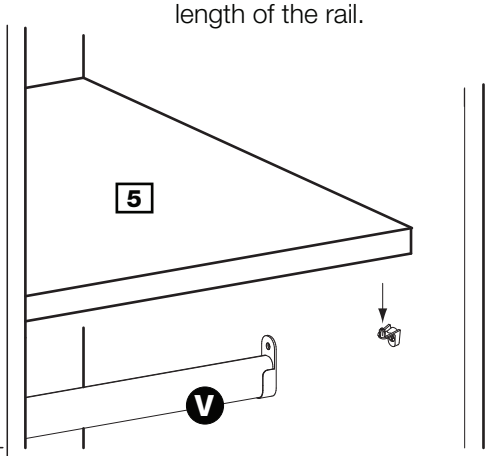

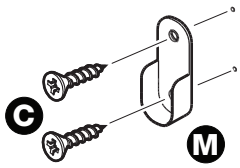

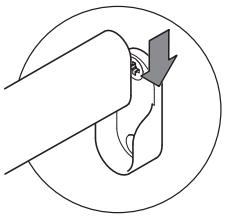

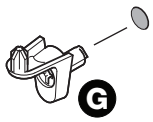

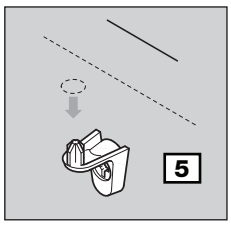


The steps from 16 onwards apply to traditional hinges door robes only


Step 16

Cornice cutting + assembly

cornice is not recommanded for sliding robes application


There should be 22mm of the cornice's underside overhanging from the wardrobe. Measure this carefully to ensure they are screwed into the correct position.

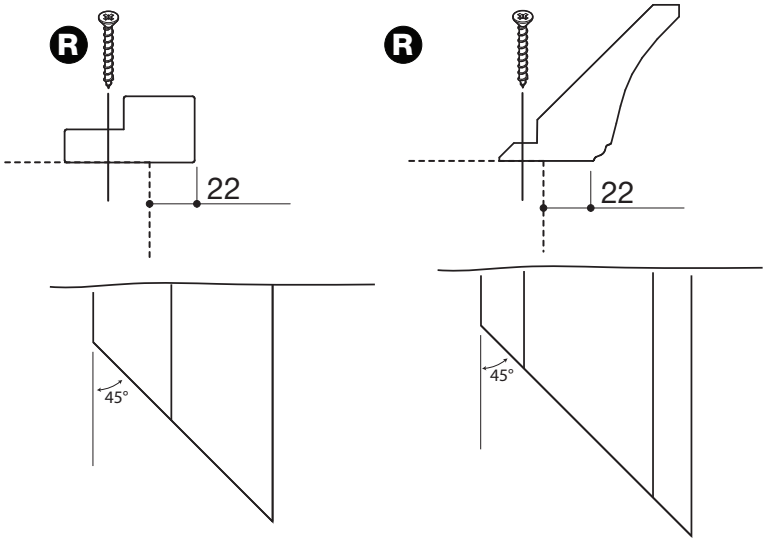

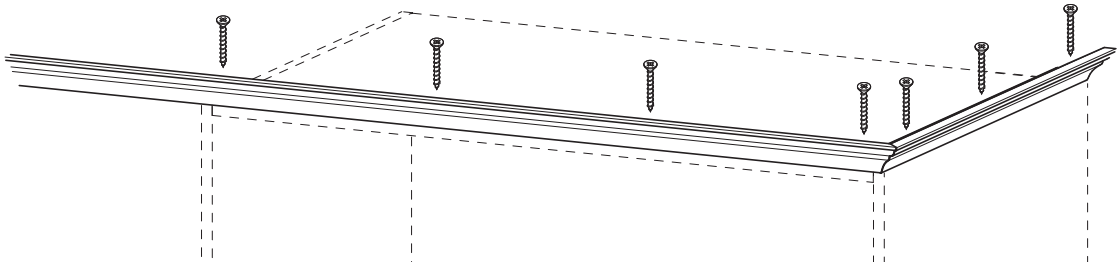


Step 17

Application of hinges to door

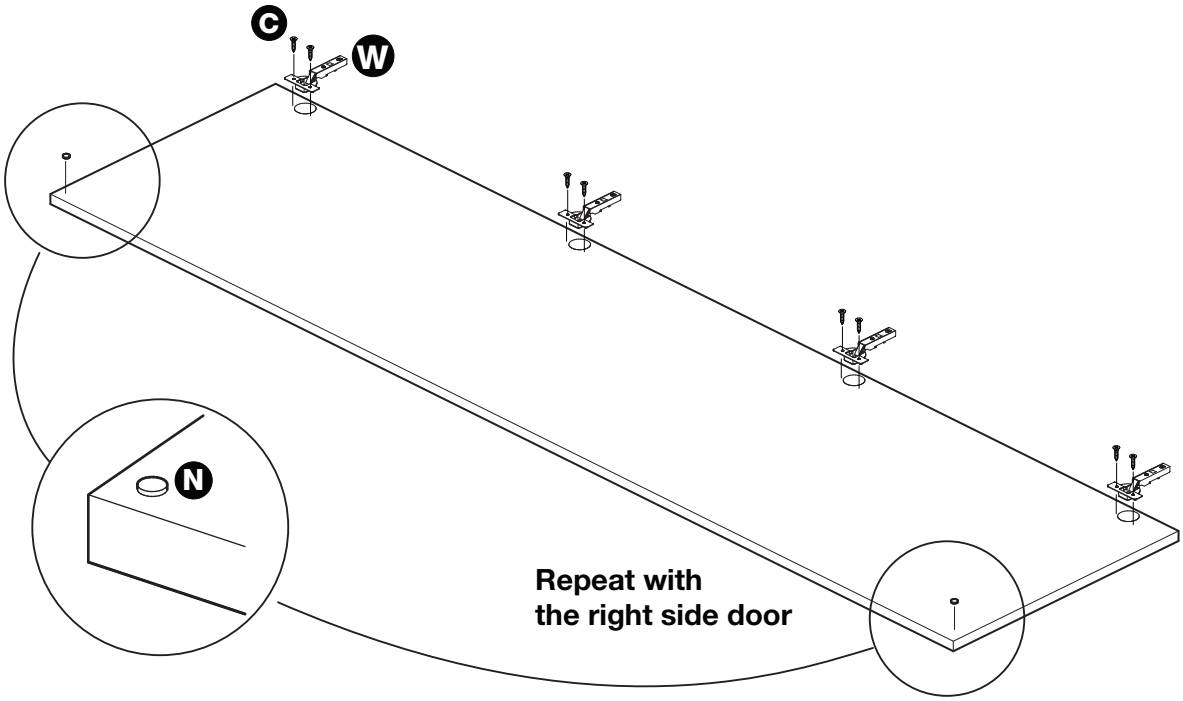


Step 18


For classic door only

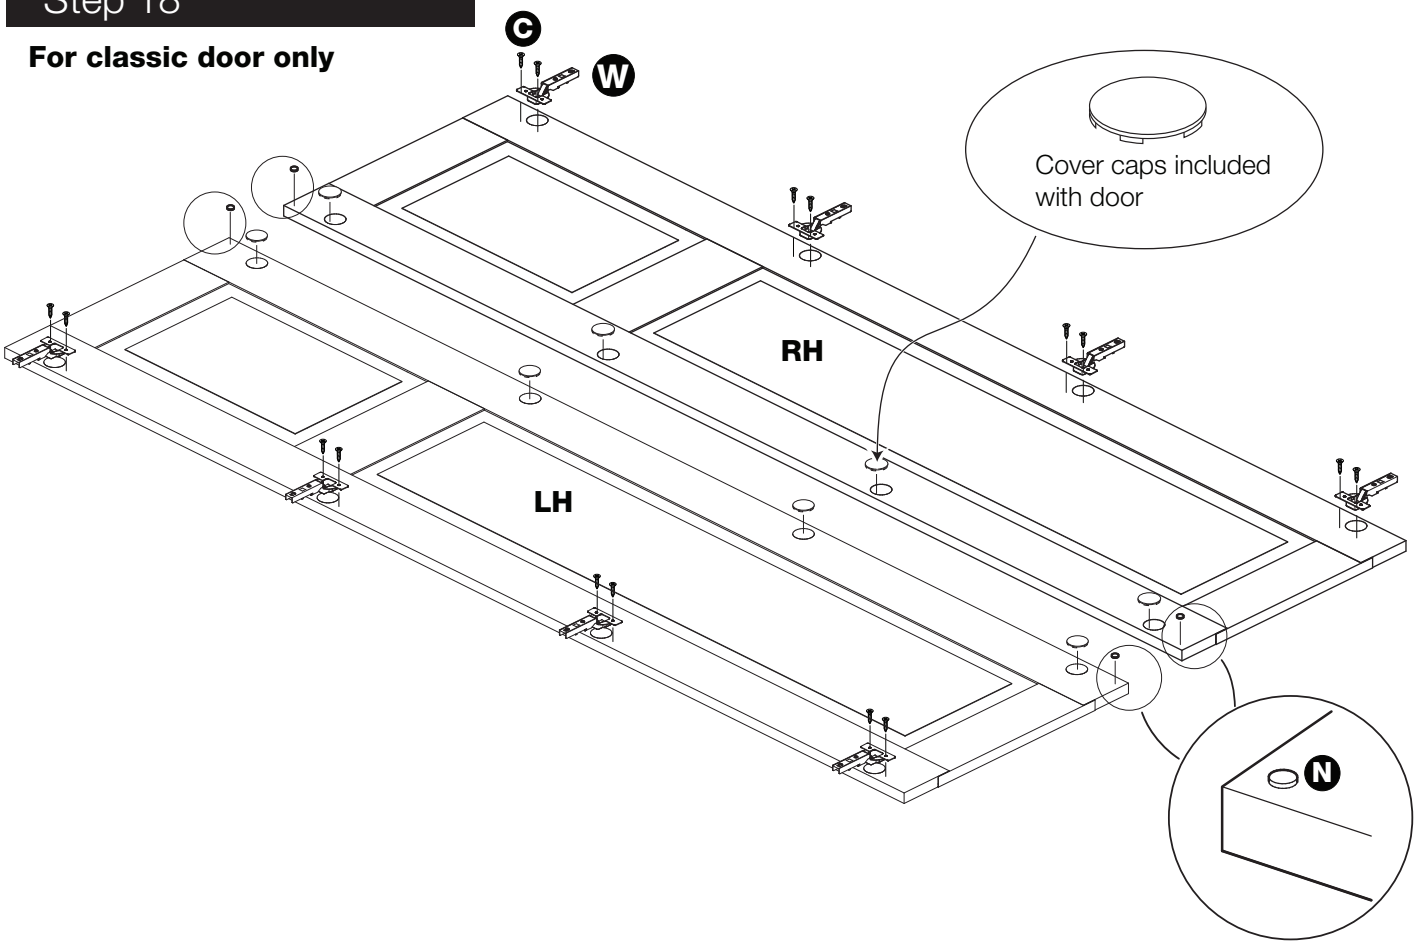



Step 19

Hang door

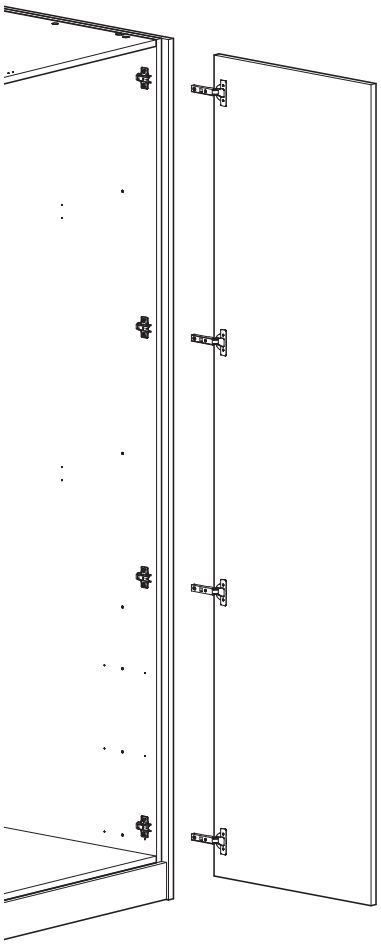

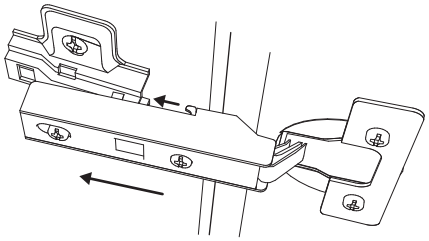


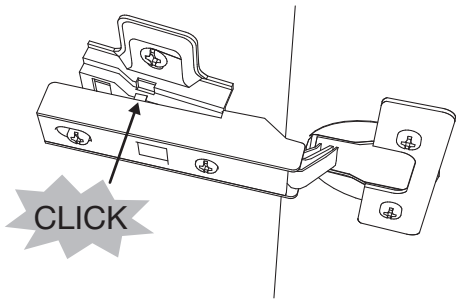


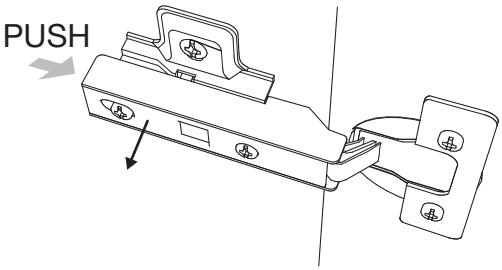

Step 20


Door adjustment

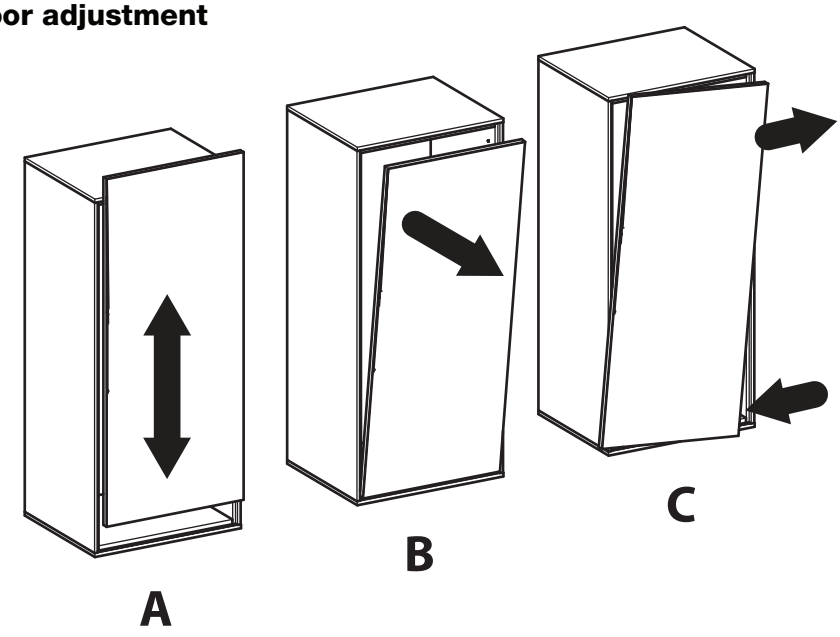


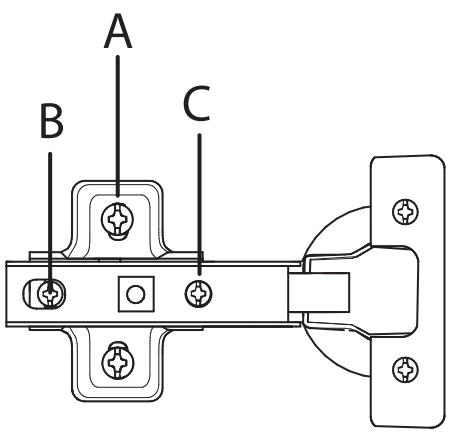

Step 21

Fit soft close mechanism to door hinge
(2 soft close mechanisms are provided for a 4 hinges door)

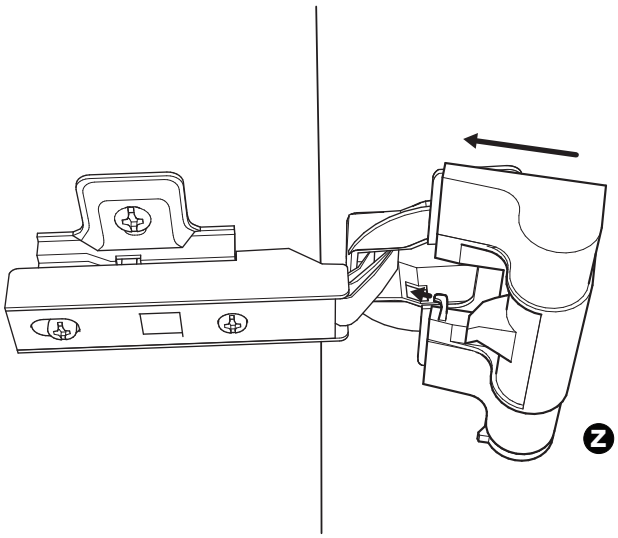


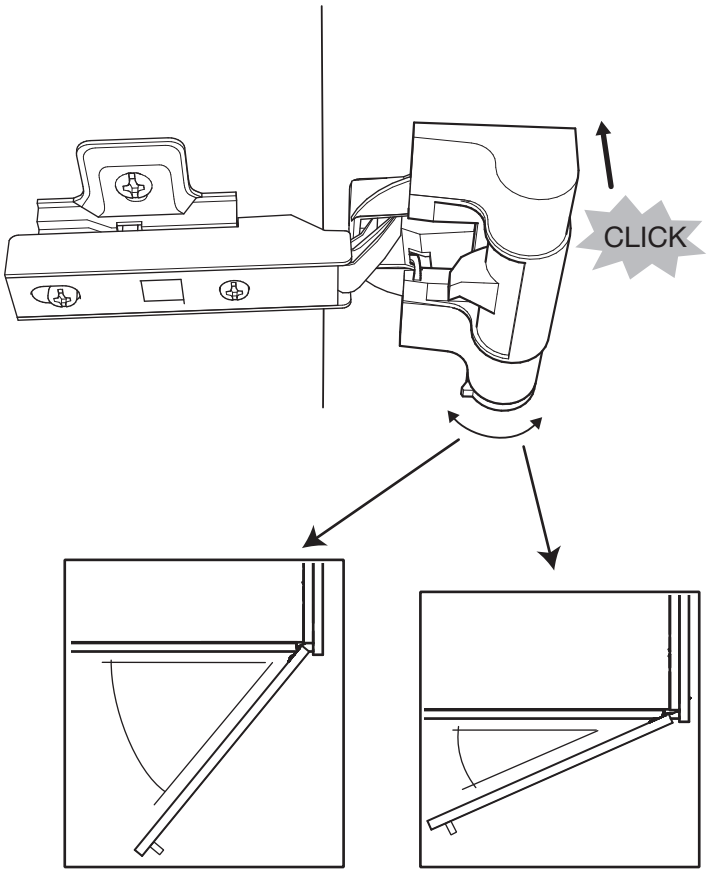



Adjustment dictates the position from which the door starts the slow motion closing


Assembly Instructions

This step is required only when a base plinth is fitted

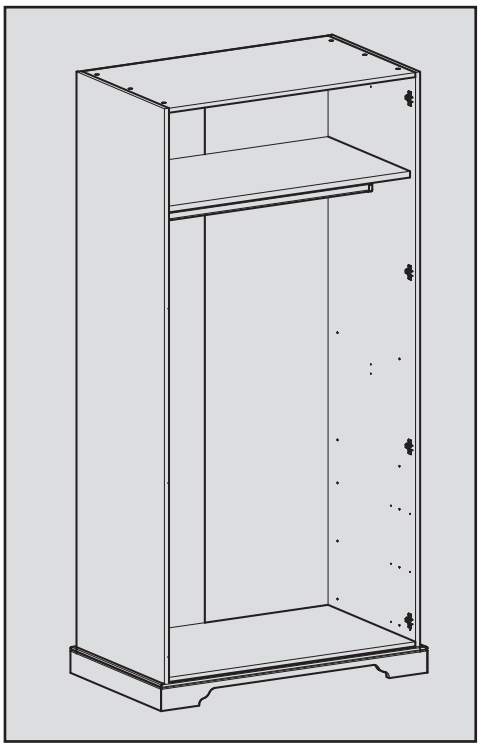


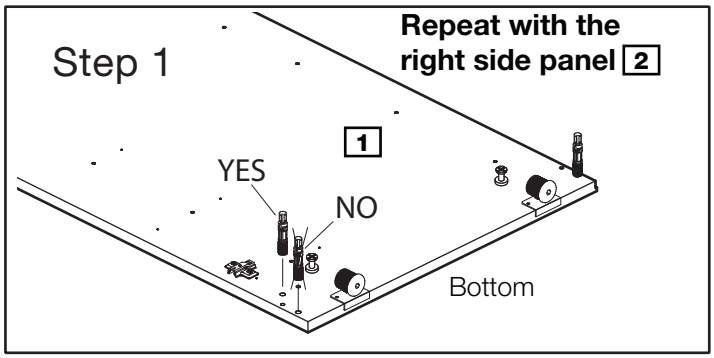


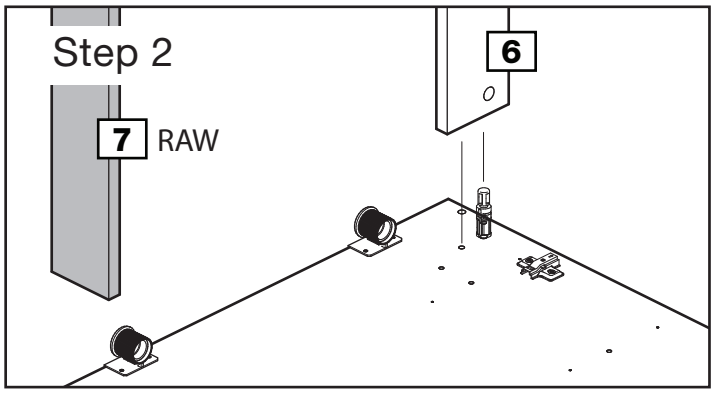

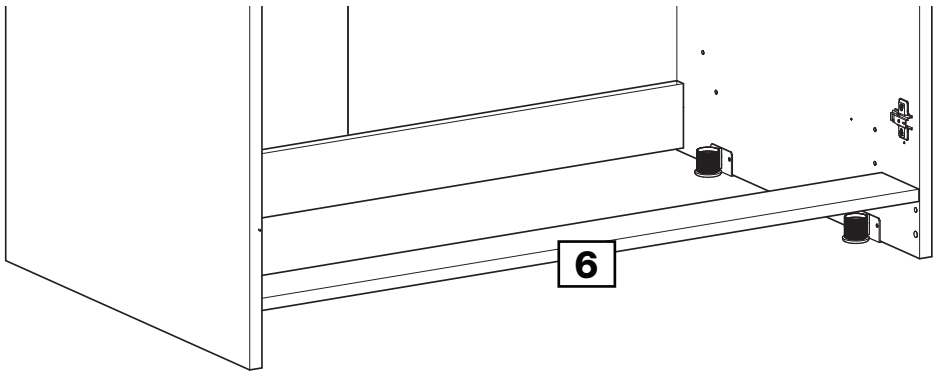


Decor end fitting

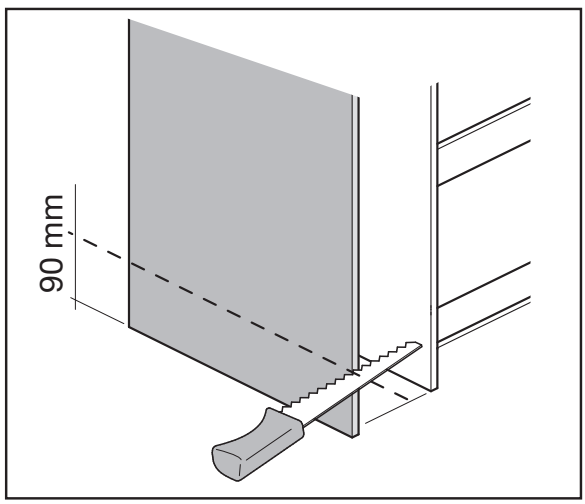

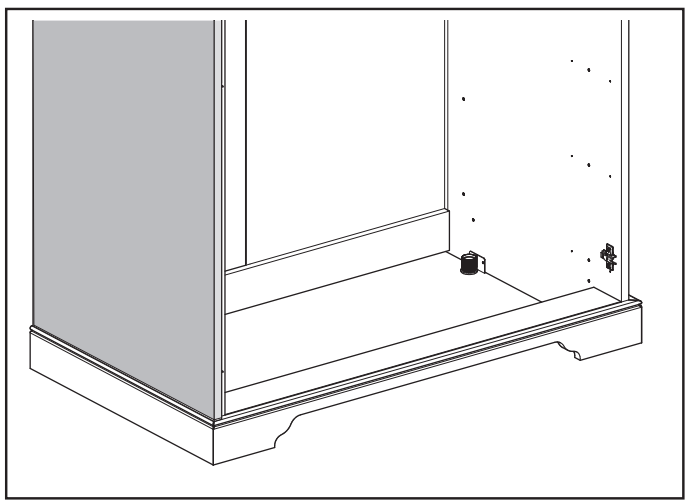

Assembly Instructions

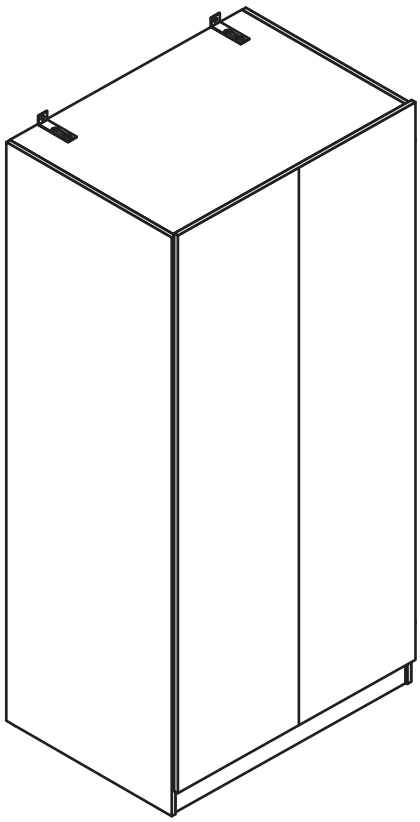

That's the Robe completed.
Take care of your unit by using a damp cloth to clean it.
Please remember to occasionally check that all Cams and Screws are tight.

CLEANING INSTRUCTIONS

This product has been manufactured using modern manufacturing methods and materials. With appropriate in-home care and maintenance it will provide trouble free performances. Many domestic multi-purpose cleaning agents are unsuitable for use on this product. The use of aggressive chemicals can result in irreversible damage. Please follow these guidelines carefully.

USE only 5% soap, 95% water solution, wiping with a damp (not wet) cloth. Finally dry with a soft clean cloth. Dust with a soft clean cloth only.

DO NOT USE wax furniture polish, abrasive or aggressive cleaners, bleach or hypochlorate (chlorine) based cleaners, multi-purpose cleaners, dilutes, acetone, alcohol, solvent or similar products.

Recycling – the packaging materials for this product may be recycled through your local recycling centre. When you want to dispose of the product itself, please consider donating it to a local charitable organisation, otherwise recycle it through your local recycling centre.