
Alicia - 3+3 Drawer Chest

Assembly Instructions - Please keep for future reference

184/5886

171/9455

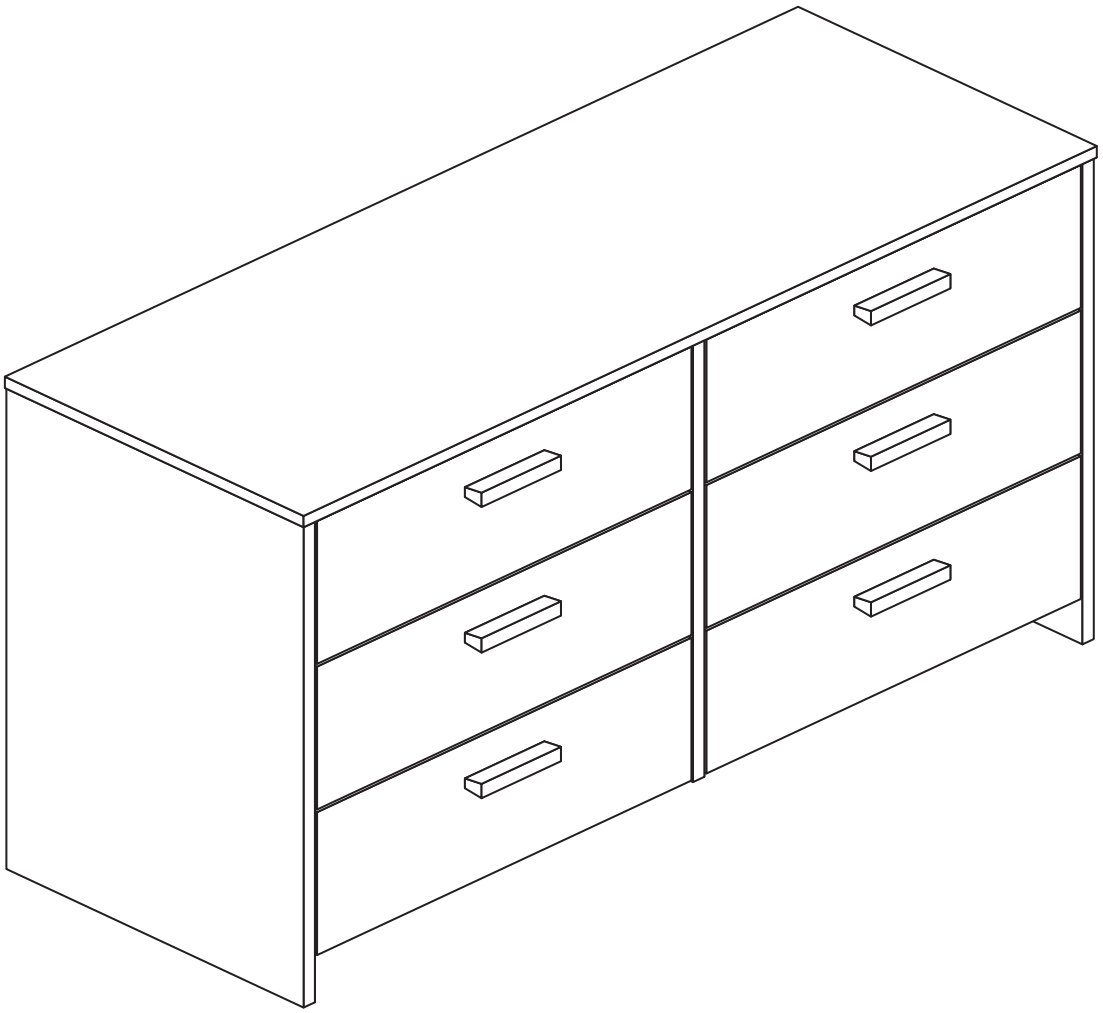

Dimensions
Width - 105cm
Depth - 39.5cm
Height - 65.5cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 10/02/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 29kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

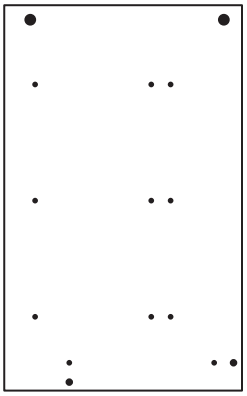


1 Left Side *(D2662A)*
(637 x 393mm)

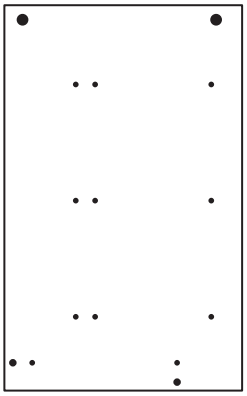


2 Right Side *(D2663A)*
(637 x 393mm)

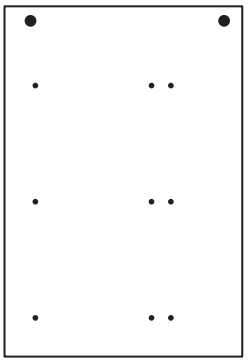


3 Divider *(D2664A)*
(579 x 393mm)

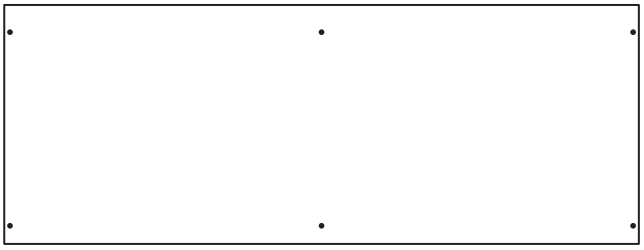

4 Top *(D2661A)*
(1049 x 395mm)




5 Rail *(D2665A)*
(1015 x 58mm) x 2

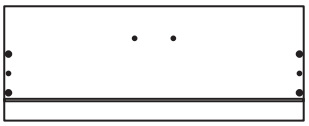

6 Drawer Front *(D2666A)*
(495 x 189mm) x 6



7 Left Drawer Side *(W330-115LH)*
(330 x 115mm) x 6




8 Right Drawer Side *(W330-115RH)*
(330 x 115mm) x 6



9 Drawer Back *(W468-115BCK)*
(468 x 115mm) x 6



10 Drawer Base *(T479-327)*
(479 x 327mm) x 6

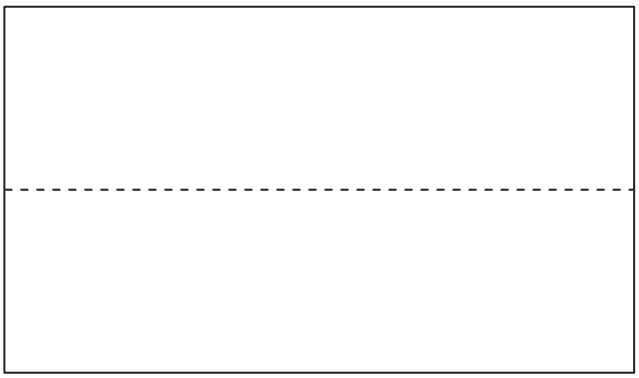


11 Back *(X1041-605)*
(1041 x 605mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 4

B 

Metal dowel *(F901)* x 22

C 

Large locking nut *(F900)* x 10

D 

Small locking nut *(F3)* x 12

E 

Knock-in Peg *(F171)* x 24

F

Nail *(F51)* x 22

G 

25mm Screw (*F50)* x 12

H 


9mm Screw *(F74)* x 12

I 

9mm Screw (*F73)* x 24

J 

Drawer runner *(F1004)* x 12

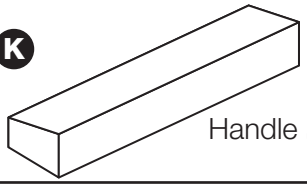
K 

Handle *(F319)* x 6

L 

Wedgefix *(F639)* x 24

Tools required

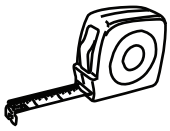


Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

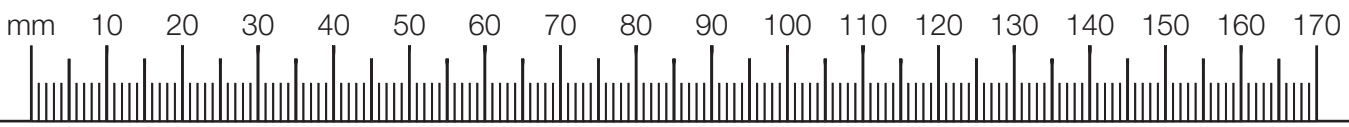

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare the 6 drawer fronts

Screw 2 metal dowels **B** into the holes shown on the back of the drawer front **6**.

Note: Tighten the metal dowels up fully against the panels.

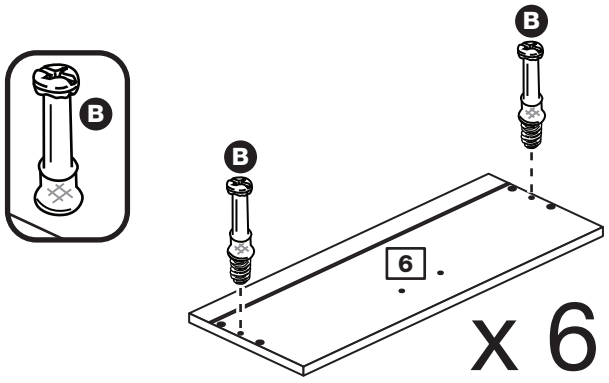


Step 2

Prepare the drawer sides

Insert a small locking nut **D** into the hole shown on the left drawer side **7** and right drawer side **8**.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

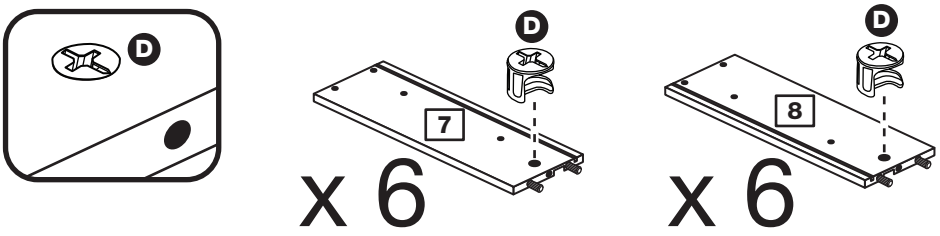

Step 3


Attach the drawer sides to the drawer front

Push the left drawer side **7** and right drawer side **8** onto the back of the drawer front **6**.

Turn the small locking nuts **D** on the left drawer side **7** and right drawer side **8**.

Note: Turn the locking nuts **D** clockwise to secure panels - more than 1/2 a turn.

Note: The locking nuts can be on either surface of the drawer sides. Make sure that the groove is on the inside, as shown.

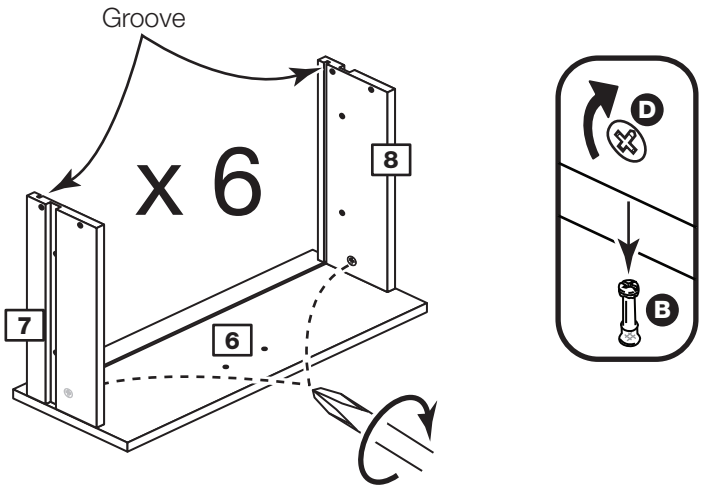


Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base 10 down the grooves in the drawer sides 7 and 8 and down into the groove in the drawer front 6.

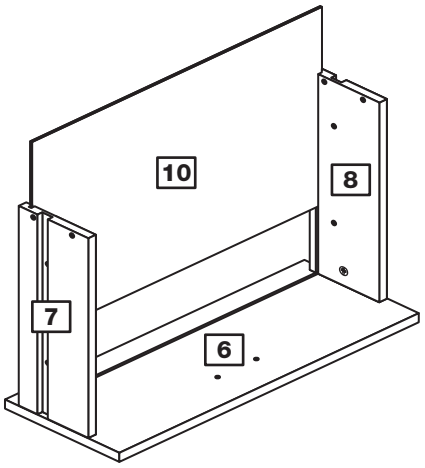

x 6


Step 5

Fit the drawer back

Fit the drawer back 9 between the drawer sides 7 and 8.

Make sure that the drawer base 10 fits into the groove in the drawer back 9.

Hold the drawer back 9 in position and tap the knock-in pegs E through the holes in the drawer sides 7 and 8.

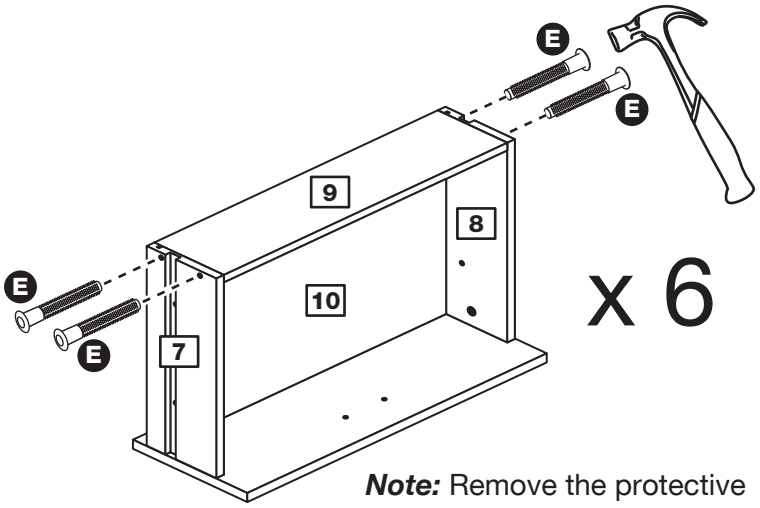


x 6

Note: Remove the protective film from the drawer fronts before starting Step 6.

Step 6

Attach the handle

Attach a handle K to the drawer front 6 using 2 screws G.

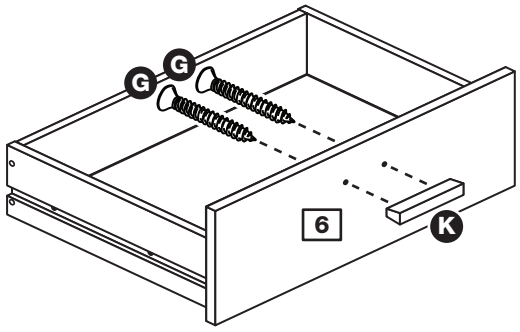

x 6

Assembly Instructions


Step 7


Fit the wedgefixes

Turn the drawer assemblies over.

Slide a wedgefix L into the small groove in the drawer front 6, drawer back 9 and drawer sides 7 and 8, as shown.

Once in place, tighten up the screws.

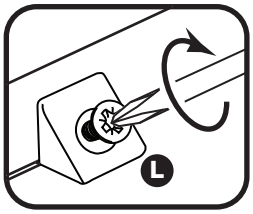

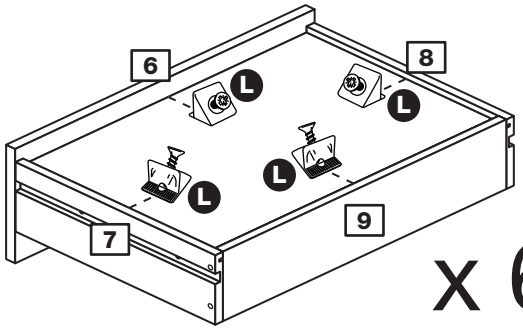

x 6

Step 8

Prepare the left side


a: Place 3 runners J on the left side 1 as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw I.

b: Slide the runner J back the other way and fit the 2nd screw I into the corresponding hole in the left side 1.


Screw 2 metal dowels B into the left side 1.

Insert 2 large locking nuts C into the left side 1.


Note: The arrow on the locking nuts **must** point towards the hole in the edge of the panel.

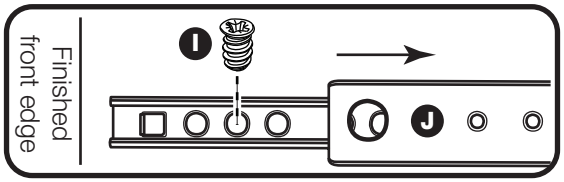

a:

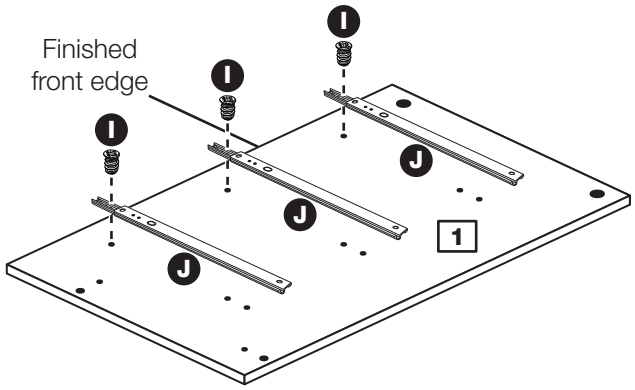

b:

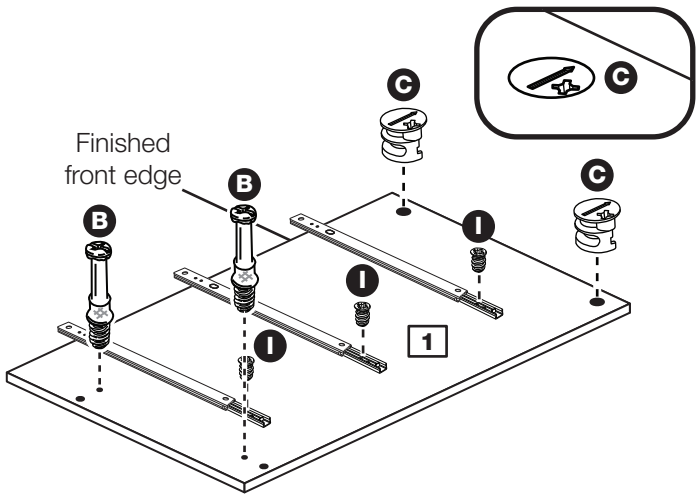

Step 9


Prepare the right side

a: Place 3 runners J on the right side 2 as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw I.


b: Slide the runner J back the other way and fit the 2nd screw I into the corresponding hole in the right side 2.

Screw 2 metal dowels B into the right side 2.


Insert 2 large locking nuts C into the right side 2.

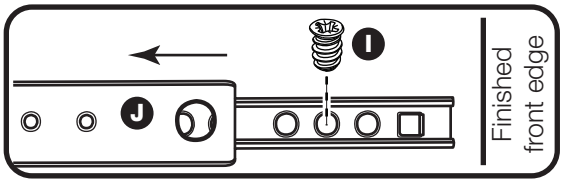

a:

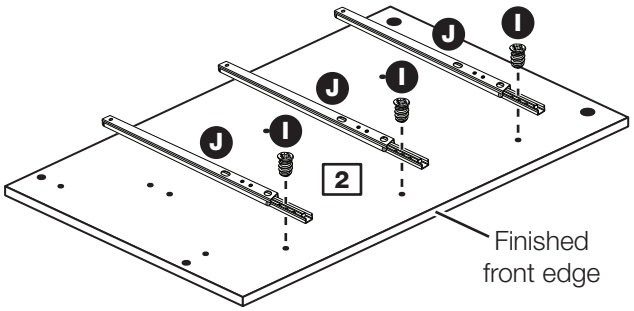

b:

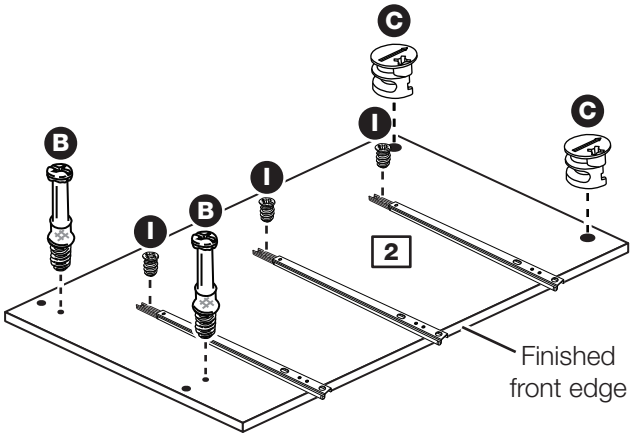


Step 10

Prepare the 2 rails

Tap 2 wooden dowels A into each of the rails 5.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 2 large locking nuts C into each of the rails 5.

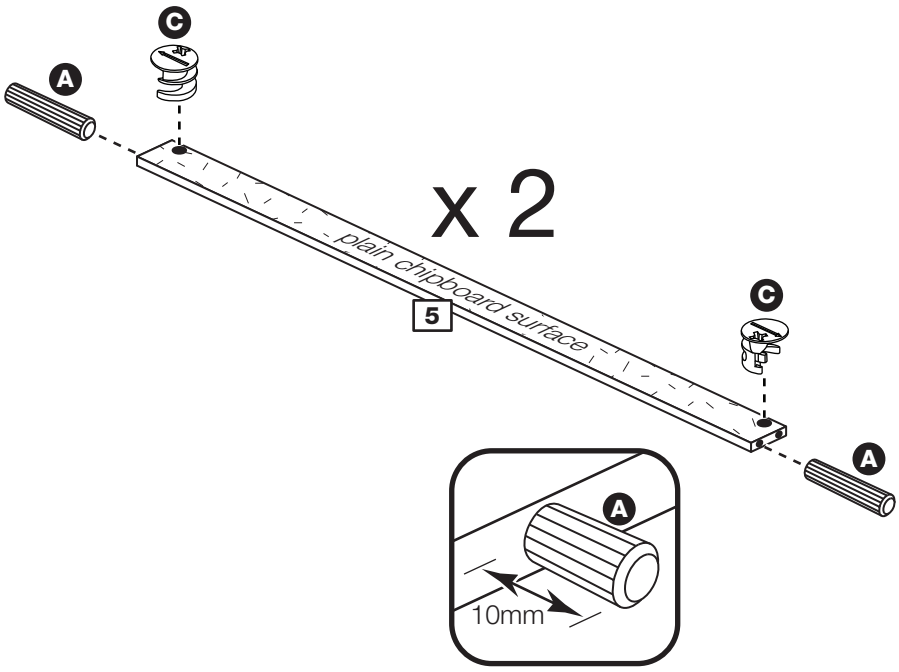


Step 11

Fit the 2 rails to the right side

Push the rails 5 onto the right side 2.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the rails 5.

Note: Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

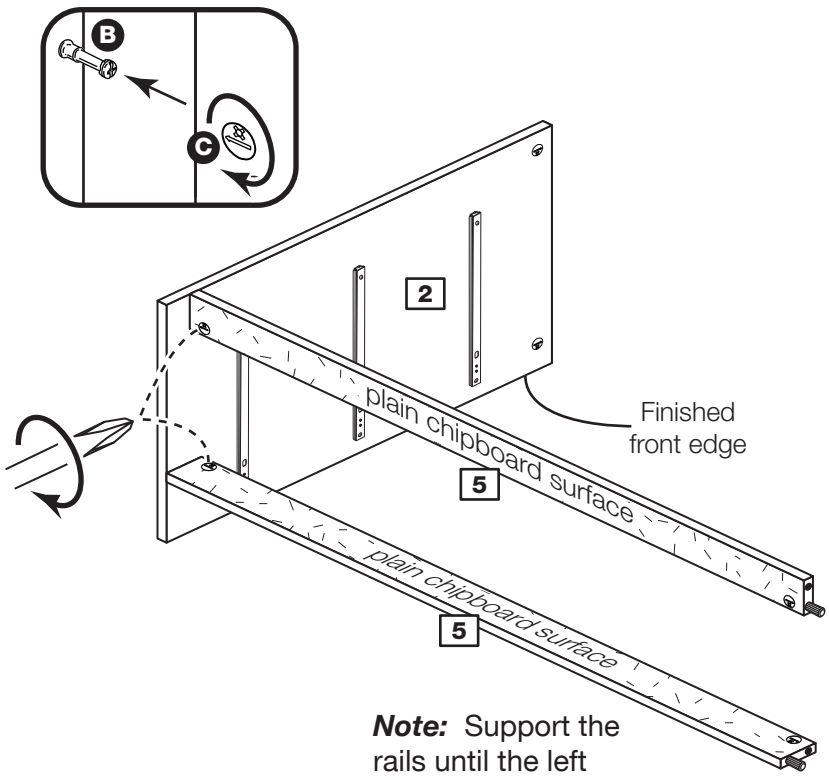


Note: Support the rails until the left side has been fitted in the next step.

Step 12

Fit the left side

Push the left side 1 onto the assembly.


Use a screwdriver to tighten the 2 large locking nuts C fitted to the rails 5.

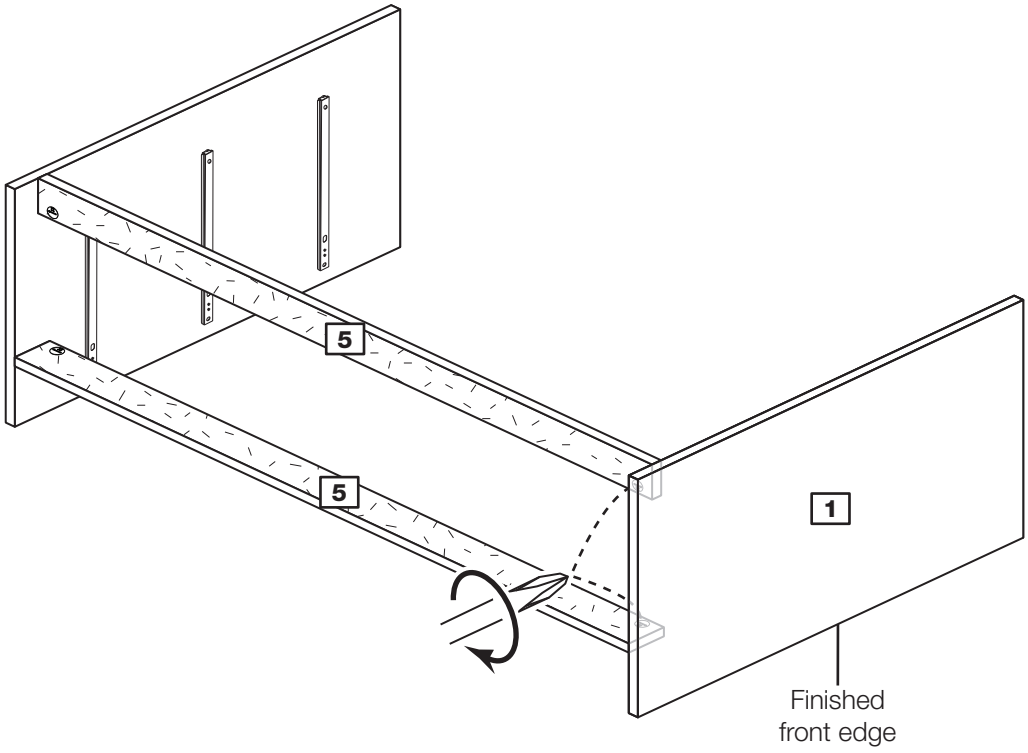

Step 13

Prepare the top

Screw 6 metal dowels B into the top 4.

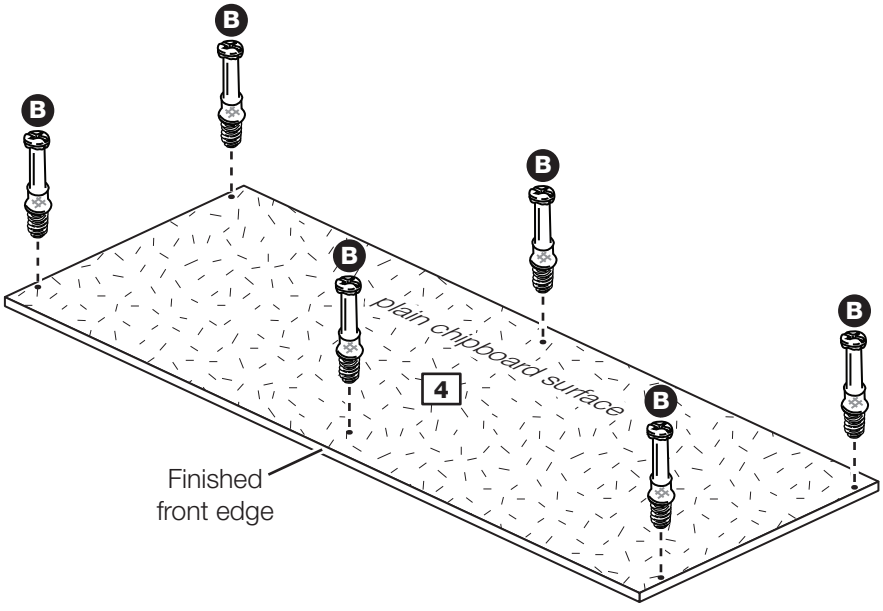

Step 14

Prepare the divider

a: Place 3 runners J on the divider 3 as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw I.

b: Slide the runner J back the other way and fit the 2nd screw I into the corresponding hole in the divider 3.


Insert 2 large locking nuts C into the divider 3.

Turn the divider over


c: Place 3 runners J on the divider 3. Slide back the top of the runner and use the 2nd hole from the front to fit the 1st screw I.

d: Slide the runner J back the other way and fit the 2nd screw I into the corresponding hole in the divider 3.

a:

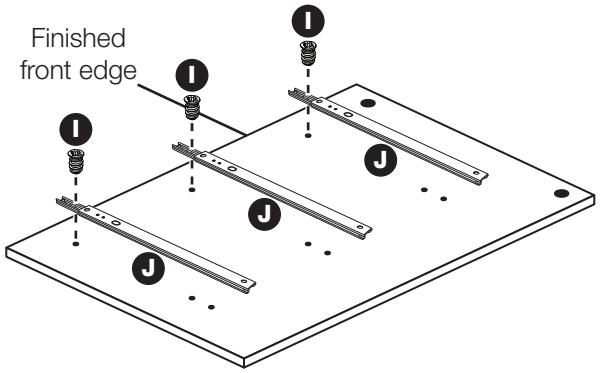


b:

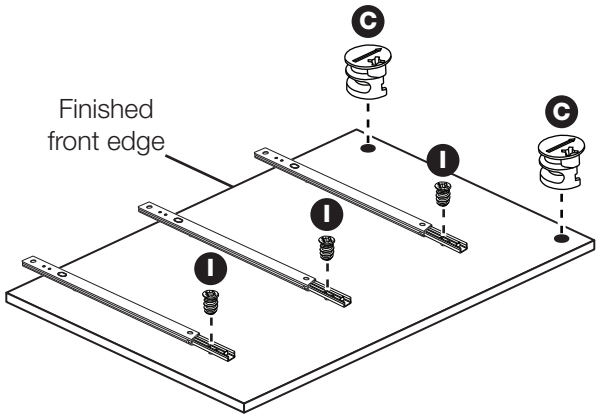




c:

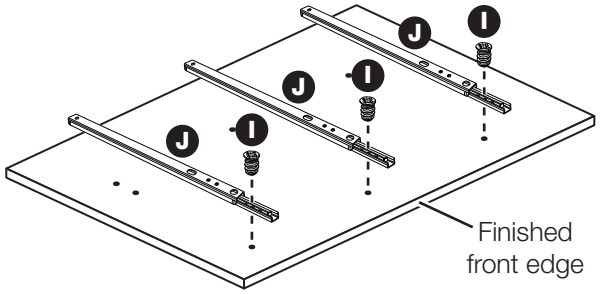

d:

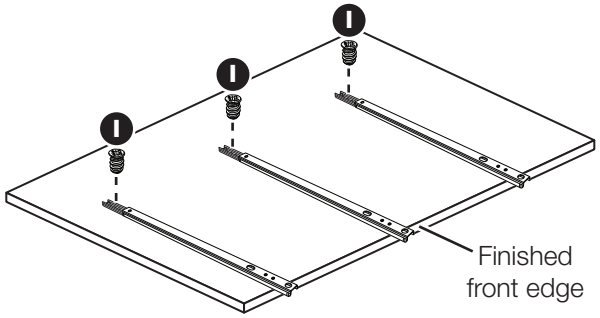


Step 15

Fit the divider to the top

Push the divider 3 down onto the top 4.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the divider 3.

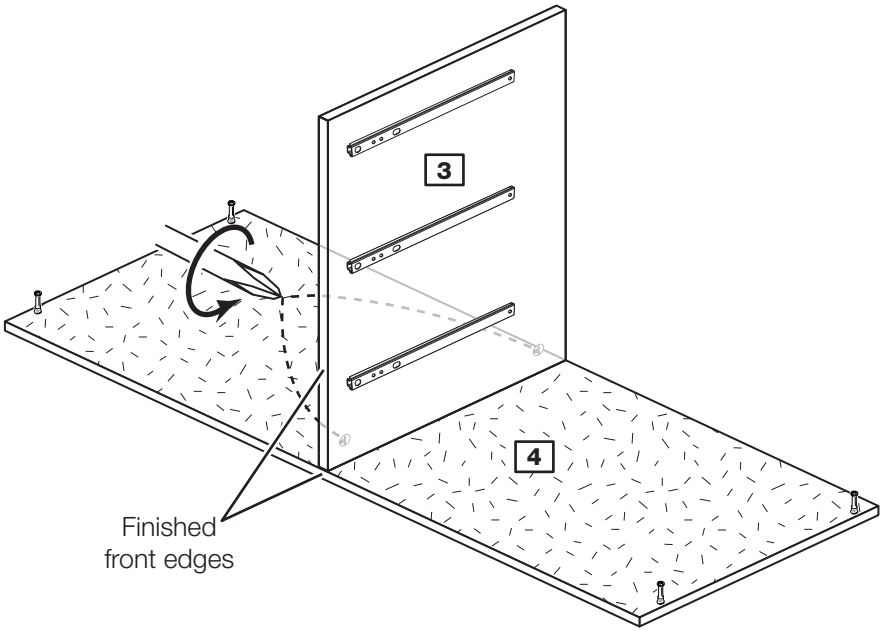


Step 16

Fit the top

Push the top 4 onto the assembly.

Use a screwdriver to tighten the 4 large locking nuts C fitted to the left side 1 and right side 2.

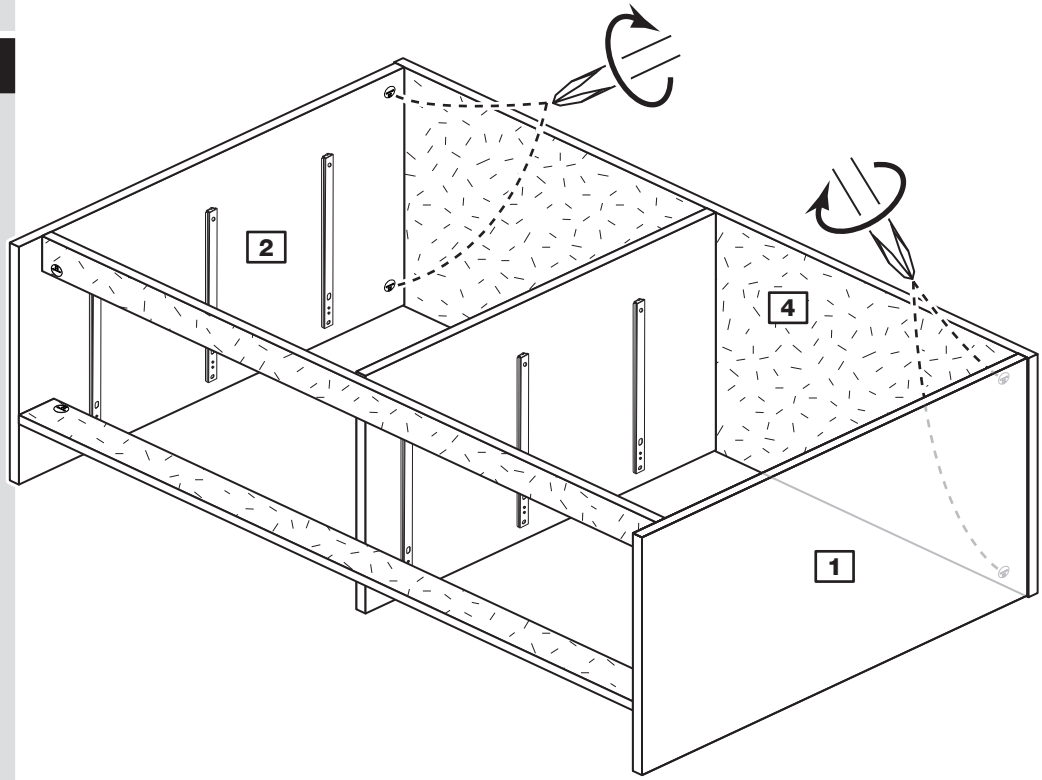

Step 17

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 11 onto the unit.


Nail F around the outside edges of the back 11.

Note: Nails should be evenly spaced out.

Carefully stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

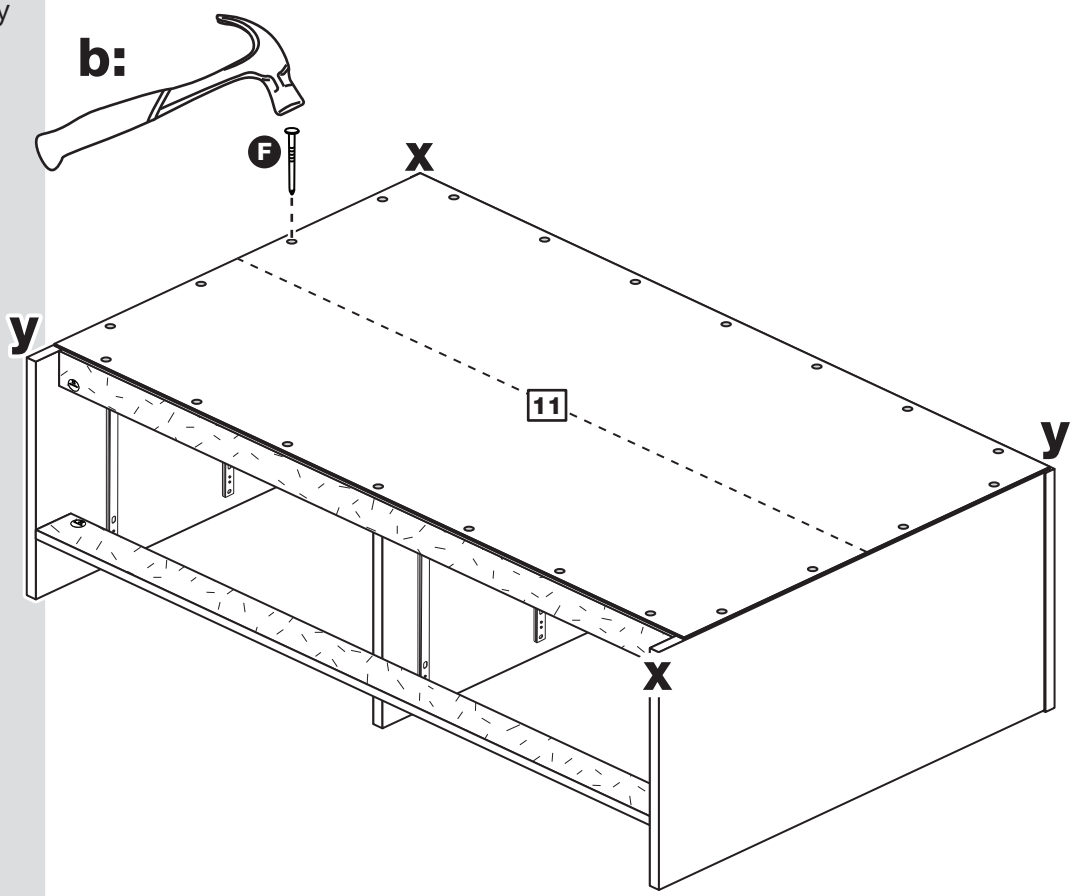

Step 18


Fit the drawers


Starting with the bottom drawers, slide both the runners J forward and locate the drawer sides 7 and 8 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners J.

Working from the inside of the drawer, insert 2 screws H through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws H.
If they catch on the runner you may need to loosen them slightly.

Assembly is complete

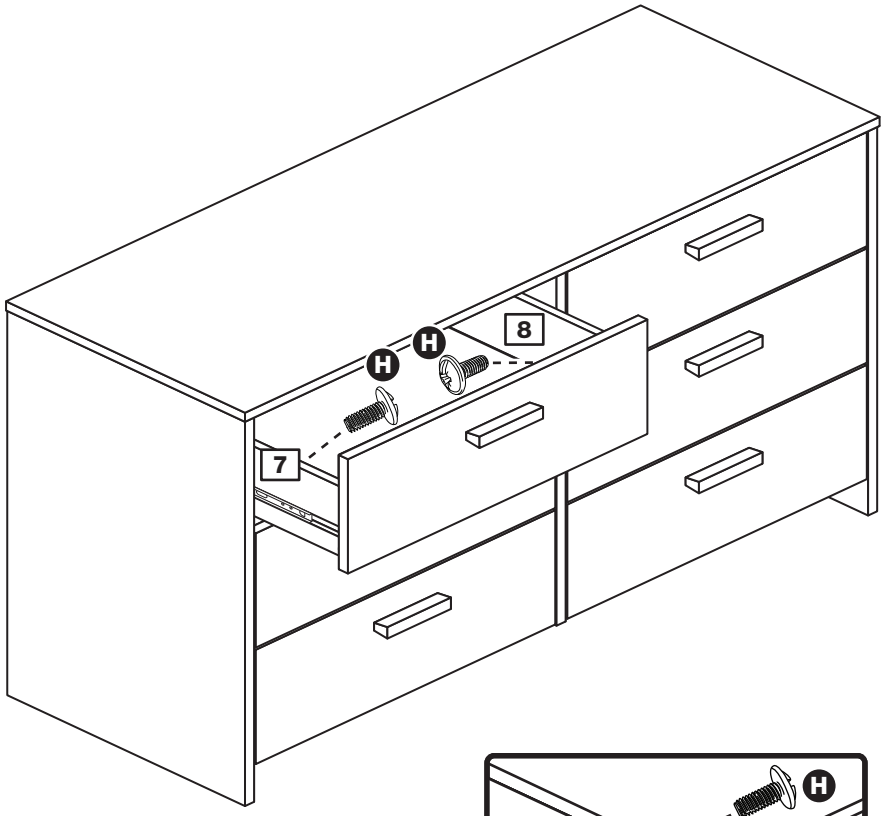

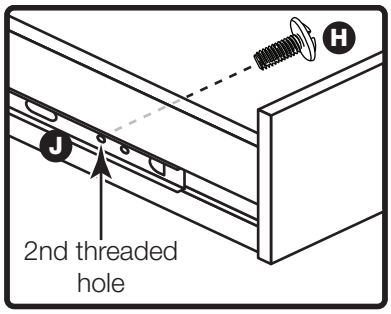

Note: Now the assembly has finished you can remove any protective film from the panels.