
New Sywell - 2 Drawer Bedside

Assembly Instructions - Please keep for future reference

191/0838
188/9433
170/2015
184/7183

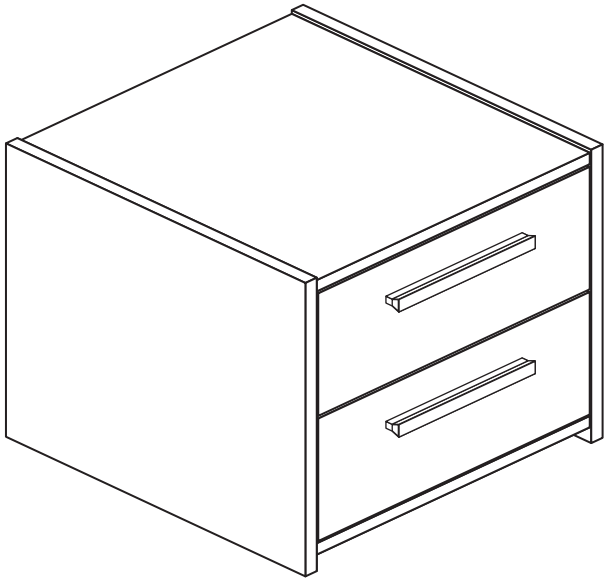

Dimensions
Width - 39.5cm
Depth - 40cm
Height - 39cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 25/11/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 9.5kgs. Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

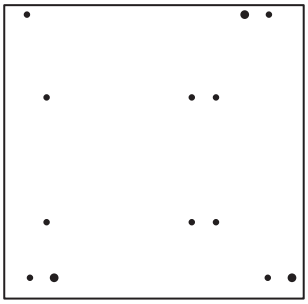


1 Left Side *(D2542A)*
(388 x 396mm)

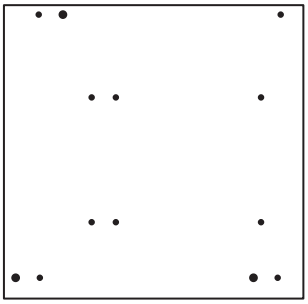


2 Right Side *(D2543A)*
(388 x 396mm)

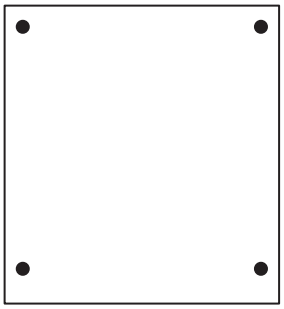


3 Top *(D2541A)*
(363 x 394mm)




4 Rail *(D2544A)*
(363 x 78mm) x 2

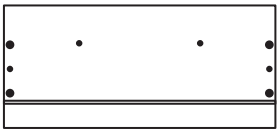


5 Drawer Front *(D2545A)*
(359 x 162mm) x 2




6 Drawer Back *(W330-95)*
(330 x 95mm) x 2




7 Left Drawer Side *(W453LH)*
(330 x 95mm) x 2



8 Right Drawer Side *(W453RH)*
(330 x 95mm) x 2



9 Drawer Base *(T341-327)*
(341 x 327mm) x 2







10 Back *(X389-359)*
(389 x 359mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

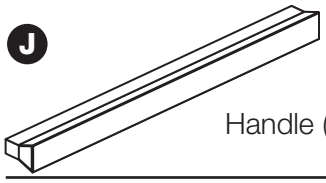A  Wooden dowel *(F22)* x 6	**B**  Metal dowel *(F901)* x 12	**C**  Knock-in Peg *(F171)* x 8
D  Large locking nut *(F900)* x 8	**E**  Small locking nut *(F3)* x 4	**F**  25mm Screw *(F95)* x 4
G  9mm Screw *(F74)* x 4	**H**  9mm Screw (*F73)* x 8	**I**  Nail *(F51)* x 10
J  Handle (*F315)* x 2	**K**  Drawer runner *(F1004)* x 4	

Tools required

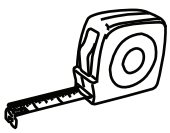
Rule


Cross-head screwdriver



Scissors


Hammer


Eye protection (when using a hammer or drill)


Electric drill (do not use for fitting screws)

Ruler - Use this ruler to help correctly identify the screws

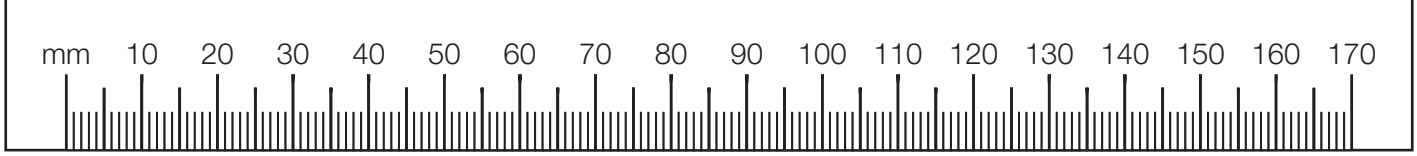

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Step 1

Prepare the drawer fronts

Screw 2 metal dowels B into the holes shown on the back of each drawer front 5.

Note: Tighten the metal dowels up fully against the panels.

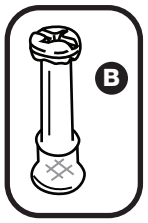

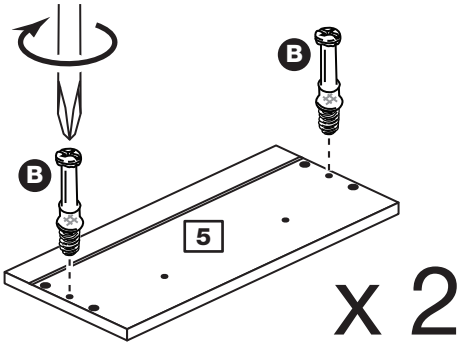


Step 2


Prepare the drawer sides


Insert a small locking nut E into the hole shown on the left drawer side 7 and right drawer side 8.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

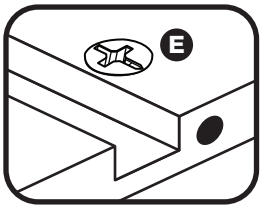

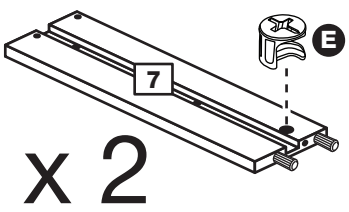

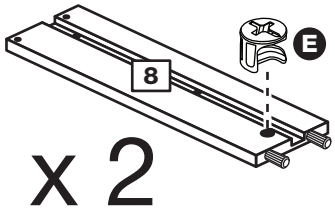


Step 3


Attach the drawer sides to the drawer front

Push the left drawer side 7 and right drawer side 8 onto the back of the drawer front 5.

Turn the small locking nuts E on the left drawer side 7 and right drawer side 8.

Note: Turn the locking nuts E clockwise to secure panels - more than 1/2 a turn.

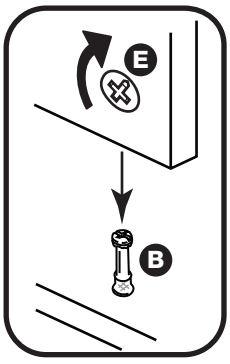

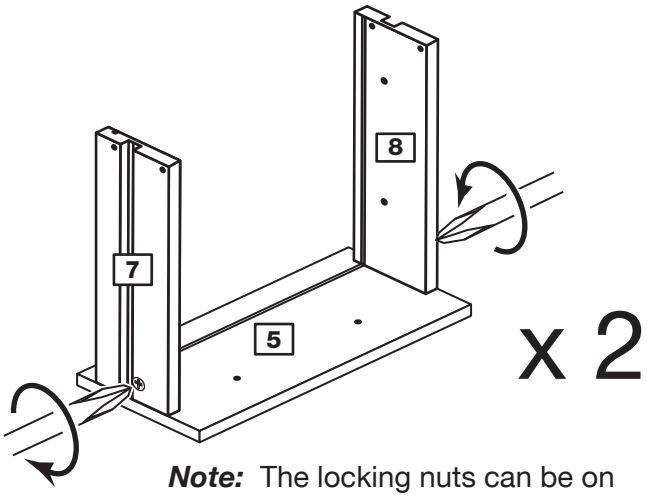


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base [9] down the grooves in the drawer sides [7] and [8] and down into the groove in the drawer front [5].

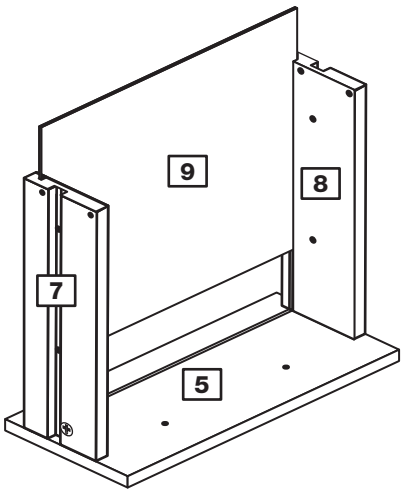

x 2


Step 5

Fit the drawer back

Fit the drawer back [6] down onto the drawer base [9].

Make sure that the drawer base [9] fits into the groove in the drawer back [6].

Hold the drawer back [6] in position and tap the knock-in pegs (C) through the holes in the drawer sides [7] and [8].

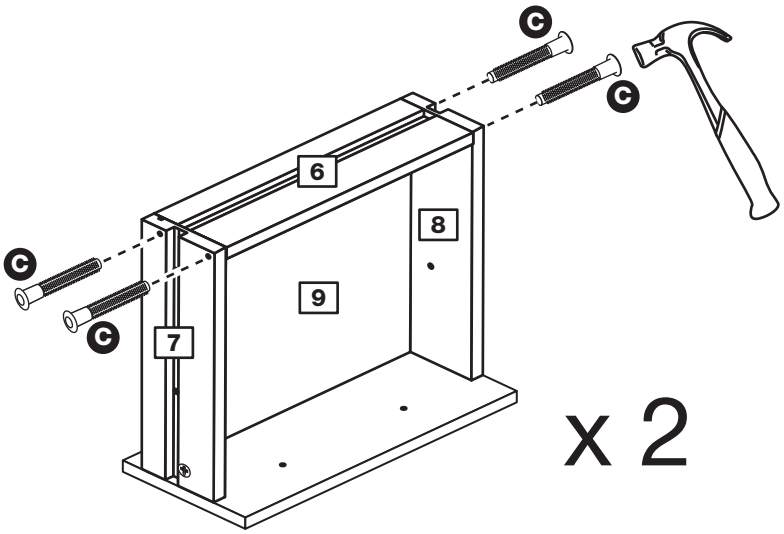


x 2

Step 6

Attach the handle

Attach a handle (J) to each drawer front [5] using 2 screws (F).

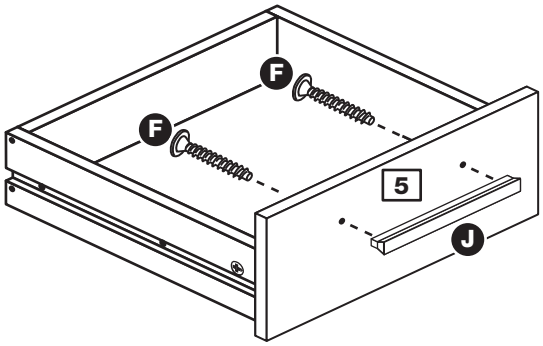

x 2

Assembly Instructions


Step 7

Prepare the left side

a: Place 2 runners (K) on the left side [1]. Slide back the top of the runner and use the 2nd hole from the front to fit the 1st screw (H).

Screw 4 metal dowels (B) into the left side [1].

b: Slide the runner (K) back the other way and fit the 2nd screw (H) into the corresponding hole in the left side [1].

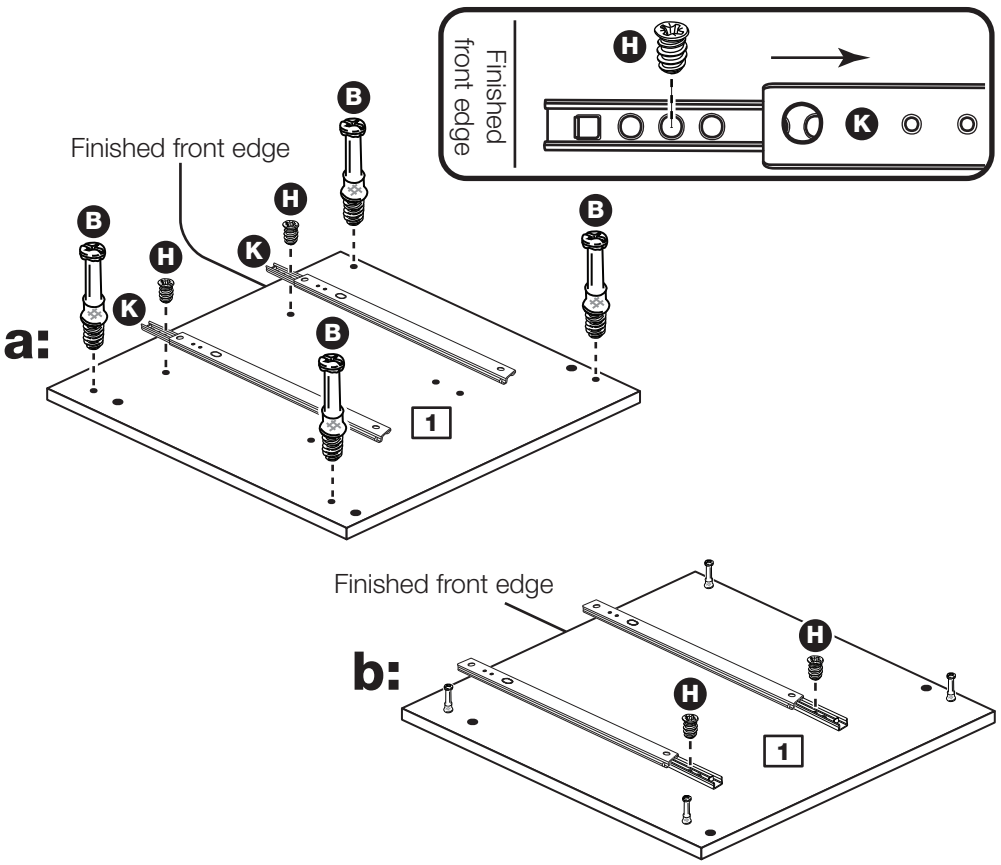


Step 8

Prepare the right side

a: Place 2 runners (K) on the right side [2]. Slide back the top of the runner and use the 2nd hole from the front to fit the 1st screw (H).

Screw 4 metal dowels (B) into the right side [2].

b: Slide the runner (K) back the other way and fit the 2nd screw (H) into the corresponding hole in the right side [2].

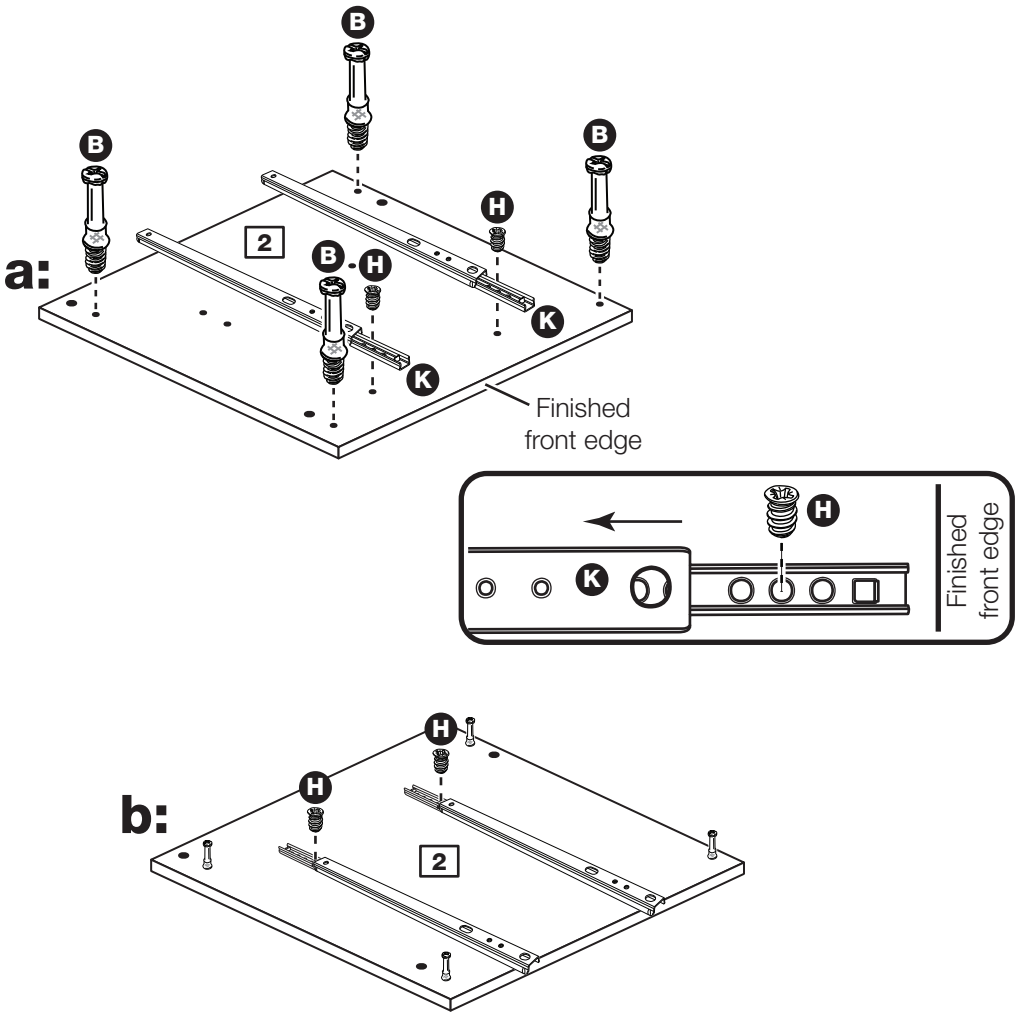

Assembly Instructions

Step 9


Prepare the top

Tap 2 wooden dowels (A) into the top [3].

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 4 large locking nuts (D) into the top [3].

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

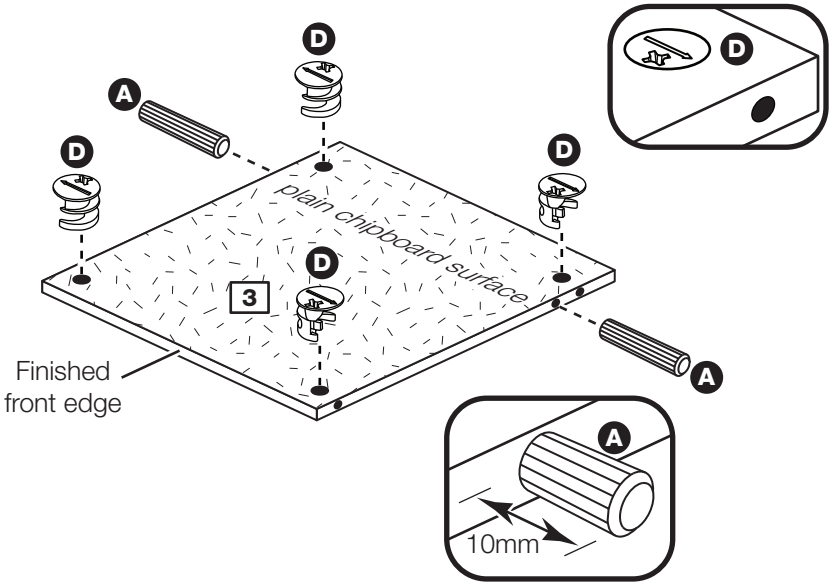


Step 10

Fit the top to the right side

Push the top [3] onto the right side [2].

Use a screwdriver to tighten the 2 large locking nuts (D) fitted to the top [3].

Note: Turn the large locking nuts (D) as far as they will go - more than 1/2 a turn.

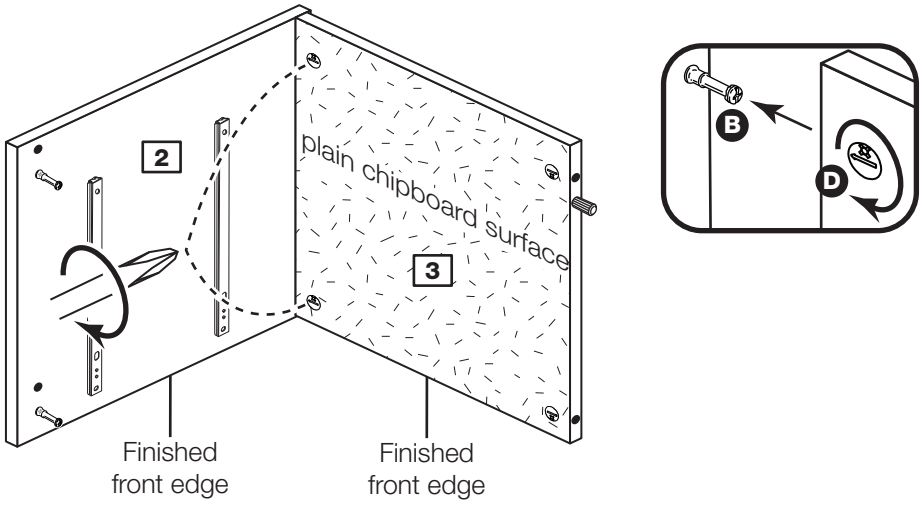


Step 11

Prepare the 2 rails

Tap 2 wooden dowels (A) into each of the 2 rails [4].

Insert 2 large locking nuts (D) into each of the 2 rails [4].

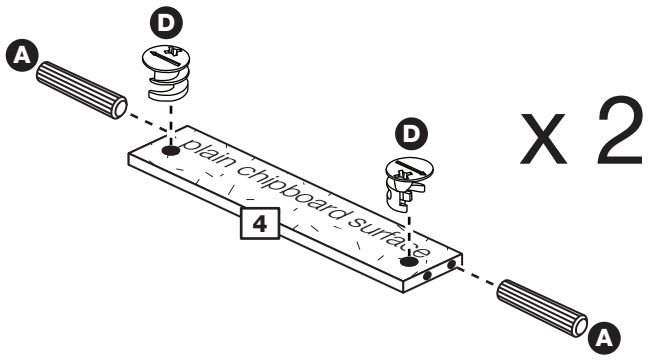


Step 12

Fit the 2 rails

Push the 2 rails [4] onto the right side [2].

Use a screwdriver to tighten the large locking nut (D) fitted to each of the 2 rails [4].

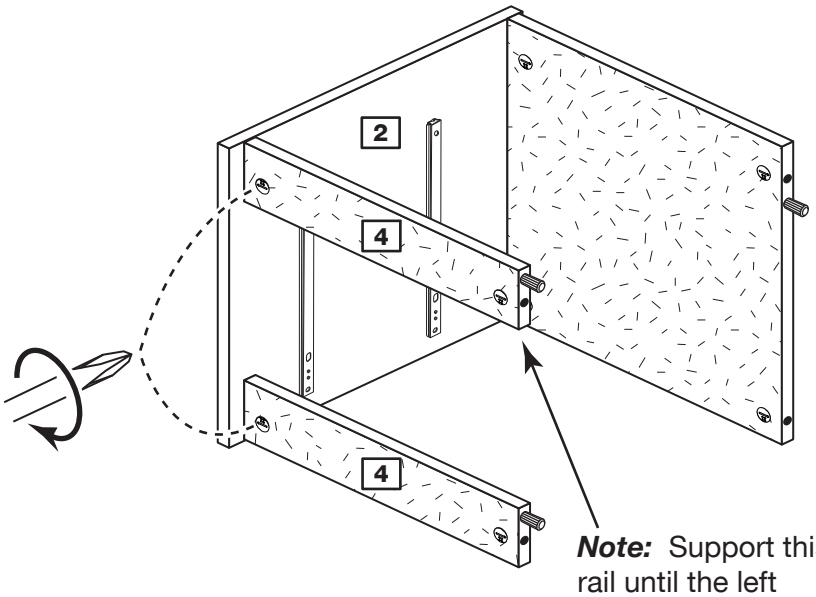


Note: Support this rail until the left side has been fitted in the next step.

Step 13

Fit the left side

Push the left side [1] onto the assembly.

Use a screwdriver to tighten the 4 large locking nuts (D) fitted to the top [3] and the 2 rails [4].

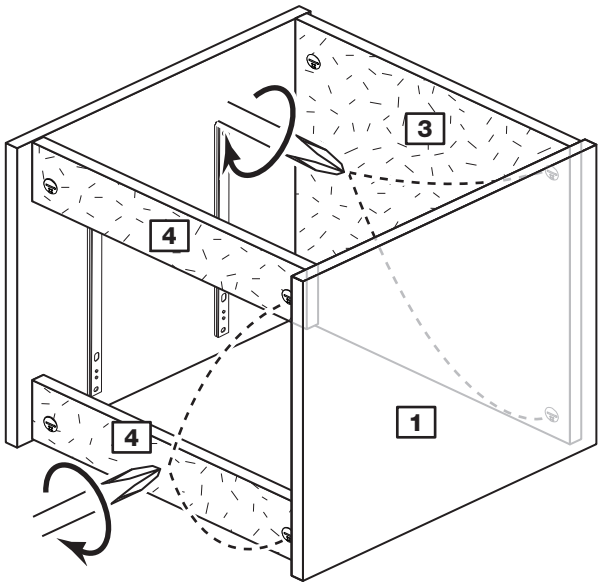

Step 14

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 10 onto the unit.


Nail I around the outside edges of the back 10.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

b:

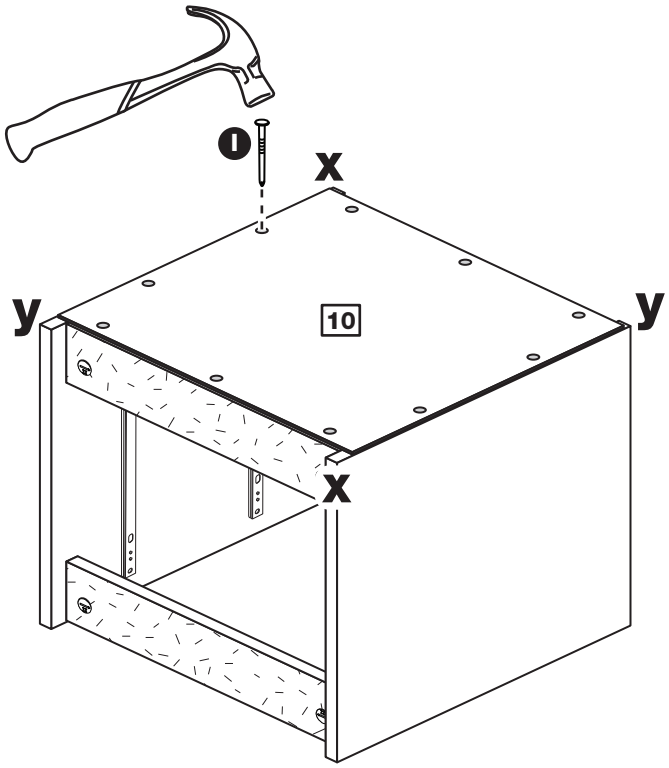


Step 15


Fit the drawers

Starting with the bottom drawer, slide both the runners K forward and locate the drawer sides 7 and 8 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners K.

Working from the inside of the drawer, insert 2 screws G through the sides and out into the 2nd threaded hole in the runner.

Note: Do not over-tighten the screws G. If they catch on the runner you may need to loosen them slightly.

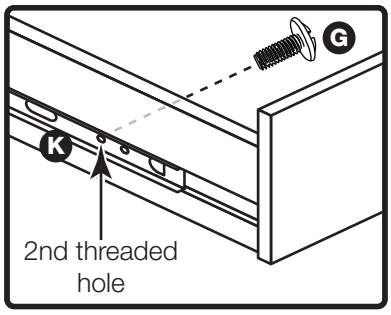

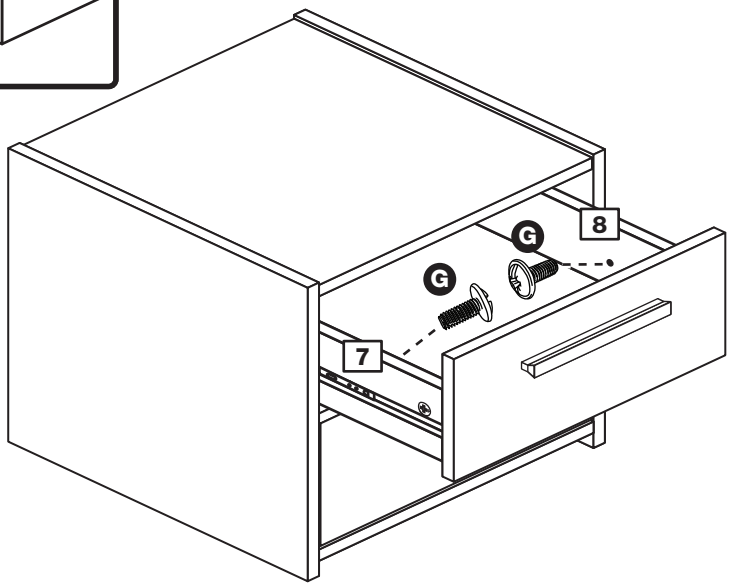

Step 16

Assembly is complete

