
Valencia - 3 Drawer Cabinet

Assembly Instructions - Please keep for future reference

hygena

Cabinet	656/5855
Black Drawer Pack	656/6469
Cream Drawer Pack	656/6483
Oak Drawer Pack	204/7834
White Gloss Drawer Pack	656/6476
White HN Drawer Pack	198/6264

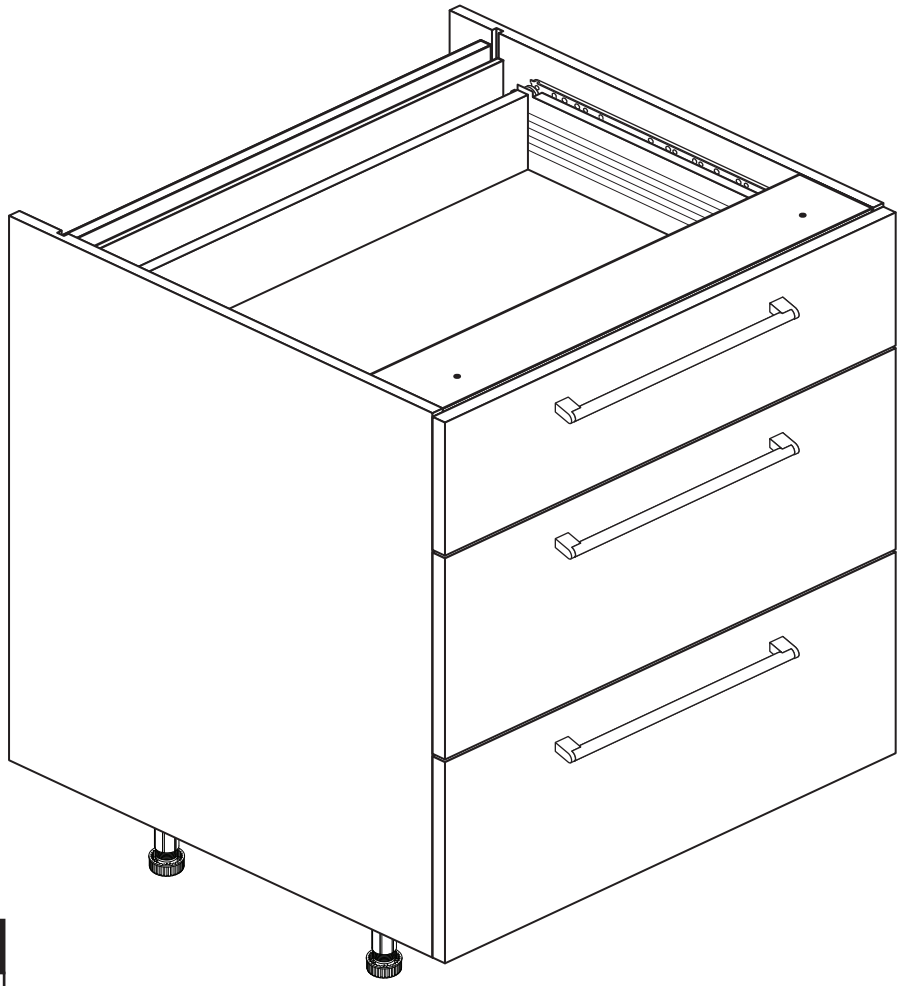

Dimensions

Width - 60cm

Depth - 59cm

Height - 87cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 2 - 31/07/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 18kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2, 3 and 4.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

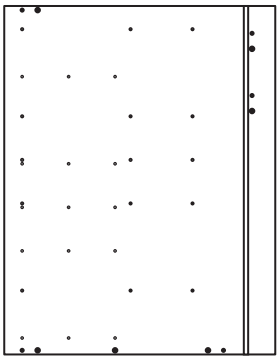


1 Left Side *(DPF087A)*
(720 x 560mm)

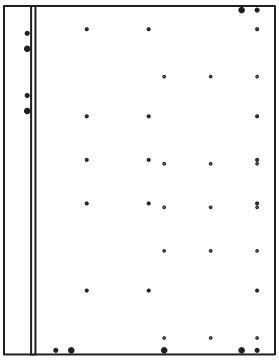


2 Right Side *(DPF088A)*
(720 x 560mm)

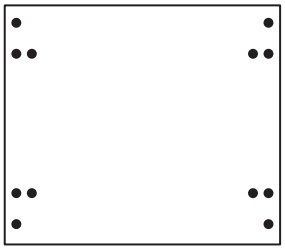

3 Base *(DPF078A)*
(569 x 494mm)



4 Cross Rail *(DPF080A)*
(569 x 96mm) x 2




5 Standard Drawer Back
(DPF133A) (539 x 98mm)




6 Pan Drawer Back
(DPF132A) (539 x 173mm) x 2



7 Drawer Base *(DPF131A)*
(539 x 448mm) x 3



8 Back *(DPF081A)*
(579 x 680mm)



9 Standard Drawer Front *(DPF121A)*
(596 x 176mm)



10 Pan Drawer Front *(DPF122A)*
(596 x 266mm) x 2

NOTE: The front surface of the drawer fronts are protected with a peel-off film




Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 10

B 

Metal dowel *(F901)* x 8

C 

Large locking nut *(F900)* x 8

D 


13mm Screw *(F63)* x 54

E 

13mm Screw *(F79)* x 6

F 


25mm Screw (*F50)* x 5

G 

Connecting Sleeve *(F432)* x 2

H 


19mm Connecting bolt (*F461)* x 2

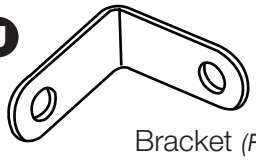J 


Bracket *(F945)* x 4

K 


13mm Screw *(F52)* x 36

L 


Left Soft Close Unit *(F141)* x 3

M 

Left Soft Close Catch *(F143)* x 3

N 


Right Soft Close Unit *(F142)* x 3

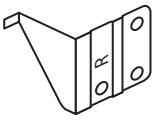O 


Right Soft Close Catch *(F144)* x 3

P 


Left Runner *(F139)* x 3

Q 


Right Runner *(F140)* x 3

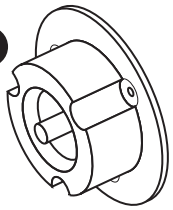Ia 


Leg Socket (*F120)* x 4

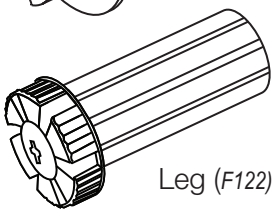Ib 

Leg (*F122)* x 4

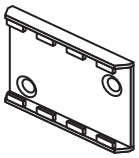Ic 

Leg Bracket (*F127)* x 2

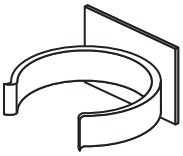Id 


Leg Clip (*F128)* x 2

Ie 

16mm Screw (*F129)* x 16

Fittings continue on the next page

Ruler - Use this ruler to help correctly identify the screws

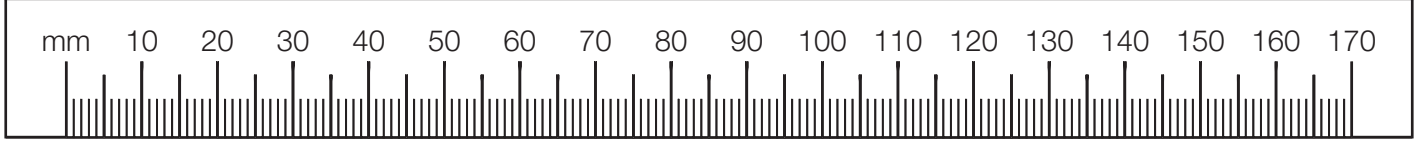

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

R Left Drawer Side *(F145)* x 3

S Right Drawer Side *(F146)* x 3

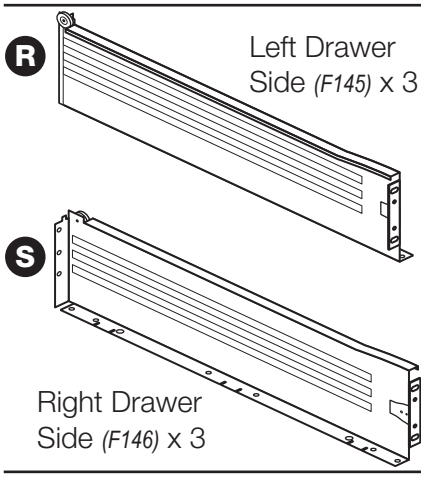


Ta Pan Bar Socket *(F148)* x 4




Tb 15mm Screw *(F150)* x 12




Tc Pan Bar Holder *(F151)* x 4

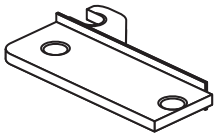

Td Pan Bar *(F152)* x 4




Ua Handle *(F214)* x 3

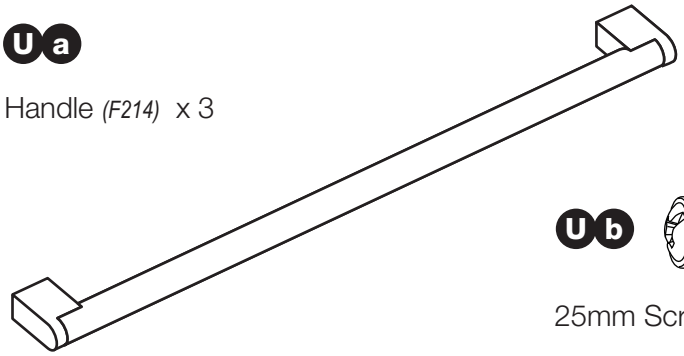

Ub 25mm Screw *(F132)* x 6



Tools required

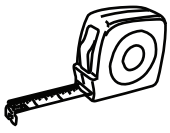


Rule



Cross-head screwdriver



Scissors



Hammer




Eye protection (when using a hammer or drill)



Electric drill

Ruler - Use this ruler to help correctly identify the screws

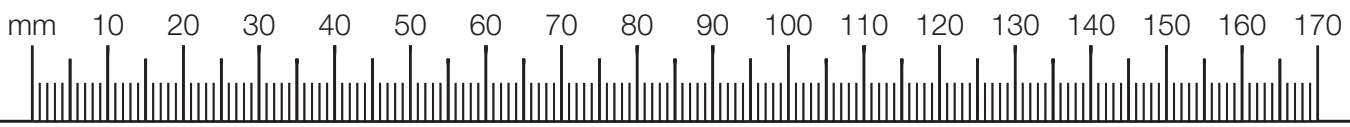

Assembly Instructions

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1


Fit the left runners to the left side

Fit the 3 left runners (P) marked 'L' to the left side [1].

The 1st screw (K) uses the 2nd hole in from the front of the runner.

The 2nd screw (K) uses the 4th hole in from the back of the runner.


The 3rd screw (K) uses the 8th hole in from the back of the runner.

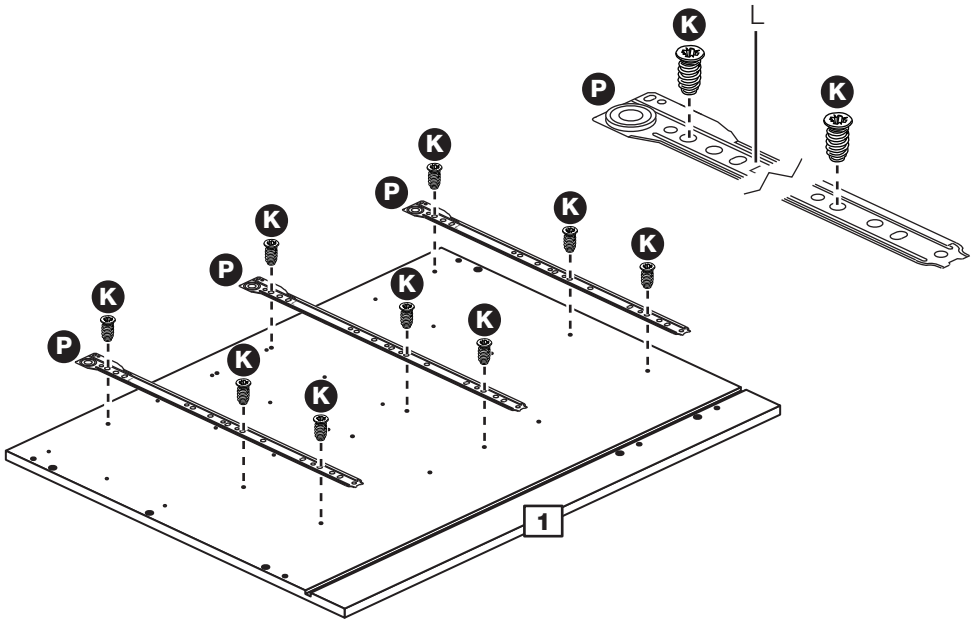

Step 2

Fit left soft close units to the left side

Fit the 3 left soft close units (L) marked 'L' to the left side [1] using 3 screws (K).

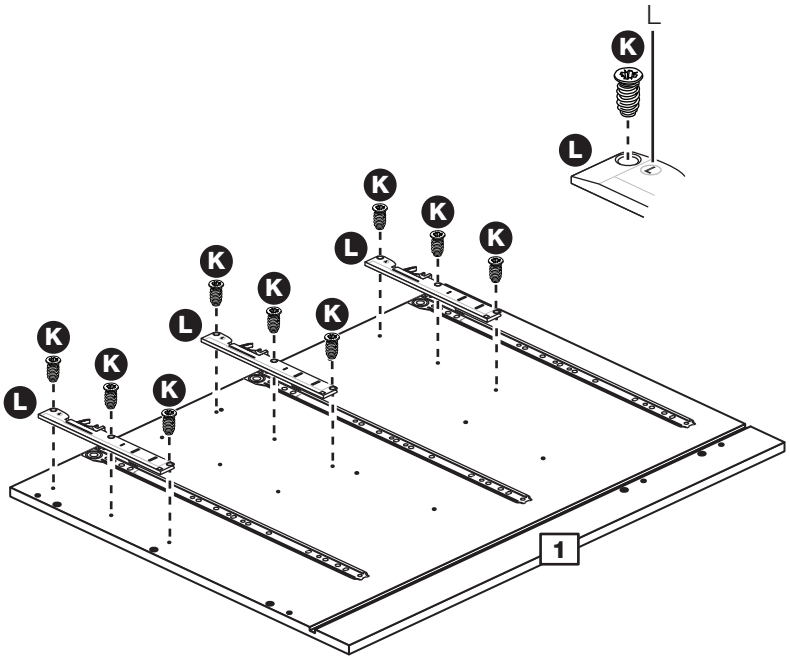

Step 3

Prepare the left side

Screw 4 metal dowels B into the holes shown on the left side 1.


Note: Tighten metal dowels up fully against the panels.

Fit a bracket J flush to the top edge of the left side 1, about 150mm in from the groove, see diagram.

Secure the bracket J using screw E.

Fit another bracket J flush to the back edge of the left side 1, about 5mm down from the top edge, see diagram.

Secure the bracket J using screw E.

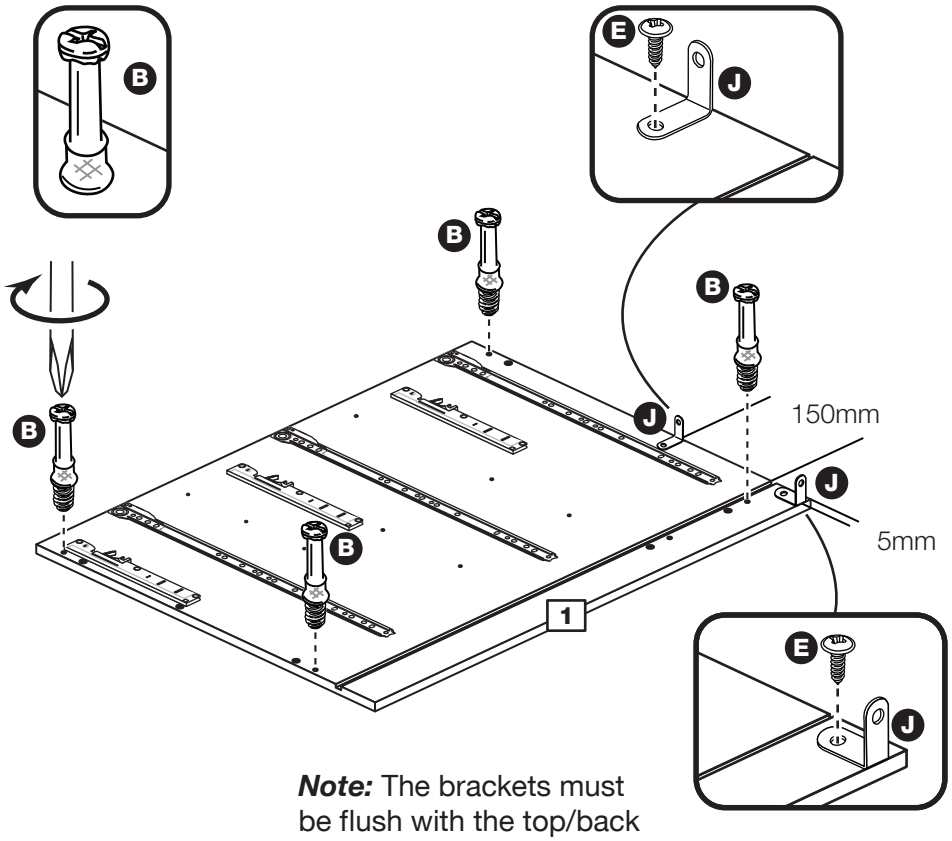

Note: The brackets must be flush with the top/back edge of the panel.

Step 4


Fit the right runners to the right side

Fit the 3 right runners Q marked 'R' to the right side 2.

The 1st screw K uses the 2nd hole in from the front of the runner.

The 2nd screw K uses the 4th hole in from the back of the runner.


The 3rd screw K uses the 8th hole in from the back of the runner.

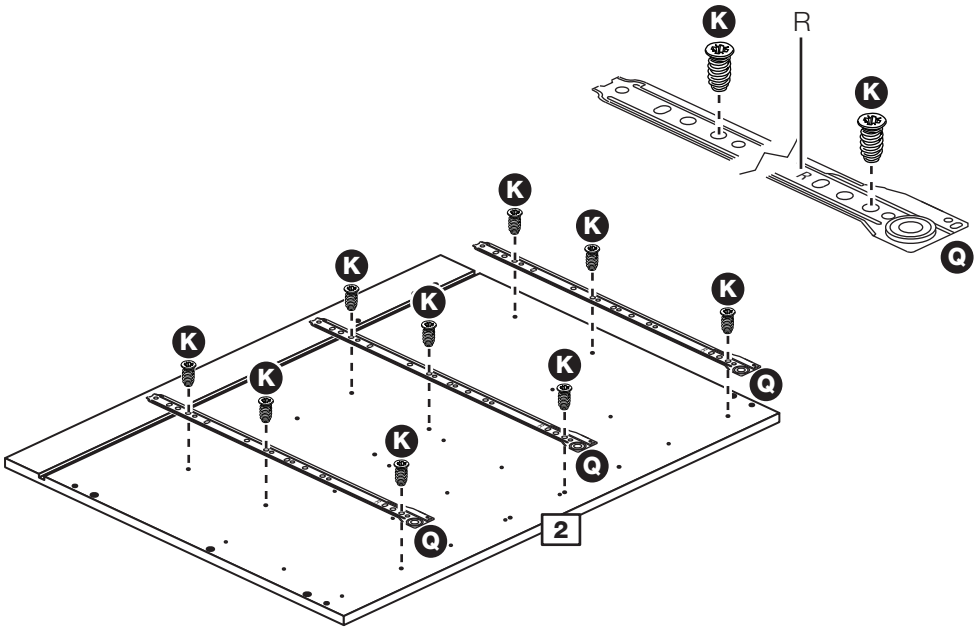

Step 5

Fit soft close units to the right side

Fit the 3 right soft close units (N) marked 'R' to the right side [2] using 3 screws (K).

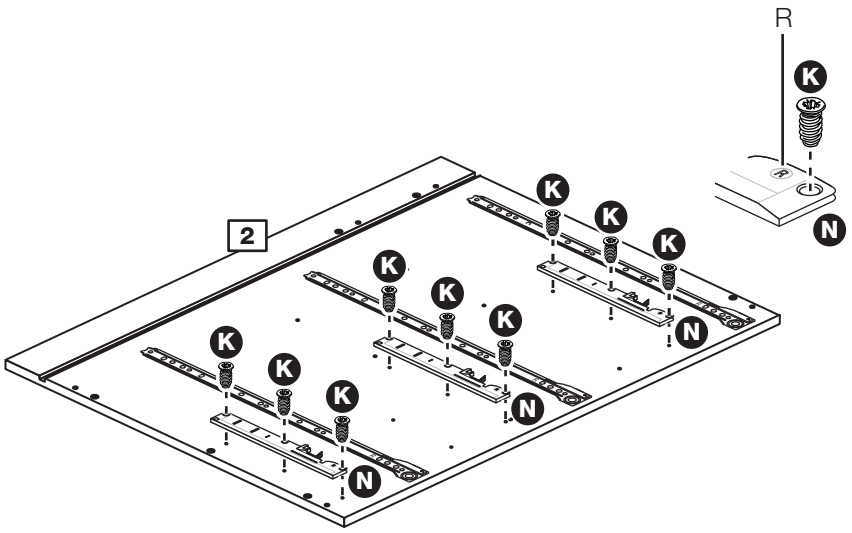

Step 6

Prepare the right side


Screw 4 metal dowels (B) into the holes shown on the right side [2].

Fit a bracket (J) flush to the top edge of the right side [2], about 150mm in from the groove, see diagram.

Secure the bracket (J) using screw (E).

Fit another bracket (J) flush to the back edge of the right side [2], about 5mm down from the top edge, see diagram.

Secure the bracket (J) using screw (E).

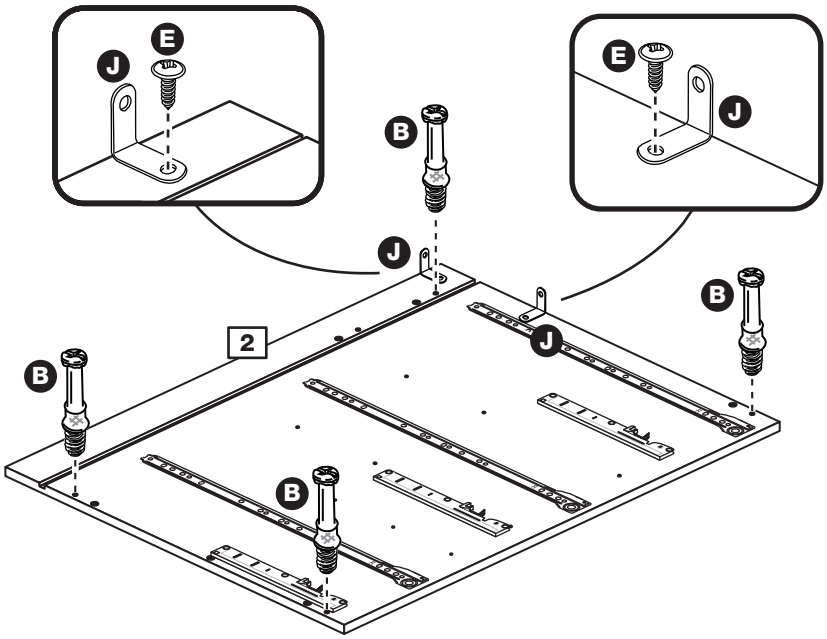

Step 7


Prepare the base


Insert 4 large locking nuts C into the base 3 as shown.


Note: Arrow on locking nut **must** point towards hole in edge of panel.

Tap 6 wooden dowels A into the base 3 as shown.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

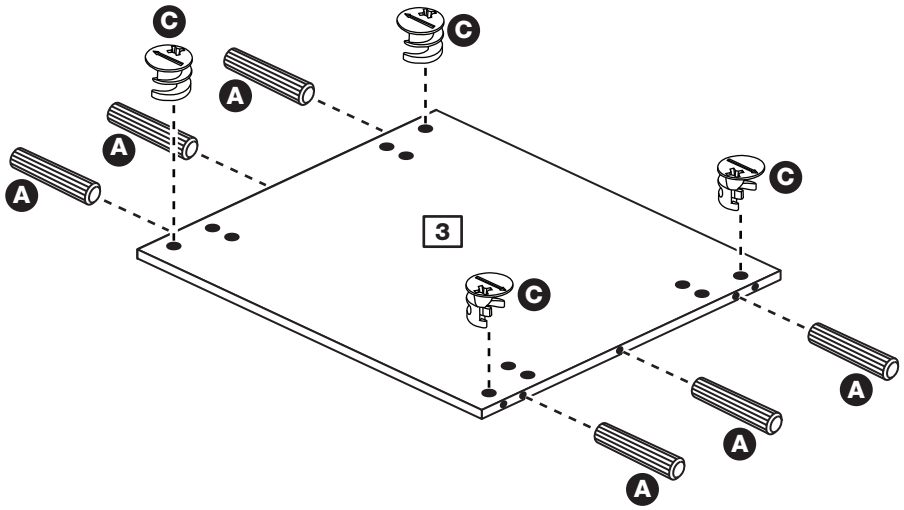

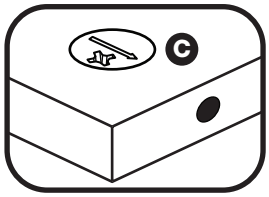

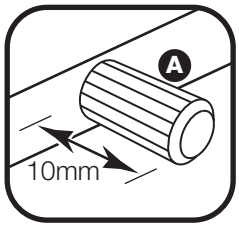

Step 8


Fit the legs to the base

a: Push the leg sockets 1a into the holes in the base 3 as shown.


b: Secure each leg socket 1a with 3 screws 1e.

c: Tap in the centre plug on each leg socket 1a.


d: Push the leg 1b into the leg socket 1a.

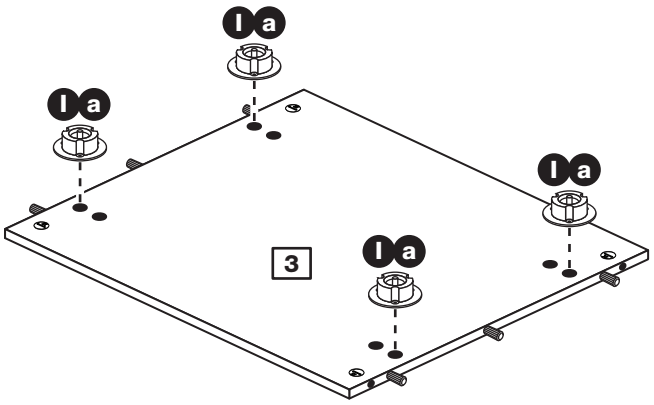


b:

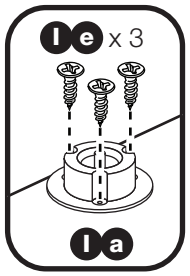

c:

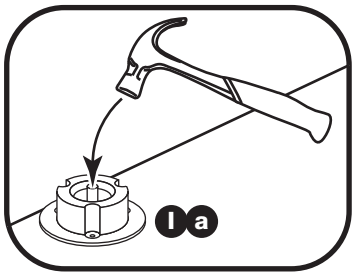

d:

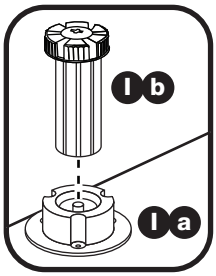


Step 9

Join the right side and base

Push the base 3 onto the right side 2.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the base 3.

Note: Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

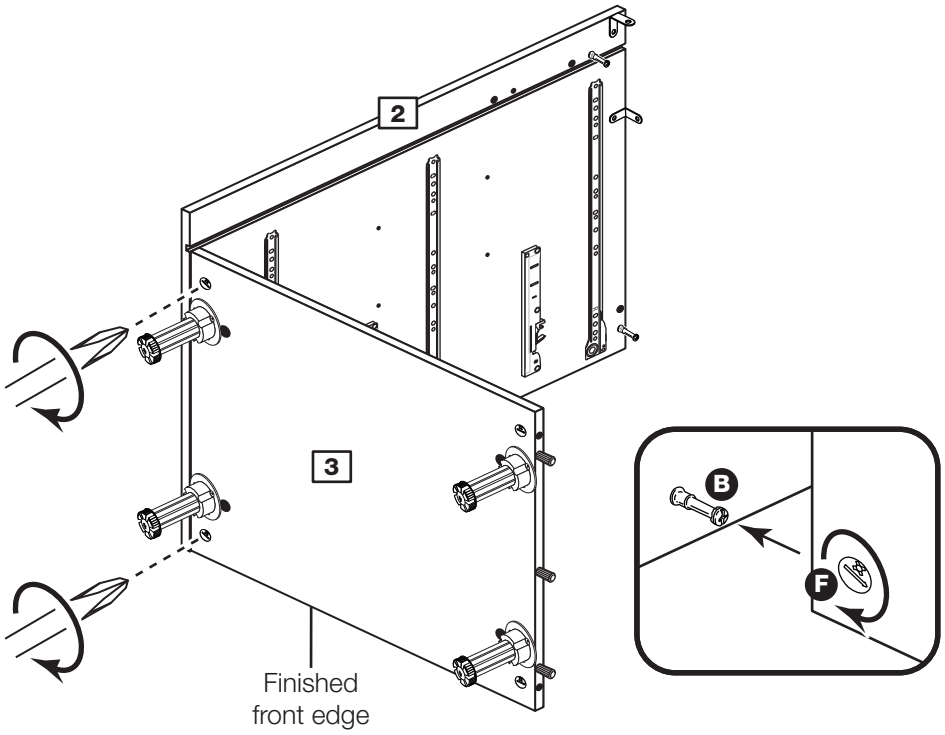


Step 10

Prepare the 2 cross rails

Insert 2 large locking nuts C into the cross rails 4 as shown.

Tap 2 wooden dowels A into the cross rails 4 as shown.

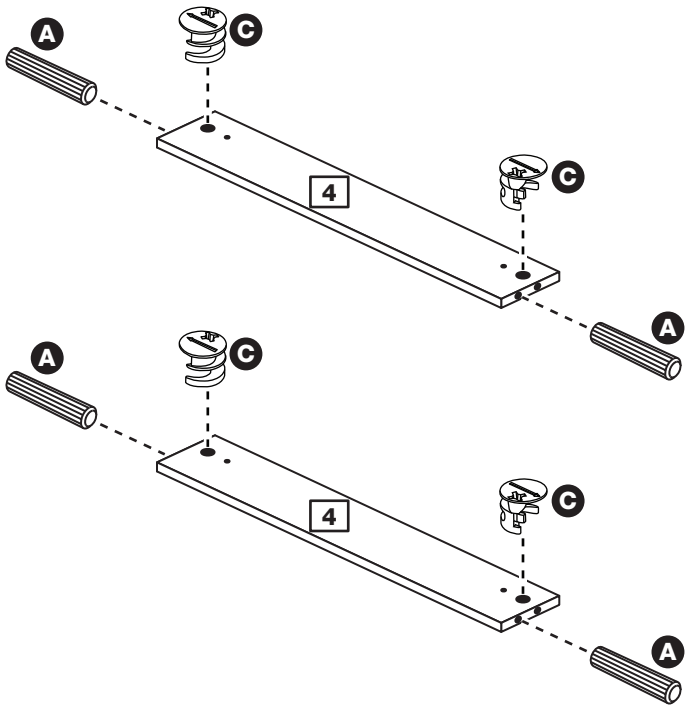


Step 11

Fit the 2 cross rails

Push each cross rail 4 onto the right side 2.

Use a screwdriver to tighten the large locking nut C fitted to each cross rail 4.

Note: Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

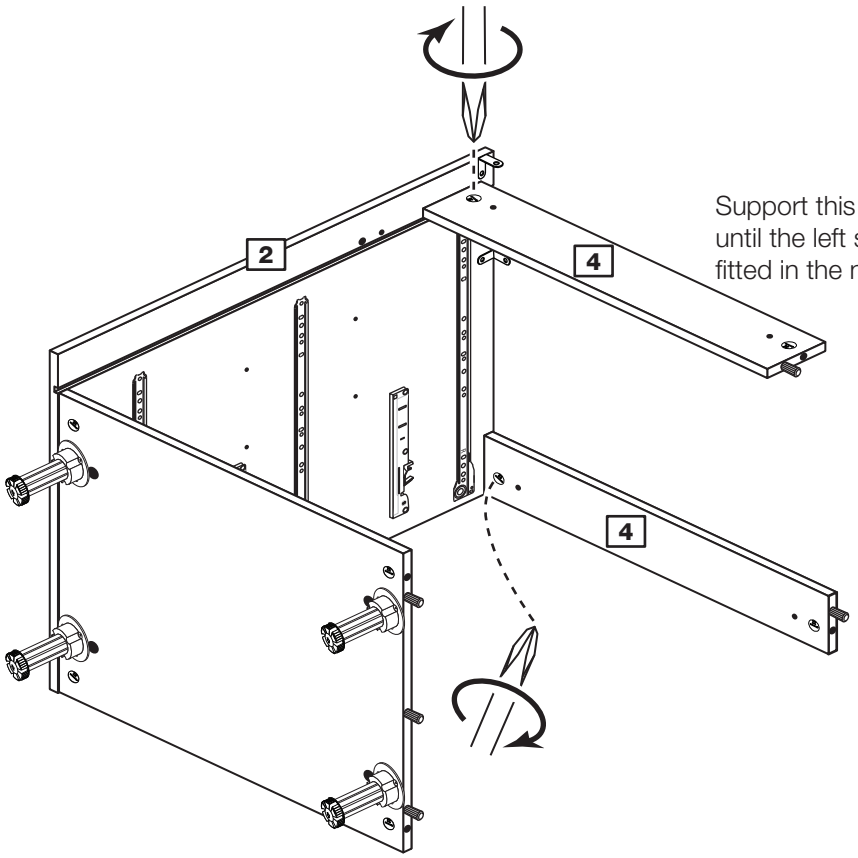

Support this cross rail until the left side has been fitted in the next step.


Step 12

Fit the left side

Push the left side 1 onto the assembly.

Use a screwdriver to tighten the large locking nut C fitted to the 2 cross rails 4 and the 2 fitted to the base 3.


Note: Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

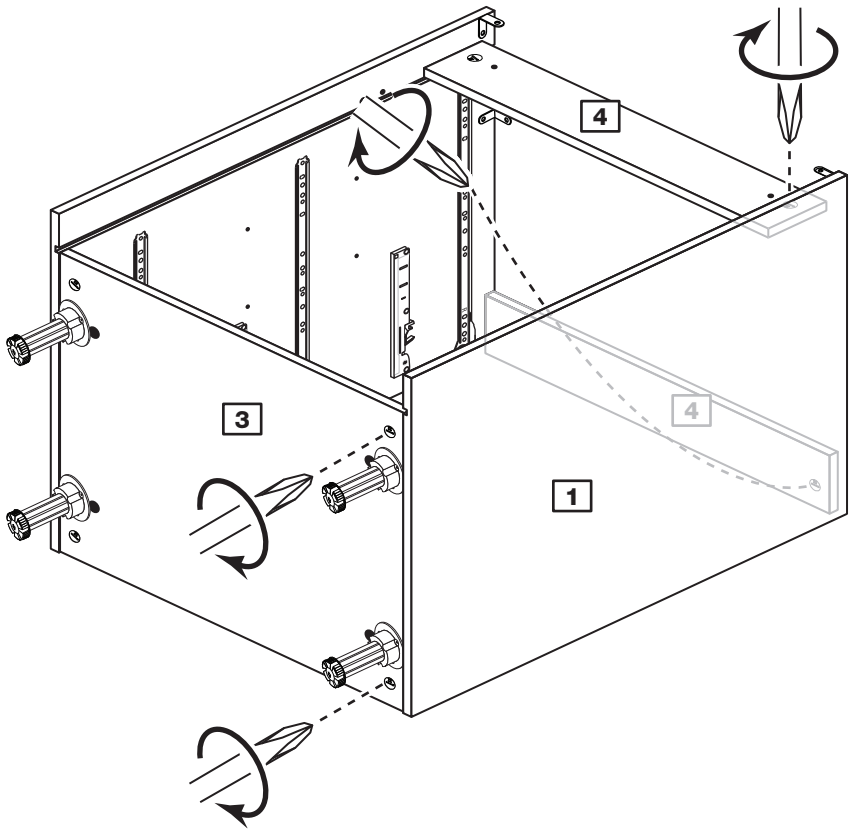

Step 13

Fit the back

Slide the back [8] along the grooves in the side panels [1] and [2].

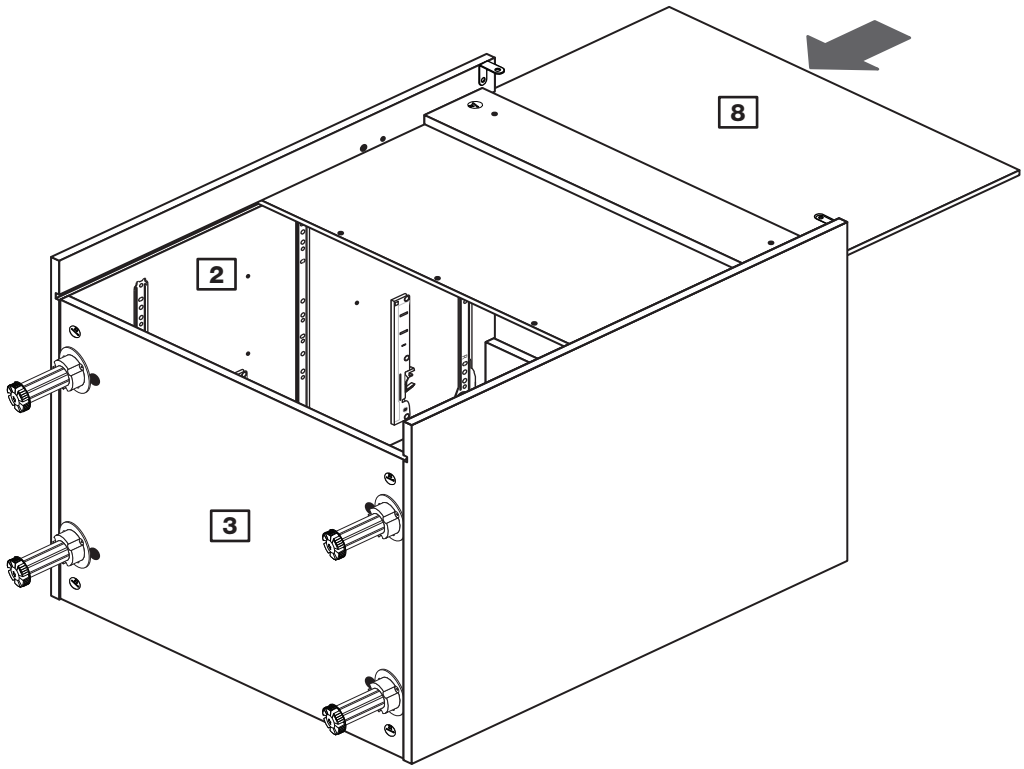


Step 14

Secure the back

The bottom edge of the back [8] must be flush with the bottom edge of the base [3].

Secure the back [8] to the back edge of the base [3] using 3 screws (F).

Stand the unit up for the next stage.

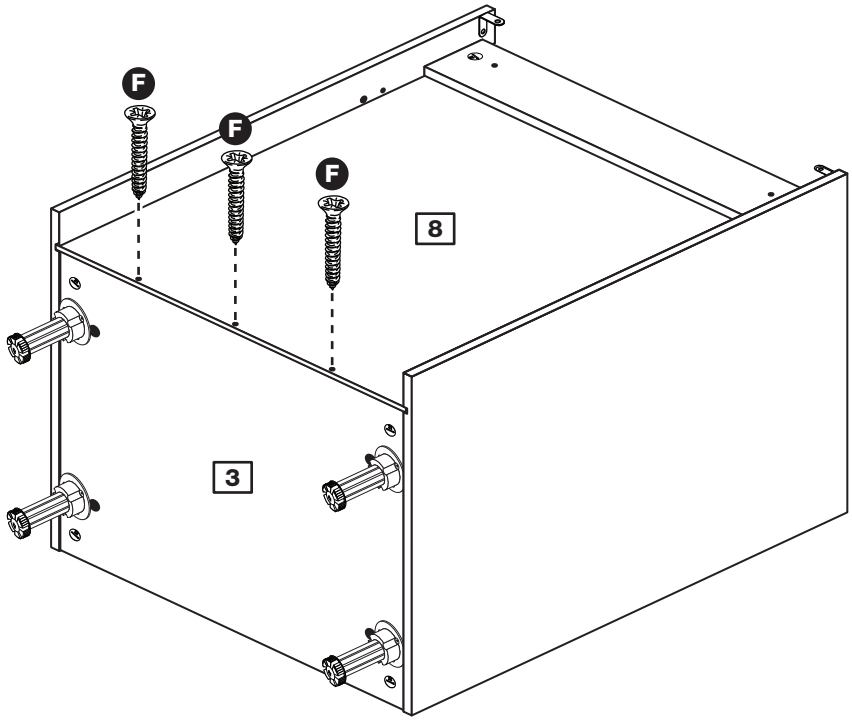


Step 15

Secure the unit to the wall

Using the brackets F fitted to the back edge of the sides 1 and 2 screw the unit to the wall.

Fixings are not supplied as they will need to suit the wall type, and the length of screw will depend on the distance of the back of the Unit to the wall.

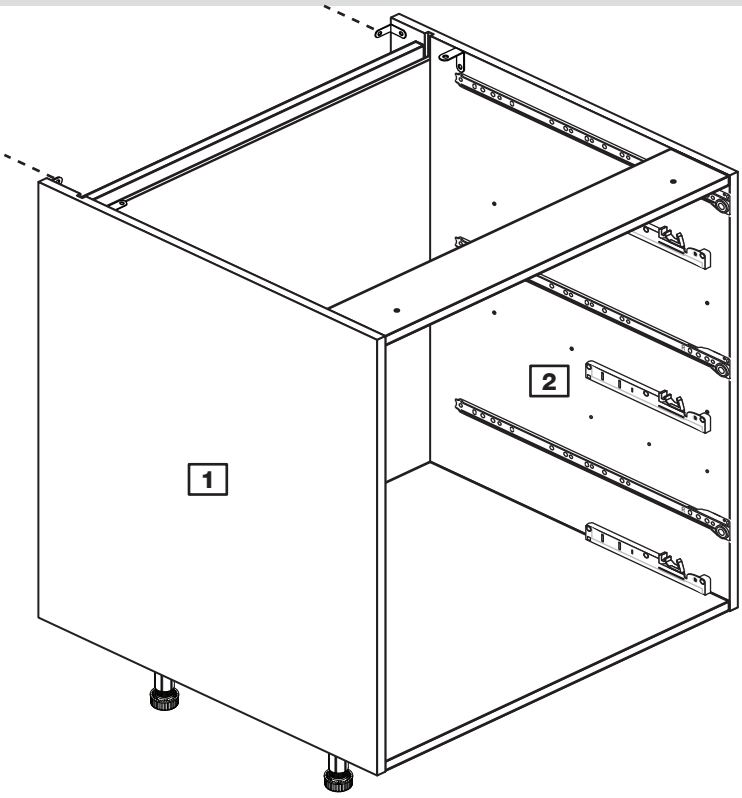

Warning: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

Step 16

Joining units together

Fittings have been supplied so you are able to join units together.


Make sure that your first unit is level.


Push the other unit up against first unit and ensure both units are level.

Check that the ends are flush and in line, then clamp them together.

Using a 5mm drill bit, drill 2 holes (approximate positions shown circled) in the side panel into the adjoining side panel of the other unit.

Push the connecting sleeves G into the holes and then screw the connecting bolts H in from the other side.

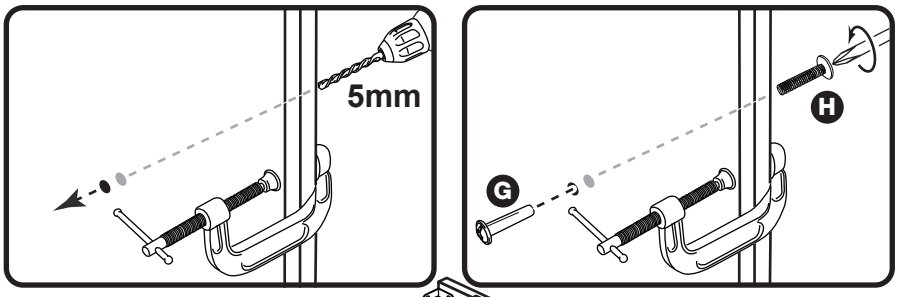

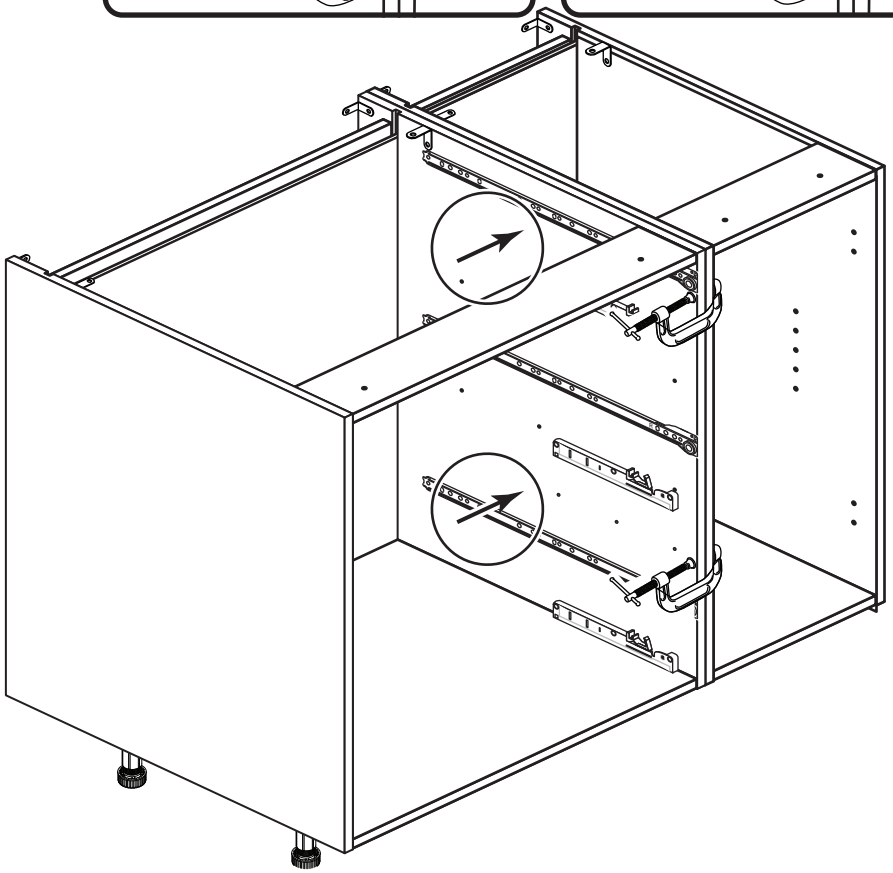


Step 17

Fit the unit to worktop

To fit the unit to the worktop use 2 screws (F) to screw up through the holes in the cross rail [4] as shown.

Then use 2 screws (E) to screw up through the brackets (J) as shown.

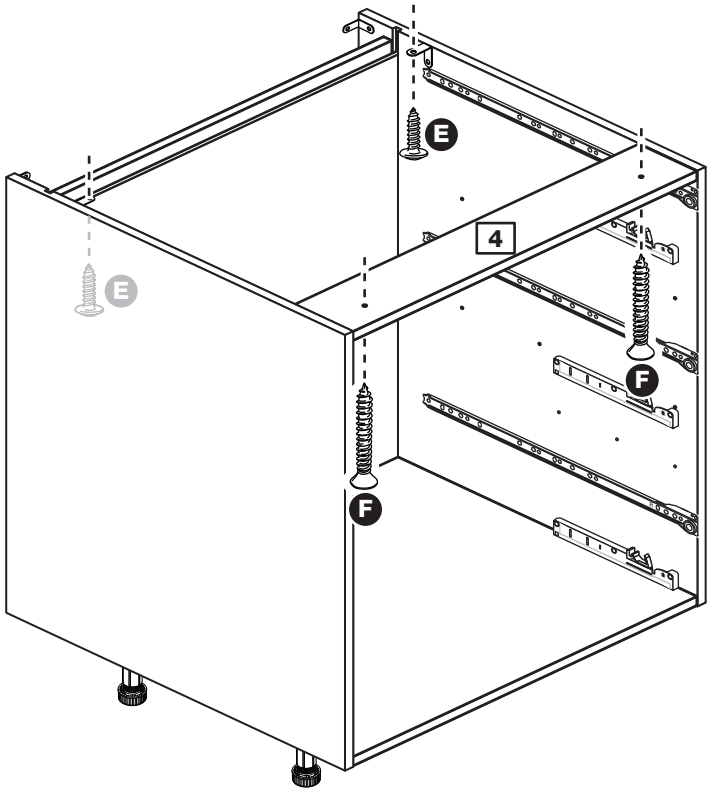


Step 18

Prepare the standard drawer

Fit the left drawer side (R) and right side drawer side (S) onto the standard drawer front [9] using 4 screws (D) into the slotted holes.

Important: Make sure that the drawer sides and standard drawer front are the correct way around.

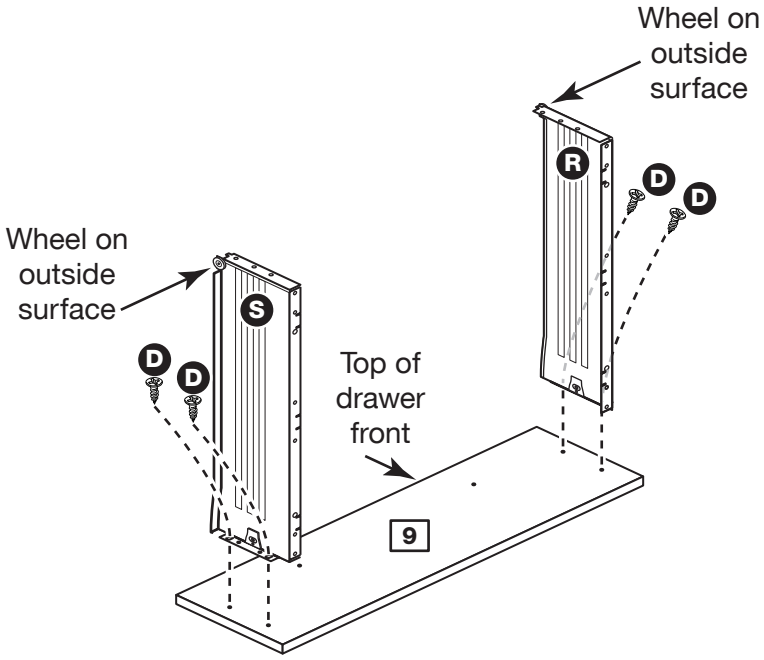


Step 19

Fit the drawer base

Push the drawer base 7 against the bottom of the drawer sides R and S.

While holding it in place, secure the drawer base D using 4 screws 7 into the front and back holes, as shown.

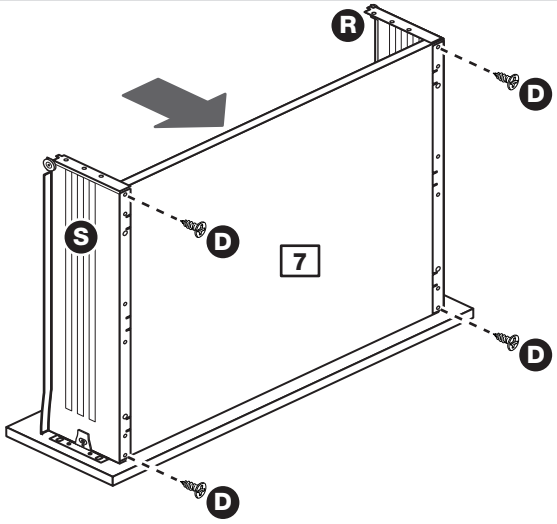


Step 20

Fit the standard drawer back

Push the standard drawer back 5 up into the drawer assembly.

While holding it in place, secure the standard drawer back 5 using 4 screws D into the top and bottom holes, as shown.

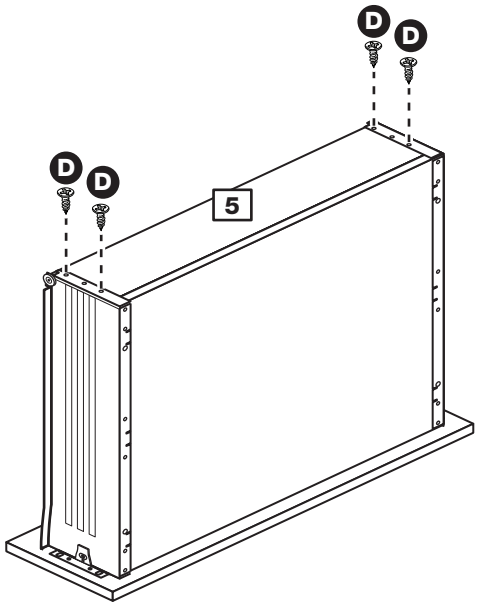


Step 21

Fit the soft close catches

Position the location hole of the right soft close catch O marked 'R' into the 3rd hole up from the front of the right drawer side S then secure using 3 screws D.


Position the location hole of the left soft close catch M marked 'L' into the 3rd hole up from the front of the left drawer side R and secure using 3 screws D.

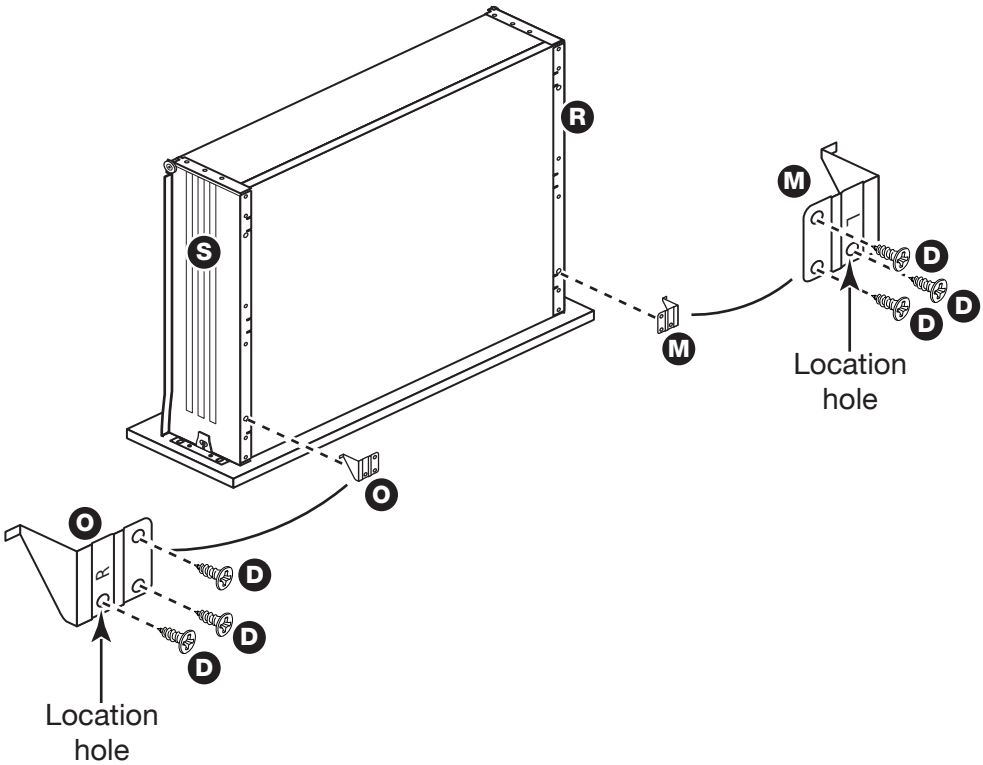

Step 22

Prepare the pan drawer fronts

Fit 2 pan bar sockets Ta onto each pan drawer front 10 using the screws Tb packed with them.

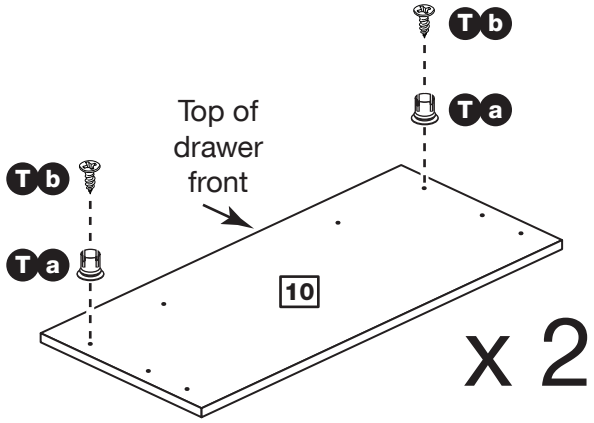


Step 23

Prepare the pan drawers

Fit the left drawer side R and right side drawer side S onto the pan drawer front 10 using 4 screws D into the slotted holes.

Important: Make sure that the drawer sides and standard drawer front are the correct way around.

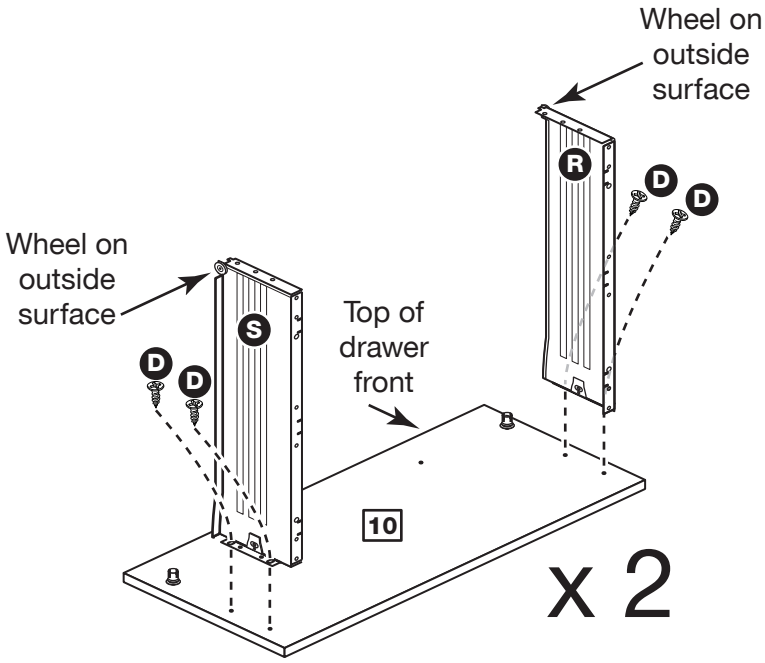


Step 24

Fit the drawer base

Push the drawer base 7 against the bottom of the drawer sides R and S.

While holding it in place, secure the drawer base 7 using 4 screws D into the front and back holes, as shown.

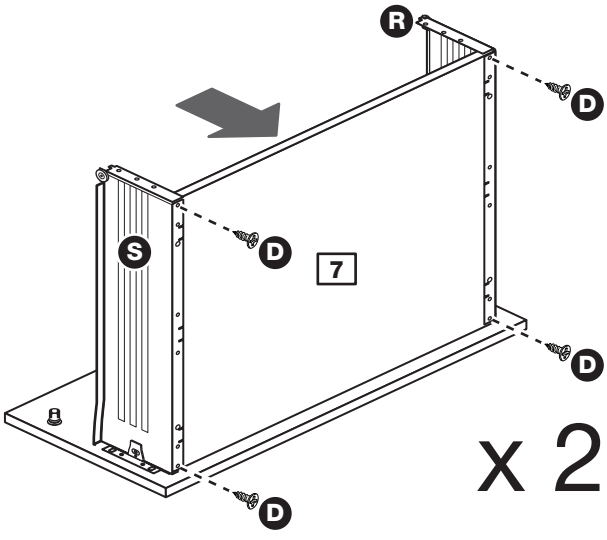


Assembly Instructions

Step 25

Fit the pan bar holders

Position the pan bar holders Tc against the side edge of the pan drawer back 6 and flush with the top edge.

Secure each pan bar holder with screws Tb.

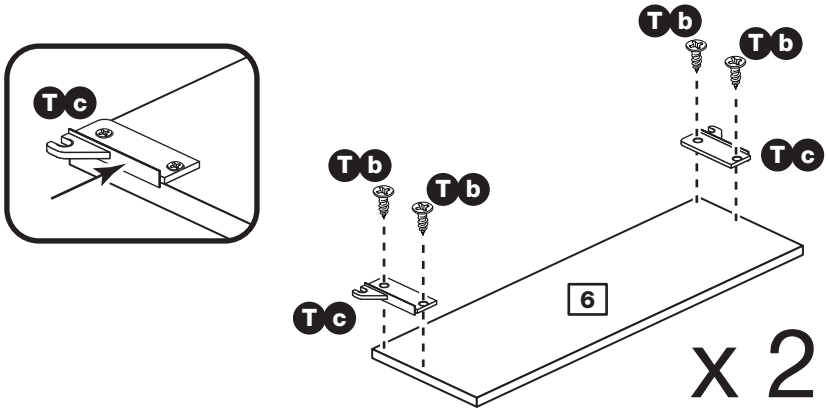


Step 26

Fit the pan drawer back

Push the pan drawer back 6 up into the drawer assembly.

While holding it in place, secure the pan drawer back 6 using 4 screws D into the top and bottom holes, as shown.

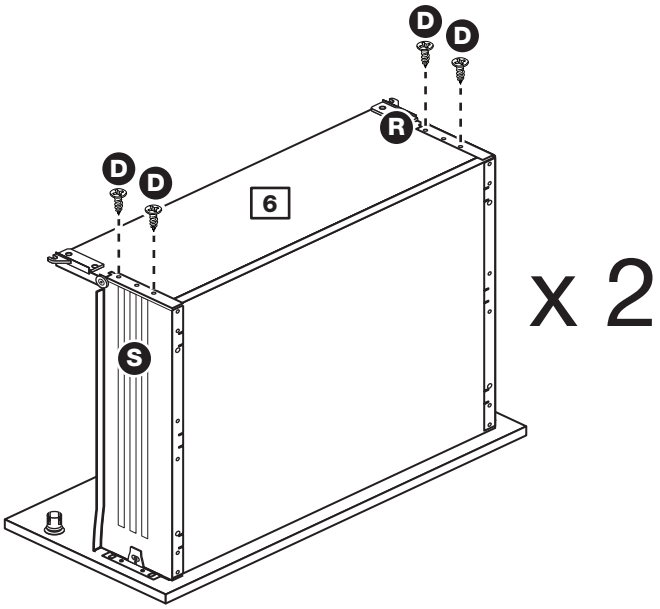


Step 27

Fit the soft close catches

Position the location hole of the right soft close catch O marked ‘R’ into the 3rd hole up from the front of the right drawer side S then secure using 3 screws D.

Position the location hole of the left soft close catch M marked ‘L’ into the 3rd hole up from the front of the left drawer side R and secure using 3 screws D.

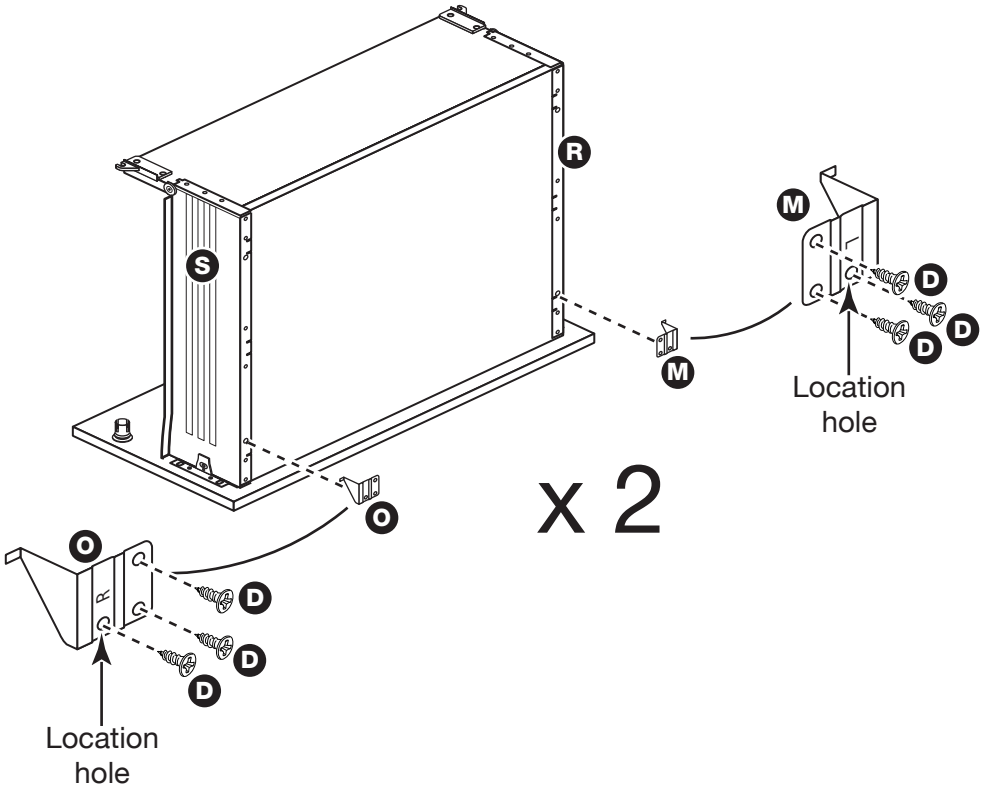

Step 28


Fit the pan bars

a: Push each pan bar Td down into the pan bar socket Ta until it clicks into place.

b: Push the recess at the back of the pan bar Td into the slot on the pan bar holder Tc.

c: If the pan bar Td is too long or too short to fit into the pan bar holder Tc you can adjust the length by twisting it.


d: Slide the cover on the pan bar Td down over the pan bar socket Ta until it clicks into place.

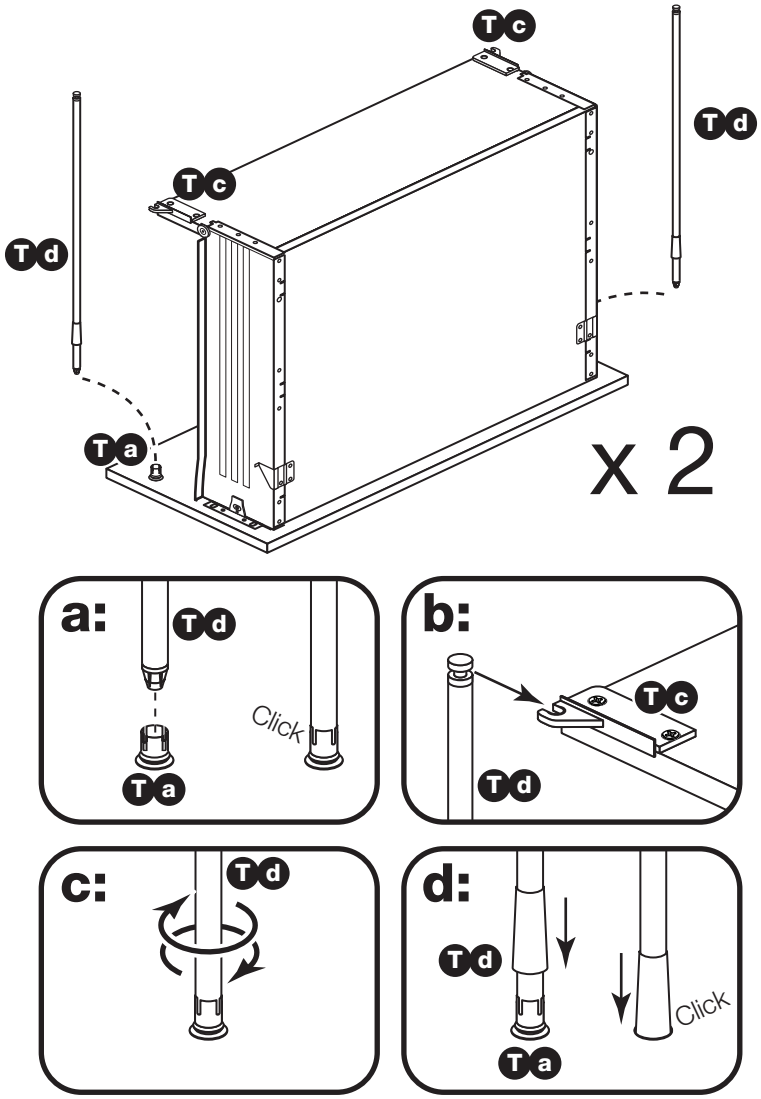

Step 29

Fit the handles


Attach the handles Ua supplied with the drawer fronts 9 and 10 using the screw(s) Ub packed with them.

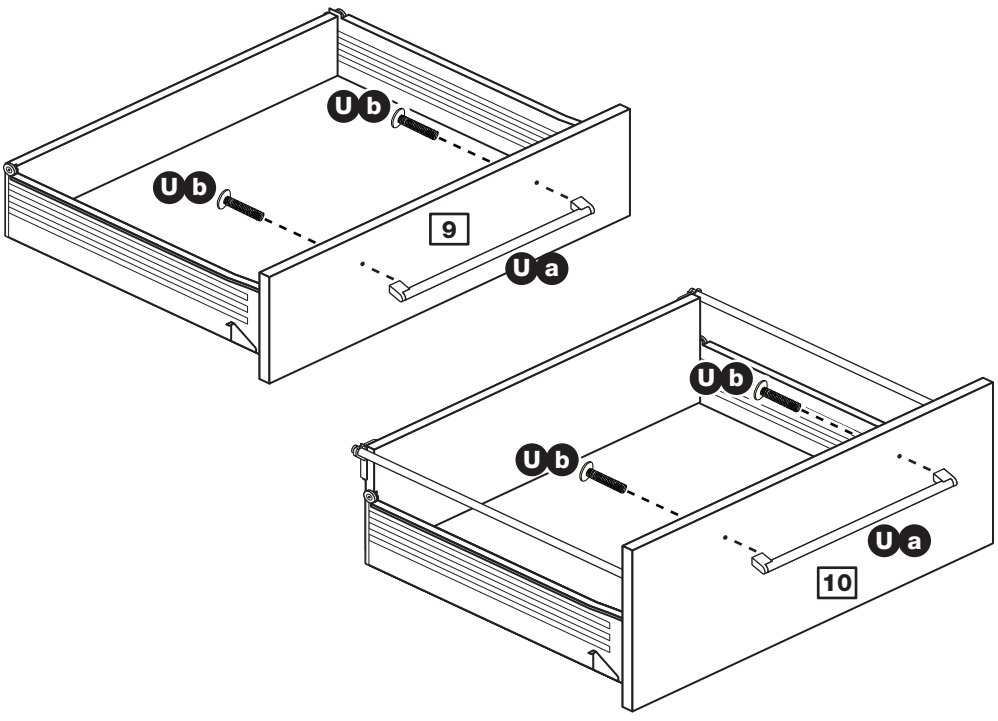

Step 30

Prepare the soft close units

Before fitting the drawers you will need to push the movable part of the 6 soft close units L and N forward until it clicks into place.

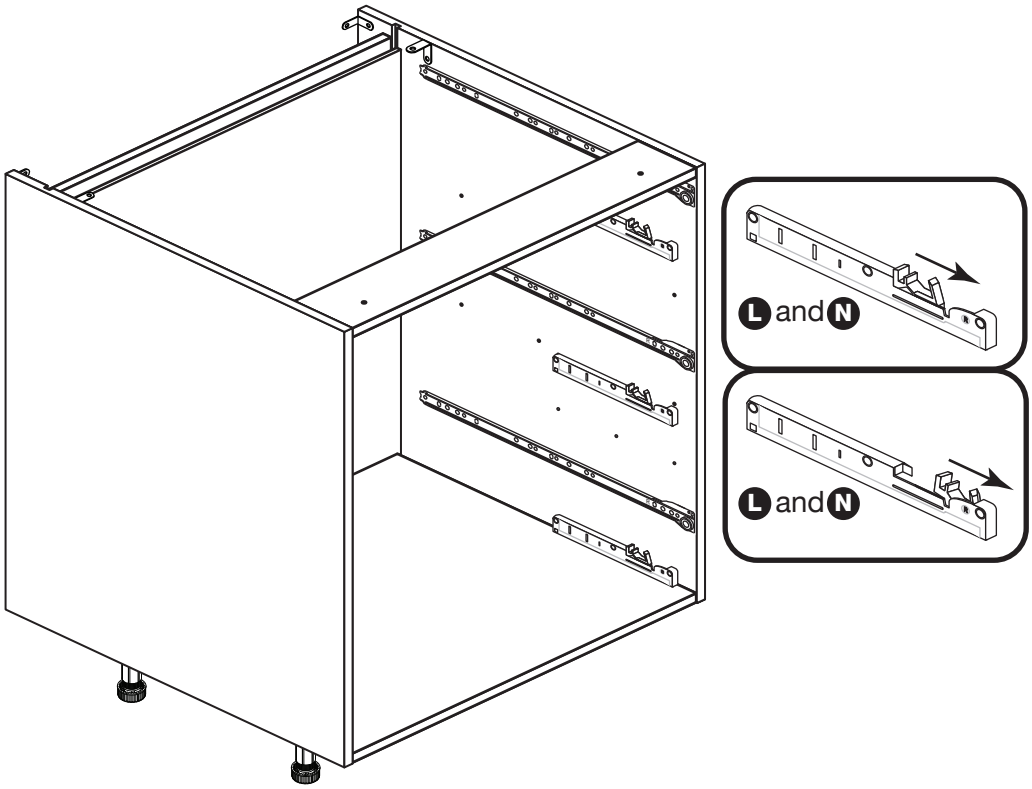


Step 31

Fit the drawers

Slide the wheels on the drawer sides R and S over the wheels on the runners P and Q then push the drawer into position.

Note: The standard drawer front is at the top of the unit

Important: Make sure that 2 soft close catches on each drawer engage with the soft close units fitted to the side panels.

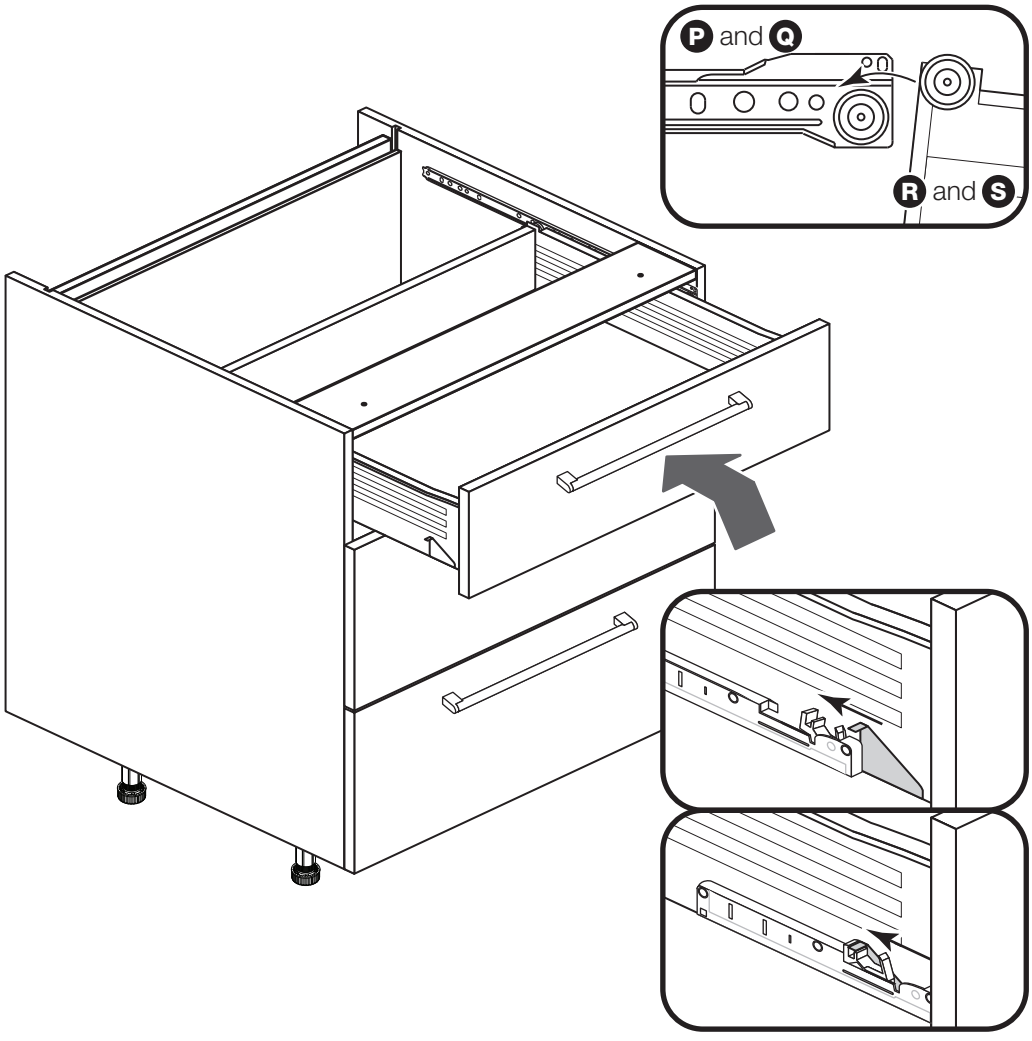

Step 32

Fit the plinth

After cutting the plinth to the required length, offer the plinth up to the unit and using a pencil, mark the position of the unit's legs 1b on the back of the plinth.


Position the leg bracket 1c so it is in the centre of the pencil mark and half way up the plinth.


Fix the leg bracket 1c to the back of the plinth using 2 screws 1e.

Slide the leg clip 1d into the leg bracket 1c.

Offer the plinth up to the unit and push the leg clips 1d onto the legs 1b.

Black Plinth Pack	608/2345
Cream Plinth Pack	608/2369
Oak Plinth Pack	205/5668
White Gloss Plinth Pack	608/2352
White HN Plinth Pack	198/9917

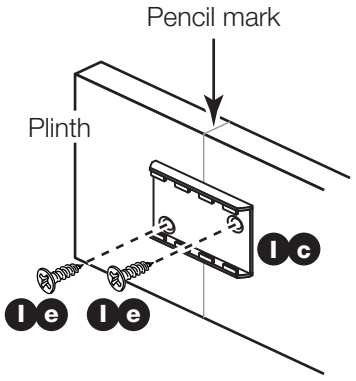

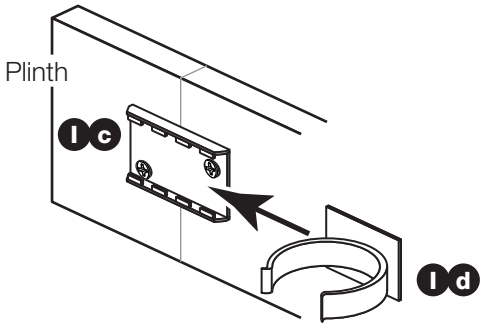

Step 33


Fit other products to the unit

To fit other products to this unit e.g. worktops etc., please follow the instructions packed with them.

We recommend that you consult a qualified joiner or kitchen fitter.

Assembly is complete

Warning: The unit is heavy. Lift with care.

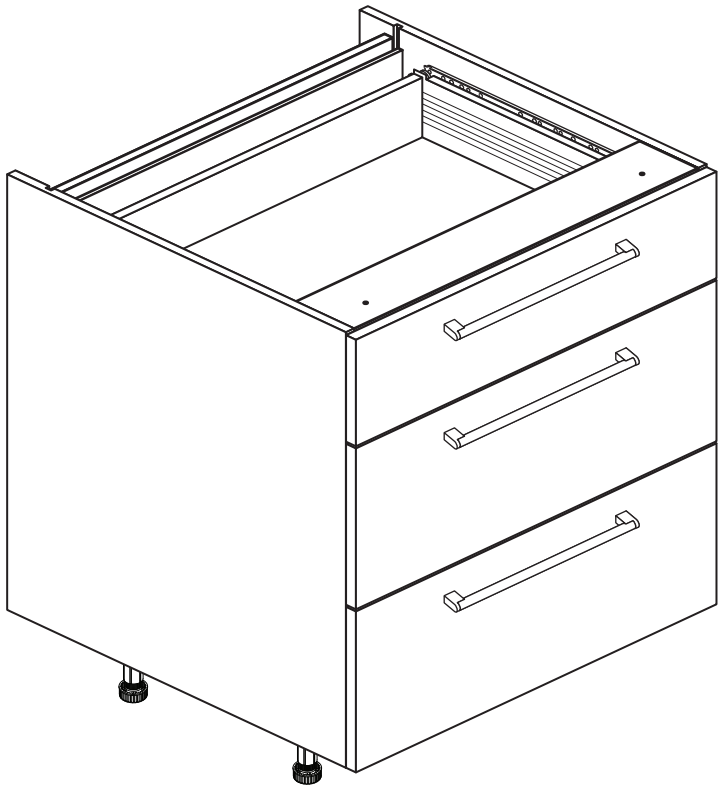

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW