High sleeper - White - 190x90cm

Assembly Instructions - Please keep for future reference

1926925



Dimensions

Length - 196cm
Depth - 147cm
Height - 177cm
Weight - 34kg

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:**
0045 7668 8055 or e-mail: order@flexa.dk

Issue 4 - 03/09/15

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

IMPORTANT - READ CAREFULLY -RETAIN FOR FUTURE REFERENCE

ASSEMBLY:

Always follow the instruction. Current legislation requires that the high bed / bunk bed must be fitted with 4 safety-rails and a ladder or platform for the upper bunk. The high bed / bunk bed meets the European EN 747:2012 A1:2015 standards for security and durability.

MATTRESS:

This bed is designed to use a mattress size 190 cm long and 90 cm wide. The total thickness must not exceed 16,1 cm. The mattress top must not pass the marking on the ladder / the post for the safety-rail.

WARNING:

High beds and the upper bed of bunk beds are not suitable for children under six years due to the risk of injury from falls. Bunk beds and high beds can present a serious risk of injury from strangulation if not used correctly. Never attach or hang items to any part of the bunk bed that are not designed to be used with the bed, for example, but not limited to ropes, strings, cords, hooks, belts and bags. Children can be become trapped between the bed and the wall, a roof pitch, the ceiling, adjoining pieces of furniture (e.g. cupboards) and the like. To avoid risk of serious injury the distance between the top safety barrier and the adjoining structure shall not exceed 75 mm or shall be more than 230 mm.

Do not use the high bed / bunk bed if any structural part is broken or missing.


MAINTENANCE INSTRUCTIONS:

Check regulary that all assembly fastenings are properly tightened. Ventilation of the room is necessary in order to keep the humidity low and to prevent mould in and around the bed.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: 0045 7668 8055**


Please check you have all the parts listed below

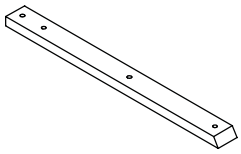


1 List x2 (31.8x2.8x1.2cm)
No. 12-01203181-20

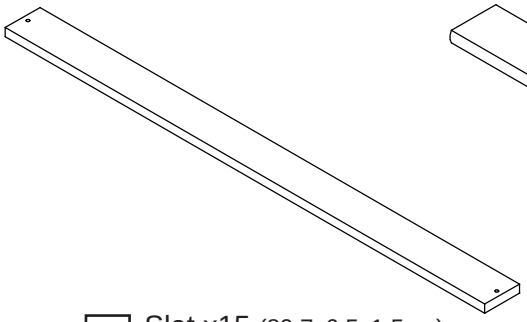


2 Slat x15 (89.7x6.5x1.5cm)
No. 12-01508971

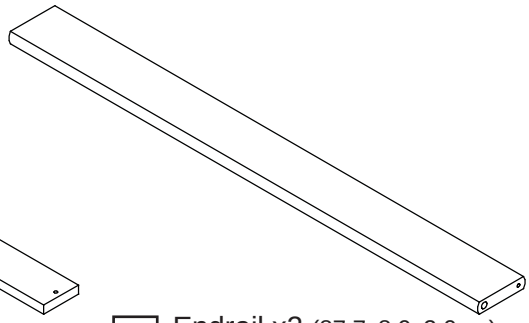


3 Endrail x2 (87.7x8.9x2.0cm)
No. 12-020087714-20

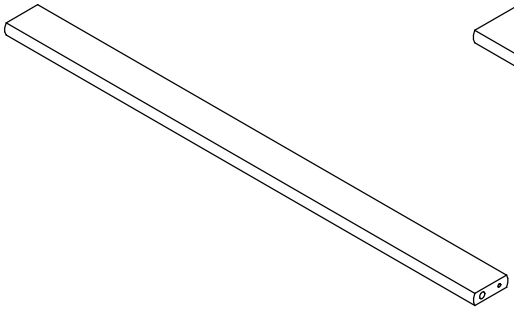


4 Endrail x4 (87.7x6.5x2.0cm)
No. 12-020087715-20

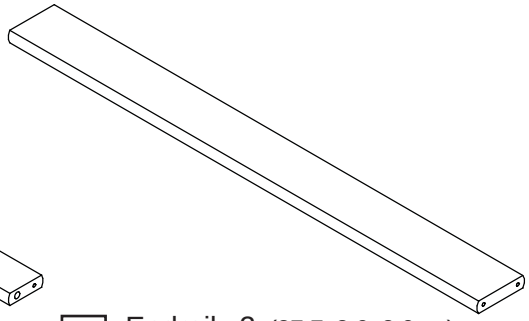


5 Endrail x2 (87.7x8.9x2.0cm)
No. 12-020087716-20

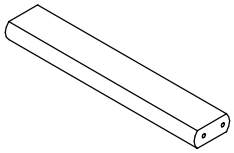


6 Tread x5 (31.8x6.0x2.6cm)
No. 12-02603181-20

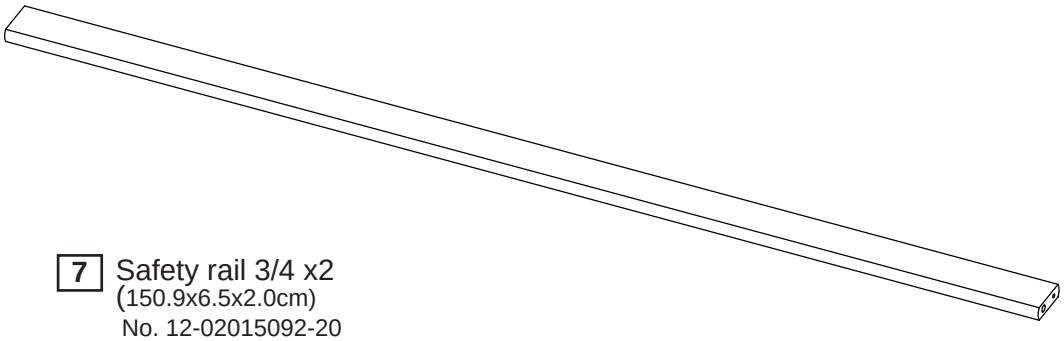

7 Safety rail 3/4 x2
(150.9x6.5x2.0cm)
No. 12-02015092-20

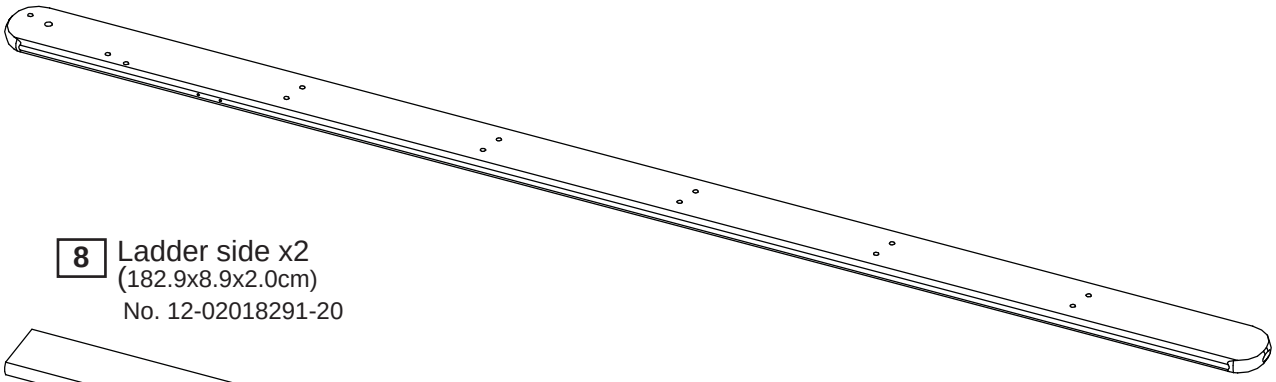


8 Ladder side x2
(182.9x8.9x2.0cm)
No. 12-02018291-20

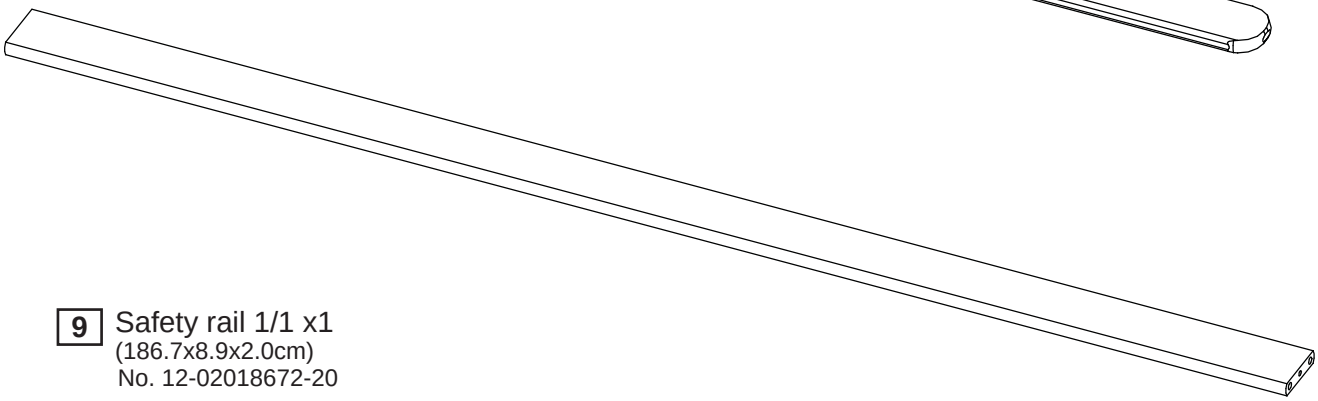


9 Safety rail 1/1 x1
(186.7x8.9x2.0cm)
No. 12-02018672-20

Components - Parts


Please check you have all the parts listed below

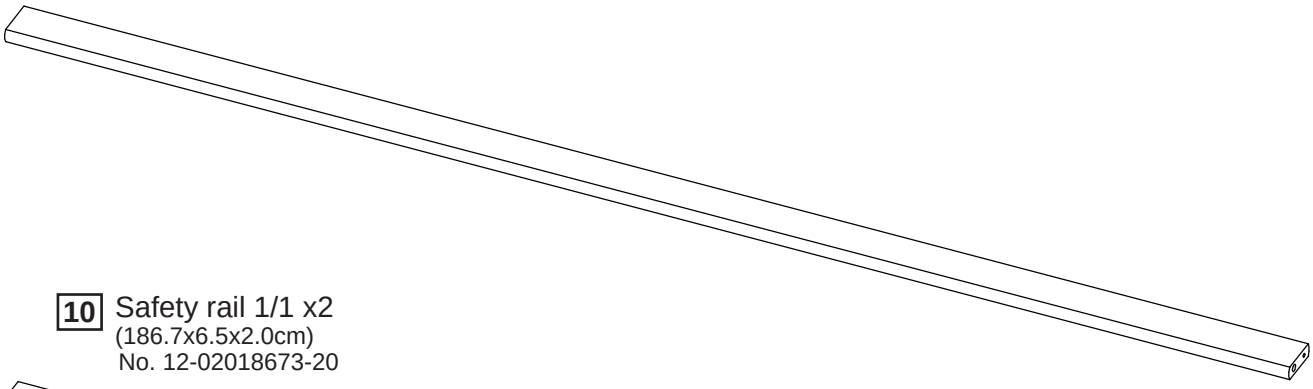

10 Safety rail 1/1 x2
(186.7x6.5x2.0cm)
No. 12-02018673-20

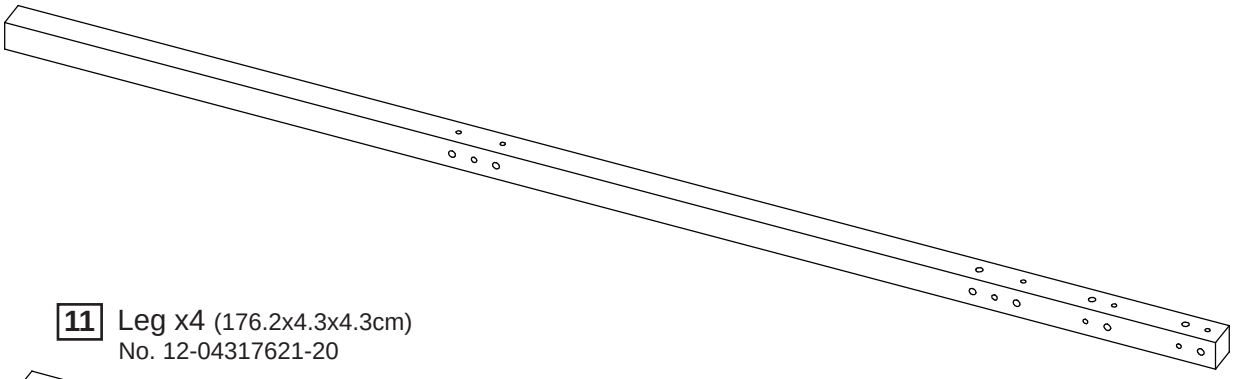

11 Leg x4 (176.2x4.3x4.3cm)
No. 12-04317621-20







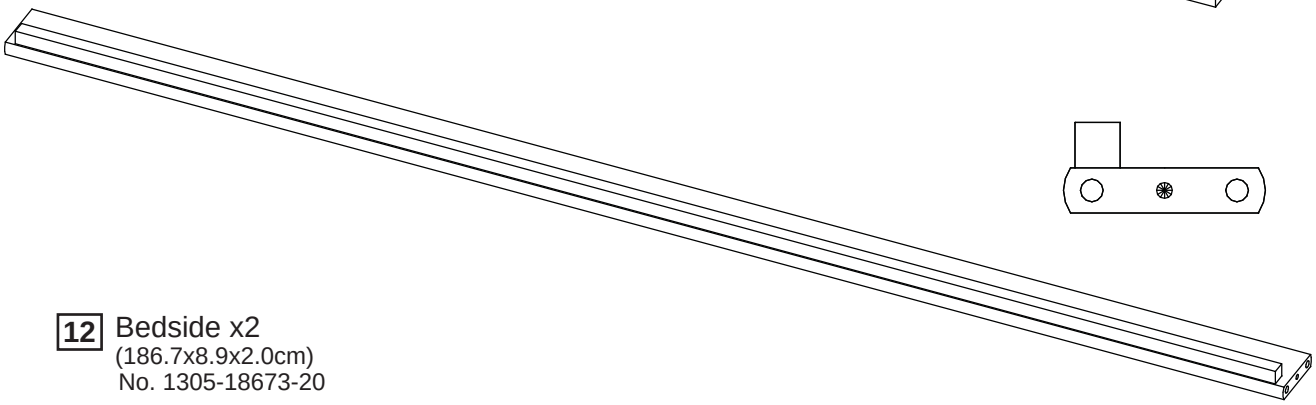


12 Bedside x2
(186.7x8.9x2.0cm)
No. 1305-18673-20

Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

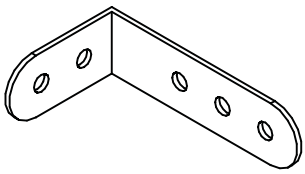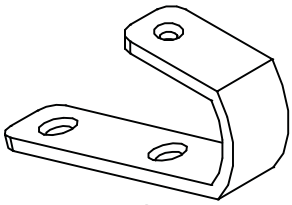
No. 3901-30020 **A**  3.0x20mm Chipboard screw x2	No. 3922-06014 **B**  M6 Ø10x14mm Barrel nut x6	No. 3901-40030 **C**  4.0x30mm Chipboard screw x46
No. 3930-10045 **D**  10x45mm Dowel x30	No. 3913-06055 **E**  M6x55mm Connecting bolt x1	No. 3909-63050 **F**  6.3x50mm Assembly screw x24
No. 3909-63090 **G**  6.3x90mm Assembly screw x26	No. 3938-00007-2 **H**  ø7mm Cover cap plastic x4	No. 3938-00010-2 **i**  ø10mm Cover cap plastic x28
No. 3913-06100 **J**  M6x100mm Connecting bolt x6	No. 3923-06015 **K**  ø8/M6x15mm Sleeve nut x1	No. 3938-000081-2 **L**  ø8mm Cover cap plastic x4
No. 4008-022 **M**  70x40,5x20mm Angle x2	No. 4007-023 **N**  15.5x3mm Bracket x2	No. 3940-00015 **O**  ø10/ø6.3x15mm Spacer Plastic x1


Tools required

Phillips screwdriver (medium)


Flatblade screwdriver (medium)

Allen key 4mm incl.
No. 4033-004

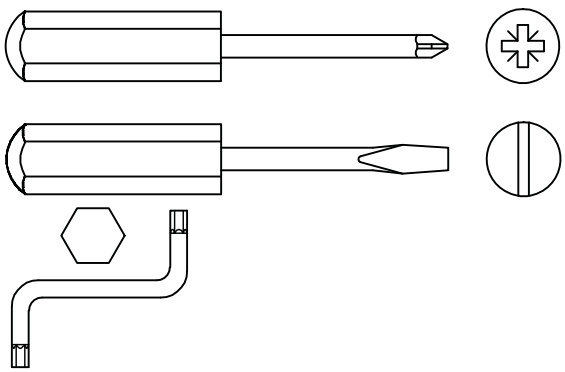


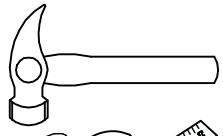

Small hammer

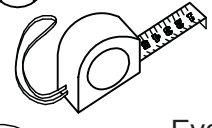

Ruler/tape measure

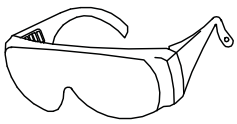


Eye protection (when using a hammer or glue)

Assembly Instructions

Step 1


Attach the dowels (D) to the endrails [3] and [4] and to the bedside [12] and to the safety rails [7] [9] and [10].

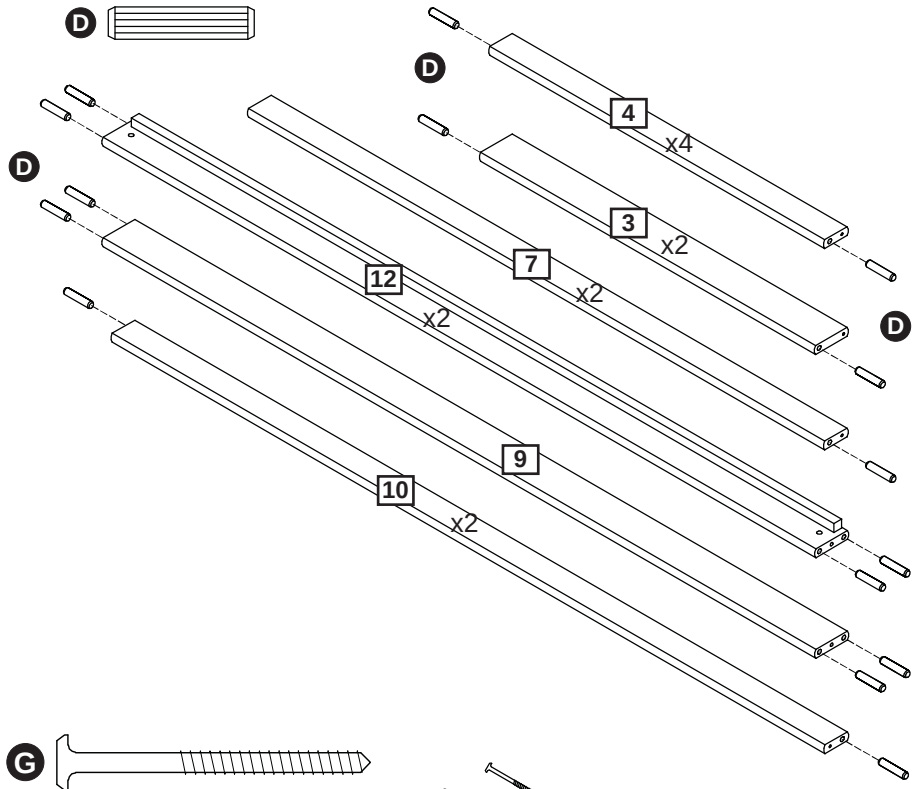

Step 2

Attach the leg [11] to the endrails [3], [4] and [5] with assembly screws (G) using the Allen Key.


Repeat same procedure for both headboard and footboard.

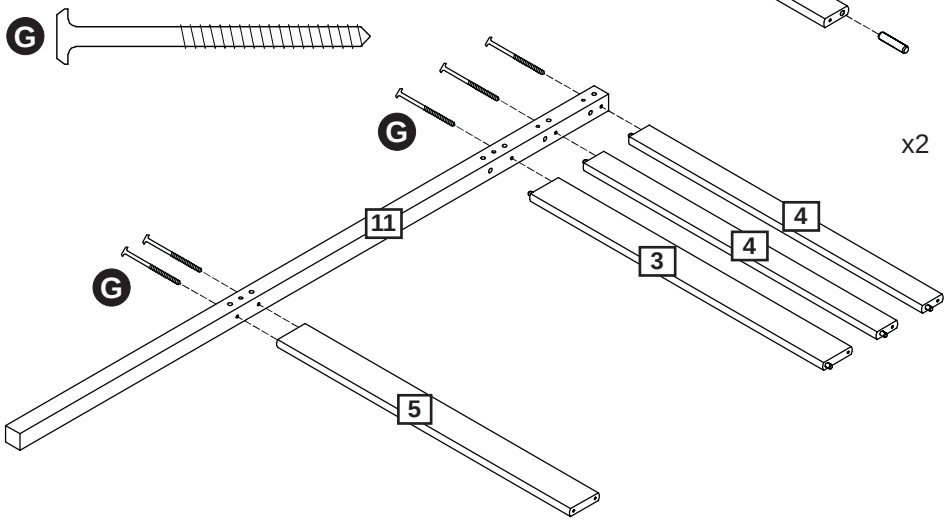

Step 3

Attach the leg [11] to the endrails [3], [4] and [5] with assembly screws (G) using the Allen Key.

Repeat same procedure for both headboard and footboard.

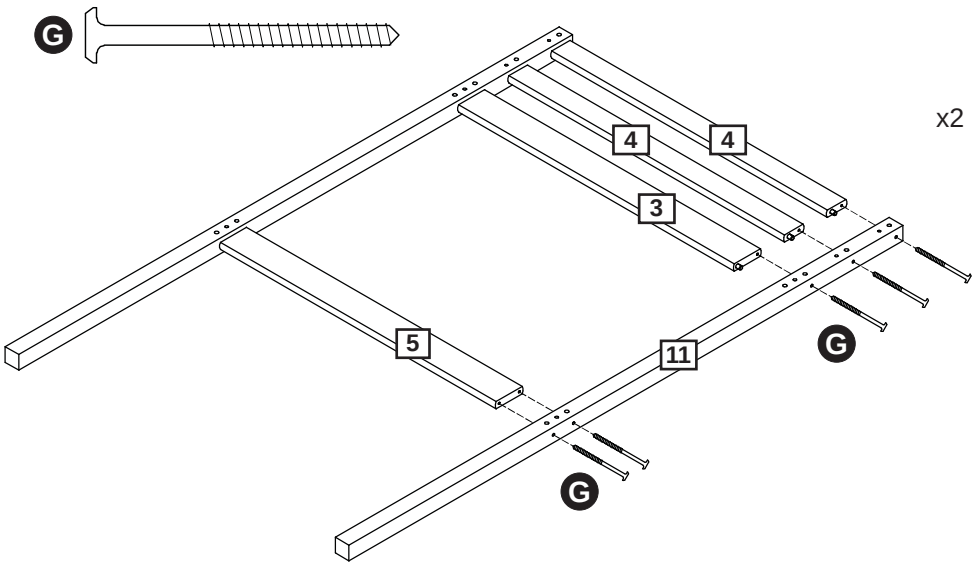

Assembly Instructions

Step 4

Attach the bedside 12 and the safety rails 9 and 10 to end boards firstly by placing the dowels in the holes in end boards.

The thin rail attached to the bedsides should face inwards.

Push barrel nuts B into the small holes in the bedside 12 and the safety rail 9, the groove on barrel nut B should be horizontal.

Push connecting bolts J through each leg 11 to meet barrel nuts B and then fasten with the Allen Key.

Attach the safety rails 10 to the leg 11 with assembly screws G.

Step 5

Attach the bedside 12 and the safety rails 7 to end boards firstly by placing the dowels in holes in endboards.


The thin rail attached to the bedside should face inwards.


Push barrel nuts B into the small holes in the bedside 12 the groove on barrel nut B should be horizontal.

Push connecting bolt J through each leg 11 to meet barrel nut B and then fasten with the Allen Key.

Attach the safety rails 7 to the leg 11 with assembly screws G.

Ladder can be positioned left or right.

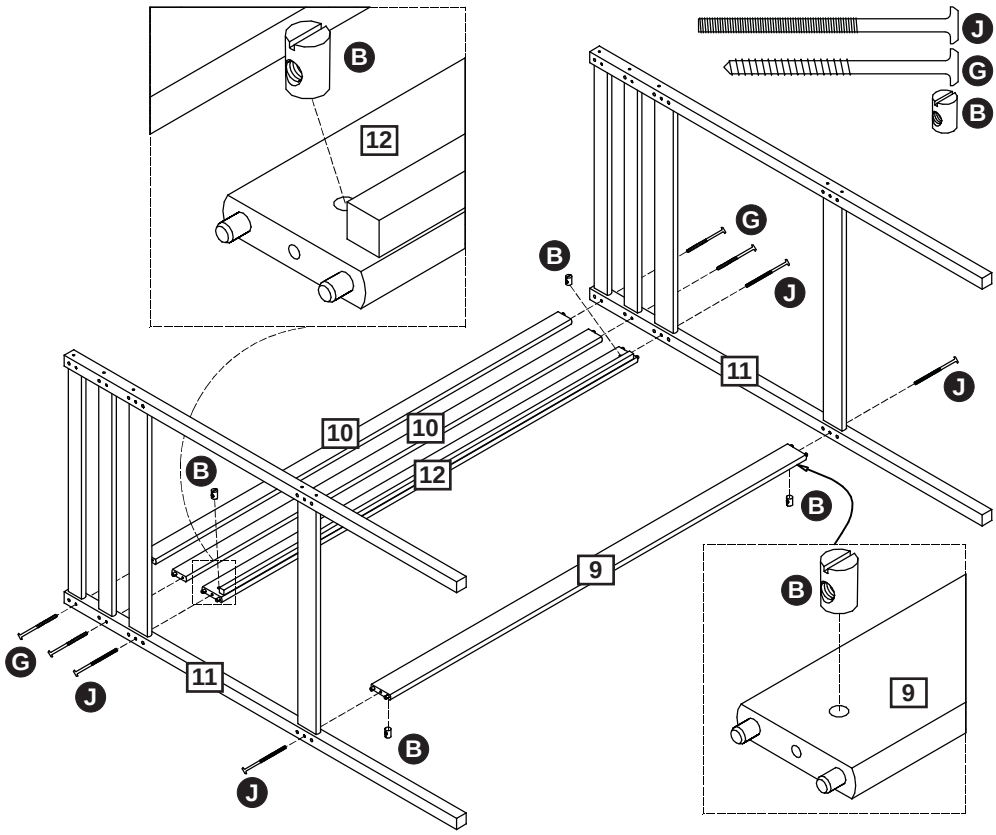

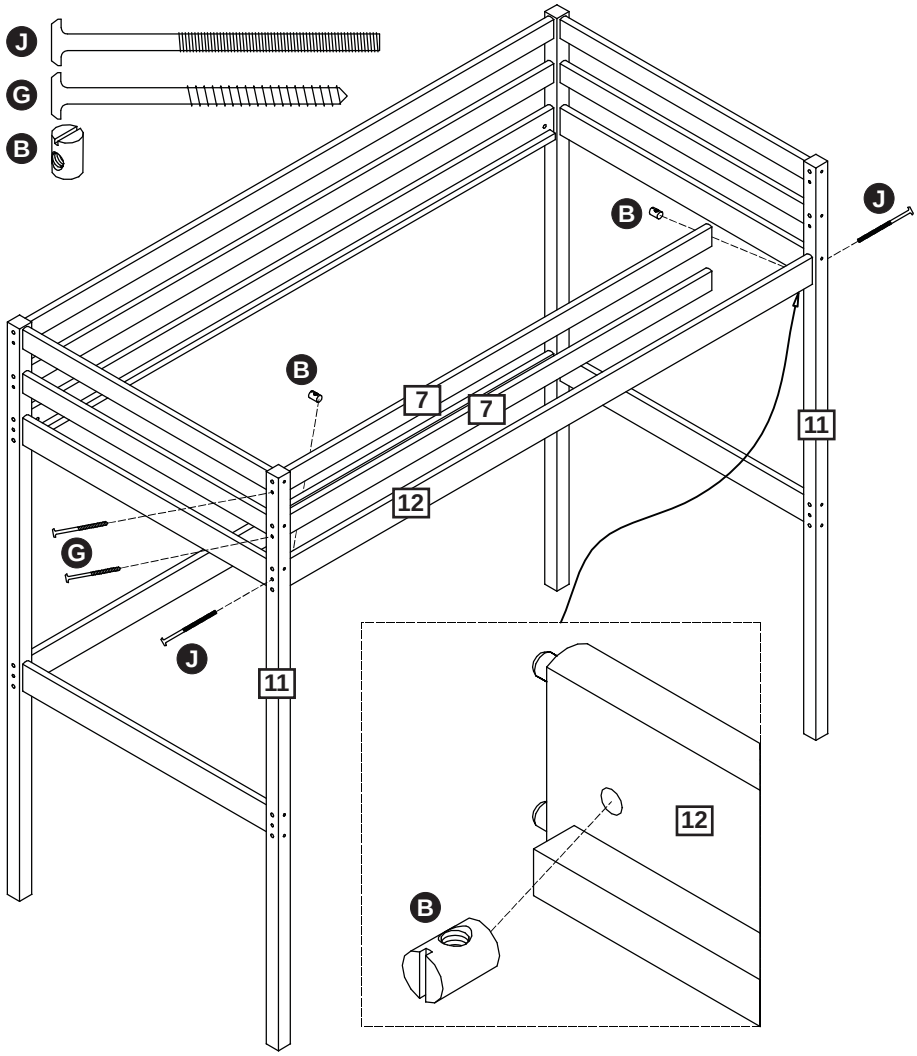


Assembly Instructions

Step 6

Attach the treads 6 to the ladder sides 8 with assembly screws F.

Attach the bracket N to the ladder side 8 with chipboard screws C.

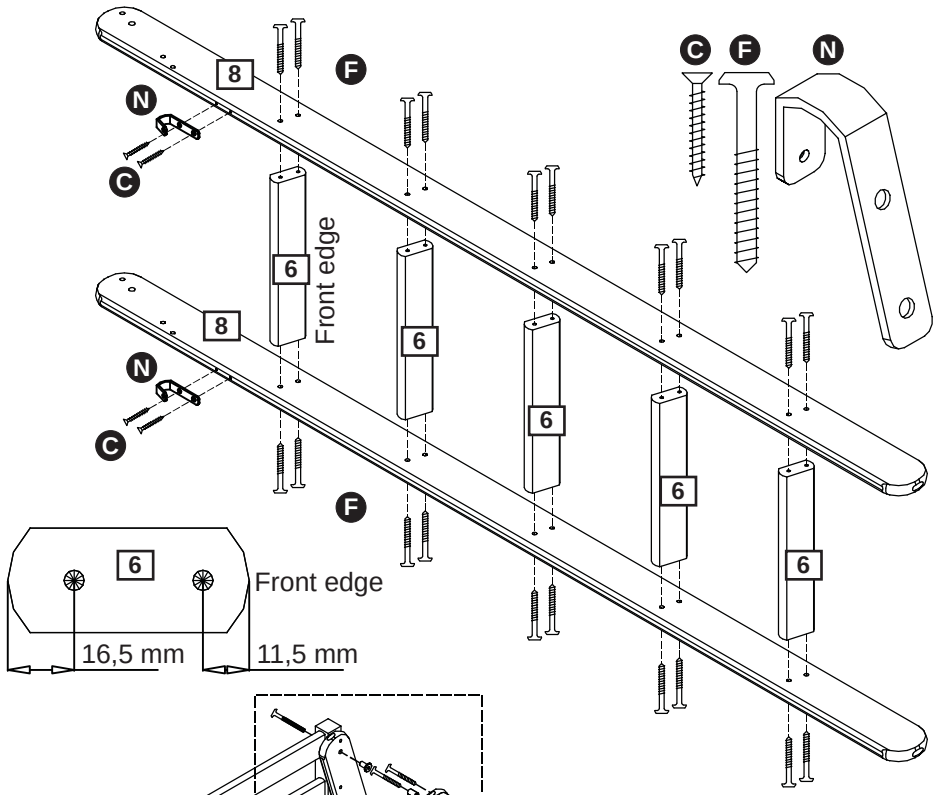


Step 7

Attach the ladder side 8 to the leg 11 with the sleeve nut K and connecting bolt E.

Attach the ladder side 8 to the safety rails 7 with the spacer O and assembly screws F.

Attach the ladder sides 8 to the bedside 12 with chipboard screws A.

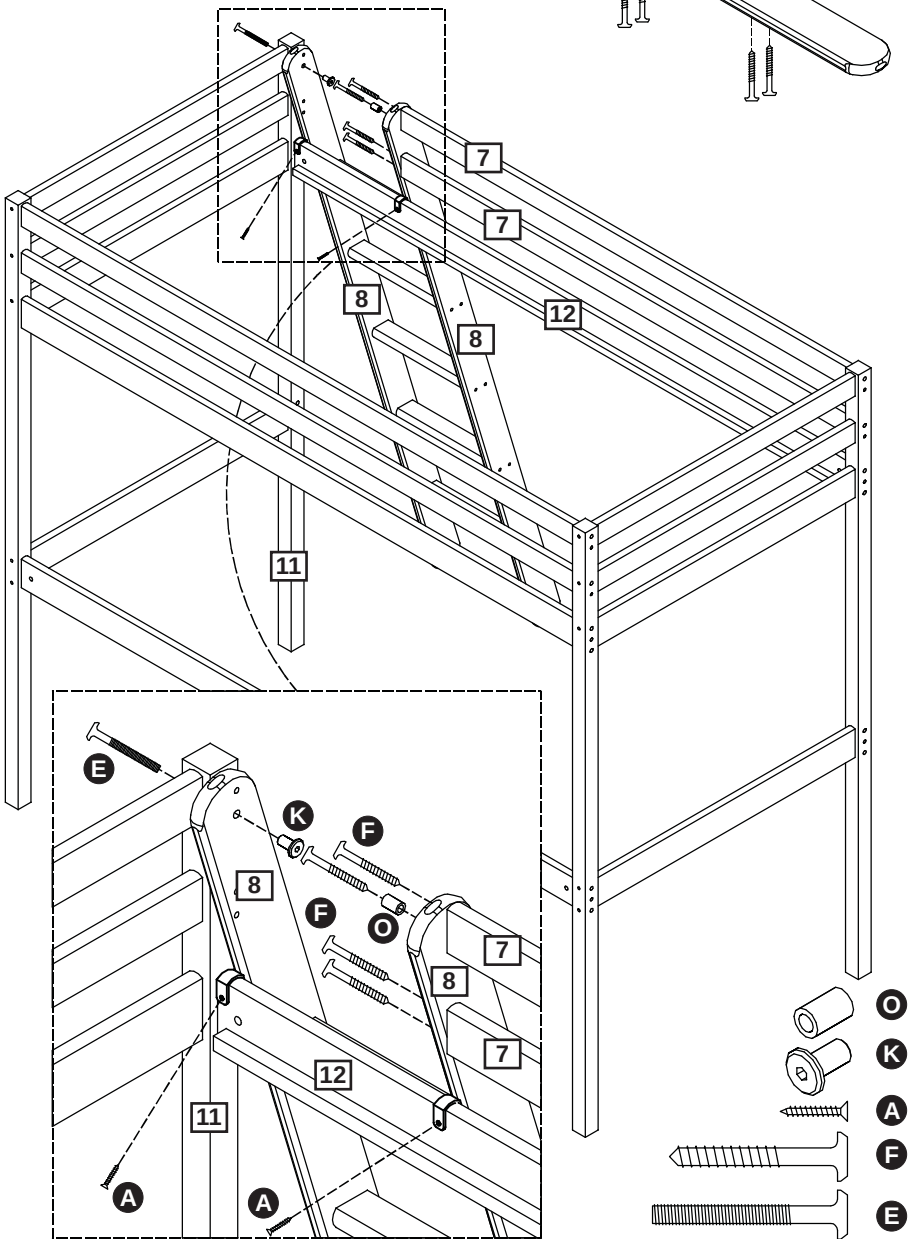


Assembly Instructions

Step 8

Place 1 slat [2] in the center of the bed and two slats [2] in both ends of the bed, 16mm from bed ends. Follow the measurements.


Push the bedsides [12] together whilst attaching slat [2] to the bed with 2 chipboard screws C

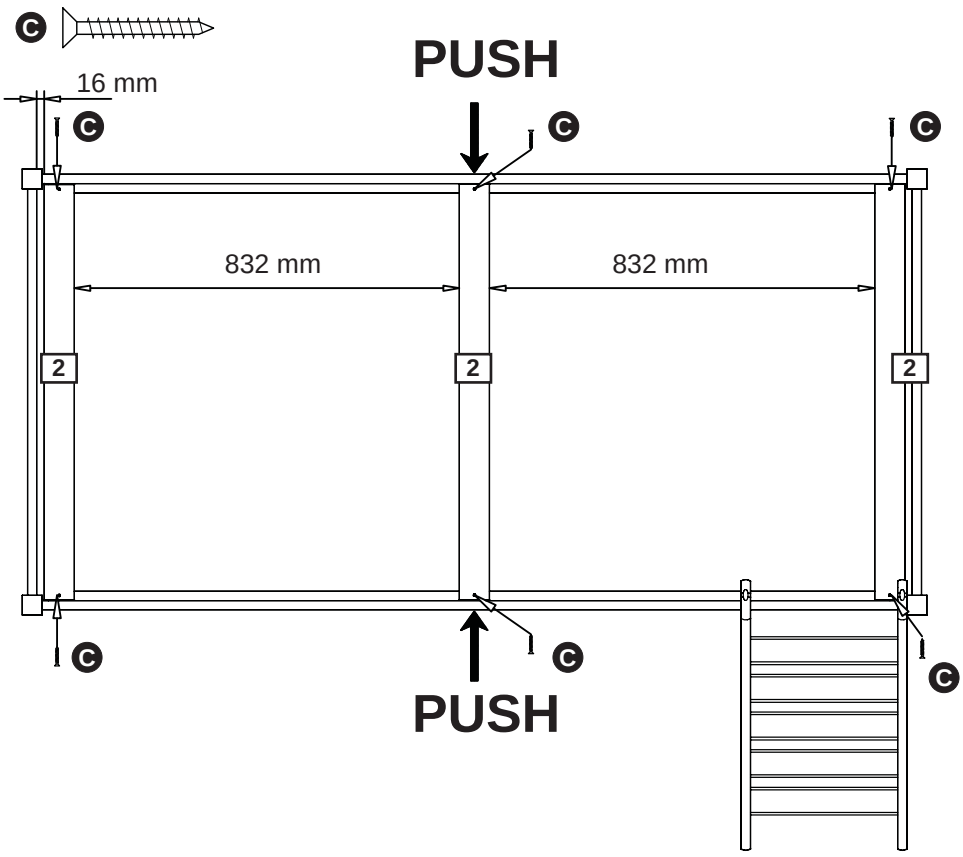

Step 9

Position the remaining 12 slats [2] in the bed with a distance of 63 mm between each.

Fasten each slat [2] with 2x chipboard screws C

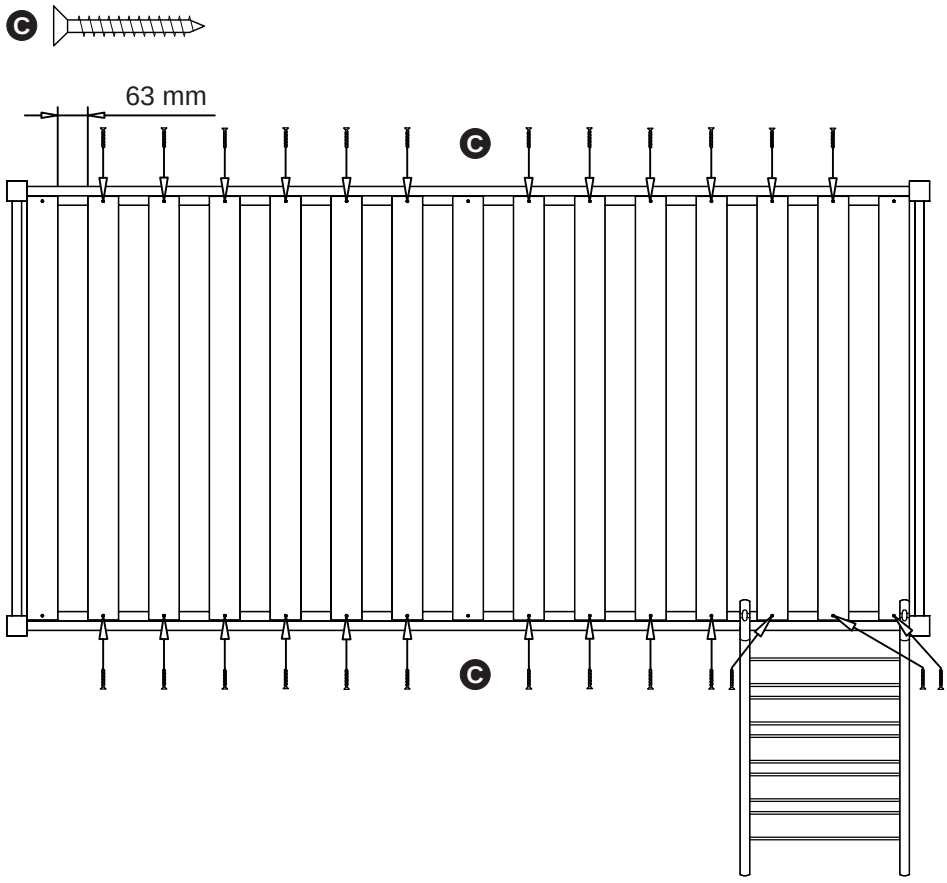

Assembly Instructions

Step 10

Attach the safety list [1] inside the bed, on the front safety rails [7] Should be in the center of the front guards between the slats.

Attach it [1] to the safety rails [7] and the bedside [12] with chipboard screws.

Follow the measurement.

Attach the safety list [1] on the outside of the bed, on the back safety rails [10] Should be in the center of the back guards.


Attach it [1] to the safety rails and the bedside [12] with chipboard screws C


Follow the measurement.

Attach the wall bracket M to the leg [11] with chipboard screws C.

Max. mattress height !

Assembly is complete.

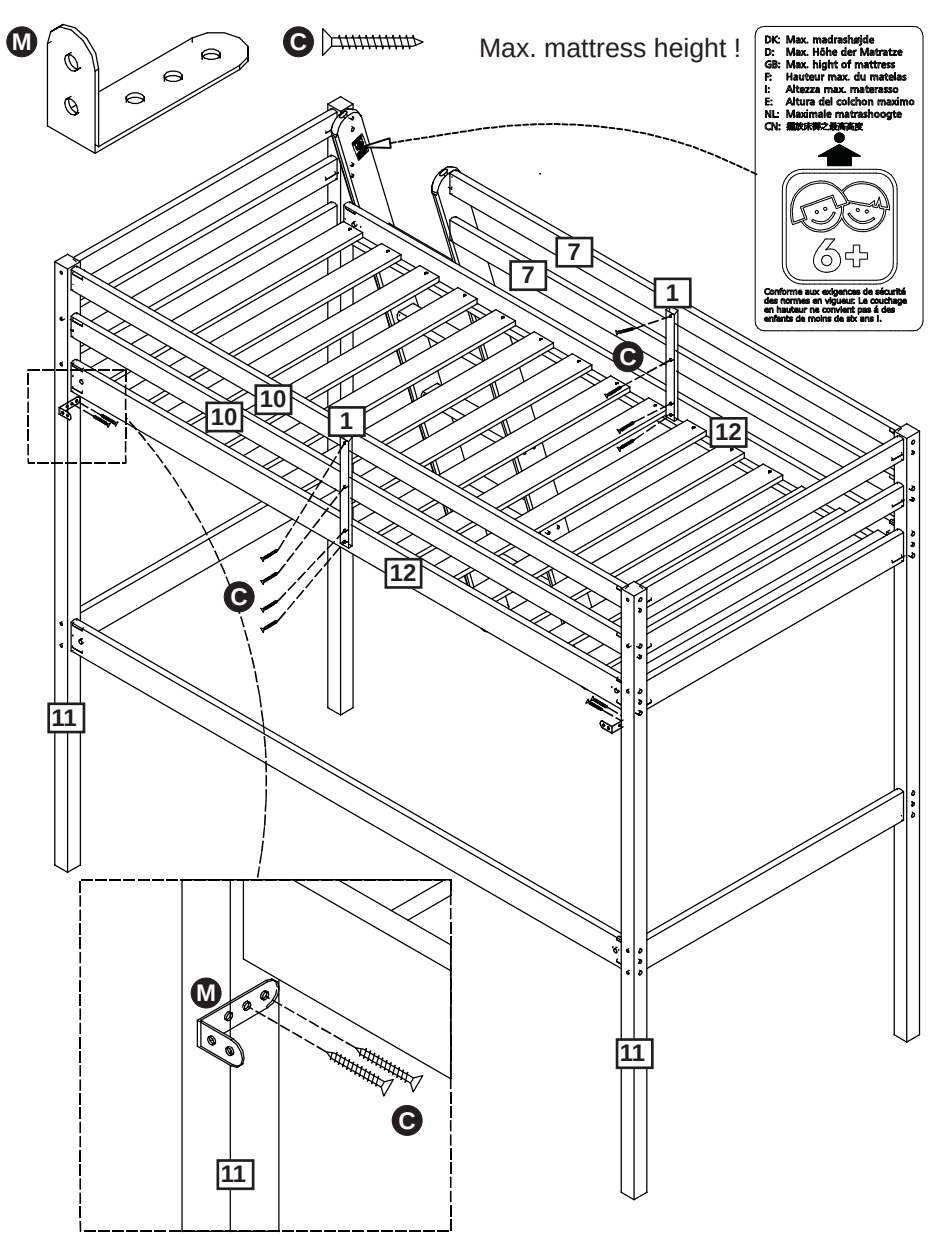

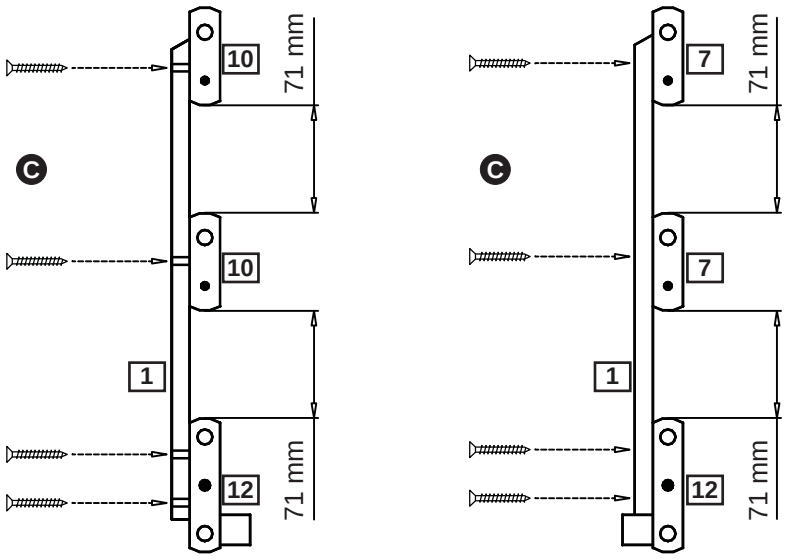

If you need help or have damaged or missing parts, call the **Customer Helpline: 0045 7668 8055**
E-mail: order@flexa.dk