# Valencia - 600mm Larder Cabinet


## Assembly Instructions - Please keep for future reference

hygena

| | |
|---|---|
| Cabinet | 633/7777 |
| Black Door Pack | 633/2923 |
| Cream Door Pack | 633/2758 |
| Oak Door Pack | 198/9405 |
| White Gloss Door Pack | 633/2844 |
| White HN Door Pack | 194/7605 |

**If you are fitting a Fridge/Freezer inside this unit please refer to the instructions that were supplied with the appliance.**

**We recommend that you contact a registered installer.**

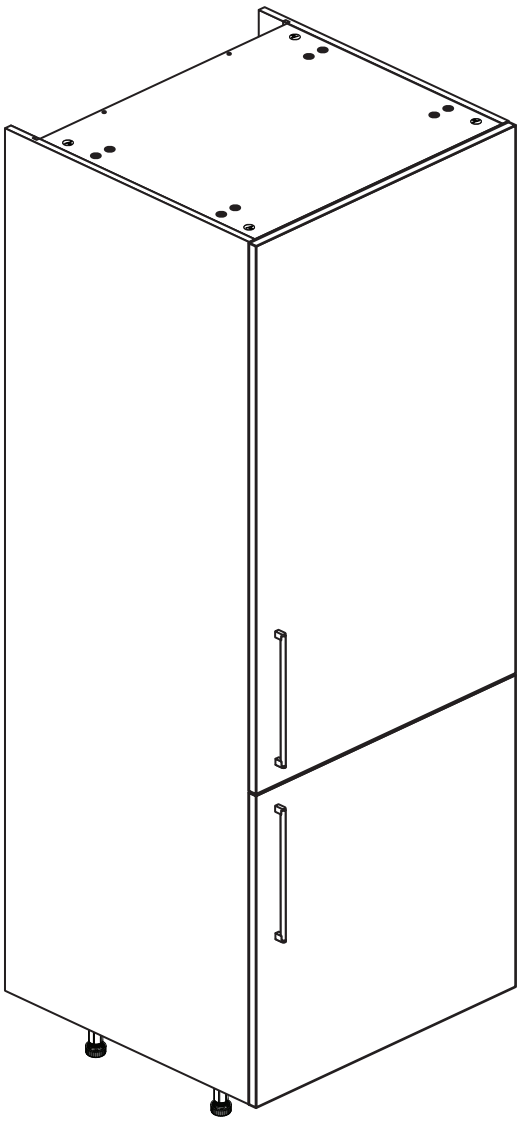

**Dimensions**

Width - 60cm

Depth - 59cm

Height - 213cm

MADE IN BRITAIN

## Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Issue 4 - 09/02/15

# Safety and Care Advice

## **Important -** Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 47kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 1, 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.

• Dispose of all packaging carefully and responsibly.


## Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

## Tools required

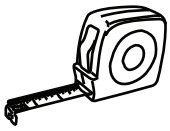


Rule



Cross-head screwdriver



Scissors



Hammer



Eye protection (when using a hammer or drill)




Electric drill

***Note:*** If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*


## Please check you have all the panels listed below

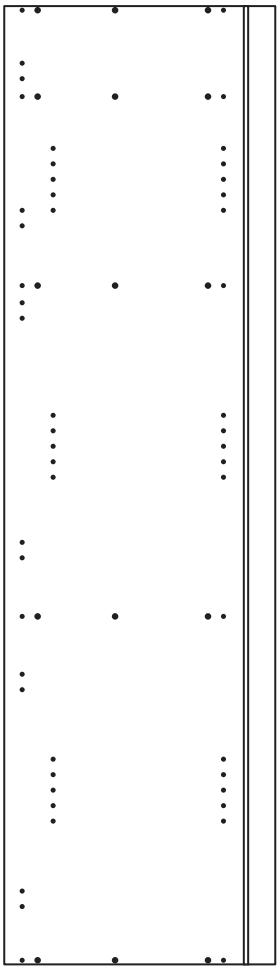


**1** Left Side *(DPF106B)*
(1980 x 560mm)

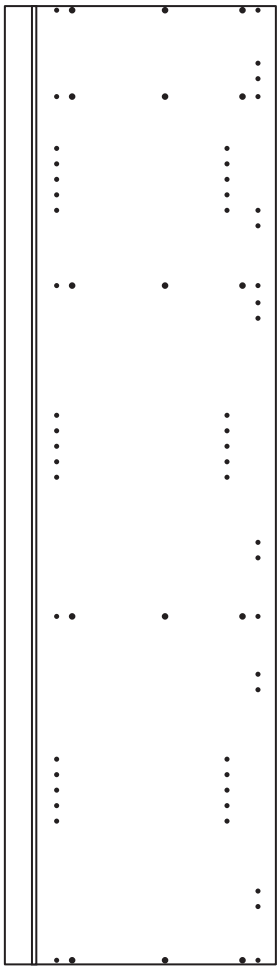

**2** Right Side *(DPF107B)*
(1980 x 560mm)




**3** Back *(DPF109A)*
(579 x 1976mm)

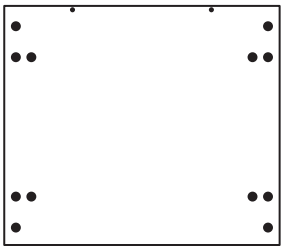


**4** Top/Base *(DPF078B)*
(569 x 494mm) x 2




**5** Loose Shelf *(DPF079A)*
(568 x 431mm) x 3

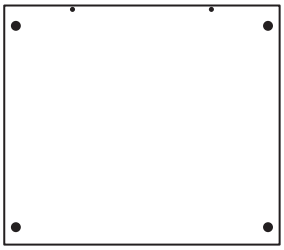


**6** Fixed Shelf *(DPF108B)*
(569 x 494mm)

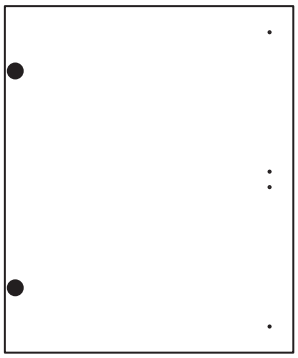

**7** Valencia Door *(DPF148B)*
(597 x 716mm)

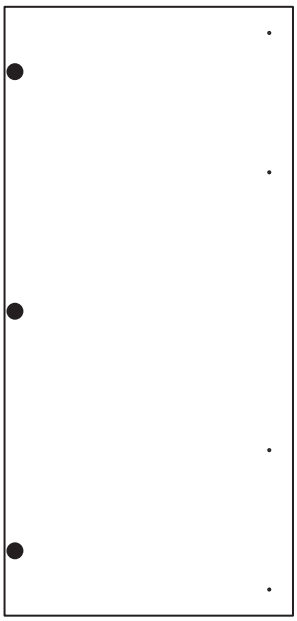

**8** Valencia Larder Door *(DPF156B)*
(597 x 1258mm)




**9** Small Back
*(D1148)*
(164.5 x 570mm)

# Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

## Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

**A** 

Wooden dowel *(F22)* x 18

**B** 

Metal dowel *(F901)* x 12

**C** 

Large locking nut *(F900)* x 12

**D** 


13mm Screw *(F63)* x 10

**E** 

13mm Screw *(F79)* x 2

**F** 


25mm Screw (*F50)* x 9

**G** 


Connecting Sleeve *(F432)* x 2

**H** 


19mm Connecting bolt (*F461)* x 2

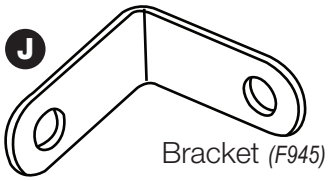**J** 


Bracket *(F945)* x 2

**K** 


Shelf support *(F110)* x 12

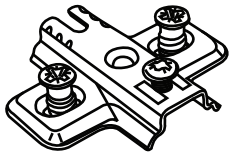**L** 


Hinge Plate (*F574)* x 5

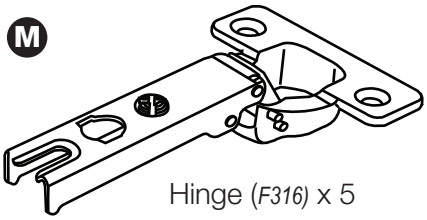**M** 

Hinge (*F316)* x 5

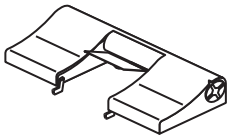**N** 


Soft Close (*F320)* x 2

**Oa** 


Handle *(F214)* x 2

**Ob** 


25mm Screw *(F132)* x 4

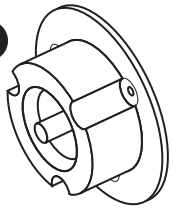**Ia** 


Leg Socket (*F120)* x 4

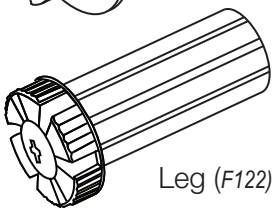**Ib** 

Leg (*F122)* x 4

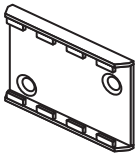**Ic** 


Leg Bracket (*F127)* x 2

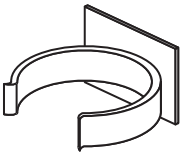**Id** 

Leg Clip (*F128)* x 2


**Ie** 

16mm Screw (*F129)* x 16

**P** 

45mm Screw *(F65)* x 4

## Ruler - Use this ruler to help correctly identify the screws

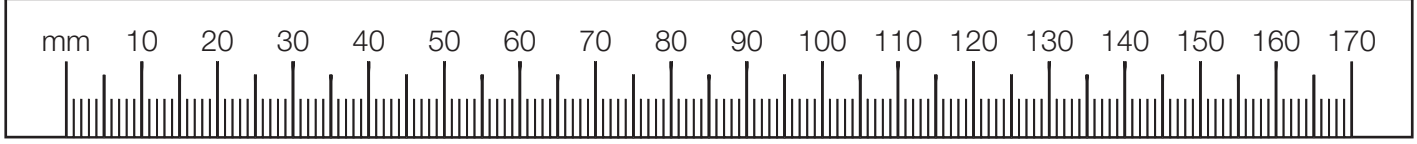

# Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

## Step 1

**Choose which way you would like the doors to open**

You can fit the doors to the left side or right side.

If you would like your doors to open this way, fit the hinge plates to the left side

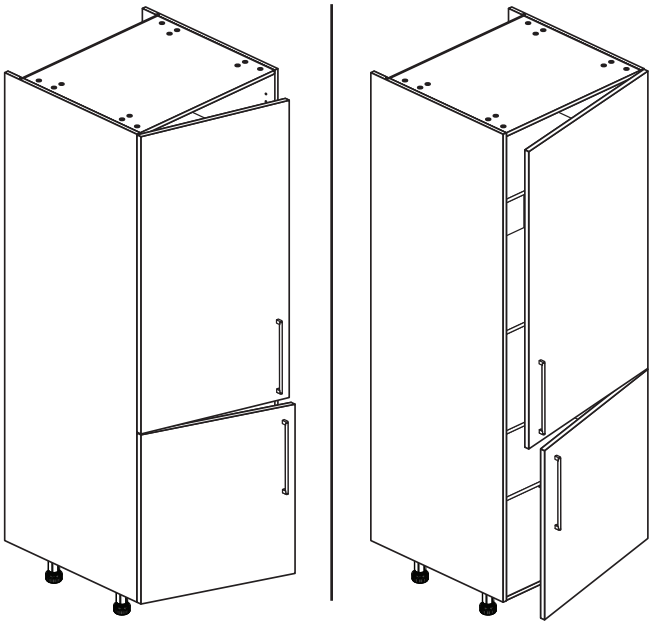

If you would like your doors to open this way, fit the hinge plates to the right side

## Step 2

**Prepare the left side**

Refer to step 1 and, **if required**, fit 5 hinge plates **L** onto the left side **1**, as shown.


Screw 6 metal dowels **B** into the left side **1**.

***Note:*** Tighten the metal dowels up fully against the panels.

Fit a bracket **J** to the left side **1** using screw **E**, flush with the top edge and back edge, see diagram.

## IMPORTANT

**Only carry out this step if you are building a Larder Cupboard. If you are building a housing for a fridge/freezer go to Step 3.**

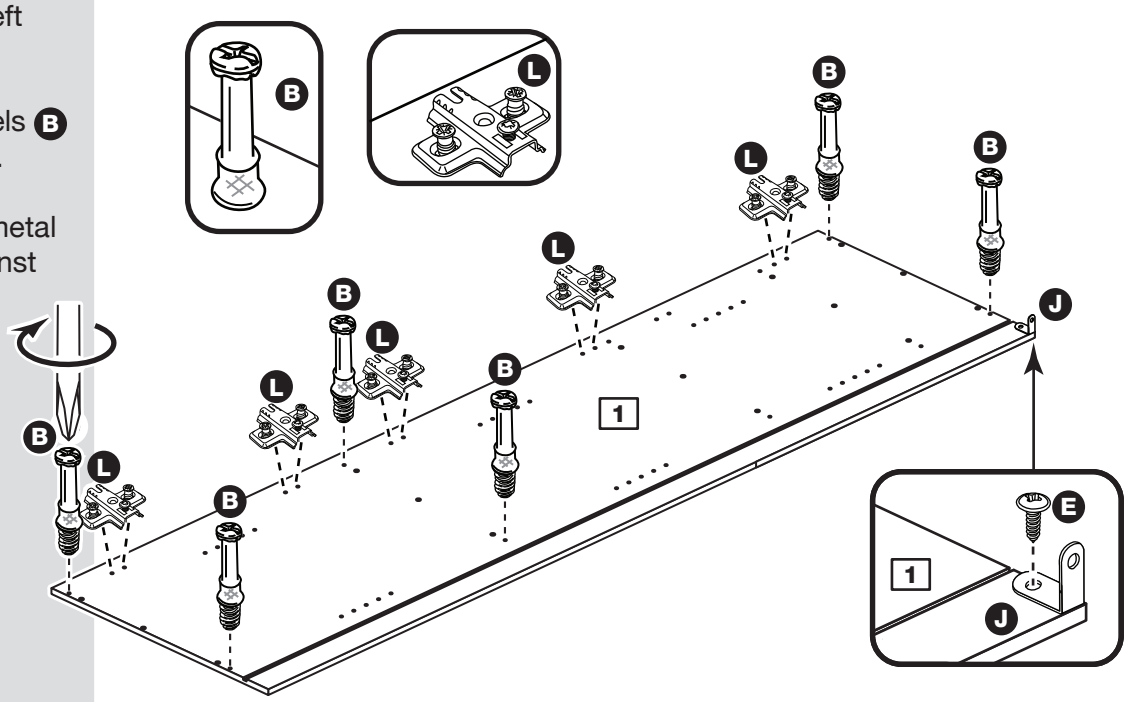

## Step 3

**Prepare the left side**

Refer to step 1 and, **if required**, fit 5 hinge plates L onto the left side 1, as shown.


Screw 6 metal dowels B into the left side 1.

***Note:*** Tighten the metal dowels up fully against the panels.

Fit a bracket J to the left side 1 using screw E, flush with the top edge and back edge, see diagram.

## IMPORTANT

**Only carry out this step if you are building a housing for a fridge/freezer. If you are building a Larder Cupboard you have already prepared this panel in Step 2.**

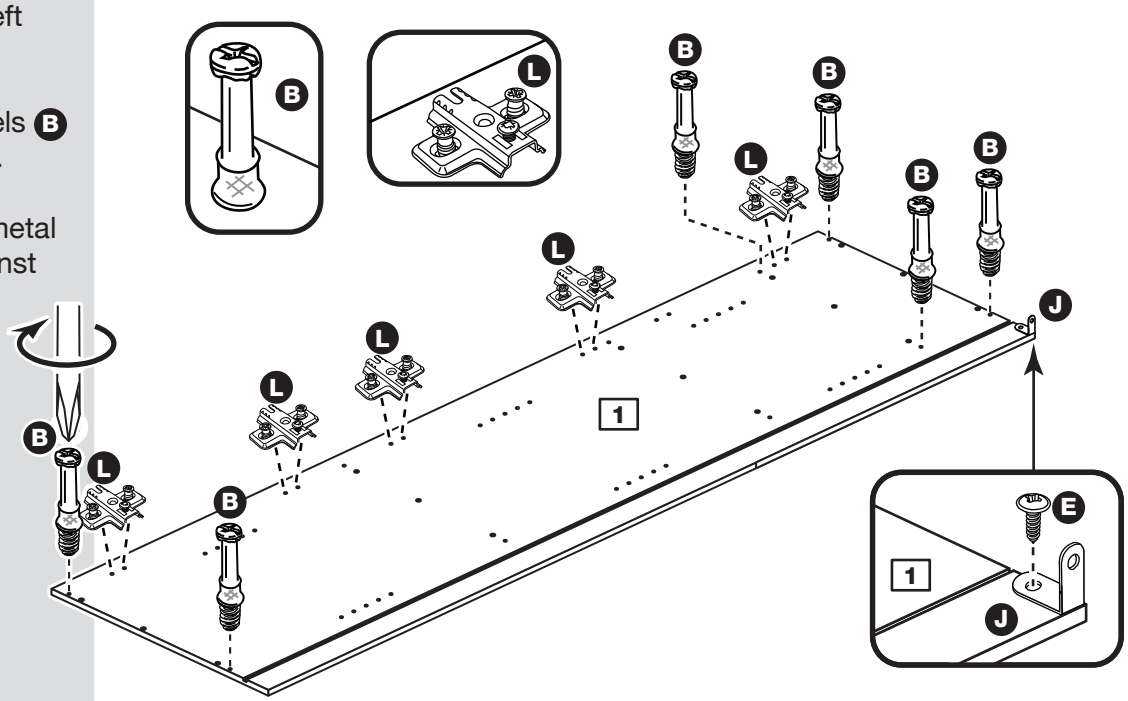


## Step 4

**Prepare the right side**

Refer to step 1 and, if required, fit 5 hinge plates L onto the right side 2, as shown.


Screw 6 metal dowels B into the holes shown on the right side 2.

Fit a bracket J to the right side 2, flush with the top edge and back edge, see diagram.

Secure the bracket J using screw E.

## IMPORTANT

**Only carry out this step if you are building a Larder Cupboard. If you are building a housing for a fridge/freezer go to Step 5.**

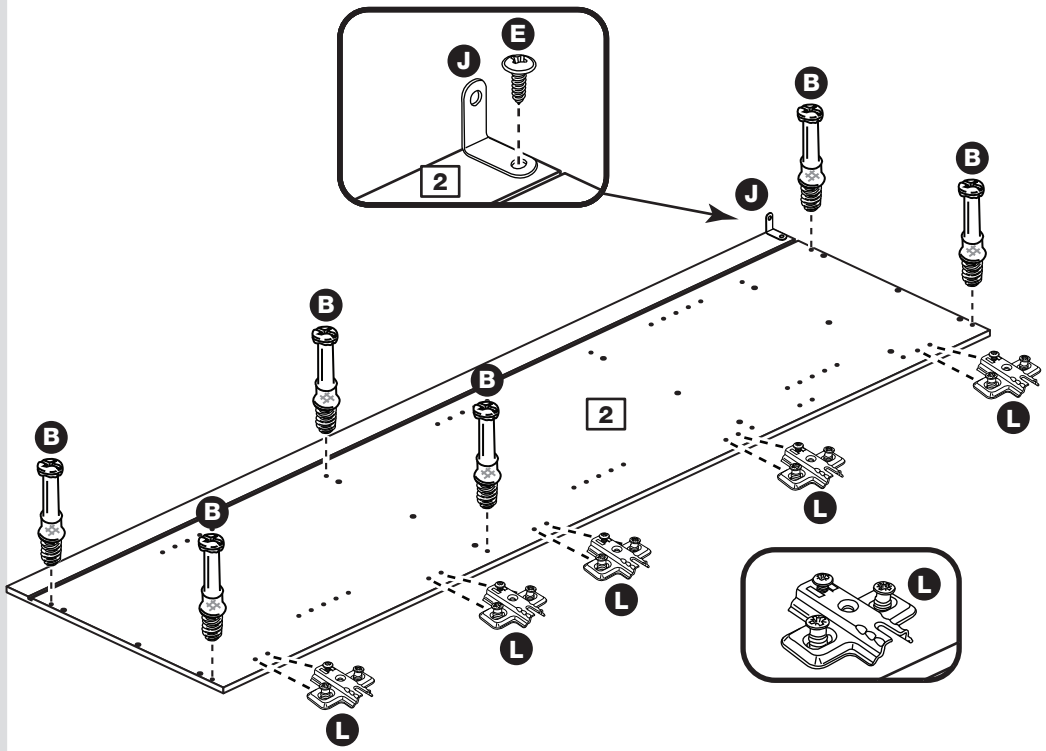

## Step 5

**Prepare the right side**

Refer to step 1 and, if required, fit 5 hinge plates L onto the right side 2, as shown.


Screw 6 metal dowels B into the holes shown on the right side 2.

Fit a bracket J to the right side 2, flush with the top edge and back edge, see diagram.

Secure the bracket J using screw E.

# IMPORTANT

**Only carry out this step if you are building a housing for a fridge/freezer. If you are building a Larder Cupboard you have already prepared this panel in Step 4.**

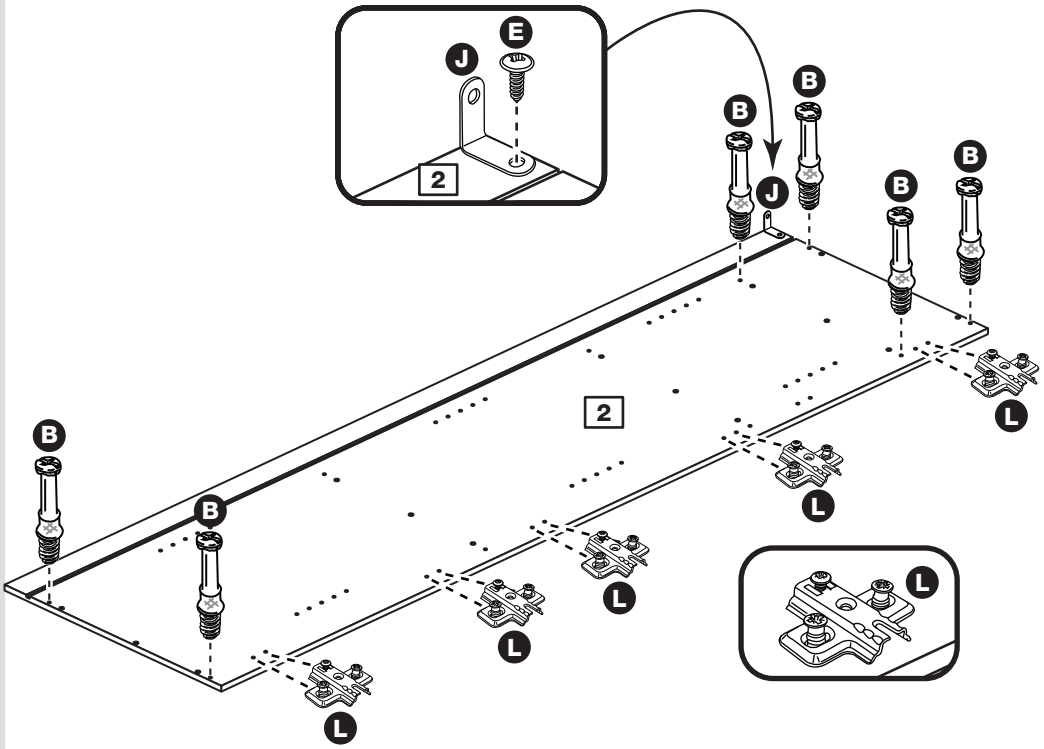


## Step 6


**Prepare the base and top**

Insert 4 large locking nuts C into the base 4 and top 4 as shown.

***Note:*** Arrow on locking nut **must** point towards hole in edge of panel.

Tap 4 wooden dowels A into the base 4 and top 4 as shown.

***Note:*** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

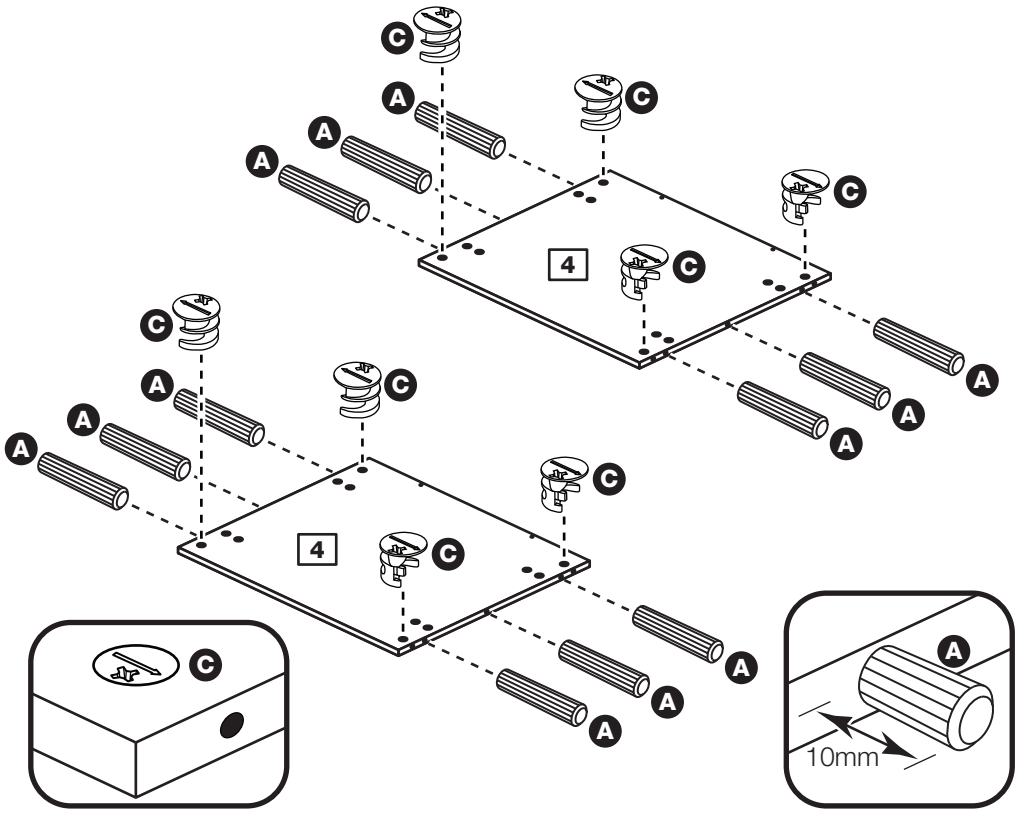

# Assembly Instructions

## Step 7


**Fit the legs to the base**

**a:** Push the leg sockets 1a into the holes in the base 4 as shown.


**b:** Secure each leg socket 1a with 3 screws 1e.

**c:** Tap in the centre plug on each leg socket 1a.


**d:** Push the leg 1b into the leg socket 1a.

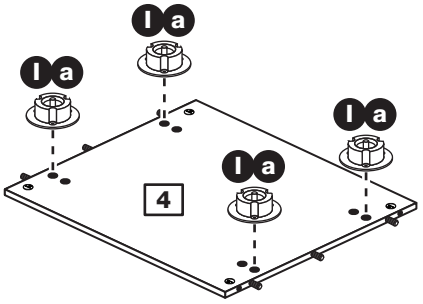



b:

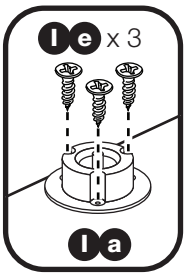


c:

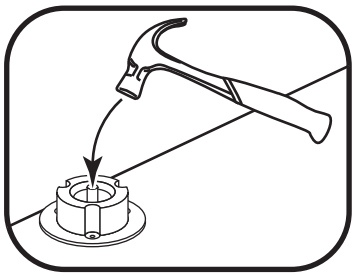

d:

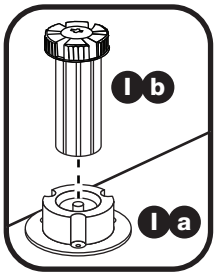



## Step 8

**Join the base and top to the right side**

Push the top 4 and base 4 onto the right side 2.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the top 4 and base 4.

***Note:*** Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

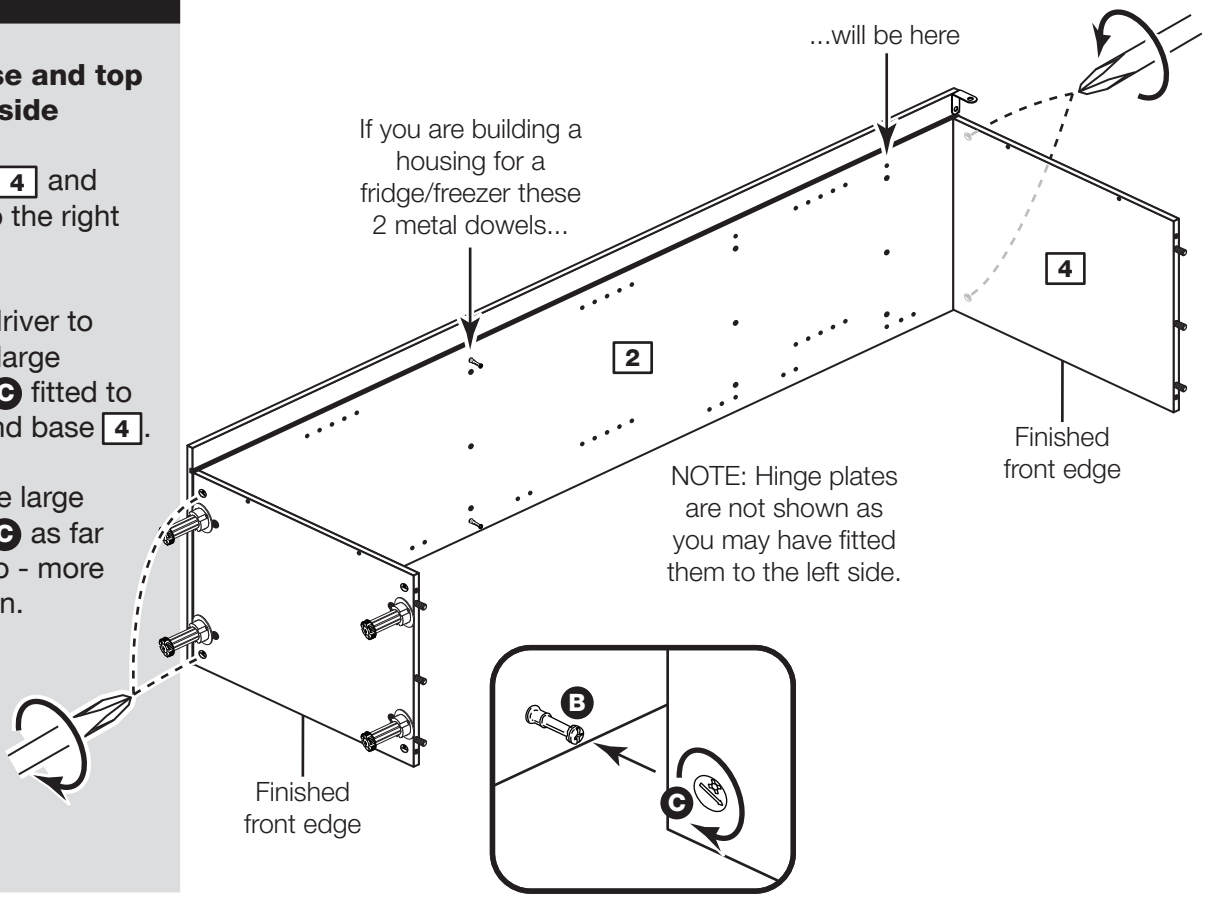

## Step 9


**Prepare the fixed shelf**

Insert 4 large locking nuts C into the fixed shelf 6 as shown.

***Note:*** Arrow on locking nut **must** point towards hole in edge of panel.

Tap 6 wooden dowels A into the fixed shelf 6.

***Note:*** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

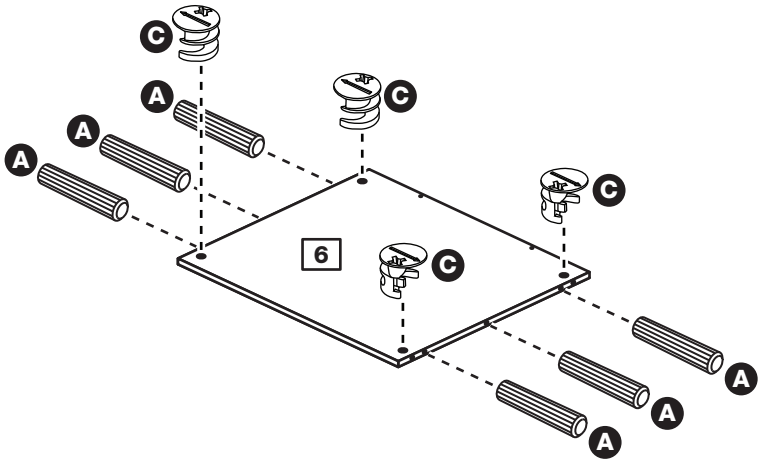



## Step 10

**Fit the fixed shelf**

Push the fixed shelf 6 onto the right side 2.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the fixed shelf 6.

***Note:*** Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

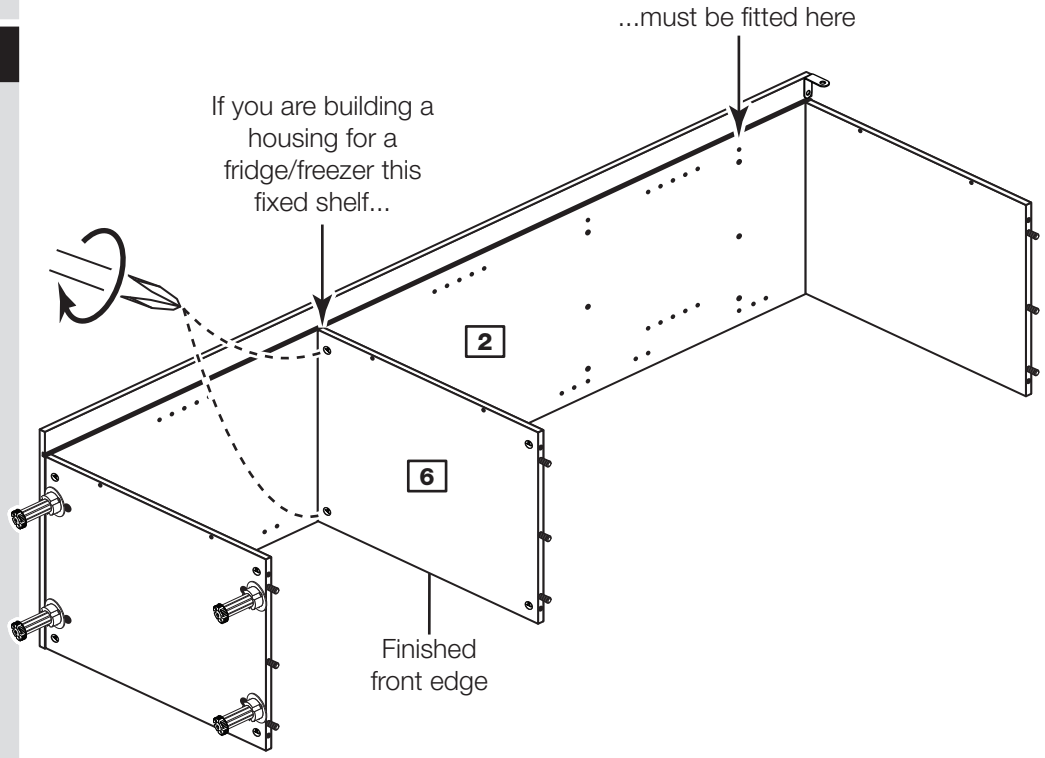


## Step 11

**Fit the small back**

Position the small back 9 between the top 4 and fixed shelf 6, as shown and secure it into position using 4 screws P.

**IMPORTANT**

**Only carry out this step if you are building a housing for a fridge/freezer. If you are building a Larder Cupboard please ignore this step.**

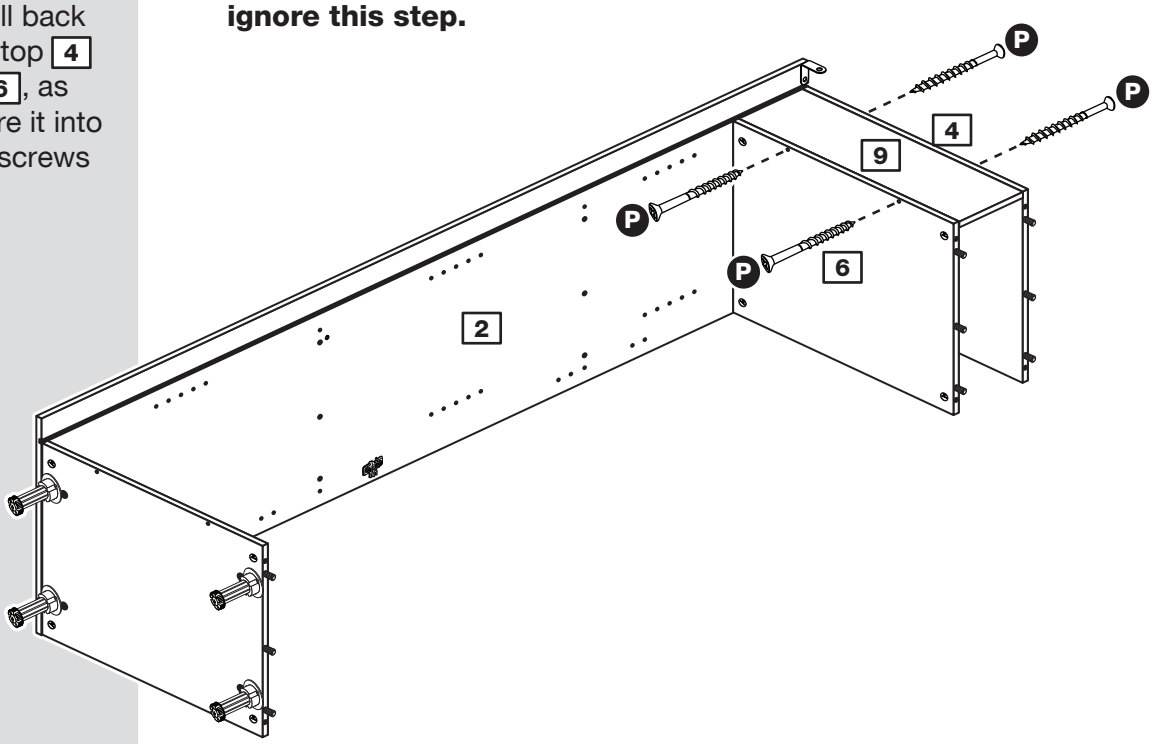



## Step 12

**Fit the left side**

Push the left side 1 onto the assembly.

Use a screwdriver to tighten the large locking nuts C fitted to the base 4, top 4 and fixed shelf 6.

***Note:*** Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

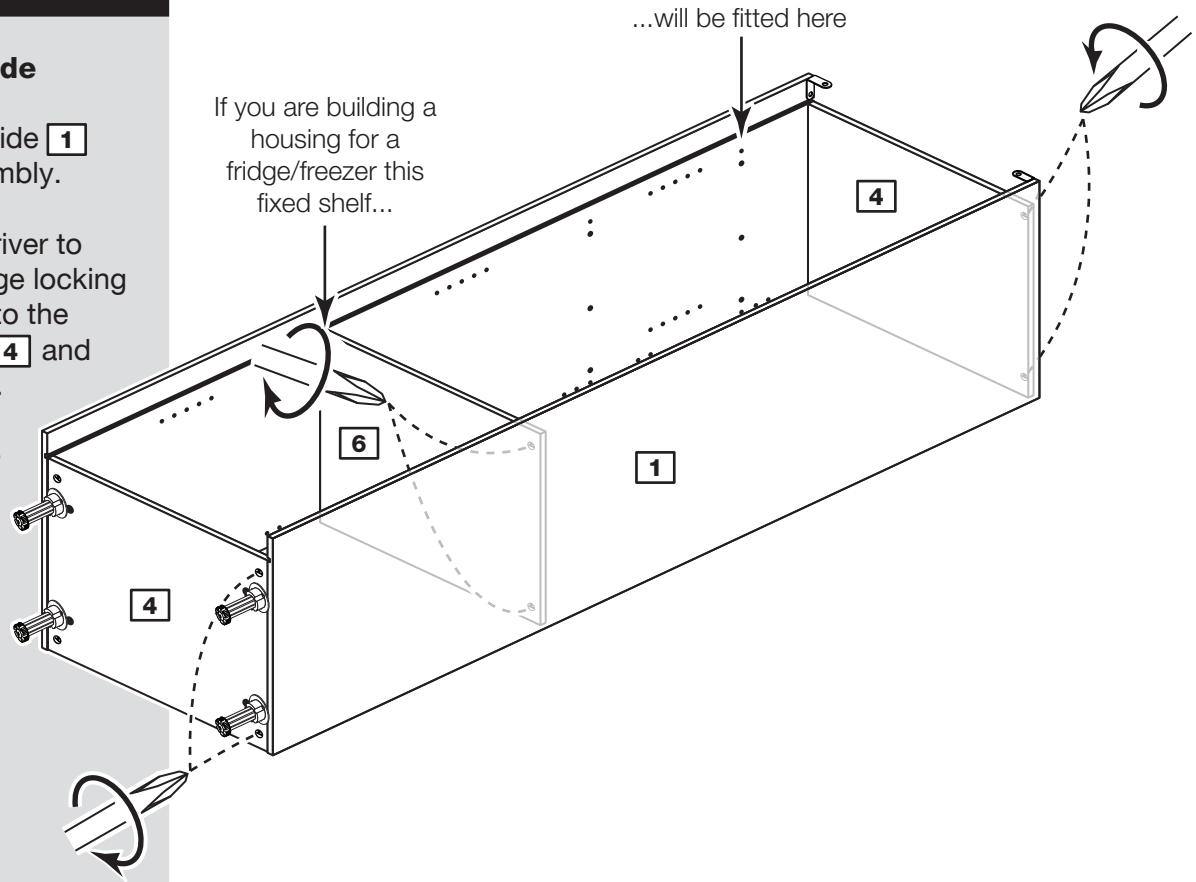

## Step 13


**Fit the back**

**a:** Slide the back [3] along the grooves in the side panels [1] and [2].

# IMPORTANT

**Only carry out this step if you are building a Larder Cupboard. If you are building a housing for a fridge/freezer please ignore this step.**

**a:**

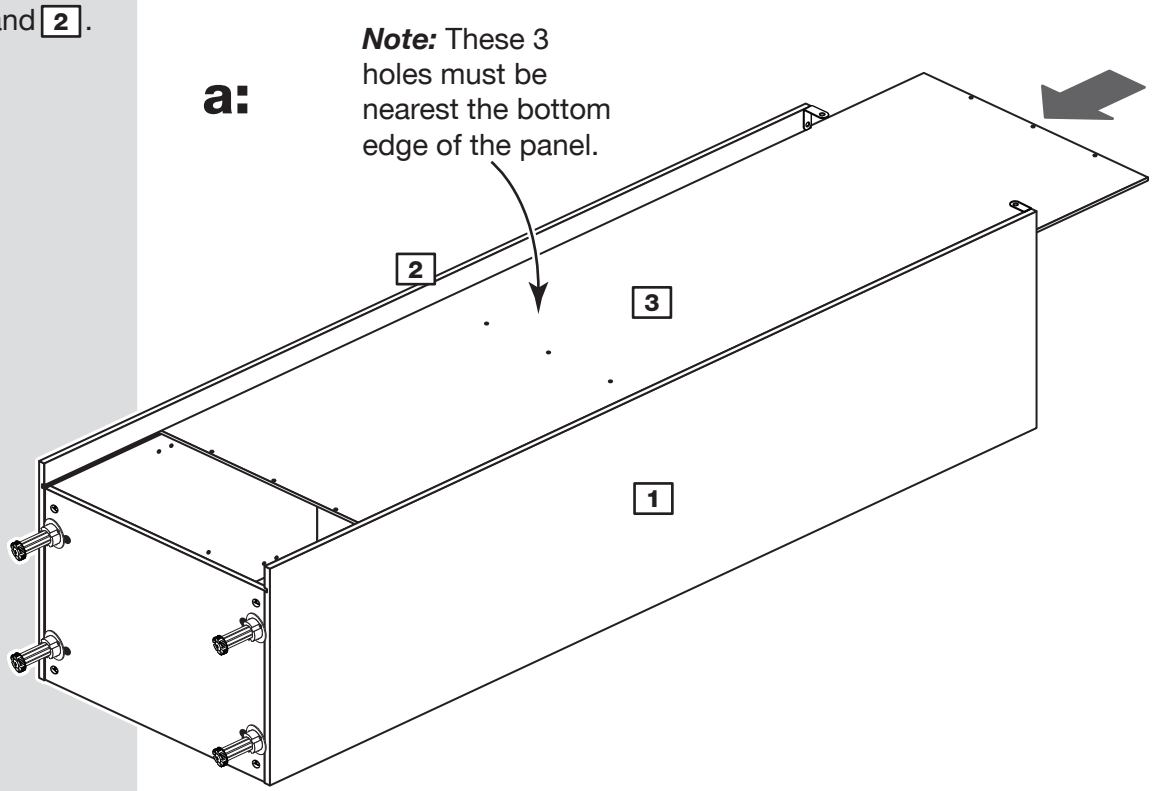



**b:** The bottom edge of the back [3] must be flush with the bottom edge of the base [4].

Secure the back [3] to the unit using 3 screws (F) into the back edge of the base [4], fixed shelf [6] and top [4].

**Stand the unit up for the next stage.**

**b:**

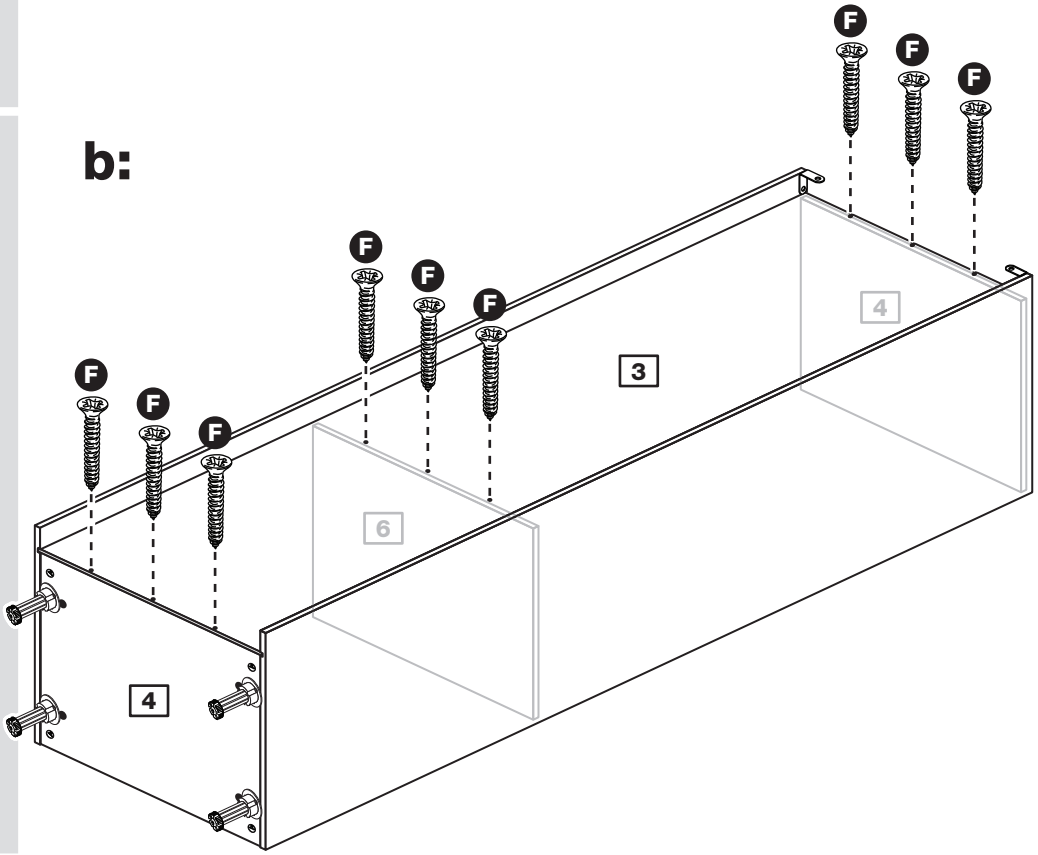


## Step 14

**Secure the unit to the wall**

Using the brackets F fitted to the back edge of the sides 1 and 2 screw the unit to the wall.

Fixings are not supplied as they will need to suit the wall type, and the length of screw will depend on the distance of the back of the Unit to the wall.

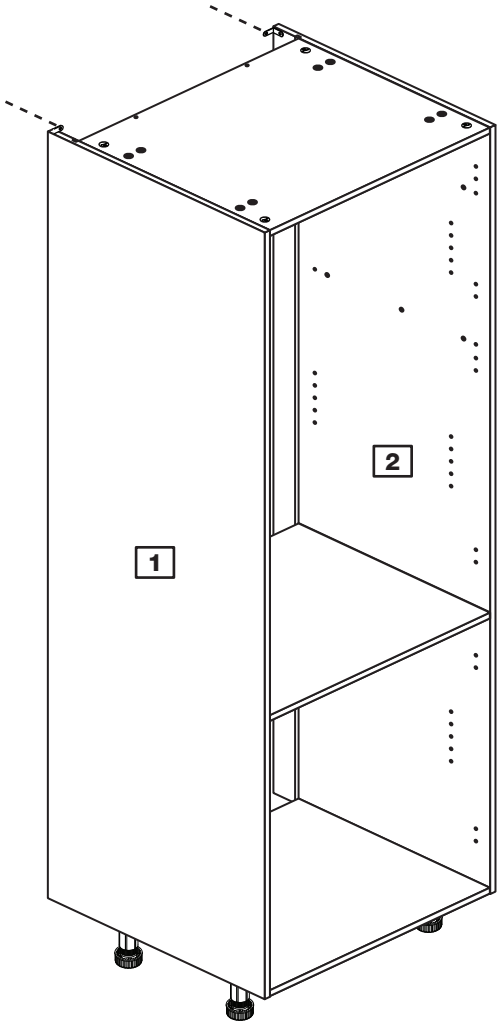


***Warning:*** Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

## Step 15

**Joining units together**

Fittings have been supplied so you are able to join units together.


Make sure that your first unit is level.


Push the other unit up against first unit and ensure both units are level.


Check that the ends are flush and in line, then clamp them together.

Using a 5mm drill bit, drill 2 holes (approximate positions shown circled) in the side panel into the adjoining side panel of the other unit.

Push the connecting sleeves G into the holes and then screw the connecting bolts H in from the other side.

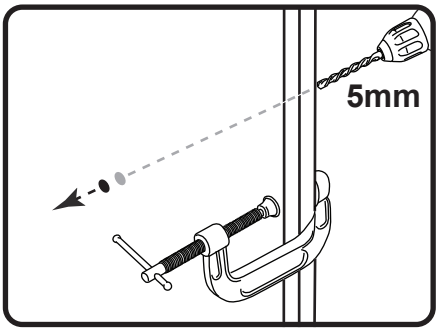
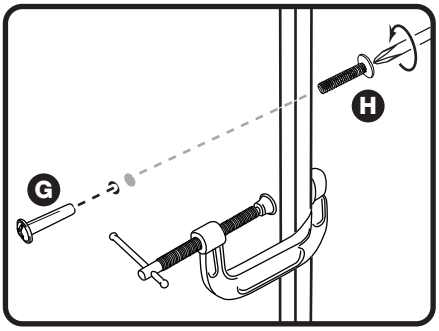
## Step 16

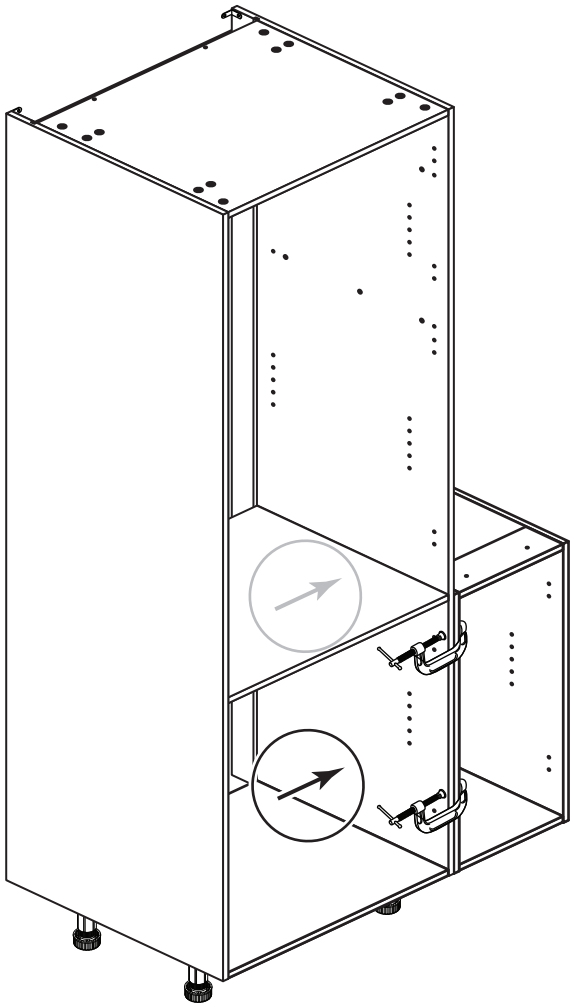
**Fit the loose shelves**

Insert 4 shelf studs (K) at the required height for each of the shelves [5].

Lower the loose shelves [5] down onto the shelf studs (K).

**IMPORTANT**

**Only carry out this step if you are building a Larder Cupboard. If you are building a housing for a fridge/freezer please ignore this step.**

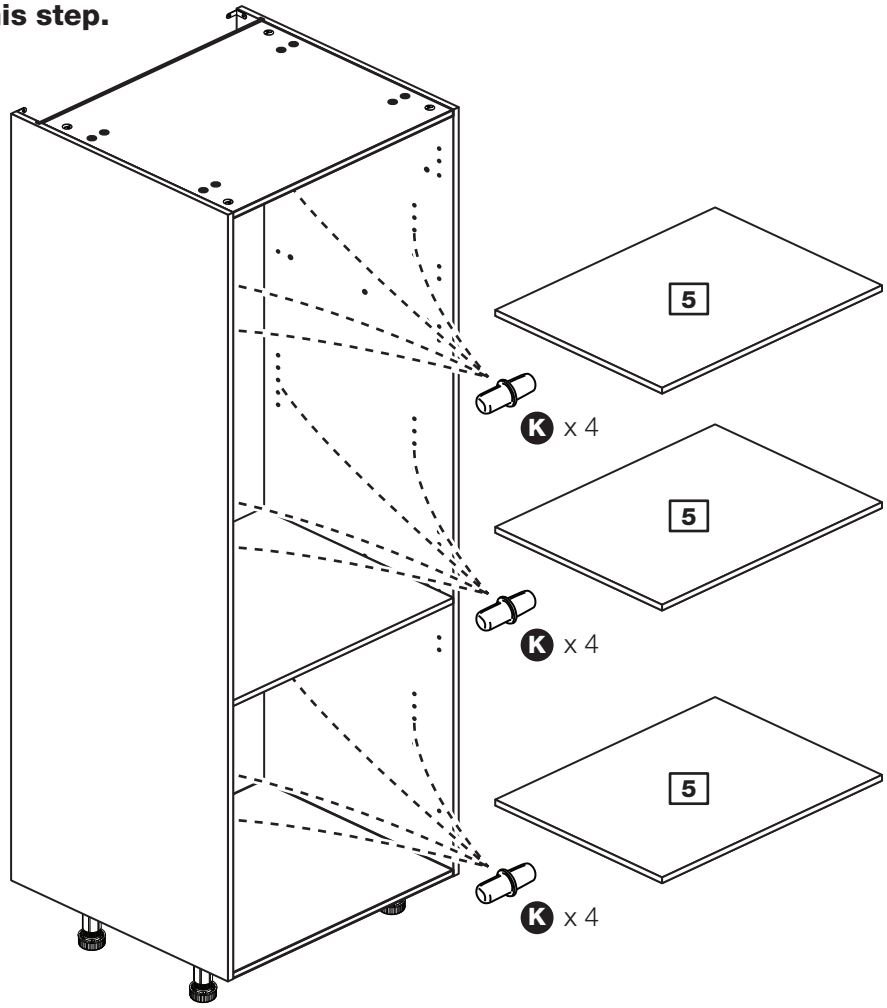



## Step 17

**Prepare the doors**

Push fit 2 hinges (M) into the door [7] and 3 hinges (M) into the larder door [8].

Secure each hinge (M) with 2 screws (D).

***Note:*** Before securing with the screws, make sure that the hinges are positioned at 90 degrees with the front edge of the door.

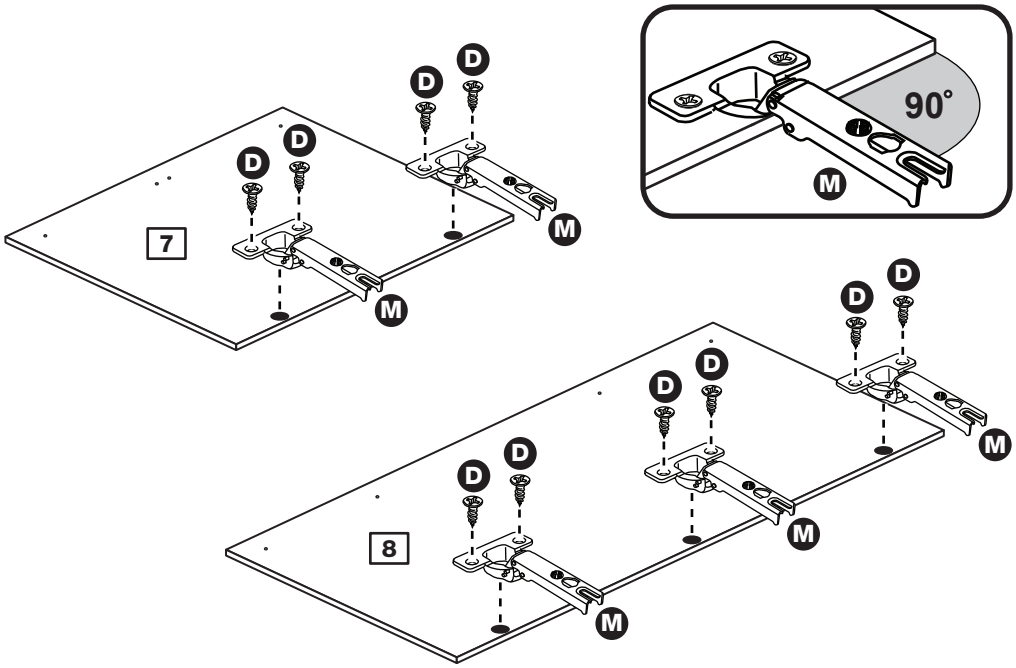

## Step 18

**Drill the handle holes in the door**

***Important:*** Please follow these instructions carefully.

Lay the doors 7 and 8 down onto a smooth surface.

***Important:*** Carefully choose which holes you need to drill.
This will depend on which side 1 or 2 you fitted the hinge plates L.

Check that the holes and hinges are in the same place as the diagrams.

Using the pilot hole in the rear face of the door, drill through the holes indicated opposite, using a 2.5mm diameter drill.

Turn the door over and open out the 2.5mm holes that you have just drilled by drilling back through them with a 5mm drill.

***Note:*** Drill bits are not provided.

Fit a soft close fitting N onto the 1 hinge shown on each door.
Push the hooks on the soft-close fitting into the holes on the hinge and then press down to click into place.

**PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY TO CHOOSE WHICH 2 HOLES YOU WILL NEED TO DRILL**


***Important***

**ONLY drill the 2 holes in each door shown here if you have fitted the hinges to the LEFT side.**





**If you have fitted the hinges on the RIGHT side, go to the next step.**


**ONLY drill these 2 holes** **DO NOT drill any other holes**

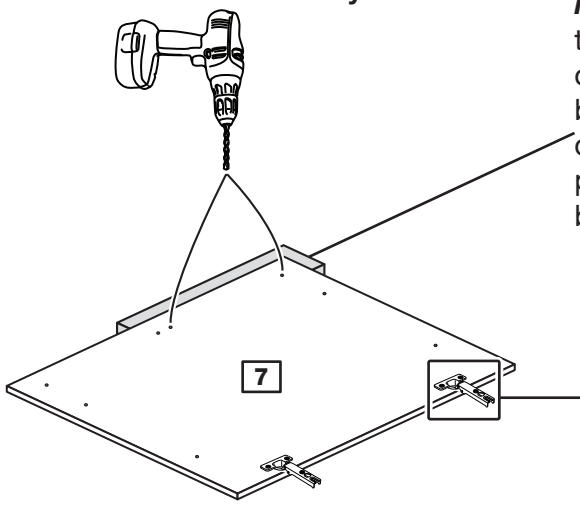



***Note:*** We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.

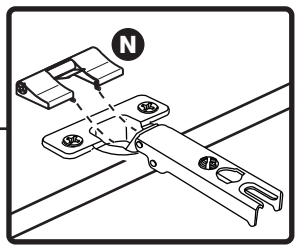


**ONLY drill these 2 holes** **DO NOT drill any other holes**

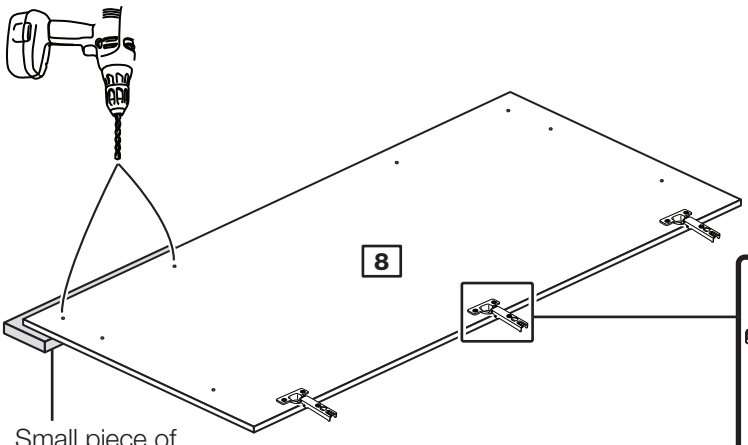


Small piece of waste wood

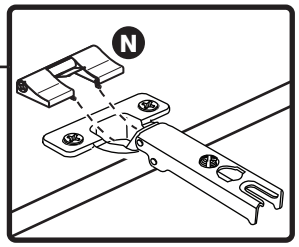

## Step 19

**Drill the handle holes in the door**

***Important:*** Please follow these instructions carefully.

Lay the doors 7 and 8 down onto a smooth surface.

***Important:*** Carefully choose which holes you need to drill.
This will depend on which side 1 or 2 you fitted the hinge plates L.

Check that the holes and hinges are in the same place as the diagrams.

Using the pilot hole in the rear face of the door, drill through the holes indicated opposite, using a 2.5mm diameter drill.

Turn the door over and open out the 2.5mm holes that you have just drilled by drilling back through them with a 5mm drill.


***Note:*** Drill bits are not provided.

Fit a soft close fitting N onto the 1 hinge shown on each door.
Push the hooks on the soft-close fitting into the holes on the hinge and then press down to click into place.

**PLEASE FOLLOW THESE INSTRUCTIONS CAREFULLY TO CHOOSE WHICH 2 HOLES YOU WILL NEED TO DRILL**


***Important***

**ONLY drill the 2 holes in each door shown here if you have fitted the hinges to the RIGHT side.**

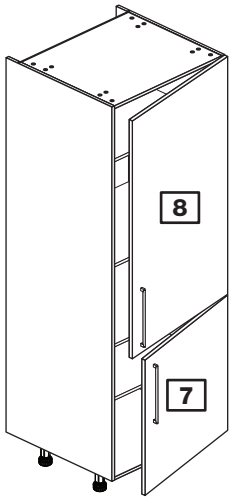



**If you have fitted the hinges on the LEFT side, go to the previous step.**


**ONLY drill these 2 holes** **DO NOT drill any other holes**

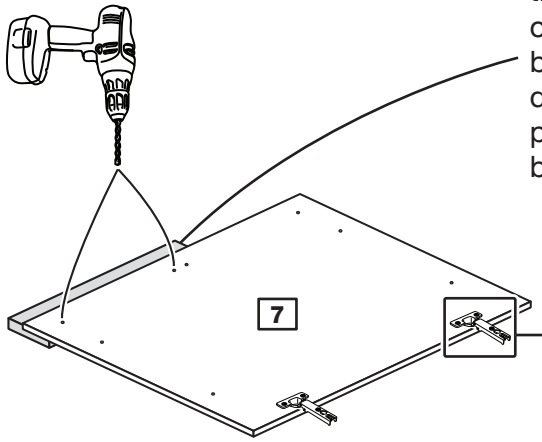



***Note:*** We recommend the use of a small piece of waste wood, placed behind the hole while drilling, to reduce the possibility of any breakout.

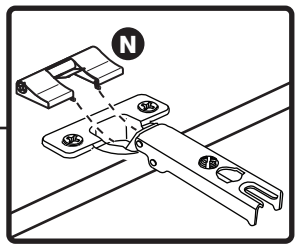


**ONLY drill these 2 holes** **DO NOT drill any other holes**

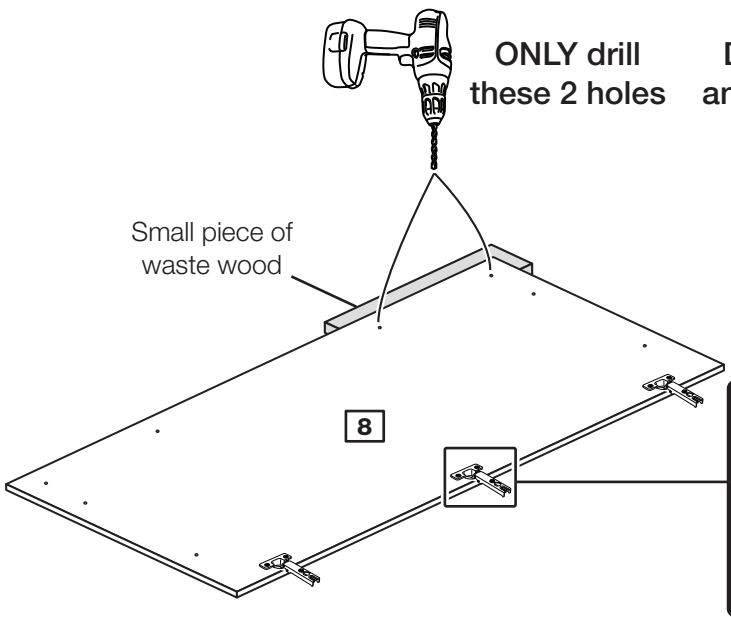
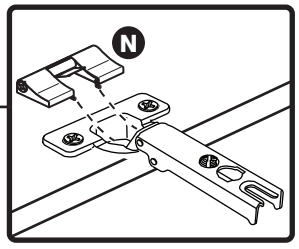
## Step 20

**Fit doors and handles**

***Note:*** The easiest way to attach each door [7] and [8] is to fit the top hinge first, then align and fit the other hinges.


**a:** Push the hinge (M) onto the front part of the hinge plate (L).
The recess at the bottom of screw B goes into the slot in the hinge plate.


**b:** Keep the hinge (M) FLAT against the hinge plate (L) as you slide it across as far as it will go. Tighten screw A.

**c:** The hinge (M) must be flat against the hinge plate (L) prior to any adjustment.

**d:** The hinge (M) must NOT be AT AN ANGLE to the hinge plate (L) when assembled.
This would indicate that the recess at the bottom of screw B had not located in the slot in the hinge plate and the hinge would not be secure.
Remove the hinge from the hinge plate and then re-assemble being careful to follow instructions a-c.

**e:** Attach a handle (Oa) to each door [7] and [8] using screws (Ob).

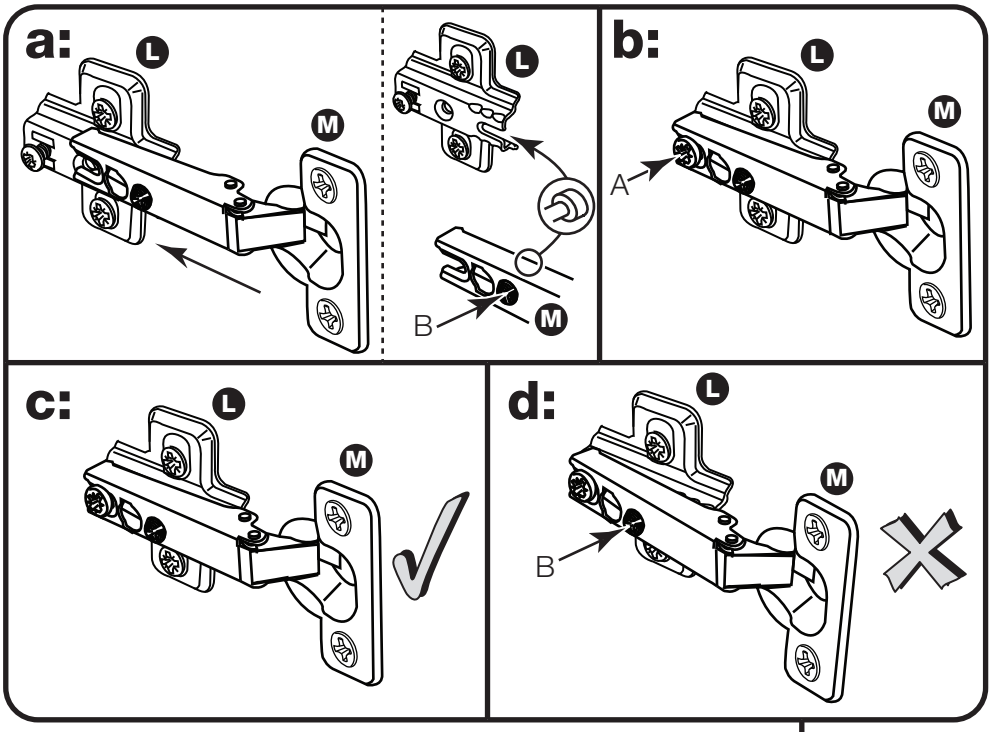

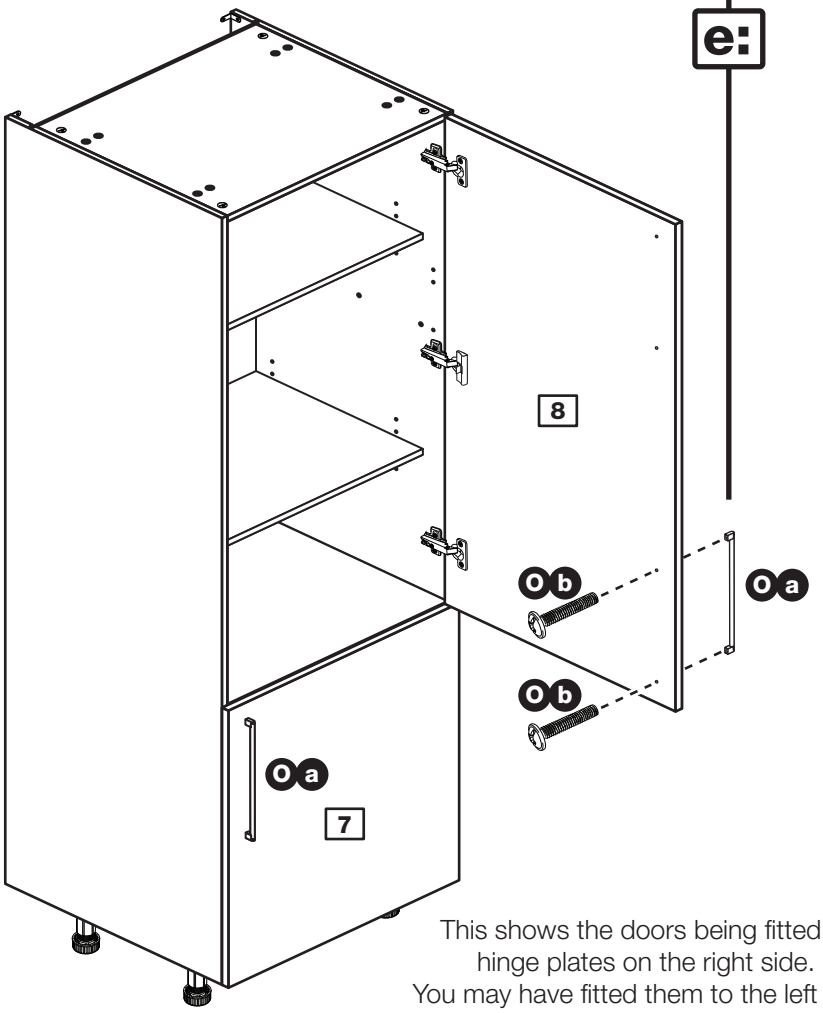
This shows the doors being fitted to hinge plates on the right side.
You may have fitted them to the left side.

## Step 21

**Adjust the doors if needed**


**a:** Before adjusting the doors, use a spirit level to check the base (or top) of the unit is level, front-to-back and side-to-side in the 3 positions shown.
Use suitable packing pieces (not supplied) to make the unit level BEFORE making any adjustment to the hinges, as shown.

**b: Height adjustment.**
Loosen screws A on hinge plates and move door up or down as required.
Retighten screw A.

**c: Forward and Back adjustment**.
Loosen screw B on hinge plate and move door in or out as required.
Retighten screw B.

**d: Sideways adjustment**.
To move door 'out' loosen screw C.
To move door 'in' tighten screw C.

**e: Soft close adjustment**.
To adjust the damping force on the soft-close fittings, turn towards the '+' to increase and towards the '-' to decrease.

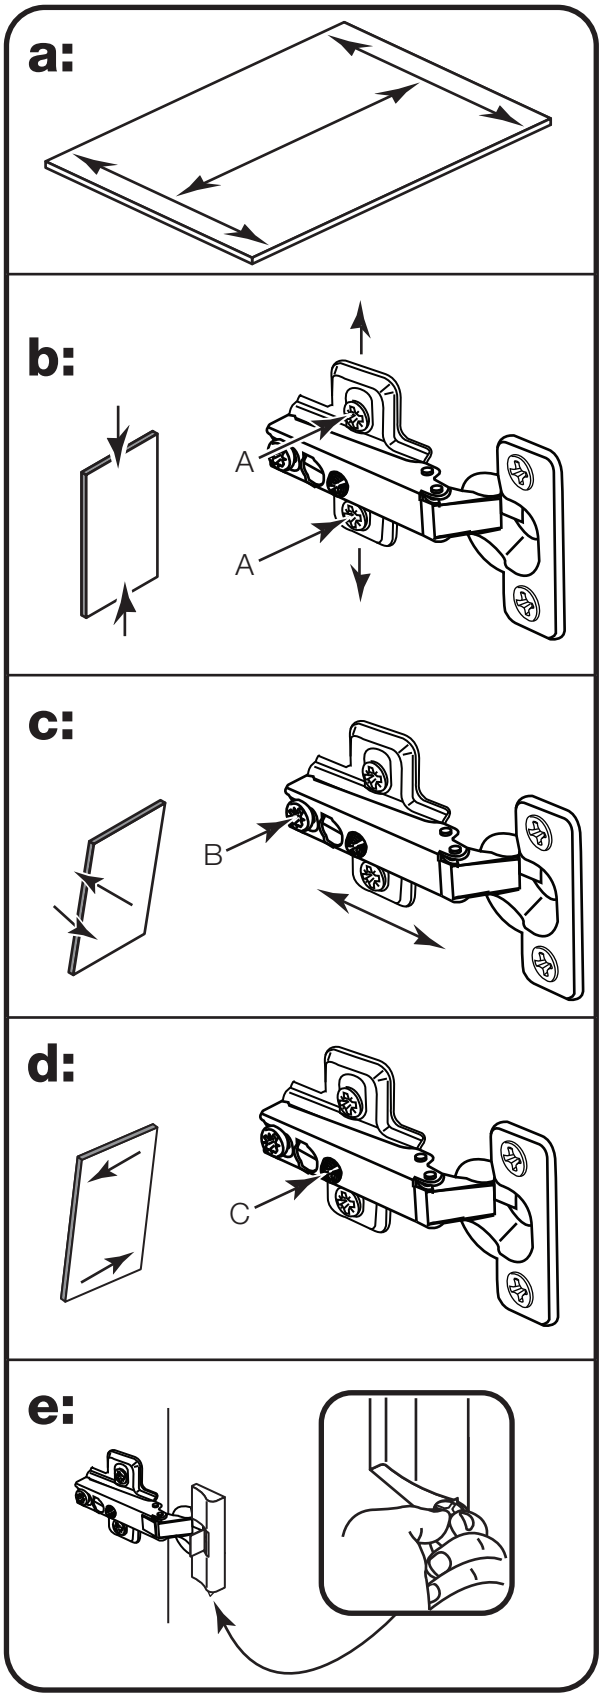

## Step 22

**Fit the plinth**

After cutting the plinth to the required length, offer the plinth up to the unit and using a pencil, mark the position of the unit's legs **1b** on the back of the plinth.


Position the leg bracket **1c** so it is in the centre of the pencil mark and half way up the plinth.


Fix the leg bracket **1c** to the back of the plinth using 2 screws **1e**.

Slide the leg clip **1d** into the leg bracket **1c**.

Offer the plinth up to the unit and push the leg clips **1d** onto the legs **1b**.

| | |
|---|---|
| Black Plinth Pack | 608/2345 |
| Cream Plinth Pack | 608/2369 |
| Oak Plinth Pack | 205/5668 |
| White Gloss Plinth Pack | 608/2352 |
| White HN Plinth Pack | 198/9917 |

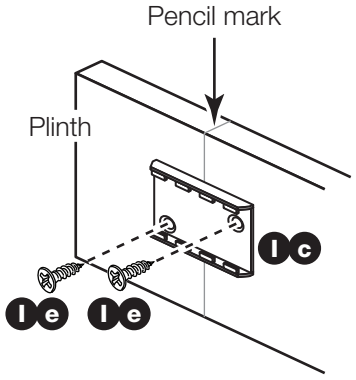
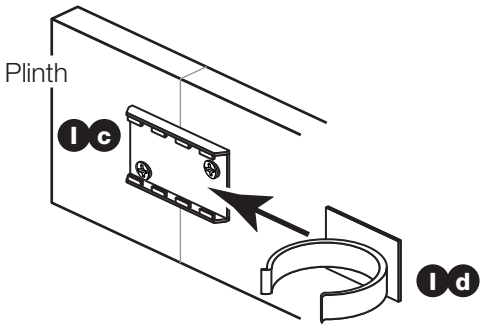
## Step 23

**Fit other products to the unit**


To fit other products to this unit e.g. worktops etc., please follow the instructions packed with them.

We recommend that you consult a qualified joiner or kitchen fitter.

***Note:*** Now the assembly has finished you can remove any protective film from the panels.

**Assembly is complete**

***Warning:*** The unit is heavy. Lift with care.

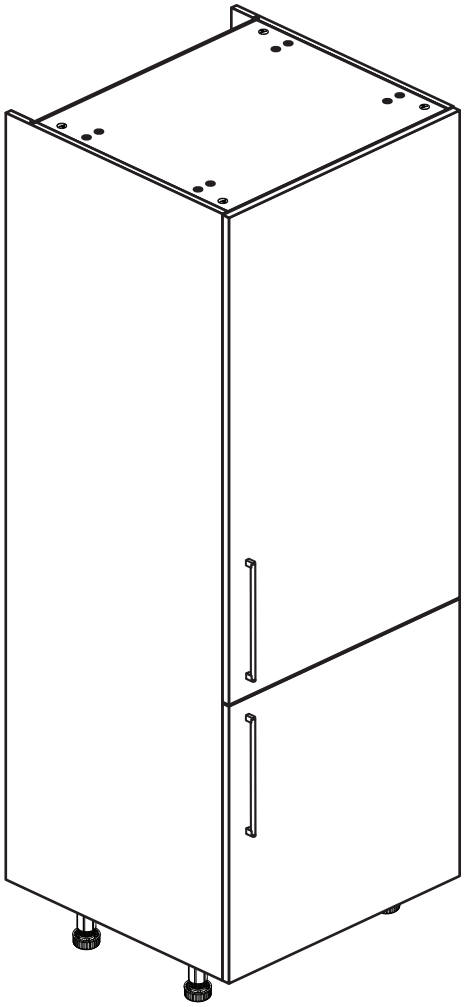

Please dispose of any unused panels and fittings carefully and responsibly.
They should not be discarded with household waste.
Take them to your local authority waste disposal centre.