
Osaka Dressing Table

Assembly Instructions - Please keep for future reference

White 2273237

Black 2281511

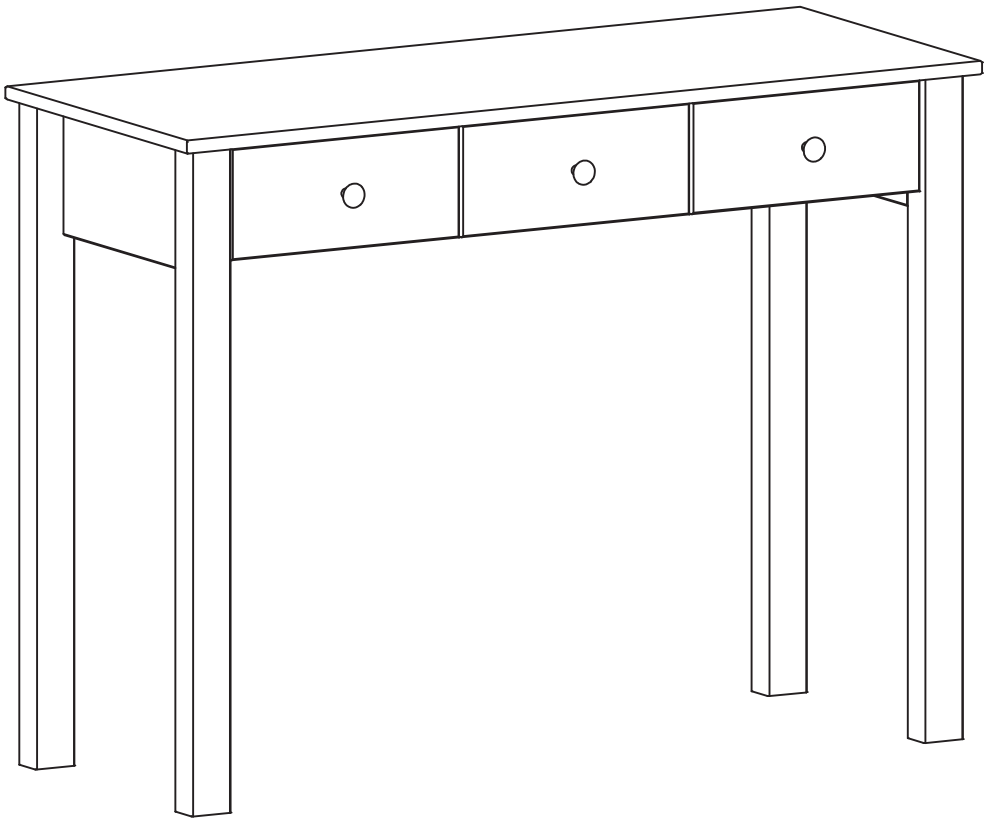

Dimensions

Width : 101.2 cm
Depth : 40.0 cm
Height: 76.0 cm

Assembly Instructions - Please keep for future reference

If you need help or have damaged or missing parts, call the **Argos Customer Helpline: 0845 640 30 30**

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Argos Customer Helpline: 0845 640 30 30**


Please check you have all the panels listed below

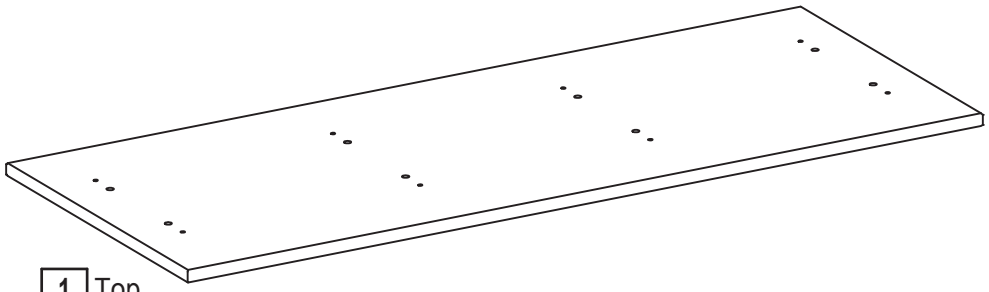


1 Top
(101,2 cm x 40 cm)

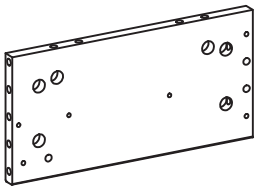

2 Side, left
(15 cm x 30,6 cm)

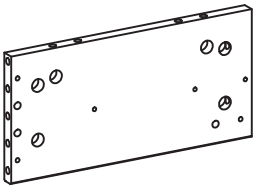


3 Side, right
(15 cm x 30,6 cm)




4 Leg, left x 2
(74,5 cm x 5,0 cm)




5 Leg, right x 2
(74,5 cm x 5,0 cm)

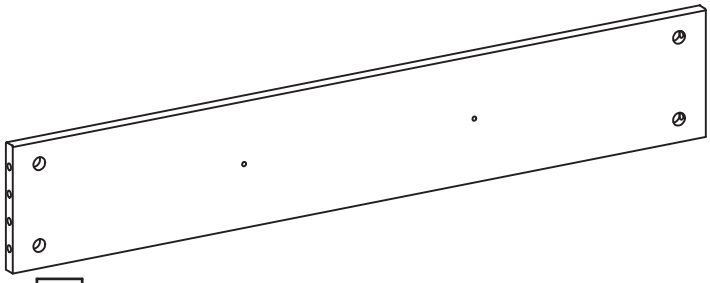


6 Back rail
(88,2 cm x 15 cm)

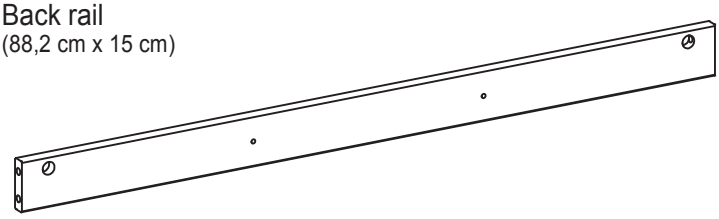


7 Front rail
(88,2 cm x 6 cm)

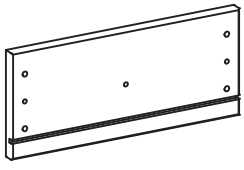


8 Drawerfront x 3
(29,0 cm x 12,5 cm)

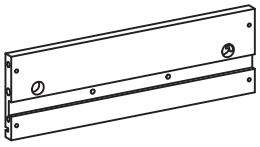


9 Drawer side, right/left x 6
(31 cm x 9,8 cm)

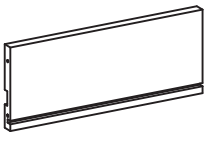

10 Drawer back x 3
(24,5 cm x 9,8 cm)

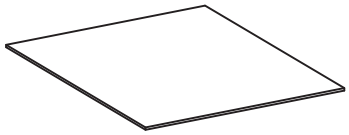

11 Drawer bottom x 3
(25,3 cm x 30,7 cm)




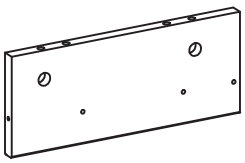


12 Divider x 2
(11,9 cm x 29,1 cm)

Components - Fittings

Please check you have all the panels listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

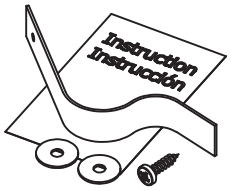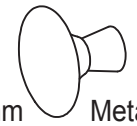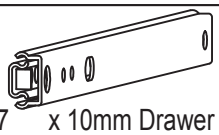Aa  ø8 x 40mm Wooden dowel x 26	**Ab**  ø6 x 30mm Wooden dowel x 12	**Bp**  ø3 x 35mm Screw x 12
Ca  ø15 x 10.5mm Cam x 28	**Cp**  ø5 x 11, cc34mm Bolt x 28	**Dj**  ø5 x 38mm Screw x 4
Fh  Wall strap and instruction x 1	**Fi**  Back fitting w. ø3.5 x 15mm Screw x 6	**Ge**  ø27 x 24mm Metal Knob x 3
	Hd  M4 x 20mm Screw x 3	**Hk**  M4 x 9mm Screw x 6
Kb  ø5.8 x 8mm Screw x 8	**Kf**  ø5.8 x 19mm Screw x6	**Nu**  ø10 x 9mm Spacer x 6
Sk  245 x 17 x 10mm Drawer runner x 12		

Tools required



Phillips screwdriver
(Medium & large)




Hammer



Flatblade screwdriver
(Medium)


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

Assembly of the table.

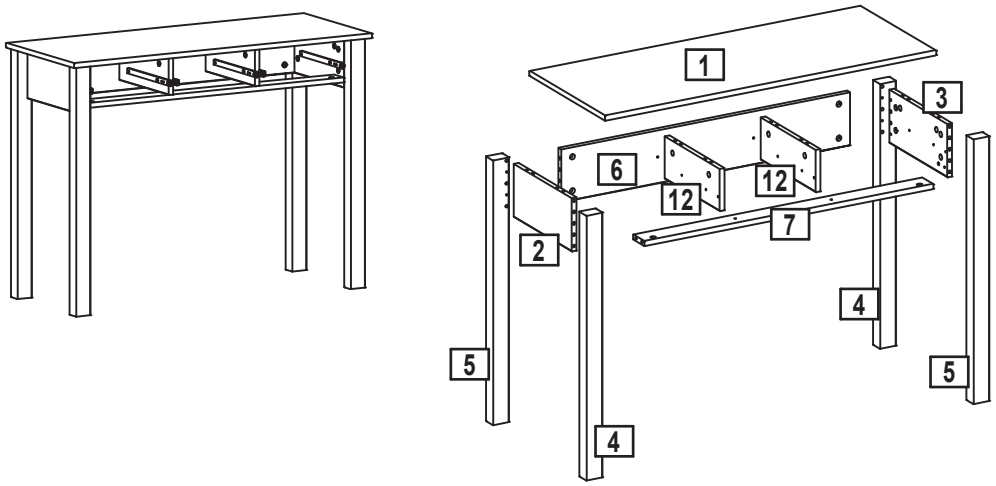

Step 1.1

Knock the dowels Aa into the holes indicated on the sides 2 and 3 using a small hammer.

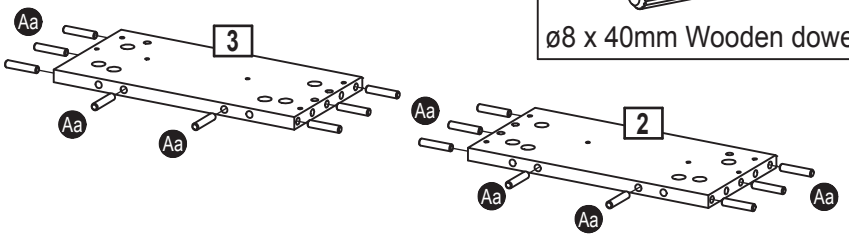


Aa



ø8 x 40mm Wooden dowel x 16

Step 1.2

Screw the bolts Cb into the holes indicated on the legs 4 and 5.

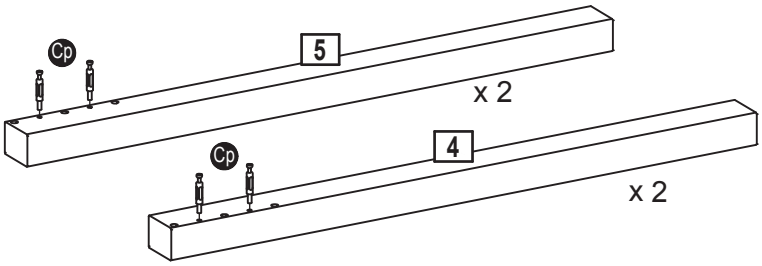

Cp



ø5 x 11, cc34mm Bolt x 8

Step 1.3

Place the legs 4 and 5 onto the sides 2 and 3.


Push cams Ca into the holes indicated on the sides 2 and 3. Arrows pointing towards the legs 4/5.

Turn the cams Ca to the right to fix the legs 4 and 5.

Ca



ø15 x 10.5mm Cam x 8

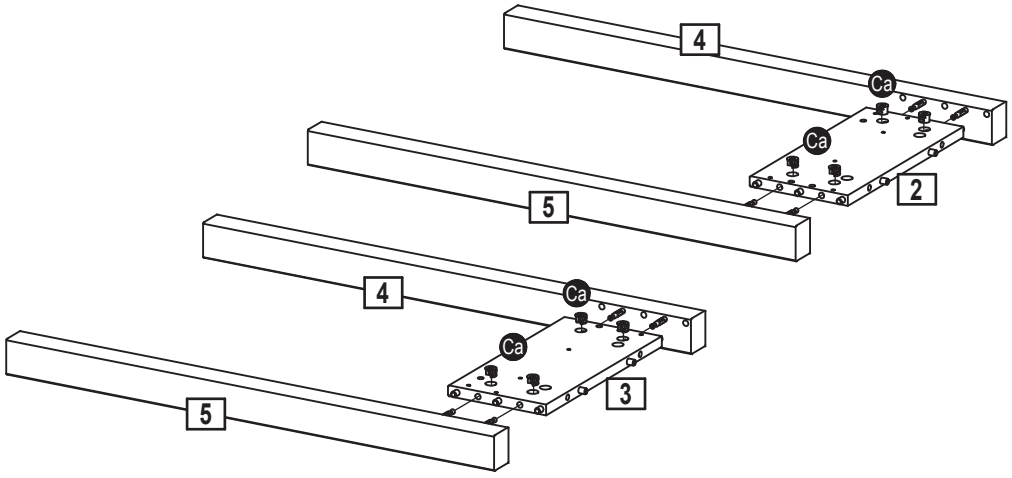


Assembly Instructions


Step 1.4

Screw the bolts Cb into the holes indicated on the sides 2 and 3.

Cp



ø5 x 11, cc34mm Bolt x 6

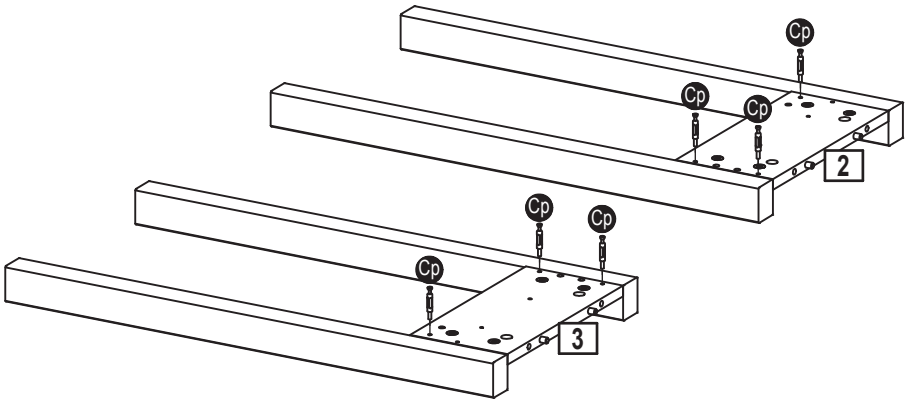

Step 1.5

Slide the top of the drawer runners Sk backwards. You can identify the front end of the drawer runner Sk by the two M4 holes. See details.

Place the Spacers Nu as shown, and fix the front end of the drawer runners Sk to the sides 2 and 3 using screws Kf through the holes number 2 and 8 as indicated.

See details.

Nu




ø10 x 9mm Spacer x 4

Kf



ø5.8 x 19mm Screw x4


Sk

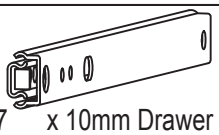


245 x 17 x 10mm Drawer runner x 2





Front end

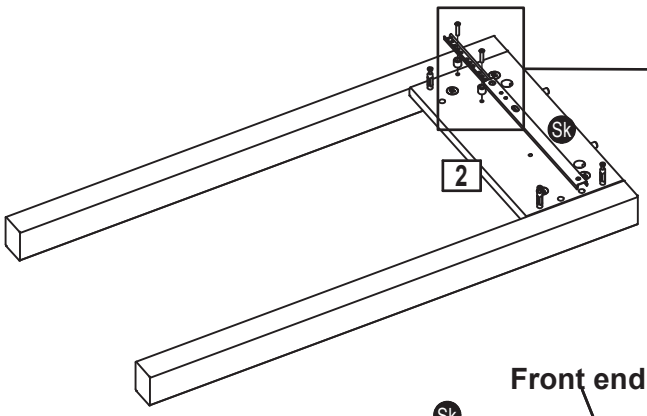

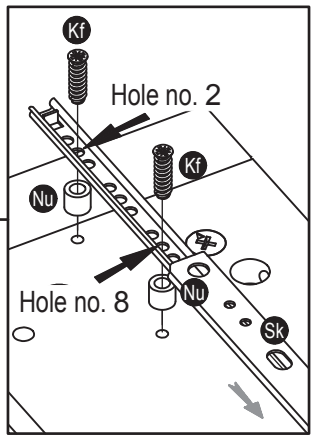

Front end

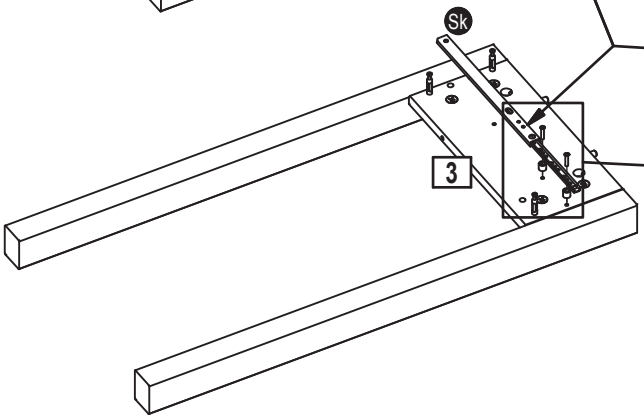

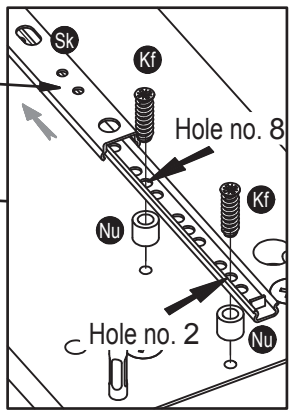

Assembly Instructions


Step 1.6

Slide the top of the drawer runners Sk forwards.

Place the Spacers Nu as shown, and fix the back end of the drawer runners Sk to the sides 2 and 3 using screws Kf through the holes indicated.

See details.


Kf	Nu
ø5.8 x 19mm Screw x2	ø10 x 9mm Spacer x 2

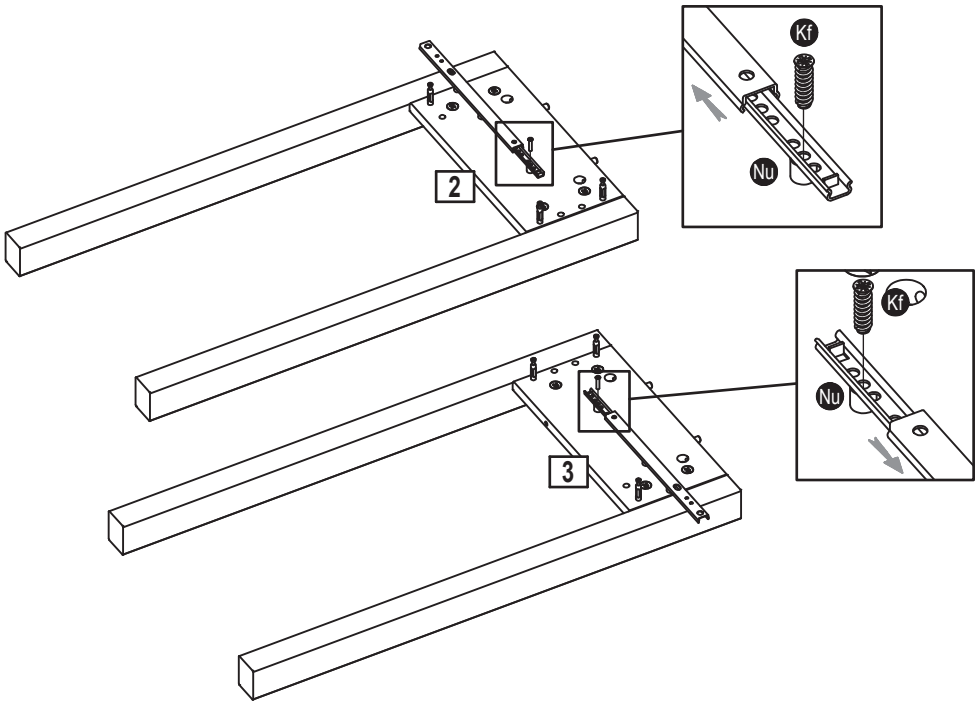

Step 1.7

Knock the dowels Aa into the holes indicated on the back rail 6 and the front rail 7 using a small hammer.


Aa
ø8 x 40mm Wooden dowel x 6

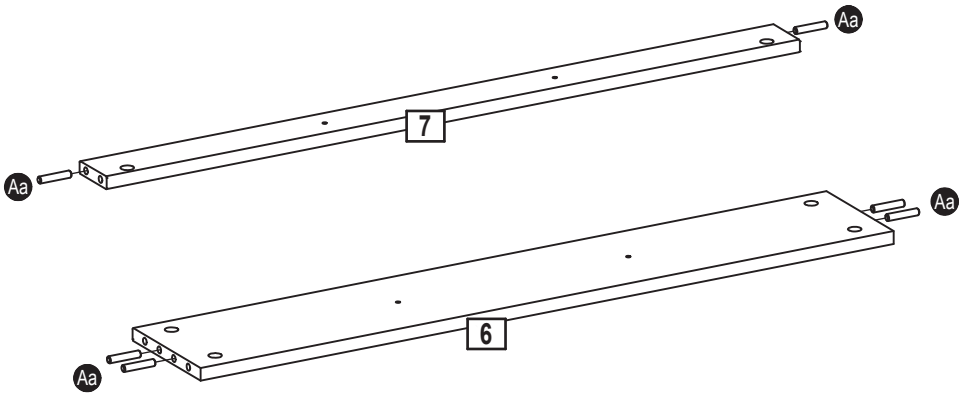

Step 1.8

Knock the dowels Aa into the holes indicated on the dividers 12 using a small hammer.

Aa
ø8 x 40mm Wooden dowel x 4

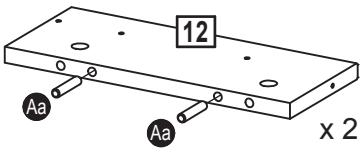

Assembly Instructions


Step 1.9

Slide the top of the drawer runner Sk backwards. Identify the front end of the drawer runner Sk by the two M4 holes.

Fix the front end of the drawer runner Sk to the dividers 12 using screws Kb through the holes number 2 and 8 as indicated.

Kb ø5.8 x 8mm Screw x 4

Sk 245 x 17 x 10mm Drawer runner x 2

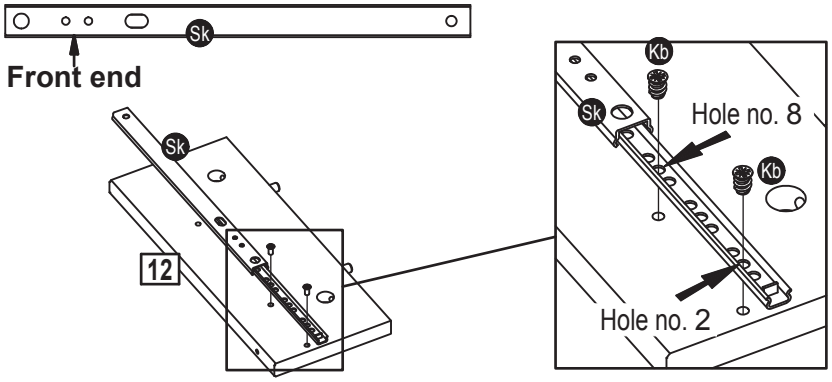


Step 1.10

Slide the top of the drawer runner Sk forwards.

Fix the back end of the drawer runner Sk to the dividers 12 using screw Kb through the hole indicated.

Kb ø5.8 x 8mm Screw x 2

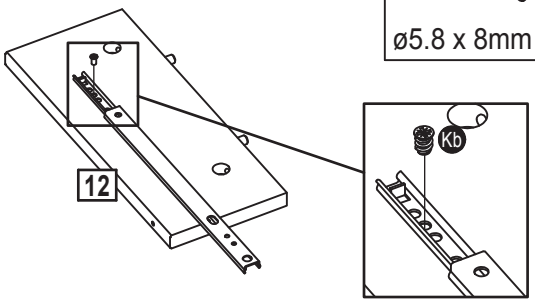

Step 1.11


Turn the dividers 12 upside down.

Slide the top of the drawer runner Sk forwards.

Fix the front end of the drawer runner Sk to the dividers 12 using screws Kb through the holes number 2 and 8 as indicated.

Kb ø5.8 x 8mm Screw x 4

Sk 245 x 17 x 10mm Drawer runner x 2

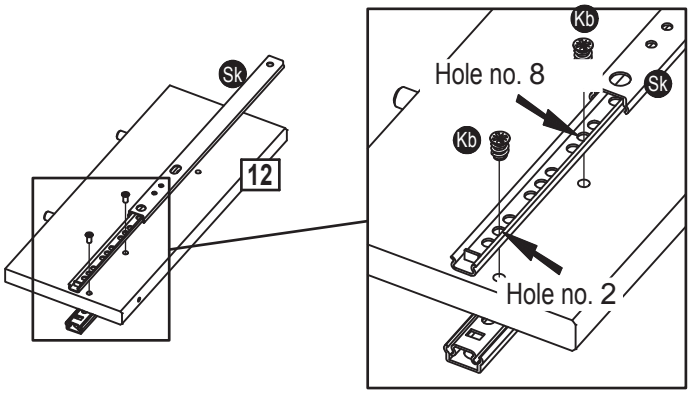


Step 1.12

Slide the top of the drawer runner Sk forwards.

Fix the back end of the drawer runner Sk to the dividers 12 using screw Kb through the hole indicated.

Kb ø5.8 x 8mm Screw x 2

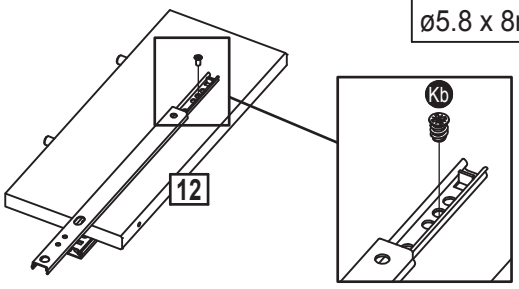


Assembly Instructions


Step 1.13

Screw the bolts Cb into the holes indicated on the top 1.

Cp



ø5 x 11, cc34mm Bolt x 8

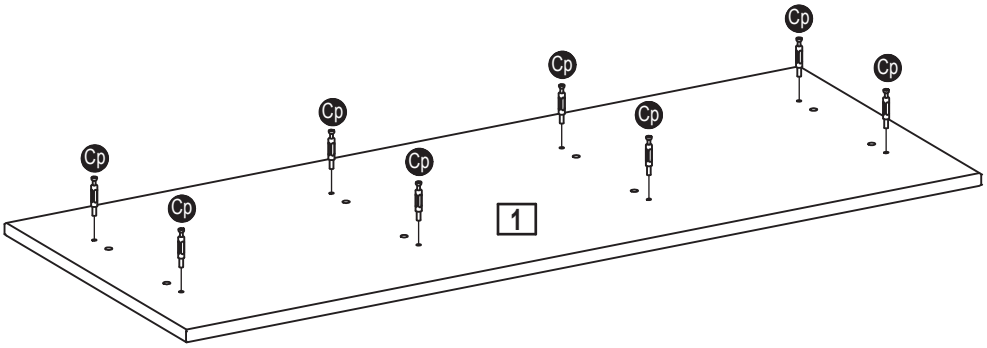

Step 1.14

Place the dividers 12 onto the top 1.


Push cams Ca into the holes indicated on the dividers 12 , arrows pointing towards the top 1.


Turn the cams Ca to the right to fix the dividers 12.

Ca



ø15 x 10.5mm Cam x 4

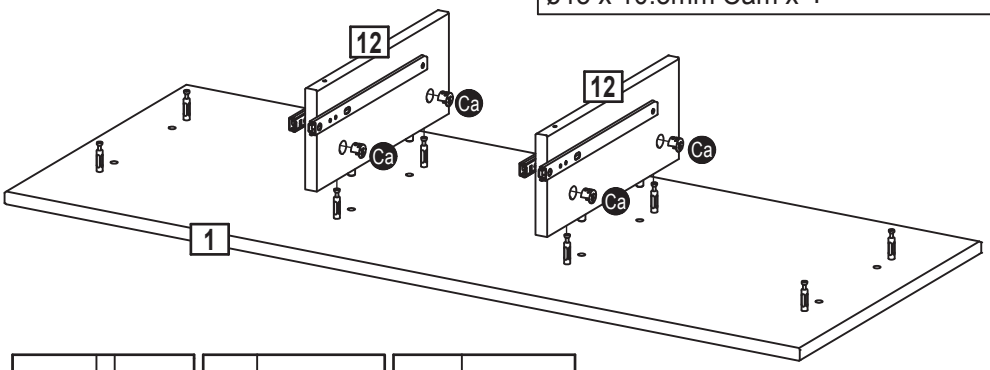

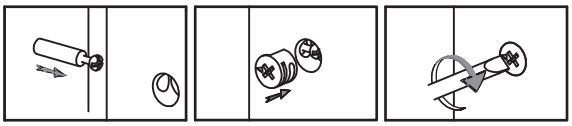

Step 1.15

Place the sides 2 and 3 onto the back rail 6 and the front rail 7.


Push cams Ca into the holes indicated on the back rail 6 and the front rail 7.
Arrows pointing towards the sides 2/3.

Turn the cams Ca to the right to fix the sides 2 and 3.

Ca



ø15 x 10.5mm Cam x 6

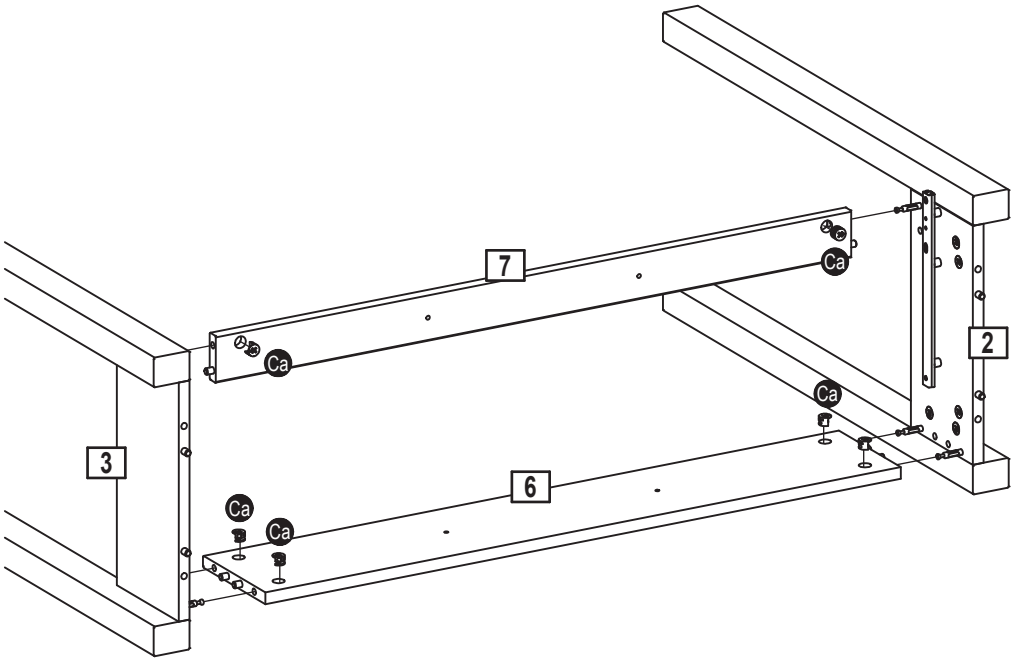

Assembly Instructions

Step 1.16

Place the sides 2 and 3 onto the top 1.


Push cams Ca into the holes indicated on the sides 2 and 3. Arrows pointing towards the top 1.

Turn the cams Ca to the right to fix the top 1.

Ca



ø15 x 10.5mm Cam x 4

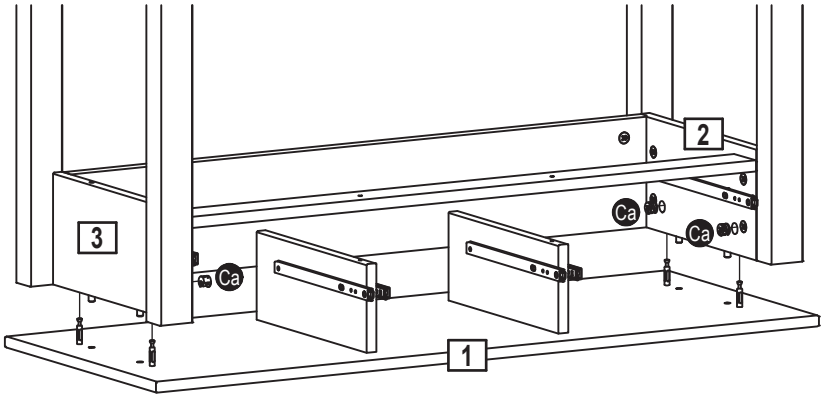


Step 1.17

Fix the back rail 6 and the front rail 7 to the dividers 12 as shown, using screws Dj.

Dj



ø5 x 38mm Screw x 4

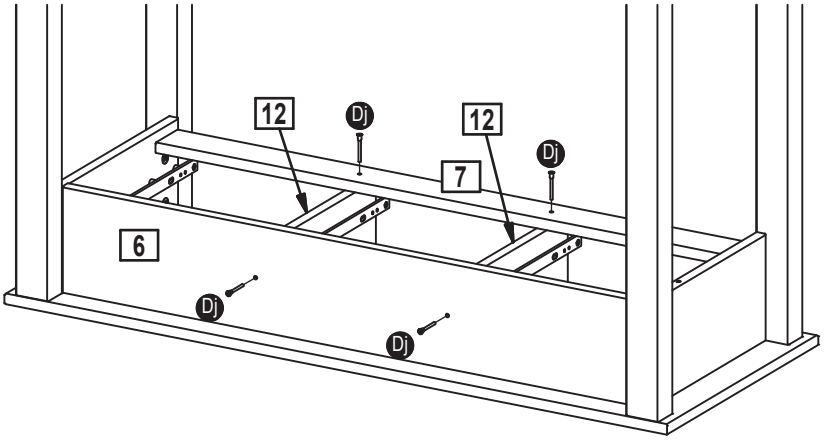


Step 1.18

Important!
The dressing table is heavy.
Lift with care.


Its recommended that the dressing table is fixed to the wall.

Use the fittings Fh. Follow the instructions included with the fittings.

Fh

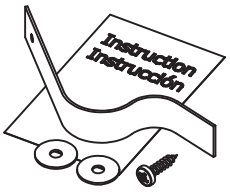


Wall strap and instruction x 1

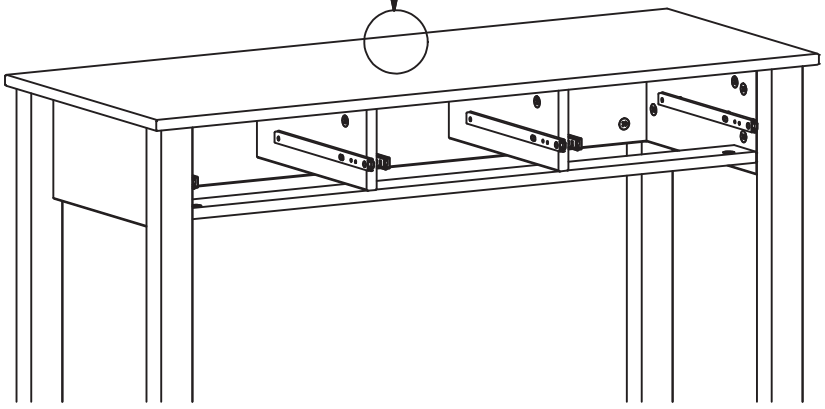


Assembly Instructions

Step 2

Assembly of the drawers.

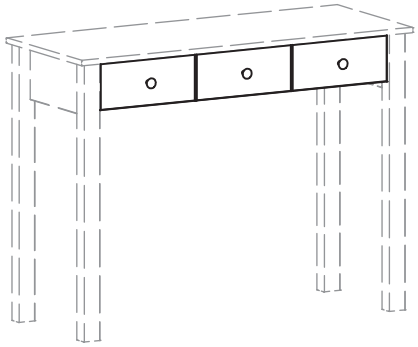

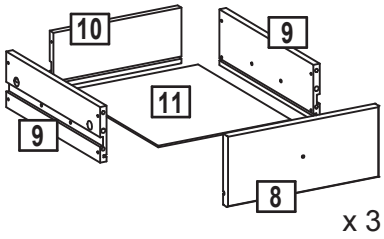

x 3


Step 2.1

Fix the drawer sides 9 to the drawer back 10 as shown, using screws Bp.

Bp



ø3 x 35mm Screw x 12

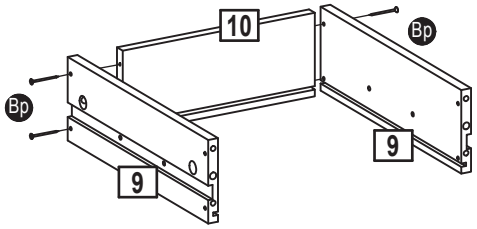

x 3


Step 2.2

Knock the dowels Ab into the holes indicated on the drawer sides 9 using a smal hammer.

Ab




ø6 x 30mm Wooden dowel x 12

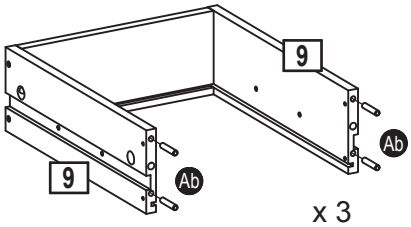

x 3

Step 2.3

Slide the drawer bottom 11 into the drawer sides 9.

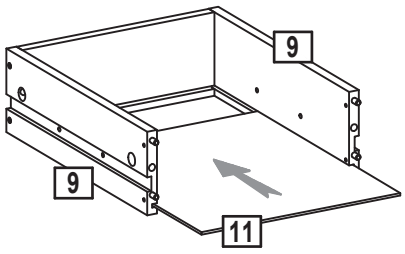

x 3


Step 2.4

Screw the bolts Cb into the holes indicated on the drawer front 8.

Cp



ø5 x 11, cc34mm Bolt x 6

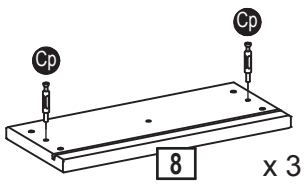

x 3

Assembly Instructions

Step 2.5


Push the drawer front 8 onto the drawer sides 9.

Place cams Ca into the holes indicated. Arrow pointing towards the front. Turn the cams Ca to the right to fix the front.

Ca



ø15 x 10.5mm Cam x 6

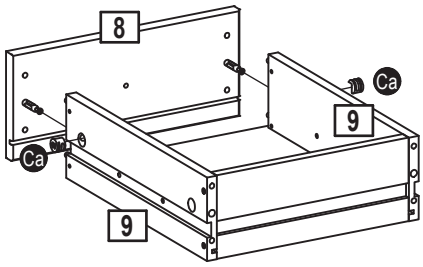

x 3


Step 2.6

Important!
Make sure the angle between the drawer front 8 and the drawer sides 9 is 90° before the drawer bottom 11 is fixed using Fi as shown.
To adjust the angle between the sides and the front push the fitting Fi sidewards.


Fi




Back fitting w. ø3.5 x 15mm Screw x 6

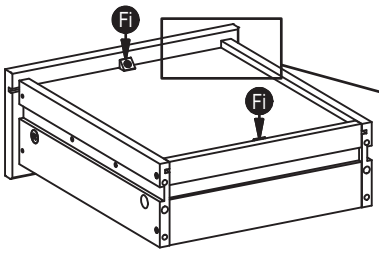

x 3

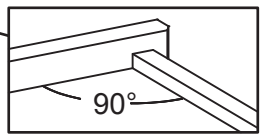


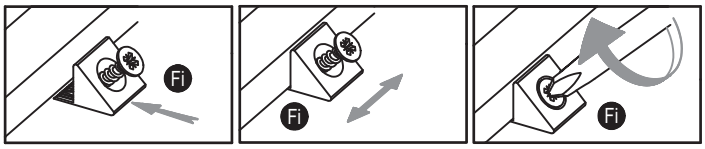

Step 2.7


Fix the metal knobs Ge to the drawer front 8 using screws Hd.

Ge

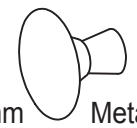


ø27 x 24mm Metal Knob x 3

Hd



M4 x 20mm Screw x 3

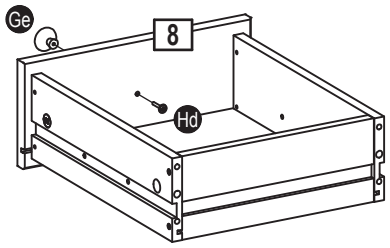

x 3

Step 2.8

Pull out the drawer runners. Slide the drawers onto the runners.

Fix drawers to the drawer runners using screws Hk.

Hk

M4 x 9mm Screw x 6

