
Baby Amelie-Bedside Chest

Assembly Instructions - Please keep for future reference 239/9331

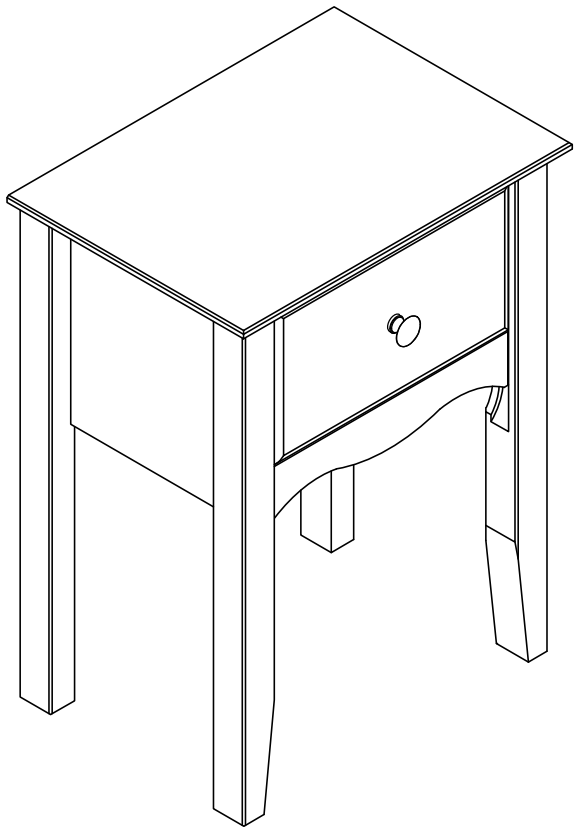

Dimensions

Width - 41 cm
Depth - 29.5 cm
Height - 55 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 24/04/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

· Check you have all the components and tools listed on pages 2 and 3.

· Remove all fittings from the plastic bags and separate them into their groups.

· Keep children and animals away from the work area, small parts could choke if swallowed.


· Make sure you have enough space to layout the parts before starting.

· Do not stand or put weight on the product, this could cause damage.

· This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

· Assemble the item as close to its final position (in the same room) as possible.

· Assemble on a soft level surface to avoid damaging the unit or your floor.

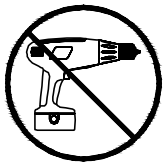

We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

· Parts of the assembly will be easier with 2 people.

· Dispose of all packaging carefully and responsibly.

Care and maintenance

· Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

· Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


· From time to time check that there are no loose screws on this unit.

· This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: **if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.**

Components - Panels


Please check you have all the panels listed below

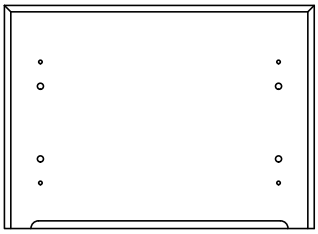

1 Top panel x 1 (41x29.5 cm)

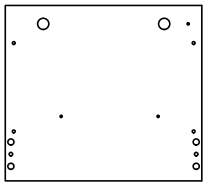

2 Left side panel x 1 (23.2x26 cm)

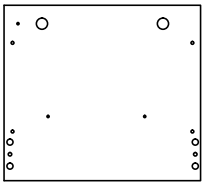


3 Right side panel x 1 (23.2x26 cm)




4 Left front foot x 1 (53.5x4 cm)



5 Right front foot x 1 (53.5x4 cm)




6 Left back foot x 1 (53.5x3 cm)




7 Right back foot x 1 (53.5x3 cm)




8 Bottom frame x 1 (30x6 cm)




9 Back rail x 1 (30x5 cm)

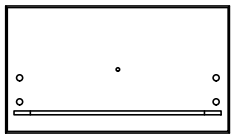


10 Drawer front x 1 (29.6x16.8 cm)




11 Drawer left side x 1 (25x10.5 cm)




12 Drawer right side x 1 (25x10.5 cm)



13 Drawer back x 1 (24.5x10 cm)

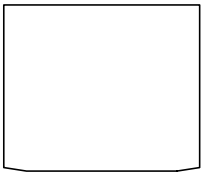

14 Drawer bottom x 1 (25x25.9 cm)











15 Back panel x 1 (32.8x19.2 cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

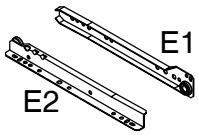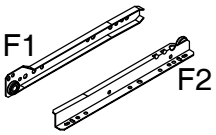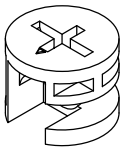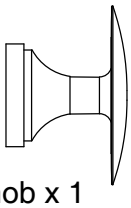A  Wooden dowel x 16	**B**  30 mm Screw x 8	**C**  12 mm Screw x 6
D  12 mm Screw x 4	**E**  Right runner x 2	**F**  Left runner x 2
G  Metal dowel x 8	**H**  Locking nut x 8	**I**  Nail x 8
J  Knob x 1	**K**  20 mm Bolt x 1	**L**  30 mm Screw x 8

Tools required




Phillips screwdriver (medium & large)

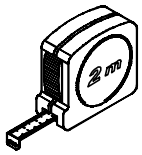

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1


Fitting Wooden Dowels:
Insert dowels (A) into holes in the indicated parts.


Fitting metal dowel
Screw metal dowel (G) into top panel 1, side panels 2 and 3.


Note: Insert metal dowels as far as shown.


Do not over tighten.

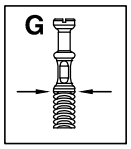

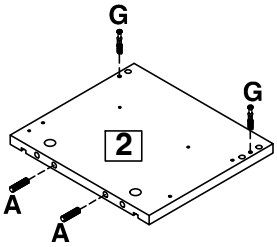

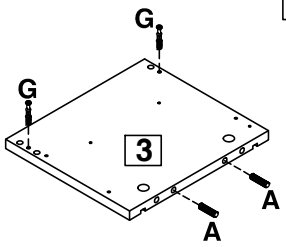

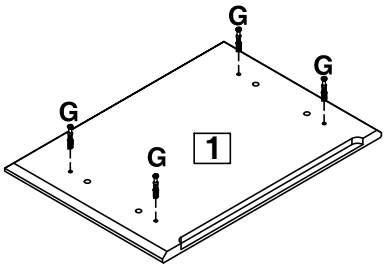

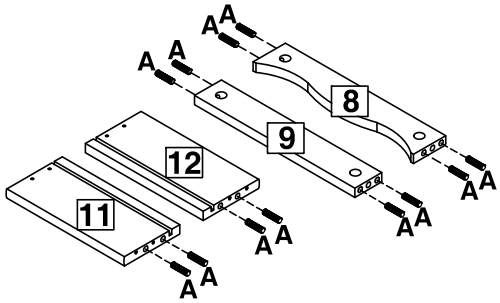



Step 2

Parts 2, 3, 4, 5, 6 and 7 are labelled for easier identification.
Attach left side panel 2 to left front foot 4 and left back foot 6 using screws (L).

Attach right side panel 3 to right front foot 5 and right back foot 7 using screws (L).

Attention:
Make sure side panels are correctly aligned and in flush with the top of the feet prior to fixing, as shown.

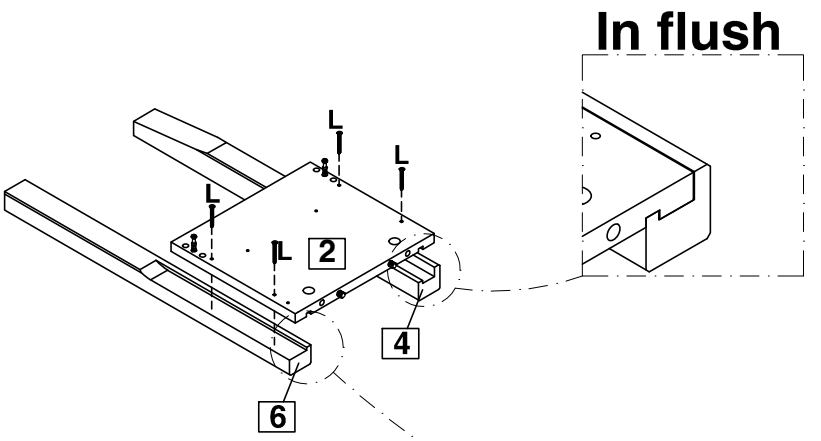

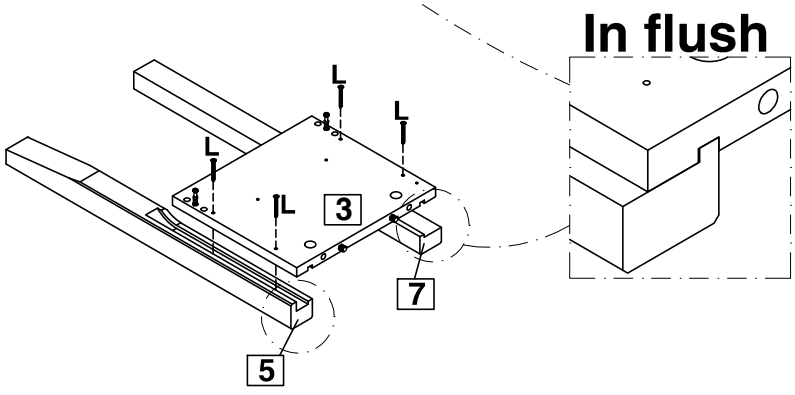


Assembly Instructions

Step 3

Fixing runners:
Fix runners E and F in to pre drilled holes on side panel 2 and 3 using screws C.

Attention:
Make sure runners are positioned as shown.

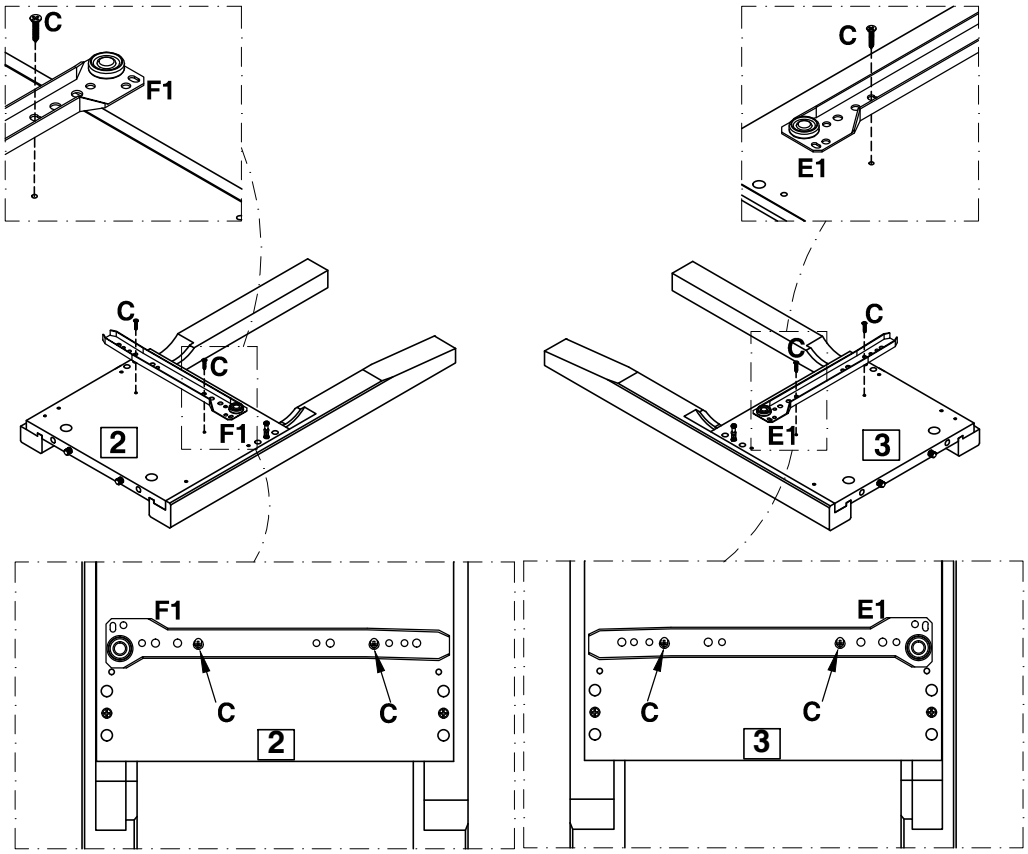

Step 4


Assembly the cabinet

Fit bottom frame 8 and back rail 9 to the right side panel 3 as shown.

Insert 2 locking nuts H into bottom frame 8 and back rail 9 where shown.

Use a screwdriver to turn locking nuts H clockwise to lock.

Do not over tighten.

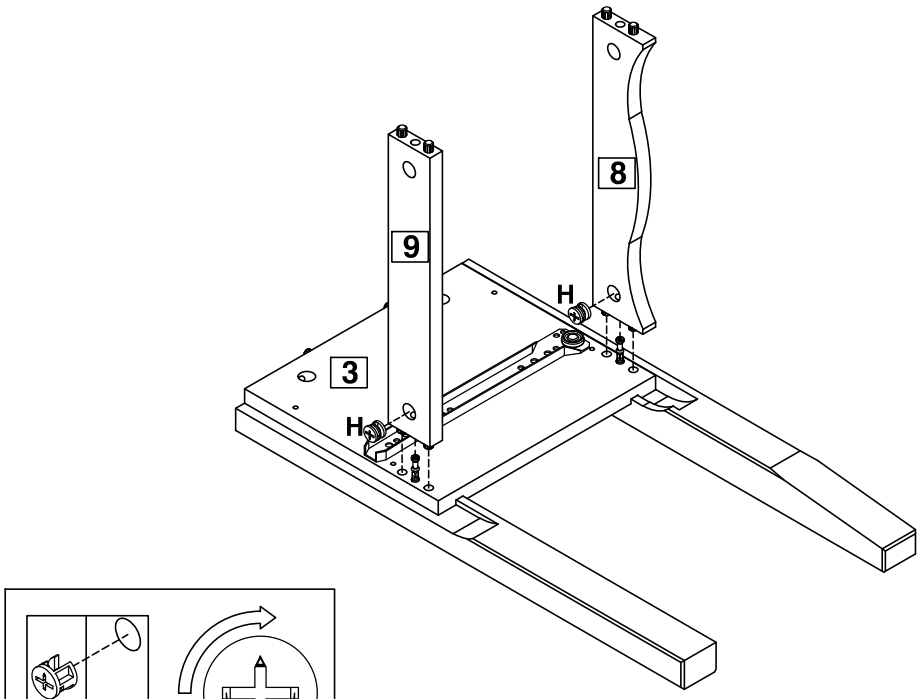

Assembly Instructions


Step 5


Fit left side panel 3 to bottom frame 8 and back rail 9, as shown.

Insert 2 locking nuts H into bottom frame 8 and back rail 9 where shown.

Use a screwdriver to turn locking nuts H clockwise to lock.

Do not over tighten.

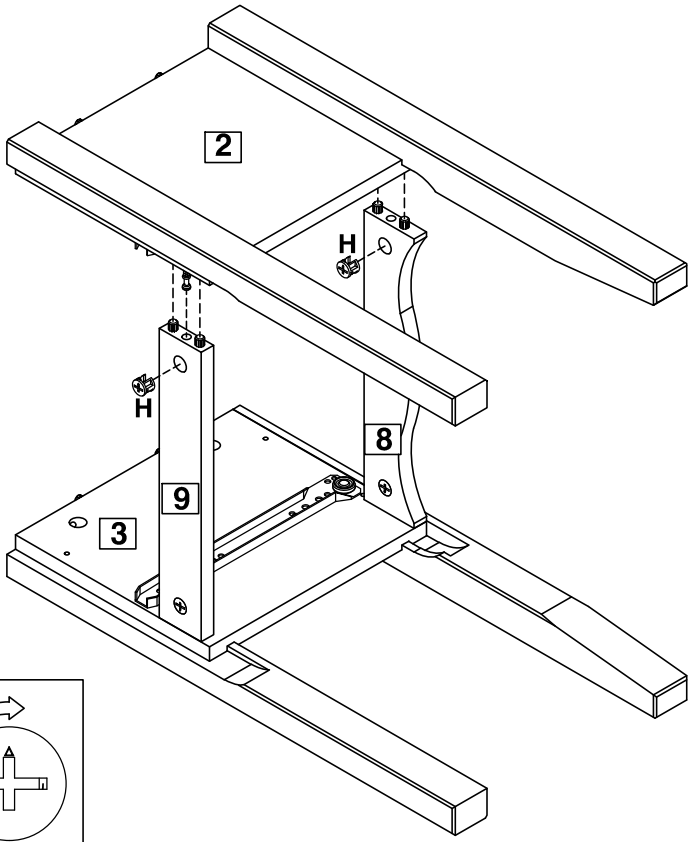

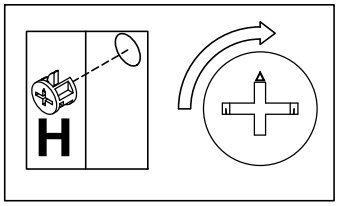



Step 6

Fit left side panel 2 and right side panel 3 to top panel 1 then insert 4 locking nuts H into side panels where shown.

Use a screwdriver to turn locking nuts H clockwise to lock.

Do not over tighten.

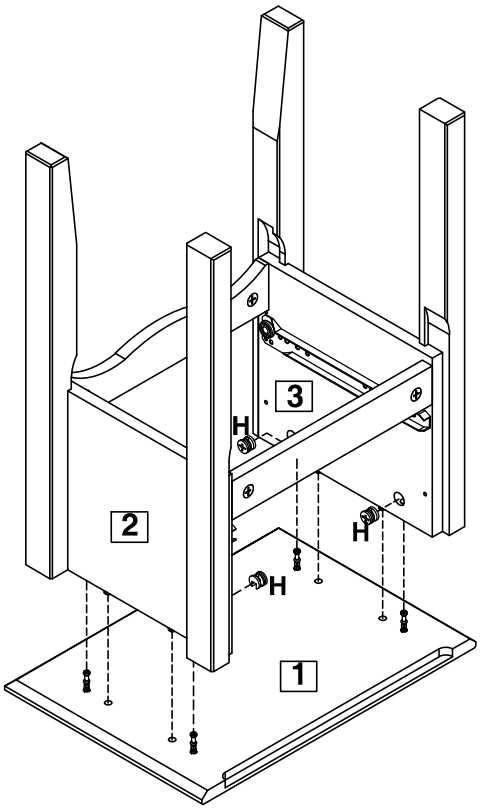

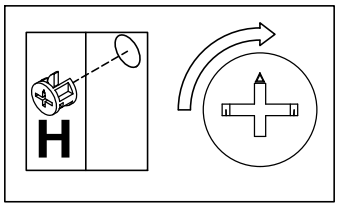

Assembly Instructions

Step 7

Drawer assembly

A) Attach drawer sides 11 and 12 in the drawer front 10 using screws B.


B) Slide drawer bottom 14 in to slots on drawer sides 11 and 12.

Make sure finished side face inside the drawer.

C) Attach drawer back 13 to drawer sides 11 and 12 using screws B.

D) Fix knob J using bolt K.


E) Fix runner E and F using screws D as shown.

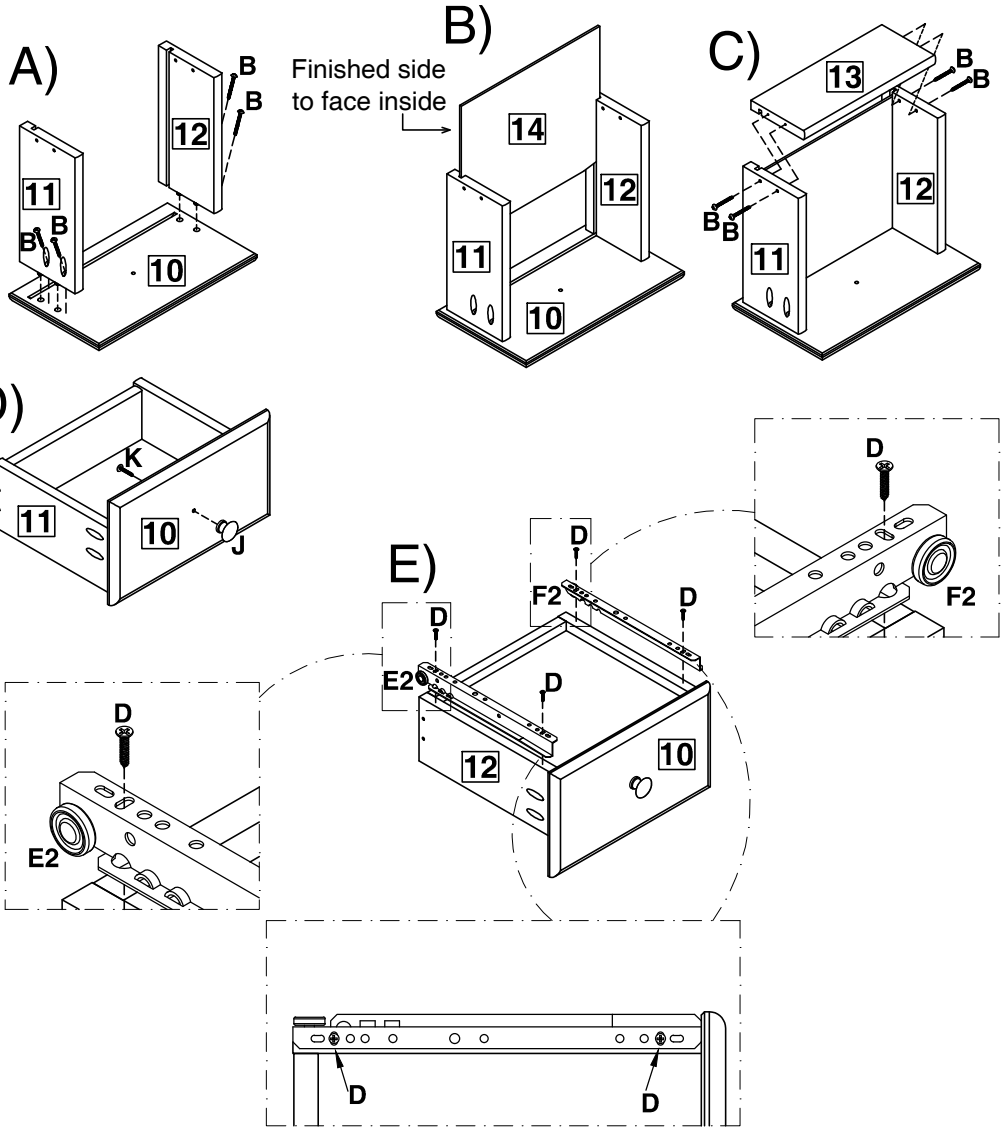

Step 8

Carefully turn the bedside upright.
Fix back panels 15 within rebates using nails I.

Important: Cabinet **MUST** be 'square' when back is attached.

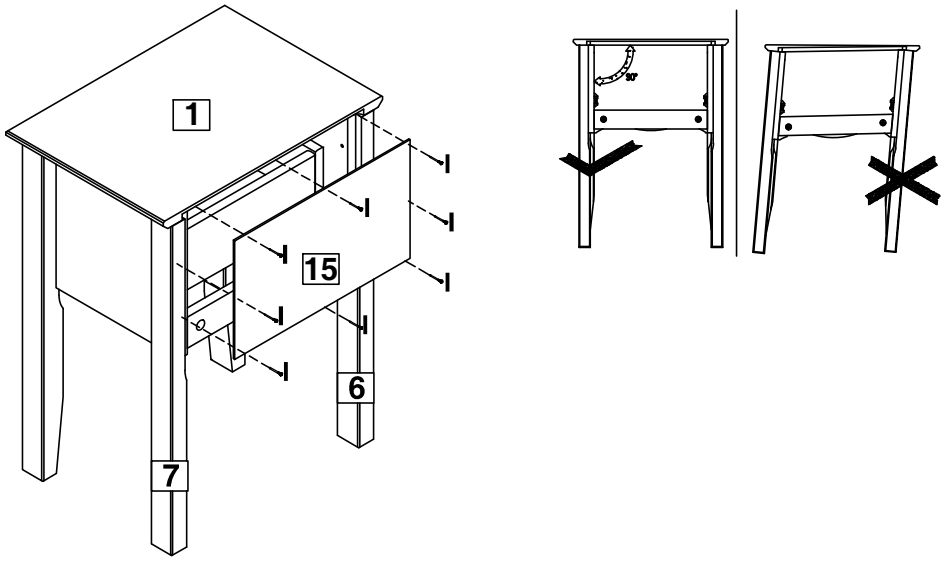


Assembly Instructions

Step 9

Insert drawers


Hook the wheels of the runner on the back of the drawers over the wheels of the runners on the left and right sides, then hold the drawers level and slide backwards into position.

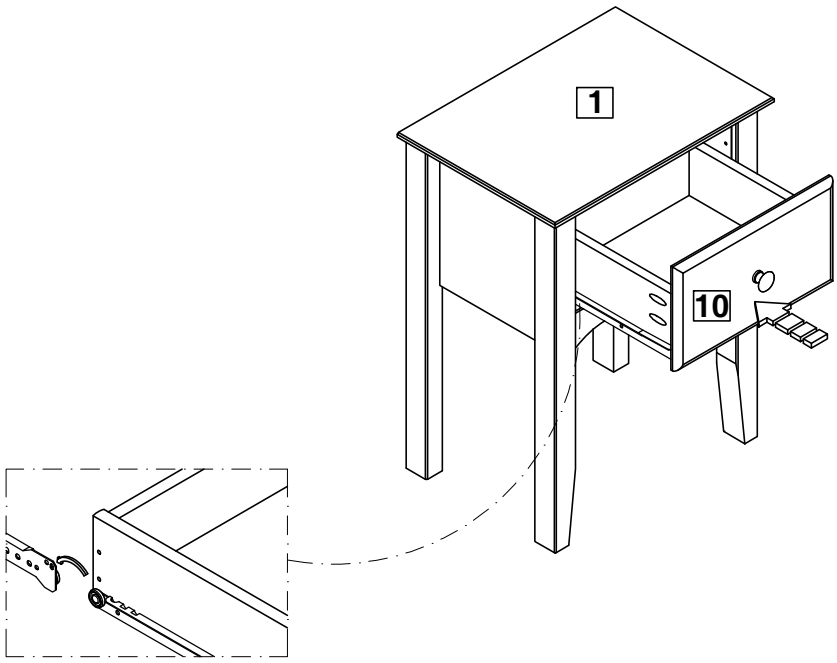


Step 10

Adjusting drawers

Loosen the screws in the runners, adjust the drawers to suit and once drawers are aligned retighten and insert 1 screw Ⓒ into fifth hole of the runners Ⓔ and Ⓕ.

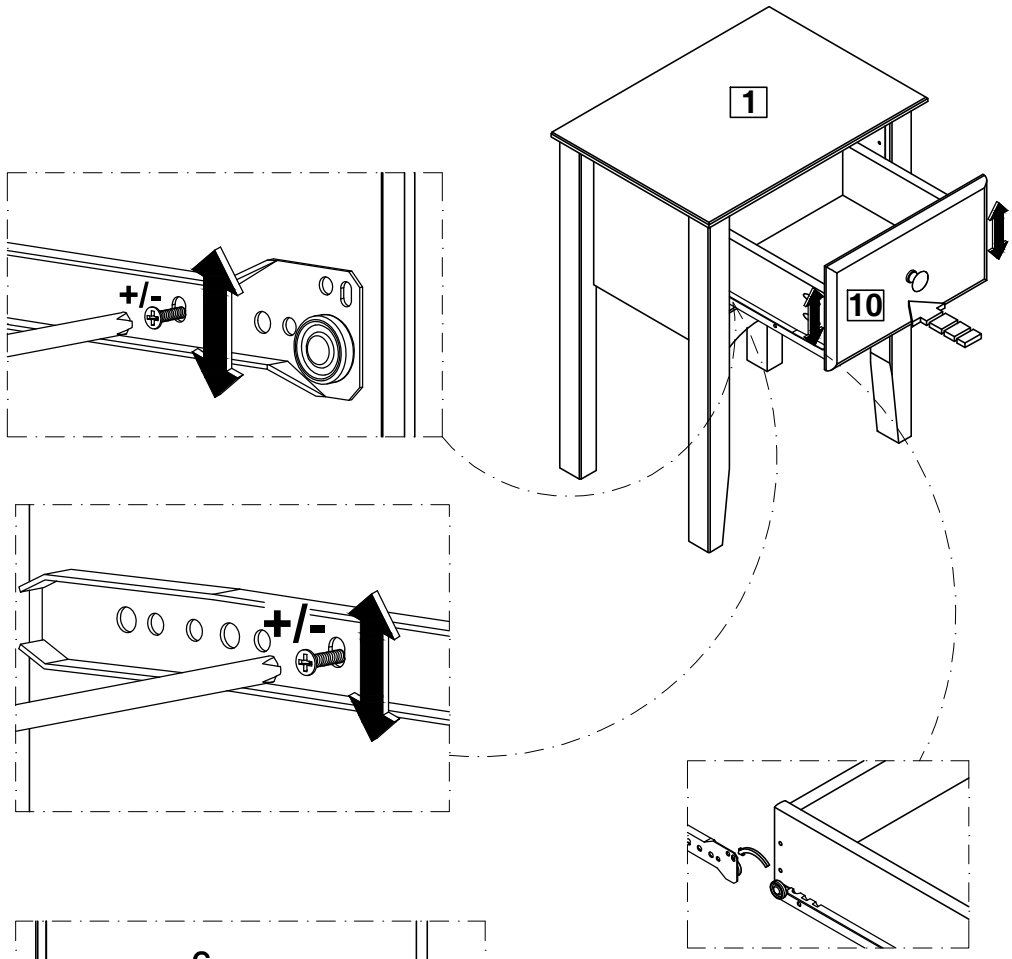

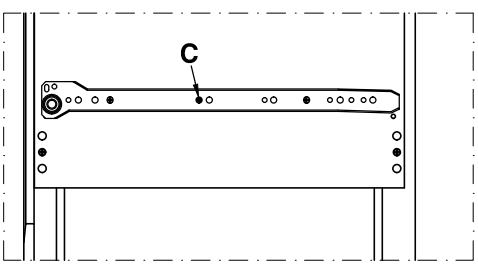


Assembly Instructions

Step 11

Adjusting drawers

To move drawers left or right: loosen the screws in the runners, adjust the drawers to suit and once drawers are aligned retighten.

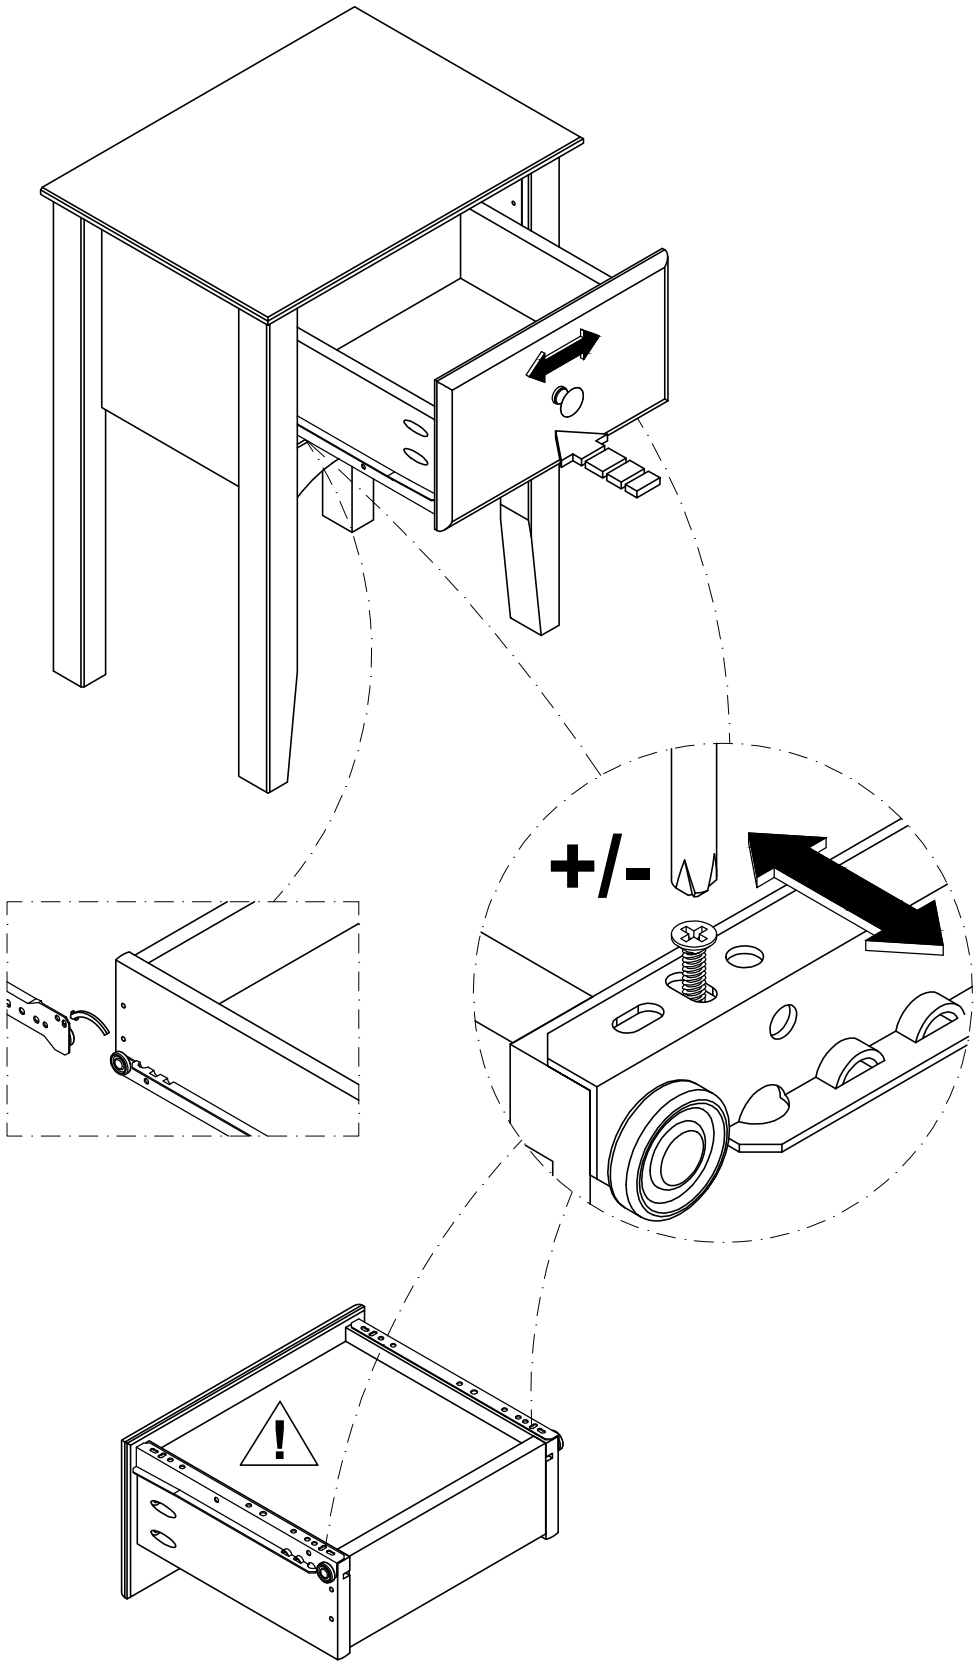

Assembly is complete.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**