
Brooklyn Regular

Assembly Instructions - Please keep for future reference

Cat.no 133 / 1651
Cat.no 133 / 1675
Cat.no 133 / 1699

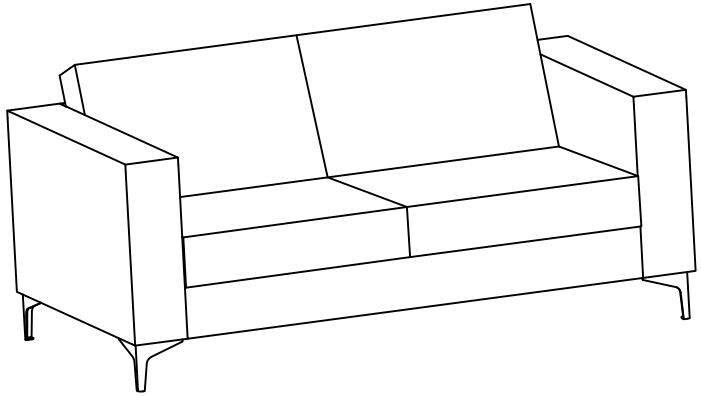

Dimension
Width - 160 cm
Length - 88 cm
Height - 78 cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts,call the **Customer Helpline:0845 0778888**

Issue 1 - 05/04/13

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 .
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area,small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product,this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power dril/drivers **for inserting screws** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Do not tighten all bolts until bed is fuly assembled.

Care and maintenance


- Only clean using a damp cloth and mild detergent,do no use bleach or abrasive cleaners.
- From time to time check that there are no losse bilts on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note:if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Fittings

Please check you have all the fittings listed bellow

Note: the quantities below are the correct amount to complecte the assembly.In some cases more fittings may be supplied than are required.

A M6x20 mm Bolt x 16 	**B** Leg x 4 

Tools required



screwdriver

Assembly Instructions

Step 1

Attaching legs

a: Insert bolts **A** through the holes of the leg **B** into the frame and rotate to right.

Repeat operation for all legs.

