

# Malibu - Desk

Assembly Instructions - Please keep for future reference

274/6616

247/3848

278/5220

278/6652

268/6965

238/3615

275/3922

275/6297


278/6009

280/0332

247/7167

246/4950

246/5818

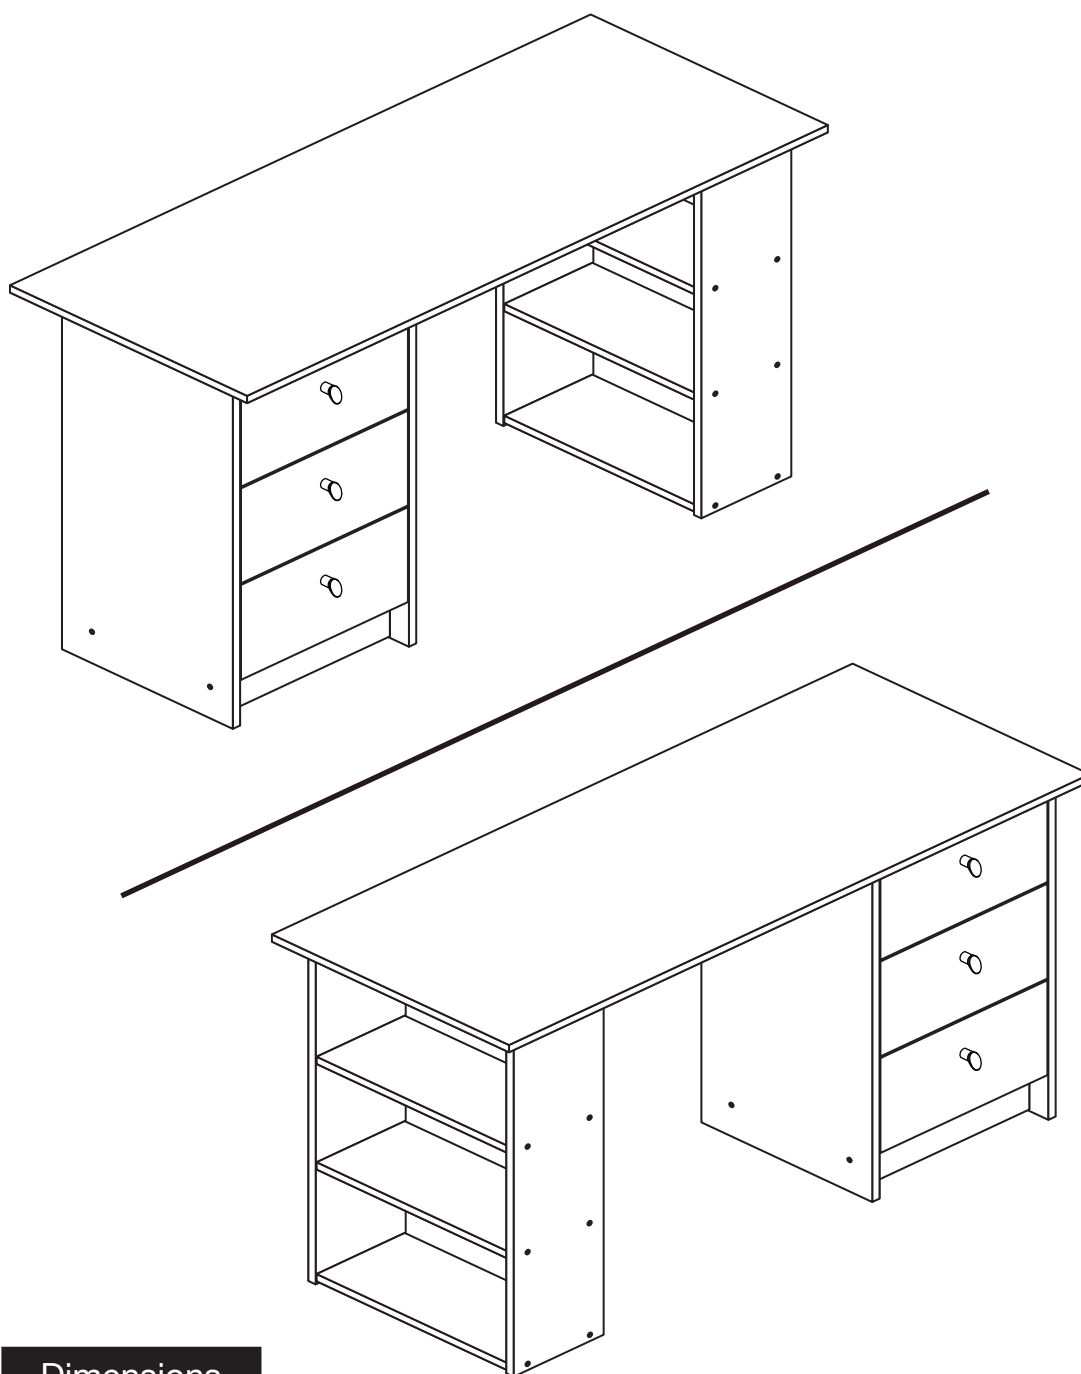

## Dimensions

Width - 120cm

Depth - 49cm

Height - 72cm



**MADE IN  
BRITAIN**

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



# Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 24kgs. Please lift with care.

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

- Dispose of all packaging carefully and responsibly.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.


- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**Note:** If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you have damaged or missing components, call the  
**Customer Helpline: 08456 400800** quoting the reference  
numbers below


Please check you have all the panels listed below

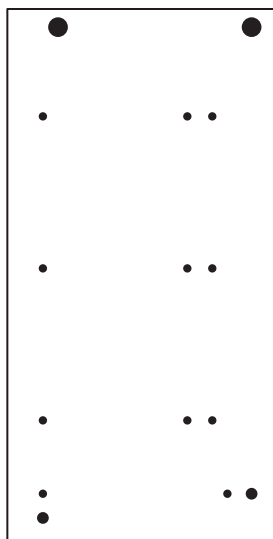


**1** Left Side (D2785A)  
(706 x 353mm)

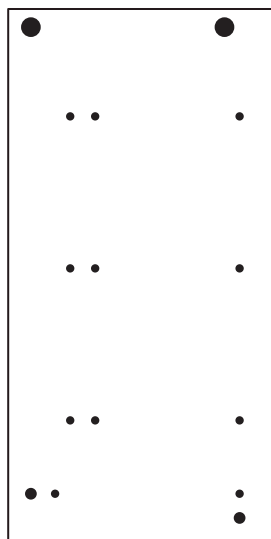

**2** Right Side (D2786A)  
(706 x 353mm)

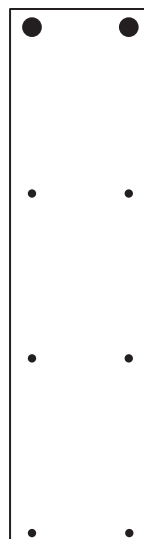

**3** Bookcase End (D2787A)  
(706 x 186mm) x 2

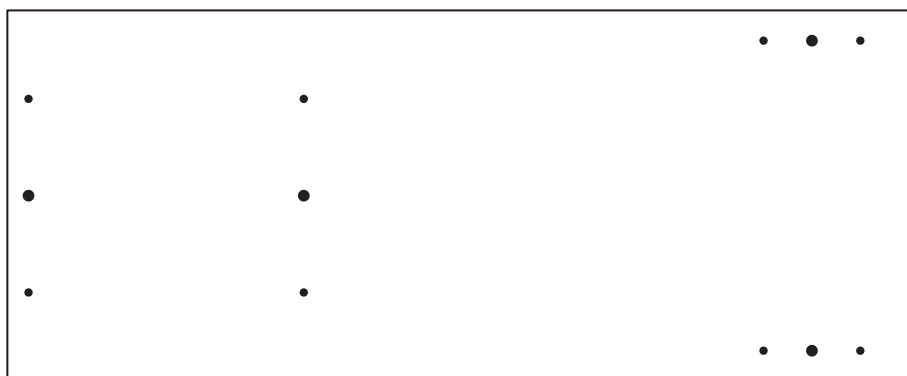


**4** Top (D2784A)  
(1200 x 490mm)




**5** Shelf (D2788A)  
(394 x 182mm) x 3



**6** Plinth (D2789A)  
(349 x 92mm)

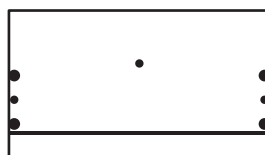

**8** Drawer Front (D2791A)  
(345 x 196mm) x 3



**9** Left Drawer Side (W320-124LH)  
(320 x 124mm) x 3



**7** Rail (D2790A)  
(349 x 80mm)




**10** Right Drawer Side (W320-124RH)  
(320 x 124mm) x 3



**11** Drawer Back (W317-124)  
(317 x 124mm) x 3



**12** Drawer Base (T328-317)  
(328 x 317mm) x 3

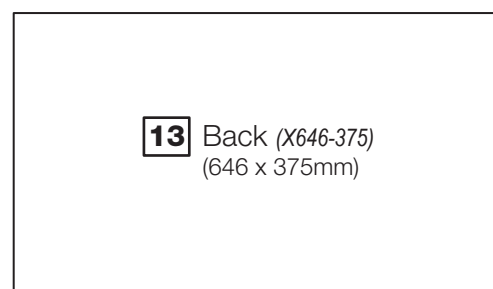

**13** Back (X646-375)  
(646 x 375mm)






# Components - Fittings


If you have damaged or missing components, call the  
**Customer Helpline: 08456 400800** quoting the reference  
numbers below

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

|                                                                                                                          |                                                                                                                            |                                                                                                                              |
|--------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| <b>A</b> <br>Wooden dowel (F22) x 8     | <b>B</b> <br>Metal dowel (F901) x 14      | <b>C</b> <br>Nail (F51) x 11              |
| <b>D</b> <br>Handle (F631) x 3          | <b>E</b> <br>Large locking nut (F900) x 8 | <b>F</b> <br>Small locking nut (F3) x 6   |
| <b>G</b> <br>40mm Screw (F910) x 16     | <b>H</b> <br>25mm Screw (F50) x 3         | <b>I</b> <br>Plastic Nail (F91) x 8       |
| <b>J</b> <br>Drawer runner (F1004) x 6 |                                                                                                                            | <b>K</b> <br>9mm Screw (F73) x 12        |
| <b>L</b> <br>9mm Screw (F74) x 6      | <b>M</b> <br>Wedgefix (F639) x 6        | <b>N</b> <br>Knock-in Peg (F171GY) x 12 |

## Tools required

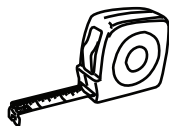

Rule



Cross-head  
screwdriver



Scissors




Hammer



Eye protection  
(when using a  
hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

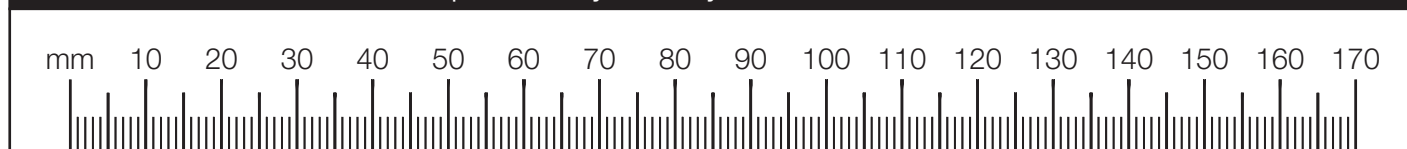

# Assembly Instructions


If you have damaged or missing components, call the  
**Customer Helpline: 08456 400800** quoting the reference  
 numbers below

## Step 1

### Prepare the 3 drawer fronts

Screw 2 metal dowels **B** into each of the drawer fronts **8**.

**Note:** Tighten the metal dowels up fully against the panels.

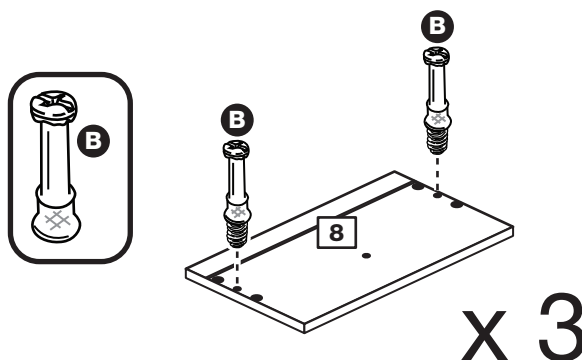


## Step 2

### Prepare the drawer sides

Insert a small locking nut **F** into the hole shown on the left drawer side **9** and the right drawer side **10**.

**Note:** The arrow on the locking nut **must** point towards the hole in the edge of the panel.

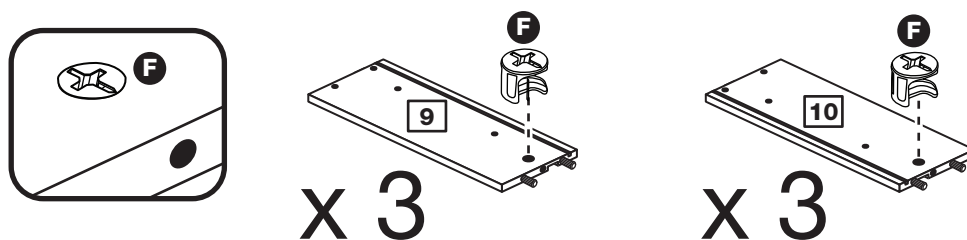

## Step 3


### Attach the drawer sides to the drawer fronts

Push the left drawer sides **9** and right drawer sides **10** onto the back of the drawer fronts **8**.

Turn the small locking nuts **F** on the left drawer side **9** and right drawer side **10**.

**Note:** Turn the locking nuts **F** clockwise to secure panels - more than 1/2 a turn.

**Note:** The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

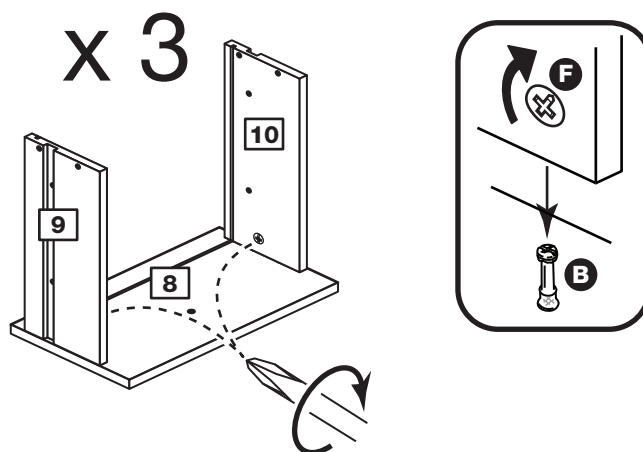


# Assembly Instructions

## Step 4

### Fit the drawer base

Slide the drawer base **12** down the grooves in the drawer sides **9** and **10** and down into the groove in the drawer front **8**.

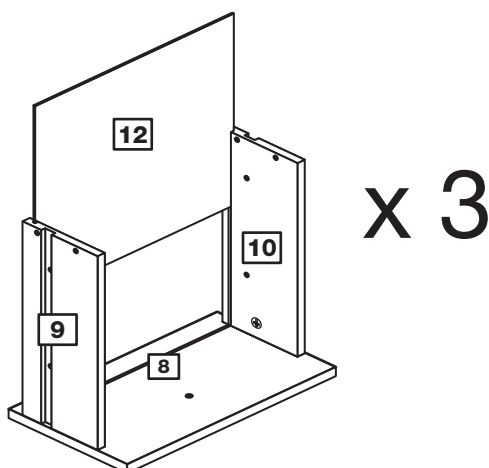


## Step 5

### Fit the drawer back

Fit the drawer back **11** between the drawer sides **9** and **10**. Make sure that the drawer base **12** fits into the groove in the drawer back **11**.

Hold the drawer back **11** in position and tap the knock-in pegs **N** through the holes in the drawer sides **9** and **10**.

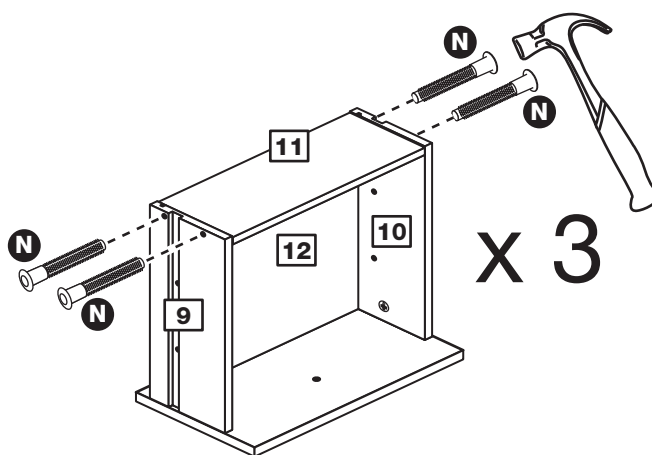


## Step 6

### Attach the handles

Attach a handle **D** to each of the drawer fronts **8** using screw **H**.



**Note: Do not overtighten the screw.**

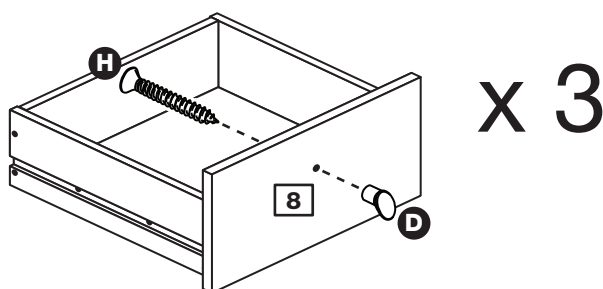

## Step 7

### Fit the wedgfixes

Turn the drawer assemblies over and slide 2 wedgfixes **M** into the front and back grooves, as shown, and tighten up the screws.

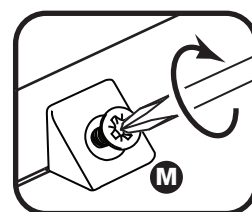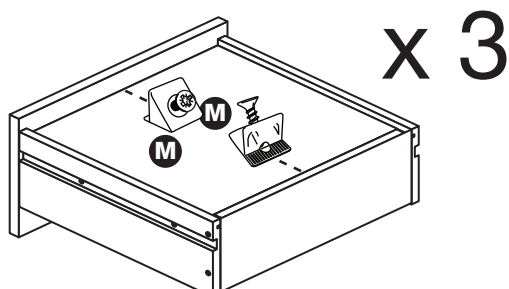

# Assembly Instructions

## Step 8

### Prepare the left side

**a:** Place 3 runners **J** on the left side **1** as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **K**.




**b:** Slide the runner **J** back the other way and fit the 2nd screw **K** into the corresponding hole in the left side **1**.

Insert 2 large locking nuts **E** into the left side **1**.

**Note:** The arrow on the locking nuts **must** point towards the hole in the edge of the panel.

Tap a wooden dowel **A** into the left side **1**.

**Note:** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

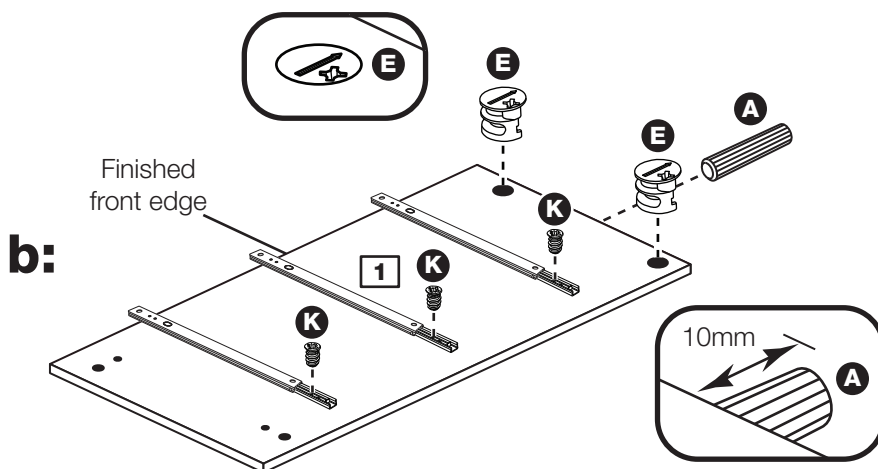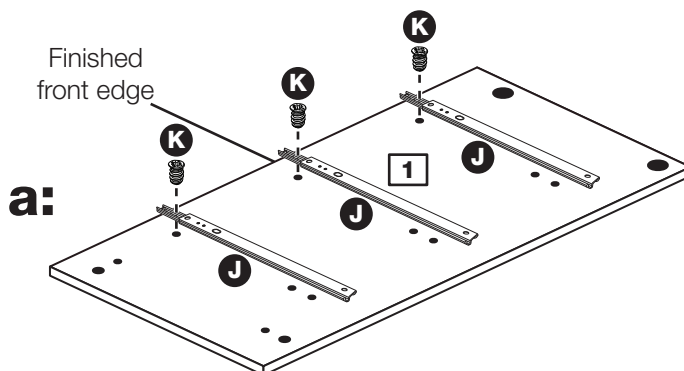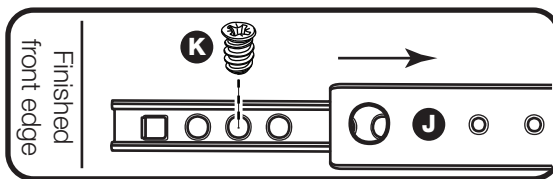

# Assembly Instructions

## Step 9

### Prepare the right side

**a:** Place 3 runners **J** on the right side **2** as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **K**.


**b:** Slide the runner **J** back the other way and fit the 2nd screw **K** into the corresponding hole in the right side **2**.

Insert 2 large locking nuts **E** into the right side **2**.


**Note:** The arrow on the locking nuts **must** point towards the hole in the edge of the panel.

Tap a wooden dowel **A** into the right side **2**.


**Note:** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

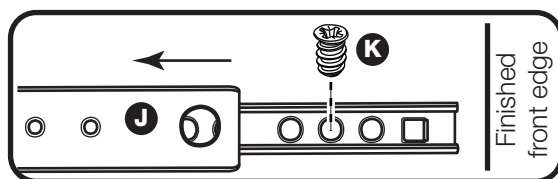

**a:**

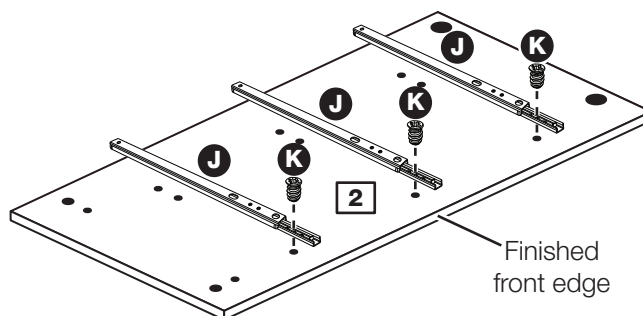

**b:**

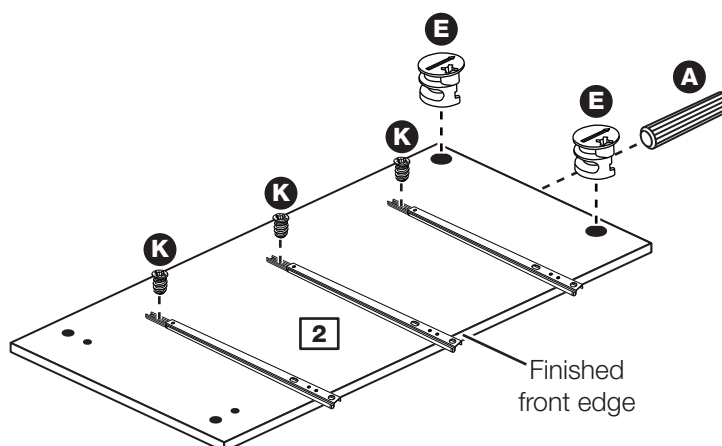


## Step 10

### Prepare the plinth and the rail


Tap 2 wooden dowels **A** into the plinth **6**.

Tap 2 wooden dowels **A** into the rail **7**.

**Note:** The plinth will be finished with the main unit colour on one surface.

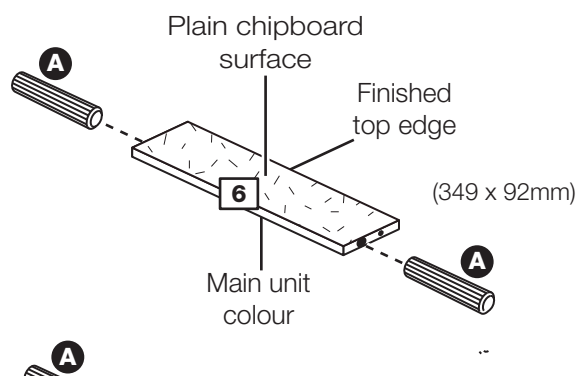

**Note:** The rail may be plain chipboard or its colour may differ from the main unit colour.

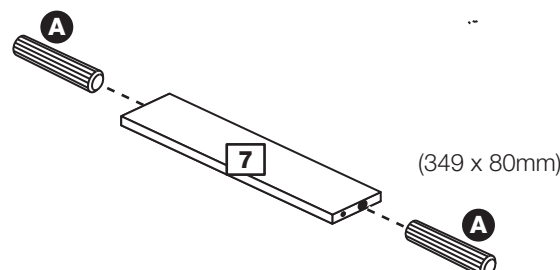




# Assembly Instructions

## Step 11

### Fit the plinth and the rail to the right side

Push the plinth **6** onto the right side **2** and secure it with screw **G**.

Push the rail **7** onto the right side **2** and secure it with screw **G**.

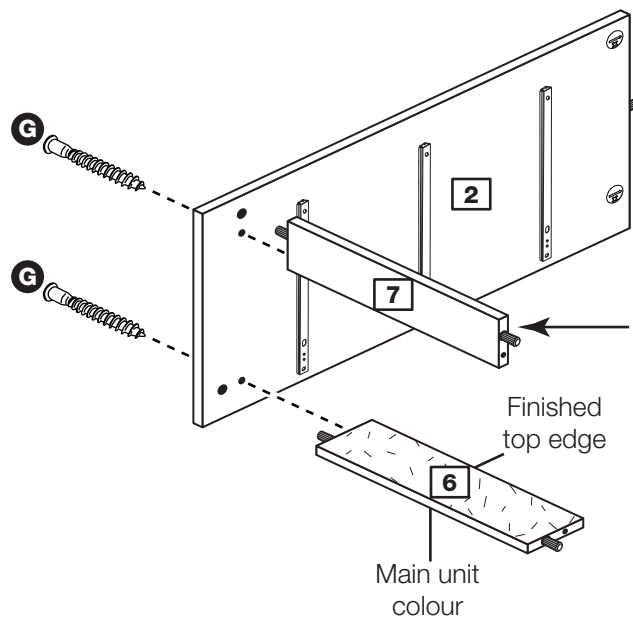


**Note:** Support the rail until the left side has been fitted in the next step.

## Step 12

### Fit the left side


Push the left side **1** onto the unit and secure it with 2 screws **G**.

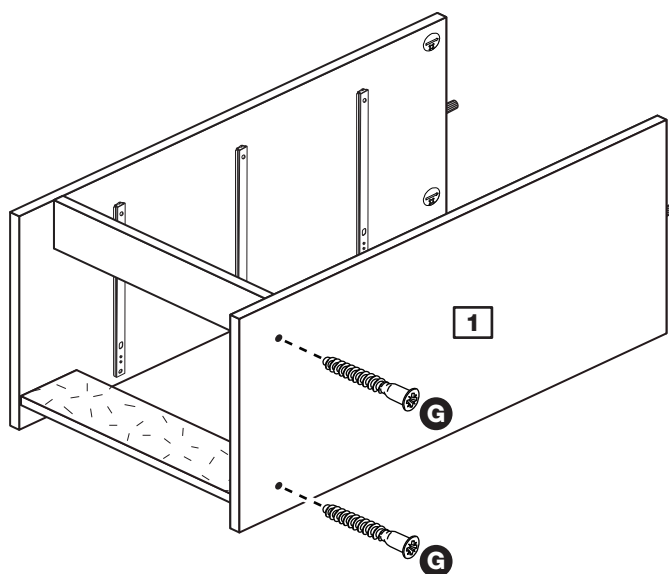

## Step 13

### Fit 4 plastic nails

Tap 2 plastic nails **I** into the bottom edge of each side **1** and **2** as shown.

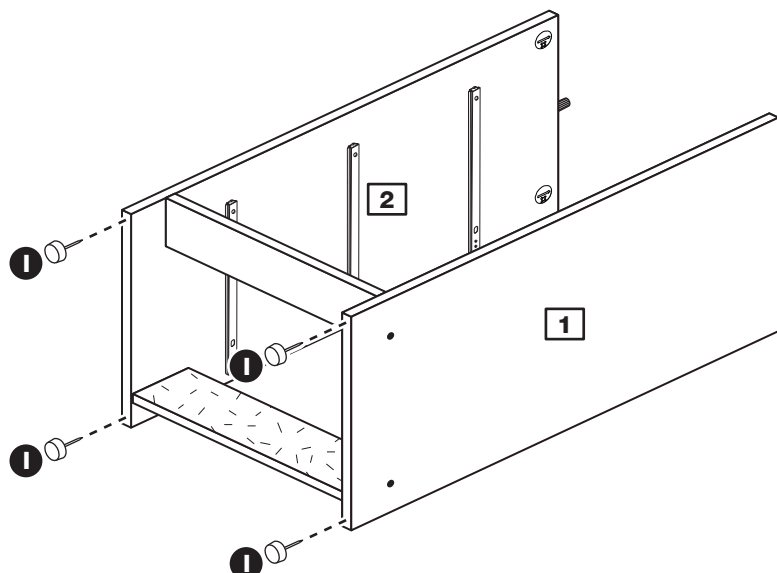

# Assembly Instructions

## Step 14

### Fit the back


**a:** Square up the unit by making sure that measurement **x** to **x** equals **y** to **y**.

**b:** Place the back **13** down onto the unit, making sure that it is flush with the bottom of the rail **7**.

Nail **C** down the sides and along the bottom edge of the back **13**.

**Note:** Nails should be spaced about 150mm apart.

**a:** The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

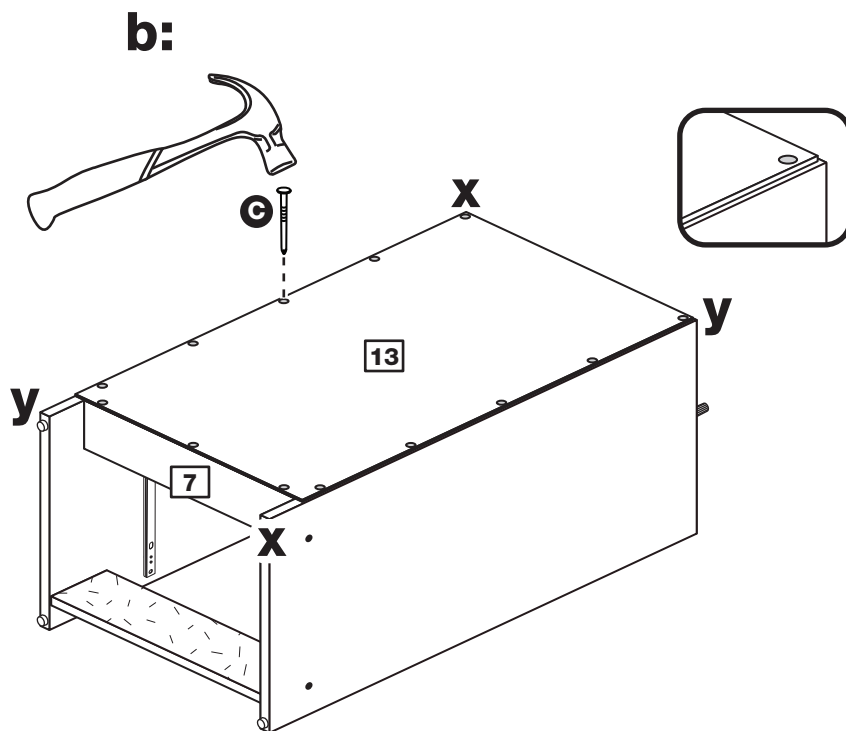


## Step 15

### Prepare the 2 bookcase ends

Insert 2 large locking nuts **E** into each bookcase end **3**.

Tap a wooden dowel **A** into each bookcase end **3**.

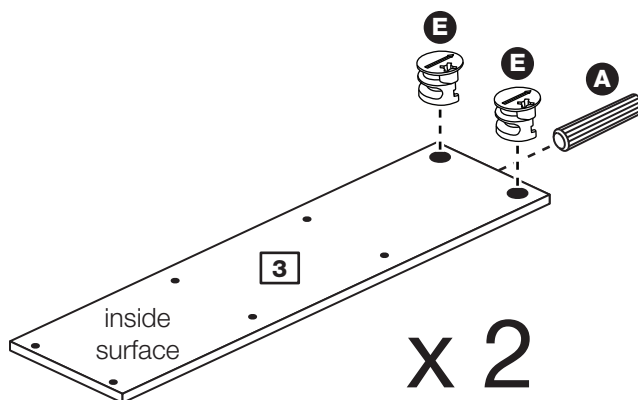


# Assembly Instructions

## Step 16

### Fit the shelves to the bookcase ends


Attach the 3 shelves **5** to the bookcase ends **3** using 12 screws **G**.

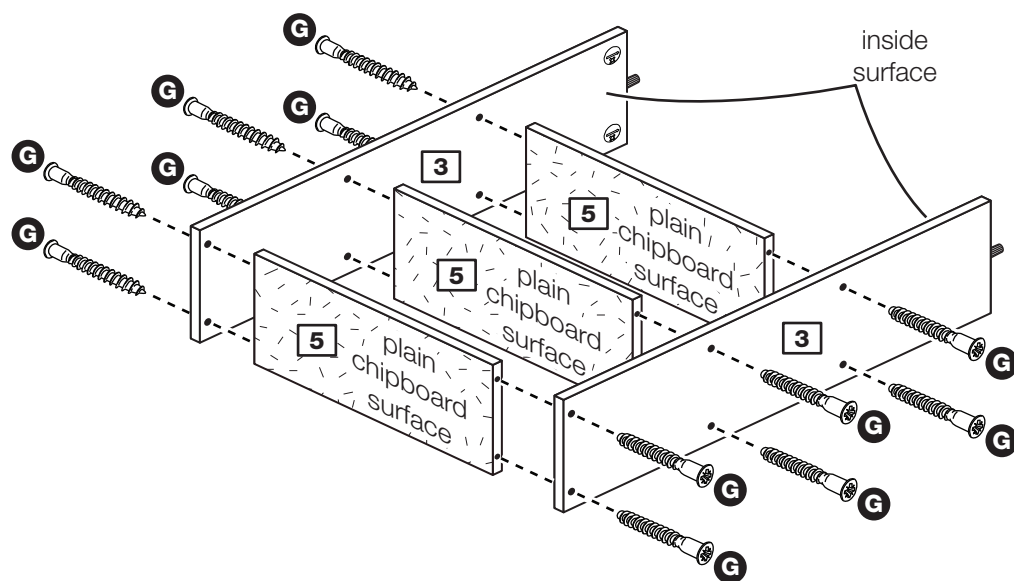

## Step 17

### Fit 4 plastic nails

Tap 2 plastic nails **I** into the bottom edge of each bookcase end **3** as shown.

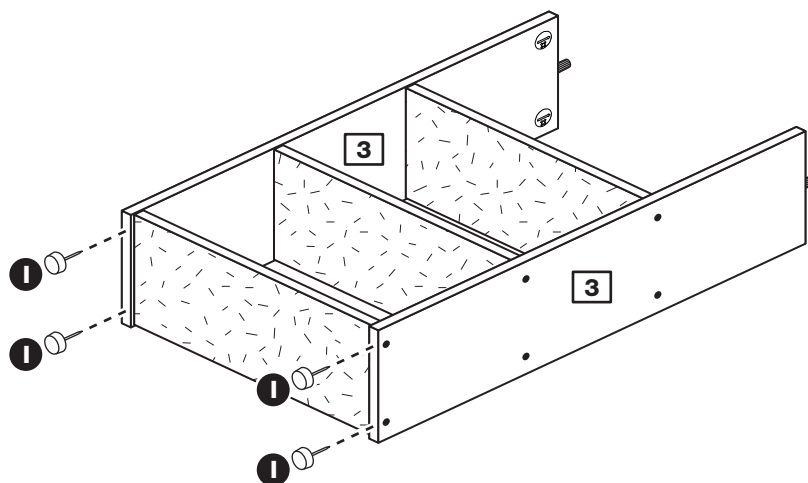


# Assembly Instructions

## Step 18

### Choose desk layout

Before going onto the next step, decide which way around you would like your desk to be.


Place the 2 assemblies where the desk will be used, so that the unit does not have to be moved once the top panel has been secured into place.

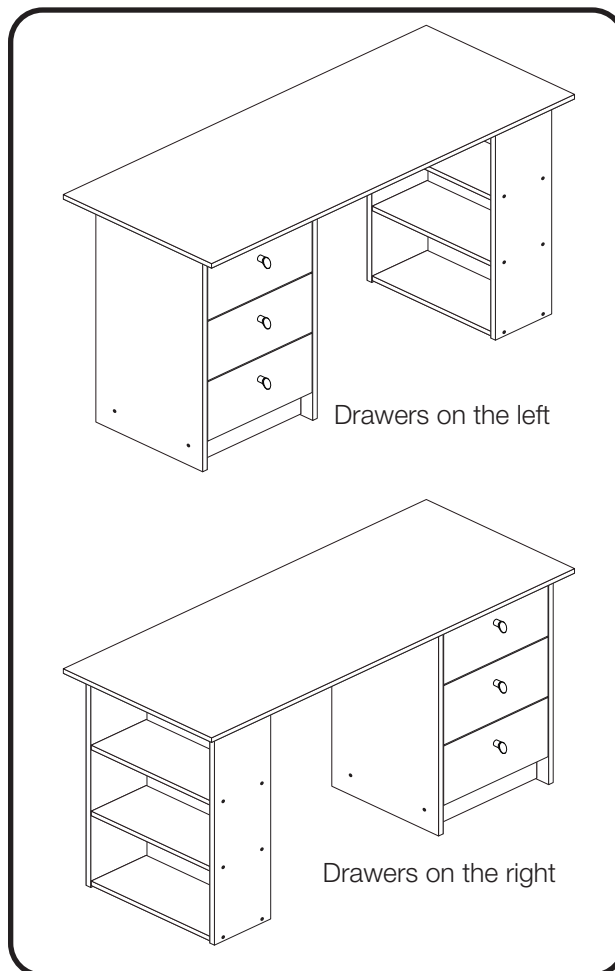

## Step 19

### Prepare the top

Screw 8 metal dowels **B** into the top **4**.

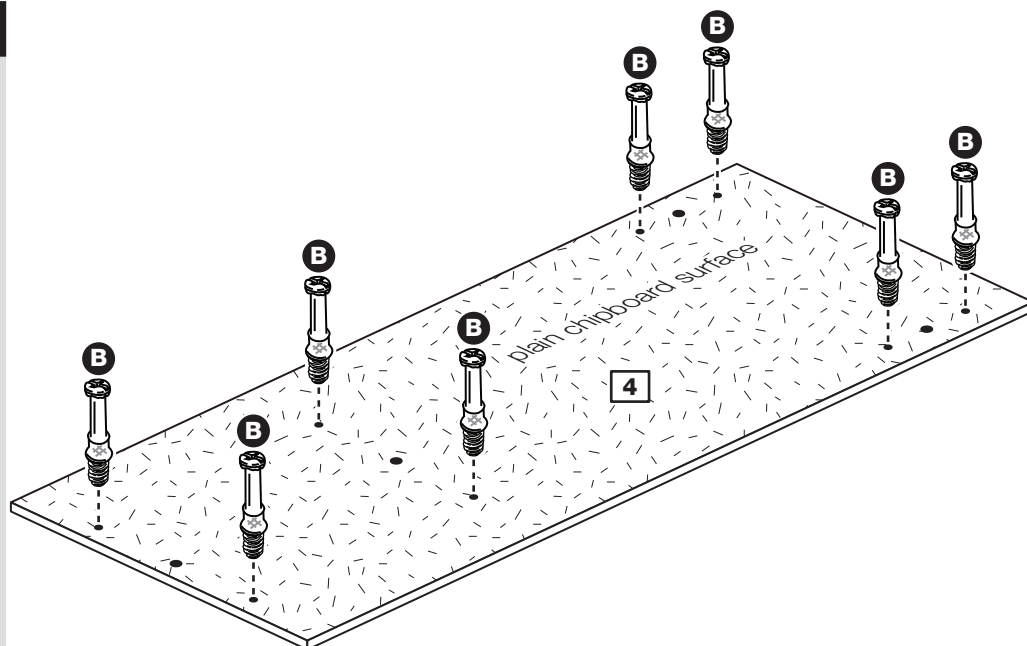

# Assembly Instructions


## Step 20

### Fit the top

Lift the top **4** and push the 8 metal dowels **B** fitted to the top **4** down into the holes in the top edge of the sides and bookcase ends **1**, **2** and **3**.

Use a screwdriver to tighten the 8 large locking nuts **E** fitted to the sides and bookcase end panels **1**, **2** and **3**.

**Note:** Turn the large locking nuts **E** as far as they will go - more than 1/2 a turn.

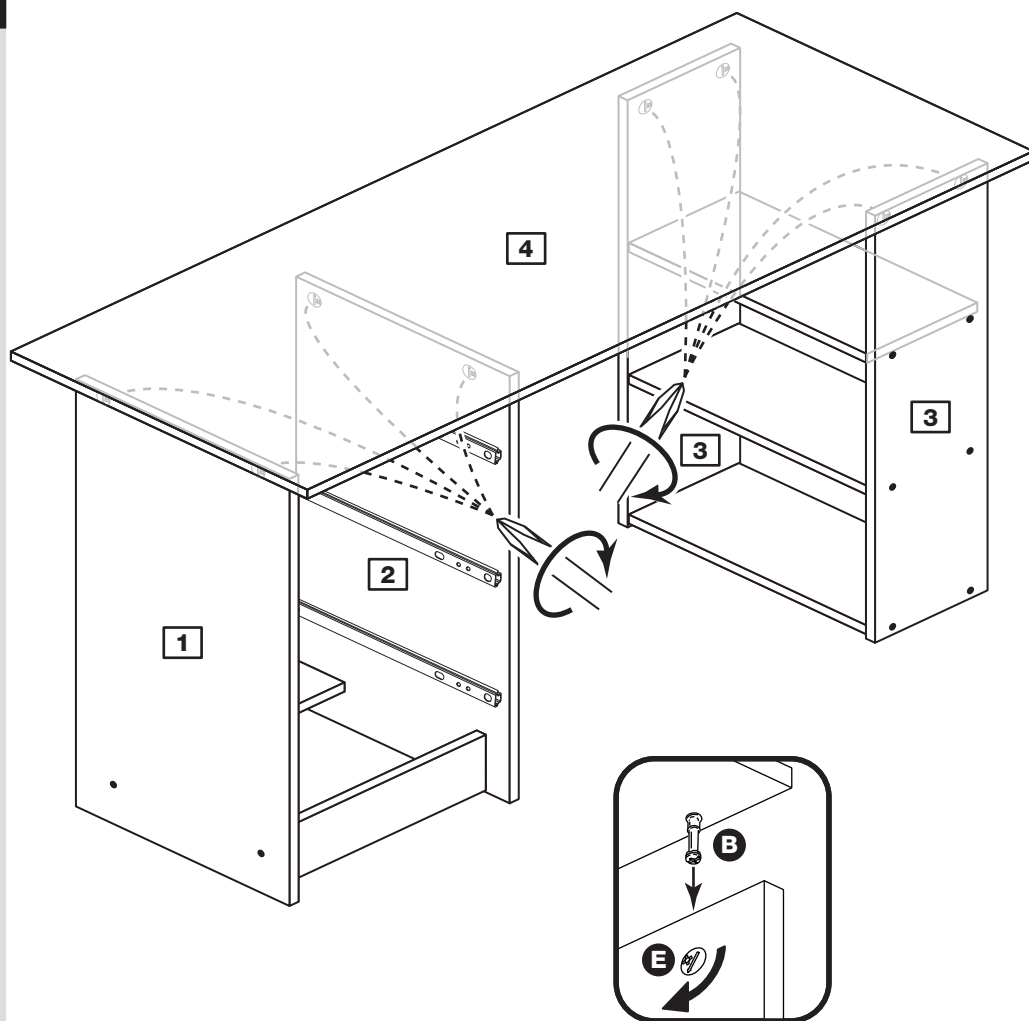

# Assembly Instructions

## Step 21

### Fit the drawers



Starting with the bottom drawer, slide both the runners **J** forward and locate the drawer sides **9** and **10** between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners **J**.

Working from the inside of the drawer, insert 2 screws **L** through the drawer sides and out into the 2nd threaded hole in the runner.

### Assembly is complete



**Warning:** The unit is heavy. Lift with care.

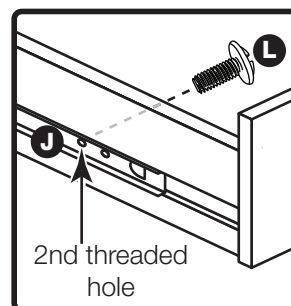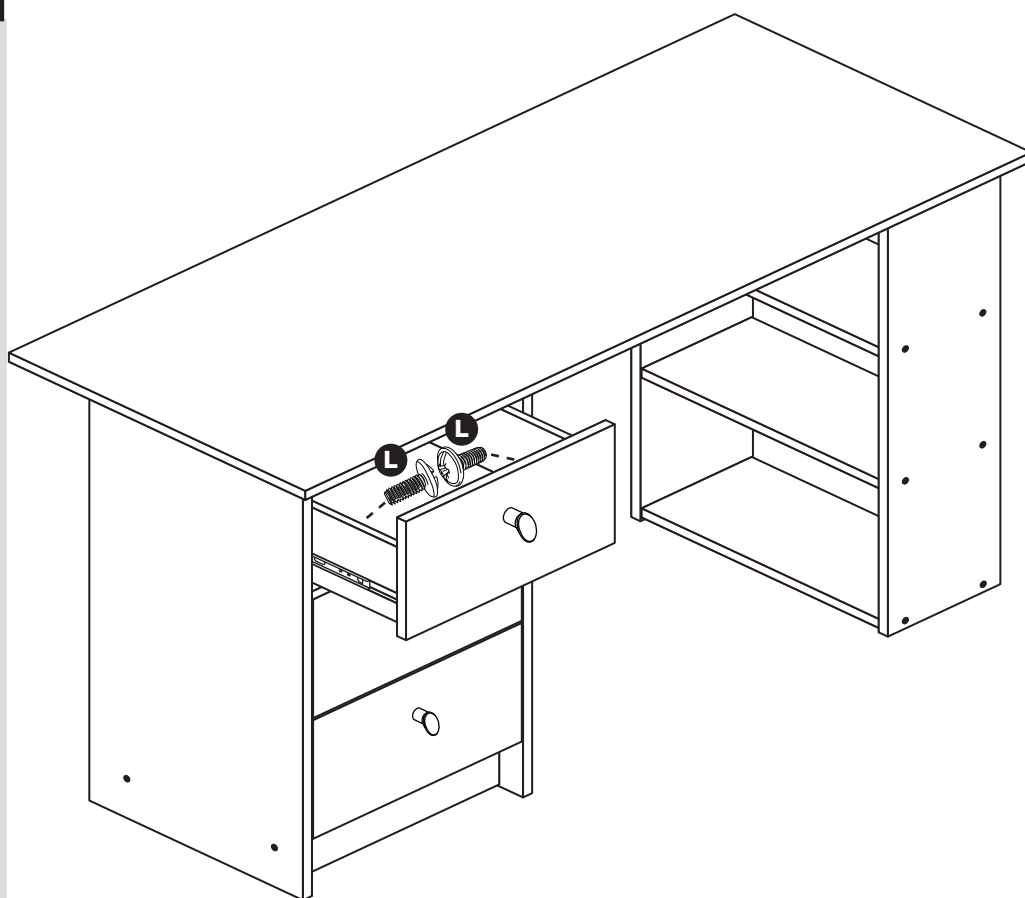

**Note:** Do not overtighten the screws. If they catch on the runner you may need to loosen them slightly.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800** and quote the reference numbers on the component pages.

Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW







# Malibu

Assembly Instructions - Please keep for future reference

274/6616

247/3848

278/5220

268/6965

238/3615

275/3922

275/6297


278/6009

280/0332

247/7167

246/4950

246/5818

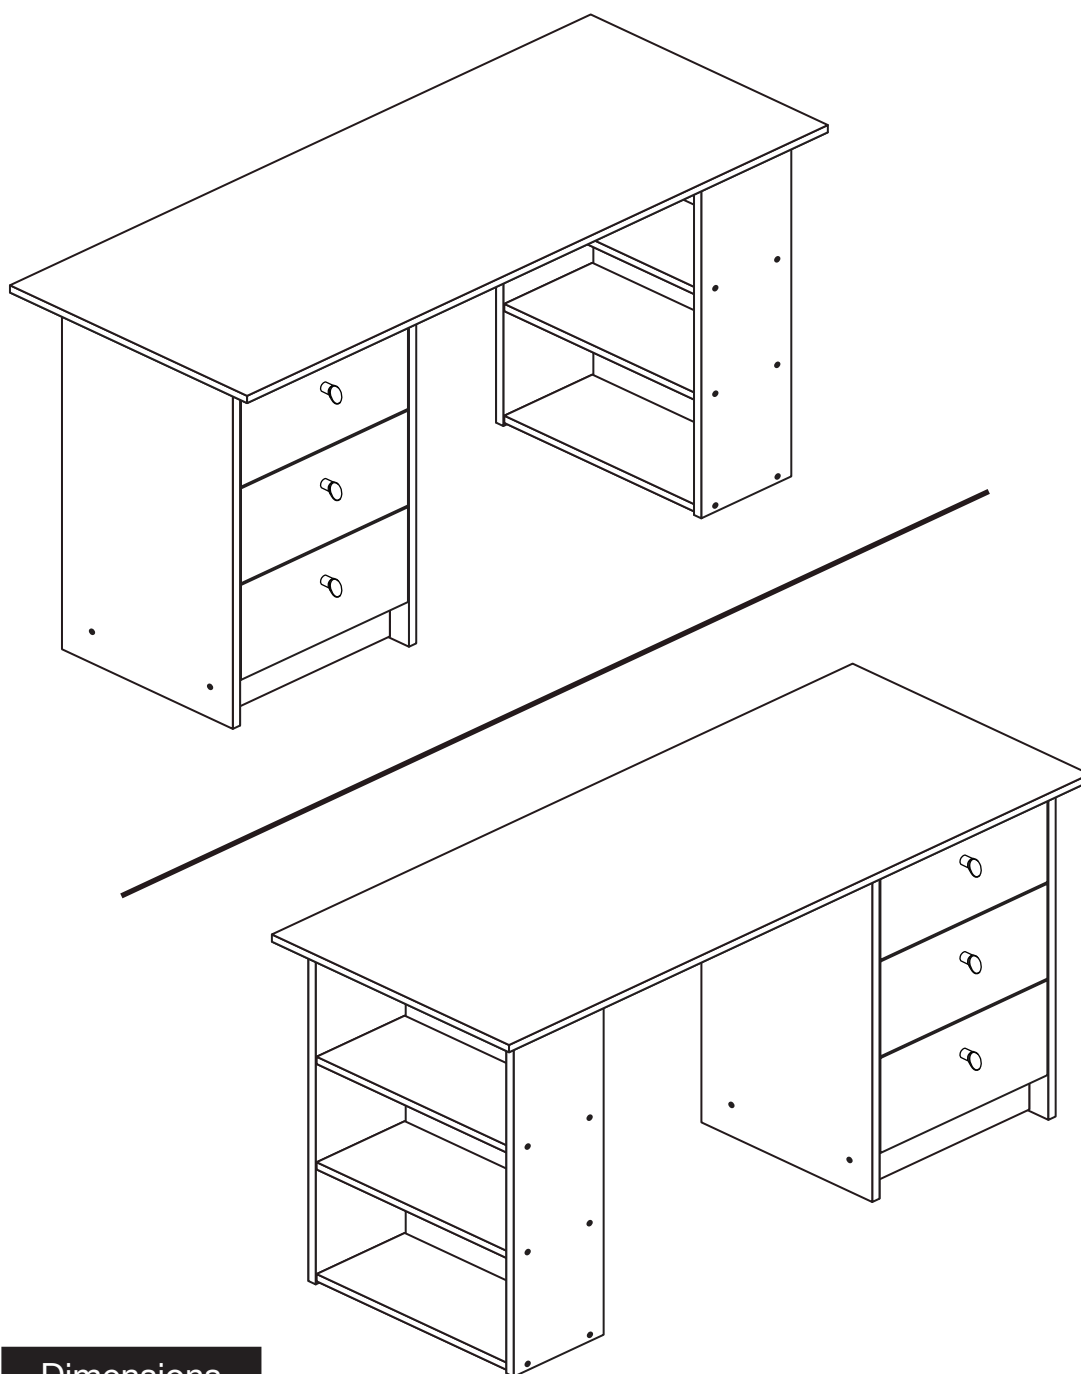

## Dimensions

Width - 120cm

Depth - 49cm

Height - 72cm



**MADE IN  
BRITAIN**

**Important** - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**



# Safety and Care Advice

**Important** - Please read these instructions fully before starting assembly

- **Warning:** This unit weighs approximately 24kgs. Please lift with care.

- Check you have all the components and tools listed on pages 2 and 3.

- Remove all fittings from the plastic bags and separate them into their groups.

- Keep children and animals away from the work area, small parts could choke if swallowed.

- Make sure you have enough space to layout the parts before starting.

- Do not stand or put weight on the product, this could cause damage.

- Assemble the item as close to its final position (in the same room) as possible.

- Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.

- **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

- Dispose of all packaging carefully and responsibly.

## Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

- From time to time check that there are no loose screws on this unit.


- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

**Note:** If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


# Components - Panels

If you have damaged or missing components, call the  
**Customer Helpline: 03456 400800** quoting the reference  
numbers below

Please check you have all the panels listed below

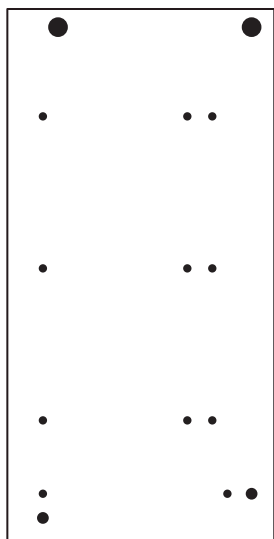


**1** Left Side (D2785D)  
(706 x 353mm)

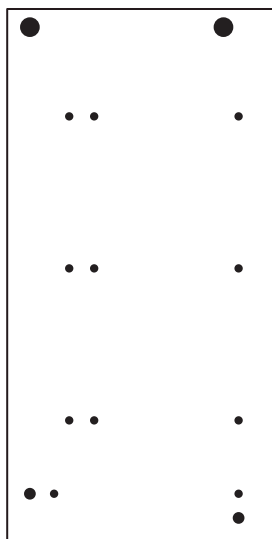

**2** Right Side (D2786D)  
(706 x 353mm)



**3** Bookcase End (D2787D)  
(706 x 186mm) x 2

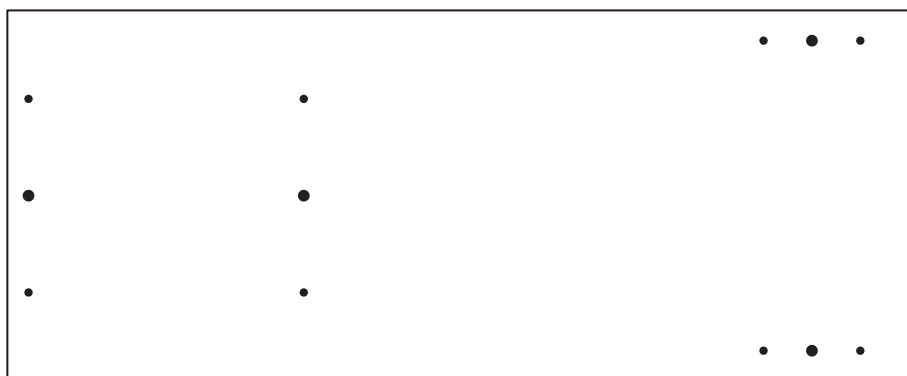


**4** Top (D2784D)  
(1200 x 490mm)




**5** Shelf (D2788D)  
(394 x 182mm) x 3



**6** Plinth (D2789D)  
(349 x 92mm)

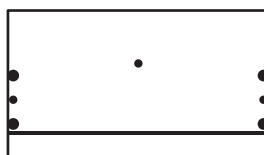

**8** Drawer Front (D2791D)  
(345 x 196mm) x 3



**9** Left Drawer Side (W320-124LH)  
(320 x 124mm) x 3




**7** Rail (D2790D)  
(349 x 80mm)




**10** Right Drawer Side (W320-124RH)  
(320 x 124mm) x 3



**11** Drawer Back (W317-124)  
(317 x 124mm) x 3



**12** Drawer Base (T328-317)  
(328 x 317mm) x 3

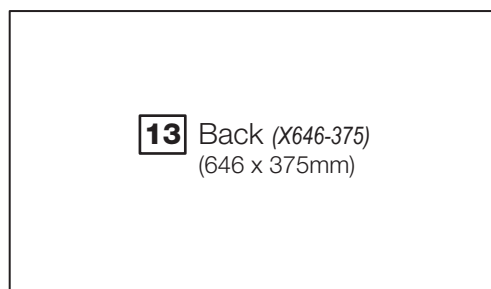

**13** Back (X646-375)  
(646 x 375mm)








# Components - Fittings


If you have damaged or missing components, call the  
**Customer Helpline: 03456 400800** quoting the reference  
numbers below

Please check you have all the fittings listed below

**Note:** The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

|                                                                                                                          |                                                                                                                            |                                                                                                                              |
|--------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------|
| <b>A</b> <br>Wooden dowel (F22) x 8     | <b>B</b> <br>Metal dowel (F901) x 14      | <b>C</b> <br>Nail (F51) x 11              |
| <b>D</b> <br>Handle (F631) x 3          | <b>E</b> <br>Large locking nut (F900) x 8 | <b>F</b> <br>Small locking nut (F3) x 6   |
| <b>G</b> <br>40mm Screw (F910) x 16     | <b>H</b> <br>25mm Screw (F50) x 3         | <b>I</b> <br>Plastic Nail (F91) x 8       |
| <b>J</b> <br>Drawer runner (F1004) x 6 | <b>K</b> <br>9mm Screw (F73) x 12      |                                                                                                                              |
| <b>L</b> <br>9mm Screw (F74) x 6      | <b>M</b> <br>Wedgefix (F639) x 6        | <b>N</b> <br>Knock-in Peg (F171GY) x 12 |

## Tools required

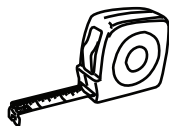

Rule



Cross-head  
screwdriver



Scissors




Hammer



Eye protection  
(when using a  
hammer or drill)

**Ruler** - Use this ruler to help correctly identify the screws

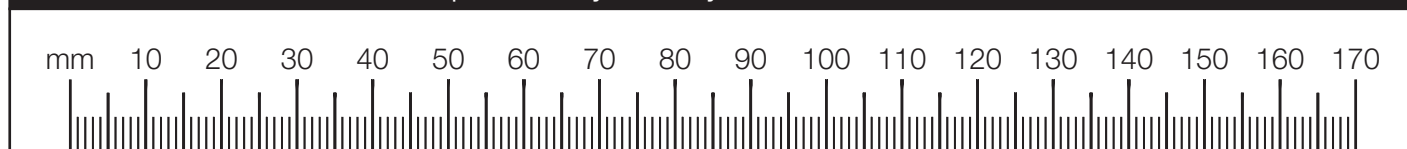

# Assembly Instructions


If you have damaged or missing components, call the  
**Customer Helpline: 03456 400800** quoting the reference  
numbers below

## Step 1

### Prepare the 3 drawer fronts

Screw 2 metal dowels **B** into each of the drawer fronts **8**.

**Note:** Tighten the metal dowels up fully against the panels.

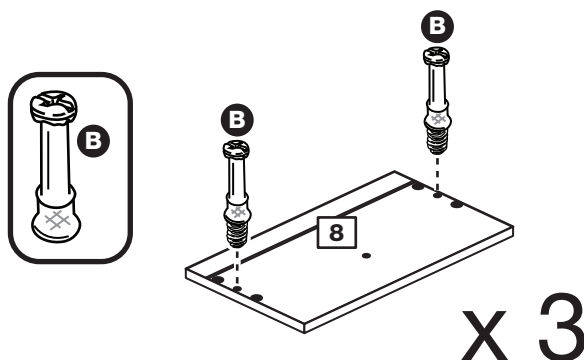


## Step 2

### Prepare the drawer sides

Insert a small locking nut **F** into the hole shown on the left drawer side **9** and the right drawer side **10**.

**Note:** The arrow on the locking nut **must** point towards the hole in the edge of the panel.

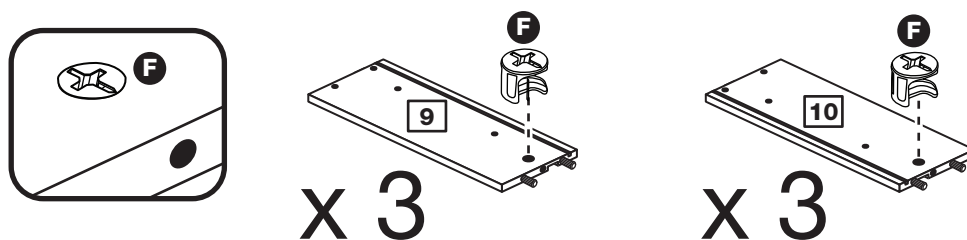

## Step 3


### Attach the drawer sides to the drawer fronts

Push the left drawer sides **9** and right drawer sides **10** onto the back of the drawer fronts **8**.

Turn the small locking nuts **F** on the left drawer side **9** and right drawer side **10**.

**Note:** Turn the locking nuts **F** clockwise to secure panels - more than 1/2 a turn.

**Note:** The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

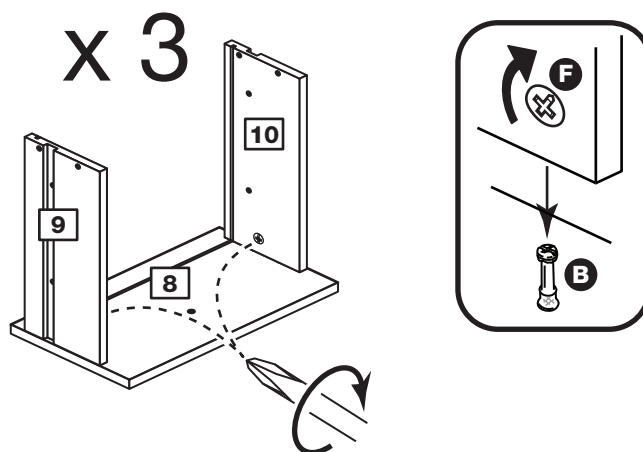


# Assembly Instructions

## Step 4

### Fit the drawer base

Slide the drawer base **12** down the grooves in the drawer sides **9** and **10** and down into the groove in the drawer front **8**.

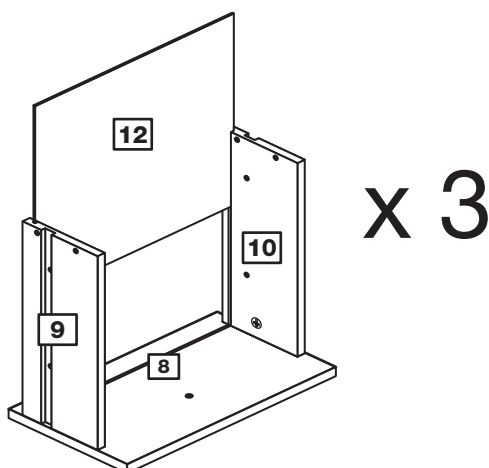


## Step 5

### Fit the drawer back

Fit the drawer back **11** between the drawer sides **9** and **10**. Make sure that the drawer base **12** fits into the groove in the drawer back **11**.

Hold the drawer back **11** in position and tap the knock-in pegs **N** through the holes in the drawer sides **9** and **10**.

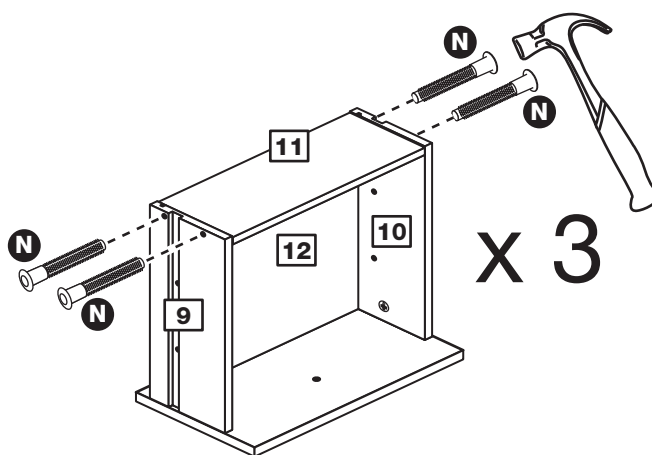


## Step 6

### Attach the handles

Attach a handle **D** to each of the drawer fronts **8** using screw **H**.



**Note: Do not overtighten the screw.**

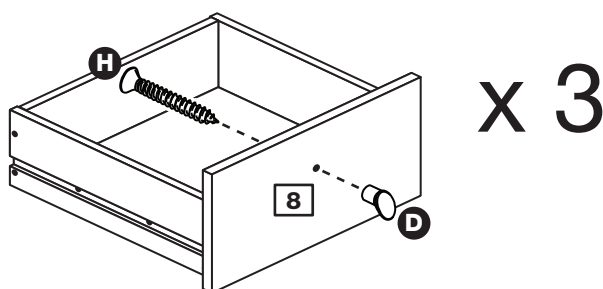

## Step 7

### Fit the wedgfixes

Turn the drawer assemblies over and slide 2 wedgfixes **M** into the front and back grooves, as shown, and tighten up the screws.

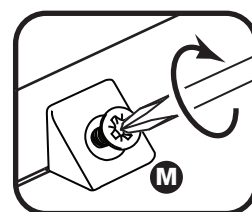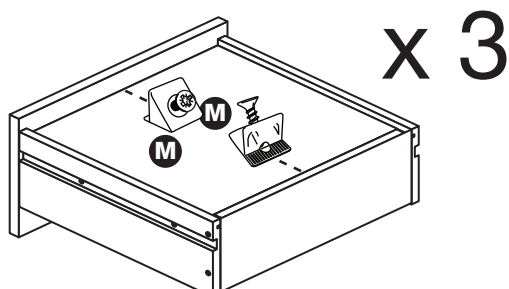

# Assembly Instructions

## Step 8

### Prepare the left side

**a:** Place 3 runners **J** on the left side **1** as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **K**.




**b:** Slide the runner **J** back the other way and fit the 2nd screw **K** into the corresponding hole in the left side **1**.

Insert 2 large locking nuts **E** into the left side **1**.

**Note:** The arrow on the locking nuts **must** point towards the hole in the edge of the panel.

Tap a wooden dowel **A** into the left side **1**.

**Note:** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

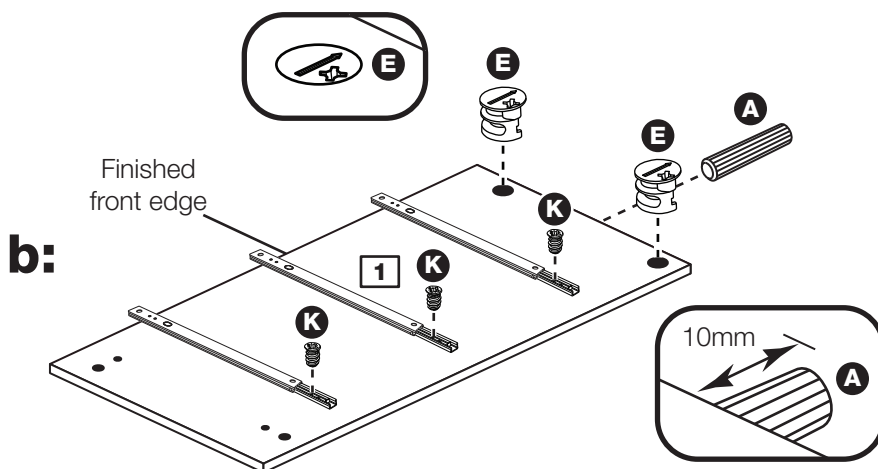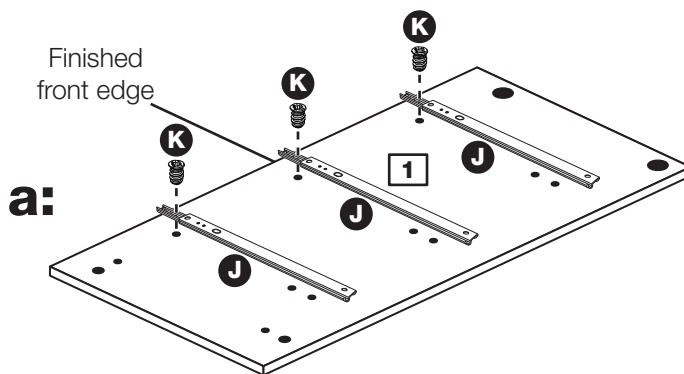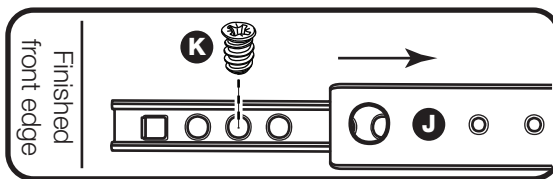

# Assembly Instructions

## Step 9

### Prepare the right side

**a:** Place 3 runners **J** on the right side **2** as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw **K**.


**b:** Slide the runner **J** back the other way and fit the 2nd screw **K** into the corresponding hole in the right side **2**.

Insert 2 large locking nuts **E** into the right side **2**.


**Note:** The arrow on the locking nuts **must** point towards the hole in the edge of the panel.

Tap a wooden dowel **A** into the right side **2**.


**Note:** Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

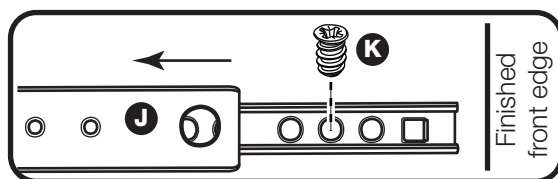

**a:**

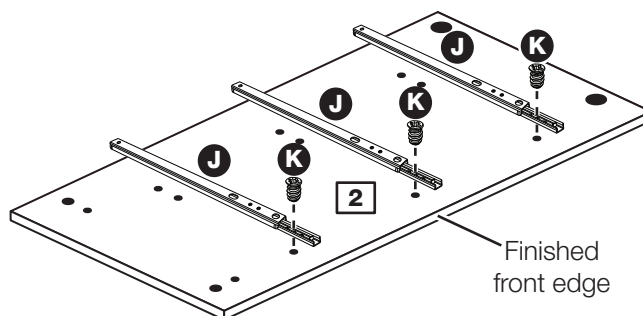

**b:**

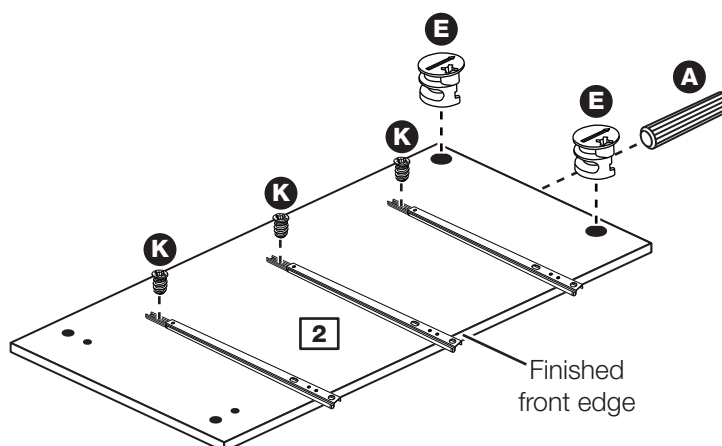


## Step 10

### Prepare the plinth and the rail


Tap 2 wooden dowels **A** into the plinth **6**.

Tap 2 wooden dowels **A** into the rail **7**.

**Note:** The plinth will be finished with the main unit colour on one surface.

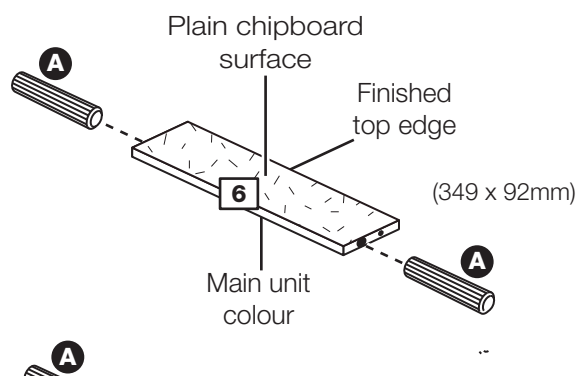

**Note:** The rail may be plain chipboard or its colour may differ from the main unit colour.

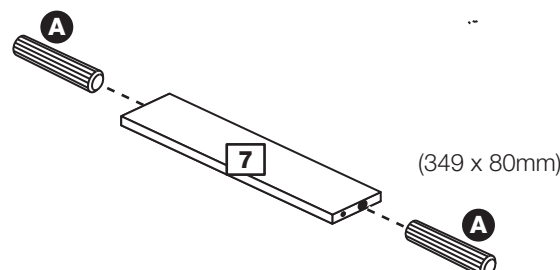




# Assembly Instructions

## Step 11

### Fit the plinth and the rail to the right side

Push the plinth **6** onto the right side **2** and secure it with screw **G**.


Push the rail **7** onto the right side **2** and secure it with screw **G**.

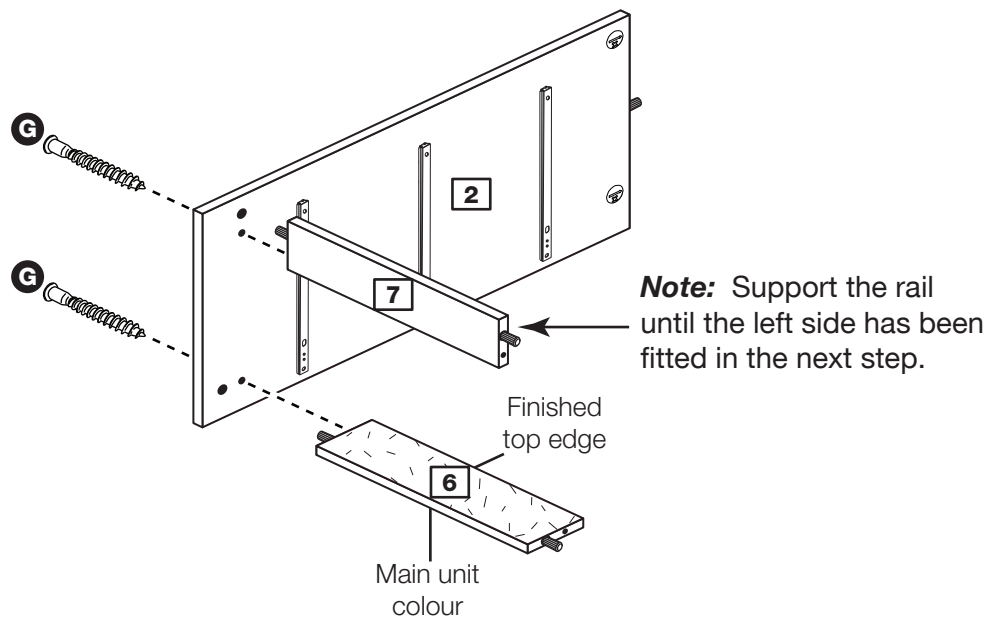

## Step 12

### Fit the left side


Push the left side **1** onto the unit and secure it with 2 screws **G**.

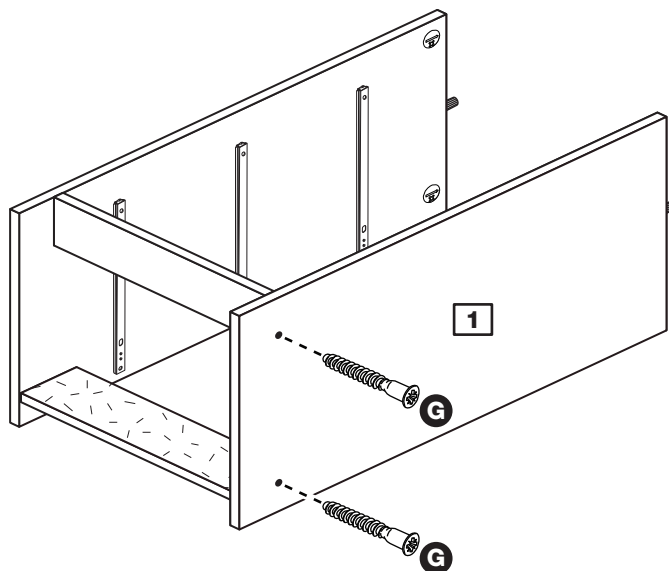

## Step 13

### Fit 4 plastic nails

Tap 2 plastic nails **I** into the bottom edge of each side **1** and **2** as shown.

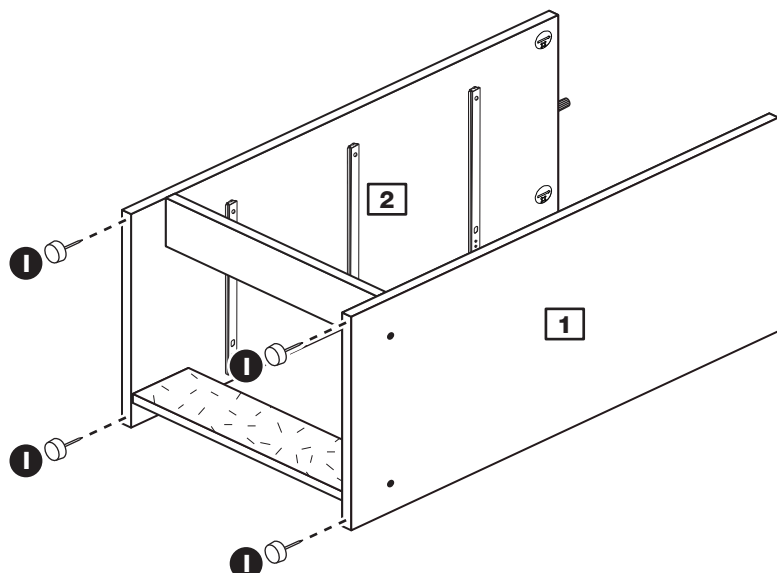

# Assembly Instructions

## Step 14

### Fit the back


**a:** Square up the unit by making sure that measurement **x** to **x** equals **y** to **y**.

**b:** Place the back **13** down onto the unit, making sure that it is flush with the bottom of the rail **7**.

Nail **C** down the sides and along the bottom edge of the back **13**.

**Note:** Nails should be spaced about 150mm apart.

**a:** The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

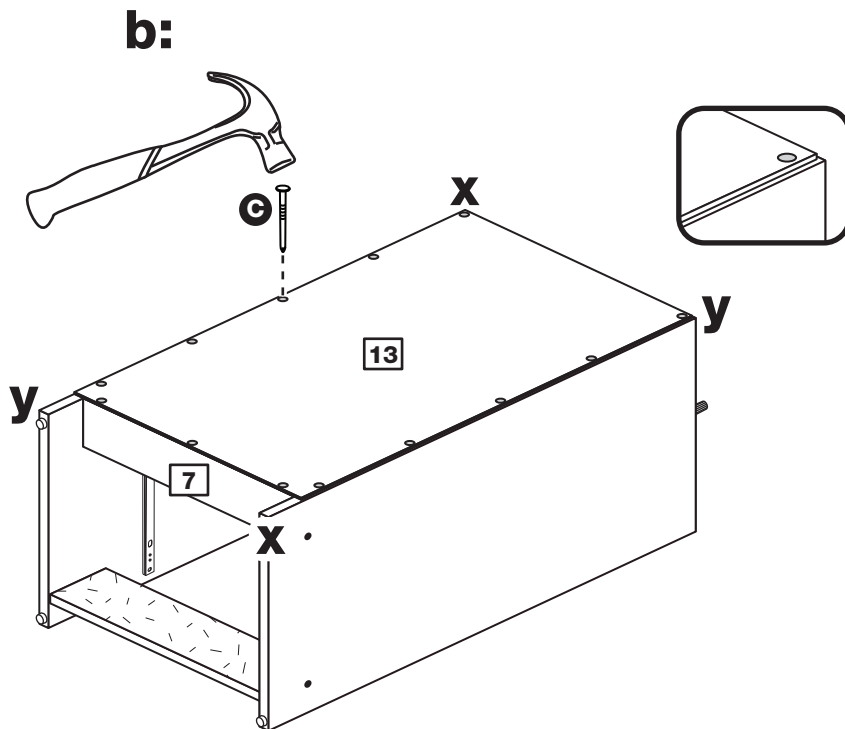


## Step 15

### Prepare the 2 bookcase ends

Insert 2 large locking nuts **E** into each bookcase end **3**.

Tap a wooden dowel **A** into each bookcase end **3**.

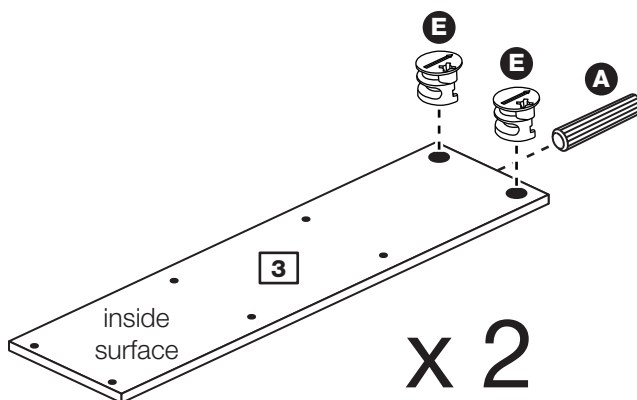


# Assembly Instructions

## Step 16

### Fit the shelves to the bookcase ends


Attach the 3 shelves **5** to the bookcase ends **3** using 12 screws **G**.

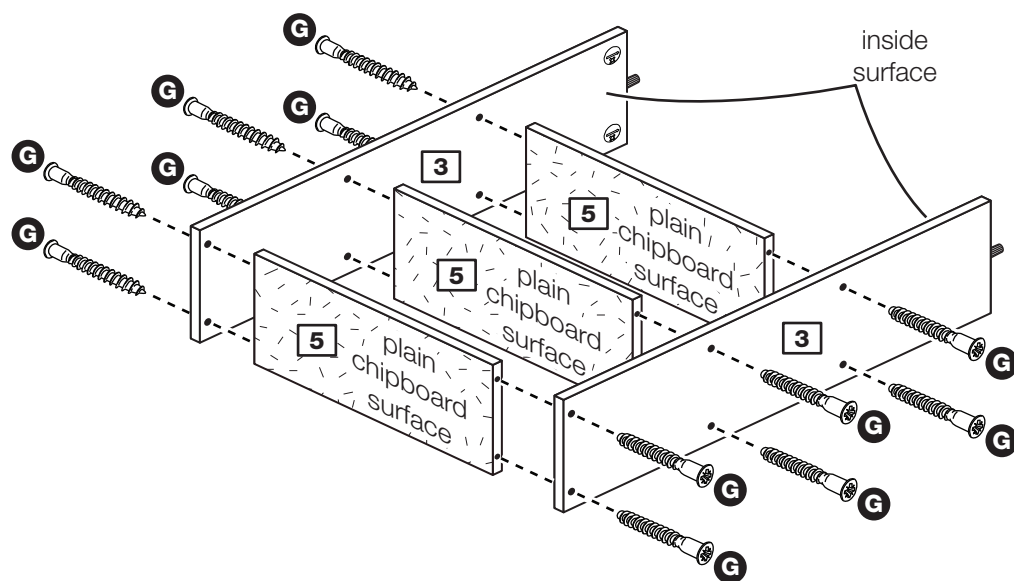

## Step 17

### Fit 4 plastic nails

Tap 2 plastic nails **I** into the bottom edge of each bookcase end **3** as shown.

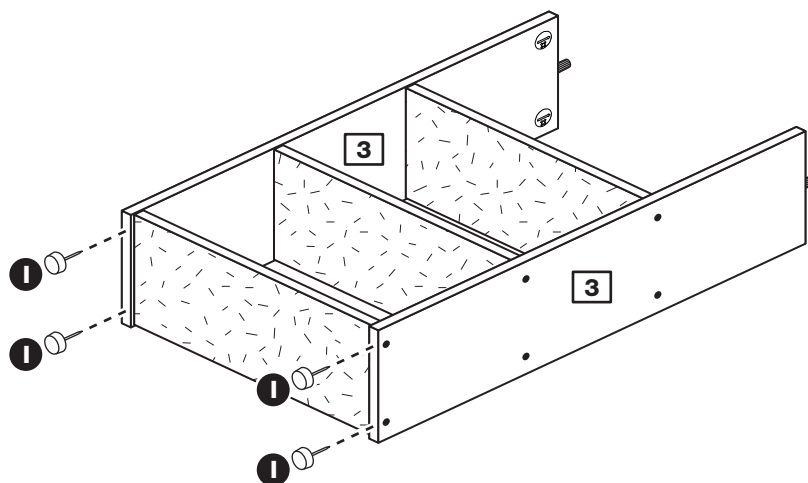


# Assembly Instructions

## Step 18

### Choose desk layout

Before going onto the next step, decide which way around you would like your desk to be.


Place the 2 assemblies where the desk will be used, so that the unit does not have to be moved once the top panel has been secured into place.

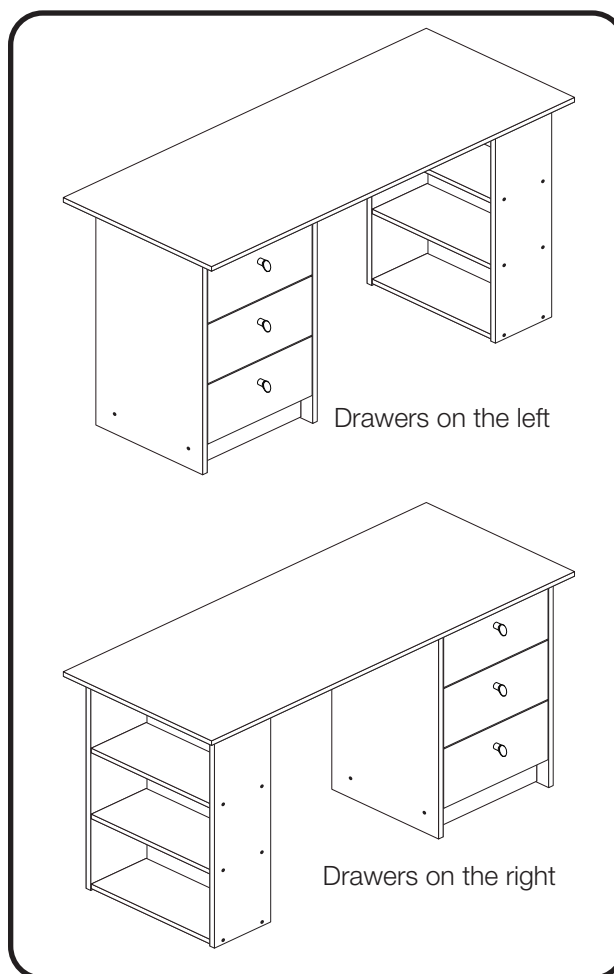

## Step 19

### Prepare the top

Screw 8 metal dowels **B** into the top **4**.

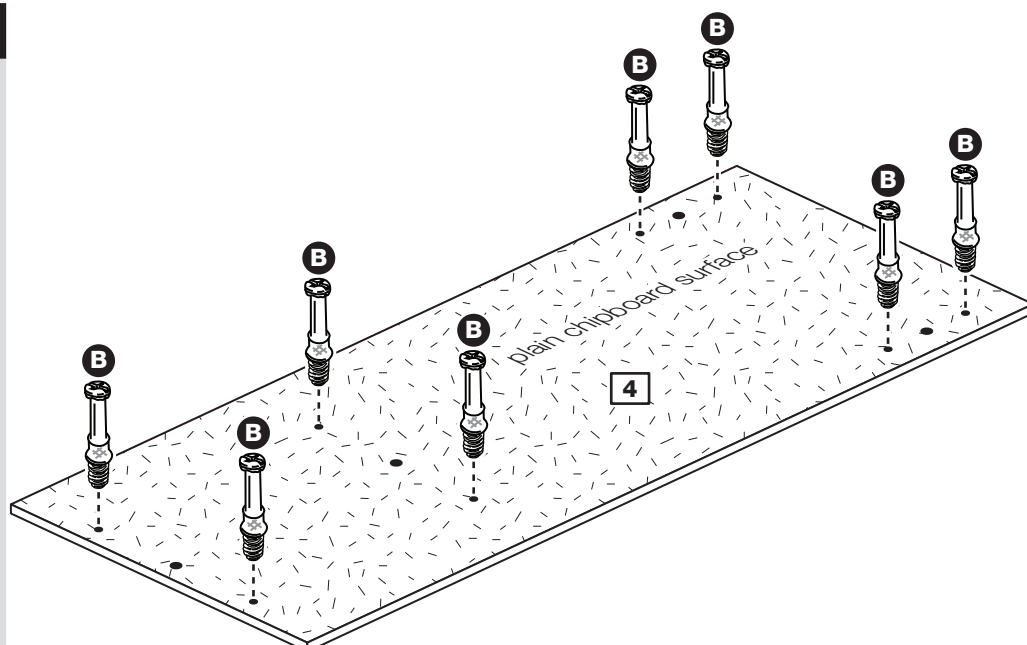

# Assembly Instructions


## Step 20

### Fit the top

Lift the top **4** and push the 8 metal dowels **B** fitted to the top **4** down into the holes in the top edge of the sides and bookcase ends **1**, **2** and **3**.

Use a screwdriver to tighten the 8 large locking nuts **E** fitted to the sides and bookcase end panels **1**, **2** and **3**.

**Note:** Turn the large locking nuts **E** as far as they will go - more than 1/2 a turn.

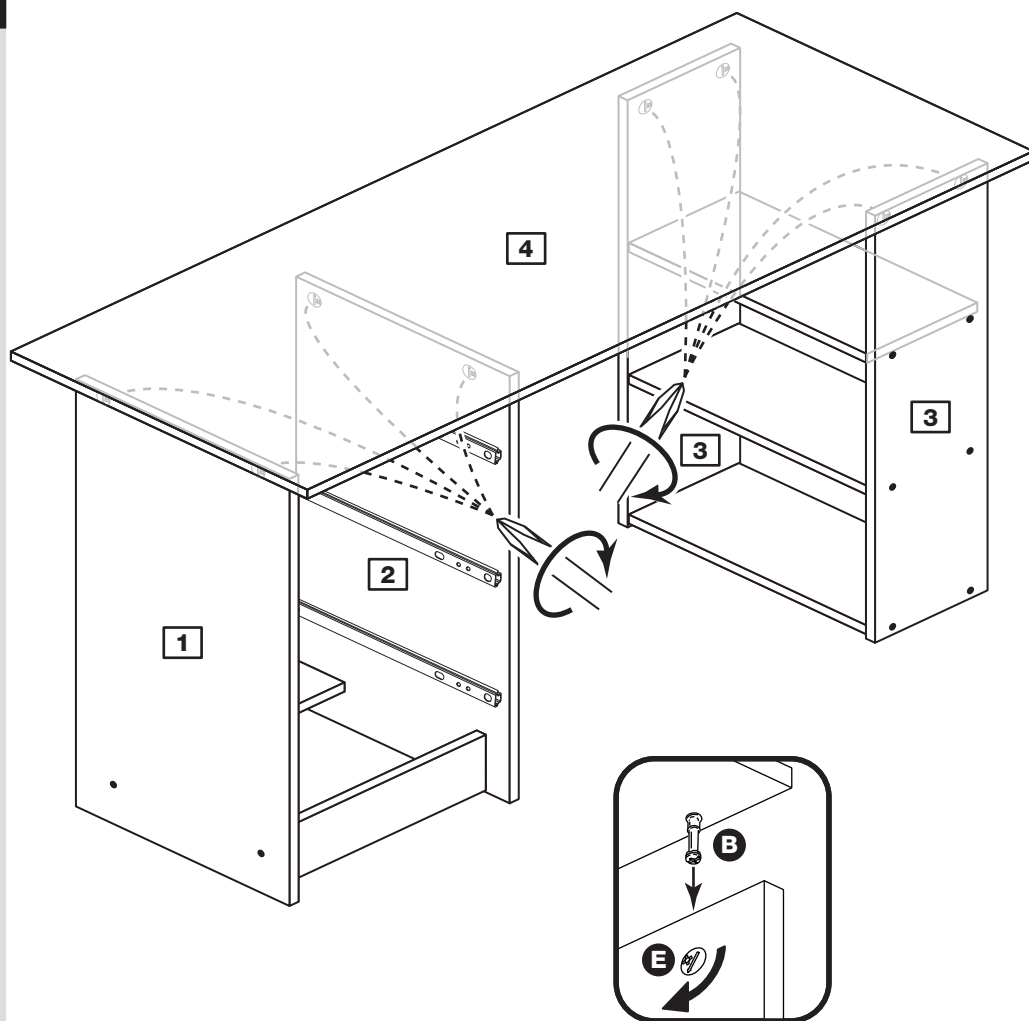

# Assembly Instructions

## Step 21

### Fit the drawers



Starting with the bottom drawer, slide both the runners **J** forward and locate the drawer sides **9** and **10** between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners **J**.

Working from the inside of the drawer, insert 2 screws **L** through the drawer sides and out into the 2nd threaded hole in the runner.

### Assembly is complete



**Warning:** The unit is heavy. Lift with care.

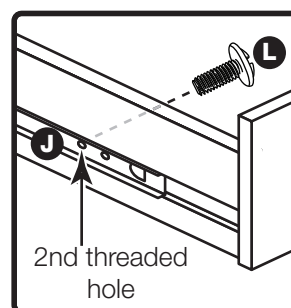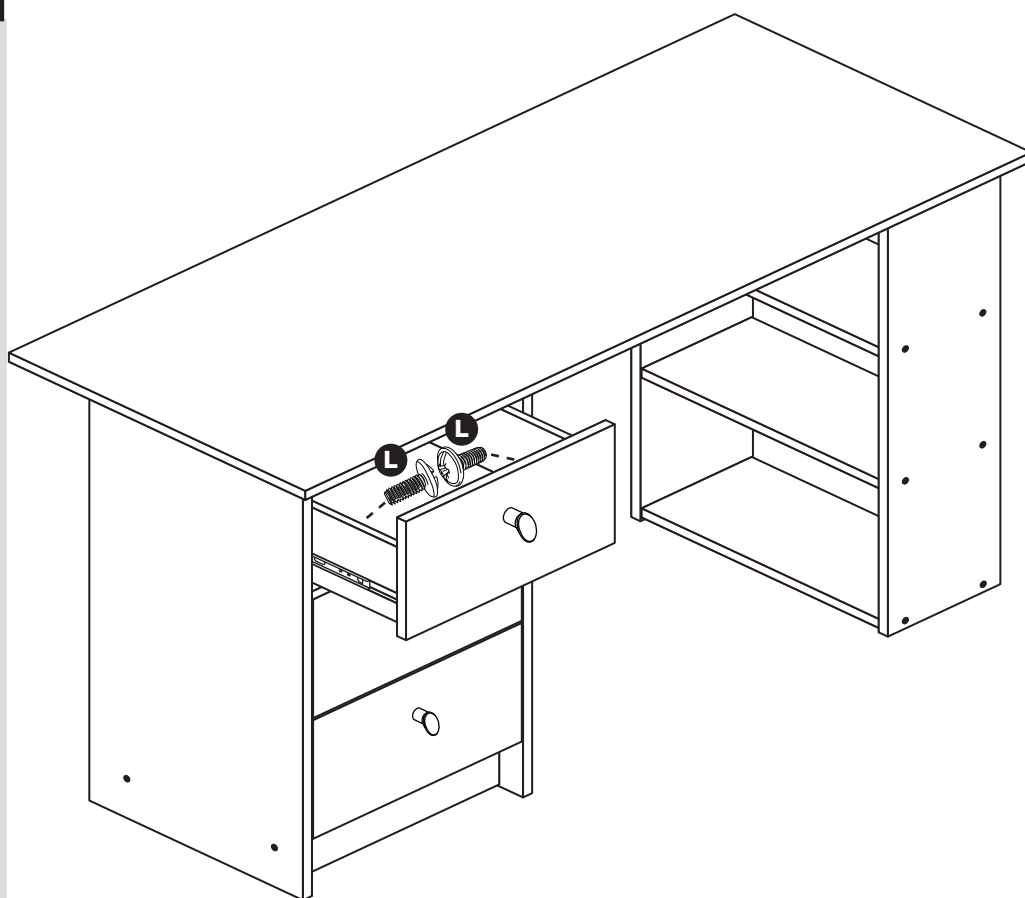

**Note:** Do not overtighten the screws. If they catch on the runner you may need to loosen them slightly.

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800** and quote the reference numbers on the component pages.

Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW



