
avignon 3 door mirrored wardrobe

Assembly Instructions - Please keep for future reference

247/8678

239/9568

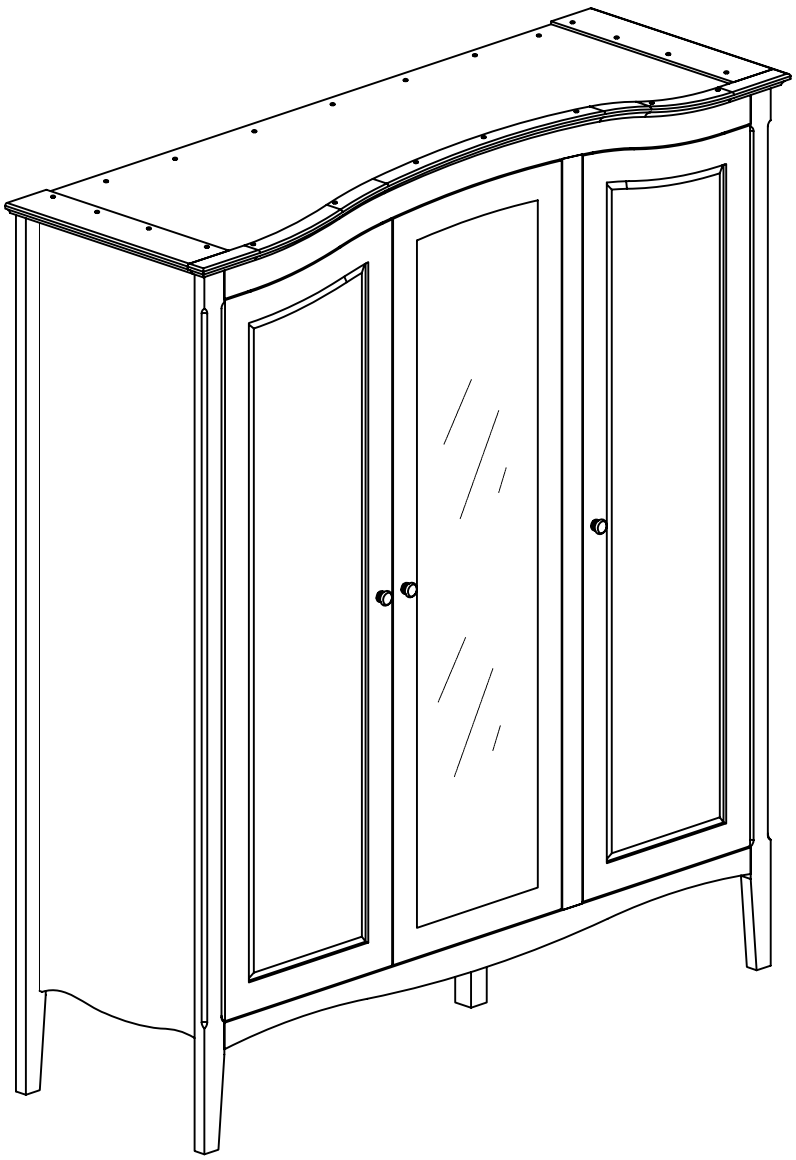

Dimensions

Width - 168cm
Depth - 56.7cm
Height -198cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts,call the
Customer Helpline: Argos = 0345 6400 800

Issue 1 - 11/06/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws,*** as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Glue safety - Take care when using glue, please follow the advice below

Skin contact: Remove contamination by washing with soap and water. This procedure should also be followed prior to eating and drinking.

Eye contact: Rinse immediately with clean water for 15 minutes and seek medical advice.

If swallowed: Seek medical advice immediately.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts


• Regularly check and ensure that all bolts and fittings are tightened properly.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**


Please check you have all the panels listed below

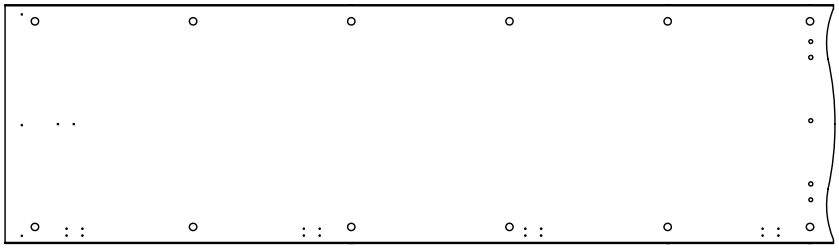


1 Side Panel, Left ×1 (167.9 × 48.3cm)

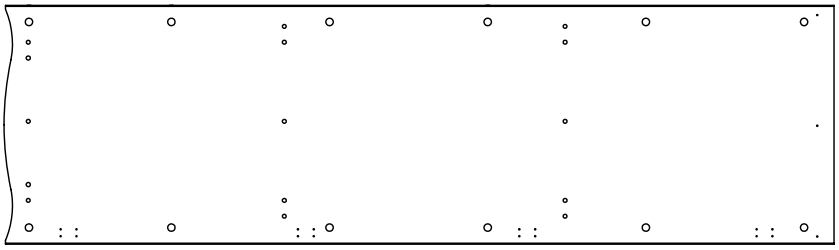


2 Side Panel, Right ×1 (167.9 × 48.3cm)

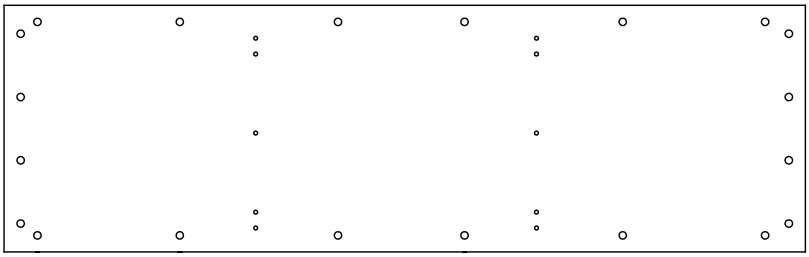

3 Divider ×1(162.1 × 49.9cm)

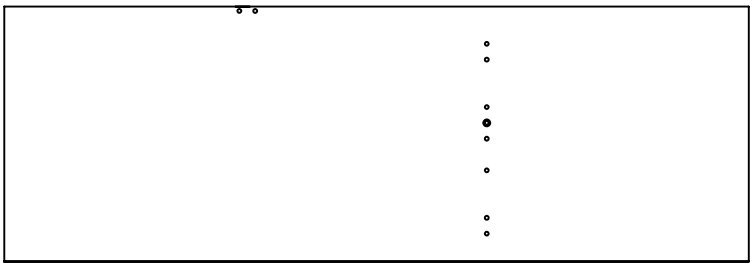

4 Bottom panel×1 (150.6 × 51.7cm)




5 Plinth bar ×1 (150.6 × 6.8cm)


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**

Please check you have all the panels listed below




6 Leg, Rear left ×1 (188.9 × 5.7cm)



7 Leg, front left ×1 (188.9 × 5.7cm)




8 Leg, Front Rtight ×1 (188.9 × 5.7cm)



9 Leg, Rear Rright ×1 (188.9 × 5.7cm)



10 Horizontal bar, front ×1 (161.2 × 5.7cm)




11 Horizontal bar, back ×1 (155.3 × 5.7cm)


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**


Please check you have all the panels listed below

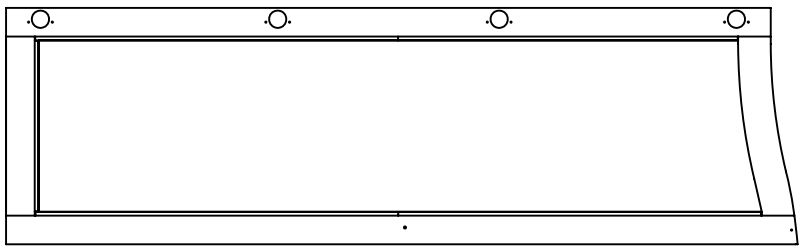


12 Door panel, Right ×1 (160.1 × 47.85cm)

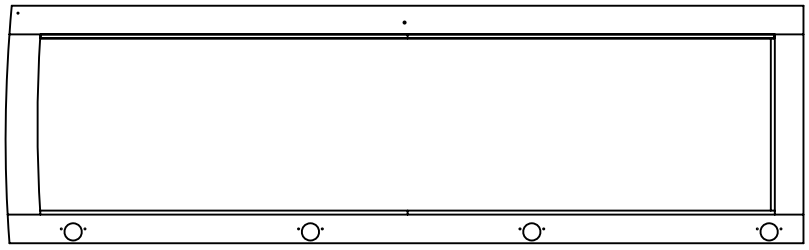


13 Door panel, middle ×1 (161.4 × 48.05cm)

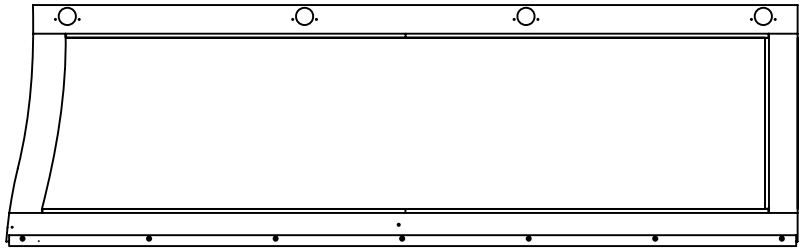


14 Door panel, left ×1 (160.1 × 48.75cm)

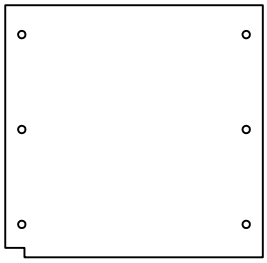

15 Shelf ×2 (52.1× 51cm)



16 Central leg ×1 (25 × 4.5cm)




17 Horizontal bar ×1(155.3 × 5.7cm)

Components - Panels

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**


Please check you have all the panels listed below

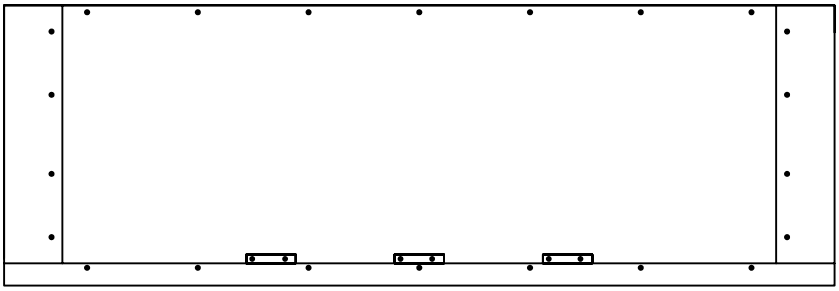

18 Top panel ×1 (168 × 56.7cm)



19 Back panel, left side ×1 (163.9 × 50.85cm)



20 Back panel, middle ×1 (163.9 × 50.85cm)












21 Back panel, Right side ×1 (163.9 × 50.85cm)


Components - Fittings


Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

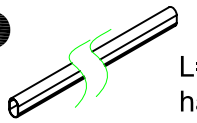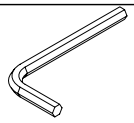A  Large locking pin x 71	B  D15×12mm large locking nut x 71	C  D8*30 Wooden dowel x 54
D  caps x 36	E  M3.5*15 screw x 76	F  Ø3.0*12 screw x 3
G  Magnet part 2 x 3	H  hanging rail support x 2	I  L=958mm hanging rail x 1
J  M7*40 Screw × 1	K  D35 cross plate x 12	L  D35 door hinge x 12
M  Allen Key x 1	N  Ø3.0*12 screw x 4	O  magnet part 1 x 1
P  M3.0*15 screw x 52	Q  D4*9 washer x 16	R  wall strap x 2
S  handle x 3	T  Ø3.5*30 screw x 6	U  magnet part1x1
V  screw for handle x 3		


Tools required


Phillips screwdriver (medium & large)


Flatblade screwdriver (medium)


Small hammer


Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions

Step 1

a.Insert 6 Locking pins Ⓐ into Leg 6
b.Repeat all the steps to the other legs 7 8 9 10 11

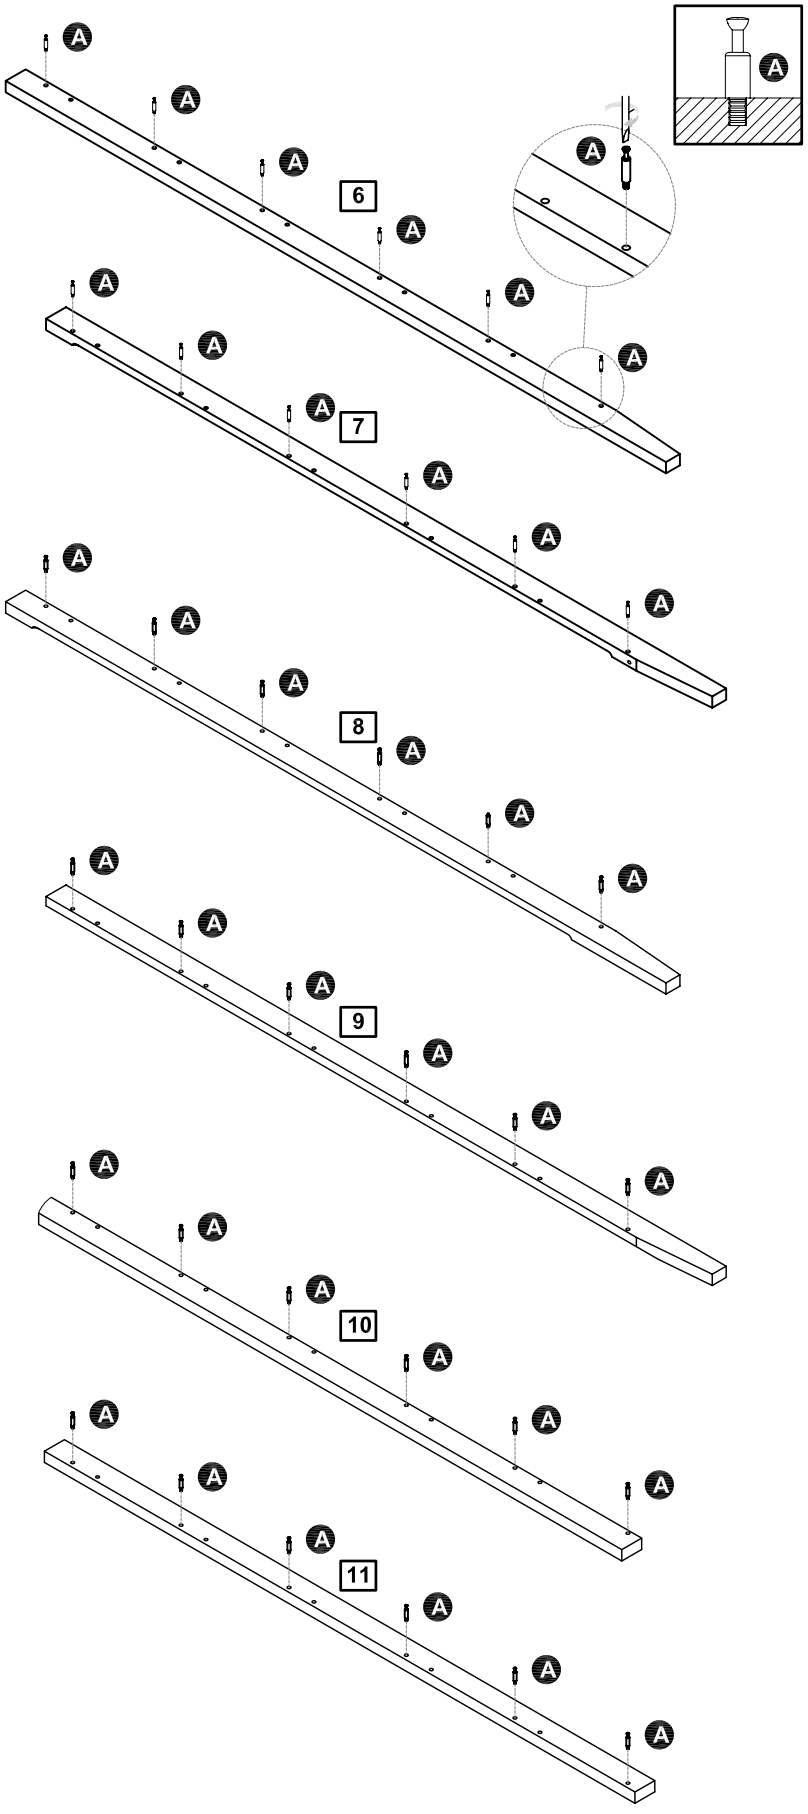



Assembly Instructions


Step 2

a.Insert 10 Wooden dowel C into Side panel 1 .

b. Repeat all step to Side panel 2 and Divider 3 .

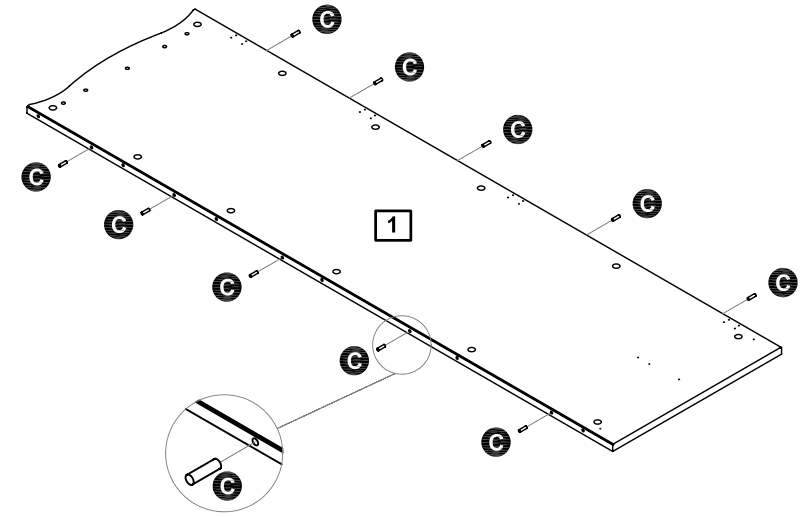

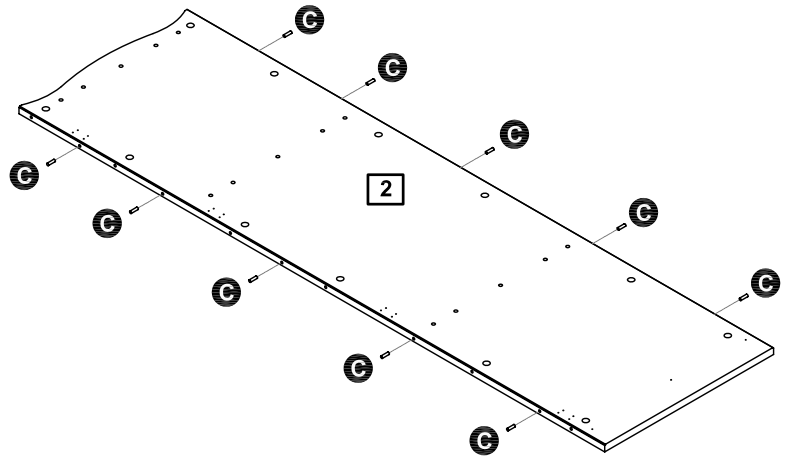


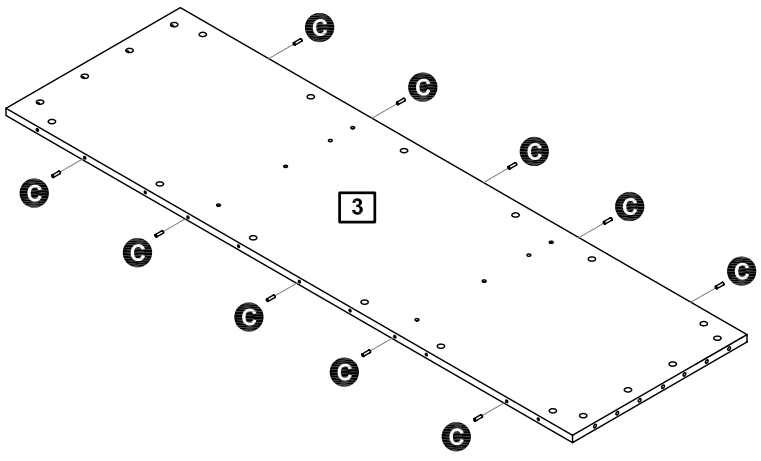



Assembly Instructions


Step 3

a. Attach leg 6 and 7 to Side panel 1 by using 12 Large locking nuts B. Then, add caps D on the locking nuts.
b. Repeat all the steps to Side panel 2 and Divider 3.

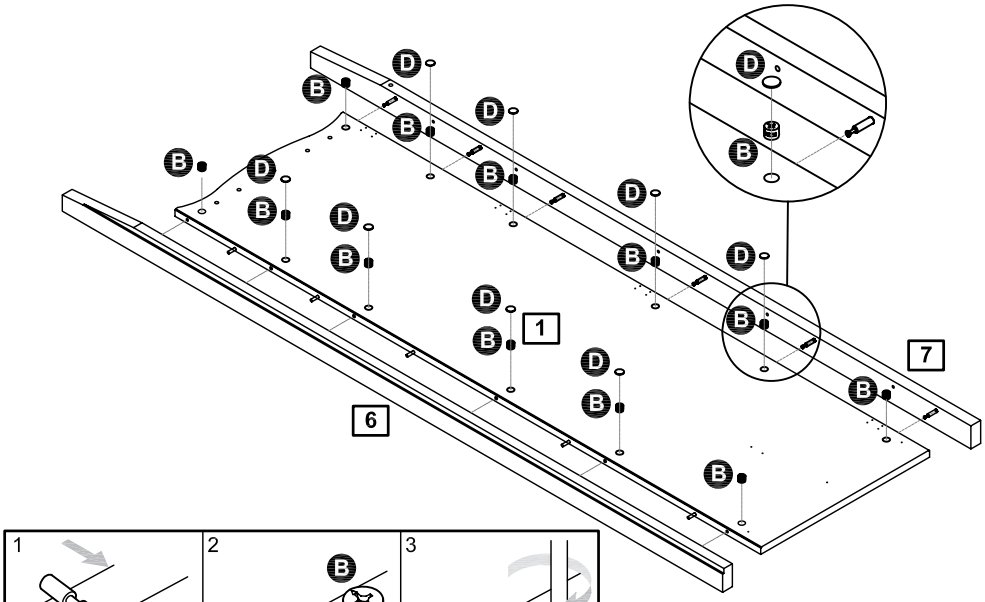

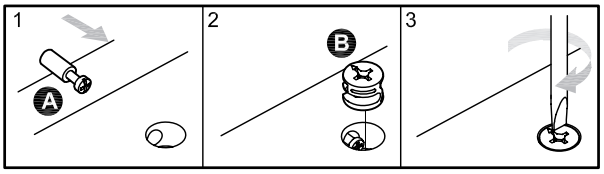

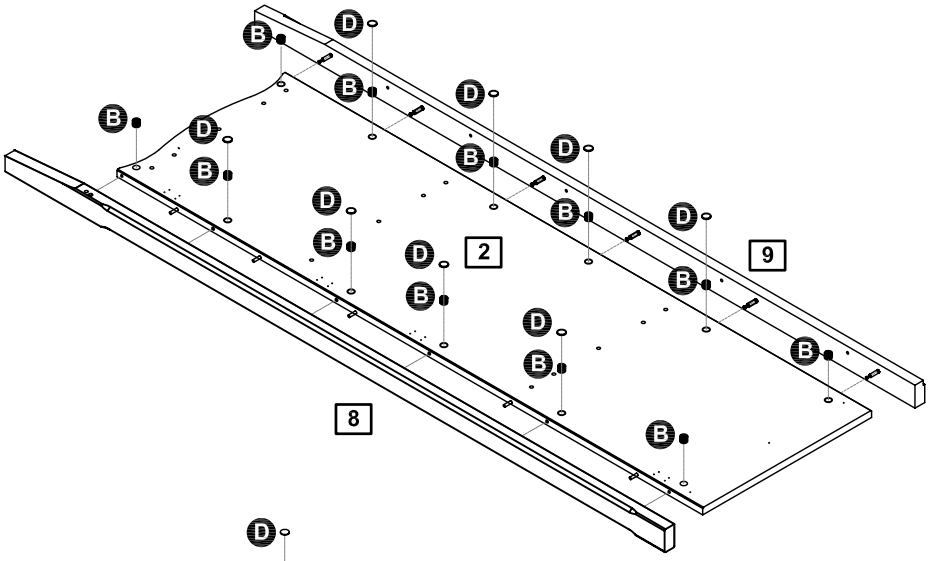

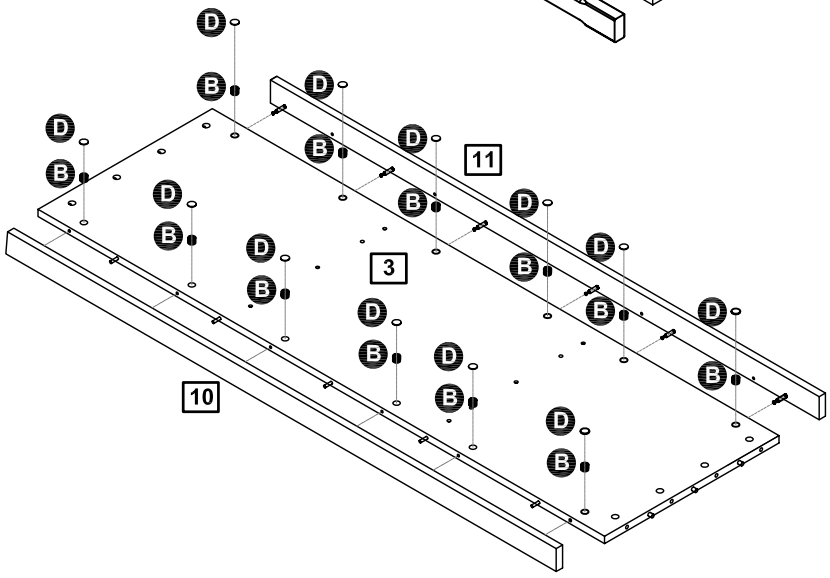

Assembly Instructions

Step 4


a.Insert 4 large locking pin (A) into Side panel [1]

b. Fix 4 Cross plate (K) onto Side panel [1] by using 16 Screw (E)
c. Fix Hanging rail support (H) onto Side panel [1] by 2 Screw (E)
d.Insert 10 Large locking pin (A) into Side panel [2]

e. Fix 4 cross plate (K) onto Side panel [2] by using 16 Screw (E)

Step 5


a. Insert 6 large locking pin (A) into Divider [3]
b. Insert 6 Wooden dowel (C) into Divider [3]
c. Turn over Divider [3]
d. fix Hanging rail support (H) onto Divider [3] by using 2 Screw (E)
e. Fix 4 cross plate (K) onto Divider [3] by using 16 Screw (E)

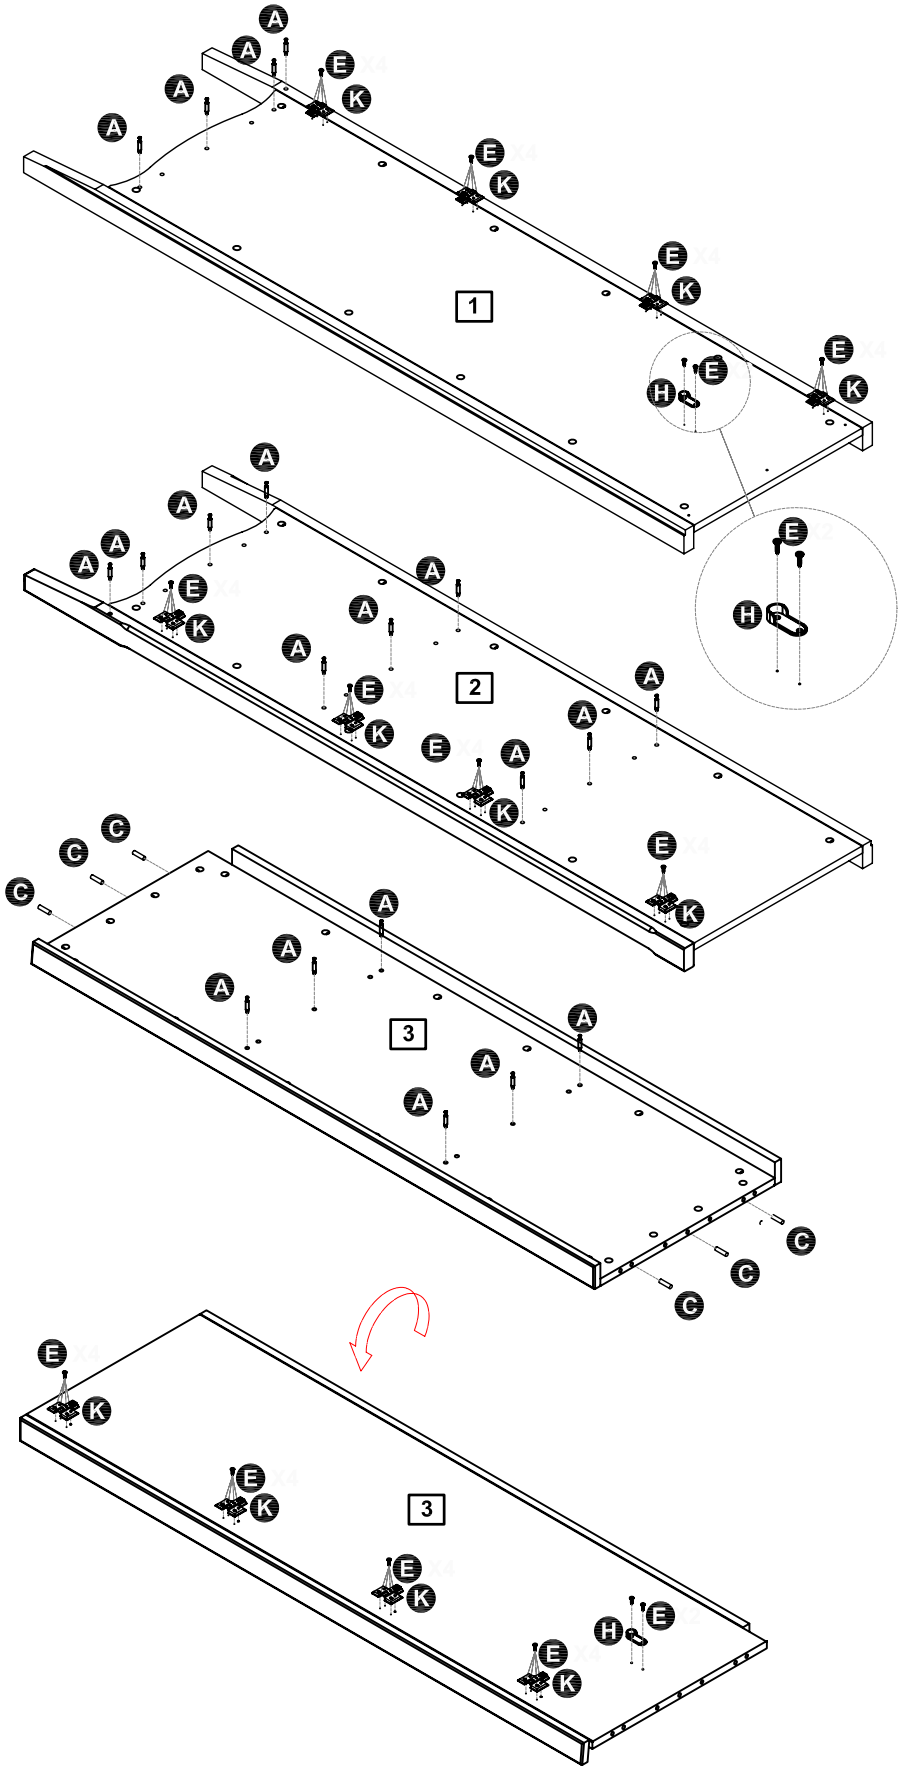

Assembly Instructions


Step 6


a.Insert 5 Large locking pin (A) into Top panel [18]
b.Fix 1 Magnet part 1 (U) and 1 Magnet part 1 (O) on to Top panel [18] by 4 Screw (N)

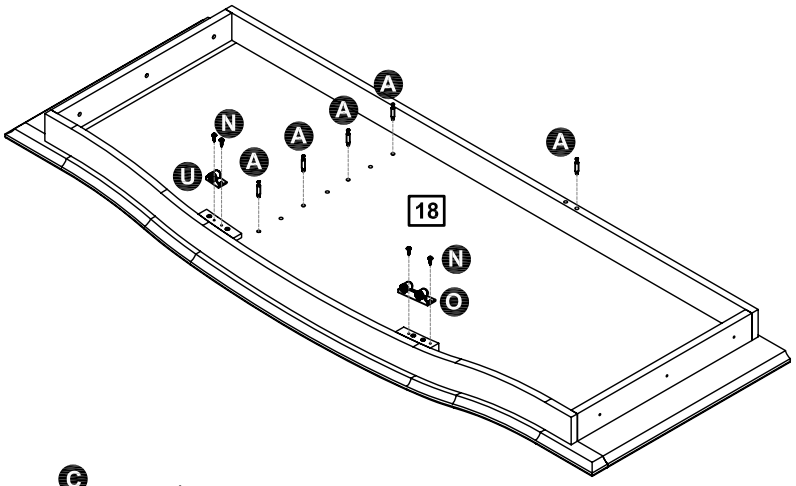


Step 7

a. Insert 8 wooden dowel (C) and 5 Large locking pin (A) into Bottom panel [4]
b. Insert 5 Large locking pin (A) into Plinth bar [5]
c. Fix 4 Door hinge (L) onto Door panel right [12] by 8 Screw (E)
d. Fix 1 Magnet part 2 (G) onto Door panel right [12] by Screw (F)

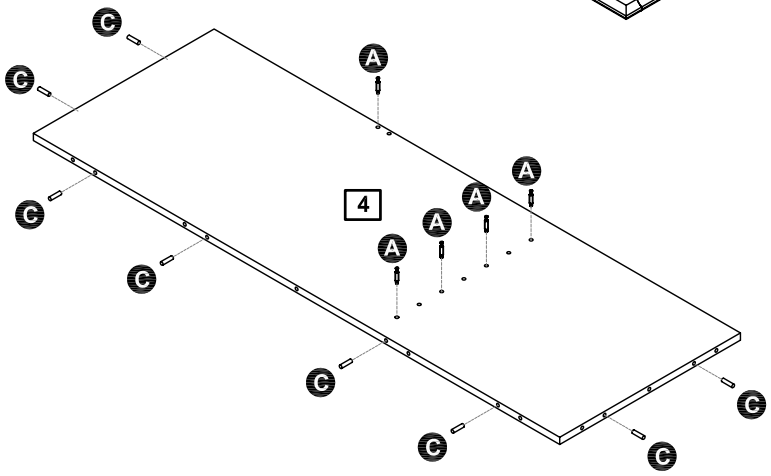

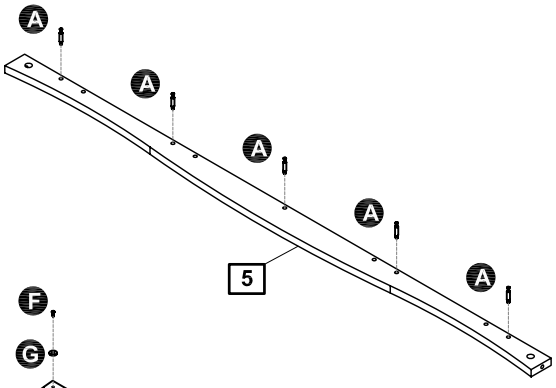


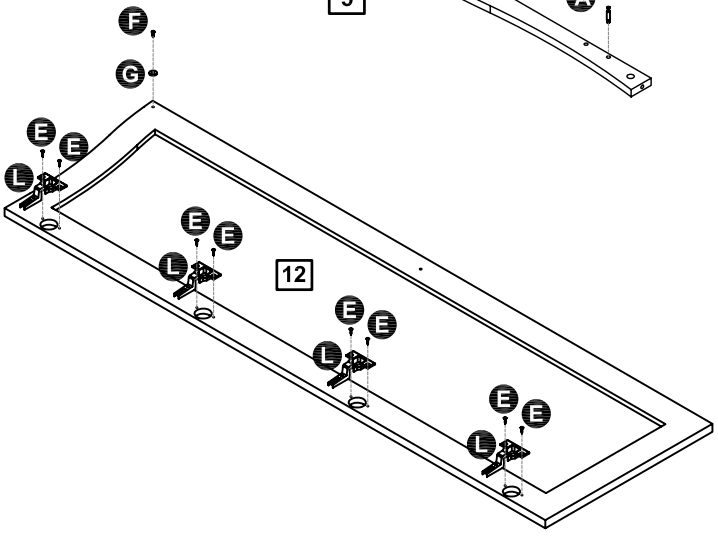

Assembly Instructions

Step 8


a.Repeat step 7 for Door panel left 14 and Door panel middle 13

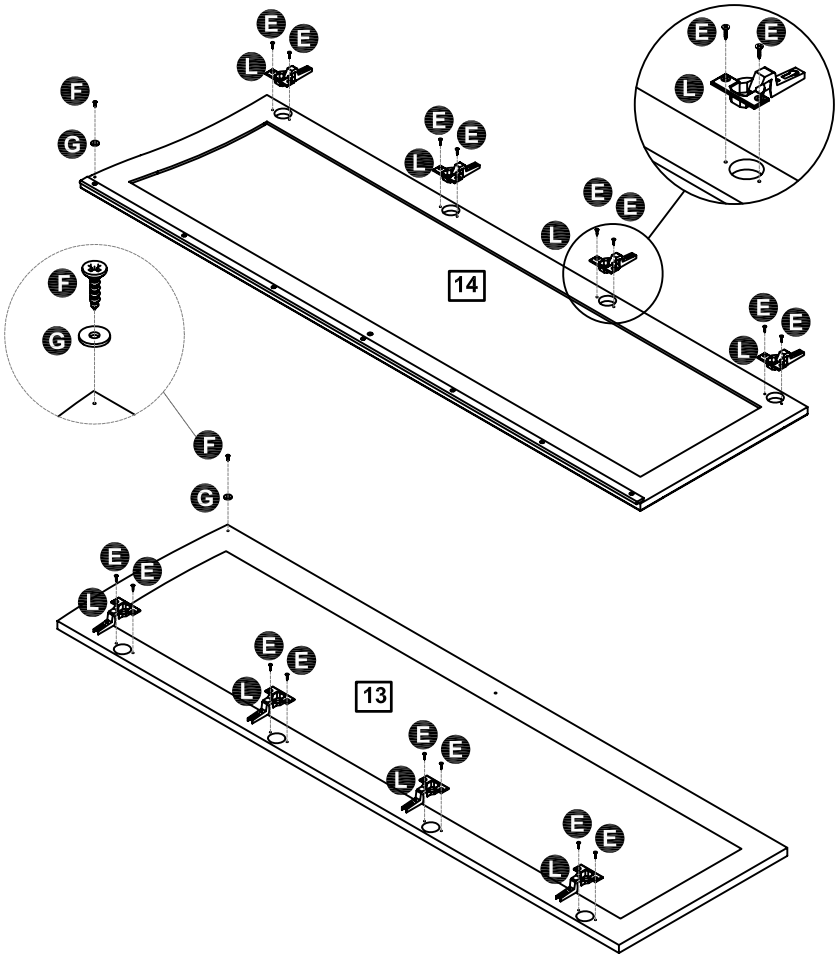

Step 9

a. Insert 4 Wooden dowel C into Shelf 15


b. Insert 2 Wooden dowel C into Horizontal bar 17

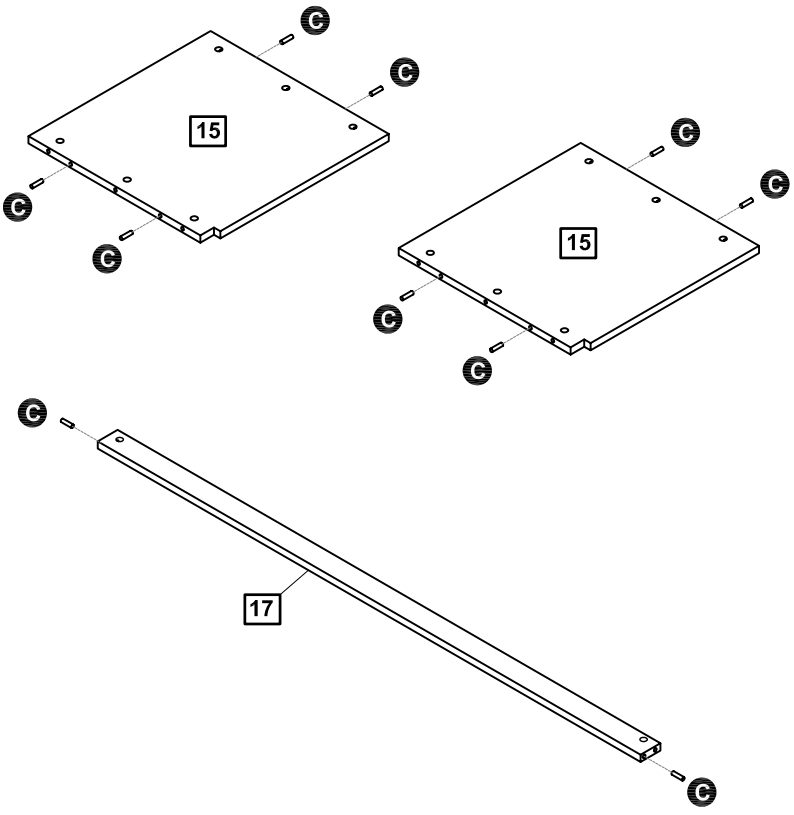



Assembly Instructions

Step 10

a. Attach Plinth bar [5] to Bottom panel [4] by 5 locking nut (B)
b. Attach Central leg [16] to Bottom panel [4] by 1 Screw (J)
c. Attach 2 shelf [15] to Divider [3] by 6 large locking nut (B)
d. Attach Divider [3] to Bottom panel [4] by 4 Large locking nut (B)
e. Add Caps (D) on the locking nuts (B)

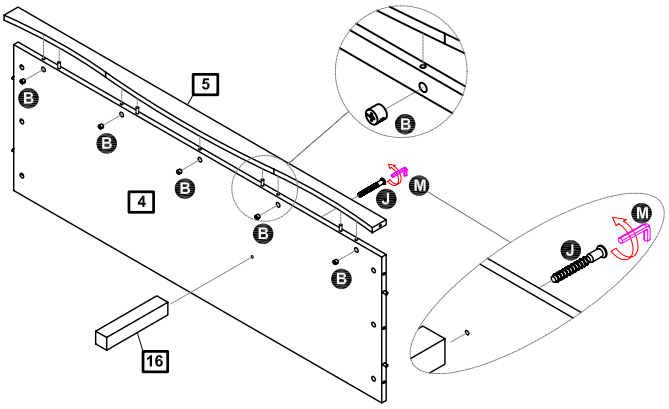


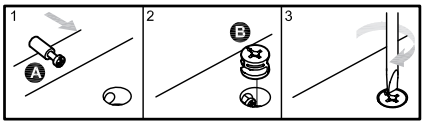

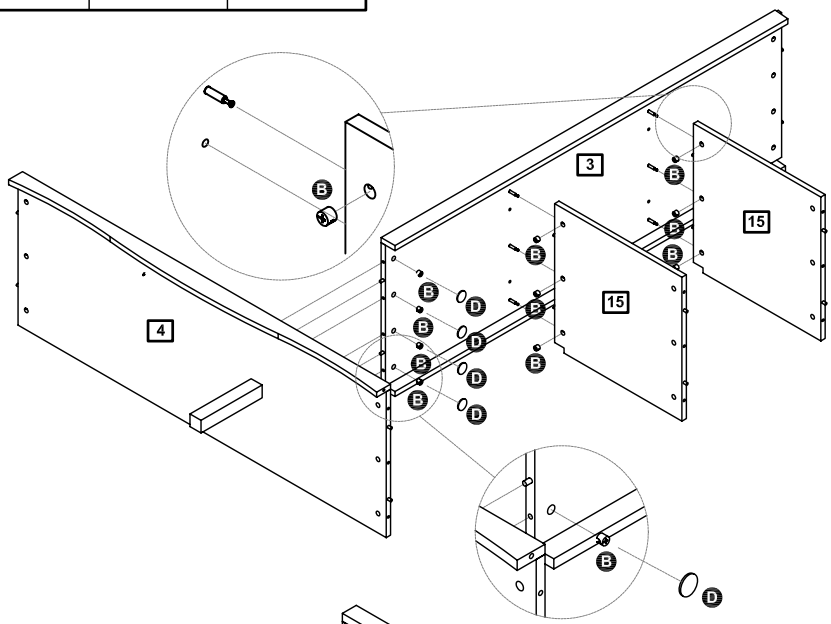


Step 11


Attach Side panel [2] to the unit by 10 Large locking nut (B)

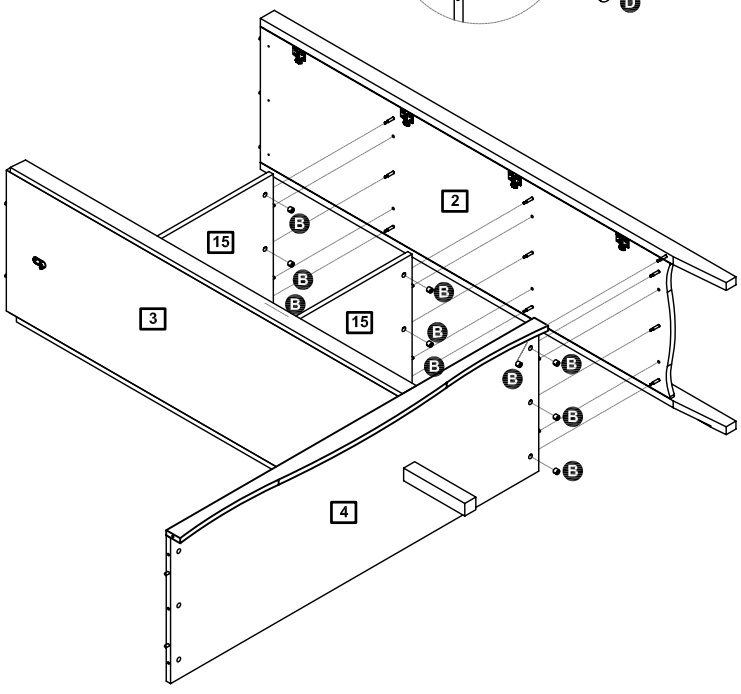

Step 12


Attach Side panel 1 to Bottom panel 4 by 4 Large locking nut B

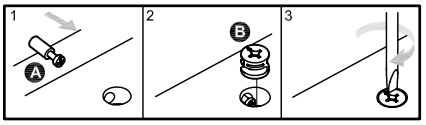

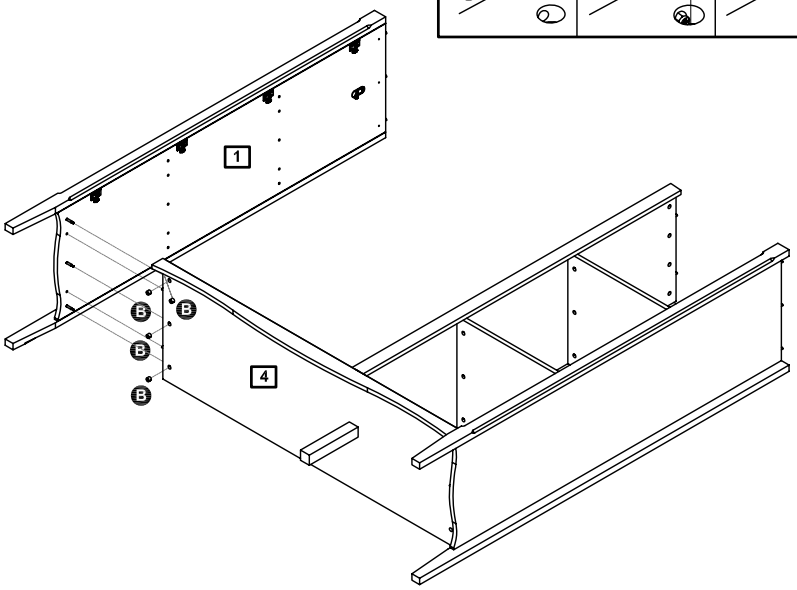

Step 13


a.Attach Horizontal bar 17 to Bottom panel 4 by 1 locking nut B
b.Attach Top panel 18 to the unit
c. Fix Horizontal bar 17 and Divider 3 with Top panel 18 by 5 locking nut B

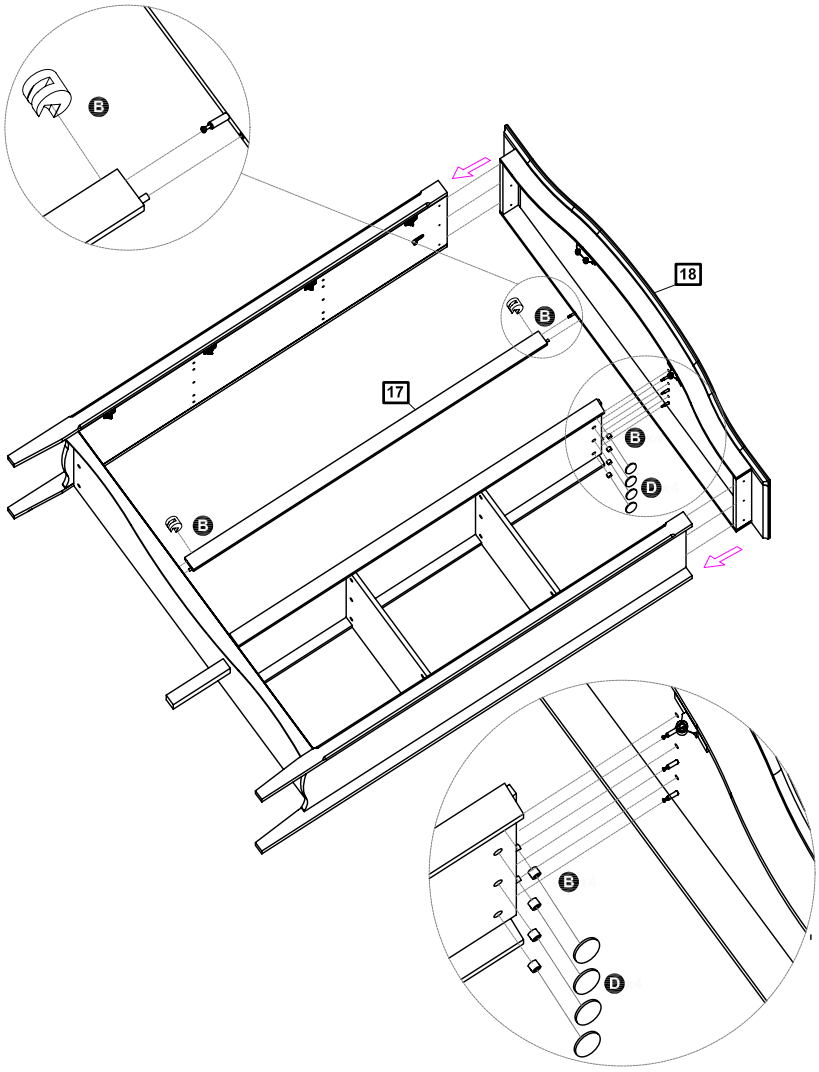

Assembly Instructions

Step 14


Fix top panel 18 by 6 screw T

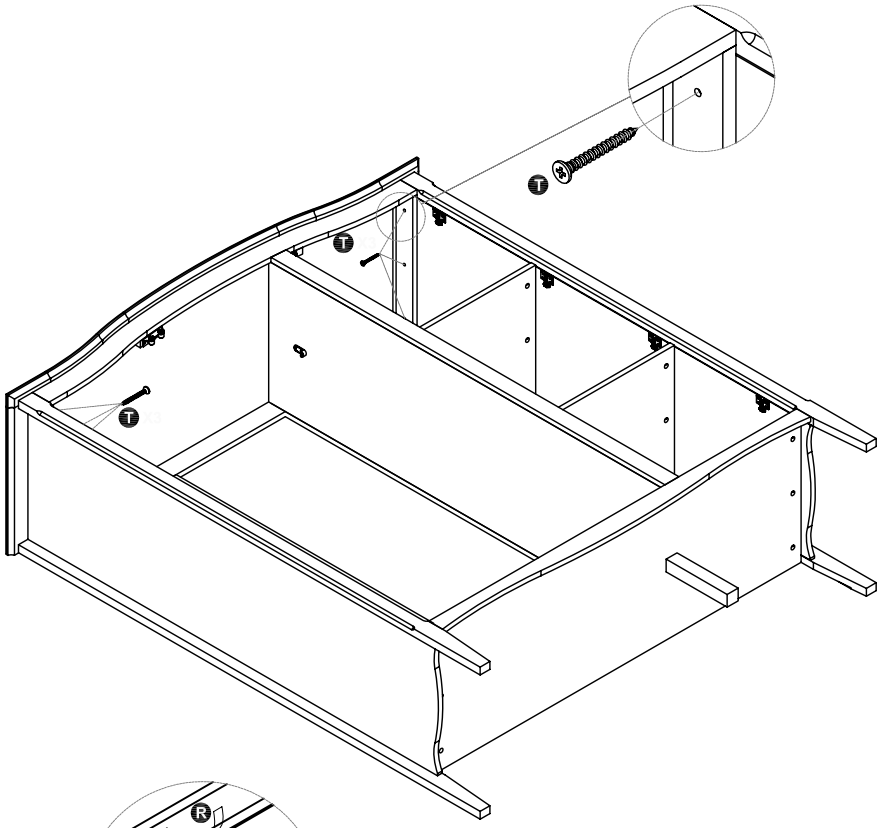

Step 15


a. Fix 3 back panels 19 20 21 to the back of the wardrobe by 50 screw P, the connection part of the back panels need 12 Washer Q

b. Fix 2 Wall strap R by 2 Washer Q and 2 Screw P

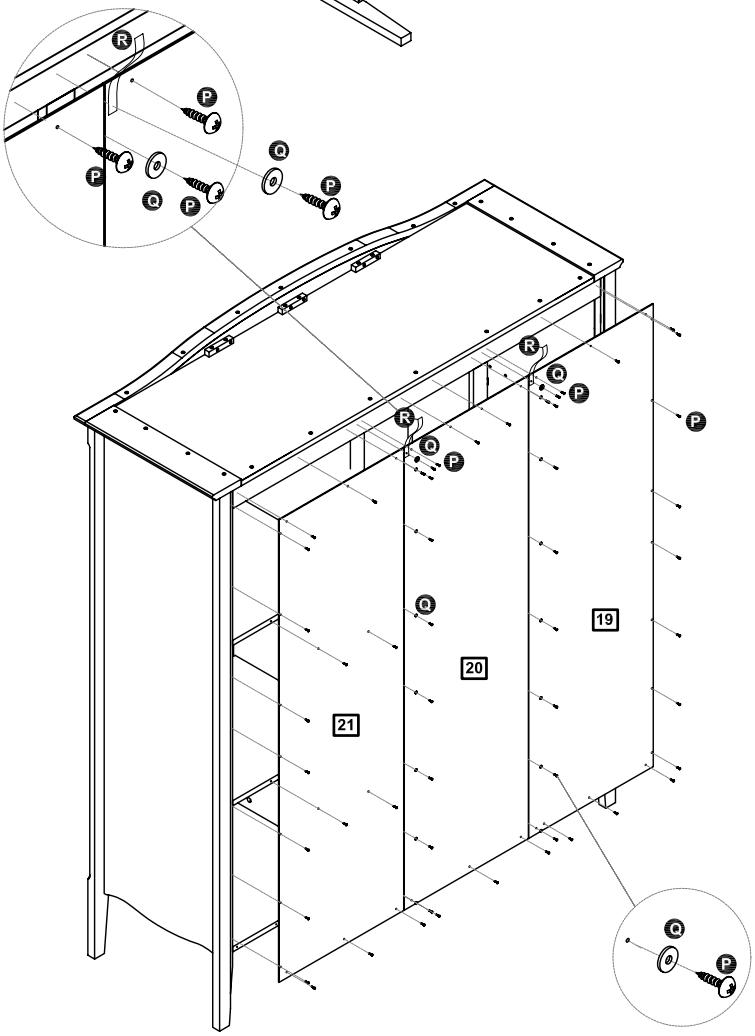


Step 16

Install hanging rail ❶ to the unit.

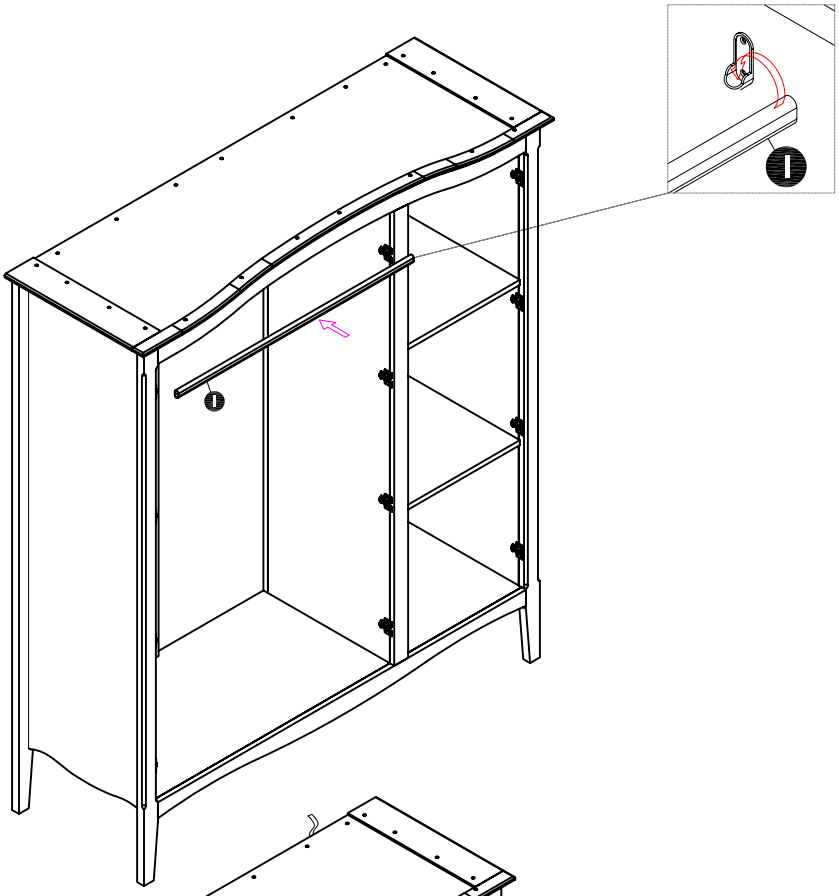

Step 17

a. With help, slot Door hinges Ⓛ onto Cross Plate Ⓚ
b. Tighten screw shown to lock hinges in position
c. repeat a.b for the other doors.
d. fix 3 Handles Ⓢ onto the Doors by 3 Screw Ⓥ

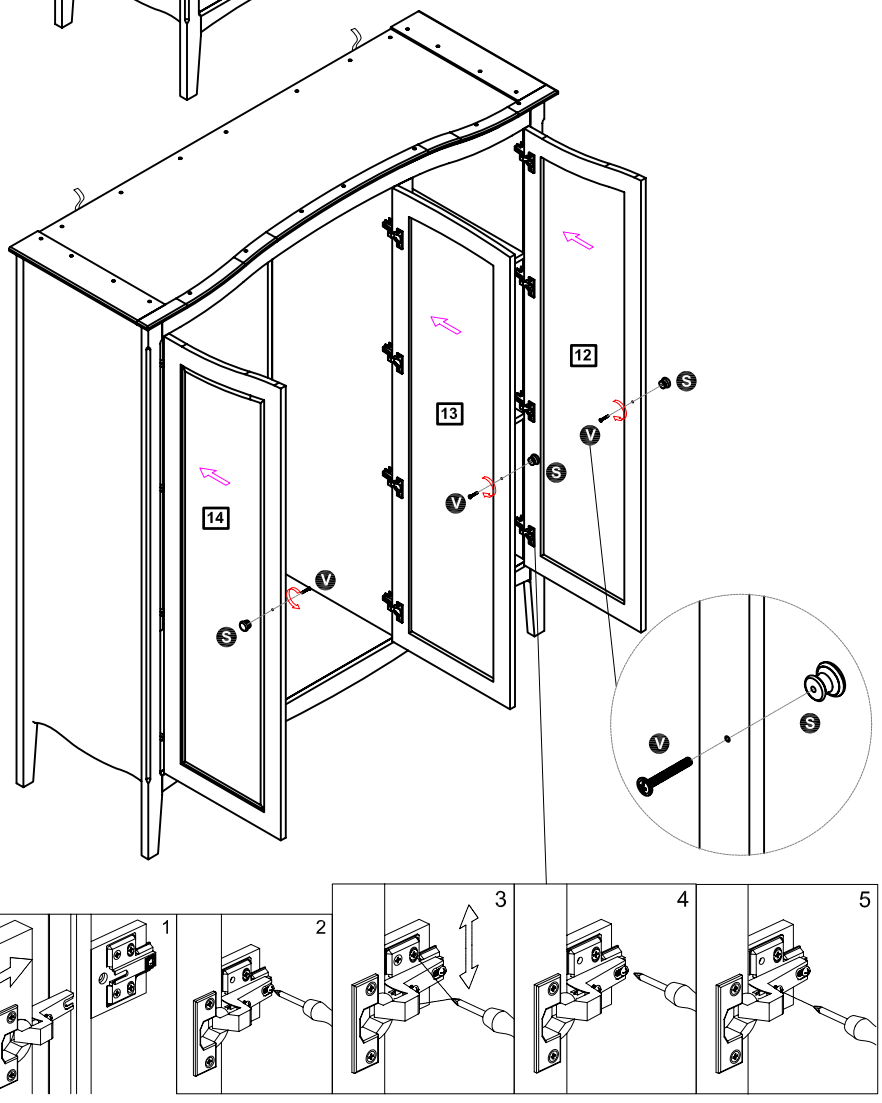

Step 18

Fixing to wall

It is recommended that the wardrobe is fixed to a wall.

With help, move the Bookcase into position.

Warning:
The wardrobe is heavy. Lift with care


Mark fixing hole on wall and remove Wardrobe.

Drill hole and insert wall plug.

Warning:
Before drilling, check wall for hidden pipes and cables.

Reposition Bookcase and fix wall strap using screw.


Assembly is complete.

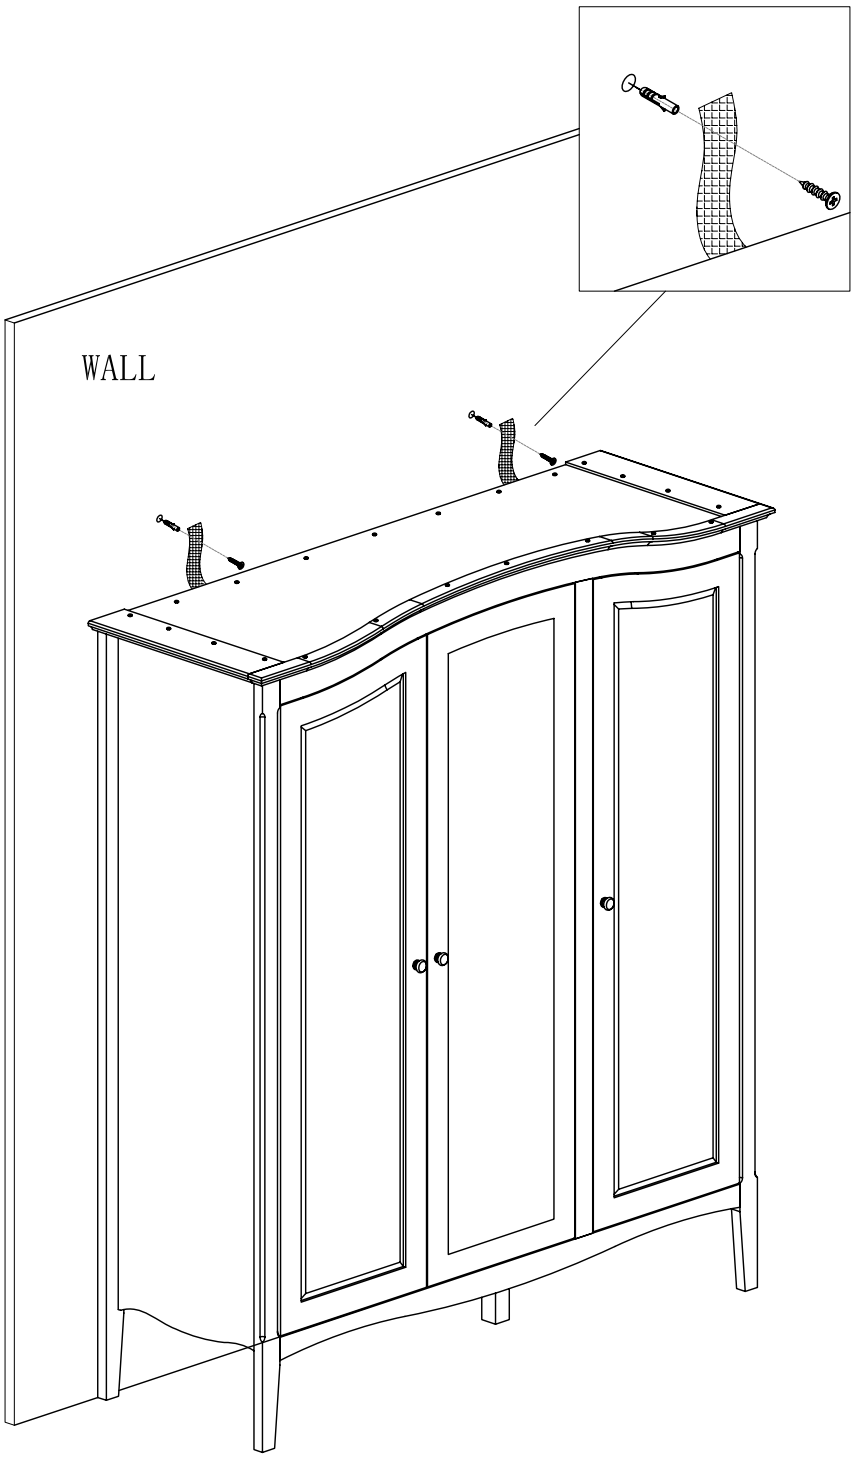

If you need help or have damaged or missing parts,call the
Customer Helpline: Argos = 0345 6400 800

A Guide to

Wall Mounting & Fixings

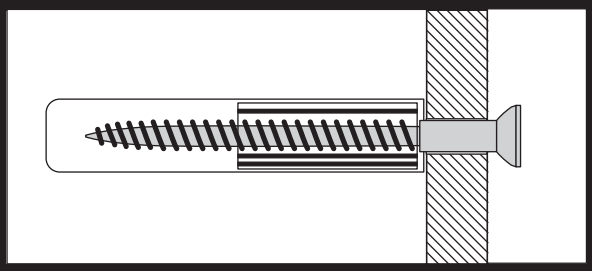

IMPORTANT:
When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


HINTS:

1) General Rule ⚠ Always use a larger screw and wall plug if you are not sure.
2) Ensure you use the recommended drill bit to match the wall plug and hole size.
3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug
General Wall Materials

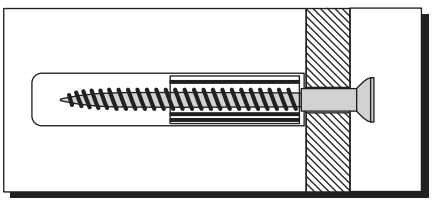


These come in various sizes and are made from plastic or sometimes wood fiber.

No.2 "General Purpose" Wall Plug
Aerated / Breeze Block

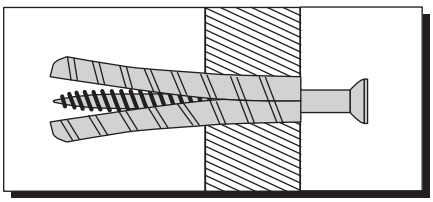


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.
For light loads, a General Purpose Plug can be used.

No.3 "Shield Anchor" Wall Plug
Heavy Loads

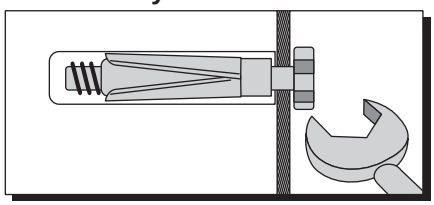


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No.4 "Cavity Fixing" Wall Plug

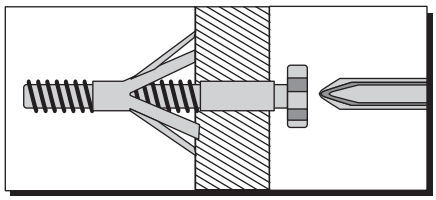


For use with plaster board partitions or hollow wooden doors.

No.5 "Cavity Fixing - Heavy Duty" Wall Plug

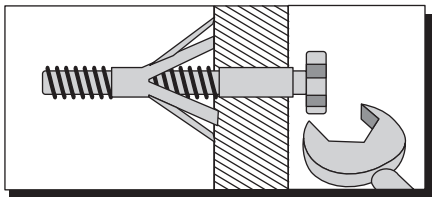

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No.6 "Hammer Fixing" Wall Plug

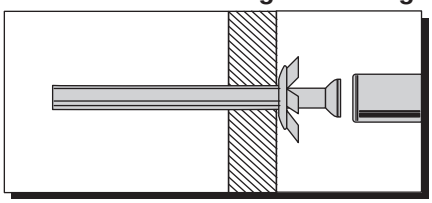

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE

⚠ **SAFETY**
Always check the fitting and location to ensure your safety in and around the home.

⚠ **FITTING**
From time to time check the fitting to ensure the wall plugs or screws do not become loose.