
New Hallingford - 3 Drawer Bedside

Assembly Instructions - Please keep for future reference

274/4917
266/7379
266/4509
258/7693
266/2910

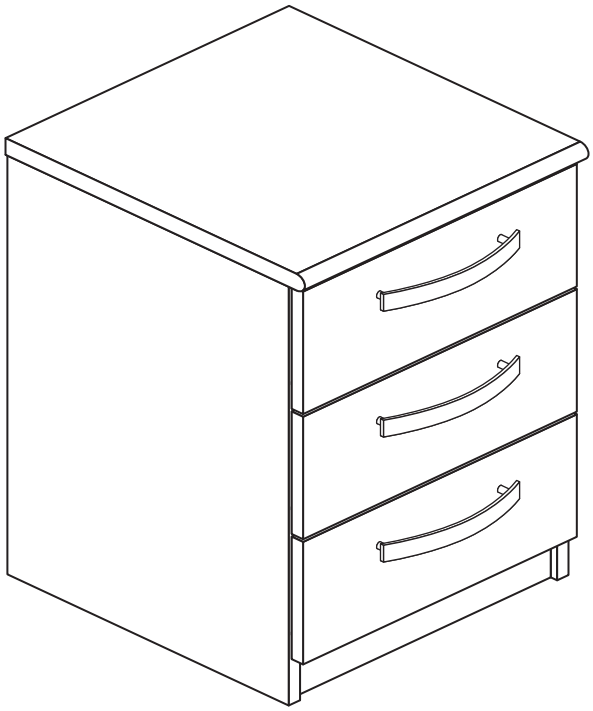

Dimensions
Width - 37.5cm
Depth - 40cm
Height - 58cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** (quoting your original order number)

Issue 5 - 20/05/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 14kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers below)*


Please check you have all the panels listed below

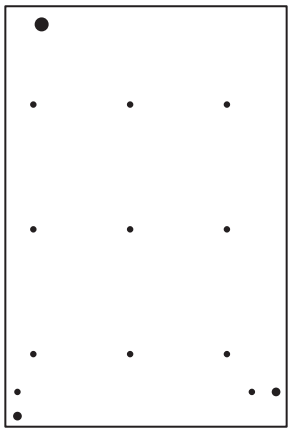


1 Left Side *(D2307A)*
(556 x 372mm)

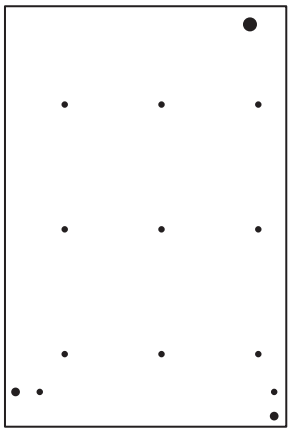


2 Right Side *(D2308A)*
(556 x 372mm)

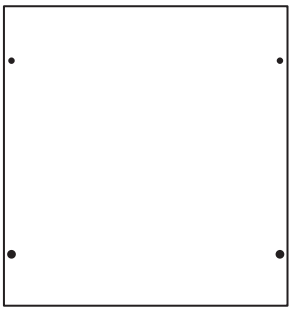

3 Top *(D2306A)*
(375 x 396mm)



4 Rail *(D2310A)*
(340 x 66mm) x 2

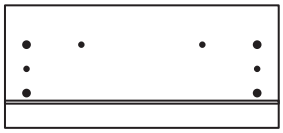

5 Drawer Front *(D2309A)*
(362 x 162mm) x 3




6 Left Drawer Side *(W370-124LH)*
(370 x 124mm) x 3




7 Right Drawer Side *(W370-124RH)*
(370 x 124mm) x 3



8 Drawer Back *(W291-124)*
(291 x 124mm) x 3



9 Drawer Base *(T304-367)*
(304 x 367mm) x 3



10 Back *(X535-366)*
(535 x 366mm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers below)*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A



Wooden dowel *(F22)* x 6

B



Metal dowel *(F901)* x 12

C



Small locking nut *(F3)* x 6

D




Large locking nut *(F900)* x 6

E



Knock-in Peg *(F171GY)* x 12

F



Nail *(F51)* x 12

G



19mm Screw (*F461)* x 6

H




13mm Screw *(F52)* x 18

I




13mm Screw *(F63)* x 18

J

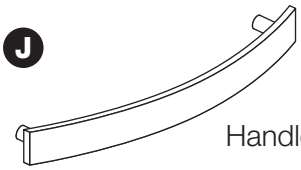

Handle *(F278)* x 3

Ka




L Runner *(F159)* x 3

Kb




R Runner *(F160)* x 3

Kc



L Runner *(F161)* x 3

Kd




R Runner *(F162)* x 3

L




Wedgefix *(F639)* x 6

M



Plastic Nail *(F91)* x 4

Tools required

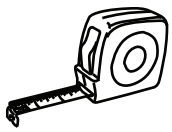


Rule



Cross-head screwdriver



Scissors



Hammer




Eye protection (when using a hammer or drill)



Electric drill (do not use for fitting screws)

Ruler - Use this ruler to help correctly identify the screws

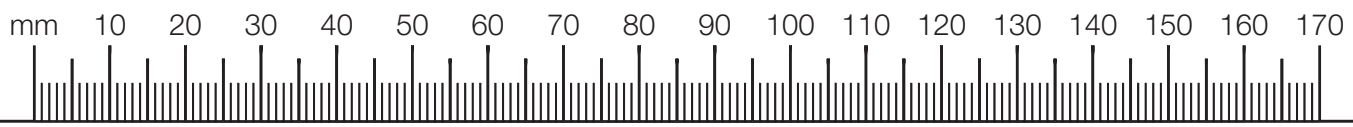

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers below)*

Step 1

Prepare the 3 drawer fronts

Screw 2 metal dowels B into the holes shown on the back of each drawer front 5.

Note: Tighten metal dowels up fully against the panels.

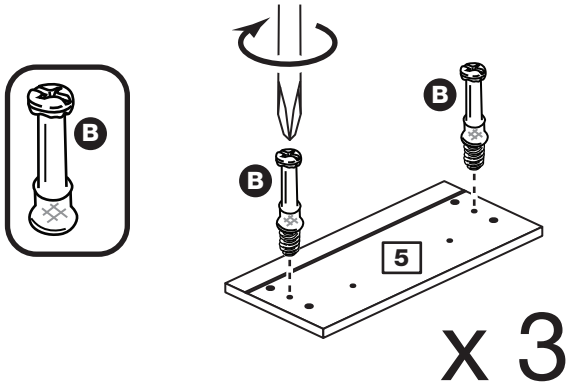


Step 2

Prepare the drawer sides

Insert a small locking nut C into the hole shown on the left drawer side 6 and right drawer side 7.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

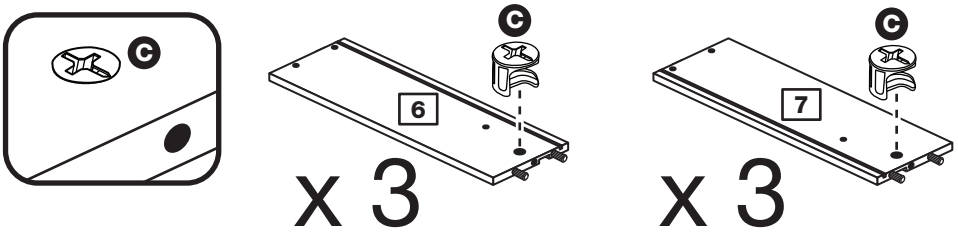


Step 3

Attach the drawer sides to the drawer front

Push the left drawer side 6 and right drawer side 7 onto the back of the drawer front 5.

Turn the small locking nuts C on the left drawer side 6 and right drawer side 7.

Note: Turn the locking nuts C clockwise to secure panels - more than 1/2 a turn.

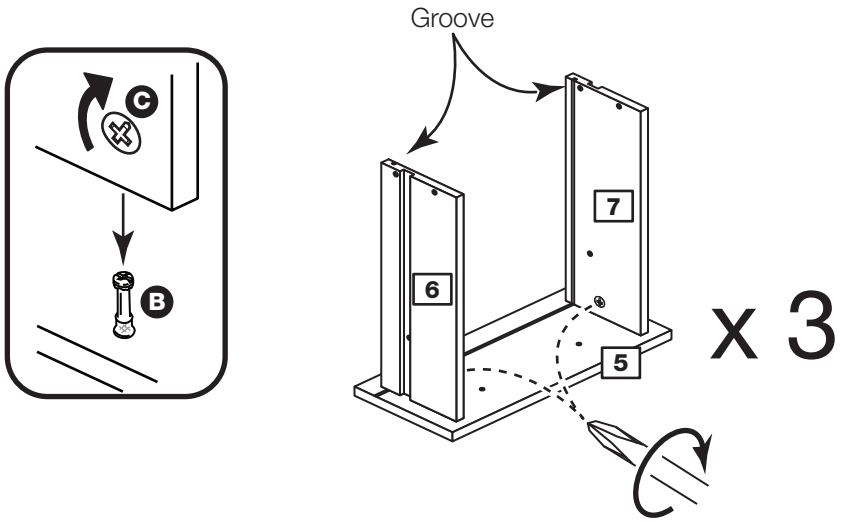


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the groove is on the inside, as shown.

Assembly Instructions

Step 4

Fit the drawer base

Slide the drawer base [9] down the grooves in the drawer sides [6] and [7] and down into the groove in the drawer front [5].

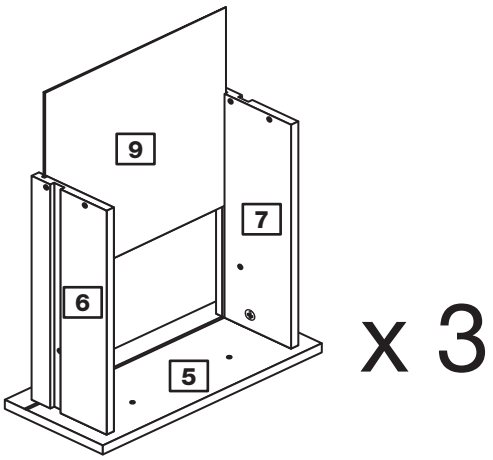

x 3


Step 5

Fit the drawer back

Fit the drawer back [8] between the drawer sides [6] and [7].

Make sure that the drawer base [9] fits into the groove in the drawer back [8].

Hold the drawer back [8] in position and tap the knock-in pegs (E) through the holes in the drawer sides [6] and [7].

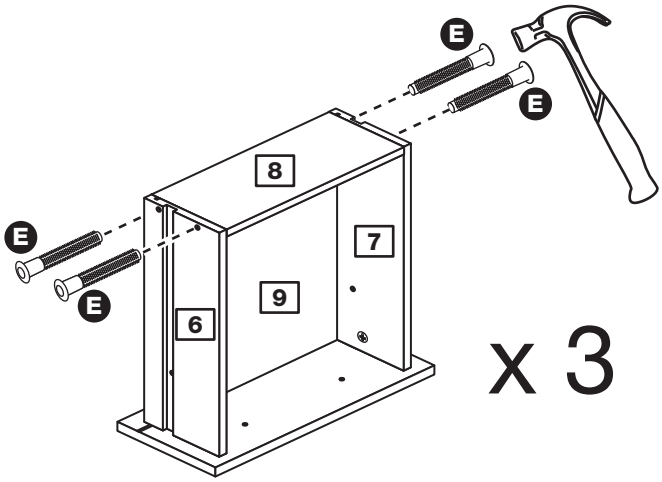


x 3

Step 6

Attach the handle

Attach a handle (J) to each drawer front [5] using 2 screws (G).

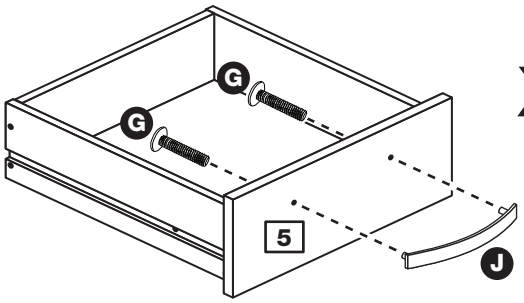


x 3


Step 7

Fit the wedgefixes

Turn the drawer assemblies over and slide 2 wedgefixes (L) into the front and back grooves, as shown, and tighten up the screws.

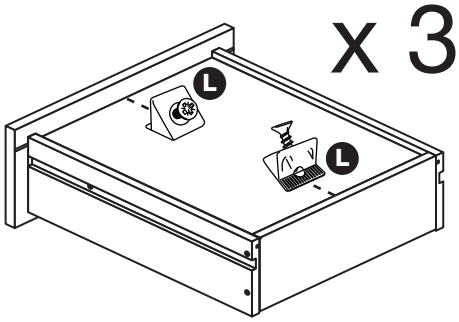

x 3

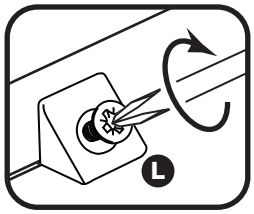

Assembly Instructions


Step 8

Fit runners to the drawers

Turn the 3 drawer assemblies over.

Fit runner Kd, marked with 'R', to the bottom edge of the right drawer side 7, as shown, making sure that it is pushed up against the back of the drawer front 5.
Use a bradawl to mark the fixing positions, then secure with 2 screws I.

Fit runner Kc, marked 'L', to the bottom edge of the left drawer side 6 using the same method.

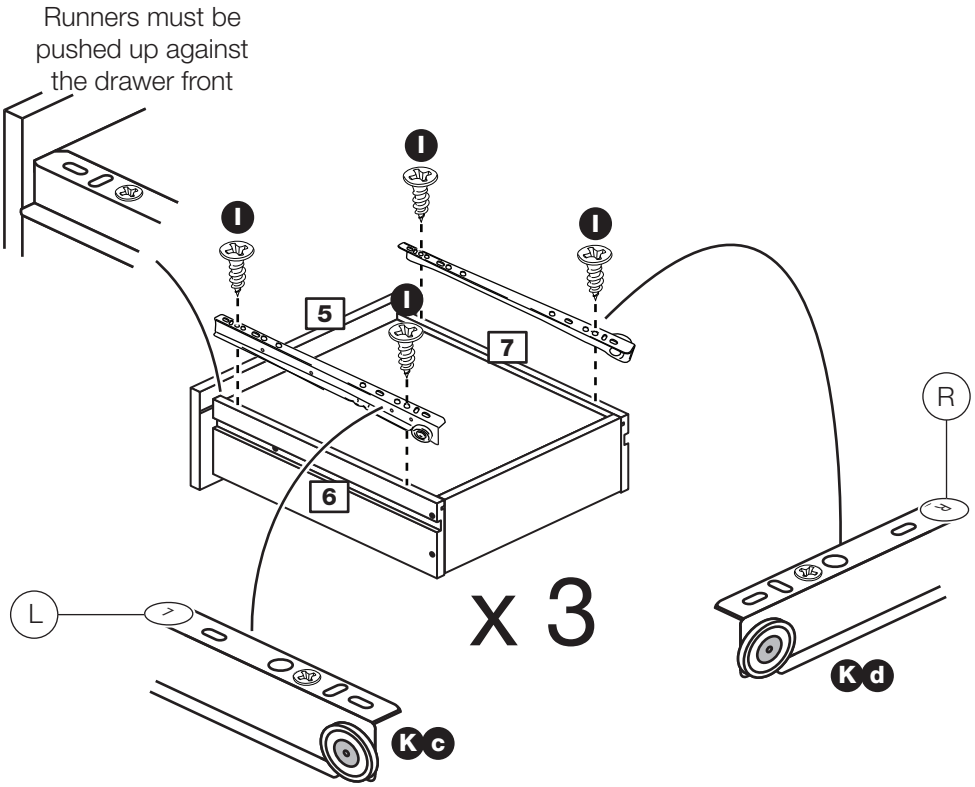

Step 9


Prepare the 2 rails

Tap 2 wooden dowels A into each rail 4.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 2 large locking nuts D into each rail 4.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

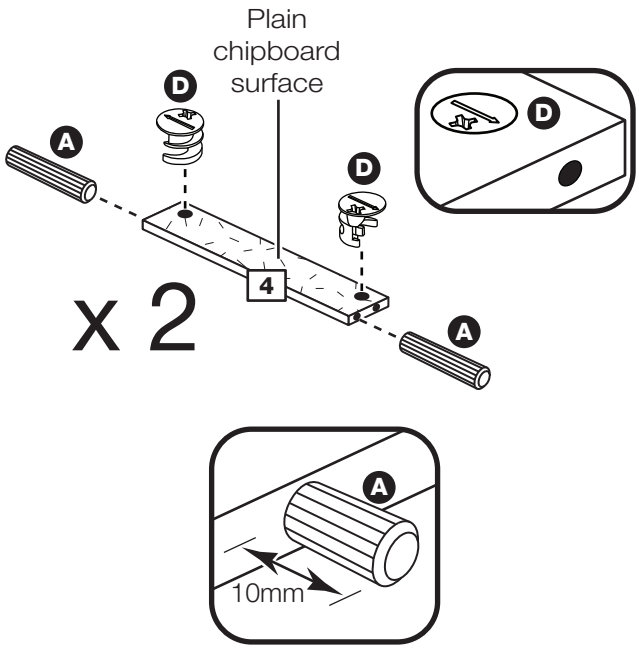


Step 10

Prepare the left side


a: Fit 3 runners Ka to the left side 1.

The 1st screw H uses the 2nd hole in from the front of the runner.

The 2nd and 3rd screws H use the holes that line up with the other panel holes.

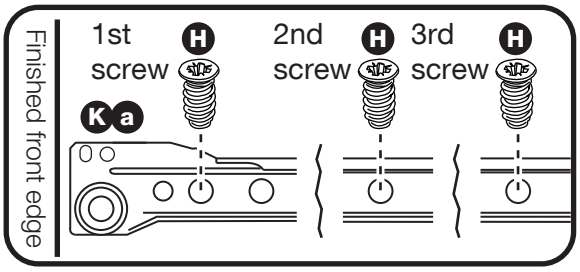

a:

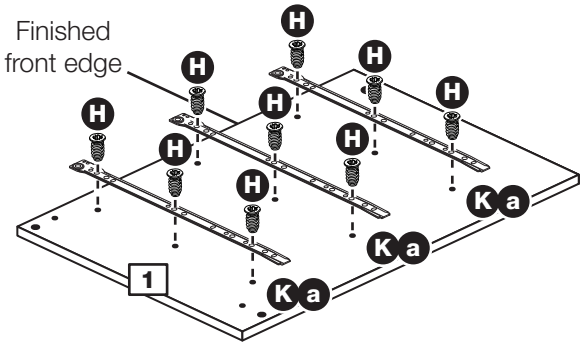


b: Fit a screw I into the 2nd hole in at the top of the runners Ka.


Screw 2 metal dowels B into the left side 1.

Insert a large locking nut D into the left side . 1.

Tap a wooden dowel A into the left side 1.

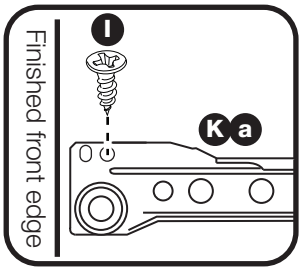

b:

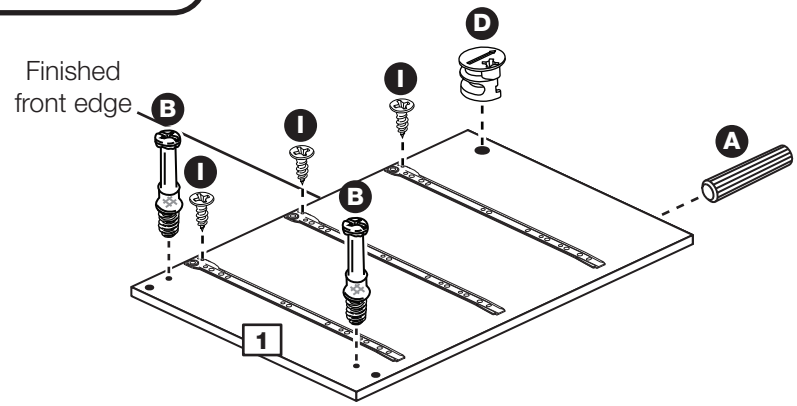

Assembly Instructions

Step 11

Prepare the right side

a: Fit 3 runners Kb to the right side 2.

The 1st screw H uses the 2nd hole in from the front of the runner.

The 2nd and 3rd screws H use the holes that line up with the other panel holes.


b: Fit a screw I into the 2nd hole in at the top of the runner Kb.


Screw 2 metal dowels B into the right side 2.

Insert a large locking nut D into the right side 2.


Tap a wooden dowel A into the right side 2.


a:

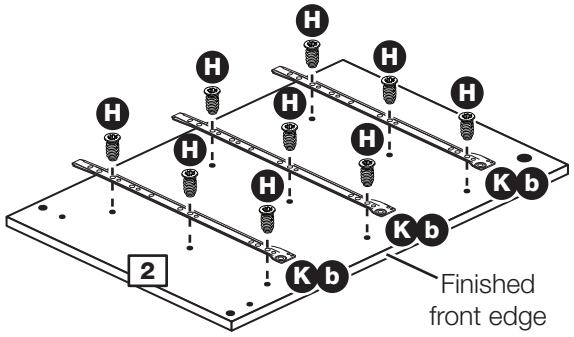

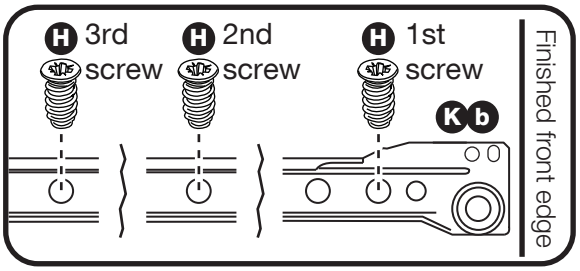

b:

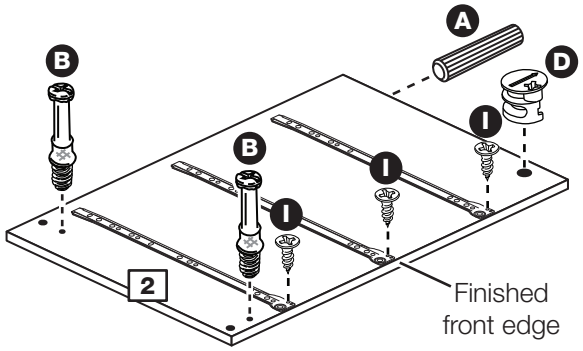

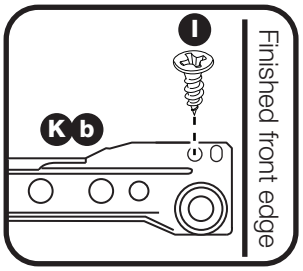


Step 12


Join the right side and rails

Push the 2 rails 4 onto the right side 2.

Use a screwdriver to tighten the 2 large locking nuts D fitted to the rails 4.

Note: Turn the large locking nuts D as far as they will go - more than 1/2 a turn.

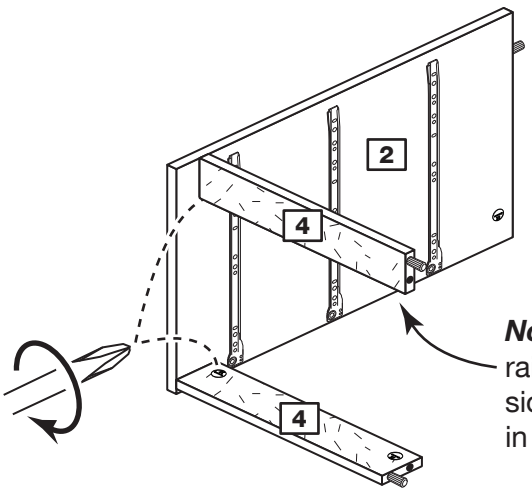

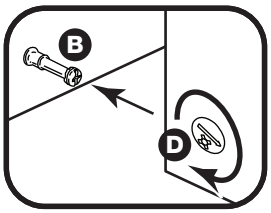


Note: Support this rail until the left side has been fitted in the next step.

Step 13

Fit the left side

Push the left side 1 onto the 2 rails 4.


Use a screwdriver to tighten the 2 large locking nuts D fitted to the rails 4.

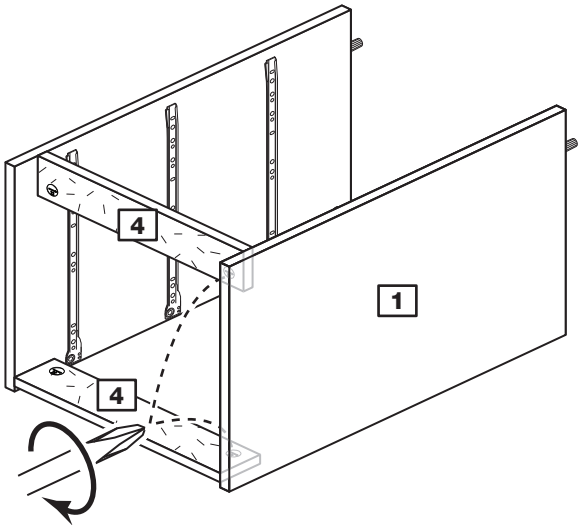

Step 14

Prepare the top

Screw 2 metal dowels B into the top 3.

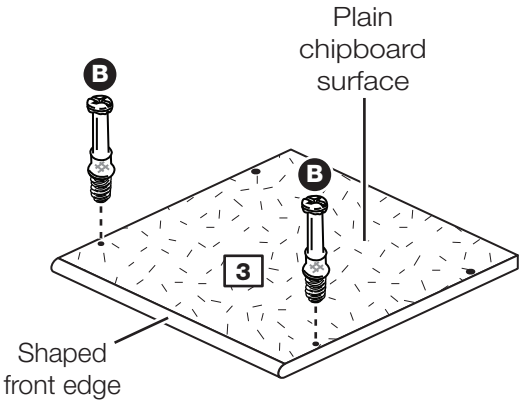


Step 15

Fit the top

Push the top 3 onto the 2 sides 1 and 2.

Use a screwdriver to tighten the 2 large locking nuts D fitted to the sides 1 and 2.

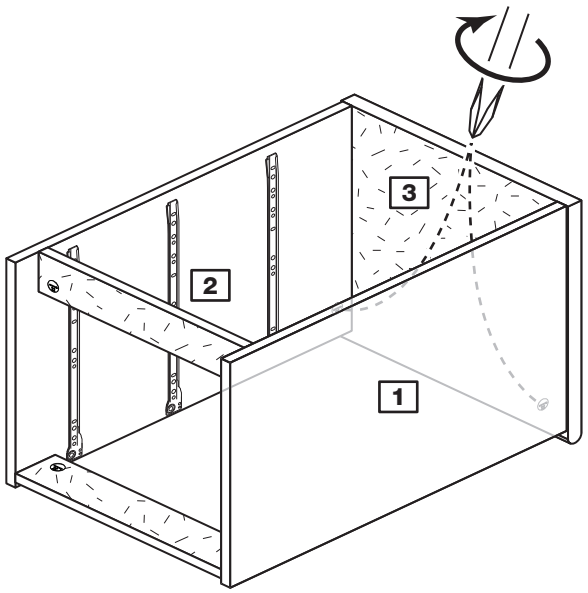

Step 16

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 10 onto the unit.


Nail F around the outside edges of the back 10.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.


a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

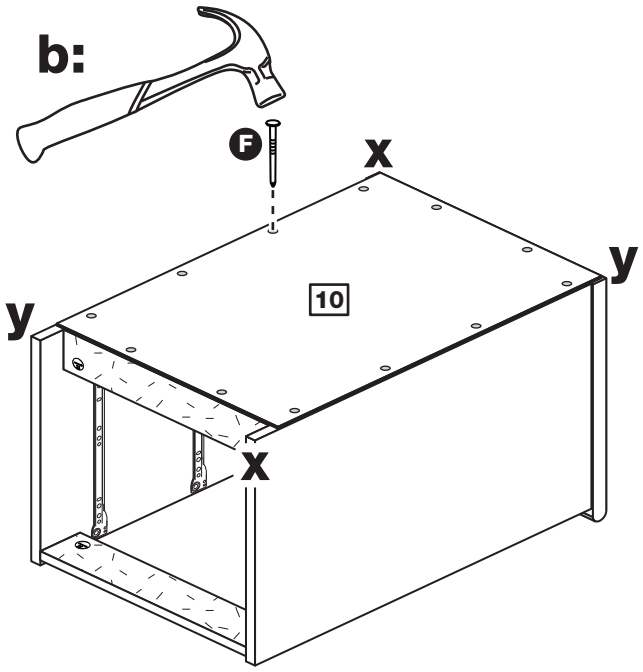

Step 17

Fit the 4 plastic nails

Tap 2 plastic nails M into the bottom edge of each of the sides 1 and 2.

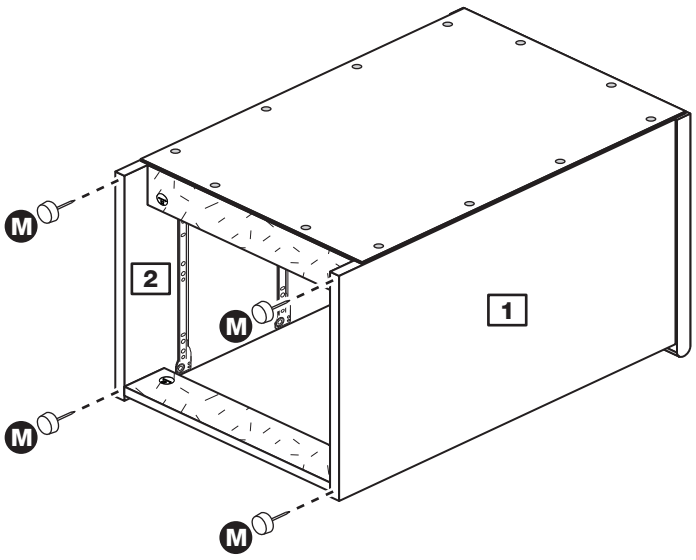



Step 18

Fit the drawers

Slide the wheels of the runners fitted to the drawers, over the wheels of the runners fitted to the side panels and push the drawers into position.

Assembly is complete

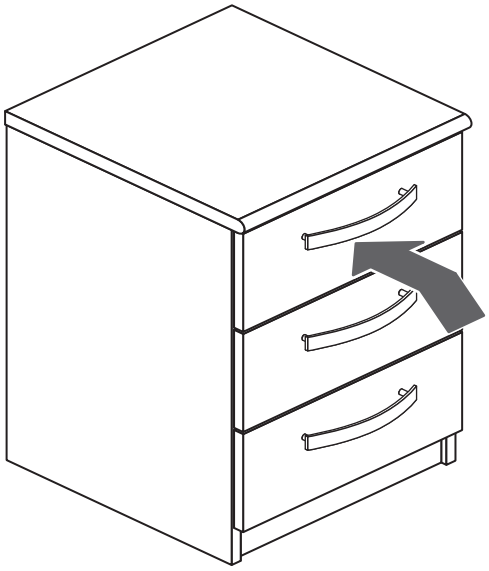


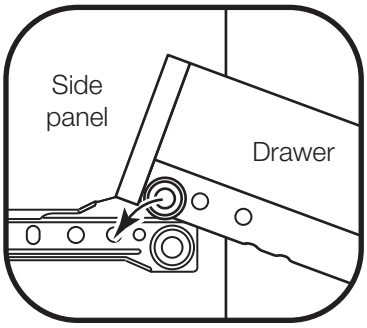

New Hallingford - 3+2 Drawer Chest

Assembly Instructions - Please keep for future reference

228/6640
258/9835
247/6560
268/1427
255/8660

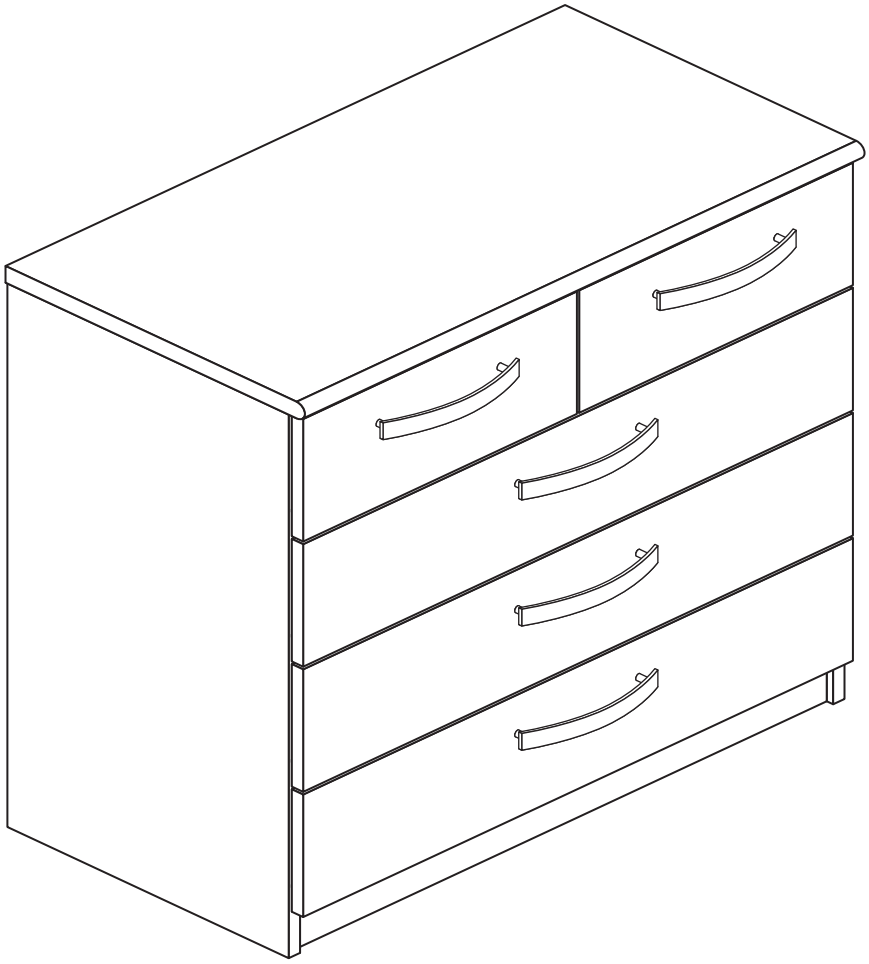

Dimensions
Width - 74cm
Depth - 40cm
Height - 74.5cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** (quoting your original order number)

Issue 5 - 07/05/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 27kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers below)*


Please check you have all the panels listed below

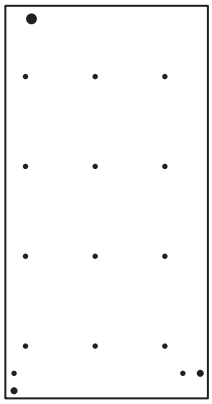


1 Left Side *(D2312A)*
(721 x 372mm)

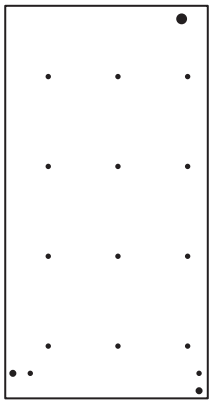


2 Right Side *(D2313A)*
(721 x 372mm)

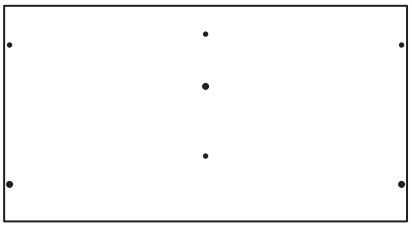

3 Top *(D2311A)*
(740 x 396mm)



4 Rail *(D2315A)*
(705 x 66mm) x 2




5 Divider *(D2314A)*
(165 x 282mm)



6 Left Drawer Side *(W370-124LH)*
(370 x 124mm) x 5




7 Right Drawer Side *(W370-124RH)*
(370 x 124mm) x 5




8 Small Drawer Front *(D2309A)*
(362 x 162mm) x 2



9 Small Drawer Back *(W291-124)*
(291 x 124mm) x 2



10 Small Drawer Base *(T304-367)*
(304 x 367mm) x 2




11 Large Drawer Front *(D2316A)*
(727 x 162mm) x 3



12 Large Drawer Back *(W657-124)*
(657 x 124mm) x 3



13 Large Drawer Base *(T668-367)*
(668 x 367mm) x 3



14 Back *(X700-730)*
(700 x 730mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers below)*

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 7

B 

Metal dowel *(F901)* x 18

C 


Small locking nut *(F3)* x 10

D 

Large locking nut *(F900)* x 8

E 

Knock-in Peg *(F171GY)* x 20

F 

Nail *(F51)* x 20

G 

19mm Screw (*F461)* x 10

H 

13mm Screw *(F52)* x 30

I 


13mm Screw *(F63)* x 30

J 


Handle *(F278)* x 5

L 

Wedgefix *(F639)* x 16

M 


Plastic Nail *(F91)* x 4

Ka 


L Runner *(F159)* x 5

Kb 

R Runner *(F160)* x 5


Kc 

L Runner *(F161)* x 5

Kd 

R Runner *(F162)* x 5

Tools required

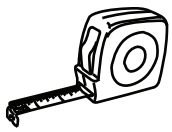


Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

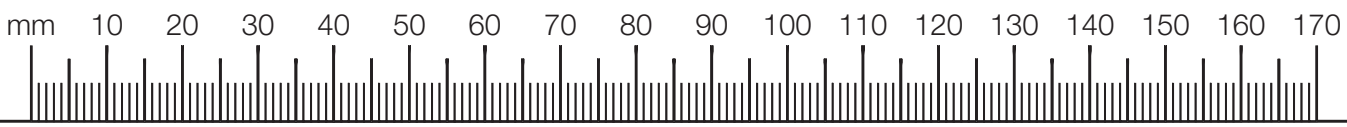

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers below)*


Step 1

Prepare the 2 small drawer fronts

Screw 2 metal dowels **B** into the holes shown on the back of each of the small drawer fronts 8.

Note: Tighten the metal dowels up fully against the panels.

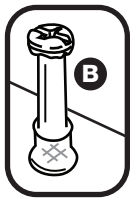

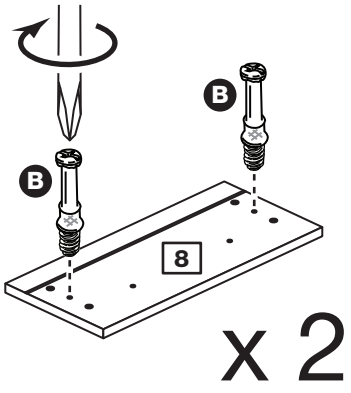



Step 2


Prepare the 2 sets of the drawer sides

Insert a small locking nut **C** into the hole shown on the left drawer side 6 and right drawer side 7.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

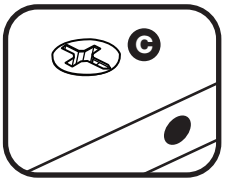

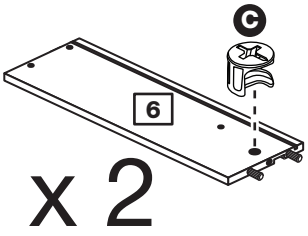

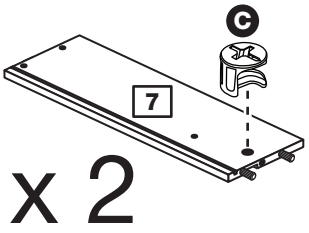


Step 3


Attach the drawer sides to the small drawer front

Push the left drawer side 6 and right drawer side 7 onto the back of the small drawer front 8.

Turn the small locking nuts **C** on the left drawer side 6 and right drawer side 7.

Note: Turn the locking nuts **C** clockwise to secure panels - more than 1/2 a turn.

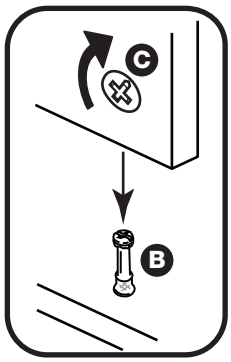

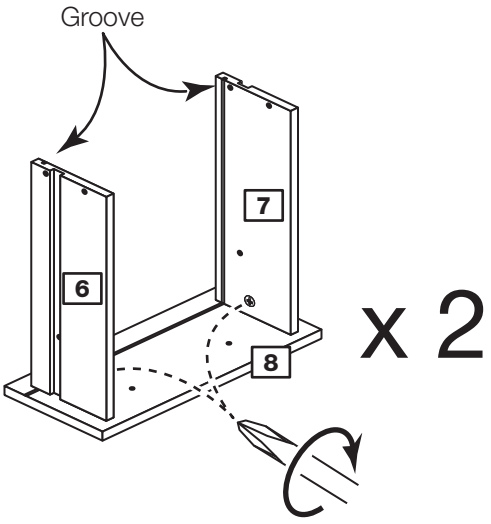


Assembly Instructions

Step 4

Fit the small drawer base

Slide the small drawer base 10 down the grooves in the drawer sides 6 and 7 and down into the groove in the small drawer front 8.

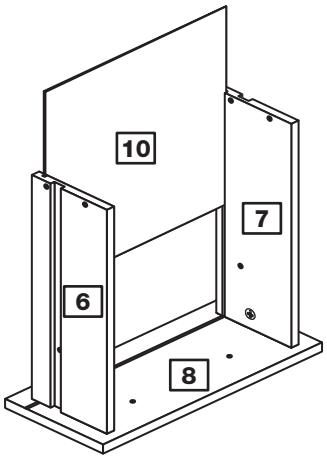

x 2


Step 5

Fit the small drawer back

Fit the small drawer back 9 between the drawer sides 6 and 7.

Make sure that the small drawer base 10 fits into the groove in the small drawer back 9.

Hold the small drawer back 9 in position and tap the knock-in pegs E through the holes in the drawer sides 6 and 7.

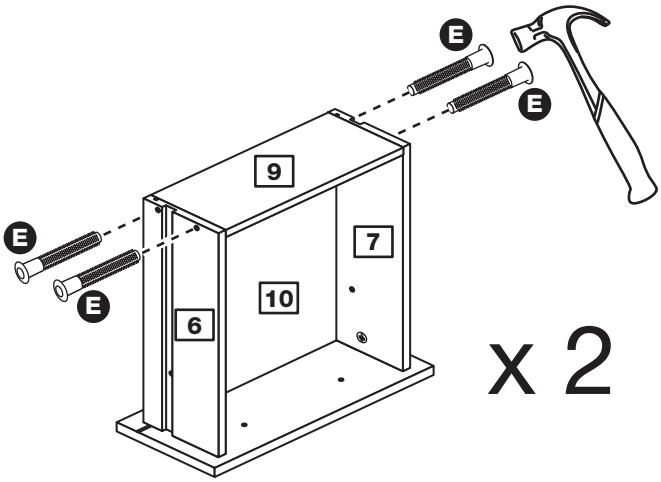


x 2

Step 6

Attach the handle

Attach a handle J to each of the small drawer fronts 8 using 2 screws G.

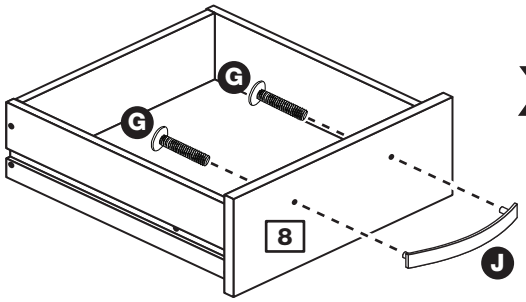


x 2


Step 7

Fit the wedgefixes

Turn the small drawer assemblies over and slide 2 wedgefixes L into the front and back grooves, as shown, and tighten up the screws.

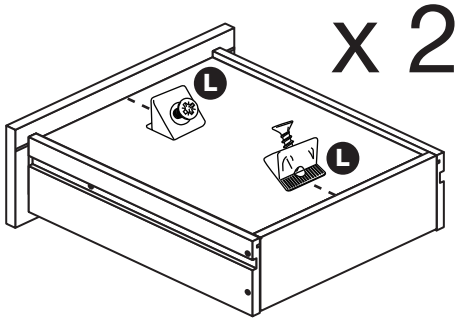

x 2

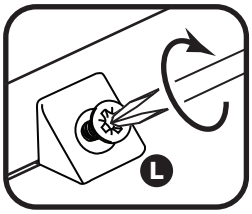


Step 8

Fit runners to the small drawers

Turn the 2 small drawer assemblies over.

Fit runner Kd, marked with 'R', to the bottom edge of the right drawer side 7, as shown, making sure that it is pushed up against the back of the small drawer front 8.
Use a bradawl to mark the fixing positions, then secure with 2 screws I.

Fit runner Kc, marked 'L', to the bottom edge of the left drawer side 6 using the same method.

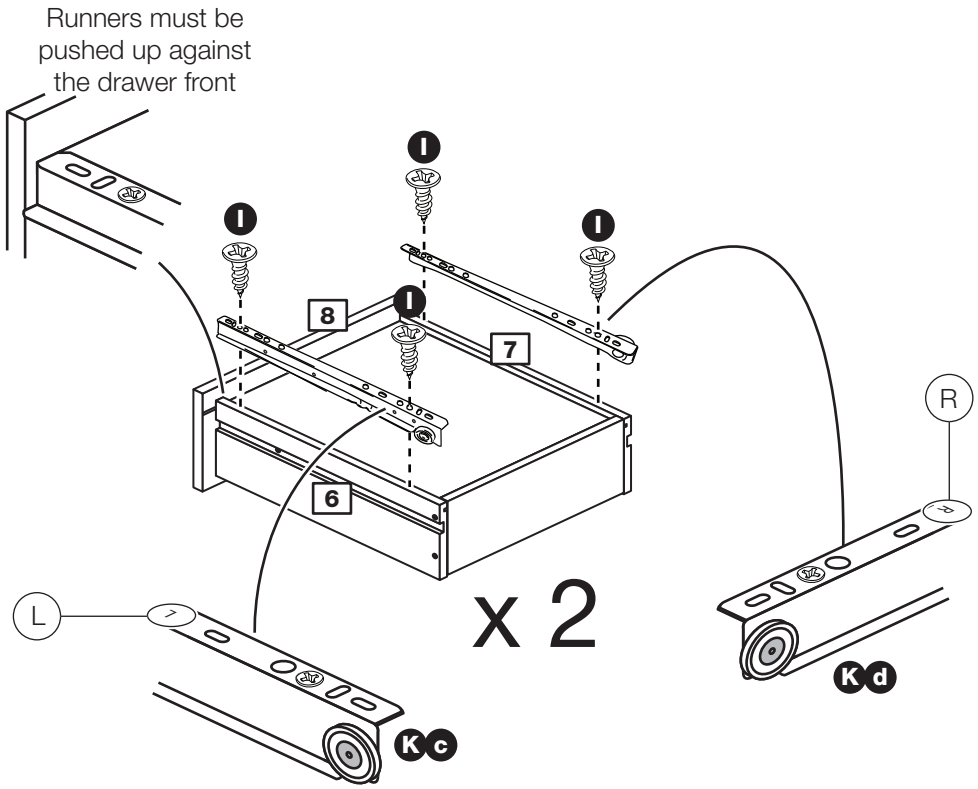


Step 9

Prepare the 3 large drawer fronts

Screw 2 metal dowels B into the holes shown on the back of each large drawer front 11.

Note: Tighten metal dowels up fully against the panels.

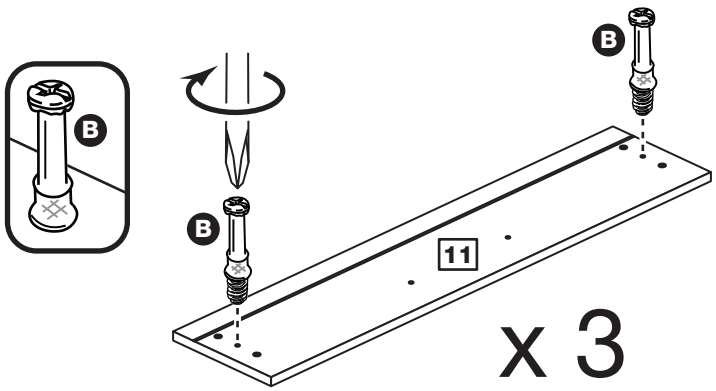


Assembly Instructions

Step 10

Prepare 3 sets of drawer sides

Insert a small locking nut C into the hole shown on the left drawer side 6 and right drawer side 7.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

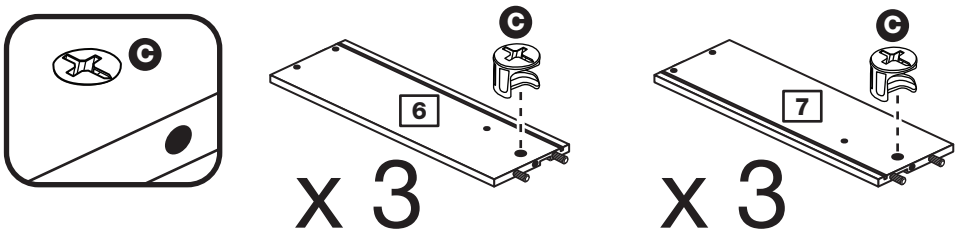


Step 11

Attach the drawer sides to the large drawer front

Push the left drawer side 6 and right drawer side 7 onto the back of the large drawer front 11.

Turn the small locking nuts C on the left drawer side 6 and right drawer side 7.


Note: Turn the locking nuts C clockwise to secure panels - more than 1/2 a turn.

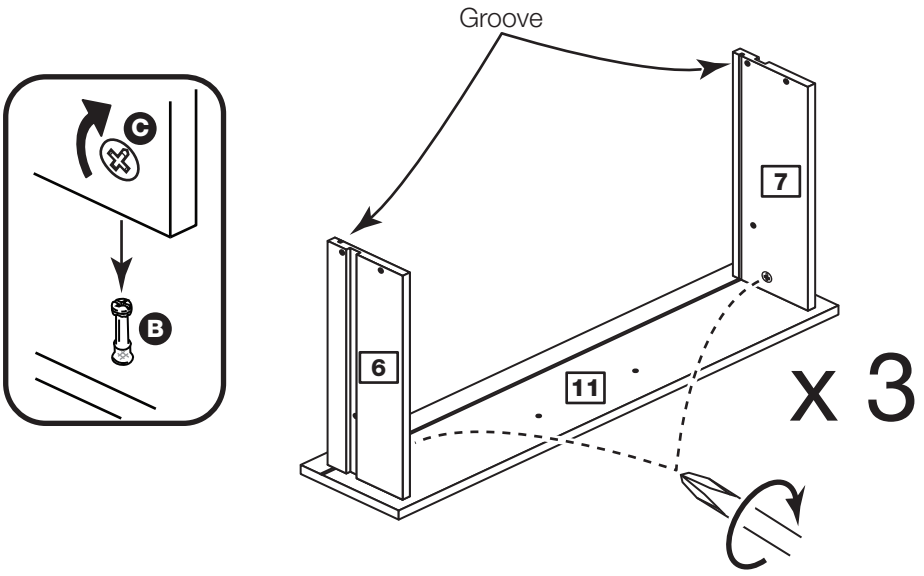

Step 12

Fit the large drawer base

Slide the large drawer base 13 down the grooves in the drawer sides 6 and 7 and down into the groove in the large drawer front 11.

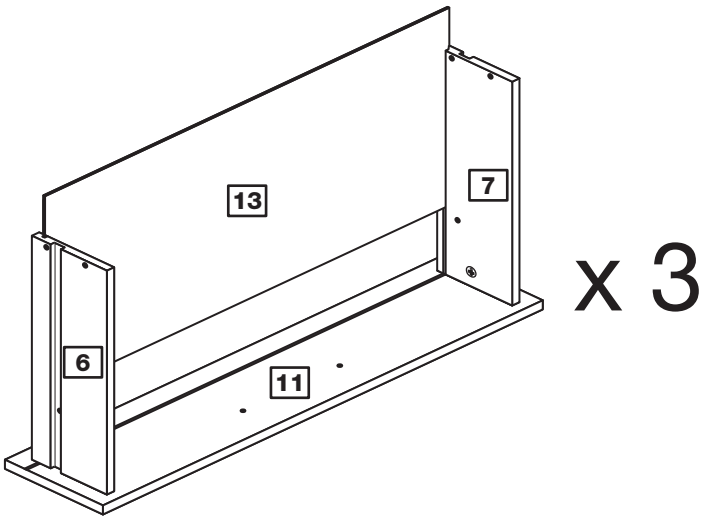


Step 13

Fit the large drawer back

Fit the drawer back 12 between the drawer sides 6 and 7.

Make sure that the drawer base 13 fits into the groove in the drawer back 12.


Hold the drawer back 12 in position and tap the knock-in pegs E through the holes in the drawer sides 6 and 7.

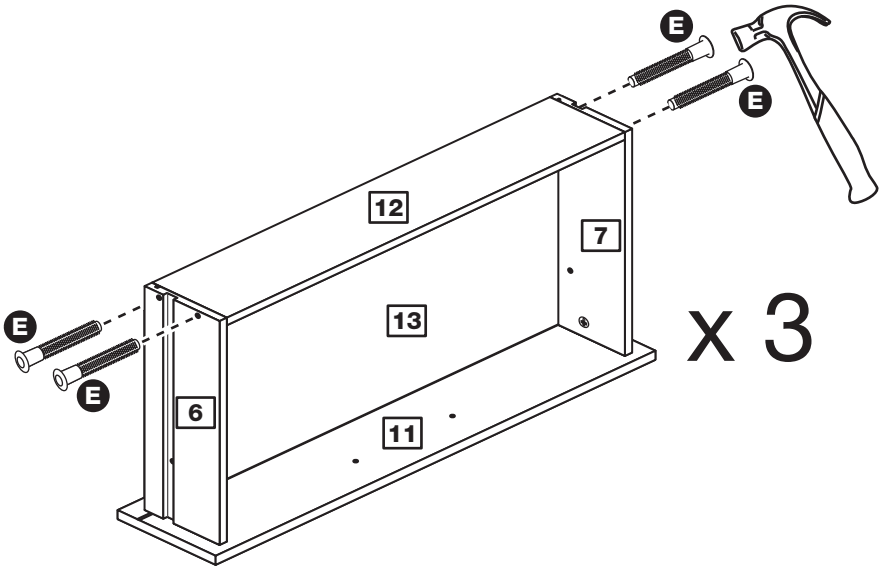

Step 14

Attach the handles

Attach a handle J to each of the large drawer fronts 11 using 2 screws G.

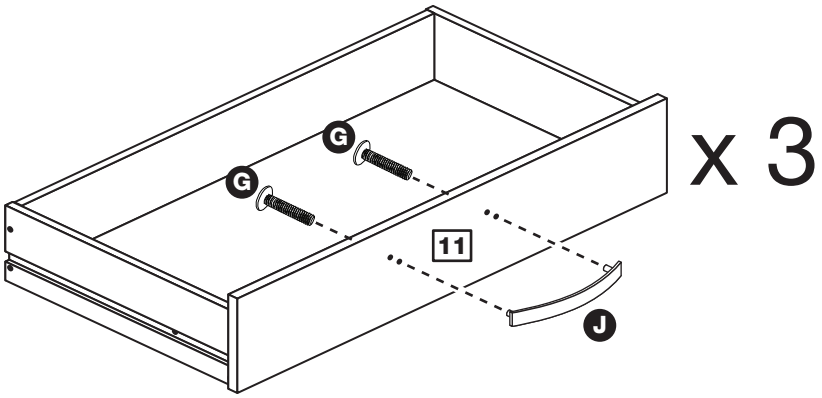


Step 15

Fit the wedgefixes

Note: Before adding the wedgefixes, make sure the assembled drawer is square.

Turn the drawer assemblies over and slide 4 wedgefixes L into the front and back grooves, as shown, and tighten up the screws.

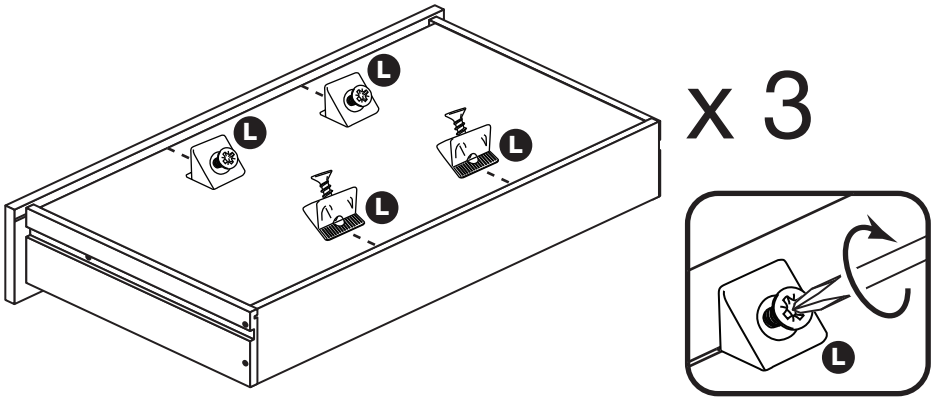


Step 16

Fit runners to the large drawers

Fit runner Kd, marked with ‘R’, to the bottom edge of the right drawer side 7, as shown, making sure that it is pushed up against the back of the large drawer front 11.
Use a bradawl to mark the fixing positions, then secure with 2 screws I.

Fit runner Kc, marked ‘L’, to the bottom edge of the left drawer side 6 using the same method.

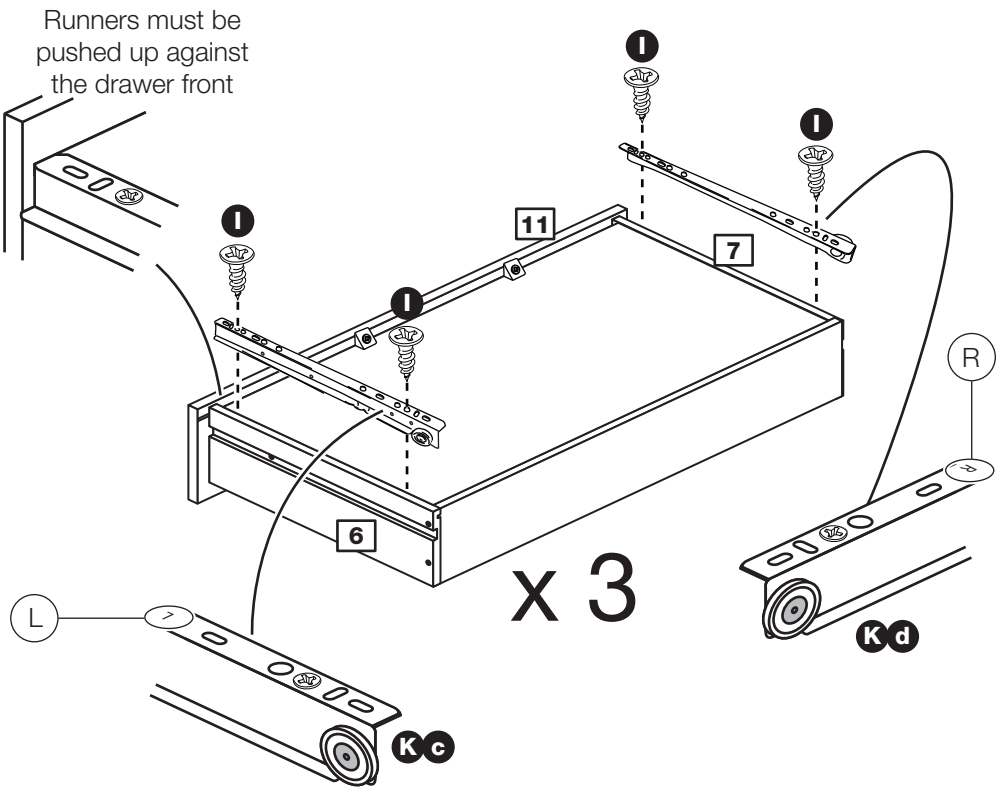

Step 17

Prepare the left side

a: Fit 4 runners (Ka) to the left side [1].

The 1st screw (H) uses the 2nd hole in from the front of the runner.

The 2nd and 3rd screws (H) use the holes that line up with the other panel holes.

b: Fit a screw (I) into the 2nd hole in at the top of the runners (Ka).


Screw 2 metal dowels (B) into the left side [1].


Insert a large locking nut (D) into the left side [1].


Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.


Tap a wooden dowel (A) into the left side [1].


Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

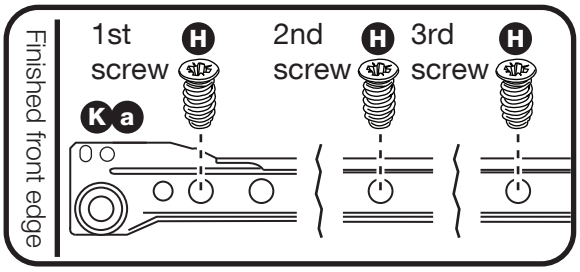

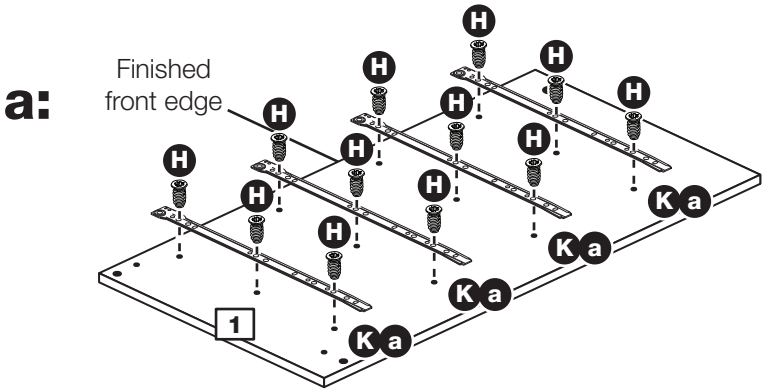

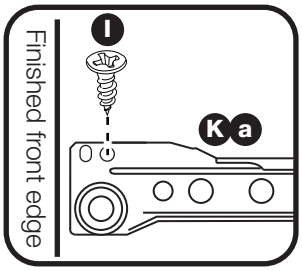

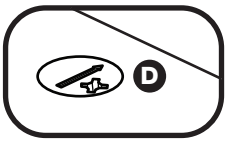

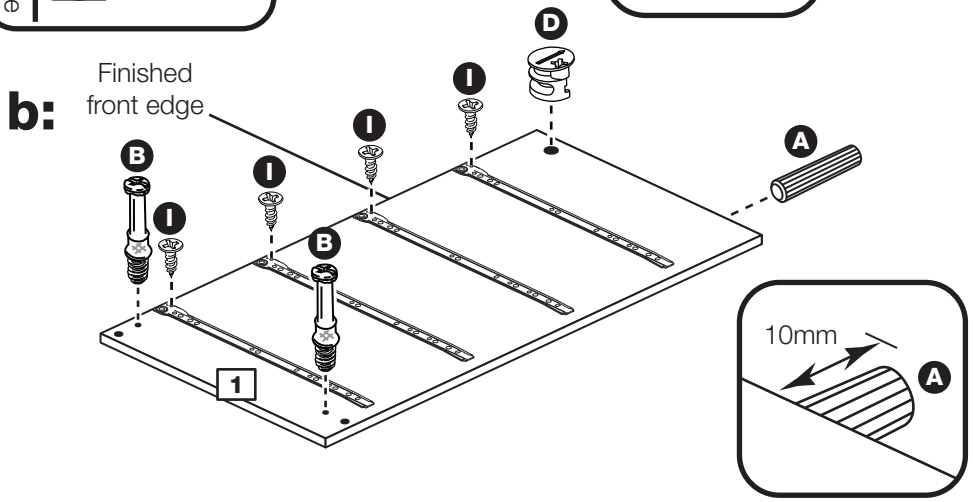

Step 18

Prepare the right side

a: Fit 4 runners (Kb) to the right side [2].

The 1st screw (H) uses the 2nd hole in from the front of the runner.


The 2nd and 3rd screws (H) use the holes that line up with the other panel holes.


b: Fit a screw (I) into the 2nd hole in at the top of the runner (Kb).

Screw 2 metal dowels (B) into the right side [2].

Insert a large locking nut (D) into the right side [2].

Tap a wooden dowel (A) into the right side [2].

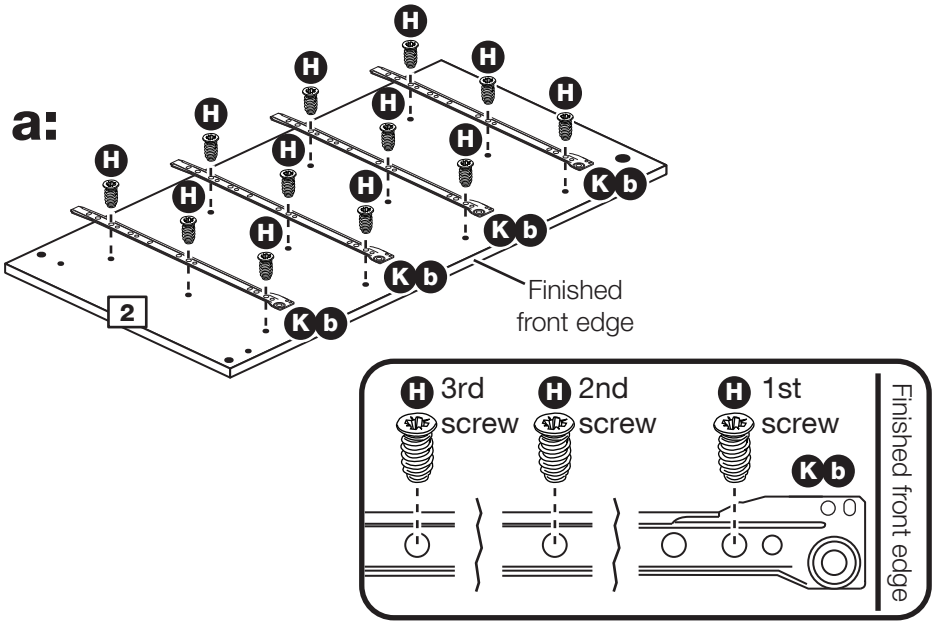

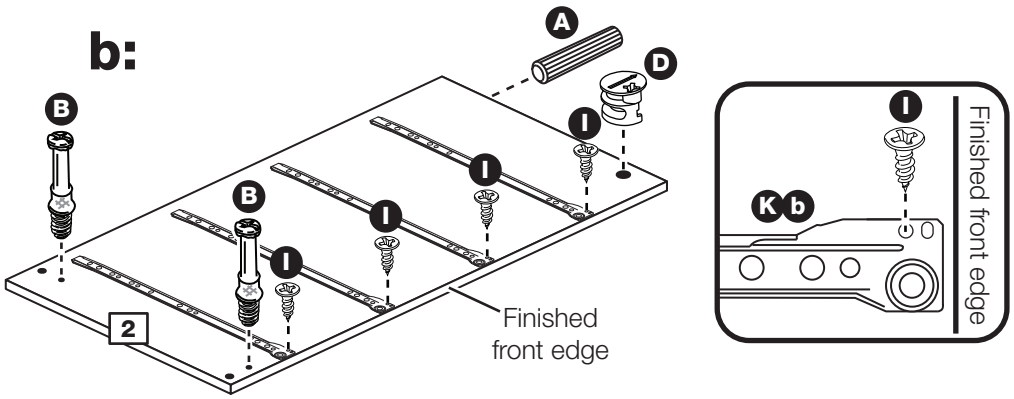


Step 19

Prepare the 2 rails

Tap 2 wooden dowels (A) into each rail [4].

Insert 2 large locking nuts (D) into each rail [4].

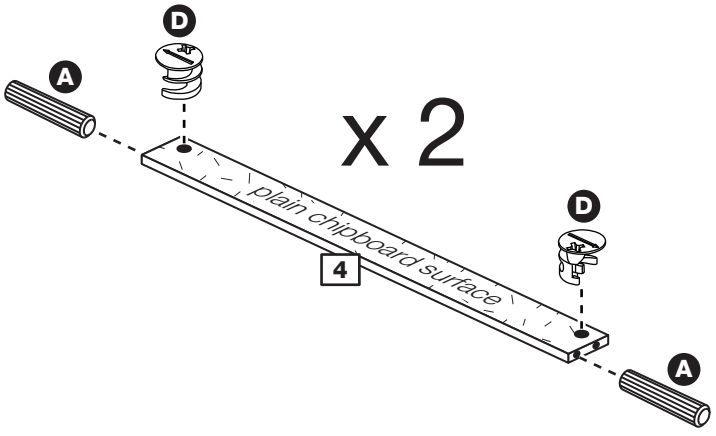


Step 20

Join the right side and rails

Push the 2 rails 4 onto the right side 2.

Use a screwdriver to tighten the 2 large locking nuts D fitted to the rails 4.

Note: Turn the large locking nuts D as far as they will go - more than 1/2 a turn.

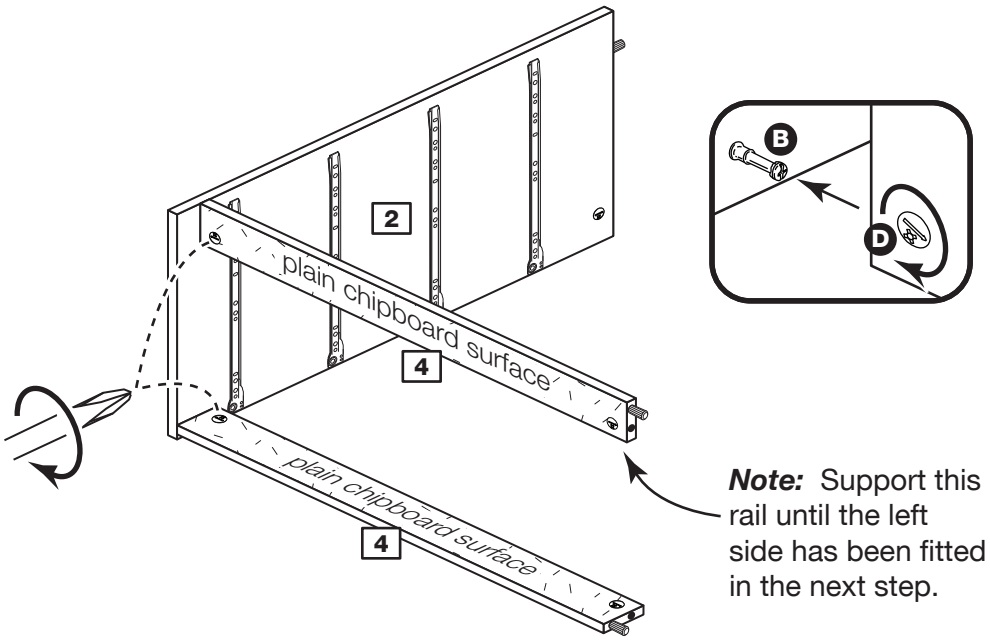


Step 21

Fit the left side

Push the left side 1 onto the 2 rails 4.


Use a screwdriver to tighten the 2 large locking nuts D fitted to the rails 4.

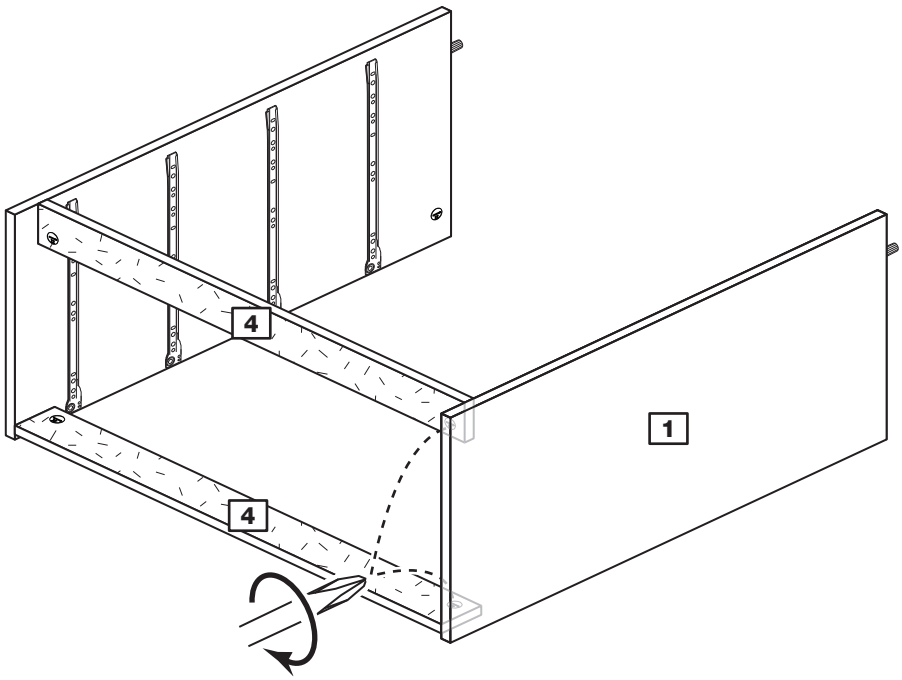

Step 22

Prepare the top

Screw 4 metal dowels B into the top 3.

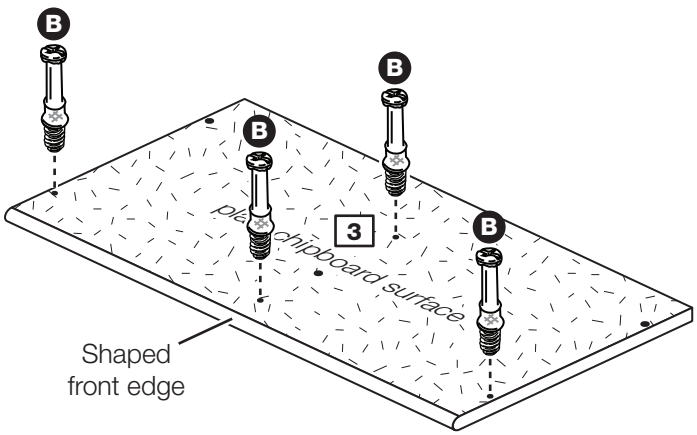

Step 23

Prepare both surfaces of the divider

Note: The colour of the divider may differ from the main unit colour.

a: Fit a runner Kb to the divider 5.

The 1st screw H uses the 2nd hole in from the front of the runner.

The 2nd and 3rd screws H use the holes that line up with the other panel holes.

b: Fit a screw I into the 2nd hole in at the top of the runner Kb.

Insert 2 large locking nuts D into the divider 5.

Turn the divider over

c: Fit a runner Ka to the divider 5.


The 1st screw H uses the 2nd hole in from the front of the runner.


The 2nd and 3rd screws H use the holes that line up with the other panel holes.


d: Fit a screw I into the 2nd hole in at the top of the runner Ka.


Tap a wooden dowel A into the divider 5.


Note: Due to the manufacturing process, the 2 holes for the large locking nut can be on either surface of the small divider.

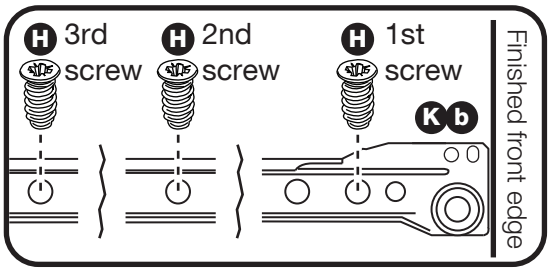

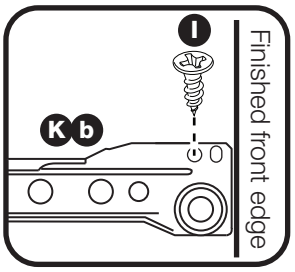


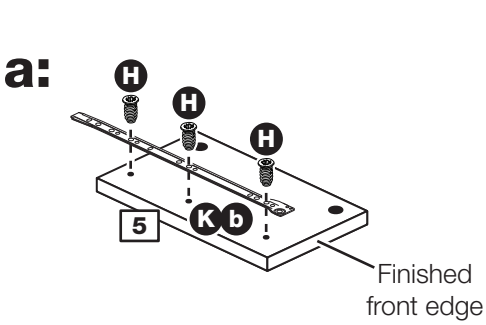


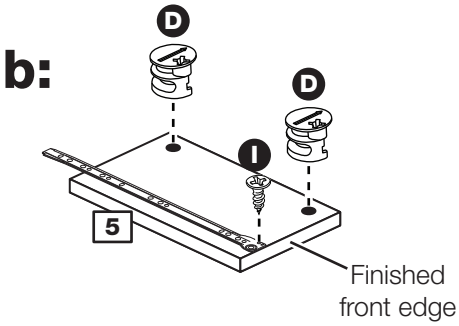


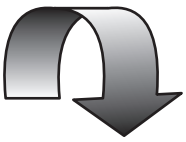


Turn the divider over

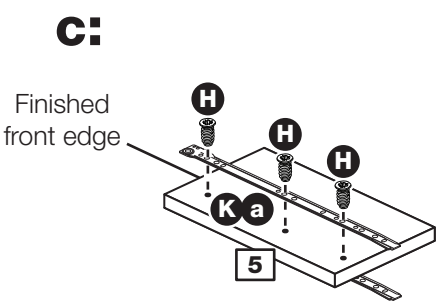

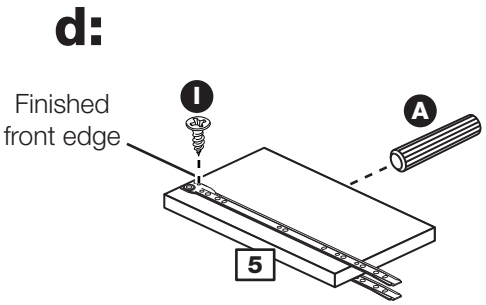

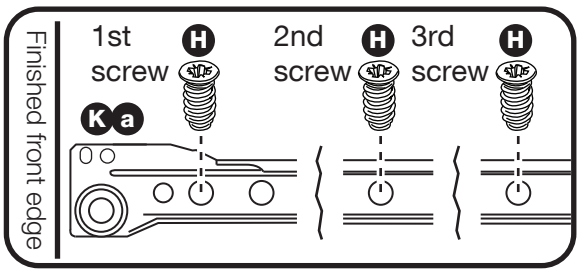

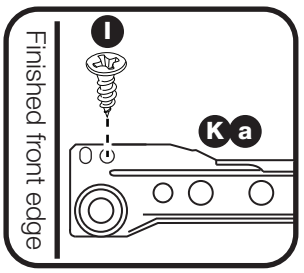


Step 24

Join the divider to the top

Push the divider 5 onto the top 3.

Use a screwdriver to tighten the 2 large locking nuts D fitted to the divider 5.

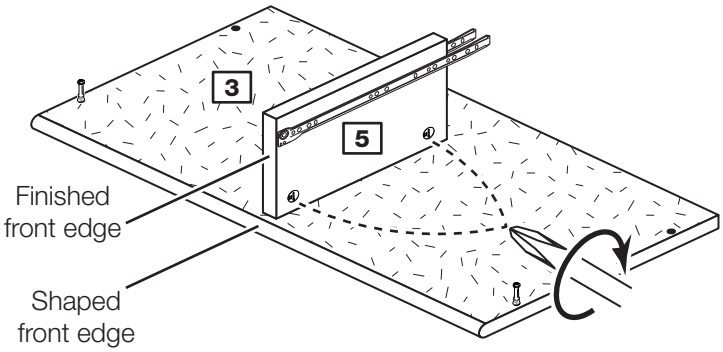


Step 25

Fit the top

Push the top 3 onto the 2 sides 1 and 2.


Use a screwdriver to tighten the 2 large locking nuts D fitted to the sides 1 and 2.

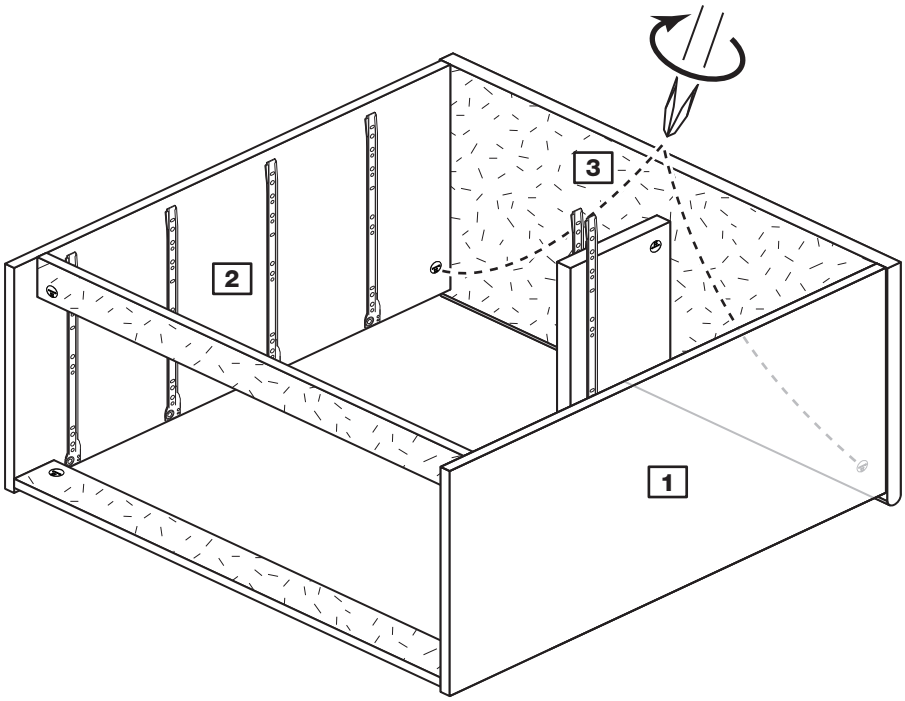

Step 26

Fit the 4 plastic nails

Tap 2 plastic nails M into the bottom edge of each of the sides 1 and 2.

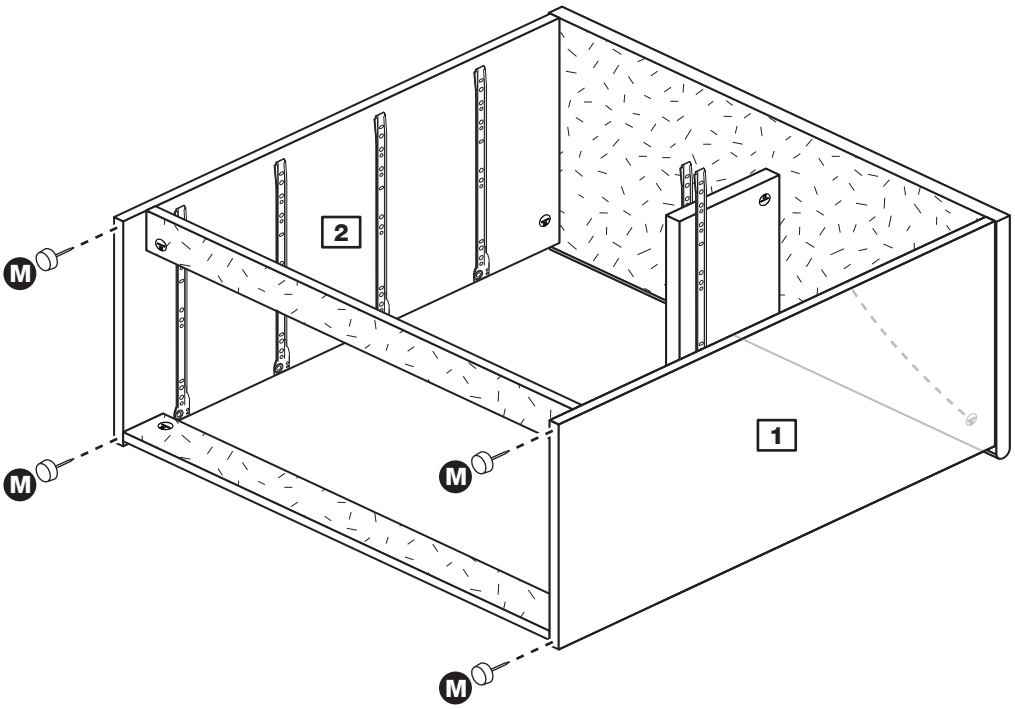

Step 27

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 14 onto the unit.


Nail F around the outside edges of the back 14.

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

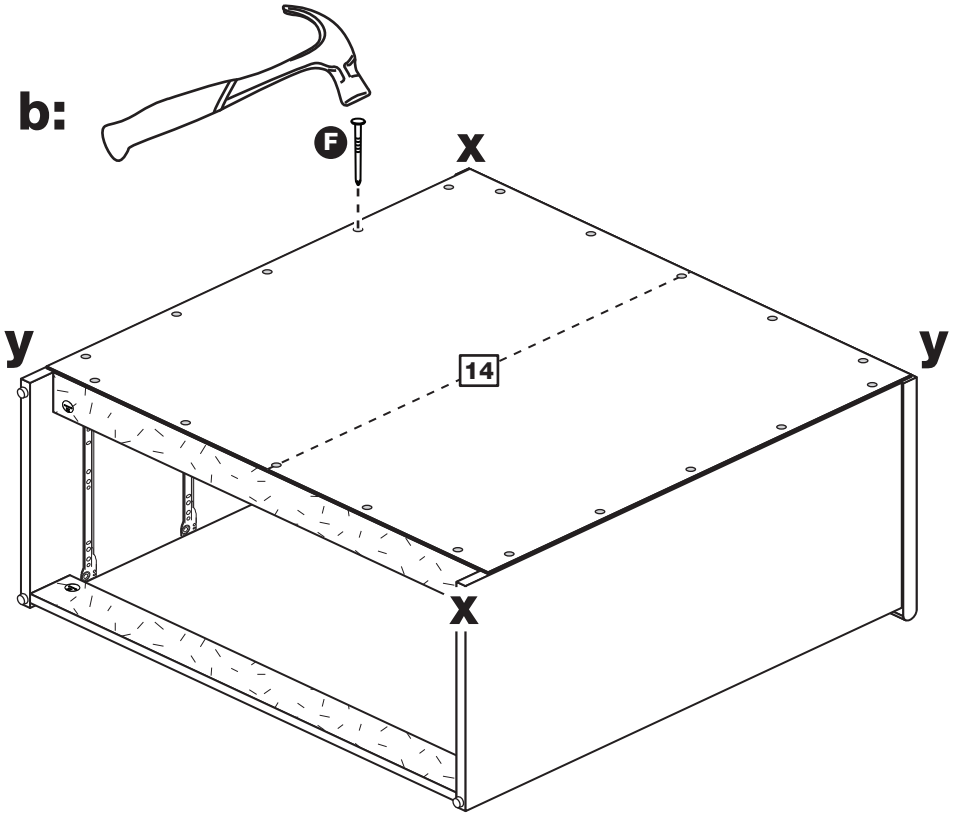


Step 28

Fit the drawers

Slide the wheels of the runners fitted to the drawers, over the wheels of the runners fitted to the side panels and push the drawers into position.

Assembly is complete

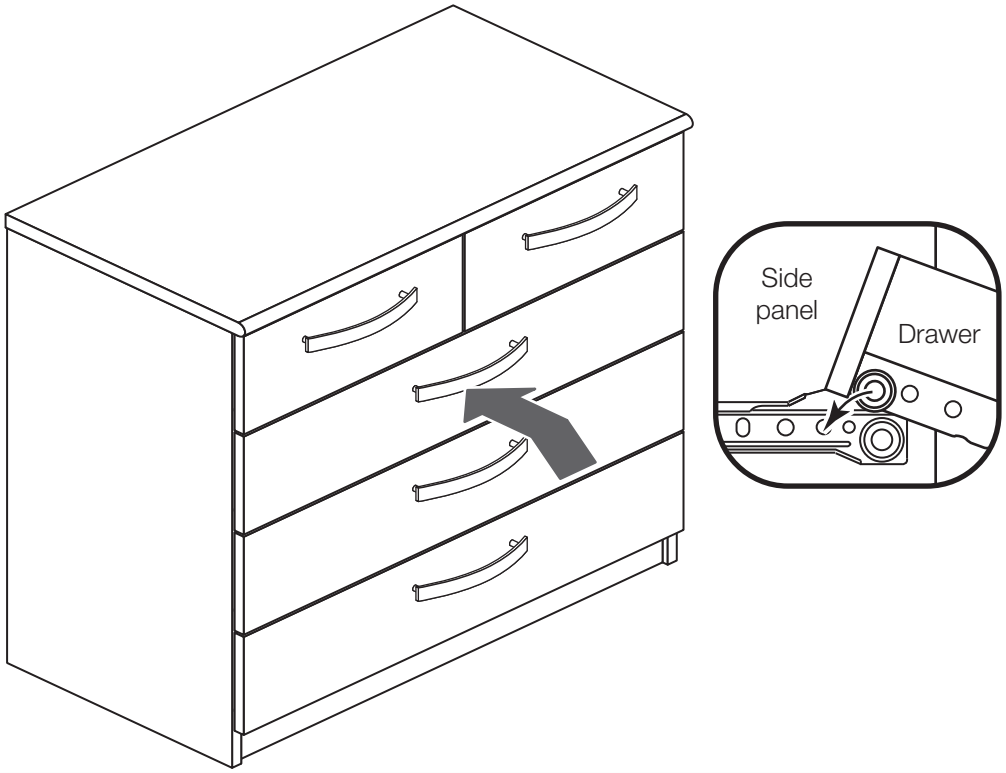


If you need help or have damaged or missing parts, call the **Customer Helpline: 0870 112 1928** or **email: Help@ClickSpares.co.uk** *(quoting your original order number and the reference numbers on the component pages)*
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW

DR899053

New Hallingford
2 Door 3 Drawer Wardrobe

Assembly Instructions - Please keep for future reference

2274951
2498696
2684321
2599409
2328450

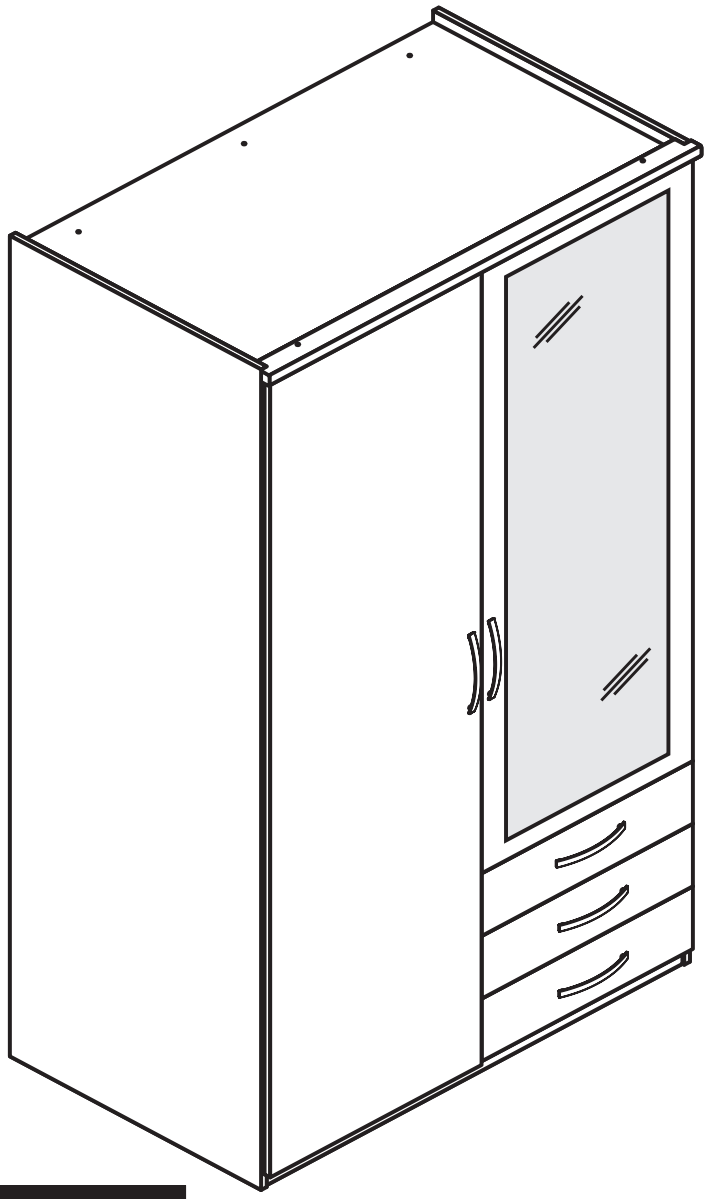

Tip: To prevent damage, we recommend that you build your unit on the carton(s) it was packed in.

Dimensions

Width - 99,7cm
Depth - 60,3cm
Height -205,7cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400 800**

Issue 1 - 11-06-2014

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



•To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing parts, call the **Customer Helpline: 03456 400 800**


Please check you have all the panels listed below

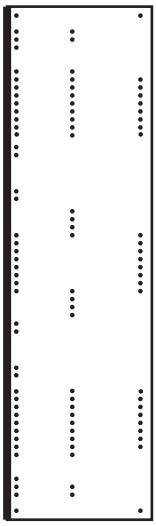


1 Left side
(205.6 x 58cm)
P2349b

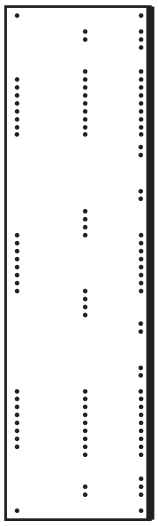


2 Right side
(205.6 x 58cm)
P2349b

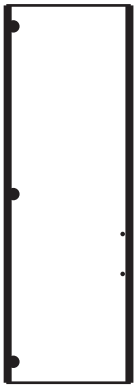


3 Mirror door small
(151.2 x 48.8cm)
PS3324

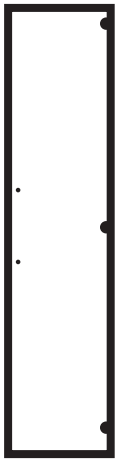

4 Door x 1
(199.2 x 48.8cm)
P3304

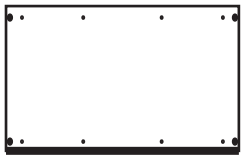

5 Top/Bottom x 2
(96.7 x 57.7cm)
P1341

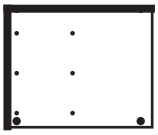


6 Upright small
(47.5 x 57.7cm)
P2893



7 Large horizontal
(96.7 x 57.6cm)
P1342



8 Small horizontal
(47.6 x 57.6cm)
P1343

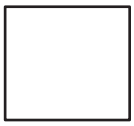


9 Drawer base x 3
(45.4 x 34.9cm)
BO33955B




10 Drawer wrap x 3
(35 x 46.7 x 10cm)
LA1869



11 Drawer front x 3
(48.8 x 15.7cm)
P4308

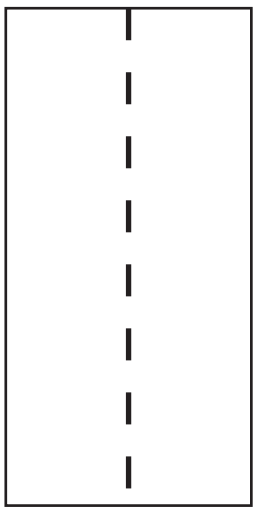

12 Foldy back
(199.3 x 98cm)
BO33933



13 Plinth front
(96.6 x 14cm)
P7334C

14 Plinth back
(96.6 x 5.4cm)
P7335C








15 Pelmet
(99.9 x 4.5cm)
FA247




Components - Fittings


Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

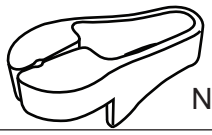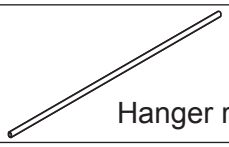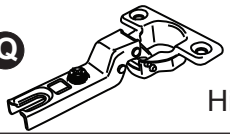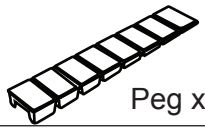FK1324 **A**  40mm Screw x 6	FK1980 **B**  20mm Screw x 10	FK1981 **C**  9mm Srew x 6
FK1400 **D**  15mm Screw x 13	FK1301 **E**  10mm Fixing screw drawer x 12	FK1309 **F**  12.5 mm Screw x 2
FK1235 **G**  L-Bracket x 1	FK1011 **H**  24mm locking screw x 28	FK1012 **I**  Large locking nut x 22
FK1010 **J**  Small locking nut x 6	FA1515 **K**  Nail x 60	FK1419 **L**  Nail holder x 1
FK1217 **M**  Hanger rail support x 2	PM1884 **N**  Hanger rail large x 1	FK1311 **O**  15mm Screw x 12
FK1269 **P**  Hinge back x 6	FK1268 **Q**  Hinge door x 6	PM16951 **R**  Runner x 6
FK1234 **S**  Peg x 2	GR1975 **T**  Door/Drawer handle x 5	FK1250 **U**  Drawerbase support x 6
ZF99936 **V**  Wall plug and parkerscrew x 1		

Tools required



Phillips screwdriver
(medium & large)


Flatblade screwdriver
(medium)


Piercer
(small)


5mm Suitable drill bit

5mm Suitable drill bit

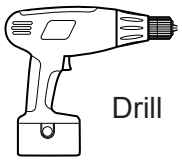
Drill


Stairs



Spirit level


Setsquare



Small hammer

Ruler/tape measure


Scissors


Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Drawer assembly x 3


a: Insert two small locking nuts Ⓙ into drawer wrap [10].

Make sure the ‘arrow’ on Ⓙ is pointing towards the hole in the edge of [10].

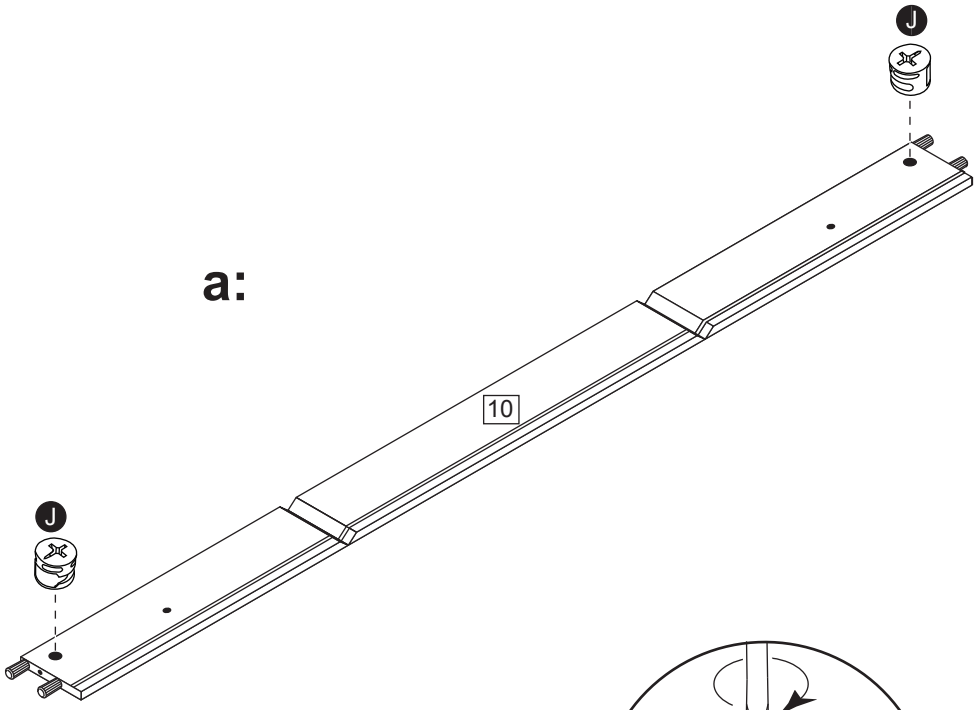


b: Screw 24mm locking screws Ⓗ into holes shown on back of drawer front [11].

Make sure 24mm locking screws Ⓗ are tightened right up against drawer front [11].

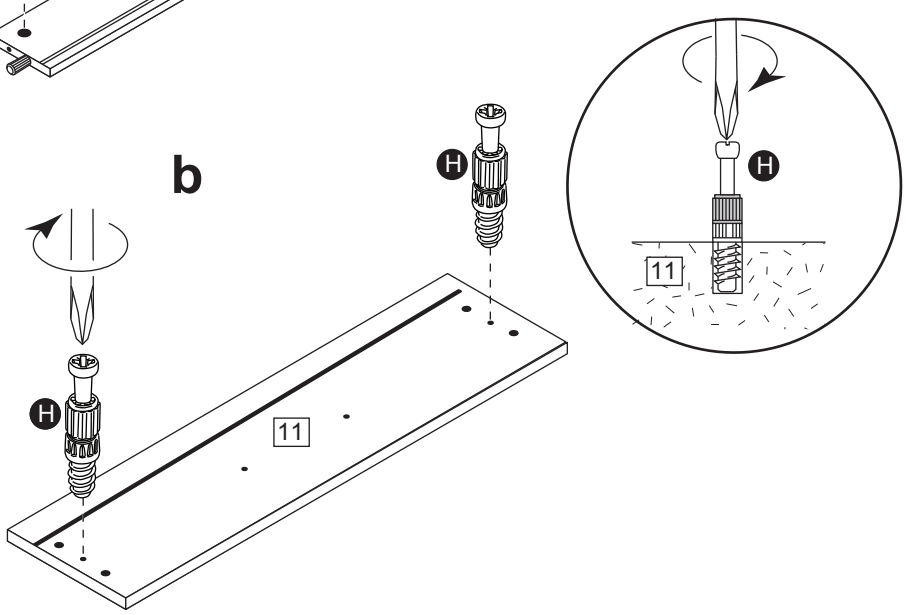


c: Slide drawer base [9] into grooves shown on drawer wrap [10].

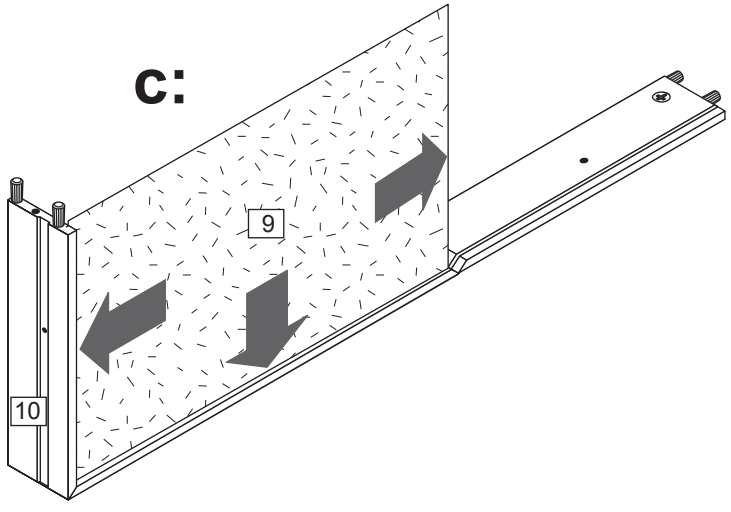


Assembly Instructions

Step 1 - continued

d: Turn the drawer wrap assembly over and push onto the drawer front 11. Use a phillips or flatblade screwdriver, that is a good fit to turn 24mm locking srew I as far as it will go - more than 1/2 turn.

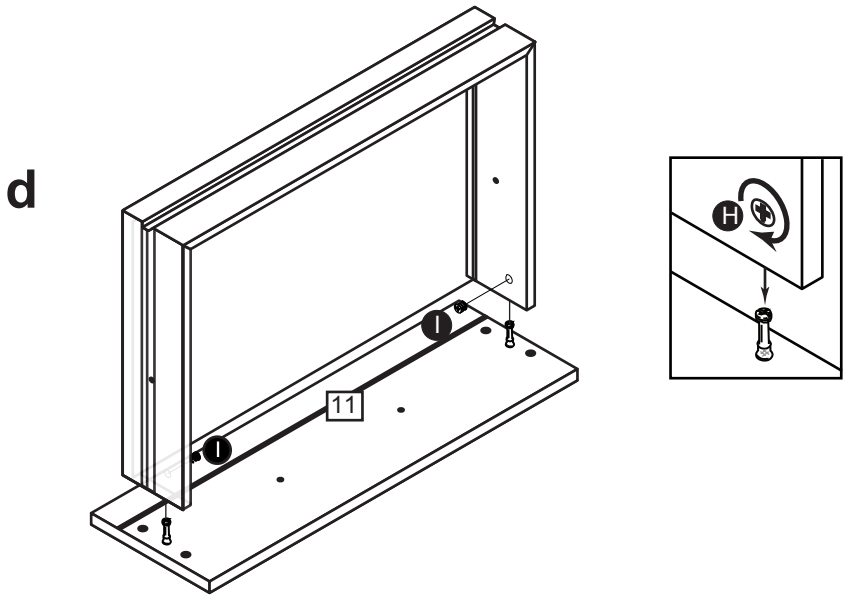


e: Fix drawer handle T onto drawer front 11 using 30mm screw B.
Turn over drawer and slide drawerbasesupports U in corner as shown and fix them, using the attached screws.

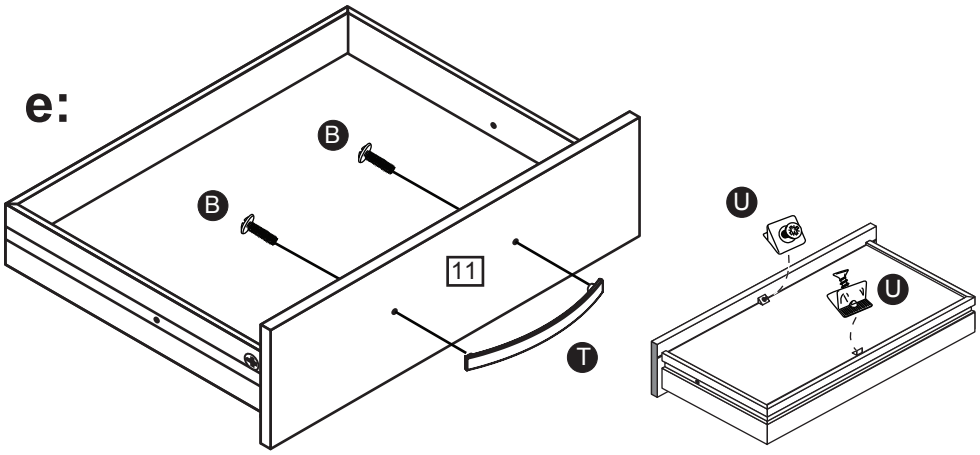

Step 2

Attaching runners

a: Slide top of runners R foreward and fix on right side 2 as shown using 10mm fixing screw drawer E.

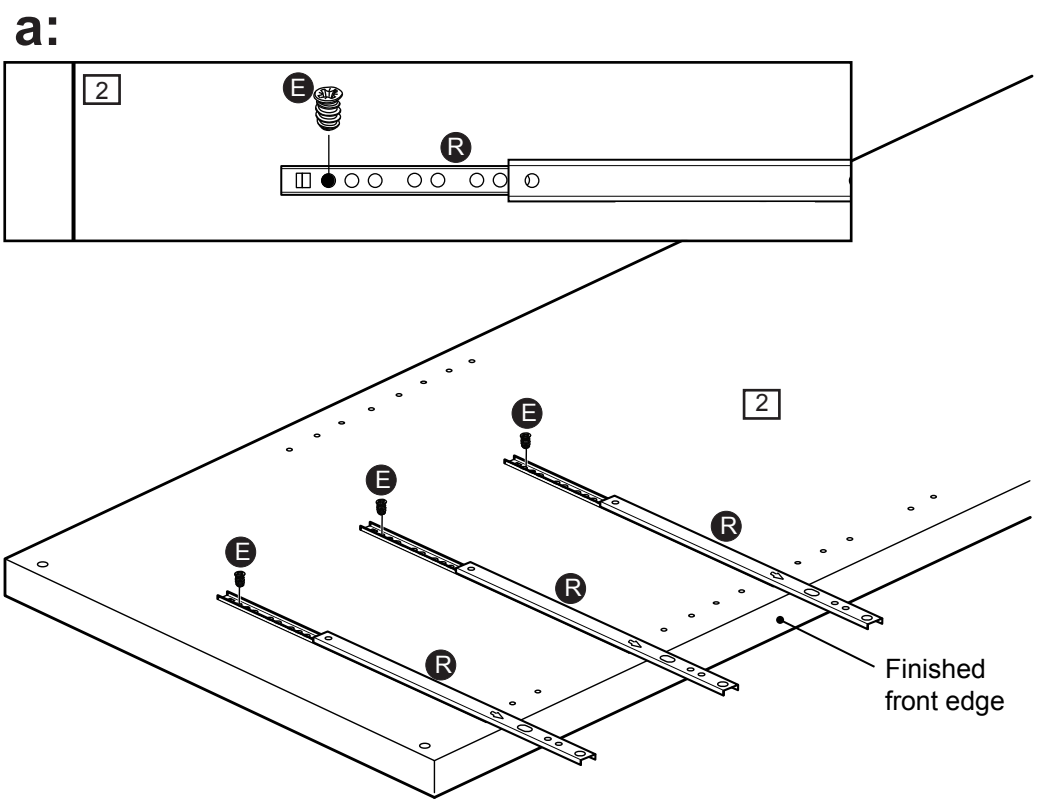

Assembly Instructions

Step 2 - continued

b: Slide top of runners Ⓡ back.

Fix through 3rd hole of runner Ⓡ and pre-drilled holes of right side [2] using 10mm fixing screw drawer Ⓔ.

Fix through 1st and 7th hole of runners Ⓡ using 15mm screw Ⓞ.

***Note:* there are no pre-drilled holes for 15mm screw Ⓞ.**

Repeat a and b on upright small [6].

Step 3


Insert fittings

a: Screw 24mm locking screw Ⓗ into right side [2].

Note: Insert 24mm locking screw Ⓗ as far as shown.
Do not over tighten.

Screw hinge back Ⓟ onto right side [2].

b: Attach hanger rail support Ⓜ using 12.5mm screw Ⓕ onto right side [2].

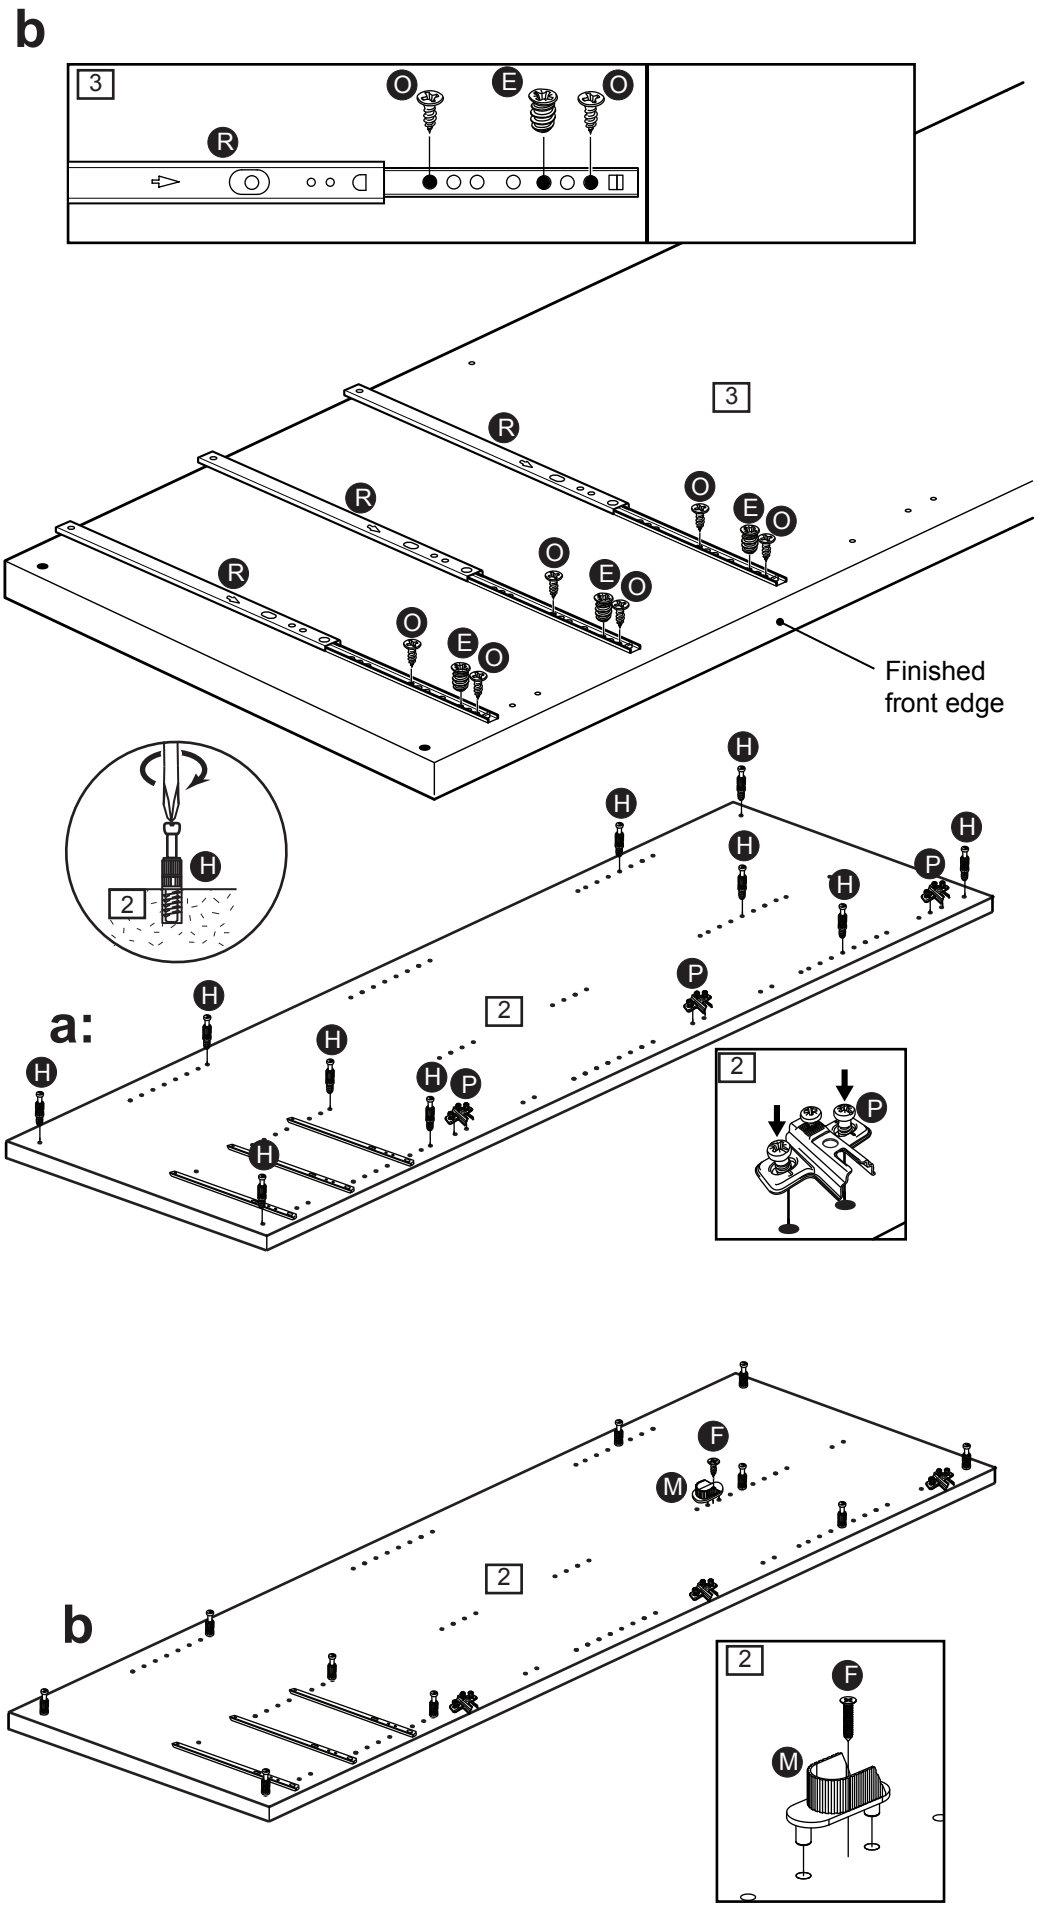

Assembly Instructions

Step 4


Attaching plinths

a: Allign the sides of plinth front [13] with bottom [5] as shown and attach using 40mm screw Ⓐ.

***Note:* there are no predrilled holes for 40mm screw Ⓐ.**

***Note:* top and bottom panels [5] are identical. Only prepare one of the panels at this satge. This will be the bottom panel**


Repeat with plinth back [14].

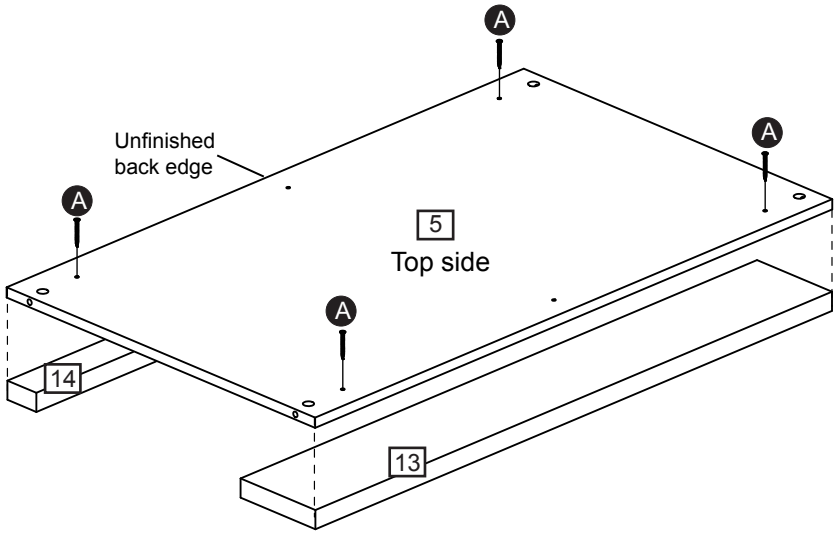

Step 5

Insert locking screws

a: Screw 24mm locking screw Ⓗ into bottom [5].

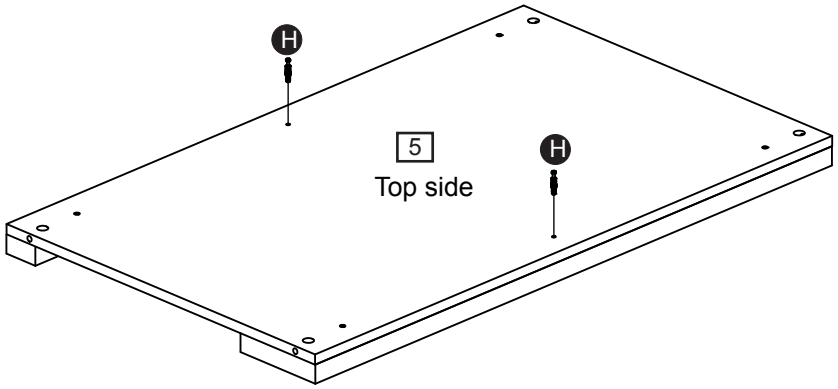


Step 6

Attaching panels

Position bottom [5], small horizontal [8], large horizontal [7] and top [5] onto right side [2].

Insert large locking nuts Ⓘ into bottom [5], small horizontal [5], large horizontal [7] and top [5] where shown.

Use a screwdriver to turn locking nuts Ⓘ clockwise to lock.

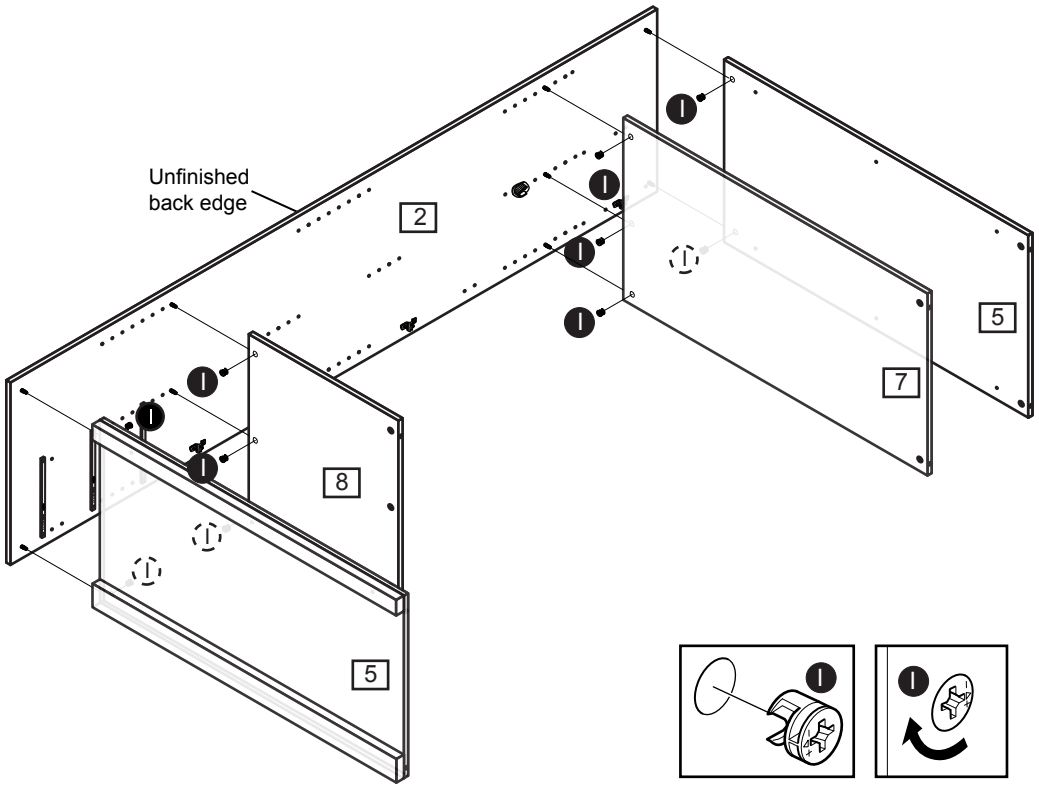


Assembly Instructions

Step 7

Insert locking screws

Screw 24mm locking screw Ⓗ into upright small [6].

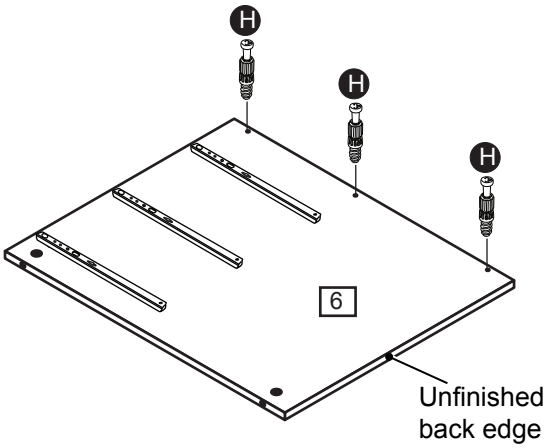

Step 8


Attaching panels


Two people are needed here.

Position upright small [6] onto bottom [5] and small horizontal [8].

Insert two Large locking nuts Ⓘ into upright small [6] and small horizontal [8] where shown.

Use a screwdriver to turn locking nuts Ⓘ clockwise to lock.

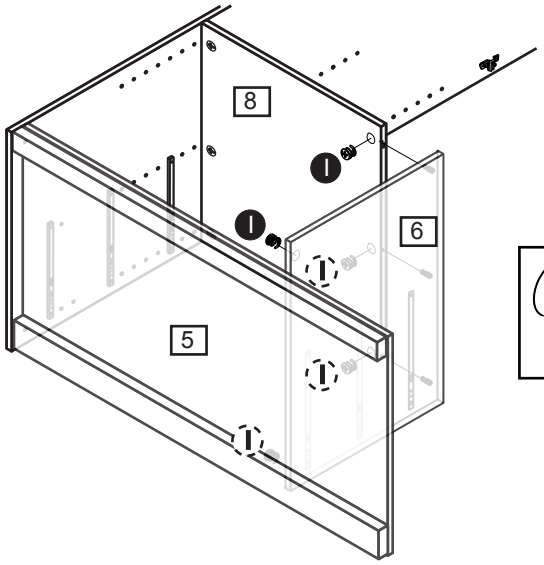

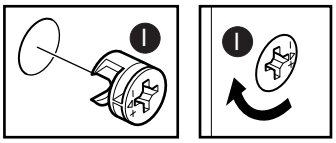

Step 9


Insert fittings

Screw 24mm locking screw Ⓗ into left side [1].

Note: Insert 24mm locking screw Ⓗ as far as shown.
Do not over tighten.

Screw hinge back Ⓟ onto upright [1].

Attach hanger rail support Ⓜ using 12.5mm screw Ⓕ onto left side [2].

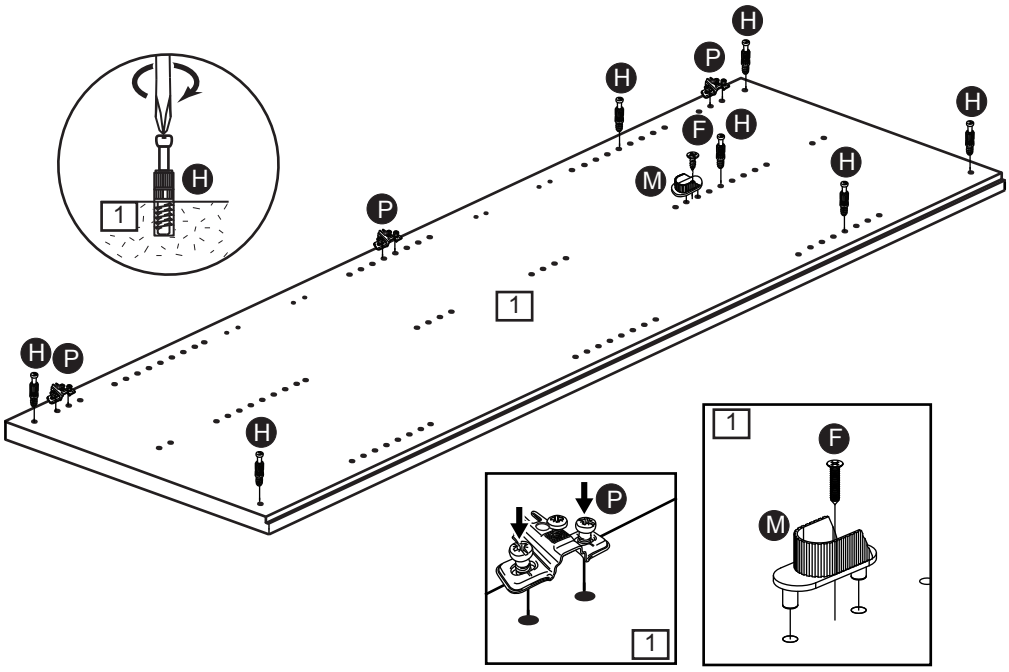

Assembly Instructions

Step 10


Attaching panel

Two people are needed here.

Position left side 1 onto bottom/top 5 and large horizontal 7.

Insert large locking nuts I in top/bottom 5 and large horiziontal 7.

Use a screwdriver to turn locking nuts I clockwise to lock.

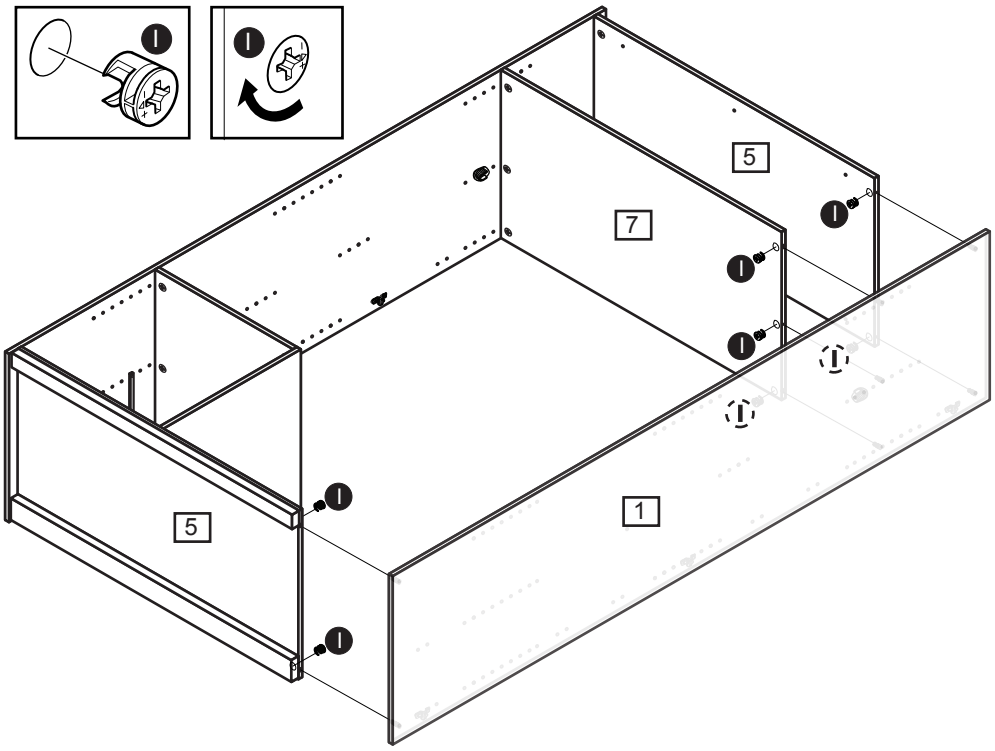


Step 11


Fitting back panel

Attach foldy back 12 to back of wardrobe with the coloured surface facing the inside of the unit using nails K and.
Use nail holder L to hold the nails K vertical and at correct distance as you secure the foldy back 12.
Nails K should be spaced about 150mm apart.

Important: Cabinet MUST be 'square' when back is attached.

Stand up the unit!
2 people required.

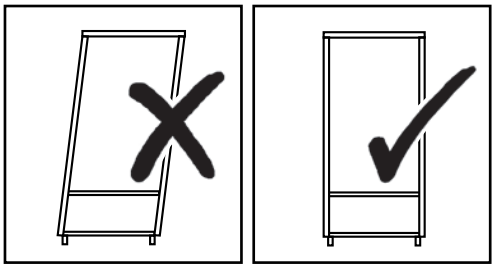

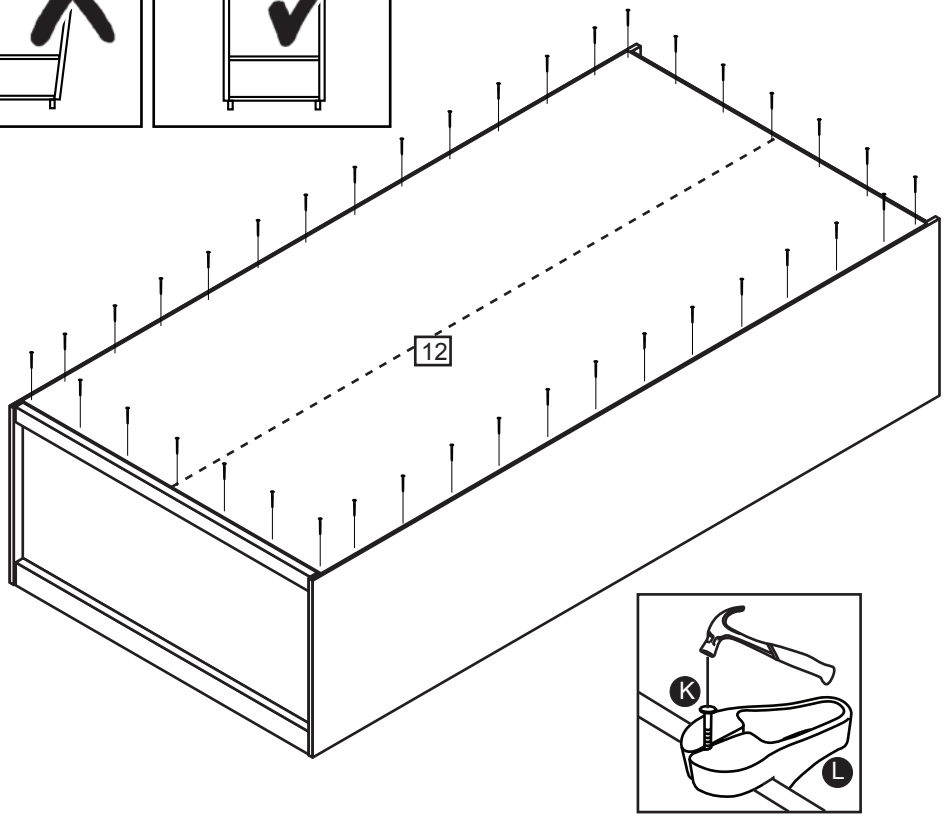

Step 12


Attaching pelment and L-bracket

Position pelment [15] onto top [15] as shown, fix by using 40mm screws Ⓐ.

Position L-Bracket Ⓖ onto top [5] as shown, fix by using 15mm screw Ⓓ.

Note: there are no pre-drilled holes for 15mm screw Ⓓ.


Use Ⓥ to fix on the wall, please see last page for more information.

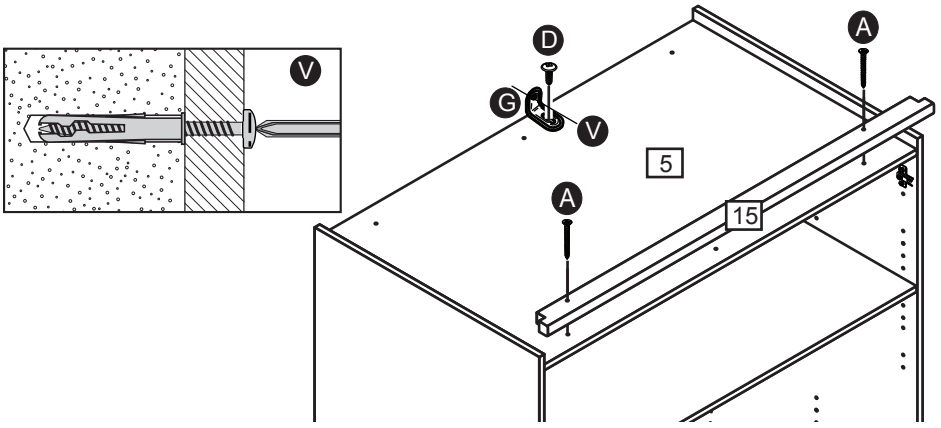

Step 13

Inserting hanger rails

Place hanger rail large Ⓝ into hanger rail supports Ⓜ.

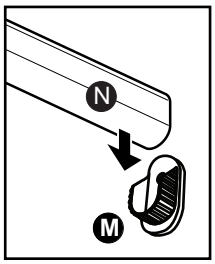


Step 14

Inserting drawers


a: Pull runners outSlide drawers onto runners so they butt up against back of drawer front.

b: Fix through drawer sides into runners using 9mm screws Ⓒ.

a:

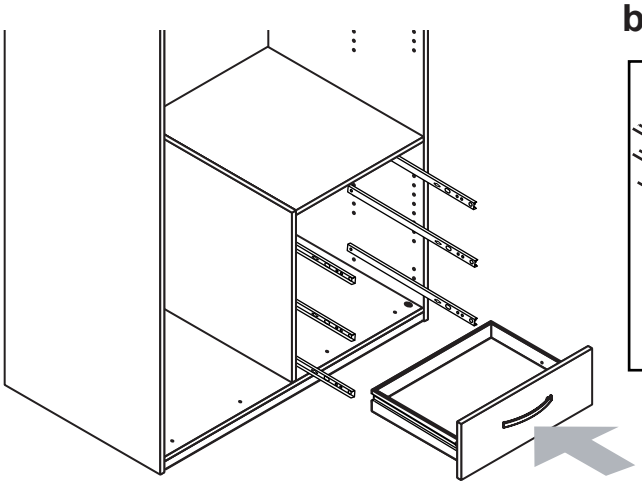

b:

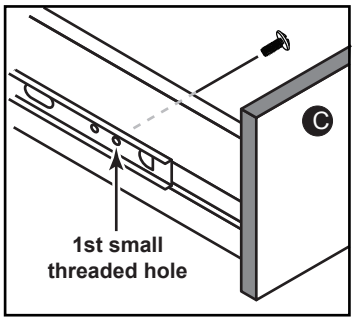



Step 15

Fitting hinges to doors

Fix three hinge door Ⓠ to door [4] and mirror door small [3] using 15mm screws Ⓓ.

Attach door handles Ⓣ using 30mm screws Ⓑ.

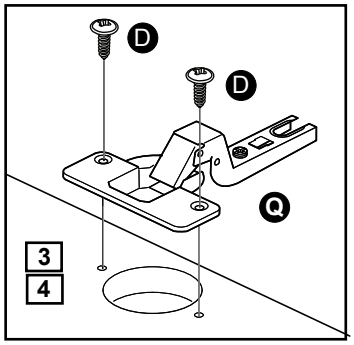


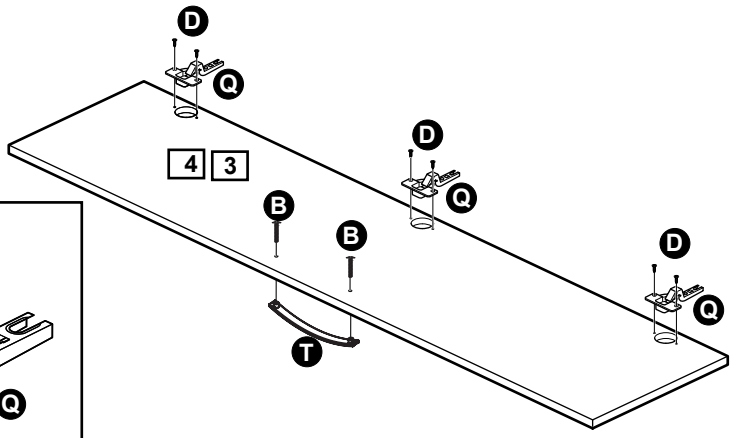


Step 16

Hanging doors

a: With help, slot hinge door Q onto hinge back P.

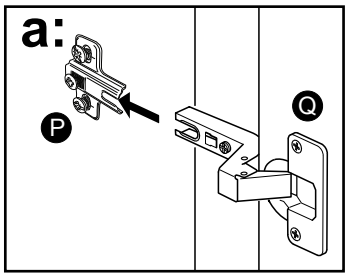


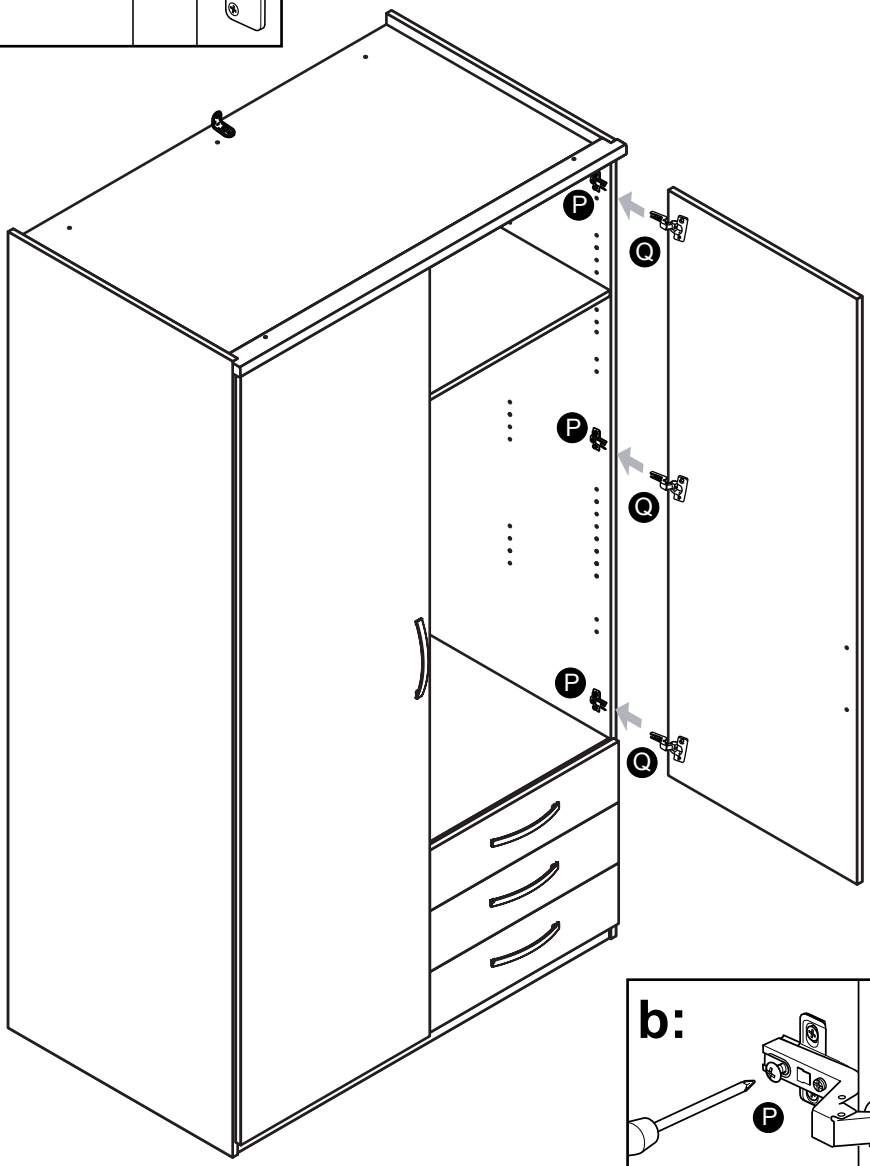

b: Tighten screw shown to lock hinges in position.


Repeat **a** and **b** for other door.

See **'Hinge adjustment'** in step 17 if the doors need adjusting.

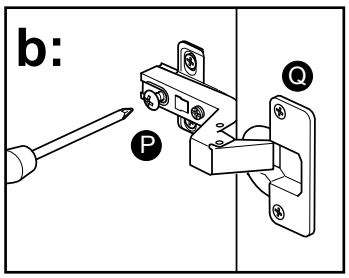

c: Before adjusting the doors, use a spirit level to check if the base of this unit is level front-to-back and side-to-side in the three positions shown.

Use pegs S to square your unit. Knock peg S in, as far as you require, under the ends of the unit and then snap off flush with the panel.

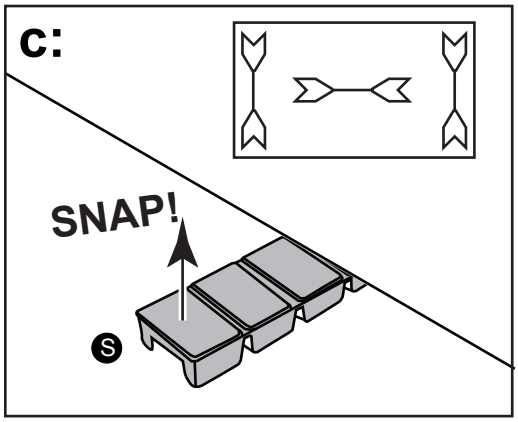



Step 17

Hinge adjustment

a: To move doors up or down: loosen screws shown and move doors to suit.


Once doors are aligned, re-tighten.

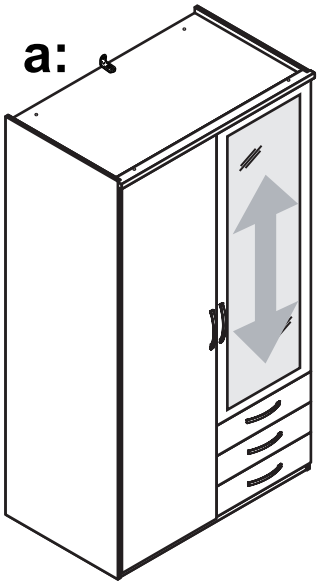


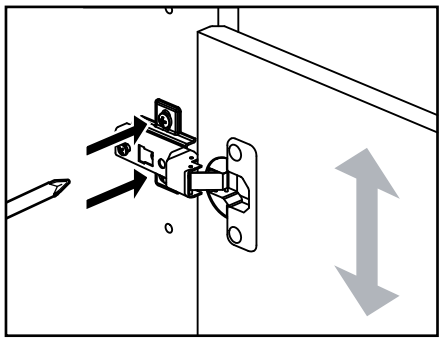

b: To move doors in or out: loosen screw shown and move doors to suit.


Re-tighten screws.

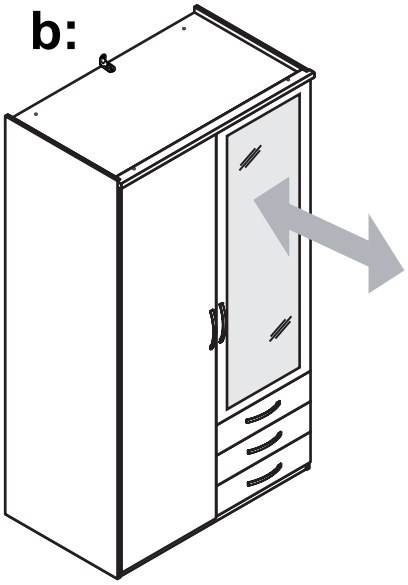


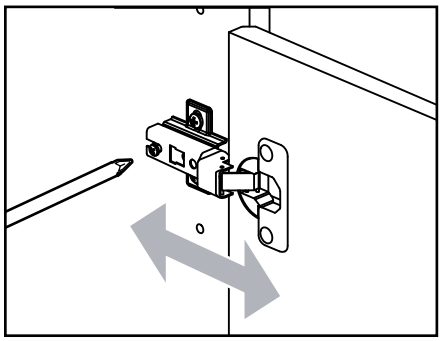

c: To move doors left or right: loosen screw shown and move doors to suit.

Re-tighten screws.

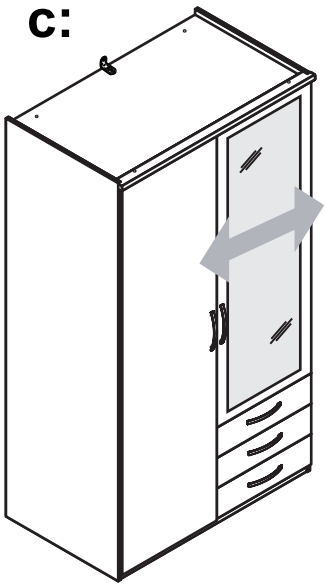

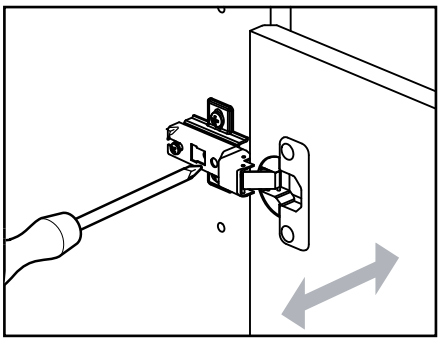

A Guide to - Wall Mounting & Fixings

Important note:

If plastic wall plugs are supplied with your product:



- these are only suitable for use in masonry walls.

If you are in any doubt about the correct wall plugs for your wall, seek professional advice.

Failure of the product due to using incorrect fixings is the responsibility of the installer.

Important: **When drilling into walls always check that there are no hidden wires or pipes etc.**

Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.

Hints:

1: General rule: Always use a larger screw and wall plug if you are not sure.

2: Ensure you use the recommended drill bit to match the wall plug and hole size.

3: Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.


4: Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure wall plugs are inserted beyond the thickness of the ceramic tiles to avoid the tiles splitting or cracking.

5: Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types of walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone or wood.

No.1 **"General Purpose" wall plug**

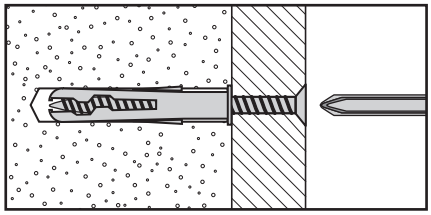


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case. For light loads, general purpose wall plugs can be used.

No.2 **"Plasterboard" wall plug**

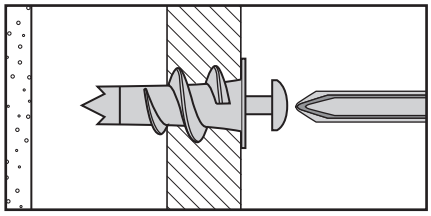


For use when attaching light loads on to plasterboard partitions.

No.3 **"Cavity Fixing" wall plug**

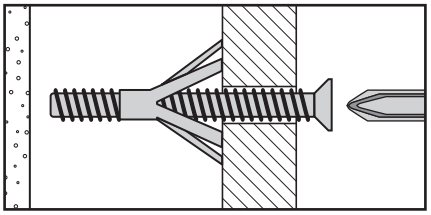


For use with plasterboard partitions or hollow wooden doors.

No.4 **"Cavity Fixing-Heavy Duty" wall plug**

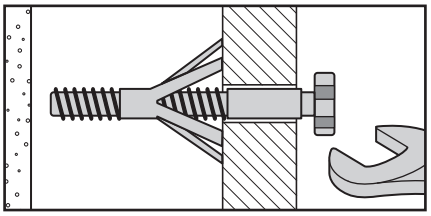


For use when fitting or supporting heavy loads such as shelving, wall cabinets and coat racks.

No.5 **"Hammer Fixing" wall plug**

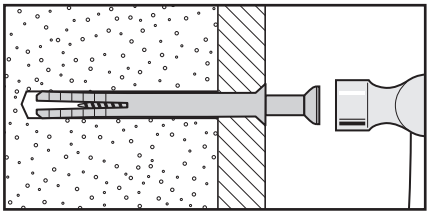

For use with walls stuck with plasterboard. The hammer fixing allows it to be fixed to the wall rather than the plasterboard. Always check the fixing is secure to the retaining wall.

No.6 **"Shield Anchor" wall plug Heavy loads**

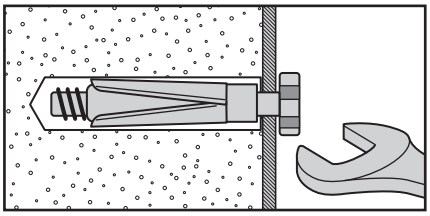

For use with heavier loads such as TV & HiFi speakers and satelite dishes etc.

Care & Maintenance

Safety: Always check the fitting and location to ensure your safety in and around the home.

Fitting: From time to time check the fitting to ensure the wall plugs or screws do not become loose.