
Higham Bed With Drawer

Assembly Instructions - Please keep for future reference

248/9320

258/9127

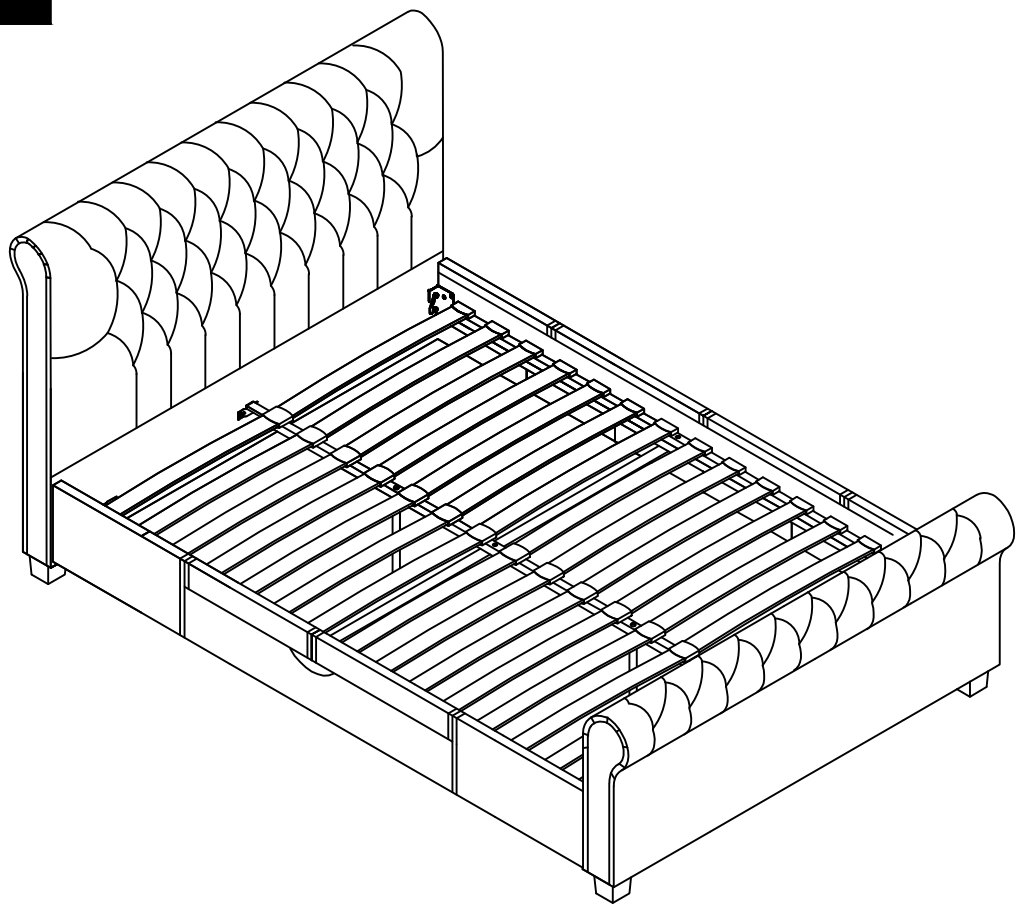

Dimensions (4'6)
Width - 146cm Depth - 226cm Height - 95cm

Dimensions (5')
Width - 161cm Depth - 236cm Height - 95cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 0345 6400 800**

Issue 1- 22/12/14

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Cleaning Guidance

Minor stains and spillages should be removed immediately from cushion fabric, by wiping over lightly with a damp cloth and mild soapy water.

Light marking can also be removed using this method.

To remove more stubborn stains or marking, a good quality proprietary domestic fabric cleaner can be used, although it should first be tested on and inconspicuous area of the fabric.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly , only once the product is complete should you fully tighten the bolts


• Regularly check and ensure that all bolts and fittings are tightend properly .

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**


Please check you have all the parts listed below

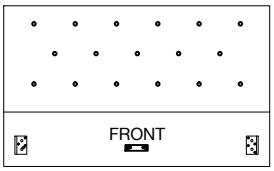


1 Headboard
(4'6 -146 x90 cm)
(5' -161 x 90 cm)




2 Footboard
(4'6 -146 x 50 cm)
(5' -161 x 50 cm)



3 Side rail x 2
(4'6 -193 x 31cm)
(5' -203 x 31cm)




4 Centre support
(4'6 -193 x 5 cm)
(5' -203 x 5 cm)




5 Bentwood slat
(4'6 -68.8 x 5.5 cm x 28)
(5' -76.8 x 5.5 cm x 30)



6 Drawer guide rail x 2
(4'6 - 138.5 x 7.5 cm)
(5' - 154.5 x 7.5 cm)




7 Long support leg x 2
(Ø2.5 x 23.5 cm)



8 Foot X 4
(6.2 x 3.3 x 4 cm)



9 Castor x 10
(5.5 x 5 cm)



10 Corner bracket x 4
(12 × 8.5 cm)



11 Double slat cap
(4'6 - 5.5 cm x 14)
(5' - 5.5 cm x 15)



12 Single slat Cap
(4'6 - 5.5 cm x 28)
(5' - 5.5 cm x 30)


Components - Parts

If you have damaged or missing components, call the **Customer Helpline: Argos = 0345 6400 800**


Please check you have all the parts listed below




13 Short support leg X 4
(Ø2.5 x 2 cm)



14 Drawer side panel x 4
(60 x 16 x 1.2 cm)

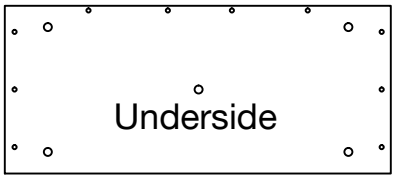

15 Drawer base panel x 2
(106.5 x 60 x 1.2 cm)



16 Drawer front panel x 2
(109 x 20 x 3 cm)



17 Drawer back panel x 2
(104.1 x 16 x 1.2 cm)





18 Metal brackets x 4
(1.5 x 1.5 cm)

Components - Fittings


If you have damaged or missing components.call the **Customer Helpline: 0345 6400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Ø5/16 x 45mm Bolt x 6	**B**  Ø5/16 x 25mm Bolt x 8	**C**  Height adjustable foot x 6
D  8 x 35mm Wood screw x 20	**E**  3 x 35mm Wood screw x 28	**F**  25mm 1/4'' Metal dowel x 8
G  10 x 10 mm Locking Nut x 8	**H**  Ø1/4 x 15mm Bolt x 8	**J**  3.5 x 14mm Wood Screw x 8
K  5mm Allen key x 1	**L**  4mm Allen key x 1	**M**  Spanner x 1

Tools required




Ruler/tape measure



Phillips screwdriver (Not supplied)

Ruler - Use this ruler to help correctly identify the screws



Assembly Instructions


Step 1

Attaching feet

With help, attach feet [8] to the underside of headboard [1] using screws Ⓓ.

Repeat for footboard [2].

Note: The exact position should be outlined.

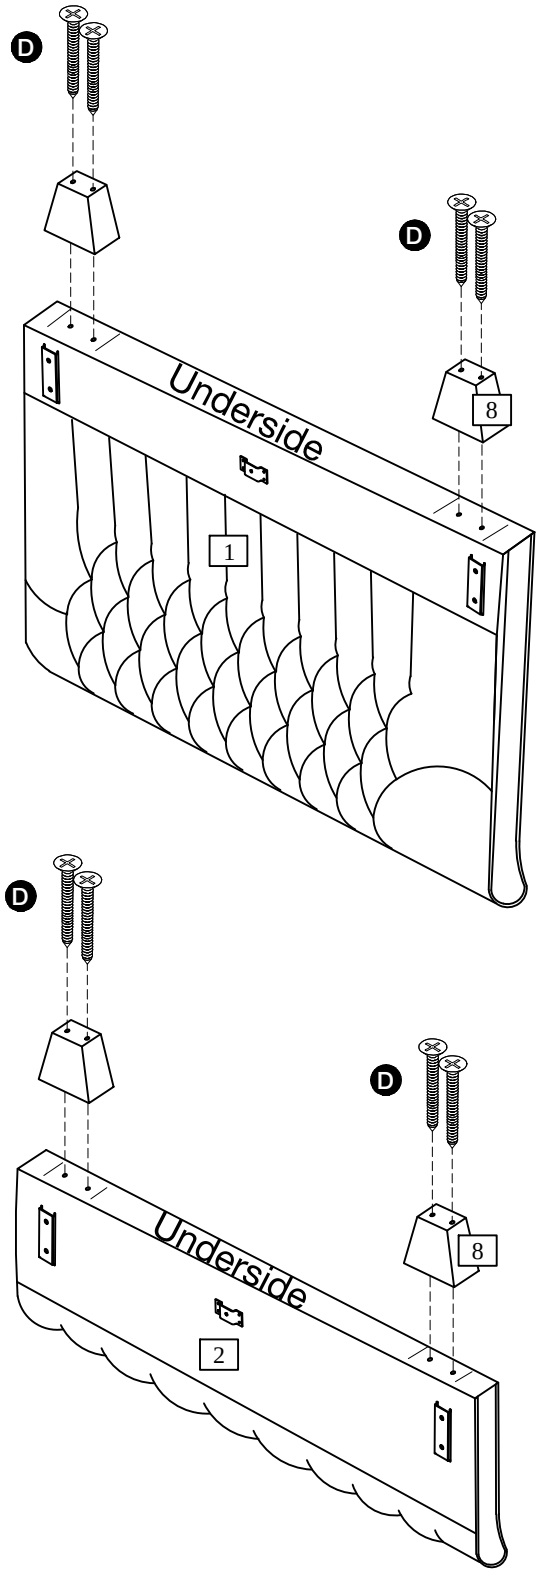


Step 2

Attaching side rails

a: Lay headboard 1 and footboard 2 flat onto the floor with the fixing holes facing upwards.

Loosely fit bolts B into headboard 1 and footboard 2 as shown.

a:

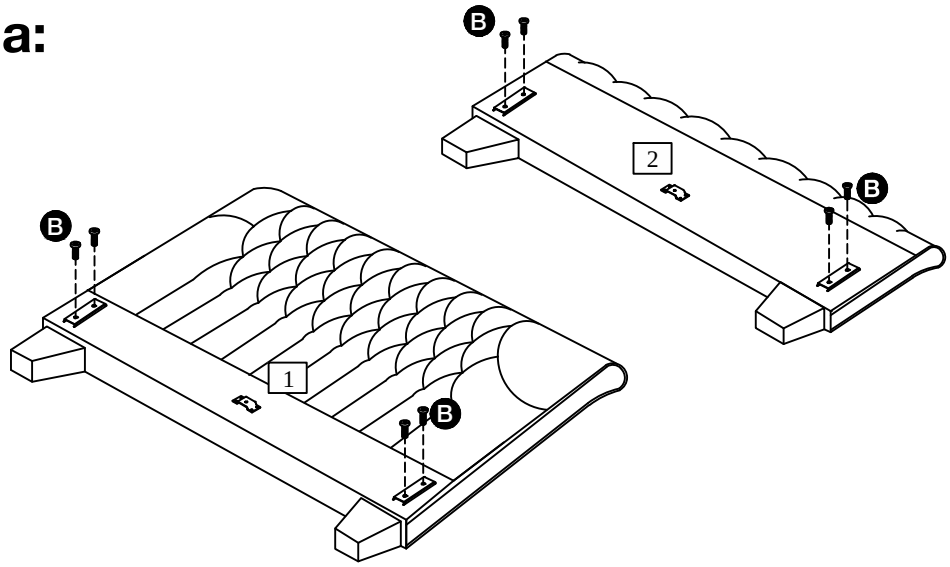


b: With help, raise the headboard 1 into the standing position.

Hang the metal brackets on the end of side rails 3, over the bolts in the headboard 1.

Note: Do not fully tighten bolts B at this stage. Finger tighten only.

Repeat to assemble footboard 2.

b:

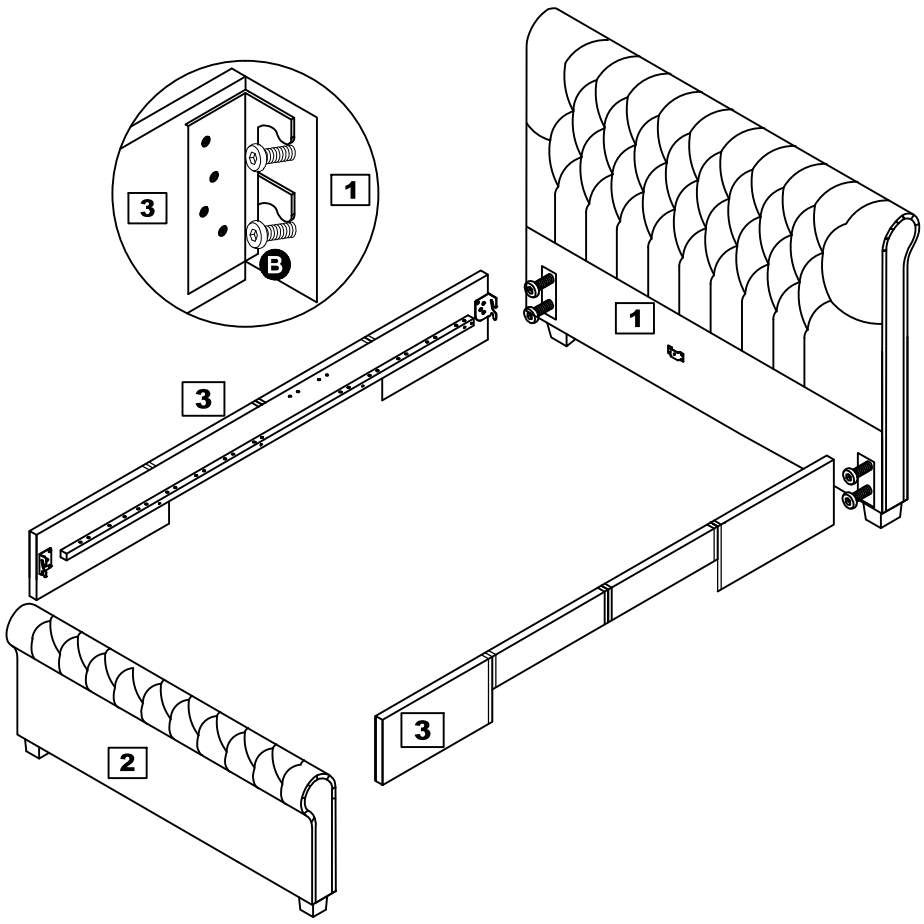

Assembly Instructions


Step 3

Preparing drawer guides

Attach short support legs [13] to the underside of the drawer guide rail [6] using screws Ⓐ .

Screw height adjustable feet Ⓒ into support legs [13] as shown.


Repeat for both drawer guide rails.

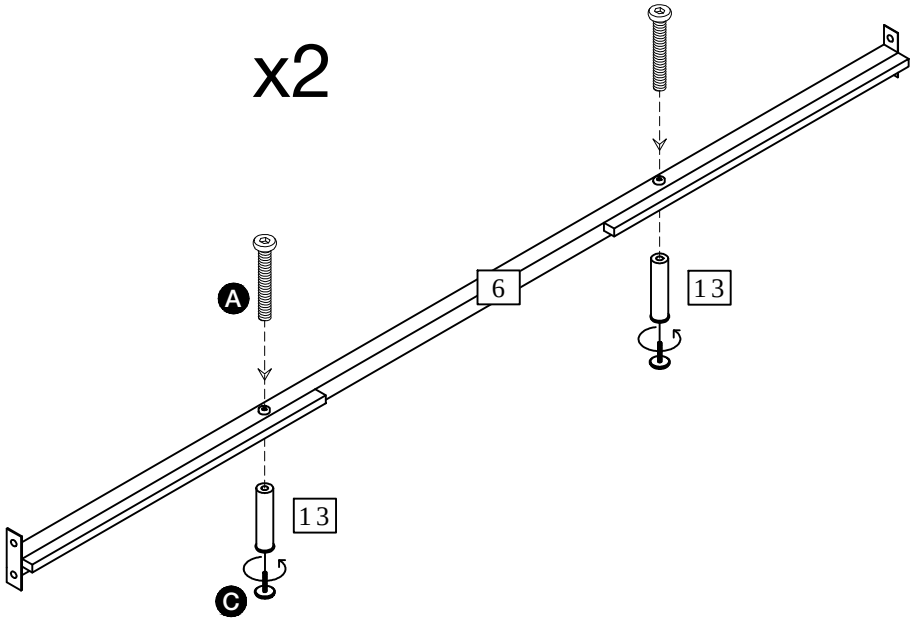

Step 4

Assembling drawer guides

Assemble drawer guide rails [6] in between side rails [3] using screws Ⓗ at both ends.

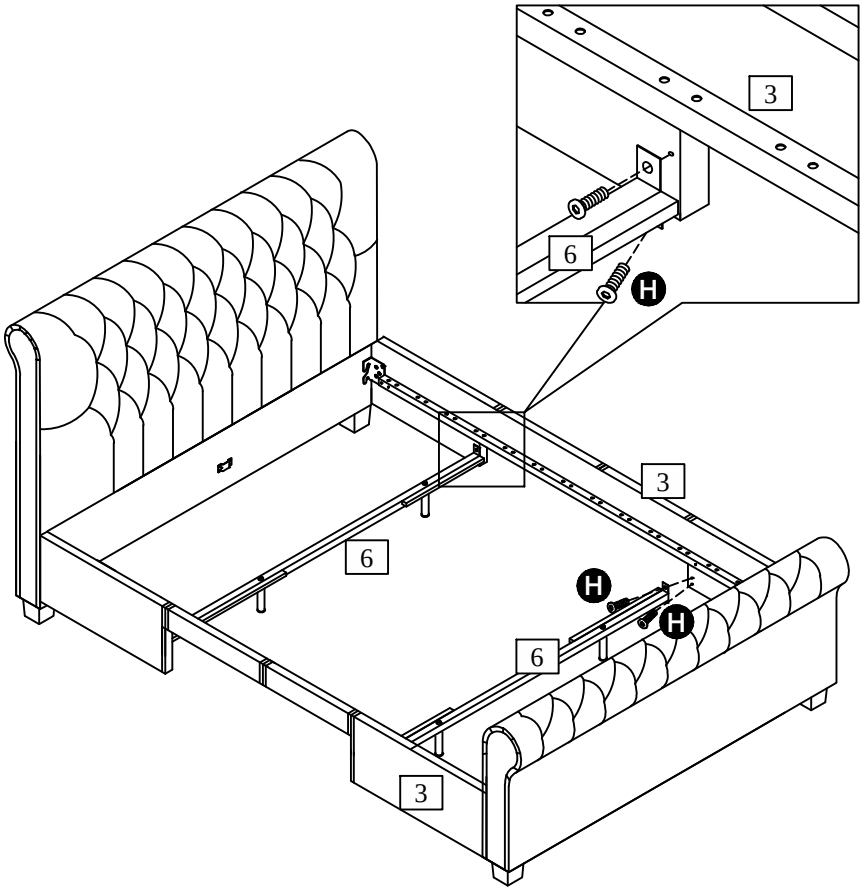


Step 5

Preparing central support

Assemble long support legs [7] to the underside of central support [4] using screws Ⓐ as shown.


Screw height adjustable feet Ⓒ into support legs [7] as shown.

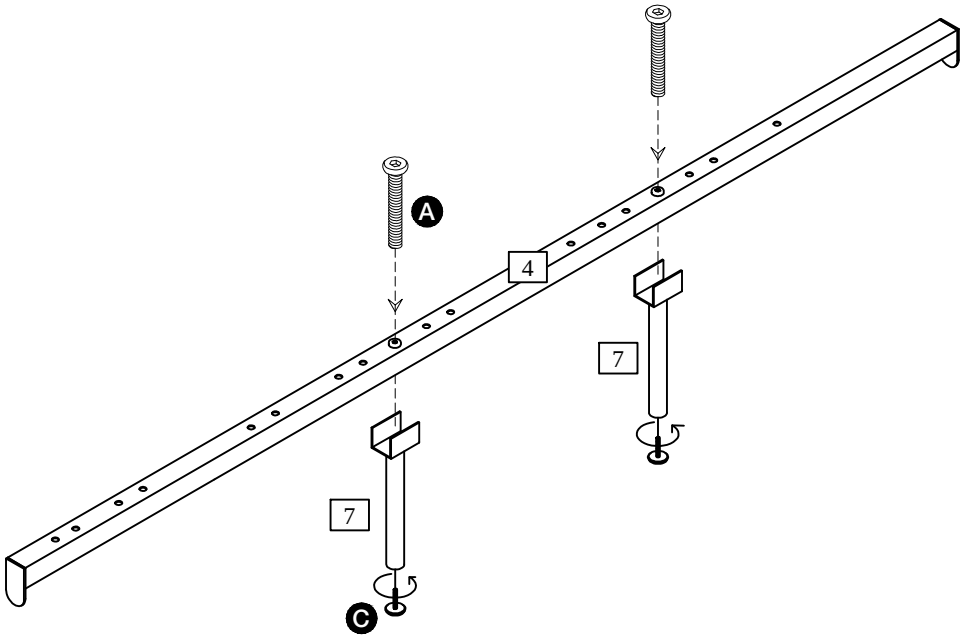

Step 6

Locating central support

Carefully locate central support [4] in between the headboard and footboard by locating the metal plates on each end of the central support , into the brackets as shown.

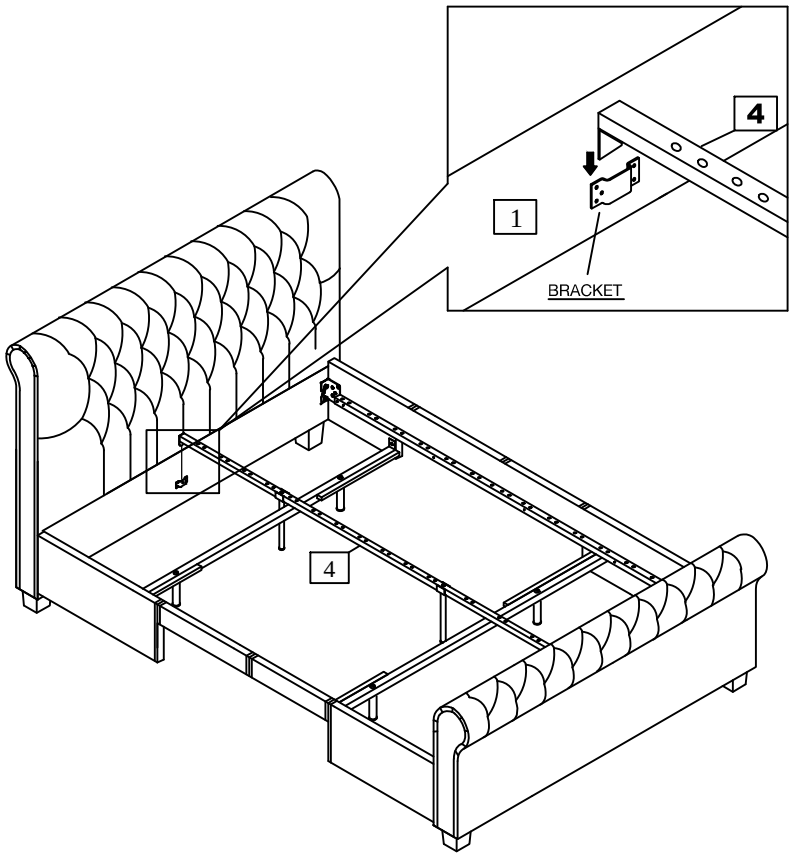


Step 7

Assembling corner brackets

Assemble corner brackets [10] in each corner of the bed frame using screws Ⓓ.

The positions should be outlined.

After checking the bed frame is correctly aligned, proceed to fully tighten all fixings from previous steps.

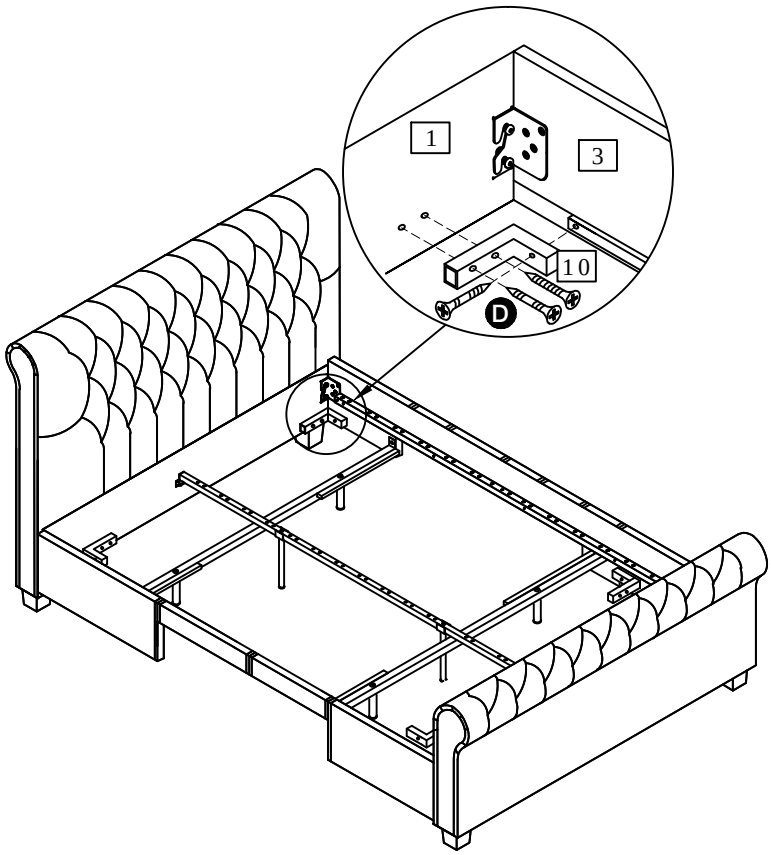


Step 8

Assembling slats

Assemble single plastic slat caps [12] onto one end of bentwood slats [5].

Fit bentwood slats [5] onto both side rails [3] by locating single slat caps [12] into the holes.

Fit bentwood slats [5] into both sides of double slat caps [11], before pushing caps [11] into the holes in central support [4].

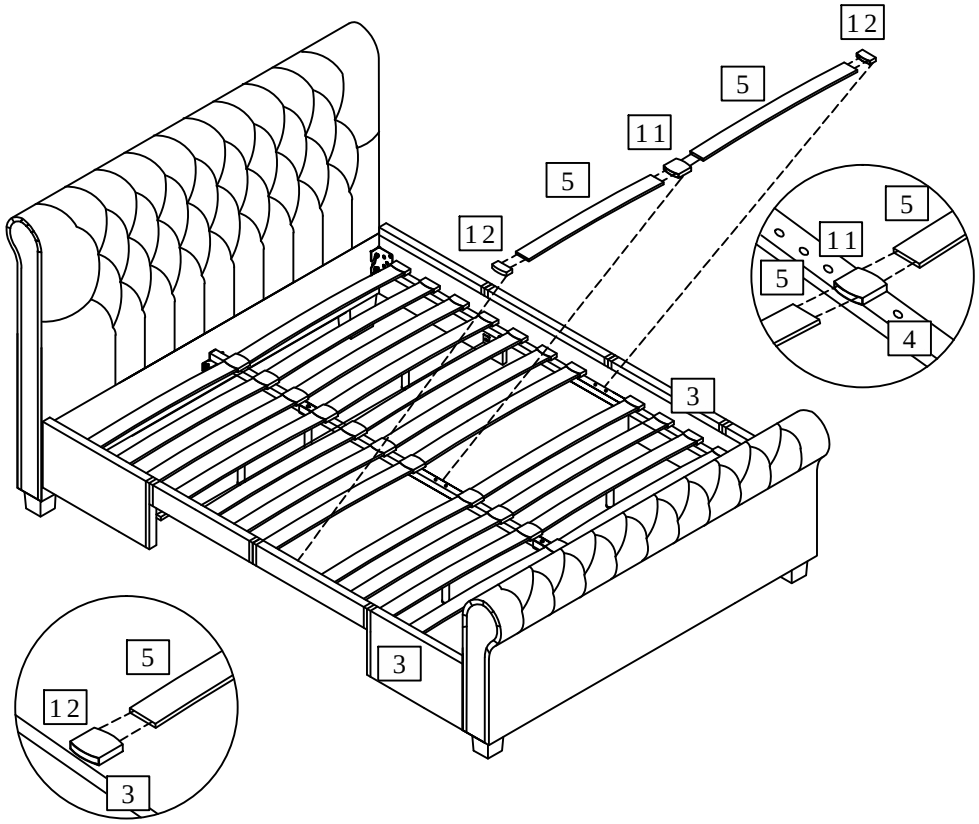

Step 9

Preparing drawer panels

a: Place drawer front panel 16 face down onto a clean flat surface.

Screw metal dowels F into the holes in the back of drawer front panel 16 as shown.


Note: Screw metal dowels as far as shown.

Do not overtighten.

b: Locate drawer side panels 14 onto front panel 16 as shown.

c: Secure the assembly by locating locking nuts G into the holes in side panels 14 .

Turn locking nuts clockwise to secure.

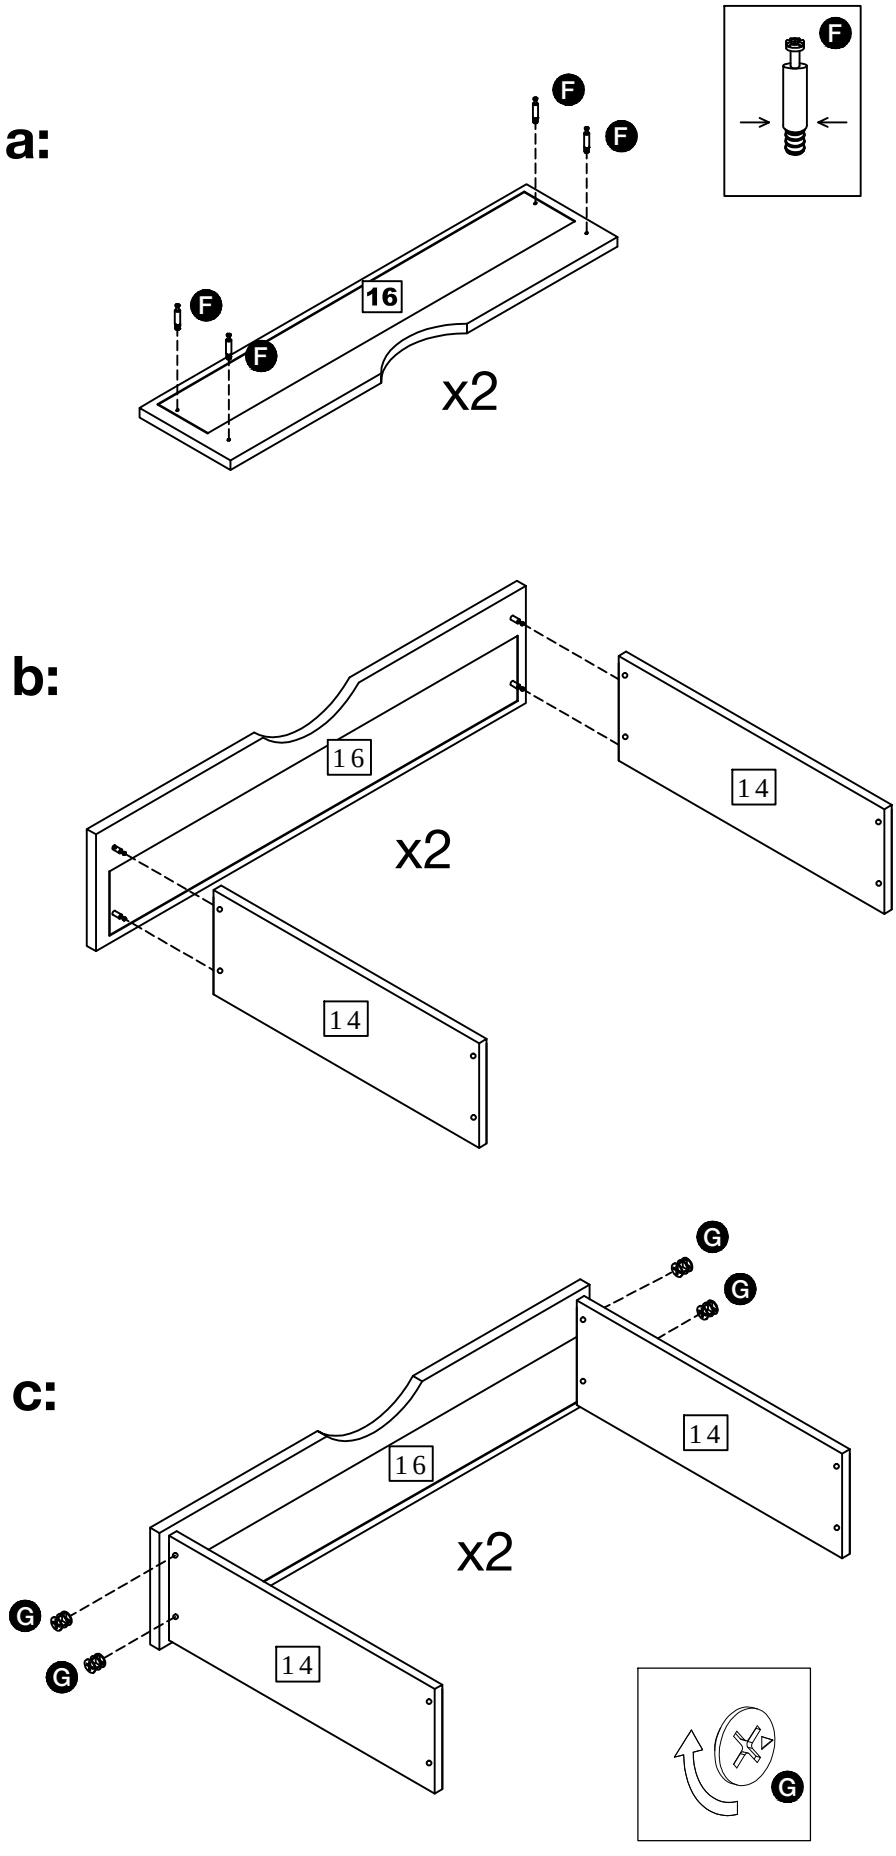


Step 10

Completing drawers

a: Locate drawer back panel 17 in between drawer side panels 14 .

Secure drawer back panel 17 using wood screws E.

a:

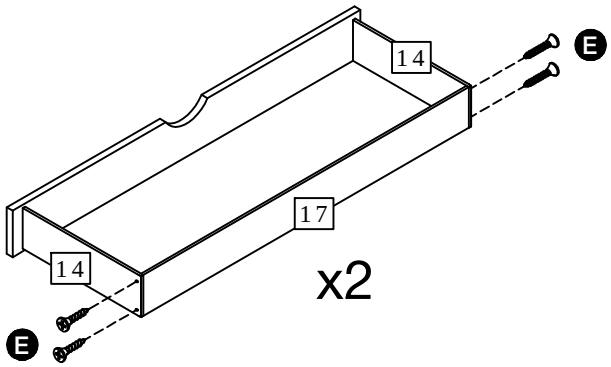


b: Carefully turn the drawer body upside down.

Locate drawer base panel 15 into position.

Note: Ensure the fixing holes for the castors are facing up.

Secure base panel 15 using screws E.


b:

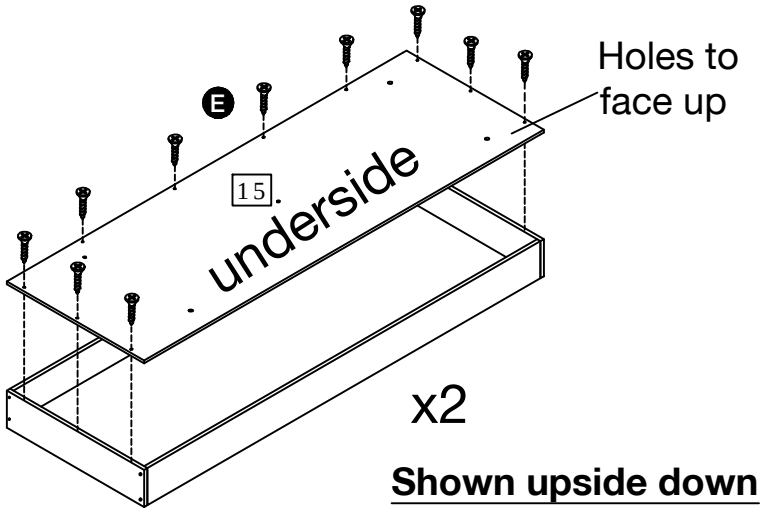

Shown upside down

c: Assemble metal brackets 18 to drawer front 16 and drawer base 15 using wood screws J .

c:

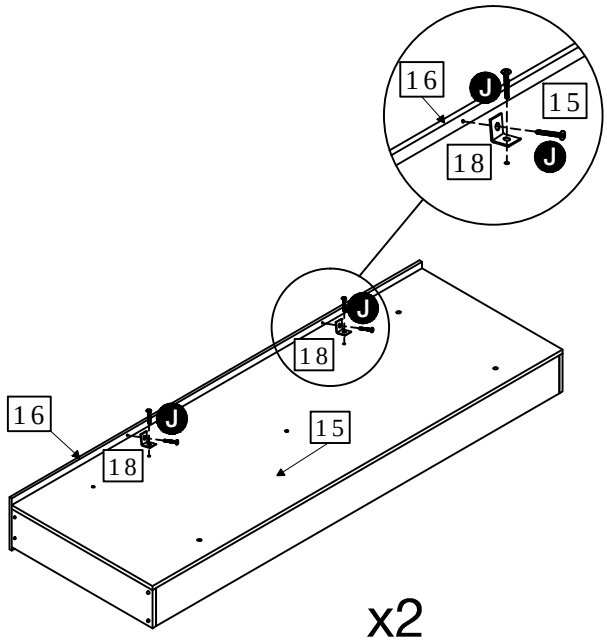


Step 11

Assembling castors

Screw castors [9] into drawer base panel [15] .

Tighten using spanner Ⓜ.

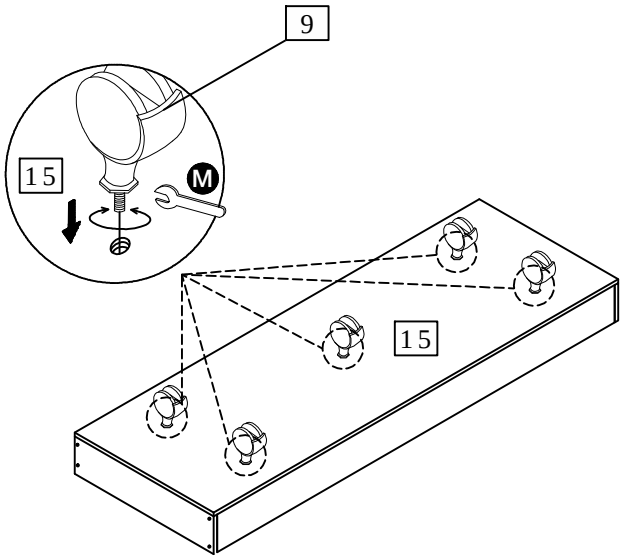


Repeat steps 9 to 11 to assemble both drawers.

Step 12

Locating drawers

Carefully turn the drawers over.

Push the drawers under the bed, ensuring they locate in between the drawer guides.

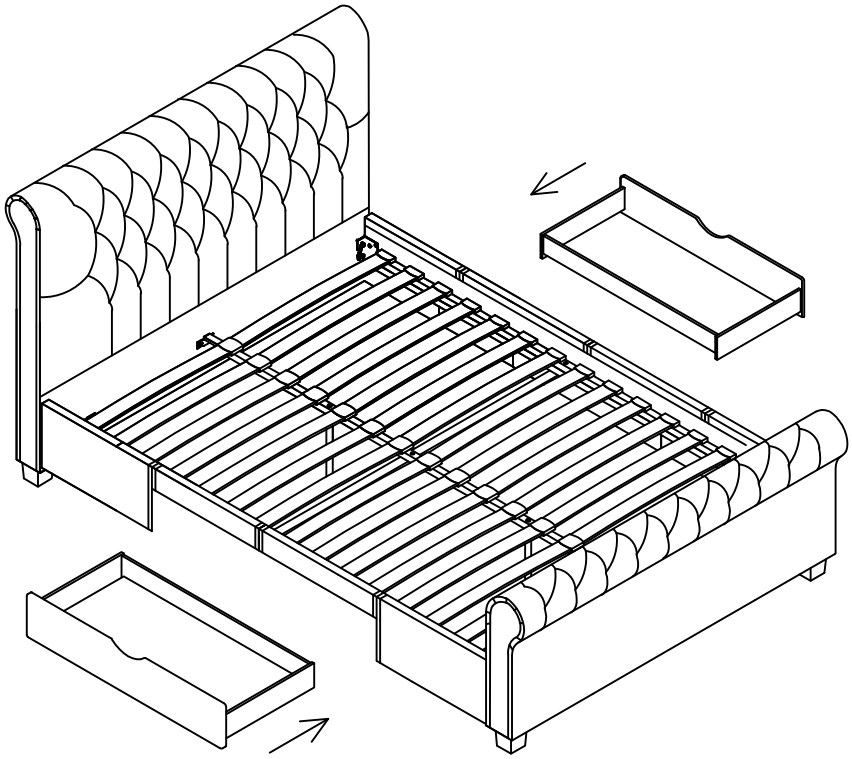

Assembly is complete.