silk - 4+3 chest of drawers

Assembly Instructions - Please keep for future reference | 257-2024



Dimensions

Width - 140cm
Depth - 40cm
Height - 85cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline:** 03456 400800

Issue 1 - 04/23/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position(in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power drill/drivers **for inserting screws**, as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline:** 03456 400800

Please check you have all the panels listed below




1 Top panel x1 (140 x 40cm)



2 Side panel-left x1
(74.3x31.8cm)

3 Left leg-front x1 (83.2x4cm)


4 Left leg-back x1 (83.2 x 4cm)



5 Side panel-right x1
(74.3x31.8cm)

6 Right Leg-front x1 (83.2x4cm)


7 Right Leg-back x 1 (83.2x4cm)




8 Mid panel x2 (24.8 x 35.3cm)



9 Runner bar x6 (29.4 x 1.9cm)



10 Rail x3 (126.6 x 5.5cm)



11 Rail x 2 (126.6 x 5.5cm)



12 Drawer front x 4
(62.85x33.9cm)



13 Drawer front x 3
(41.8 x22.9cm)



14 Drawer side-left x7
(33 x 14cm)



15 Drawer side-right x7
(33x14cm)




16 Drawer back x4 (58.35 x 14cm)



17 Drawer back x3
(37.3 x 14cm)



18 Drawer bottom panel x4
(59.5x32.6cm)

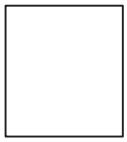

19 Drawer bottom panel x3
(38.4x32.6cm)




20 Back panel x2
(75.3 x 43.2cm)



21 Back panel x 1
(75.3 x 42cm)

22 "H" rail x 2 (45x1.6cm)

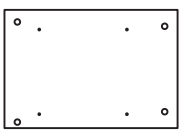

23 Mid panel x1 (45.8x35.3cm)















24 Mid foot x1 (11.2x3.8cm)

Components - Fittings

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

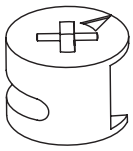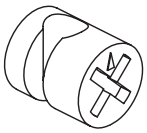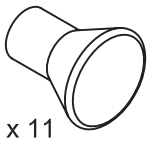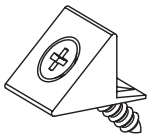A  Metal dowel x 38 (Ø5x34mm)	B  CAM lock x 38 (Ø15x11mm)	C  Wooden dowel x 66 (Ø5x30mm)	D  Metal dowel x 28 (Ø5x16.5mm)
E  CAM lock x 28 (Ø10x11mm)	F  Drawer runner x 14 (310x17mm)	G  Screw x 16 (Ø5.8x8mm)	H  Bolt x 14 (M4x8mm)
I  Bolt x 11 (M4x20mm)	J  Handle x 11 (Ø22x23.5mm)	K  Screw x 28 (Ø3.5x35mm)	L  Clamp x 14
M  Nail x 50	N  Screw x 12 (Ø5.8x19mm)	O  Screw x 1 (Ø4.0x90mm)	P  Wall Strap x 1 (200x10mm)
Q  Screw x1(Ø4x12mm)			

Tools required



Phillips screwdriver (medium & large)


Small hammer


Flatblade screwdriver (medium)


Ruler/tape measure


Ruler - Use this ruler to help correctly identify the screws





Assembly Instructions

Step 1

Screw Metal dowels (A) into Top panel [1].

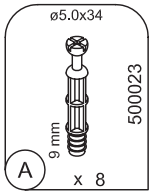

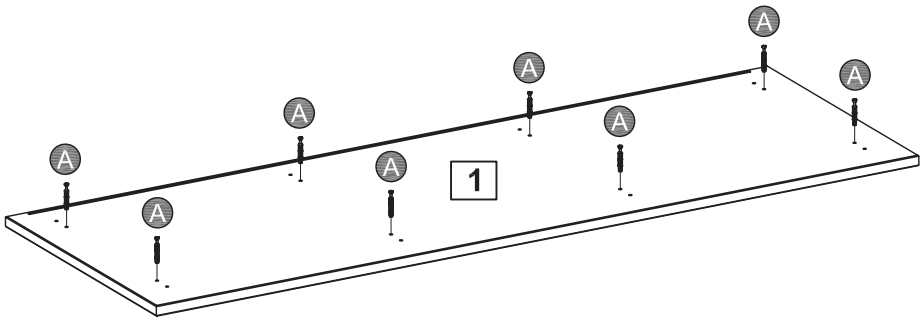


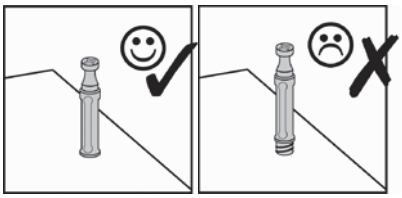


Step 2

Screw Metal dowels (A) into Leg [3] [4].

Insert Wooden dowels (C) into side panel [2].

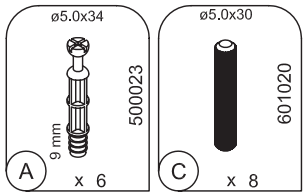


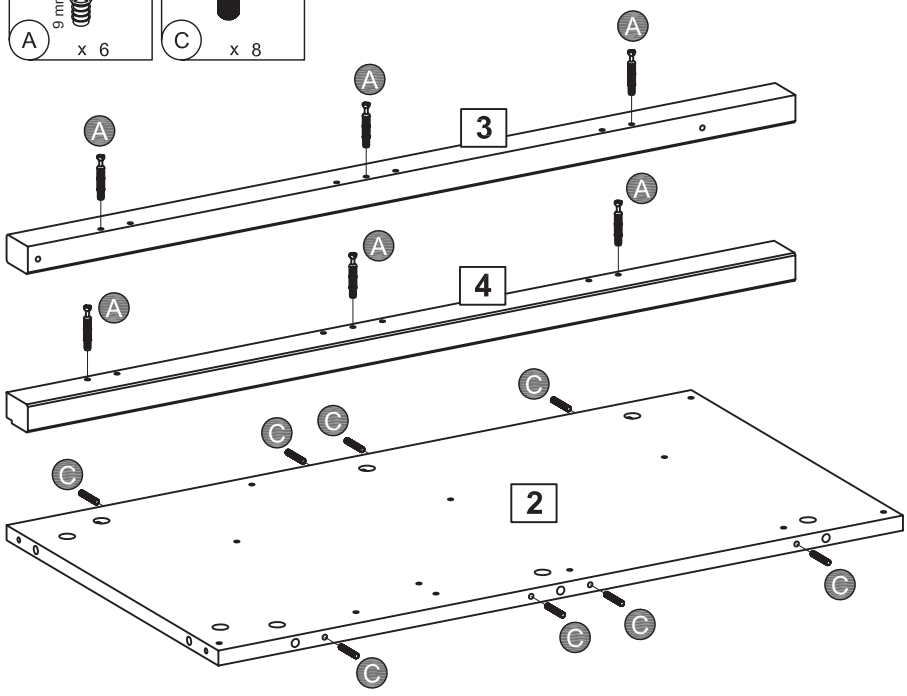

Assembly Instructions

Step 3

Attach Leg 3 4 onto Left side 2 fix with Cam lock B.

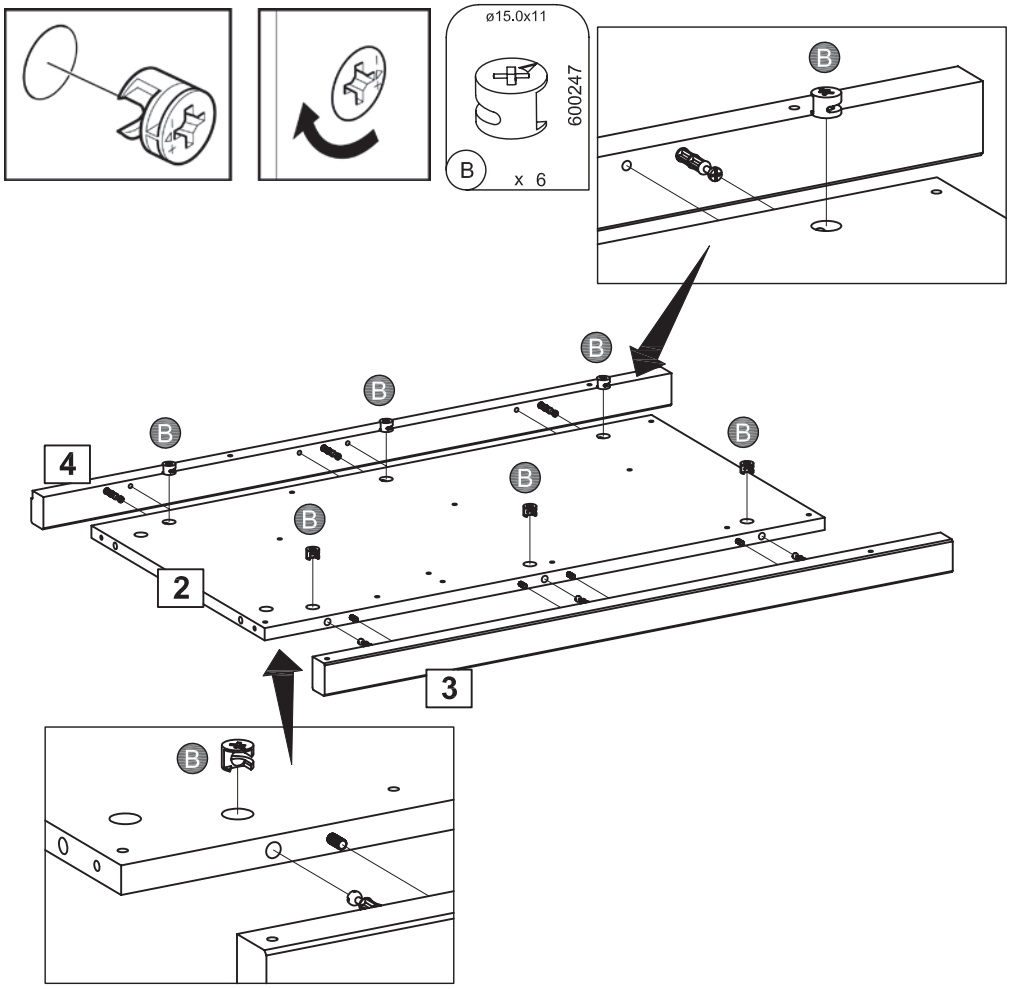


Step 4

Insert Wooden dowels C into Left side 2.

Screw Metal dowels A into Left side 2.

Fix Drawer runner F onto Left side 2 with Screw N as shown.

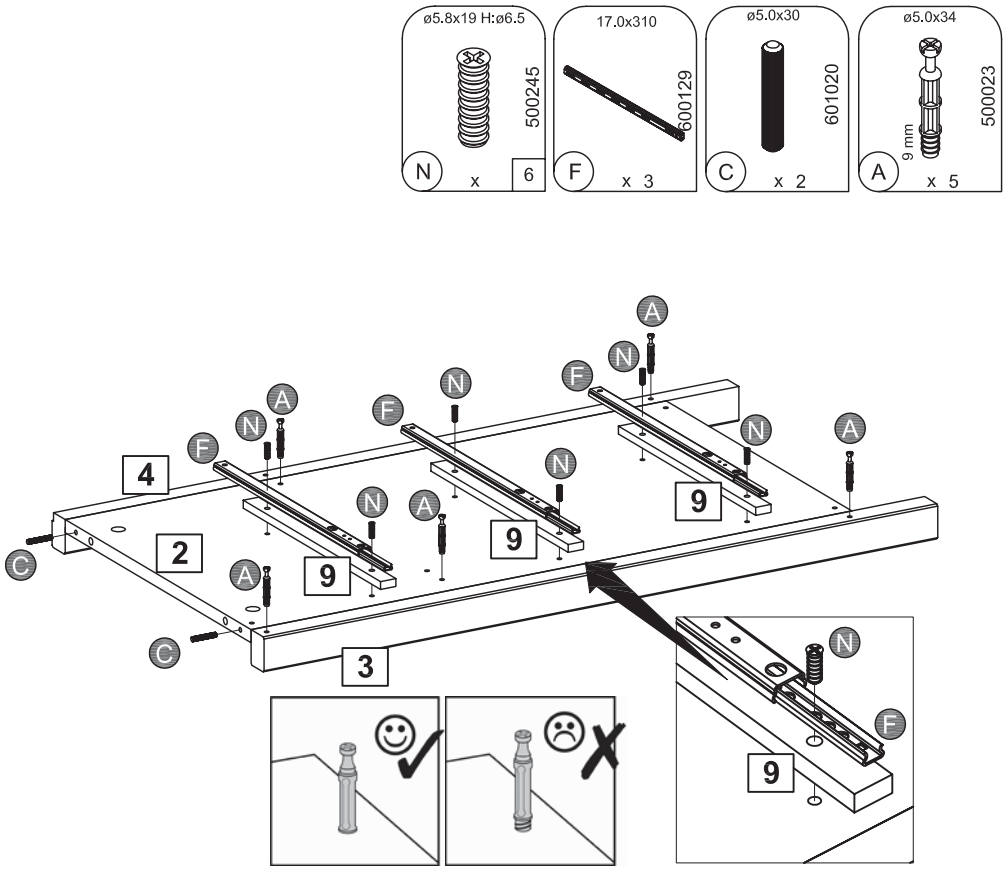


Assembly Instructions

Step 5


Screw Metal dowels (A) into Leg [6] [7].

Insert Wooden dowels (C) into side panel [5].

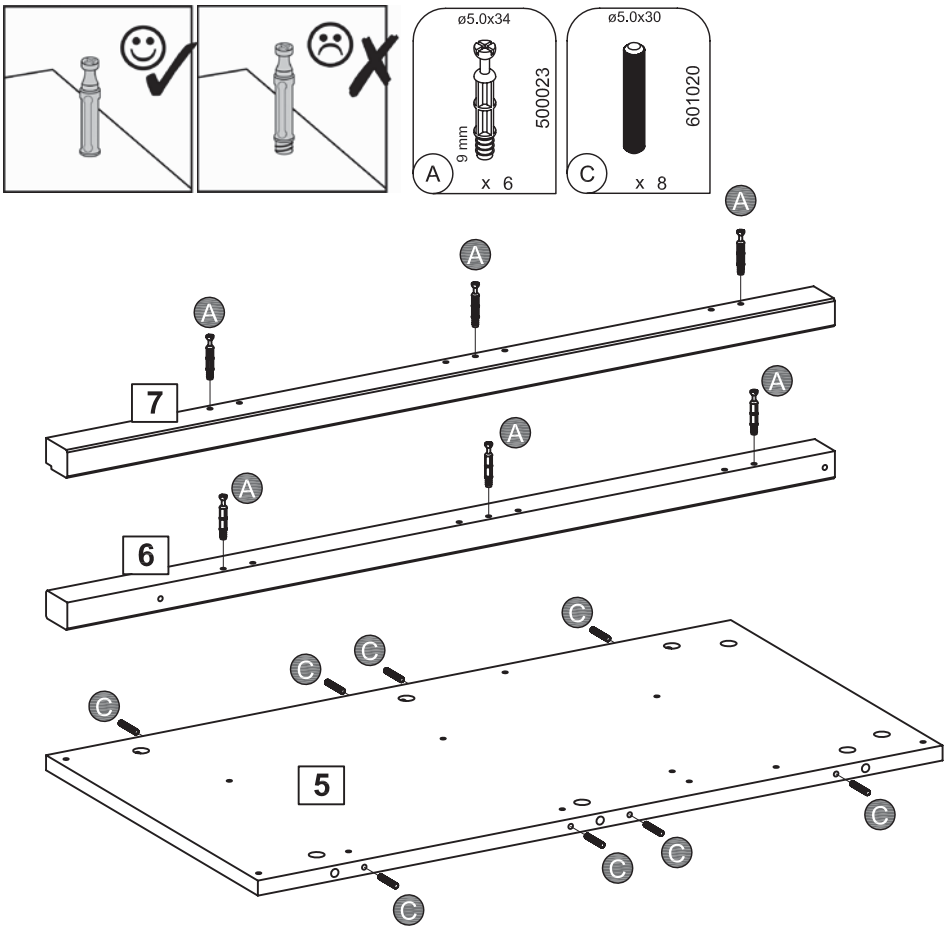

Step 6

Attach Leg [6] [7] onto Right side [5] fix with Cam lock (B).

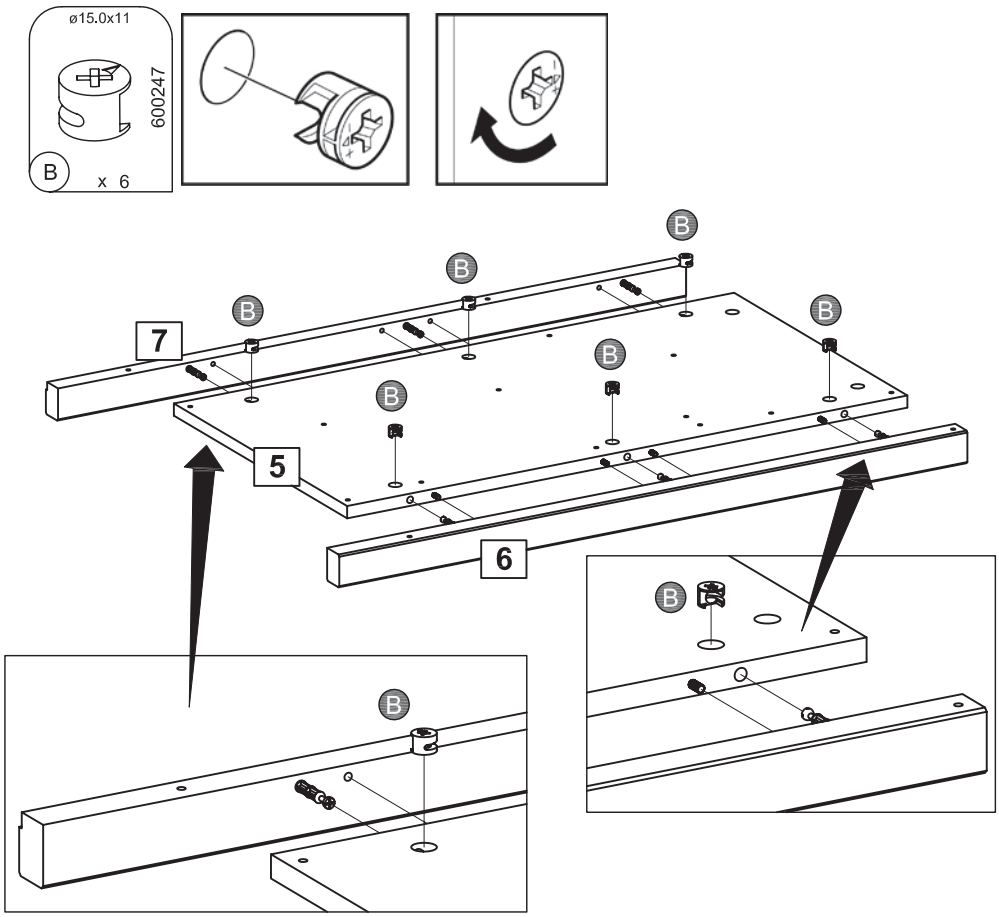


Assembly Instructions


Step 7

Insert Wooden dowels C into Right side 5 .

Screw Metal dowels A into Right side 5 .

Fix Drawer runner F onto Right side 5 with Screw N as shown.

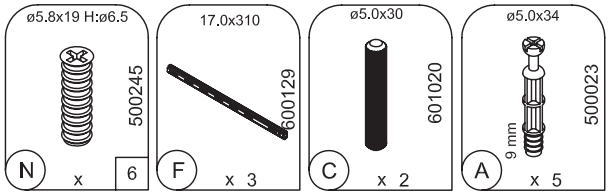


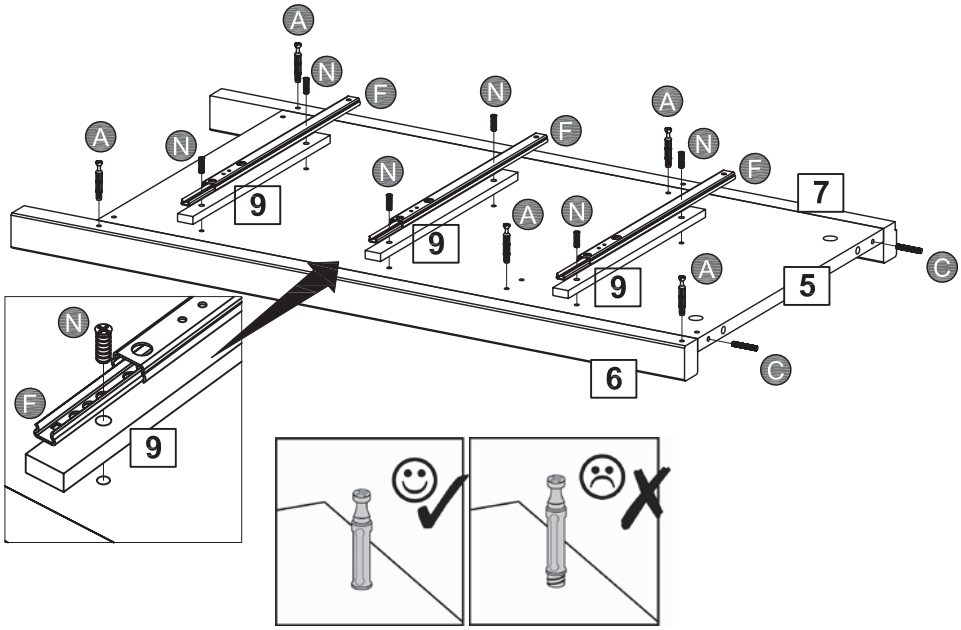


Step 8

Insert Wooden dowels C into Mid panel 8 .

Fix Drawer runner F onto Mid side 8 with Screw G .

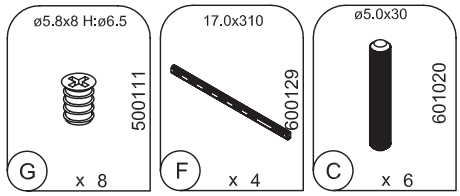

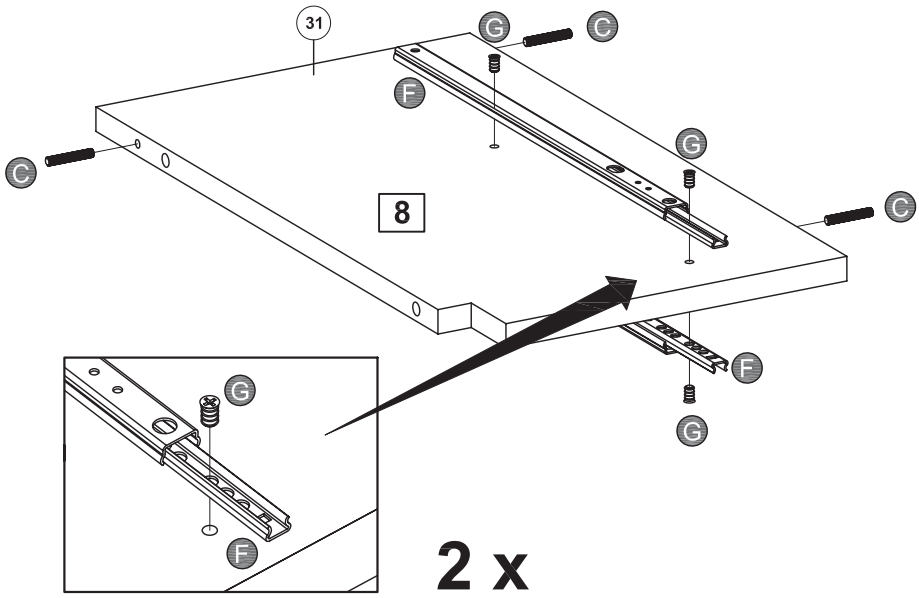



Assembly Instructions

Step 9

Insert Wooden dowels C into Mid panel 23.

Fix Drawer runner F onto Mid side 23 with Screw G .

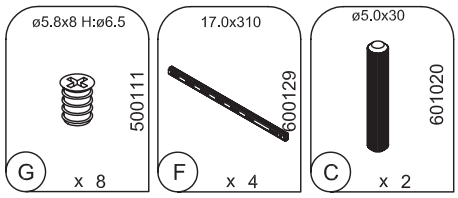


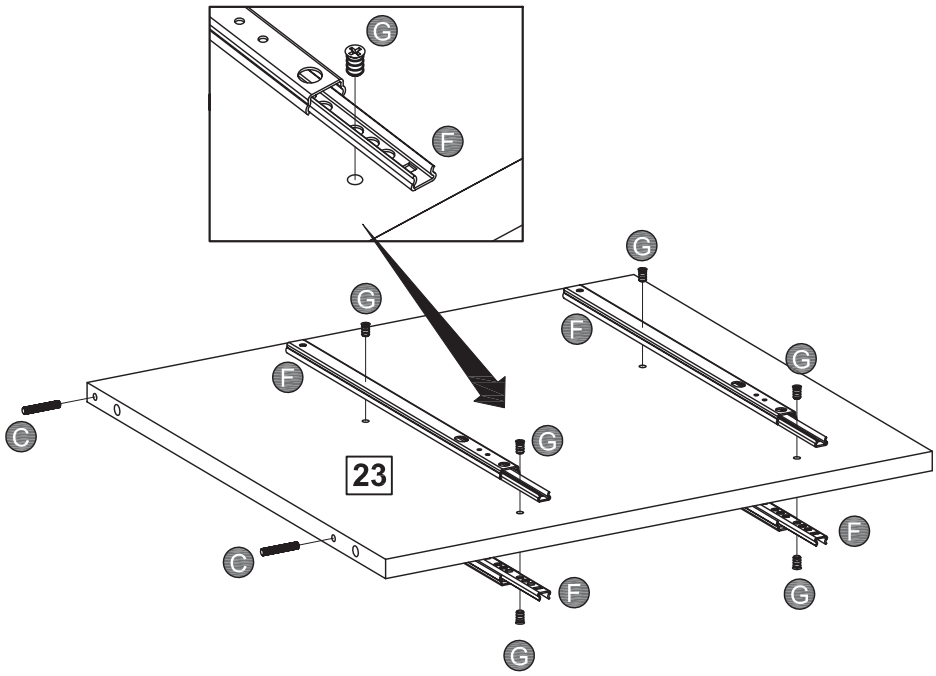



Step 10

Insert Wooden dowels C into Rail 10.

Screw Metal dowels A into Rail 10.

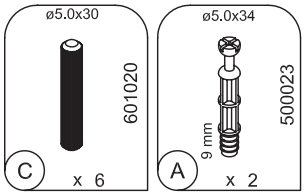

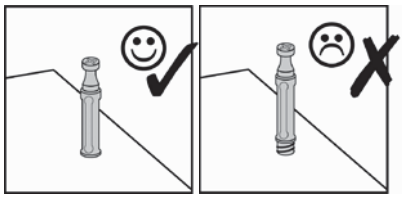

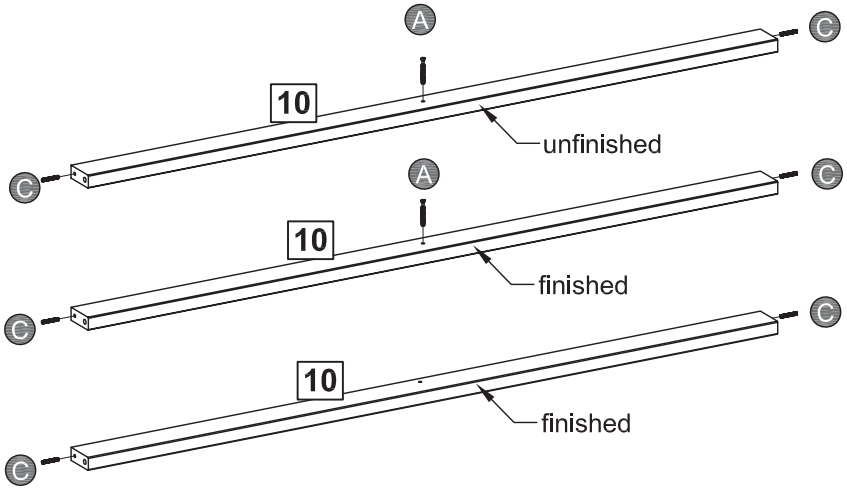



Assembly Instructions


Step 11

Insert Wooden dowels C into Rail 11.

Screw Metal dowels A into Rail 11.

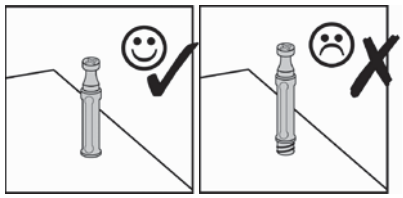


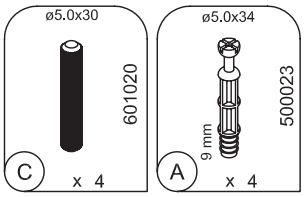


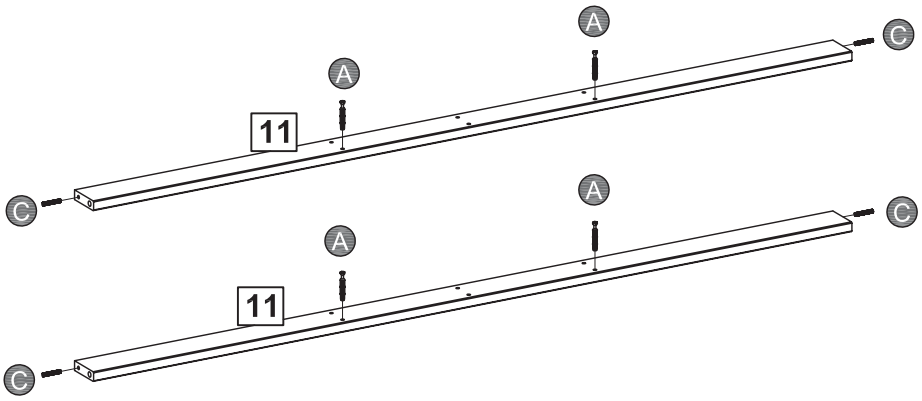


Step 12

Attach Mid panel onto Rail 11, Fix them with Cam lock B as shown.

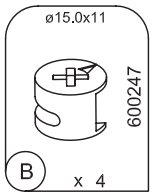

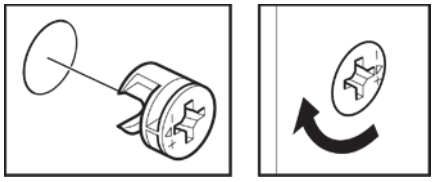


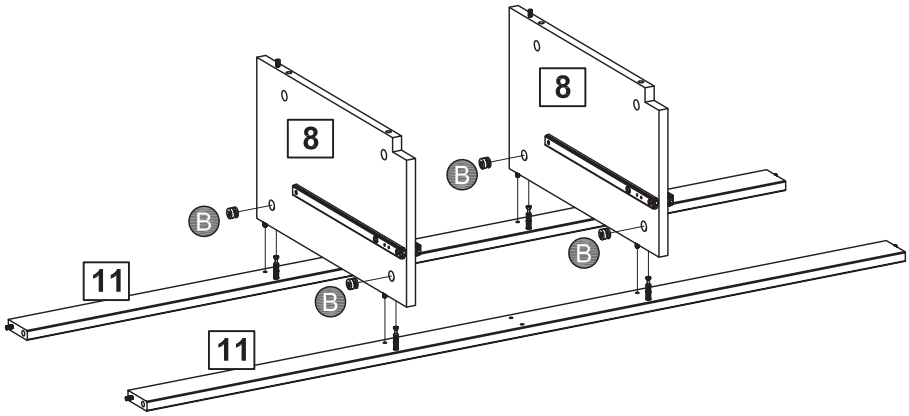



Assembly Instructions

Step 13

Screw Metal dowels (A) into Rail 11.

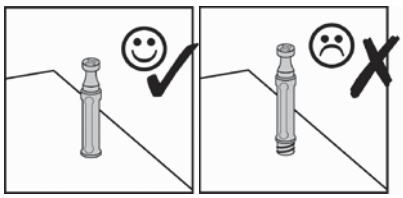


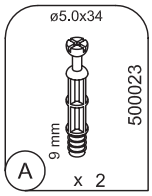


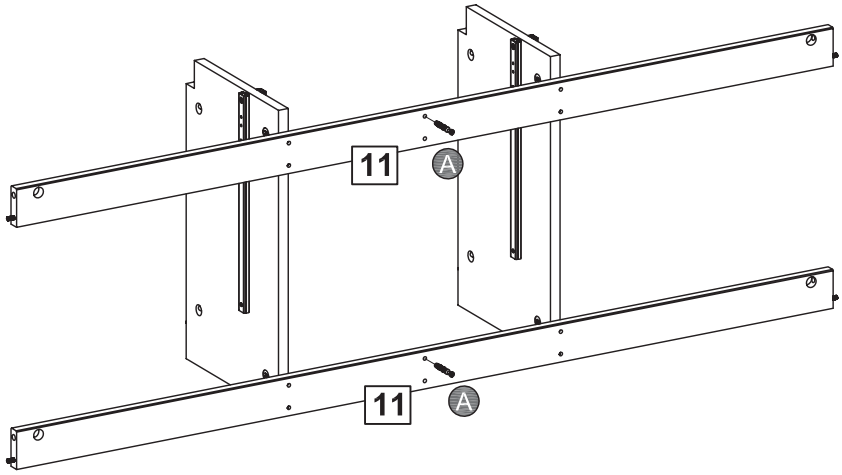


Step 14

Attach Mid panel 23 onto Rail 11, Fix them with Cam lock (B) as shown.

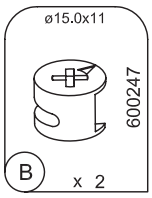

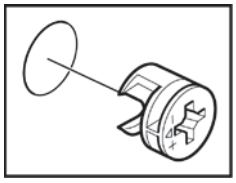




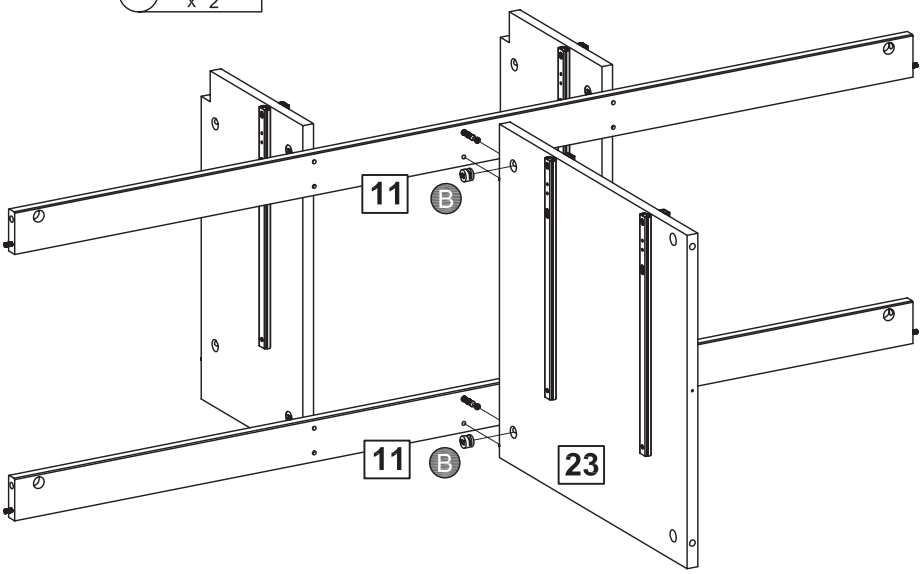

Assembly Instructions


Step 15

Attach Rail 10 onto Mid panel 23, Fix them with Cam lock B as shown.

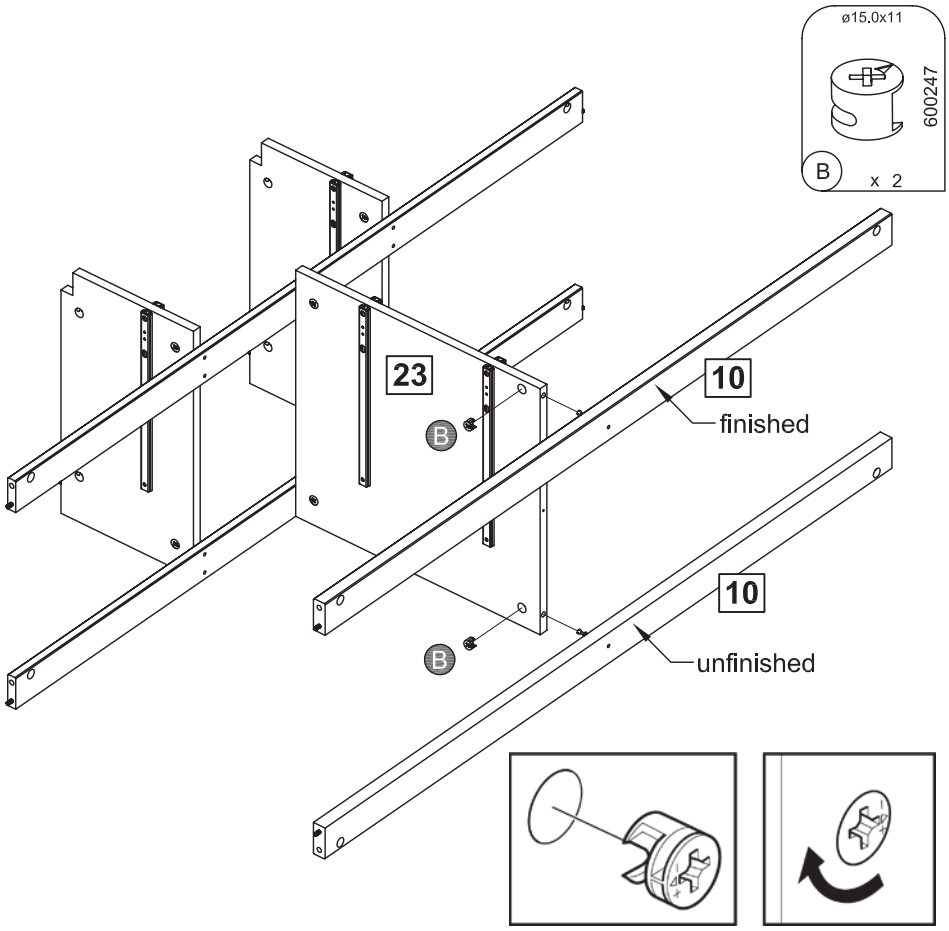

Step 16


Attach Right side onto Rail 11 10, Fix them with Cam lock B as shown.

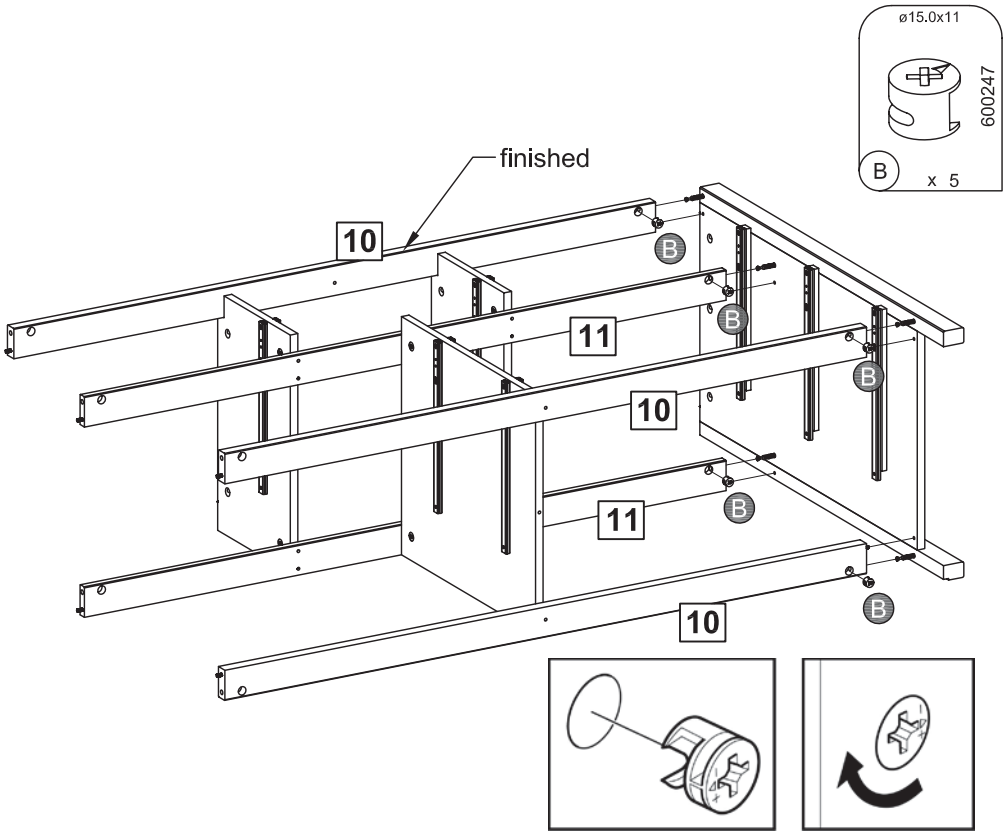



Assembly Instructions


Step 17

Attach Left side onto Rail 11 10, Fix them with Cam lock B as shown.

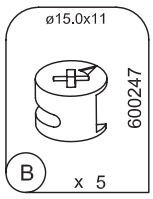

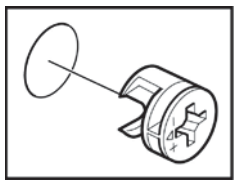


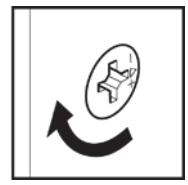


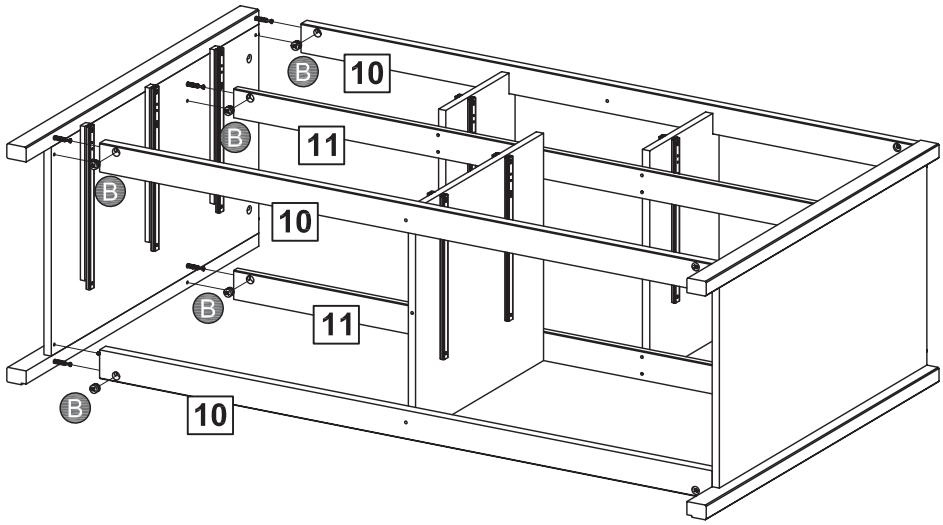

Step 18

Fix the Mid foot 24 onto Mid panel 23 with screw O as shown.

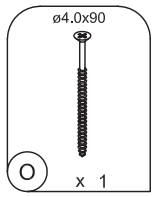


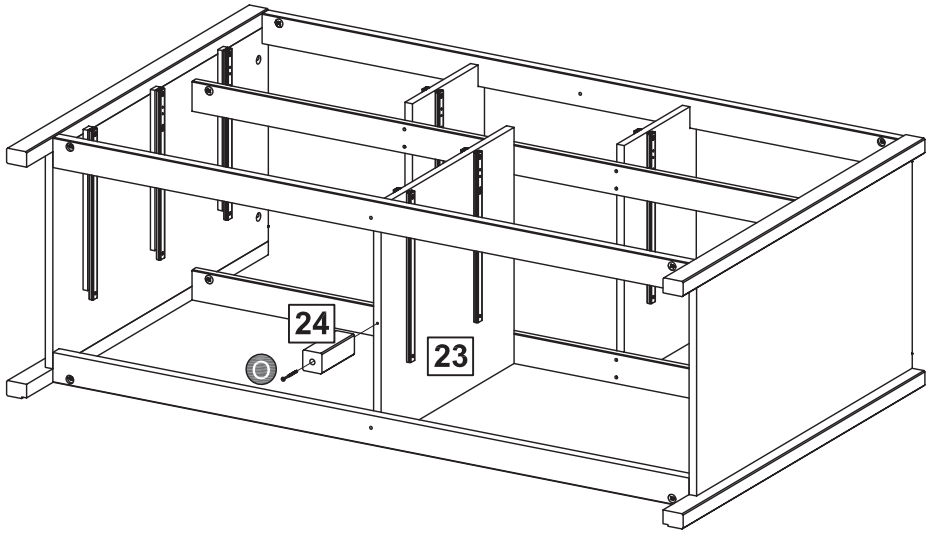

Assembly Instructions


Step 19

Attach Top panel 1 onto Right side 5 .Left side 2 and Mid panel 8 with Cam lock B .

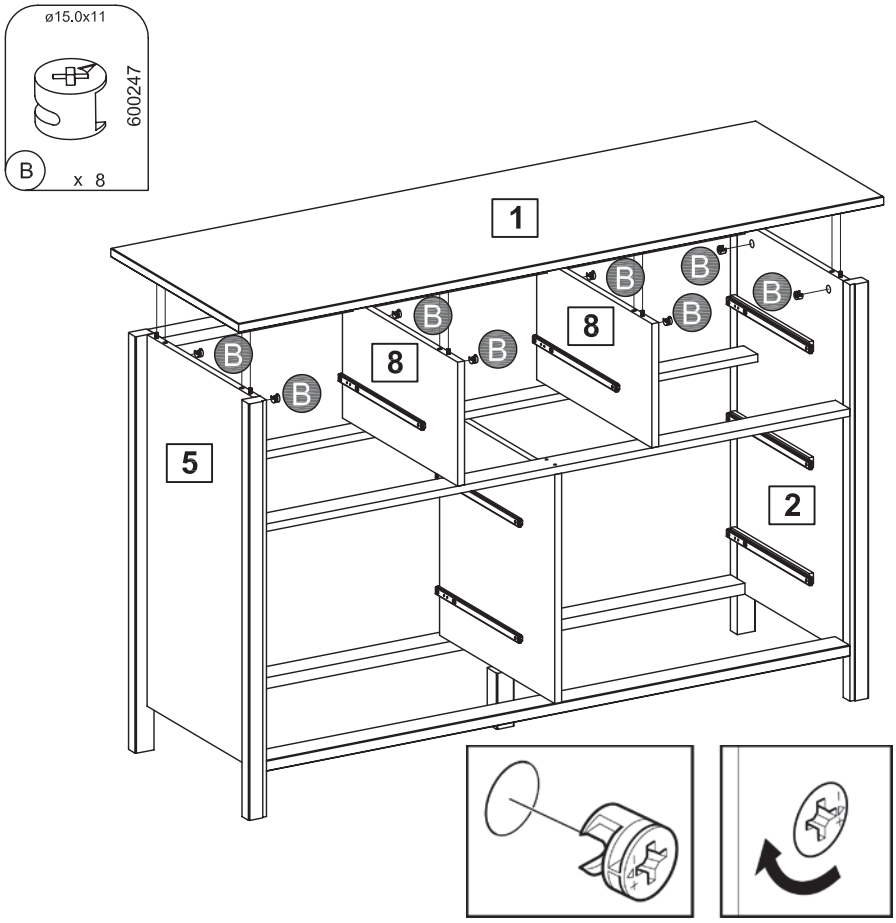

Step 20


Put the Back panel 20 21 and "H"rail 22 on the back of chest, nailed back panel 20 21 on the back of the chest with nail M .

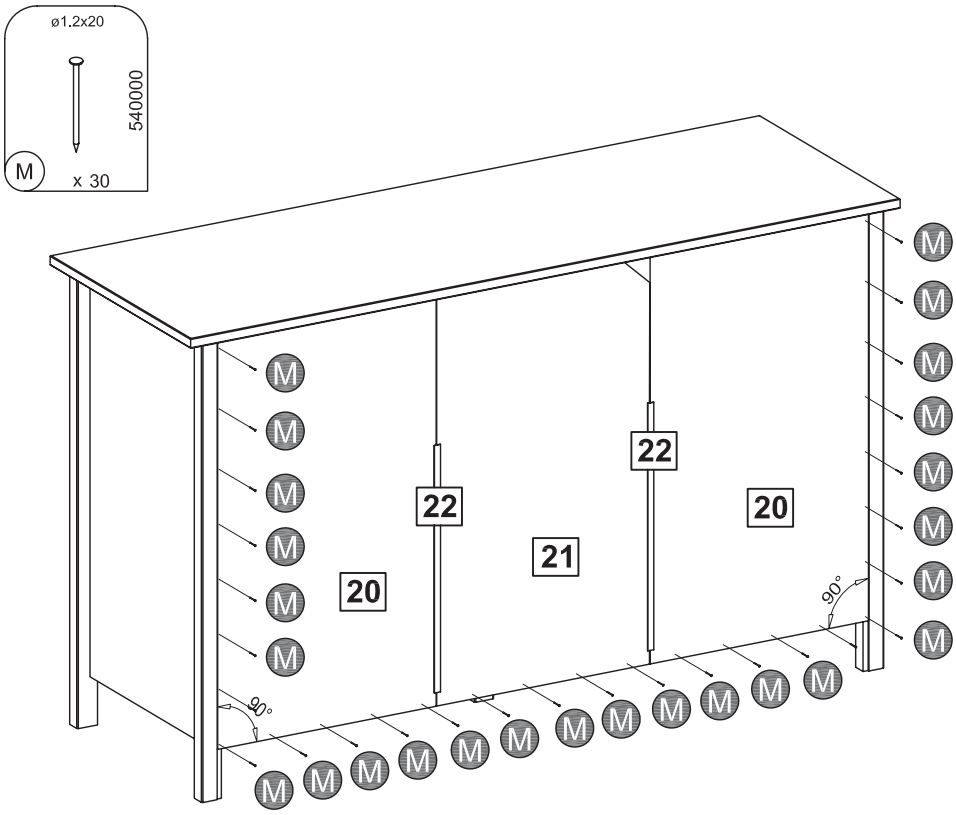



Assembly Instructions

Step 21

Screw Metal dowels (D) into Drawer front panel 12 13.

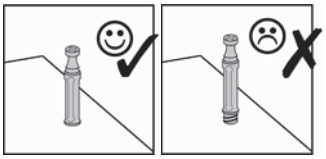


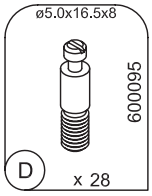


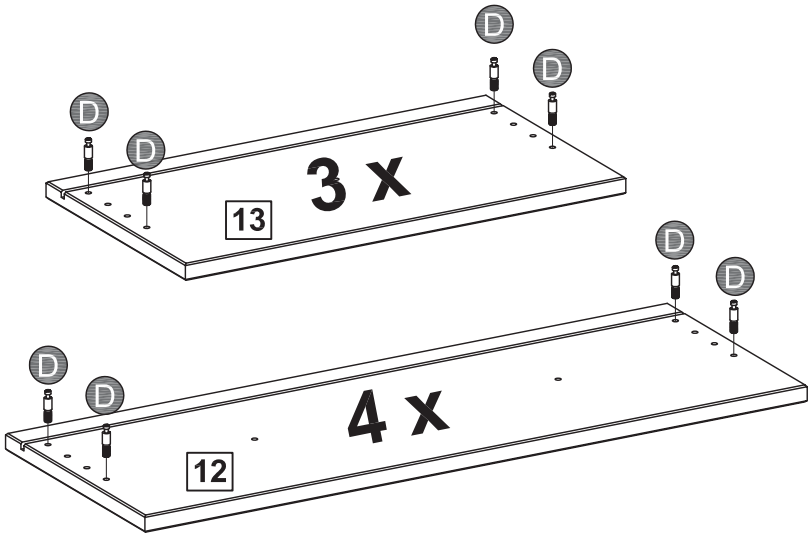

Step 22

Insert Wooden dowels (C) into Drawer side panel 14 15.

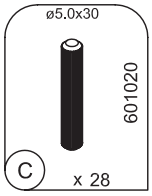

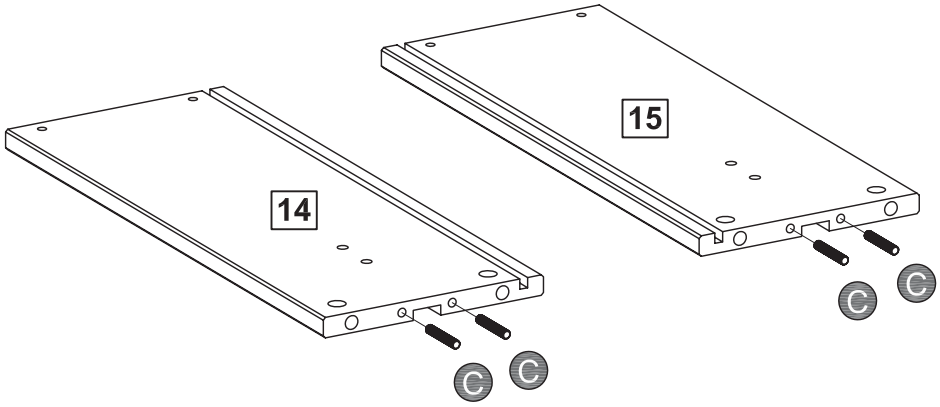



7 x

Assembly Instructions

Step 23

Attach Drawer back panel 17 and drawer side panel 14 15 with Screw K.

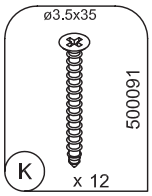


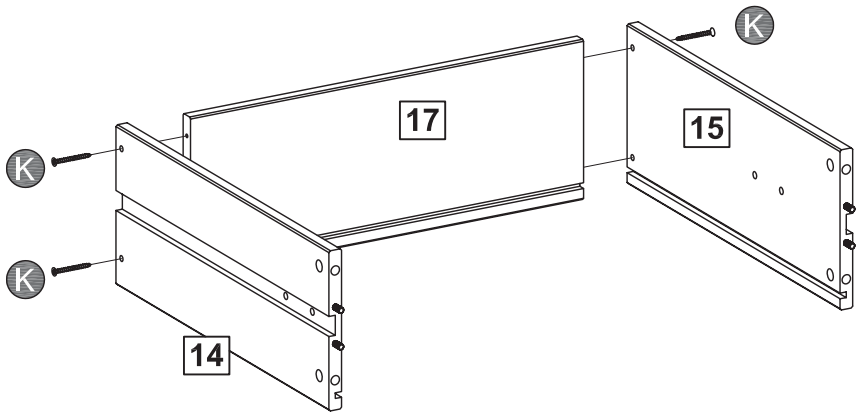

3 x

Step 24

Insert Drawer bottom panel 19 into groove of drawer side panel 14 15 and drawer back panel 17

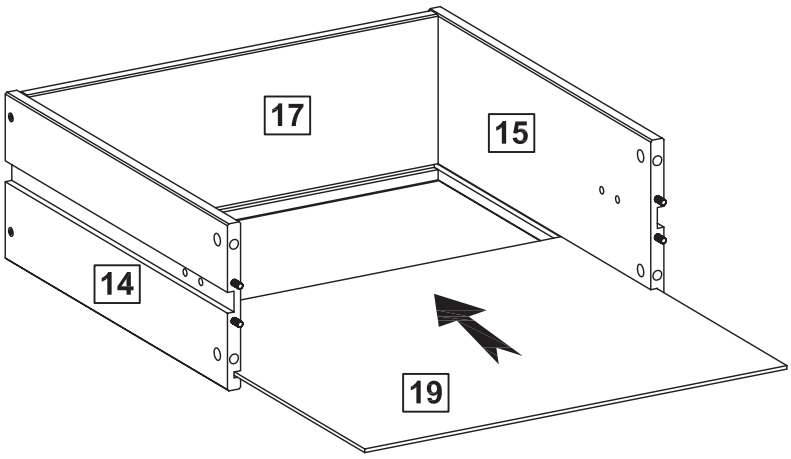



3 x

Assembly Instructions

Step 25

Insert Cam lock (E) into drawer side panel 14 15.

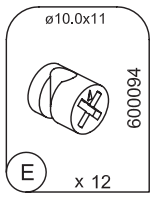


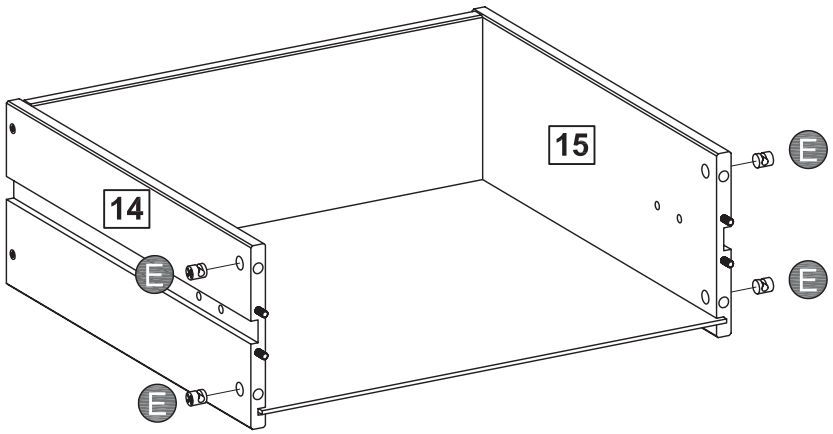

3 x

Step 26

Attach drawer front panel 13 onto drawer side panel 14 15 with CAM lock (E) as shown.

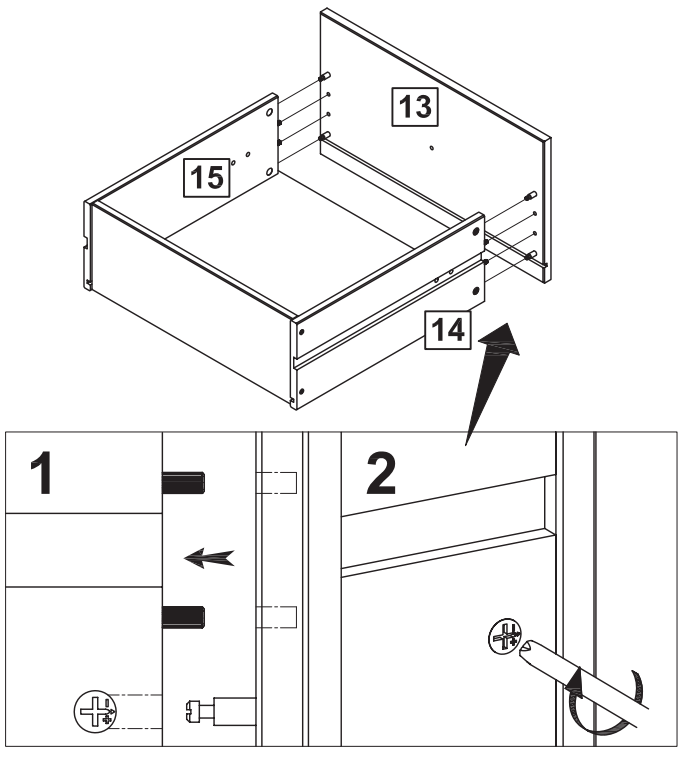



3 x

Assembly Instructions

Step 27

Attach Handle J on the drawer front panel 13 with Bolt I.

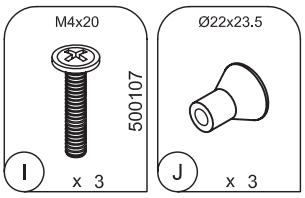


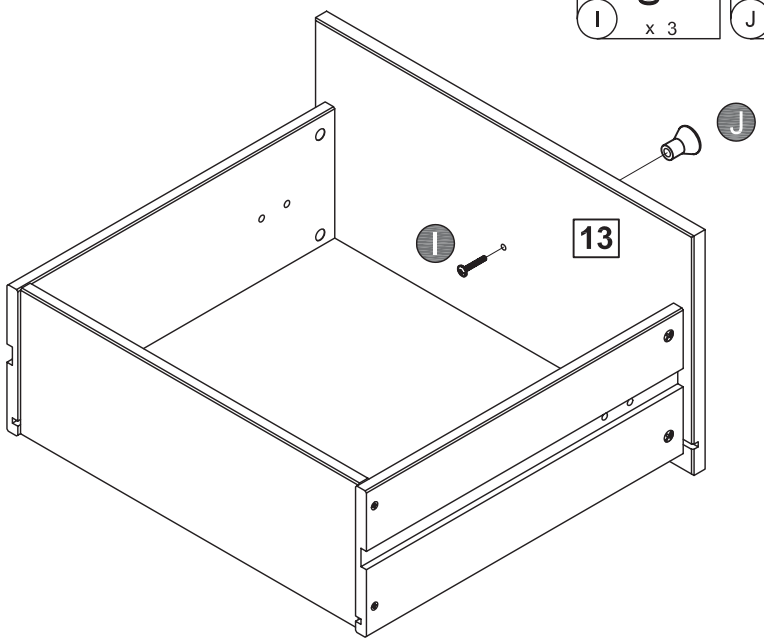



3 x

Step 28

Fix Clamp L onto drawer bottom panel 19 as shown.

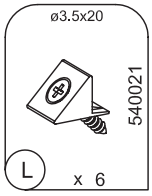

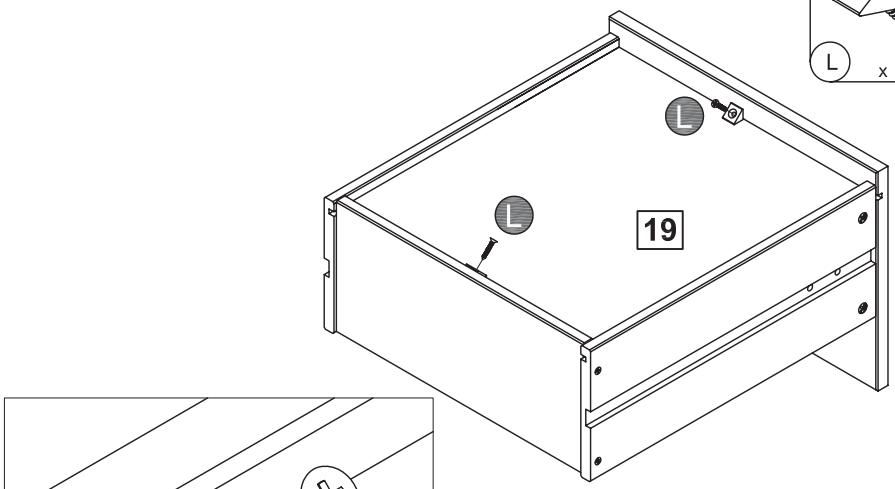

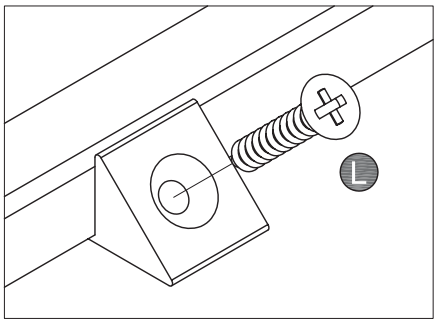



3 x

Assembly Instructions

Step 29

Attach Drawer back panel 16 and drawer side panel 14 15 with Screw K.

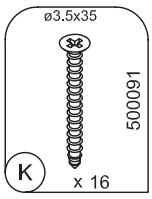


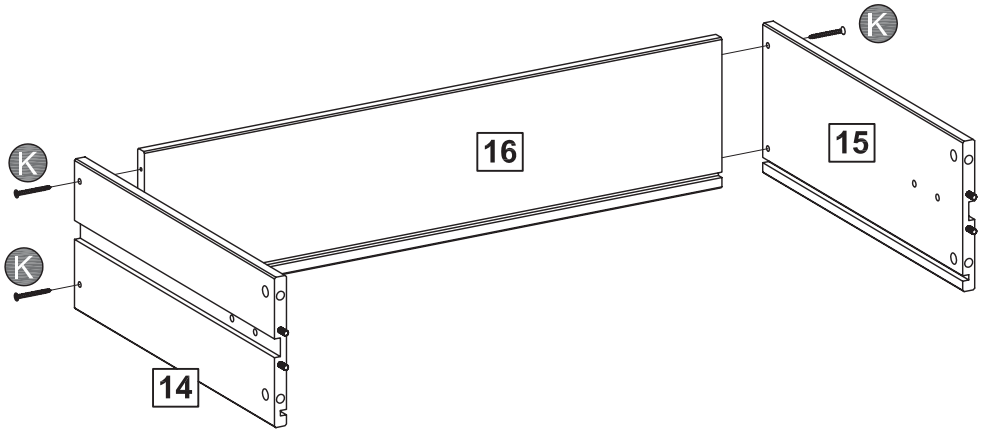

4 x

Step 30

Insert Drawer bottom panel 18 into groove of drawer side panel 14 15 and drawer back panel 16

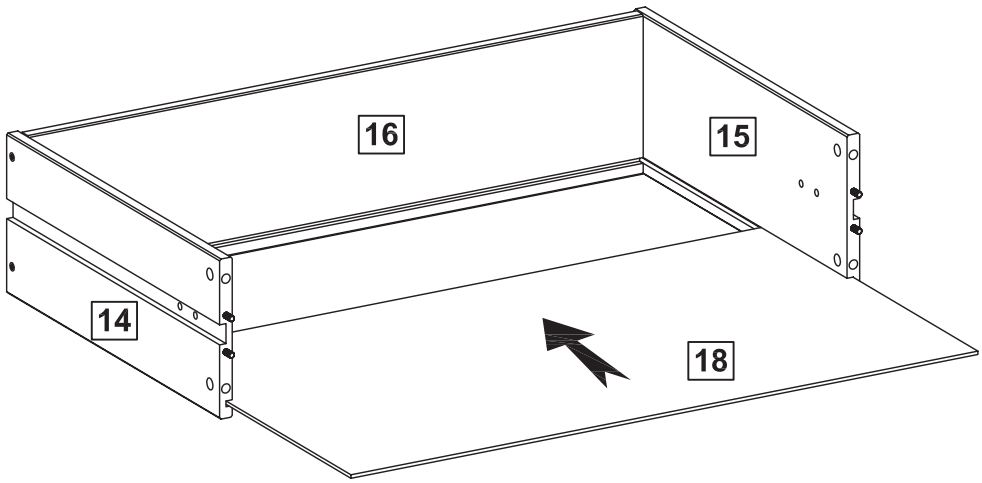



4 x

Assembly Instructions

Step 31

Insert Cam lock (E) into drawer side panel 14 15.

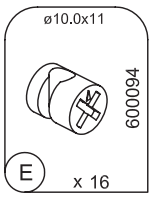


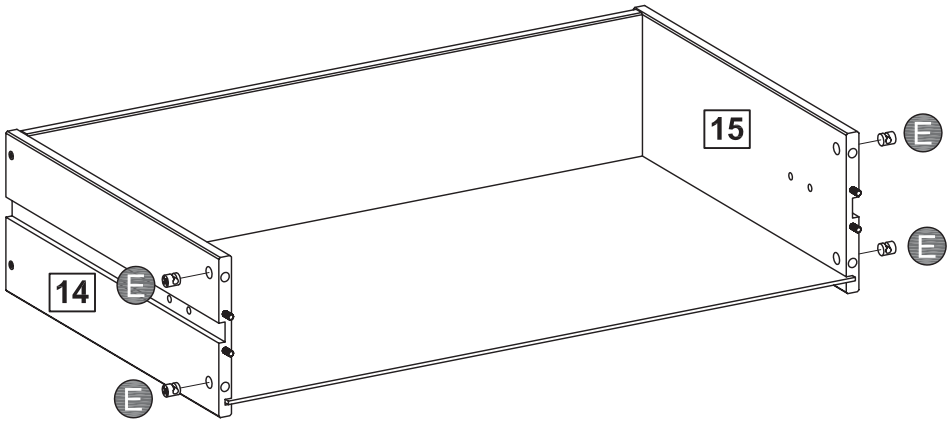


4 x

Step 32

Attach drawer front panel 12 onto drawer side panel 14 15 with CAM lock (E) as shown.

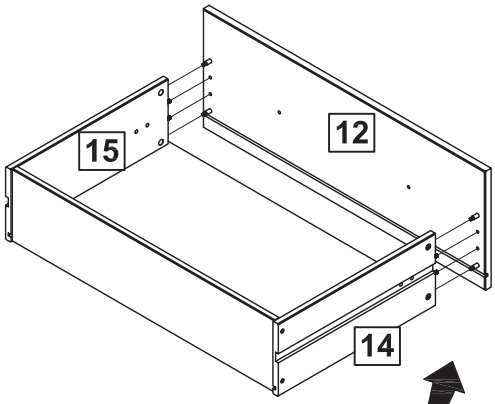

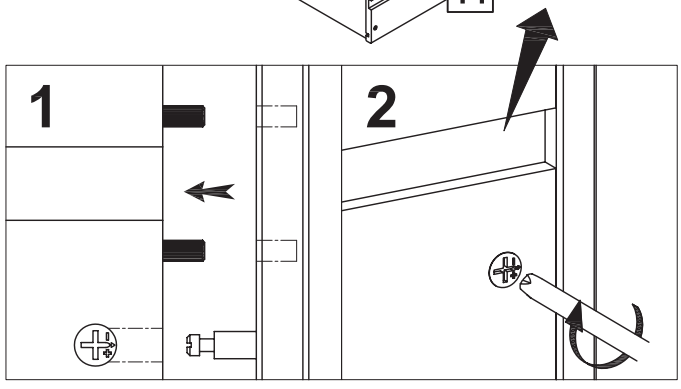



4 x

Assembly Instructions

Step 33

Attach Handle J on the drawer front panel 12 with Bolt I.

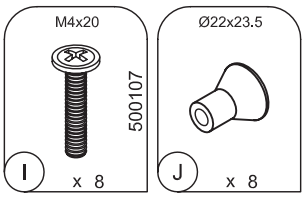


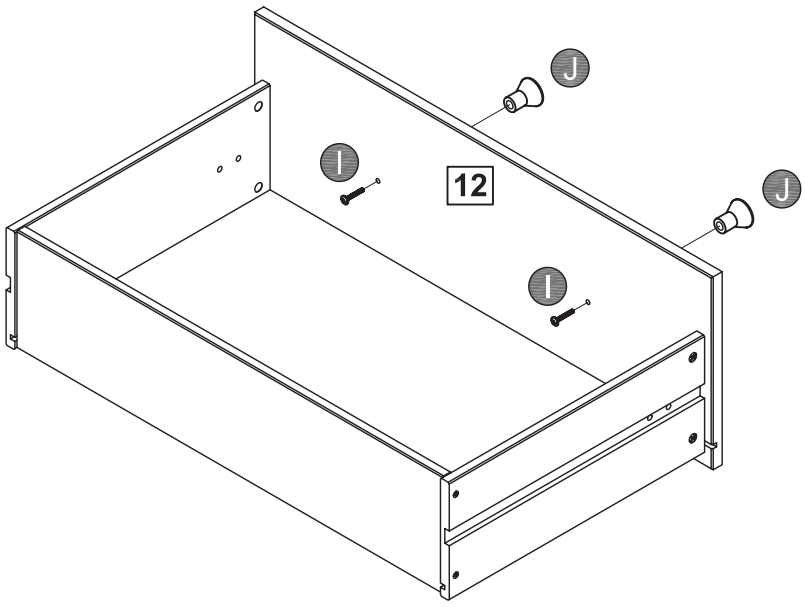


4 x

Step 34

Fix Clamp L onto drawer bottom panel 18 as shown.

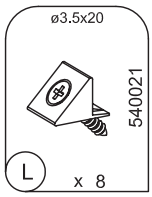


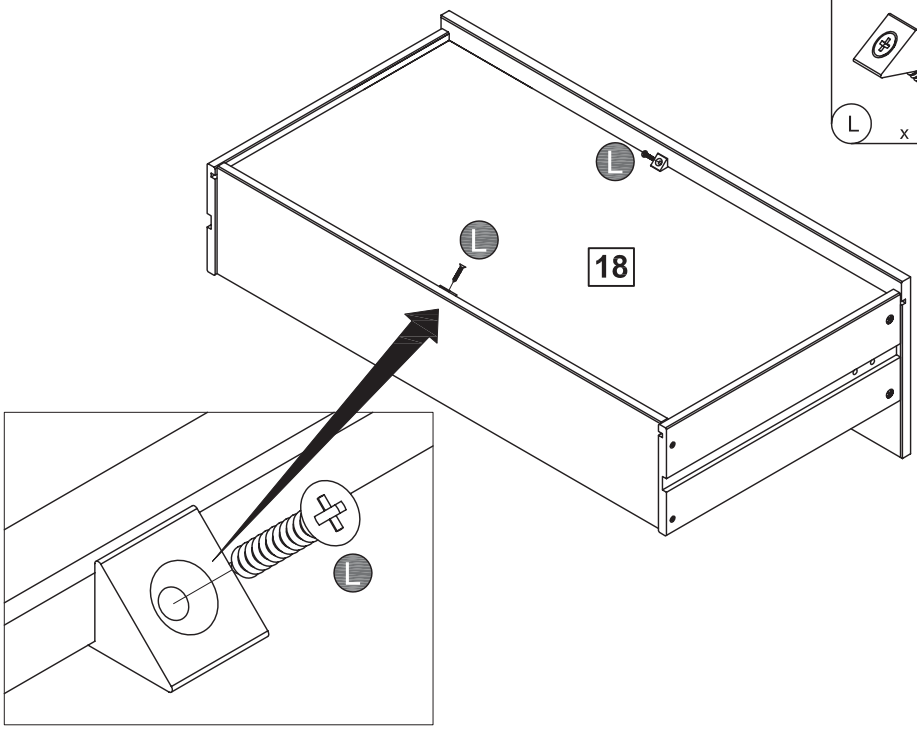

4 x

A Guide to

Wall Mounting & Fixings

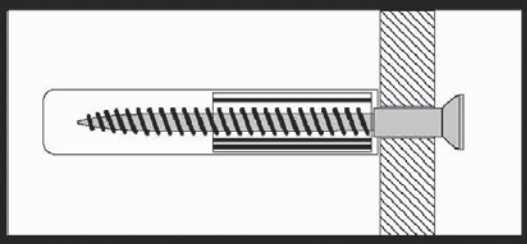

IMPORTANT:
When drilling into walls always check that there are no hidden wires or pipes etc. Make sure that the screws and wall plugs being used are suitable for supporting your unit. Consult a qualified tradesperson if you are unsure.


HINTS:

1) General Rule ⚠ Always use a larger screw and wall plug if you are not sure.
2) Ensure you use the recommended drill bit to match the wall plug and hole size.
3) Ensure you drill the hole horizontally, do not force the drill or enlarge the hole.
4) Take extra care when drilling high walls, ceilings and ceramic tiles. Ensure the plug is fitting below the ceramic tile to avoid splitting or cracking.
5) Ensure wall plugs are well fitted and are a tight fit in the drilled hole.

Types Of Walls


You can use one of the following types of wall plug if your walls are made of brick, breeze block, concrete, stone, wood or plaster board.

No.1 "Standard" Wall Plug
General Wall Materials

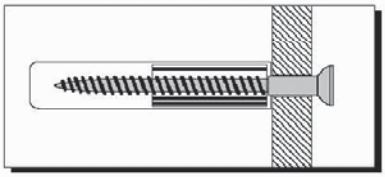


These come in various sizes and are made from plastic or sometimes wood fiber.

No.2 "General Purpose" Wall Plug
Aerated / Breeze Block

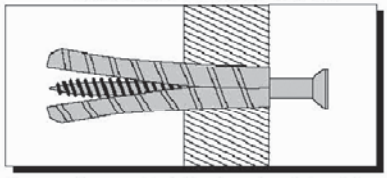


Generally aerated blocks should not be used to support heavy loads, use a specialist fitting in this case.
For light loads, a General Purpose Plug can be used.

No.3 "Shield Anchor" Wall Plug
Heavy Loads

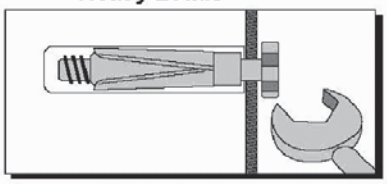


For use with heavier loads such as TV & HiFi Speakers and Satellite Dishes etc.

No.4 "Cavity Fixing" Wall Plug

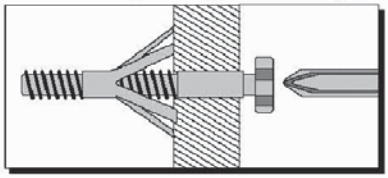


For use with plaster board partitions or hollow wooden doors.

No.5 "Cavity Fixing - Heavy Duty" Wall Plug

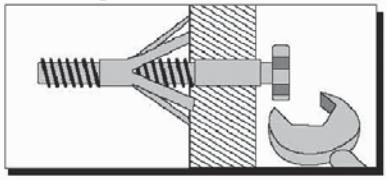

For use when fitting or supporting heavy loads such as shelving, wall cabinets, coat racks.

No.6 "Hammer Fixing" Wall Plug

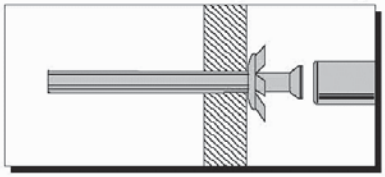

For use with walls stuck with plaster board. The hammer fixing allows it to be fixed to the wall rather than the plaster board. Always check the fixing is secure to the retaining wall.

CARE & MAINTENANCE

⚠ **SAFETY**
Always check the fitting and location to ensure your safety in and around the home.


⚠ **FITTING**
From time to time check the fitting to ensure the wall plugs or screws do not become loose.


Assembly Instructions

Step 35

Furniture must be fixed to a wall.Fix wall strap (P) to top of furniture using screw (Q) . with help, move furniture into position.

Note: wall plugs not supplied. The correct type of fixing must be used for your wall ,seek professional advice if in doubt.

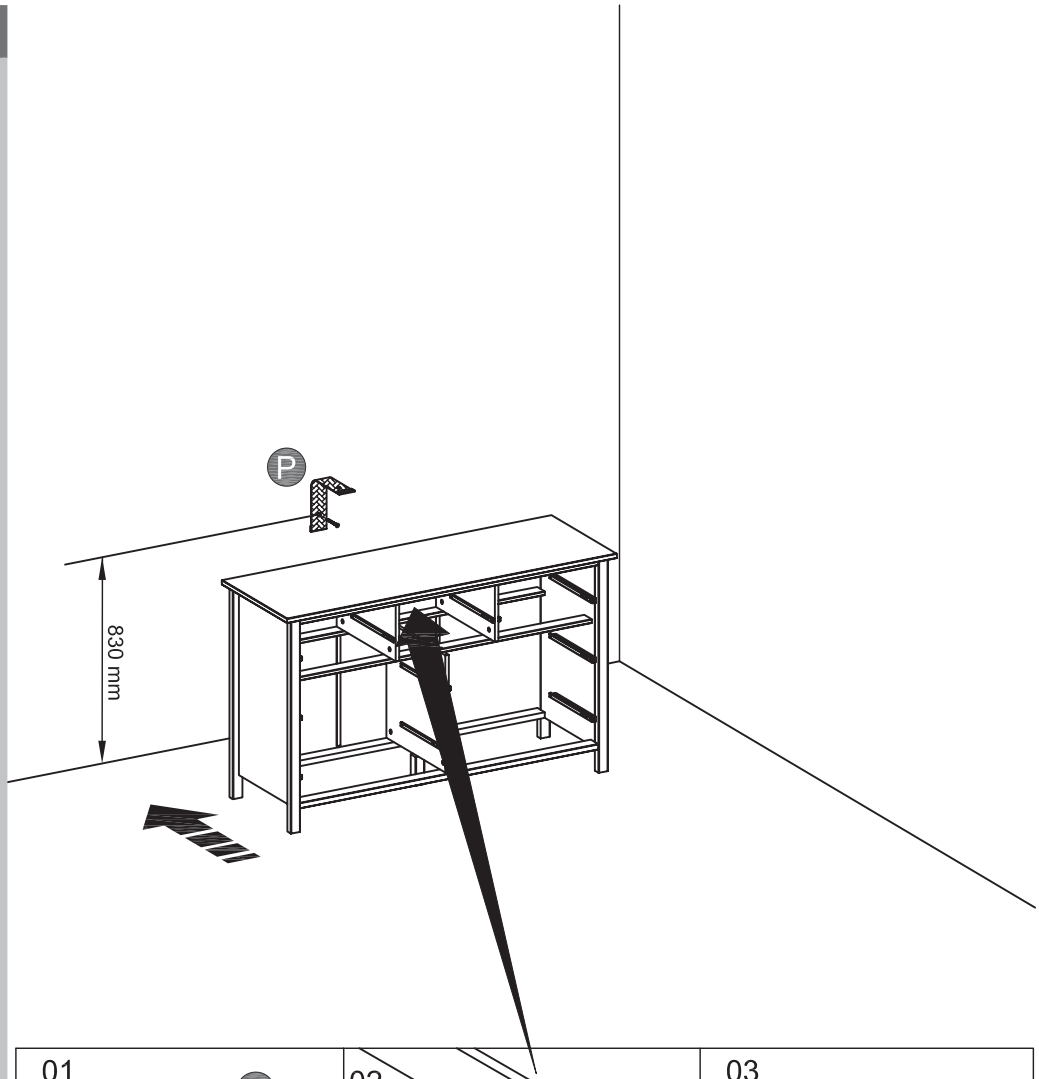


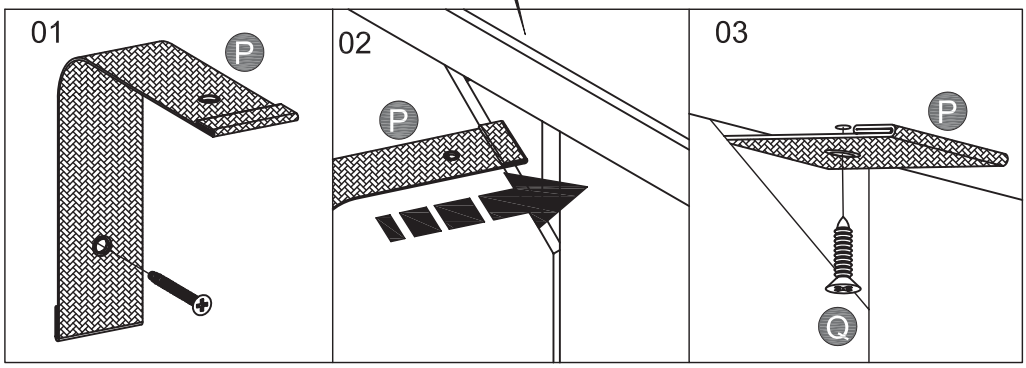

Assembly Instructions

Step 36


Place the drawer on the runners as shown.

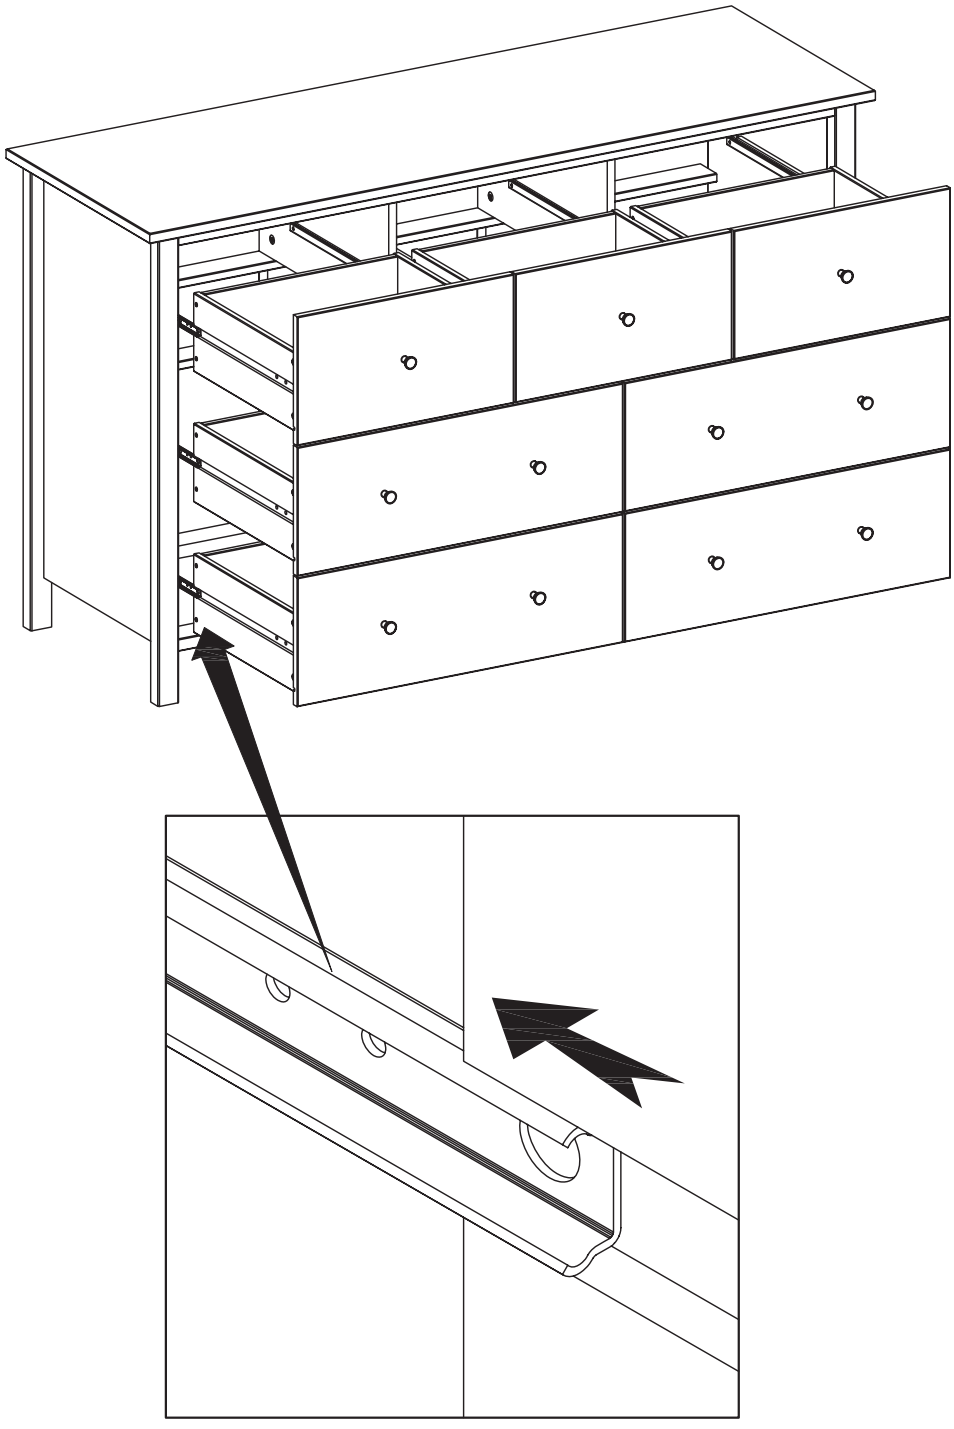

Assembly Instructions

Step 37

Fix drawer onto drawer runner (F) with bolts (H) as shown.

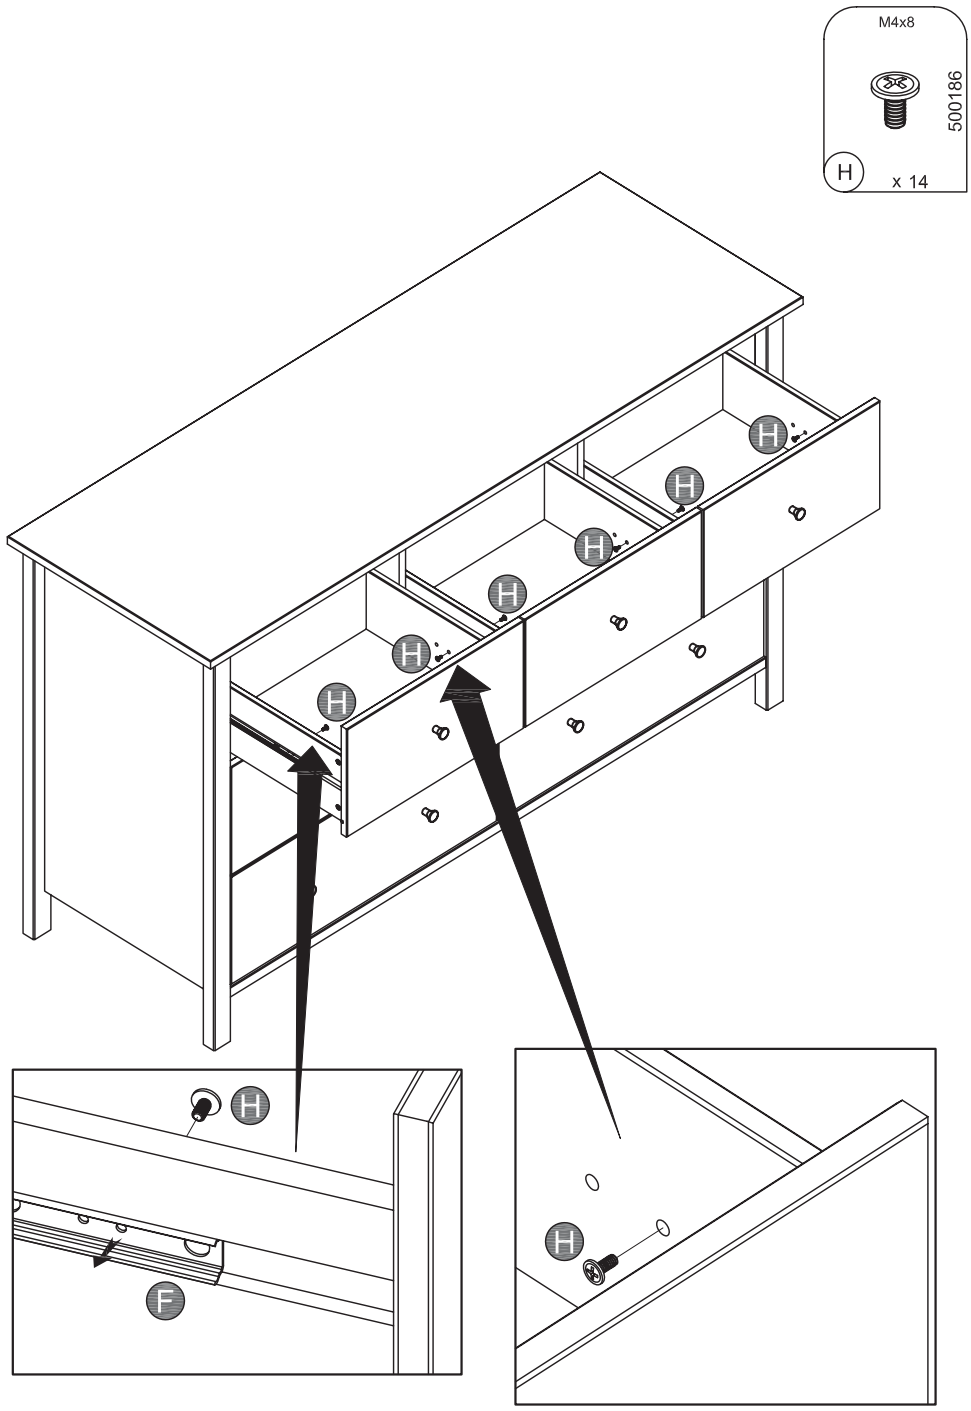

Assembly is complete