
Mendoza - 3 Drawer Bedside

Assembly Instructions - Please keep for future reference

228/9953

244/8316

258/3044

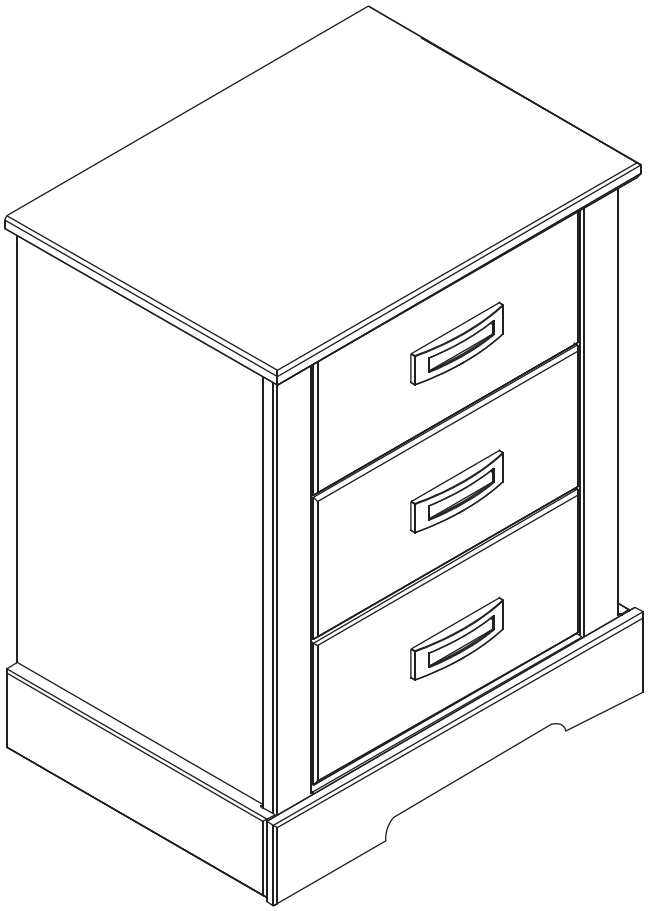

Dimensions

Width - 47.6cm
Depth - 35.4cm
Height - 60.1cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**

Issue 1 - 12/09/12

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.


• Assemble on a soft level surface to avoid damaging the unit or your floor.

• This product has been produced from natural timber; you may notice some variation in the grain and colour of different component parts which is normal for furniture produced using natural wood and is not the result of any manufacturing fault.

• The product has been treated with a wax and oil finish to prevent dirt ingress and preserve moisture.

• On unpacking the furniture you may notice an odour due to this treatment; this will disappear once the furniture is unpacked and assembled after a period of time.

• This process may leave some staining on the packaging material; please take care to ensure this does not transfer to clothing or carpeted surfaces during assembly.

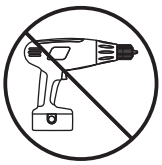

• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Parts of the assembly will be easier with 2 people.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Use an appropriate furniture polish for natural wood furniture and a dry cloth to clean the product.

• Avoid placing the furniture in direct sunlight as this will cause the timber to prematurely age.


• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Note: *If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.*

Components - Panels


Please check you have all the panels listed below




1 Top panel
(47.6 x 35.4cm)

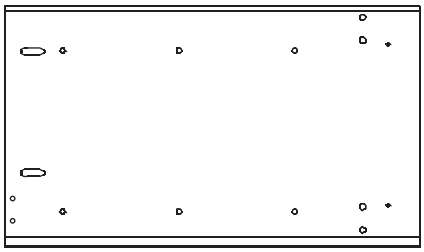


2 Left side panel
(57.6 x 33.8cm)

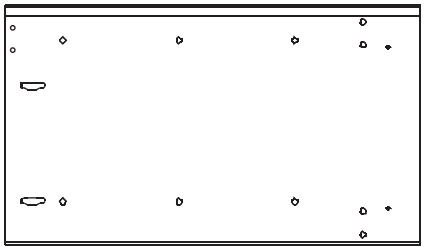


3 Right side panel
(57.6 x 33.8cm)



4 Bottom front rail
(40.8 x 6.4cm)




5 Back rail (40.8 x 5cm)




6 Front plinth (47.5 x 9cm)




7 Side plinth x 2
(33.7 x 8.8cm)



8 Drawer runner x 6
(29 x 5.1cm)



9 Back panel x 2
(51.4 x 21.2cm)

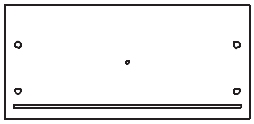

10 Drawer front x 3
(34.2 x 15.6cm)




11 Drawer left side x 3
(29 x 13.5cm)




12 Drawer right side x 3
(29 x 13.5cm)



13 Drawer back x 3
(29.2 x 13cm)



14 Drawer bottom x 3
(30.4 x 28.9cm)










15 Top front rail
(40.8 x 5cm)

Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400 800**

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

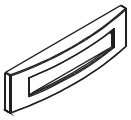A  Ø8x25mm Wooden dowel x 36	**B**  30mm Screw x 30	**C**  50mm Screw x 12
D  25mm Screw x 07	**E**  Handle x 03	**F**  22mm Bolt x 06
G  Profile 485mm x 01	**H**  Nails x 20	**I**  35mm Screw x 04
J  Ø8x35mm Long wooden dowel x 06	**K**  Ø6x25mm Thin wooden dowel x 04	


Tools required




Phillips screwdriver (medium & large)

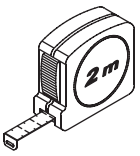

Ruler/tape measure




Small hammer



Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Fitting wooden dowels:

a: Insert dowels Ⓐ into the indicated parts.

b: Insert thin wooden dowels Ⓚ on top front rail 15 only.

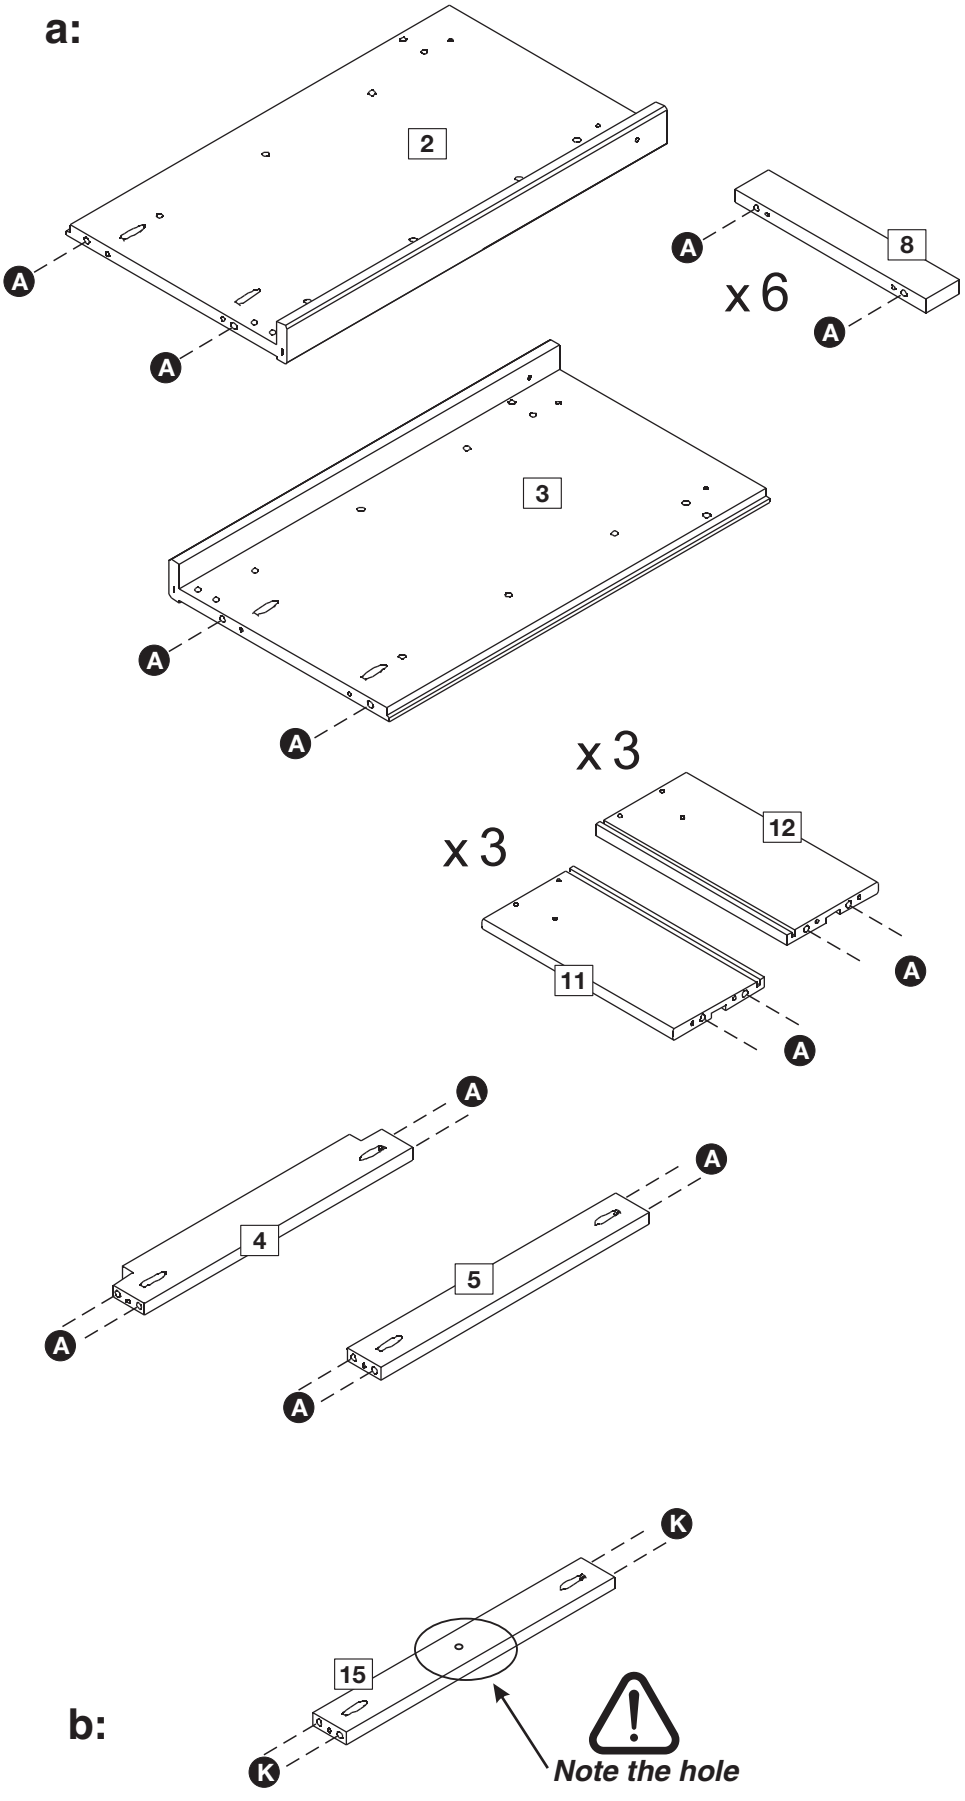


Assembly Instructions

Step 2

Assembling cabinet:

Fix bottom front rail 4 , back rail 5 and top front rail 15 to the left side panel 2 using screws B.

Note: Holes on top front rail must be facing up as shown in the diagram.

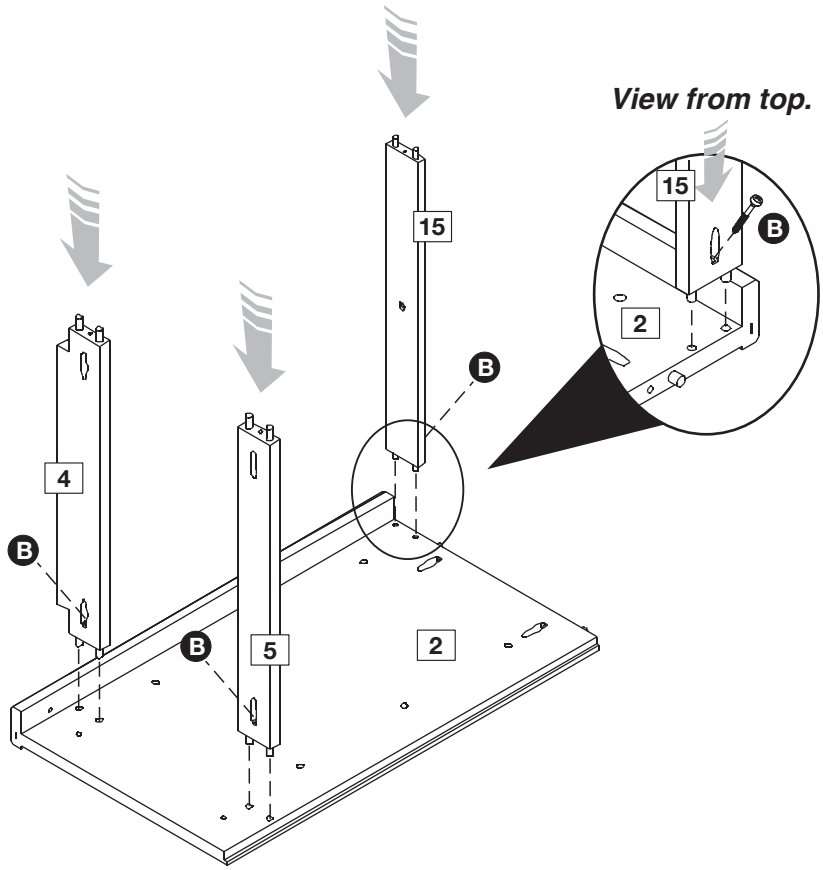


Step 3

Assembling cabinet:

Fix bottom front rail 4 , back rail 5 and top front rail 15 to the right side panel 3 using screws B.

Note: Holes on top front rail must be facing up as shown in the diagram.

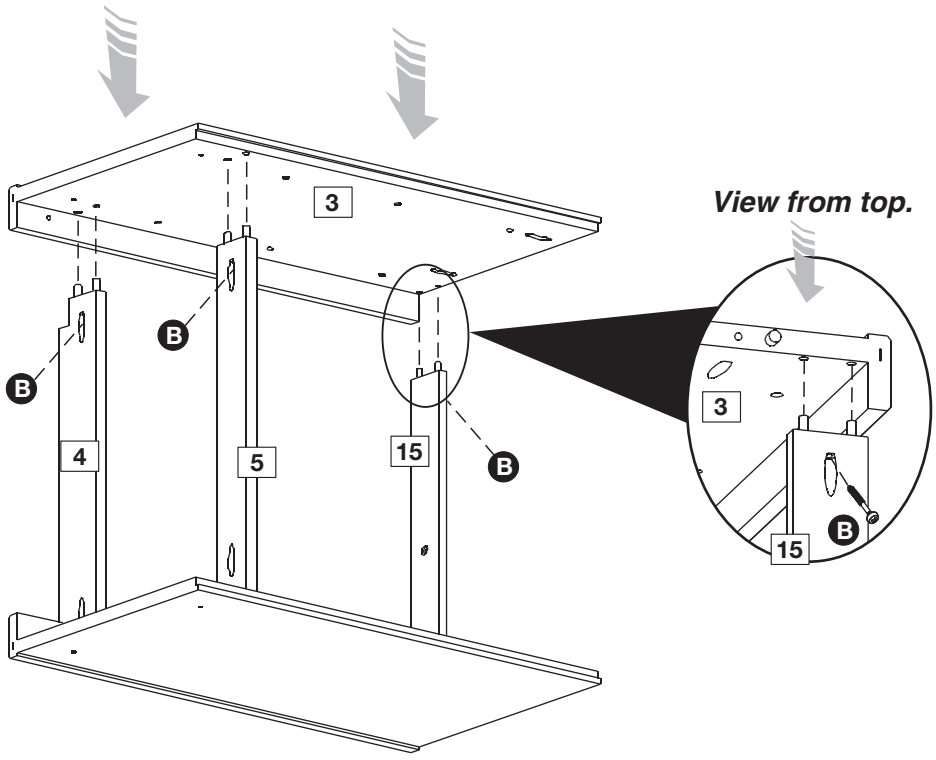


Step 4

Assembling cabinet;

Turn cabinet with its front facing up.

a: Fix the top panel 1 to the sides 2 and 3 using screws I.

b: Fix top front rail 15 to the top panel 1 using screws D.

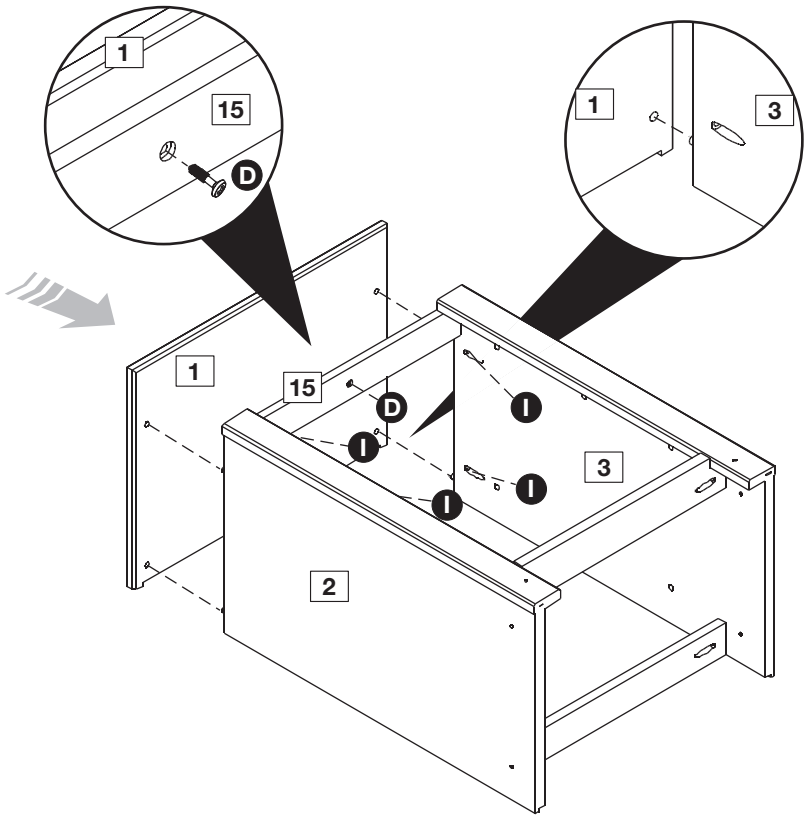

Step 5


Assembling cabinet:

a: Fix side plinths 7 to the side panels using screws D.

Note: Make sure side plinths are aligned to the bottom and front edges of the side panels.

b: Fix front plinth 6 to the sides using screws D.

Note: Make sure front plinth 6 is aligned to the bottom edges of the side panels and in line to the side plinths.

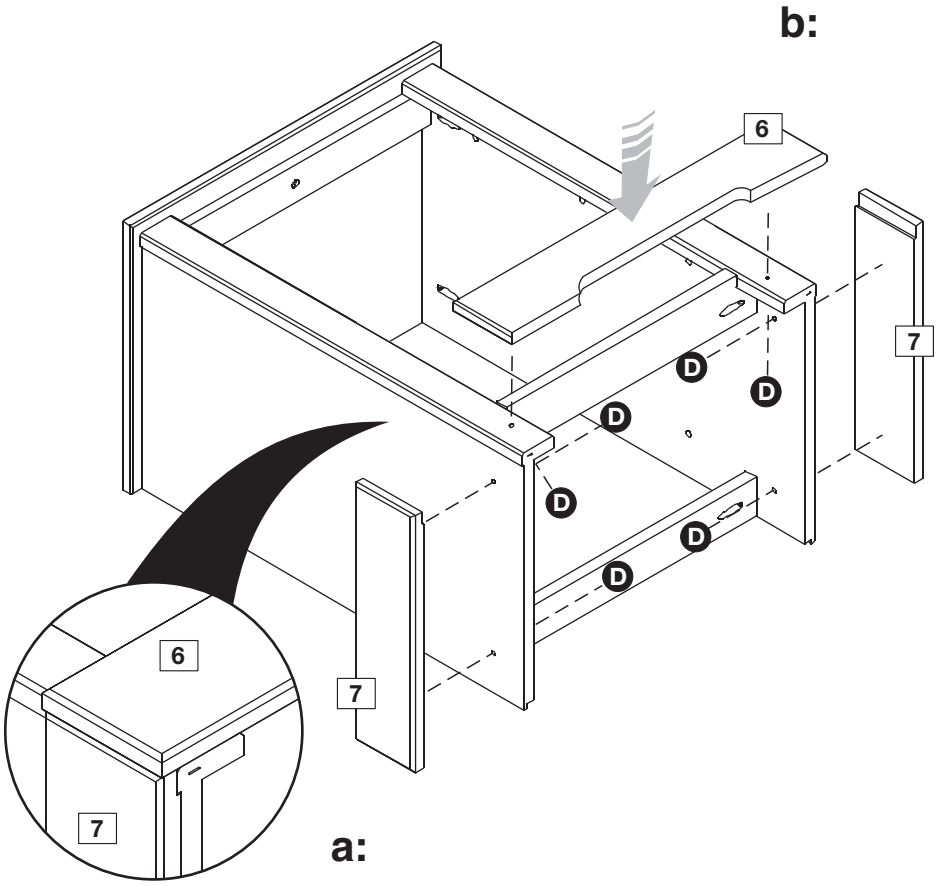


Step 6

Fixing drawer runners:

Carefully stand the product uprigth.


Fix drawer runners 8 to the sides using screws C as shown.

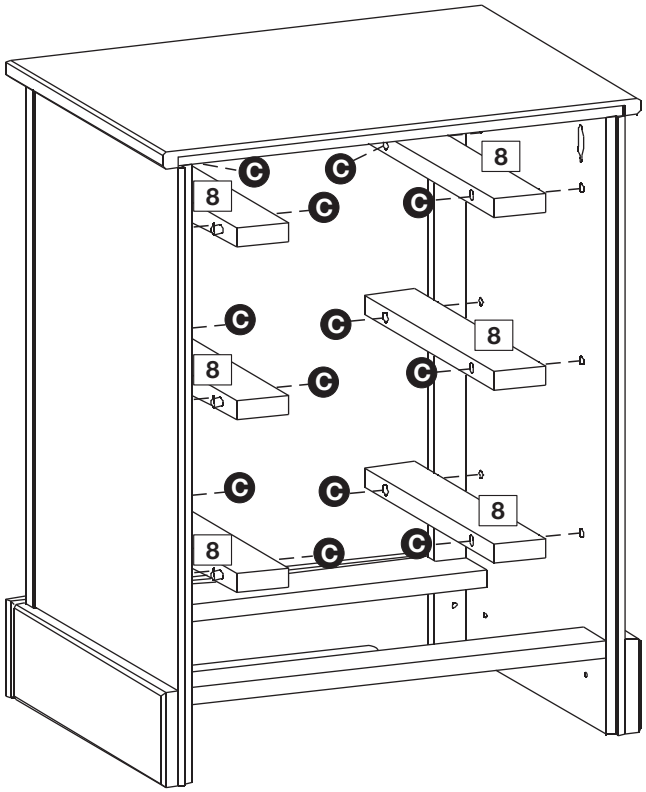

Step 7

Fixing back panels:


Important: Cabinet MUST be "square" when back panels are attached.

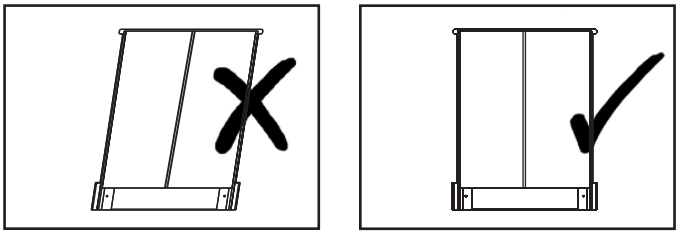

a: Attach back panel 9 to the right side first using nails H.

b: Position profile G onto back panel (just attach).

c: Carefully slot the second back panel 9 into profile and fix it to the cabinet using nails H.

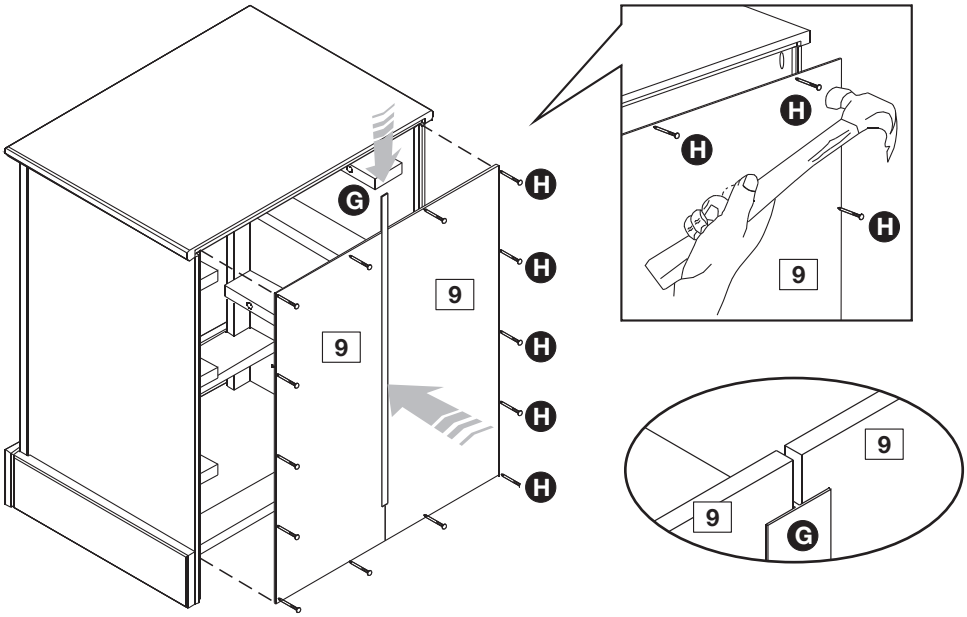

Assembly Instructions

Step 8

Assembling the drawers:


a: Attach drawer sides 11 and 12 to the drawer front 10 using screws B.

b: Slide drawer bottom 14 into slots on drawer sides.

c: Holding the drawer back 13 in place and flush to the edge of drawer side, fix them to the drawer back using screws B.

d: Using bolt F attach the drawer handles E to the drawer front.


Repeat step 8 for the other drawers.

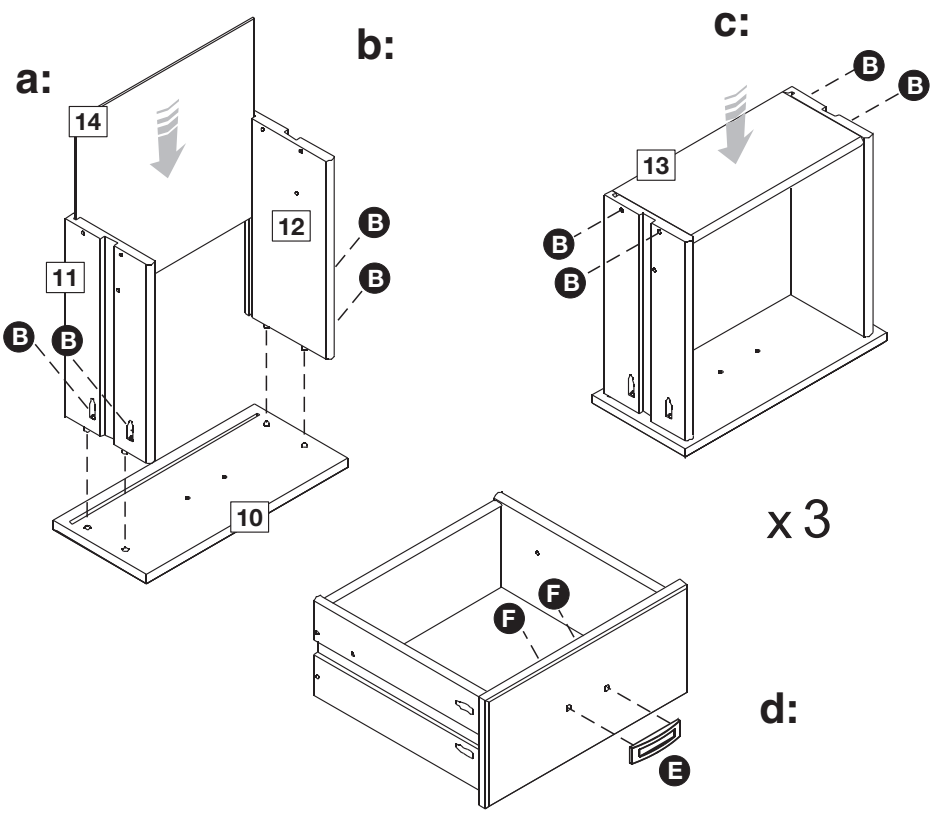


Step 9

Insert drawers into unit. With the back of the drawers past the front frames, use a hammer to tap the dowels J in flush to the drawer sides. This is a safety catch to stop drawers falling out.

Assembly is complete.

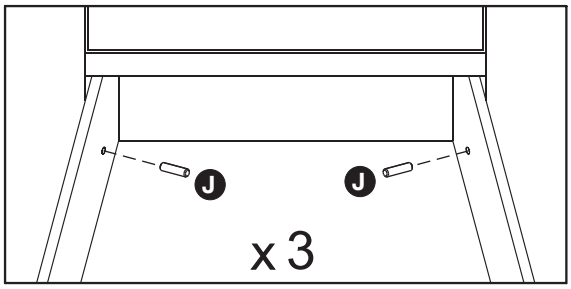

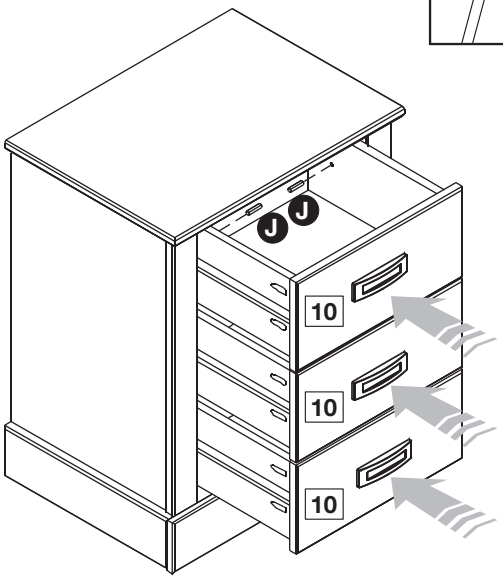

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400 800**