
Cheval - 4 Drawer Chest

Assembly Instructions - Please keep for future reference

258/7260
268/9254
274/9981
275/2514

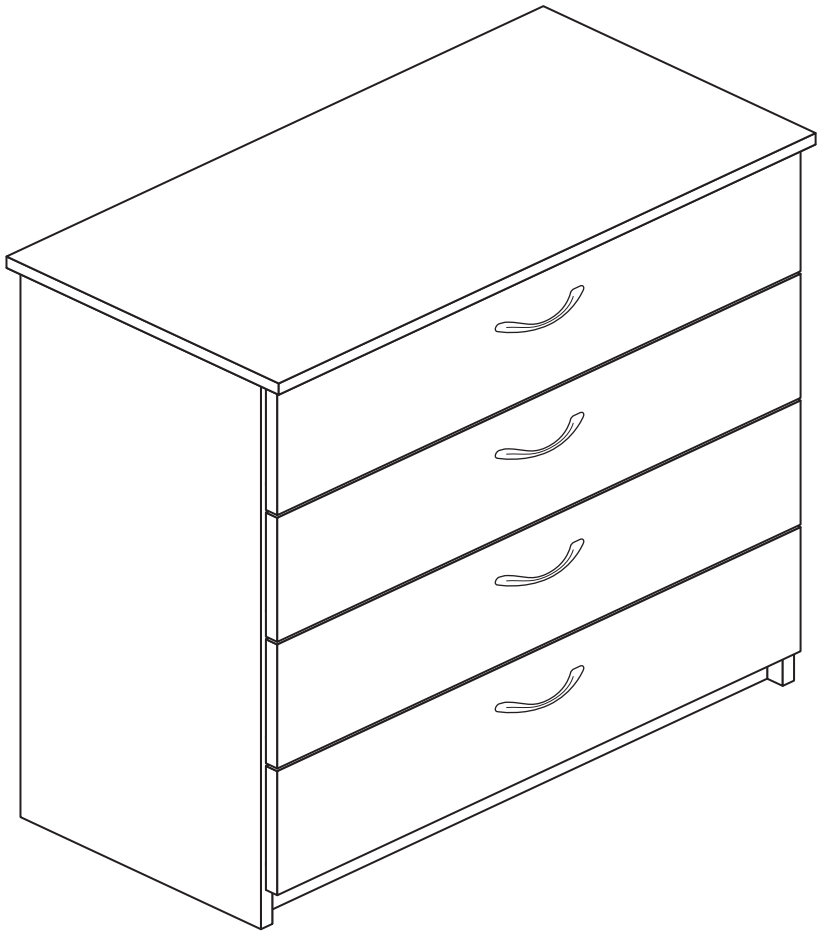

Dimensions

Width - 71cm

Depth - 36cm

Height - 73cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 13/06/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 22kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the bracket supplied.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

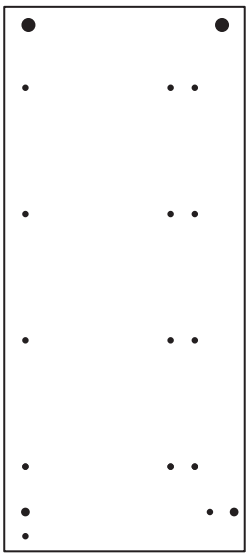


1 Left Side *(D2966A)*
(720 x 318mm)

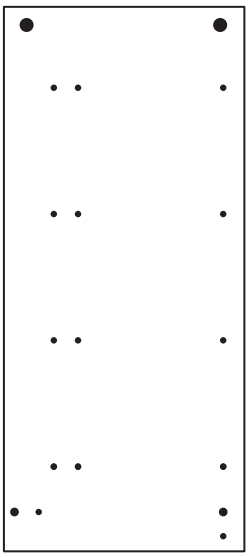


2 Right Side *(D2967A)*
(720 x 318mm)

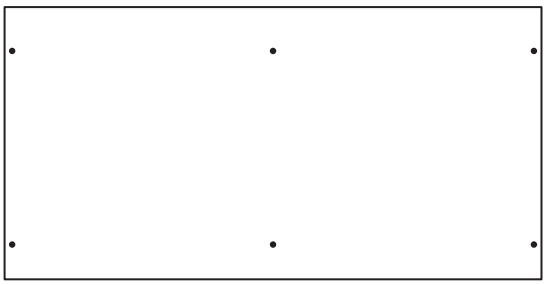

3 Top *(D2751A)*
(710 x 360mm)




4 Rail *(D2755A)*
(675 x 66mm) x 2

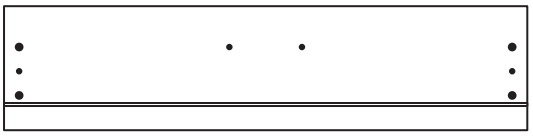


5 Large Drawer Front *(D2753A)*
(692 x 164mm) x 4



6 Large Drawer Back *(W639-124)*
(639 x 124mm) x 4




7 Left Drawer Side *(W300-124LH)*
(300 x 124mm) x 4



8 Right Drawer Side *(W300-124RH)*
(300 x 124mm) x 4



9 Large Drawer Base *(T650-297)*
(650 x 297mm) x 4




10 Back *(X700-672)*
(700 x 672mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 4

B 

Metal dowel *(F901)* x 16

C 


Nail *(F51)* x 16

D 

Large locking nut *(F900)* x 8

E 

Small locking nut *(F3)* x 8

F 

Plastic Nail *(F91)* x 4

G 

19mm Screw (*F461)* x 8

H 


9mm Screw *(F74)* x 8

I 

9mm Screw (*F73)* x 16

J 

Drawer runner *(F1004)* x 8

K 

13mm Screw *(F79)* x 1

L 


Handle (*F273)* x 4

M 

Wedgefix *(F639)* x 16


N 

Knock-in Peg *(F171)* x 16

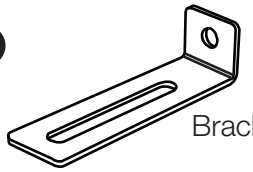
O 

Bracket (*F327)* x 1

Tools required

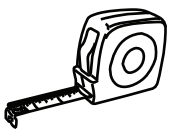


Rule



Cross-head screwdriver



Scissors



Hammer




Eye protection (when using a hammer or drill)



Electric drill (do not use for fitting screws)

Ruler - Use this ruler to help correctly identify the screws

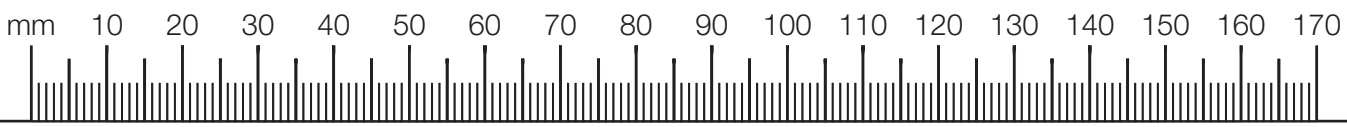

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare the 4 large drawer fronts

Screw 2 metal dowels B into each of the large drawer fronts 5.

Note: Tighten the metal dowels up fully against the panels.

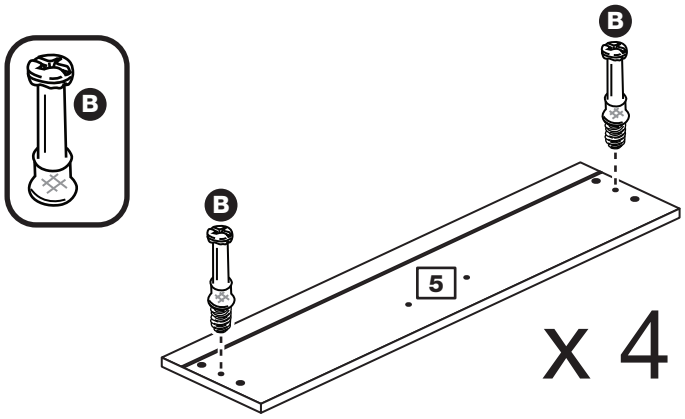


Step 2

Prepare the drawer sides

Insert a small locking nut E into the hole shown on the left drawer side 7 and the right drawer side 8.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

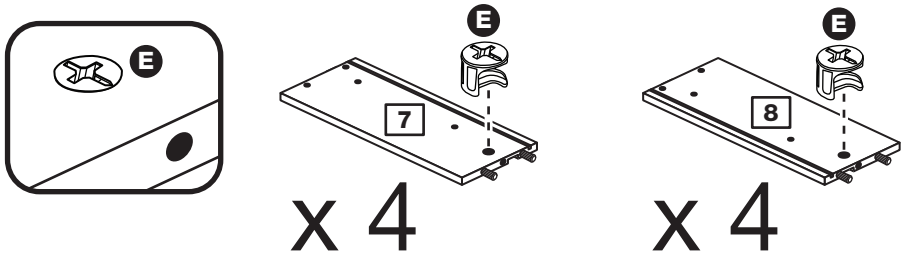


Step 3

Attach the drawer sides to the large drawer fronts

Push the left drawer side 7 and right drawer side 8 onto the back of the 4 large drawer fronts 5.

Turn the small locking nuts E on the left drawer side 7 and right drawer side 8.

Note: Turn the locking nuts E clockwise to secure panels - more than 1/2 a turn.

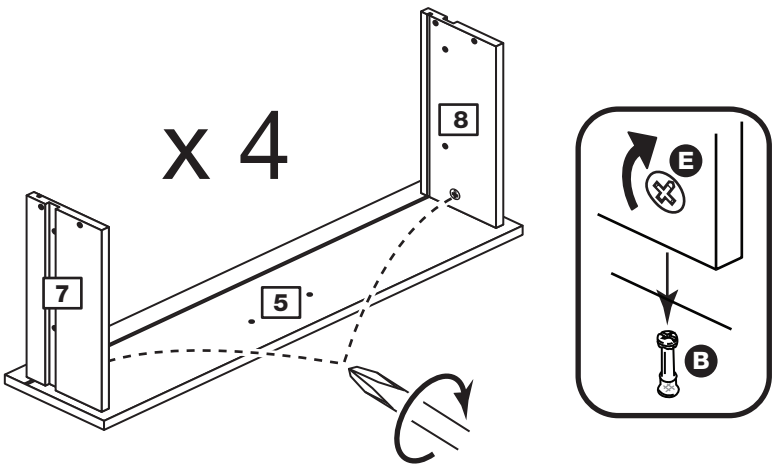


Assembly Instructions

Step 4

Fit the large drawer bases

Slide the large drawer base [9] down the grooves in the drawer sides [7] and [8] and down into the groove in the large drawer front [5].

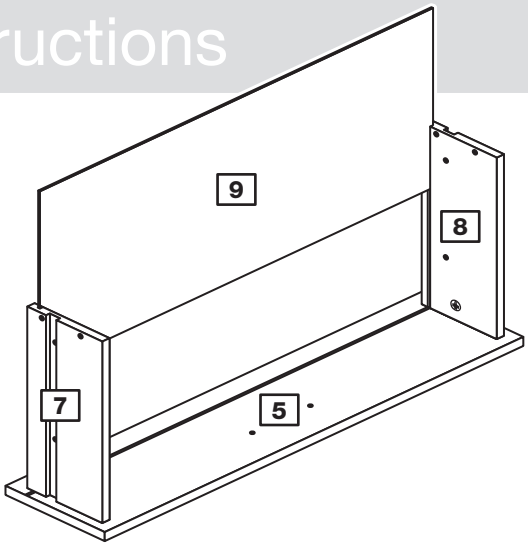

x 4


Step 5

Fit the large drawer back

Fit the large drawer back [6] between the drawer sides [7] and [8].

Make sure that the large drawer base [9] fits into the groove in the large drawer back [6].

Hold the large drawer back [6] in position and tap the knock-in pegs (N) through the holes in the drawer sides [7] and [8].

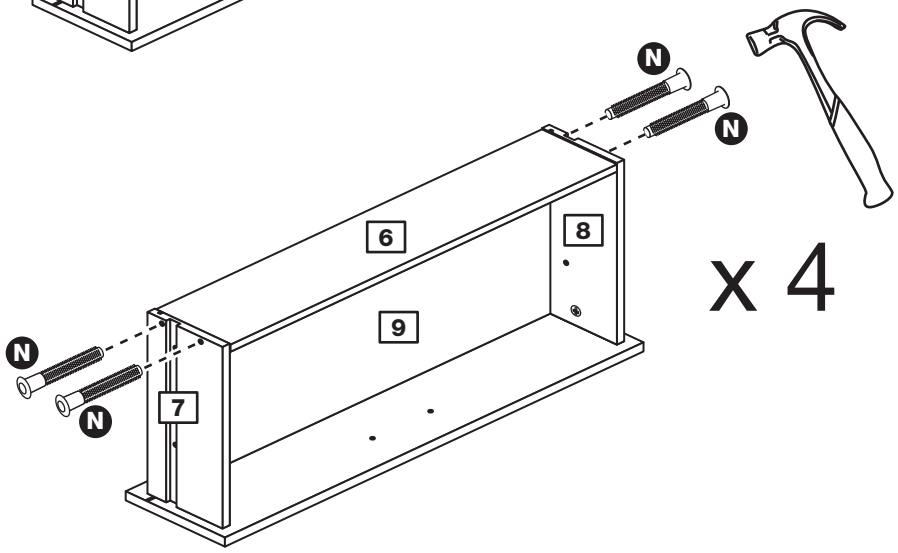


x 4

Step 6

Attach the handle

Attach a handle (L) to each large drawer front [5] using 2 screws (G).

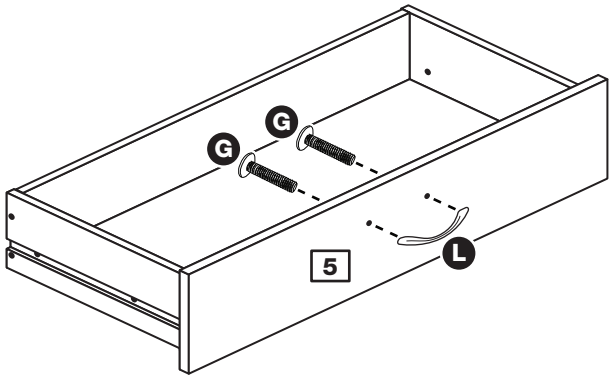



x 4

Step 7

Fit the wedgefixes

Turn the large drawer assemblies over and slide 4 wedgefixes (M) into the front and back grooves, as shown, and tighten up the screws.

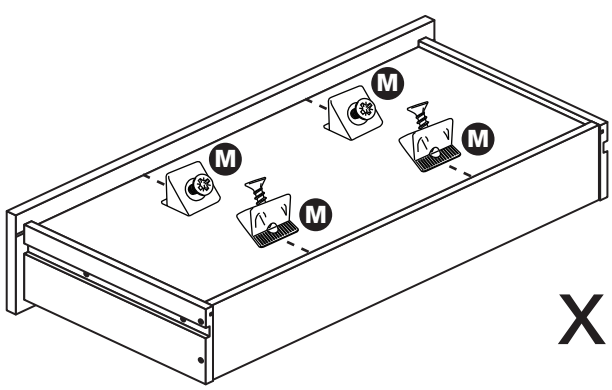

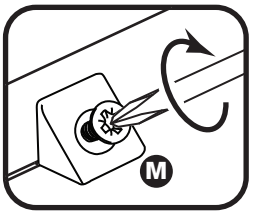

x 4

Step 8

Prepare the left side


a: Place 4 runners J on the left side 1 as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw I.

b: Slide the runner J back the other way and fit the 2nd screw I into the corresponding hole in the left side 1.


c: Screw 2 metal dowels B into the left side 1.

Insert 2 large locking nuts D into the left side 1.


Note: The arrow on the locking nuts **must** point towards the hole in the edge of the panel.

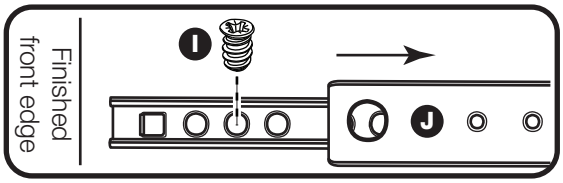


a:

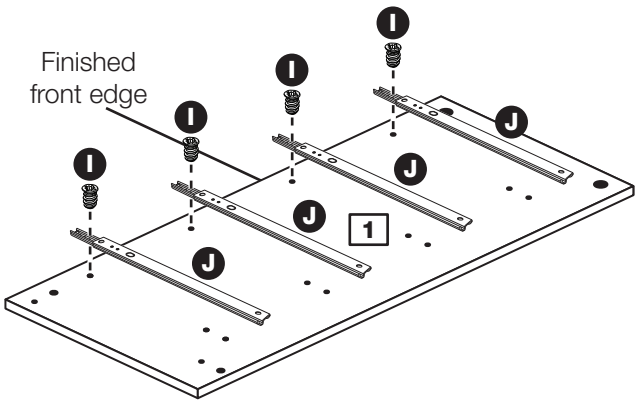

b:

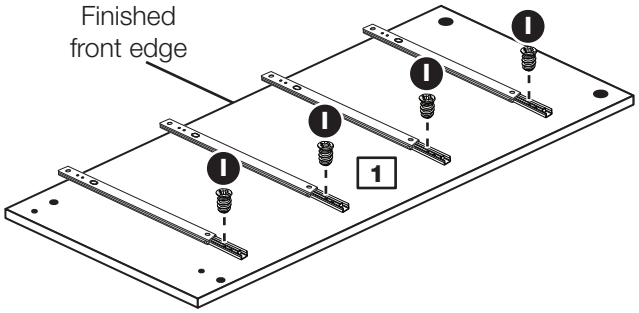

c:

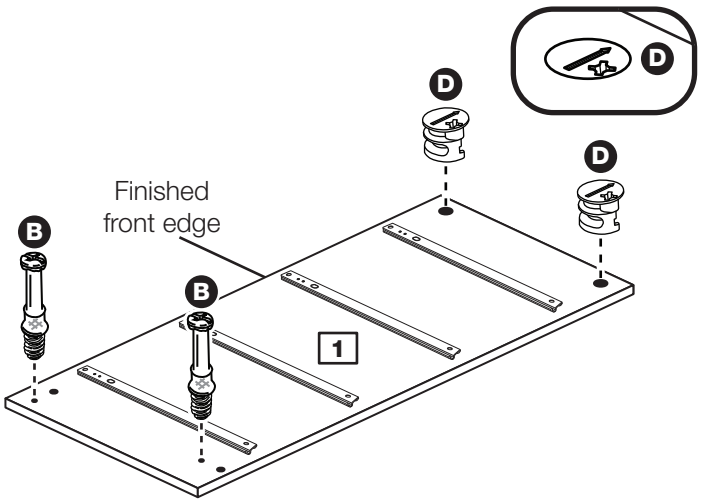

Step 9


Prepare the right side

a: Place 4 runners J on the right side 2 as shown. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw I.


b: Slide the runner J back the other way and fit the 2nd screw I into the corresponding hole in the right side 2.

c: Screw 2 metal dowels B into the right side 2.


Insert 2 large locking nuts D into the right side 2.

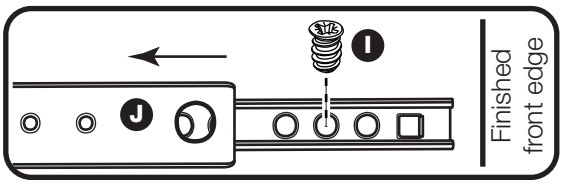


a:

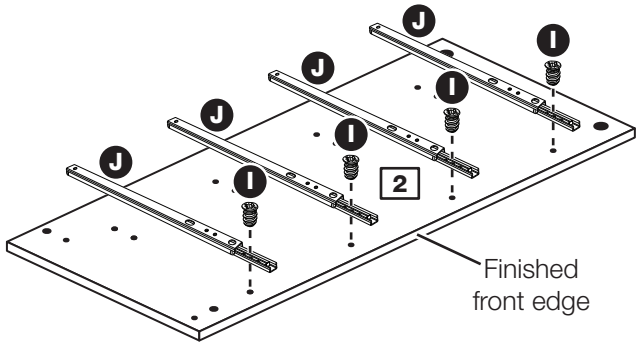

b:

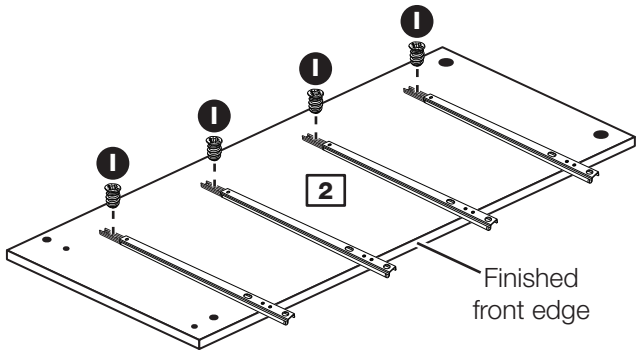

c:

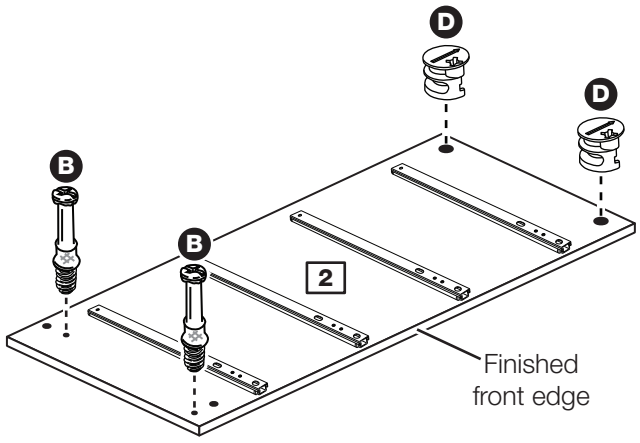


Step 10

Prepare the 2 rails

Tap 2 wooden dowels (A) into each rail [4].

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 2 large locking nuts (D) into each rail [4].

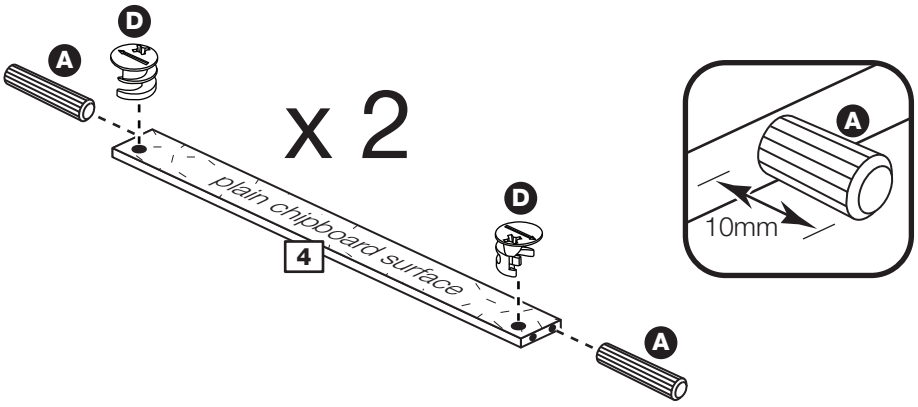


Step 11

Fit the 2 rails

Push the 2 rails [4] onto the right side [2].

Use a screwdriver to tighten the large locking nut (D) fitted to each rail [4].

Note: Turn the large locking nuts (D) as far as they will go - more than 1/2 a turn.

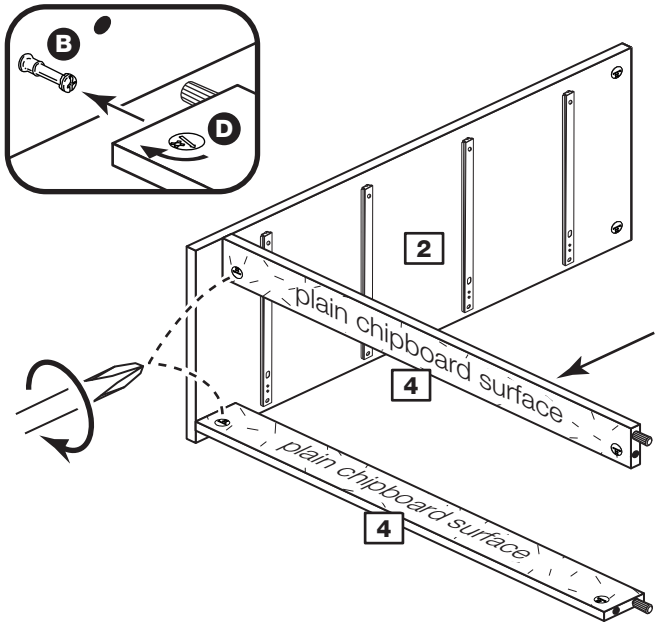


Note: Support this rail until the left side has been fitted in the next step.

Step 12

Fit the left side

Push the left side [1] onto the 2 rails [4].

Use a screwdriver to tighten the large locking nut (D) fitted to each rail [4].

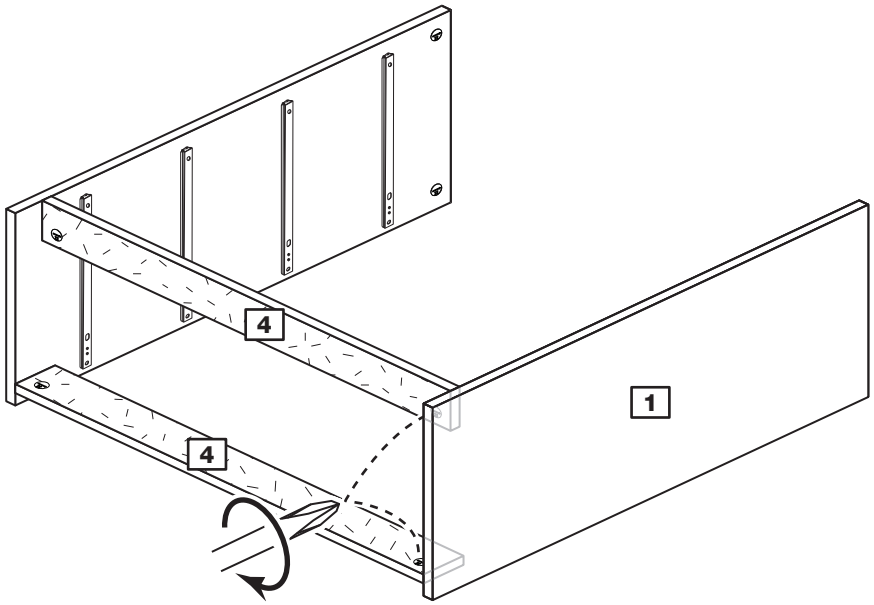


Step 13

Prepare the top

Screw 4 metal dowels B into the top 3.

Fix the bracket O in the centre of the top 3 and flush to the back edge, using screw K.

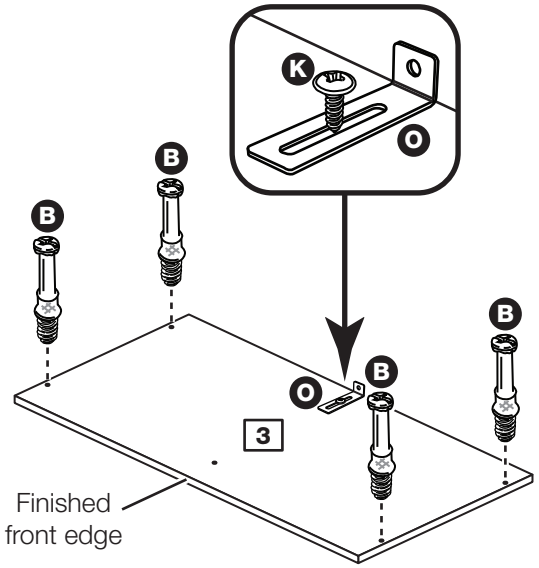


Step 14

Fit the top

Push the top 3 onto the sides 1 and 2.

Use a screwdriver to tighten the 2 large locking nuts D fitted to each side 1 and 2.

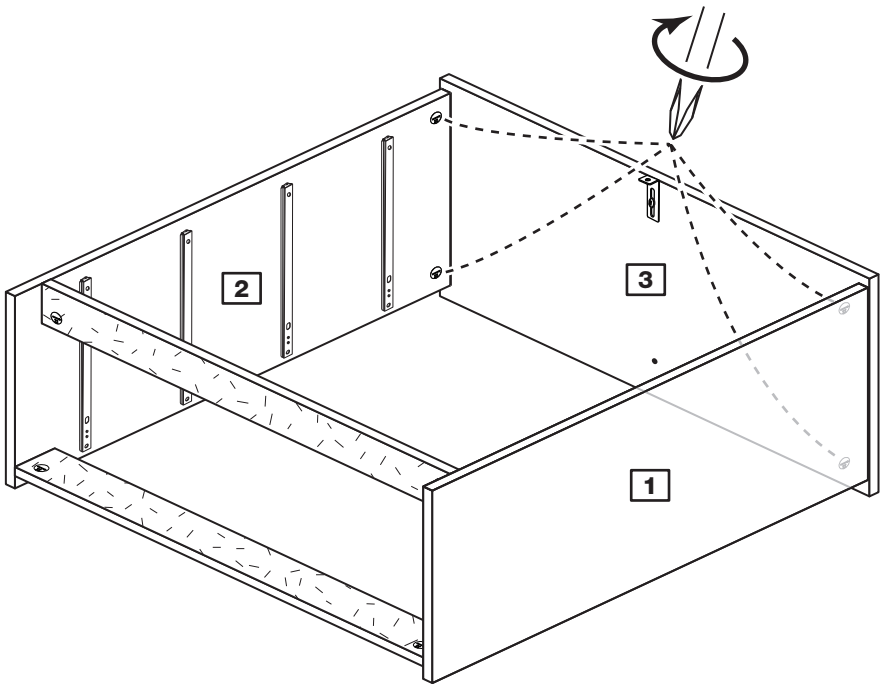

Step 15

Fit the back


a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 10 onto the unit.

Nail C around the outside edges of the back 10.

Note: Nails should be spaced about 150mm apart.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

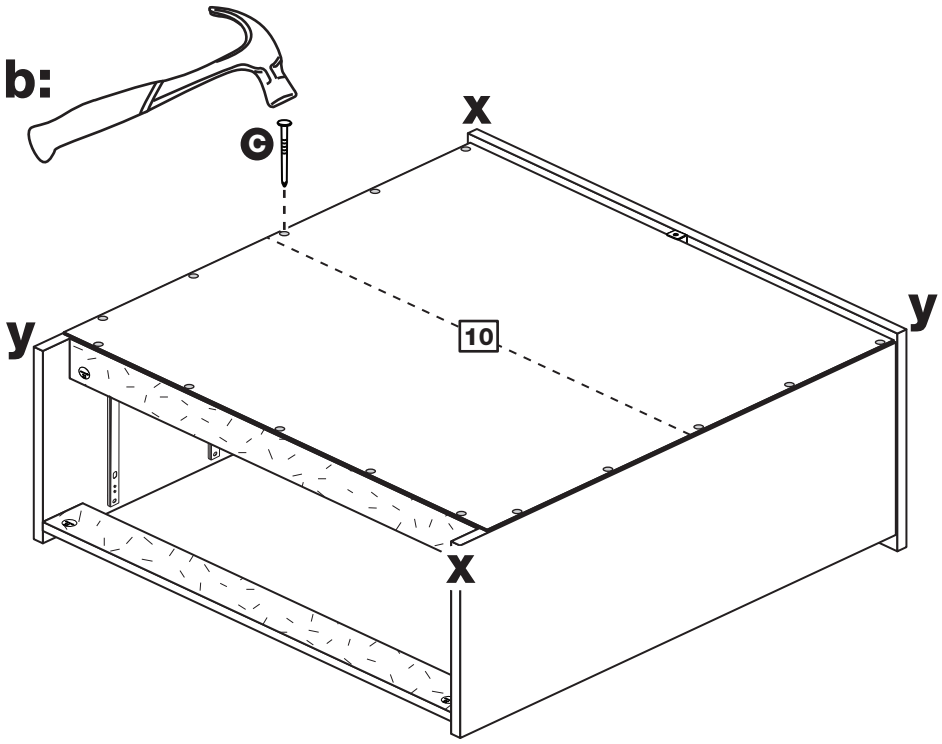


Step 16

Fit the plastic nails

Tap 2 plastic nails F into the bottom edge of each of the sides 1 and 2 as shown.

Carefully stand the unit up for the next step.

Warning: The unit is heavy. Lift with care.

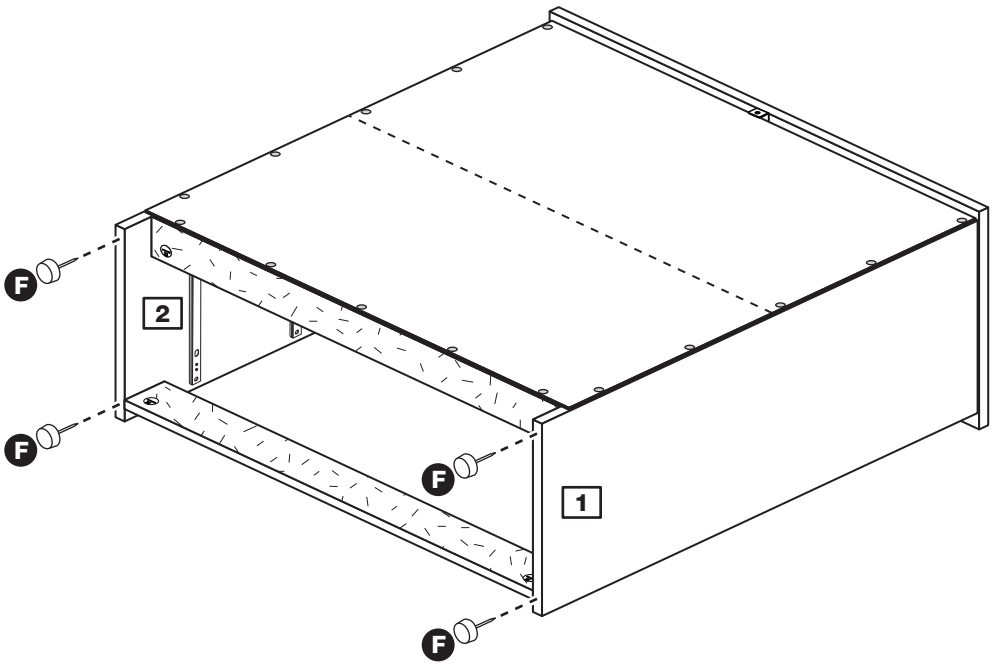


Step 17

Secure unit to a wall

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by use of the metal bracket O fitted to the top 3.

Fixings are not supplied as they will need to suit the wall type, and the length of screw will depend on the distance of the back of the unit to the wall.

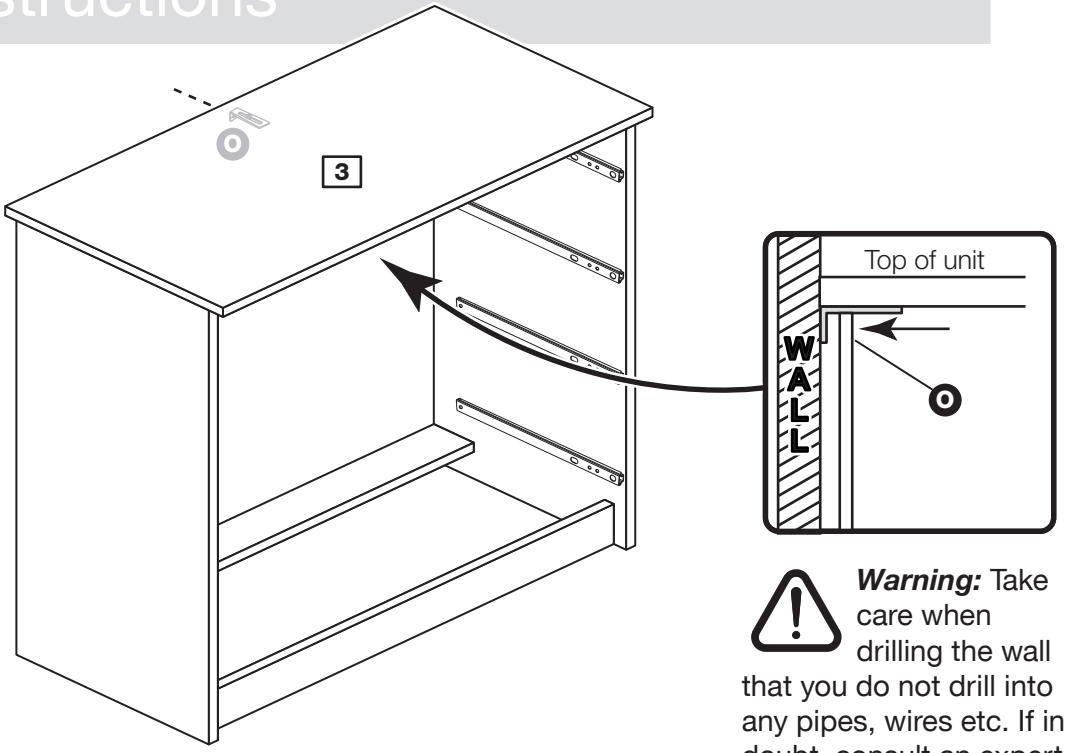

Warning: Take care when drilling the wall that you do not drill into any pipes, wires etc. If in doubt, consult an expert.

Step 18


Fit the drawers

Starting with the bottom drawer, slide both the runners J forward and locate the drawer sides 7 and 8 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners H.

Working from the inside of the drawer, insert 2 screws H through the drawer sides and out into the 2nd threaded hole in the runner.

Note: Do not overtighten the screws H.
If they catch on the runner you may need to loosen them slightly.

Assembly is complete

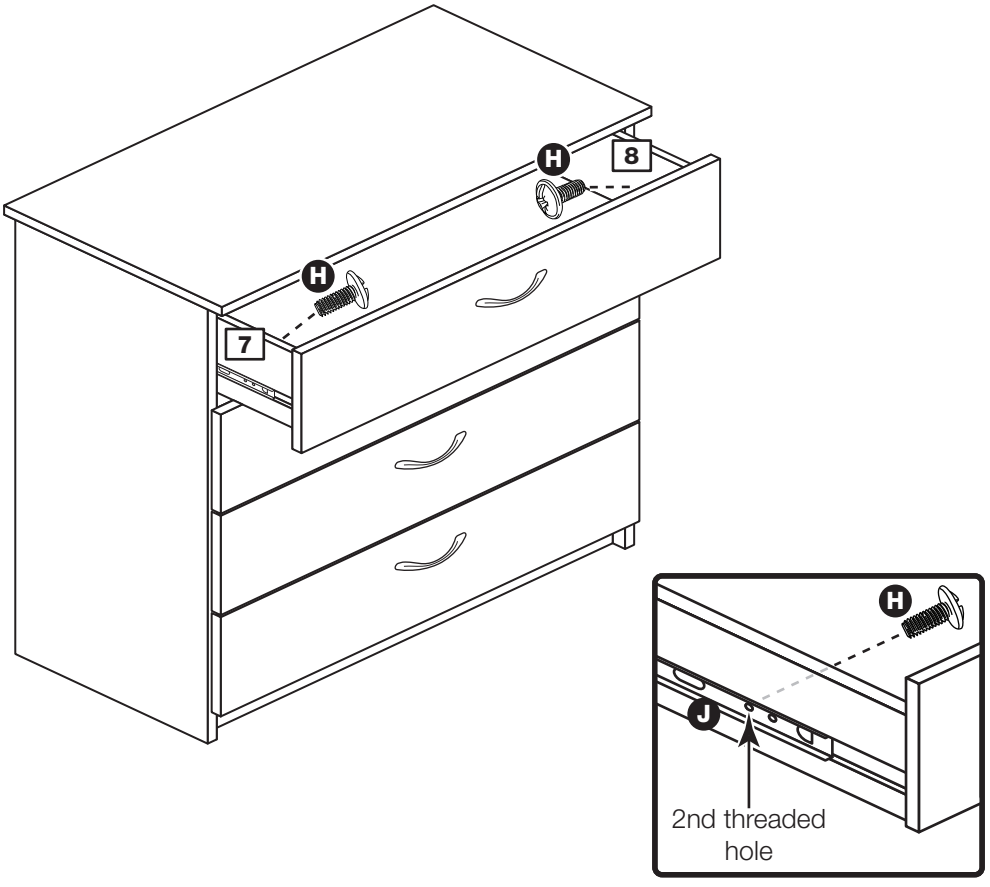

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW