Assembly Instructions

Step 8

Assembling the bed base

a:Insert Legs (G) into Hardboard central base panel [6] using Screws (J).

b:Place one Hardboard base panel [5] near the Headboard [1] then the Central Hardboard base panel [6].

Then place the second Hardboard base panel [5] near the Footboard [2].

Step 9

Attaching slats

For this stage requires two people.


Roll the slats over the metal frame, then place the end slat after the metal block attached to the Side Rails [9] and [10].

Slats to be rolled out with staples on the underside.


Repeat operation for all 4 corners.


Assembly is now complete.

a:

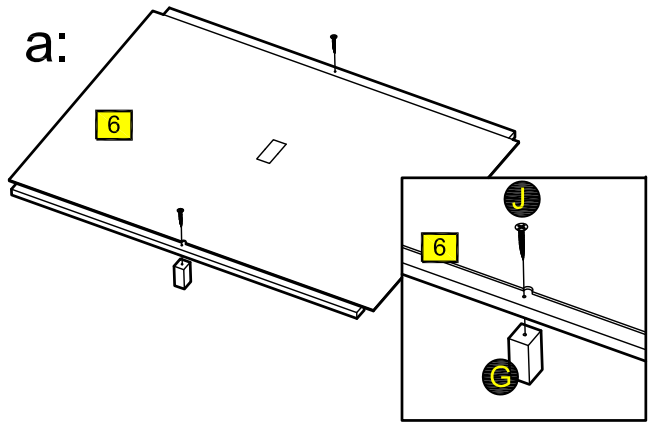

b:

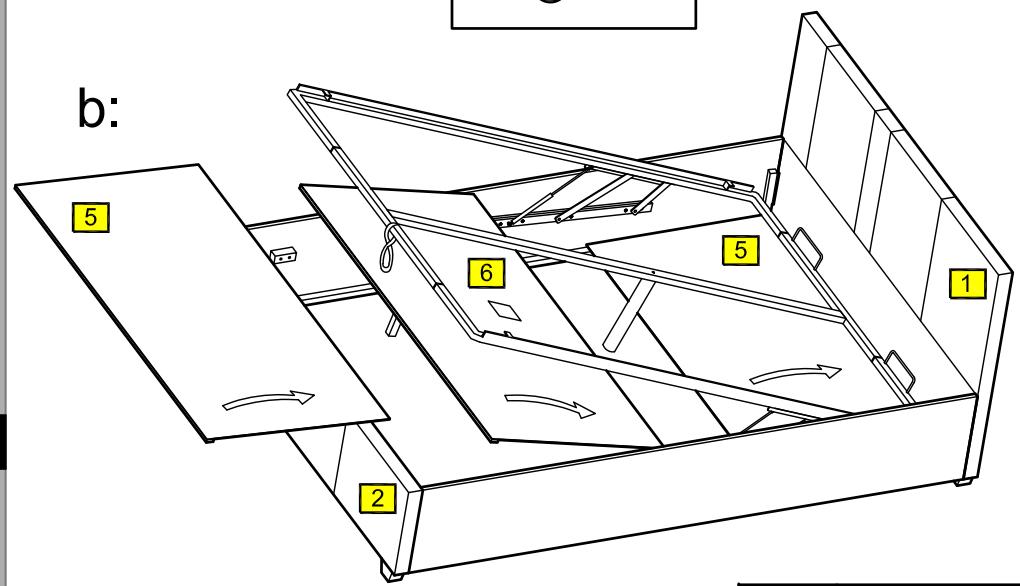

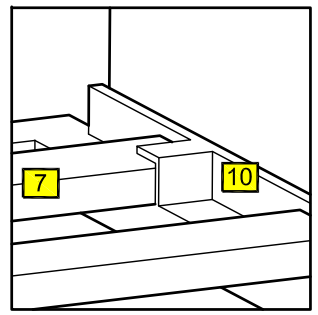

If you need help or have damaged or missing parts,call the **Customer Helpline:** Argos = 0835 6400800


San Diego Ottoman 4FT6

Assembly Instructions - Please keep for future reference

Cat.no 258 / 7954

Cat.no 245 / 6659

Cat.no 266 / 4334

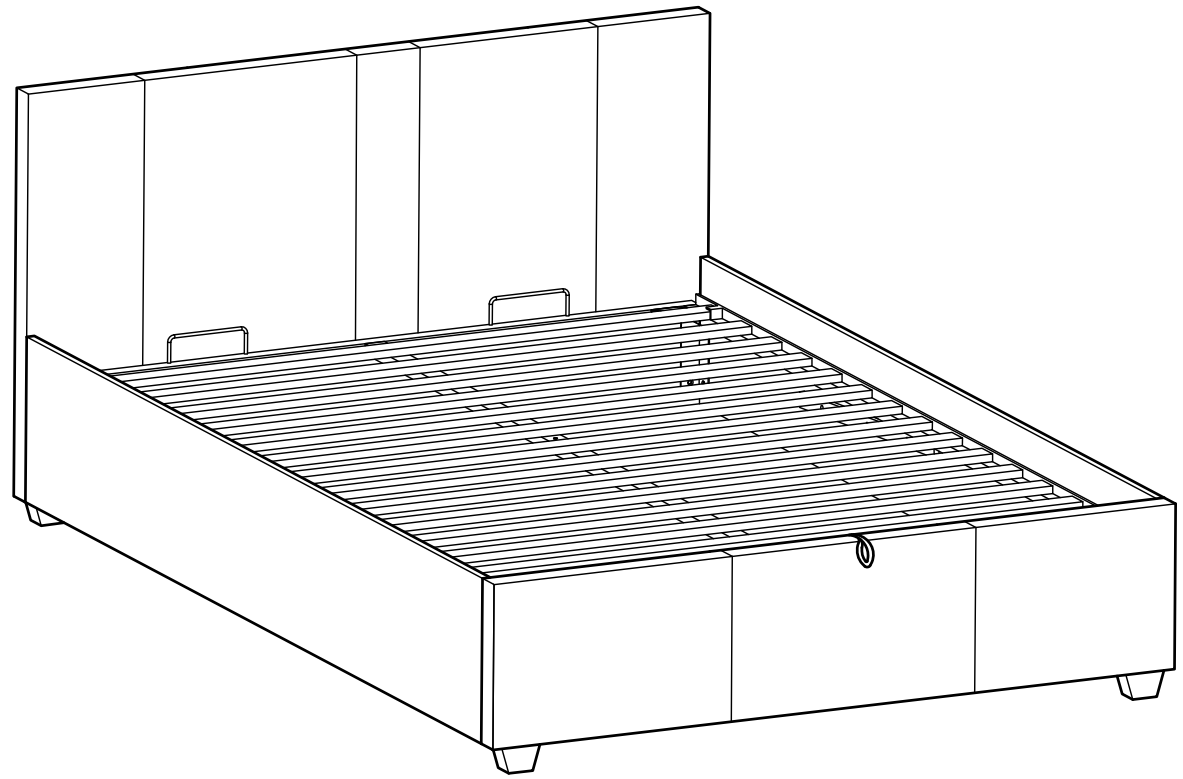

Dimension
Width - 143cm
Length - 206cm
Height - 86cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts,call the **Customer Helpline:** Argos = 0835 6400800

Issue 1 - 11/06/14

⚠ Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area,small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product,this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power dril/drivers **for inserting screws** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Do not tighten all bolts until bed is fully assembled.

Care and maintenance

- Only clean using a damp cloth and mild detergent,do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

Note:if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Assembly Instructions


Step 6

Attaching the mechanism


a:Fix the Mechanism 13 & 14 to the Metal Frame by inserting 3 Bolts A through the Mechanism, then through the Side rail 9 and 10.

b:Insert Support leg E through the Middle Rail 8 and secure tightly to right.

b:

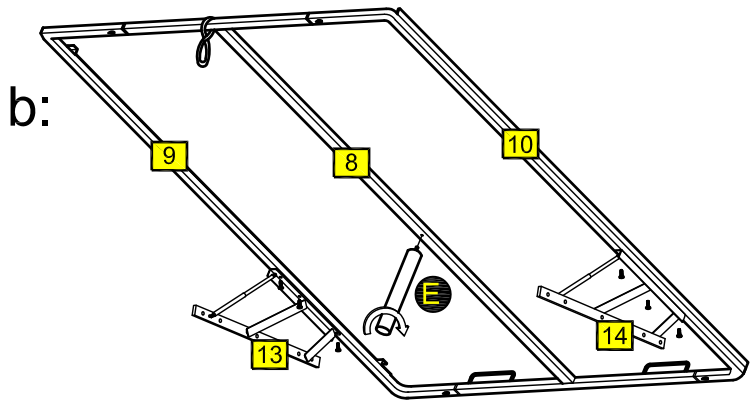

a:

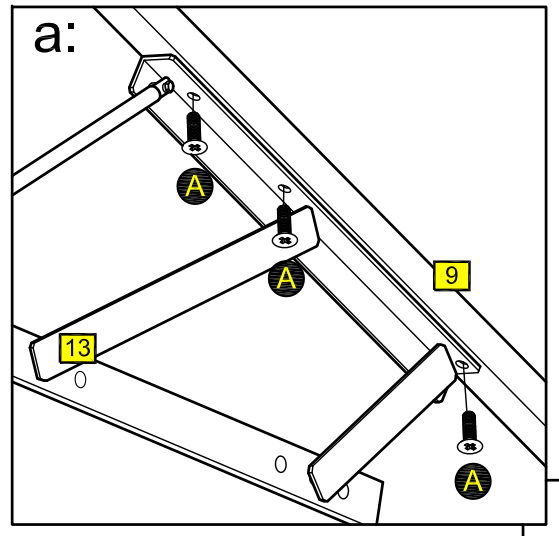

Step 7


Attaching the mechanism to the side rails


Insert 5 Bolts C through the Mechanism 13 & 14 through the Side rail 3 and 4.

For this stage requires two people.

Make the same for the other side.

Now fully tighten all bolts.

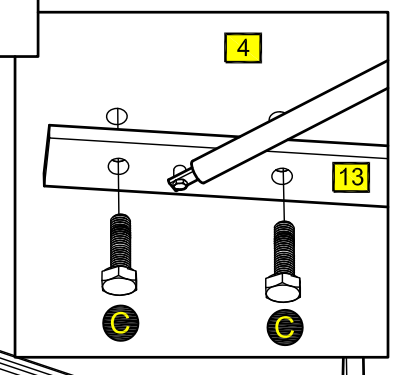








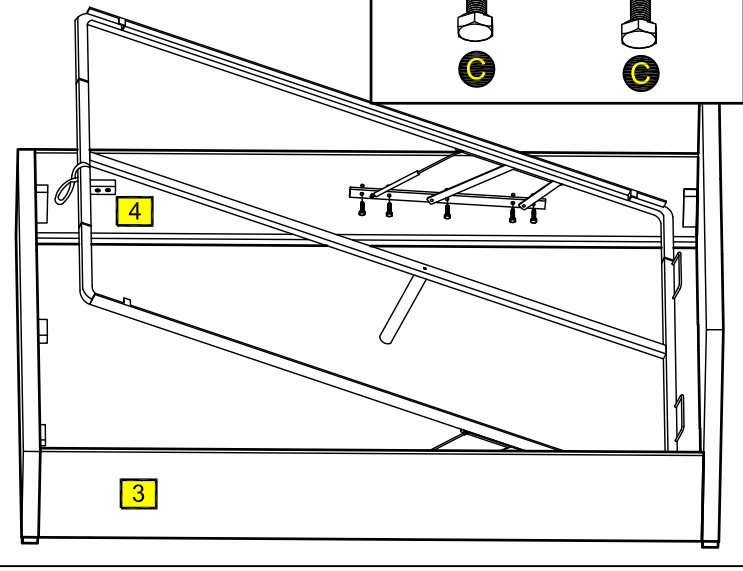


If you need help or have damaged or missing parts,call the **Customer Helpline:** Argos = 0835 6400800


Components - Fittings

Please check you have all the fittings listed bellow


Note: the quantities below are the correct amount to complecte the assembly.In some cases more fittings may be supplied than are required.

A M6x16 mm Bolt x 10 	B Strap x 1 	C M8x35 mm Bolt x 10 
D Leg x 4 	E Support leg x 1 	F M8x50 mm Bolt x 4 
G Base leg x 2 (50x25mm) x 2 	H Frame support (60x30mm) x 2 	I M6x80 mm Bolt x 6 
J 3.5x30 mm Screw x 2 		

Tools required




Screwdriver (Not supplied)

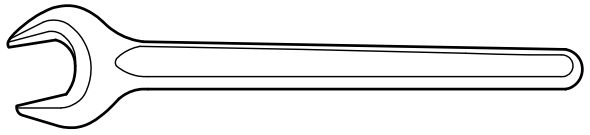

Key hexagonal 13 mm (Not supplied)

Ruler - Use this ruler to help correctly identify the bolts




Assembly Instructions

Step 1

Attaching legs

a:Insert Legs D into Headboard 1 , using Bolt F.

b:Insert Legs D into Footboard 2 , using Bolt F.

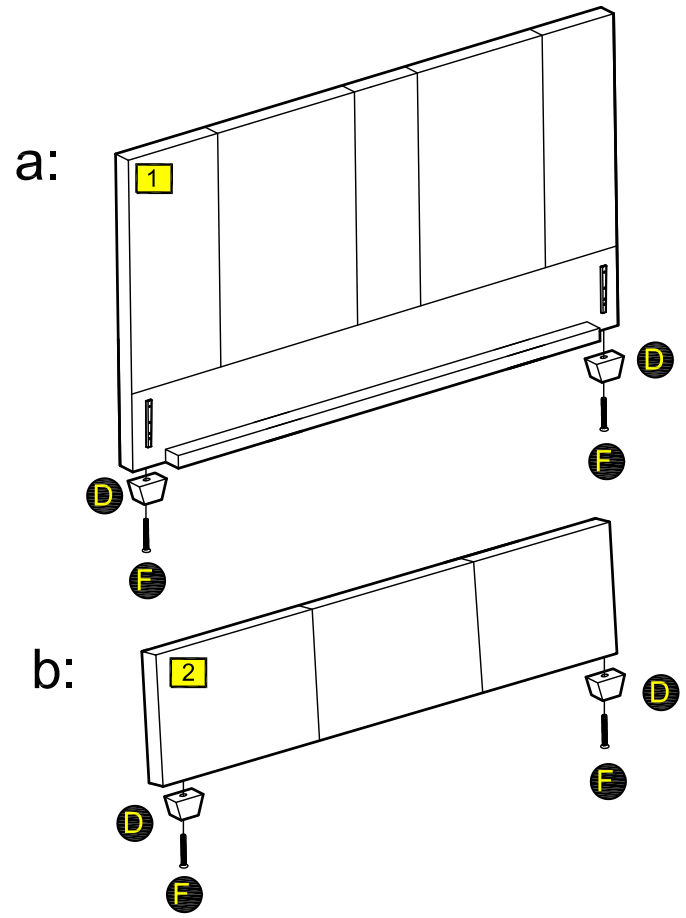

Step 2


Metal frame assembly

a: Attach Strap B.

b:Insert Middle rail 8 into the Front rail 12 and Back rail 11.

Connect the Side 9 & 10 to the Front rail 12 and Back rail 11 with Screws A.

The Middle rails 8 and Side rails 9 & 10 must be positioned with the holes closer to the Back rail 11.

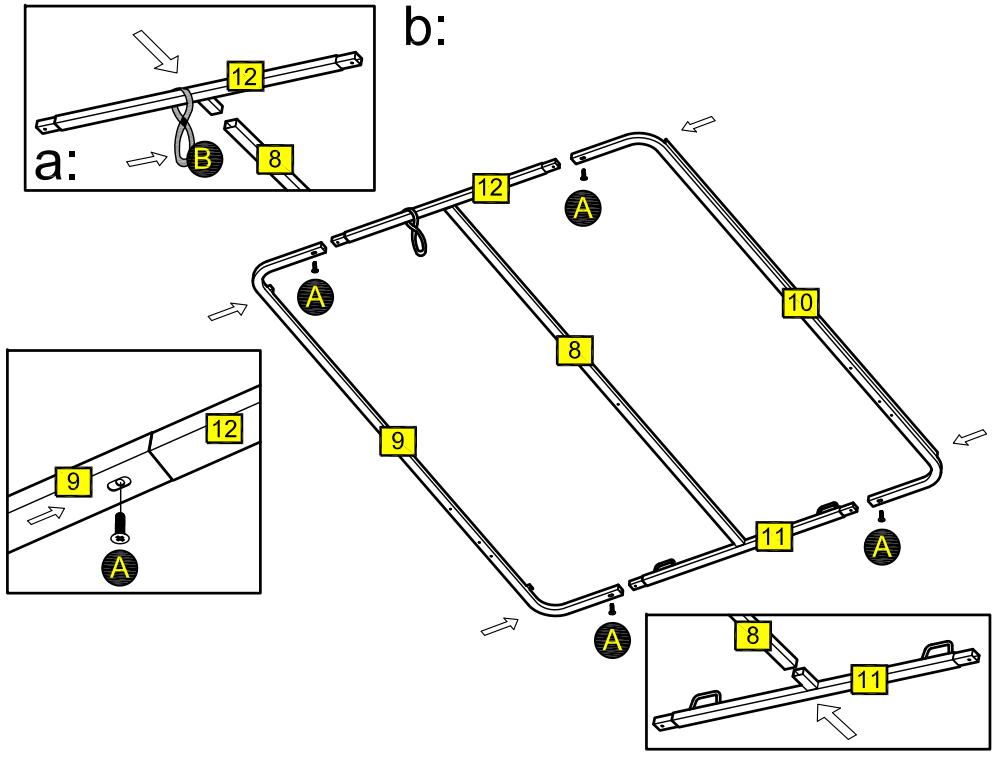


If you need help or have damaged or missing parts,call the **Customer Helpline:** Argos = 0835 6400800

Assembly Instructions

Step 3

Attaching stop mattress


Insert Frame supports H into Footboard 2 using Bolts I.

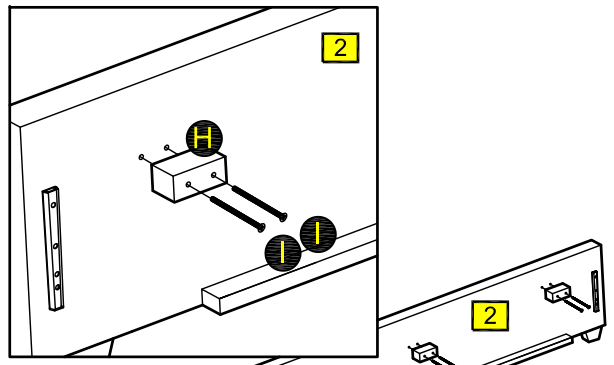

Step 4

Attaching side rails


Connect the Side rail 3 & 4 to Headboard 1 and Footboard 2 as seen in the picture.

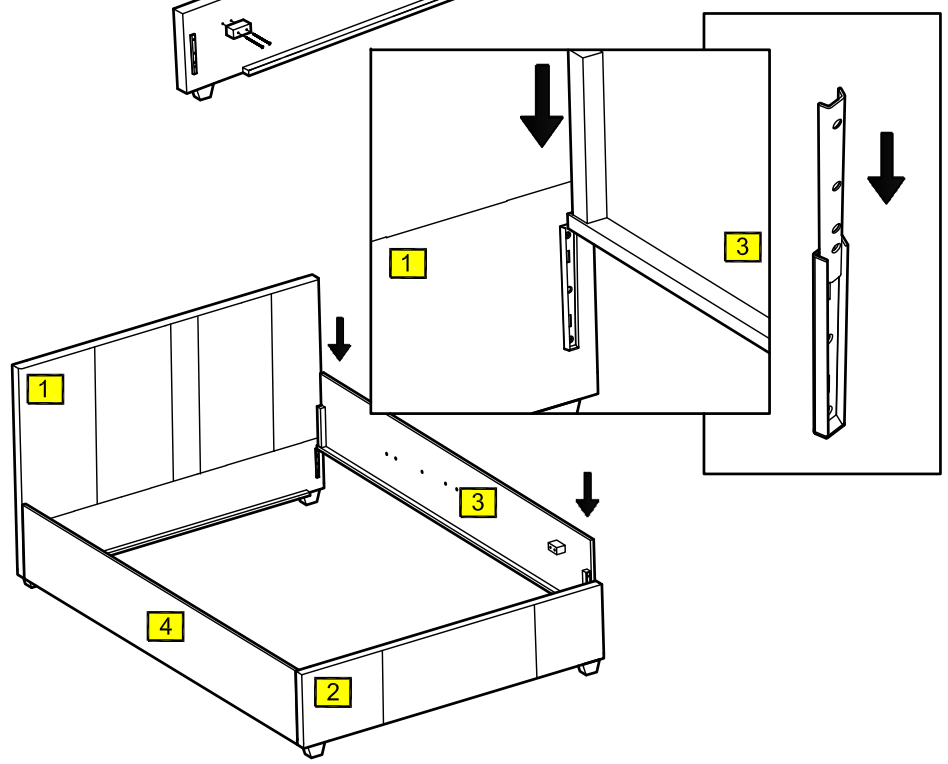

Step 5

Mechanism assembly

Remove the screw and place the piston over the hole, then fix the screw.

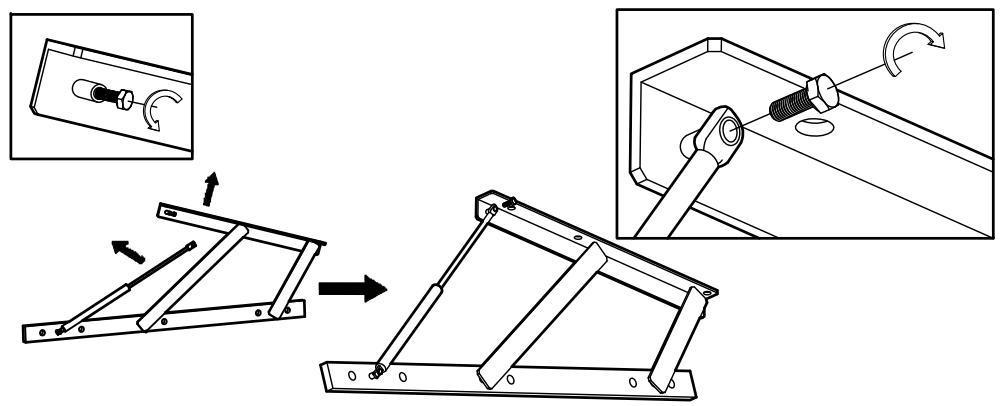


If you need help or have damaged or missing parts,call the **Customer Helpline:** Argos = 0835 6400800


Components - Parts

If you have damaged or missing components, call the **Customer Helpline:** Argos = 0835 6400800


Please check you have all the parts listed below

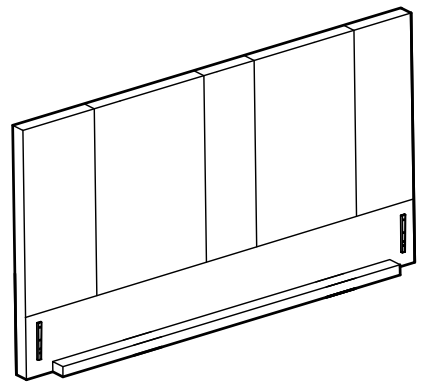


1 Headboard (143x78cm)

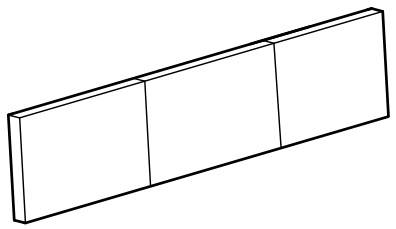

2 Footboard (143x33cm)

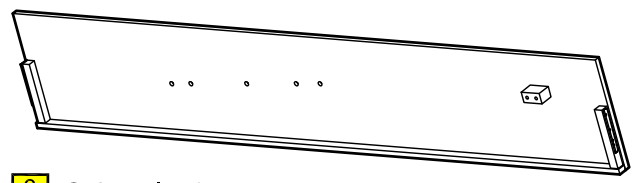


3 Side rail x 1 (194x33cm)

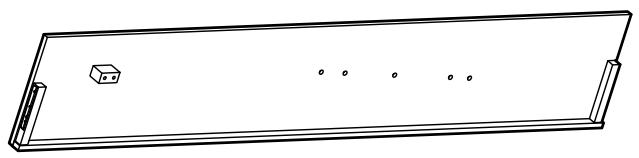


4 Side rail x 1 (194x33cm)



5 Hardboard base panel x 2 (138x64.7cm)

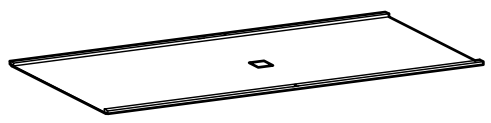

6 Hardboard base central panel x 1 (138x67cm)

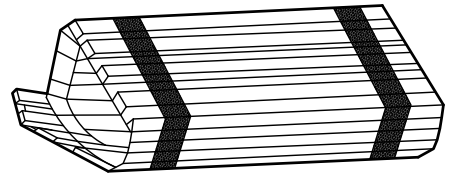

7 Slats (133.5x4.3cm)


Metal frame




8 Middle rail x 1 (184x3cm)



9 Side rail x 1 (190x30cm)

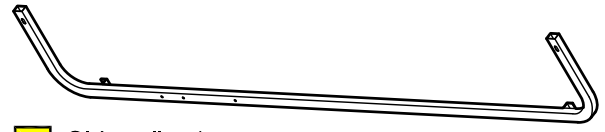


10 Side rail x 1 (190x30cm)




11 Back rail x 1 (87x9cm)



12 Front rail x 1 (87x9cm)



13 Metal Mechanism x 1 (62x9cm)



14 Metal mechanism x 1 (62x9cm)

Assembly Instructions

Step 8

Assembling the bed base

a:Insert Legs (G) into Hardboard central base panel [6] using Screws (J).

b:Place one Hardboard base panel [5] near the Headboard [1] then the Central Hardboard base panel [6].

Then place the second Hardboard base panel [5] near the Footboard [2].

Step 9

Attaching slats

For this stage requires two people.


Roll the slats over the metal frame, then place the end slat after the metal block attached to the Side Rails [9] and [10].

Slats to be rolled out with staples on the underside.


Repeat operation for all 4 corners.


Assembly is now complete.

a:

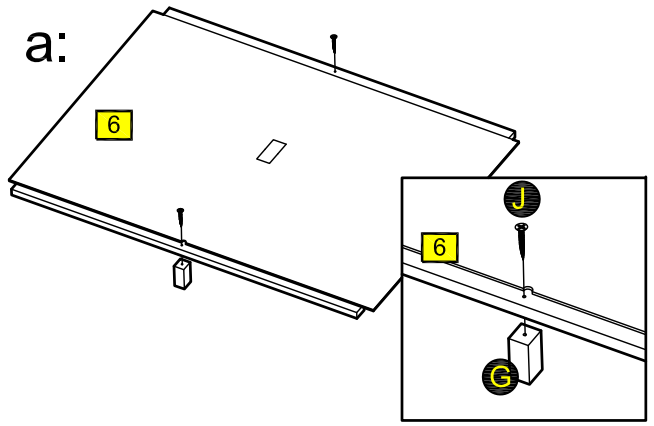

b:

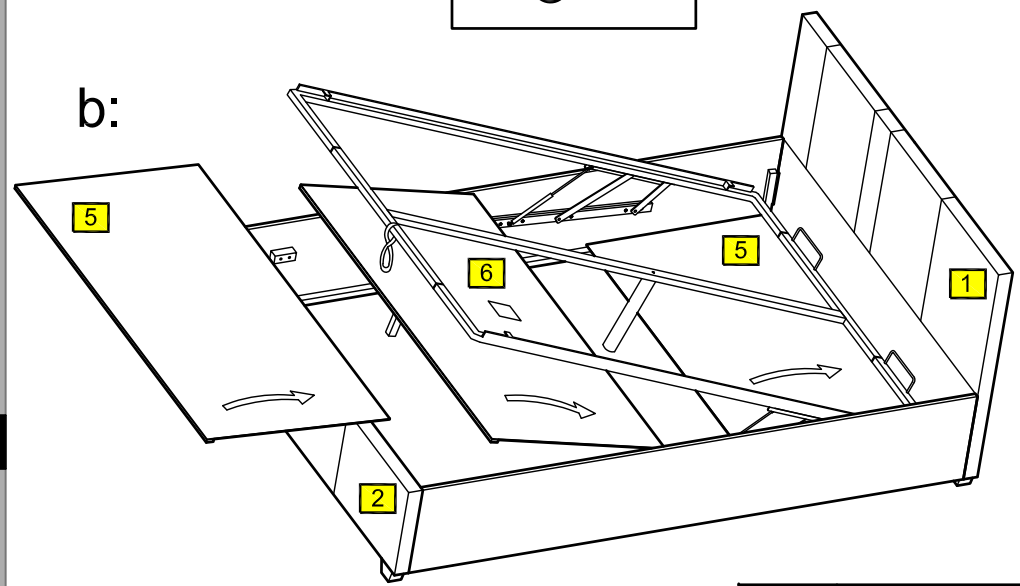

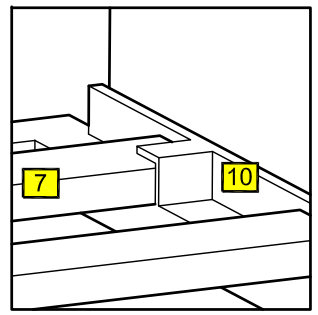

If you need help or have damaged or missing parts,call the **Customer Helpline:** Argos = 0835 6400800


San Diego Ottoman 4FT6

Assembly Instructions - Please keep for future reference

Cat.no 258 / 7954

Cat.no 245 / 6659

Cat.no 266 / 4334

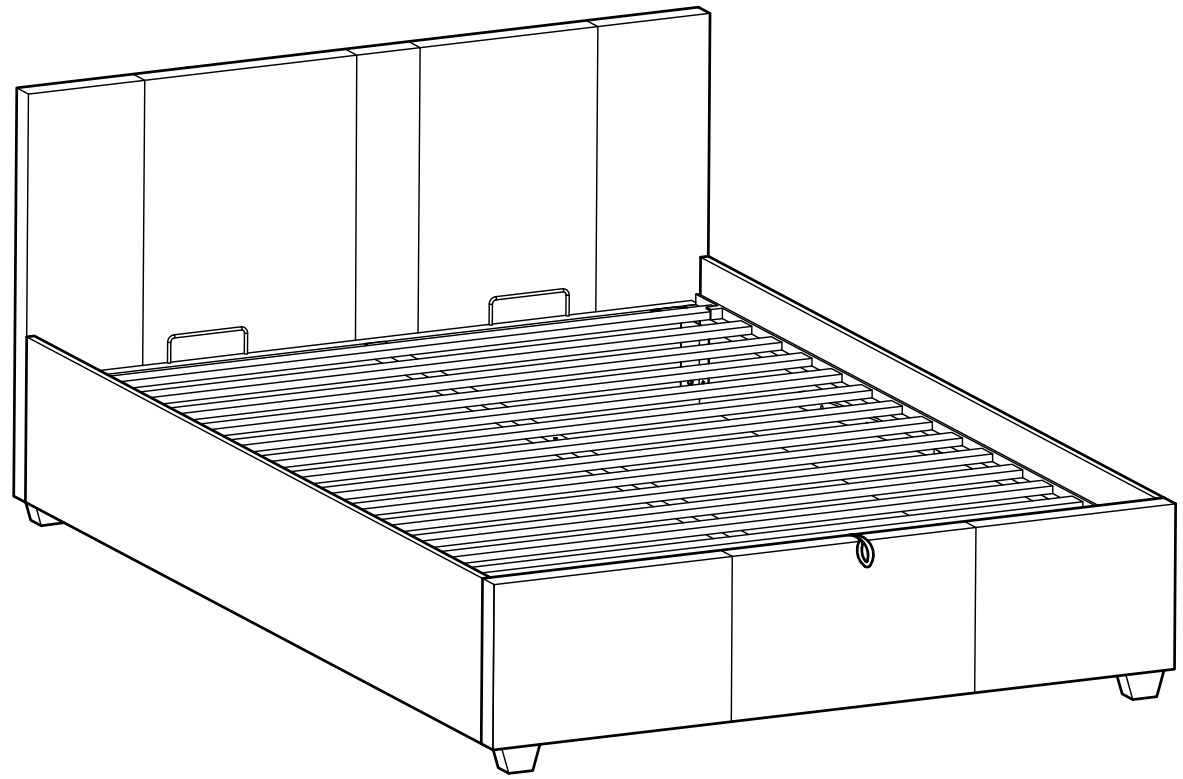

Dimension
Width - 143cm
Length - 206cm
Height - 86cm

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts,call the **Customer Helpline:** Argos = 0835 6400800

Issue 1 - 11/06/14

⚠ Safety and Care Advice

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on pages 2 and 3.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area,small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.
- Do not stand or put weight on the product,this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- We do not recommend the use of power dril/drivers **for inserting screws** as this could damage the unit. Only use hand screwdrivers.
- Dispose of all packaging carefully and responsibly.
- Do not tighten all bolts until bed is fully assembled.

Care and maintenance

- Only clean using a damp cloth and mild detergent,do no use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightend properly.

Note:if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Assembly Instructions


Step 6

Attaching the mechanism


a:Fix the Mechanism 13 & 14 to the Metal Frame by inserting 3 Bolts A through the Mechanism, then through the Side rail 9 and 10.

b:Insert Support leg E through the Middle Rail 8 and secure tightly to right.

b:

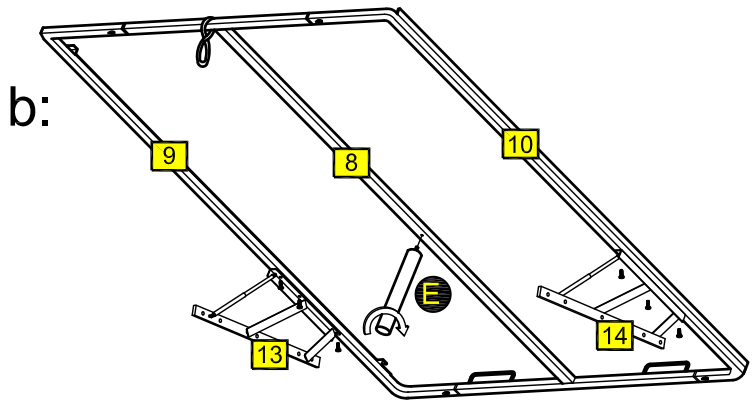

a:

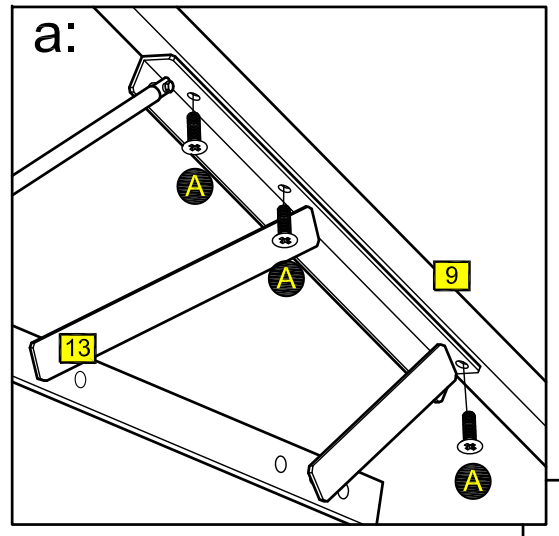

Step 7


Attaching the mechanism to the side rails


Insert 5 Bolts C through the Mechanism 13 & 14 through the Side rail 3 and 4.

For this stage requires two people.

Make the same for the other side.

Now fully tighten all bolts.

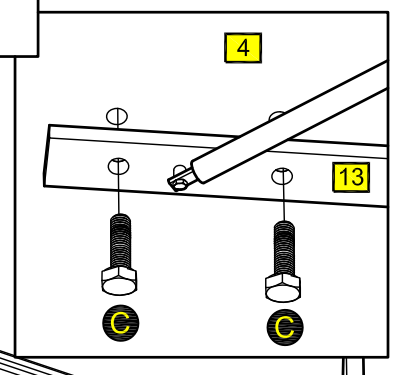








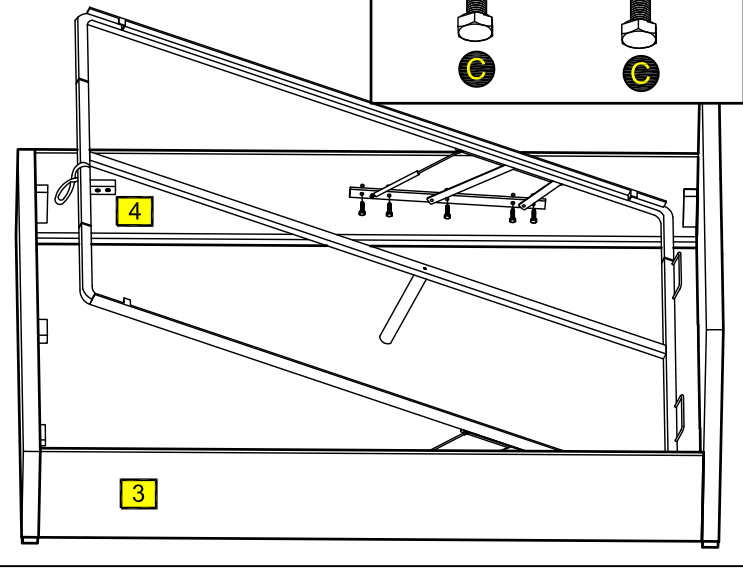


If you need help or have damaged or missing parts,call the **Customer Helpline:** Argos = 0835 6400800


Components - Fittings

Please check you have all the fittings listed bellow


Note: the quantities below are the correct amount to complecte the assembly.In some cases more fittings may be supplied than are required.

A M6x16 mm Bolt x 10 	B Strap x 1 	C M8x35 mm Bolt x 10 
D Leg x 4 	E Support leg x 1 	F M8x50 mm Bolt x 4 
G Base leg x 2 (50x25mm) x 2 	H Frame support (60x30mm) x 2 	I M6x80 mm Bolt x 6 
J 3.5x30 mm Screw x 2 		

Tools required




Screwdriver (Not supplied)

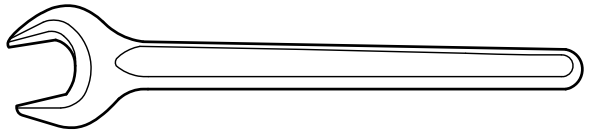

Key hexagonal 13 mm (Not supplied)

Ruler - Use this ruler to help correctly identify the bolts




Assembly Instructions

Step 1

Attaching legs

a:Insert Legs D into Headboard 1 , using Bolt F.

b:Insert Legs D into Footboard 2 , using Bolt F.

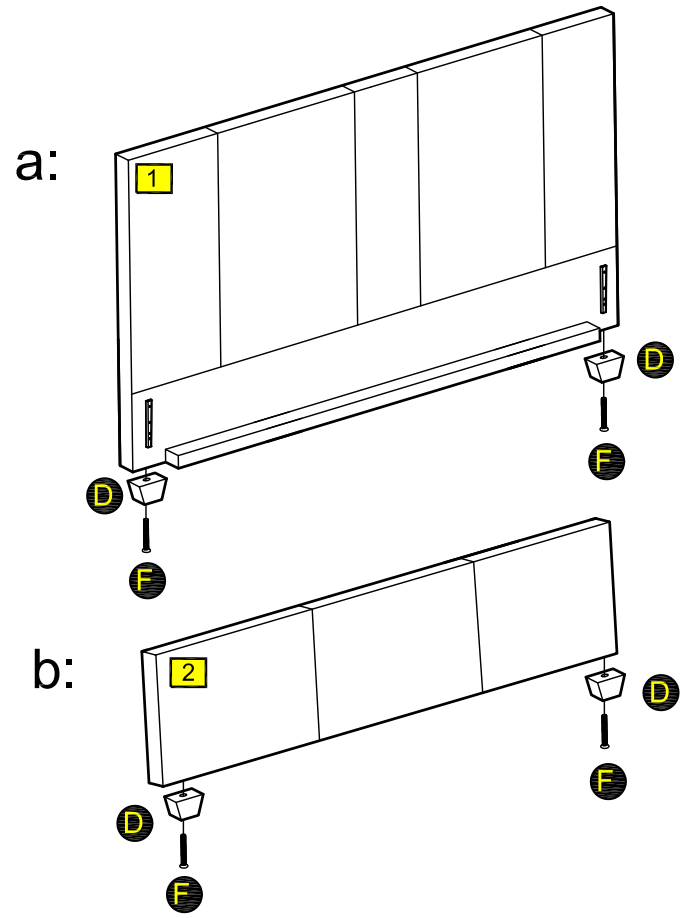

Step 2


Metal frame assembly

a: Attach Strap B.

b:Insert Middle rail 8 into the Front rail 12 and Back rail 11.

Connect the Side 9 & 10 to the Front rail 12 and Back rail 11 with Screws A.

The Middle rails 8 and Side rails 9 & 10 must be positioned with the holes closer to the Back rail 11.

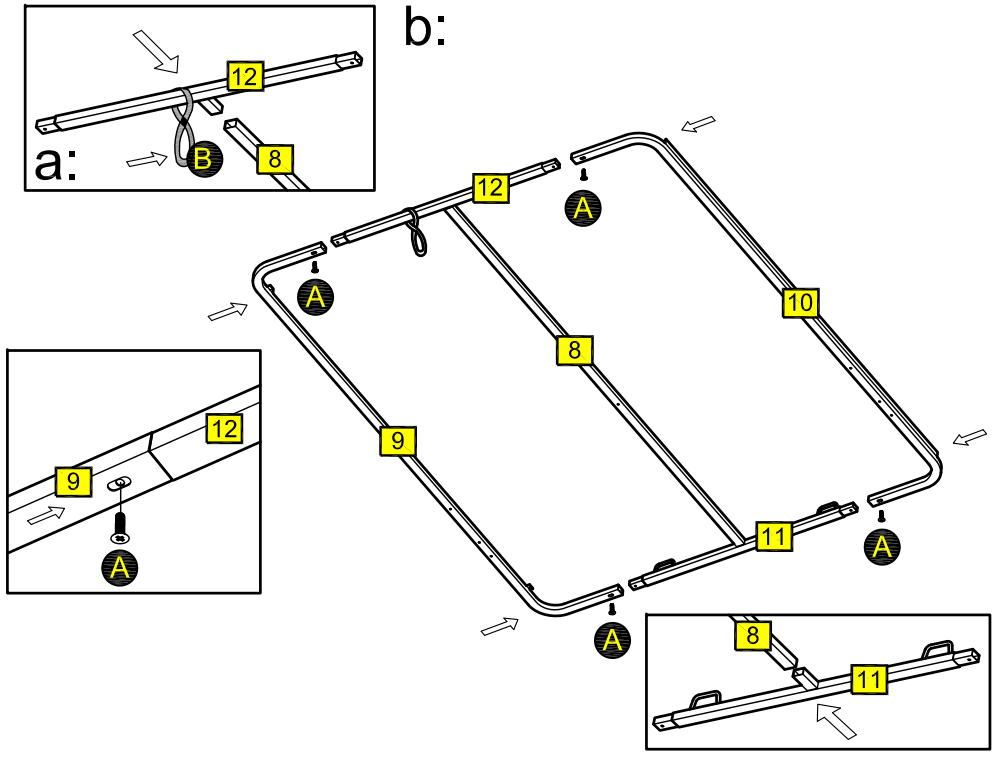


If you need help or have damaged or missing parts,call the **Customer Helpline:** Argos = 0835 6400800

Assembly Instructions

Step 3

Attaching stop mattress


Insert Frame supports H into Footboard 2 using Bolts I.

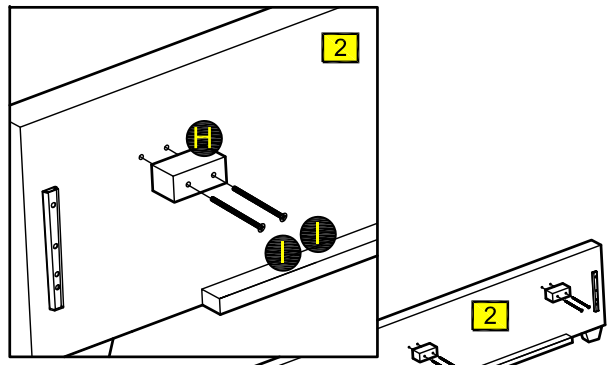

Step 4

Attaching side rails


Connect the Side rail 3 & 4 to Headboard 1 and Footboard 2 as seen in the picture.

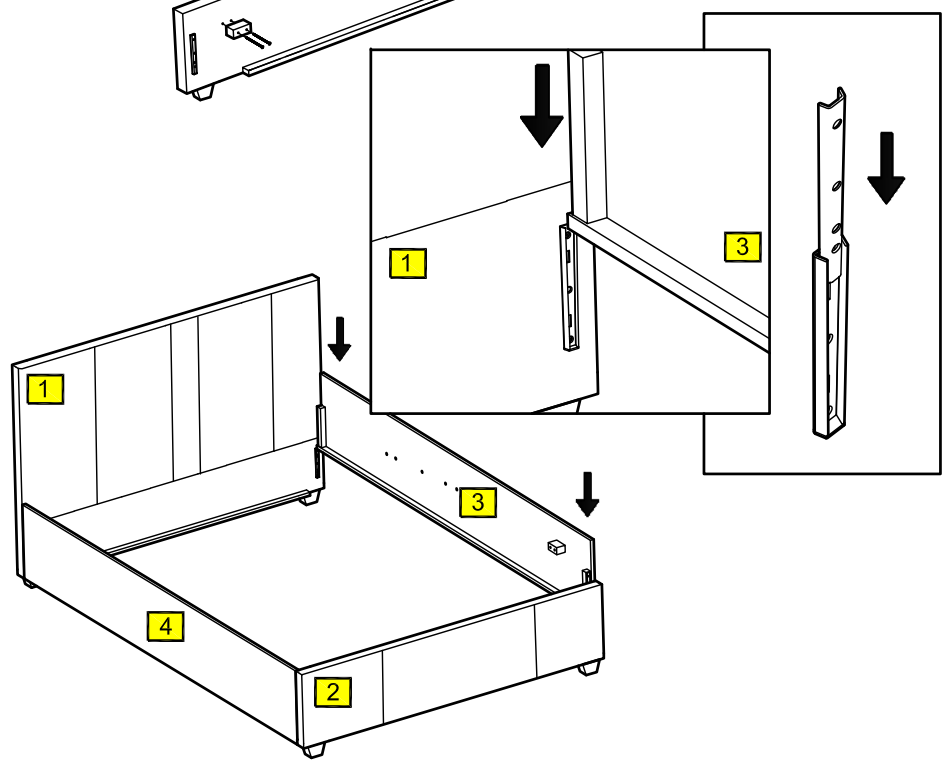

Step 5

Mechanism assembly

Remove the screw and place the piston over the hole, then fix the screw.

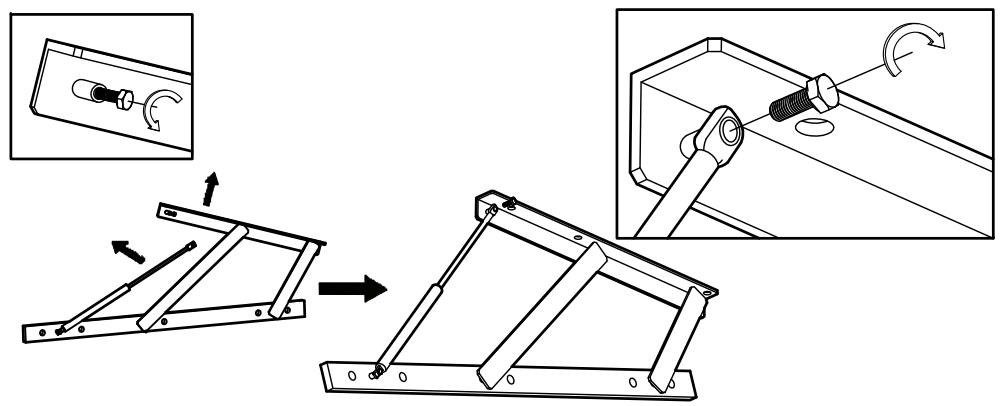


If you need help or have damaged or missing parts,call the **Customer Helpline:** Argos = 0835 6400800


Components - Parts

If you have damaged or missing components, call the **Customer Helpline:** Argos = 0835 6400800


Please check you have all the parts listed below

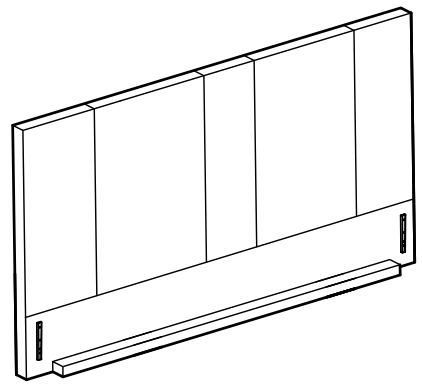


1 Headboard (143x78cm)

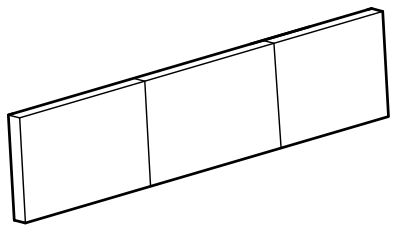

2 Footboard (143x33cm)

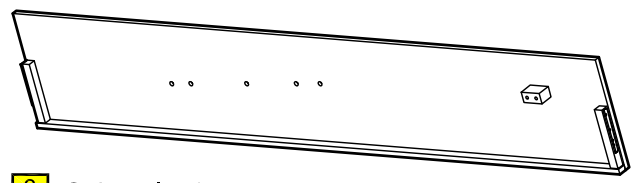


3 Side rail x 1 (194x33cm)

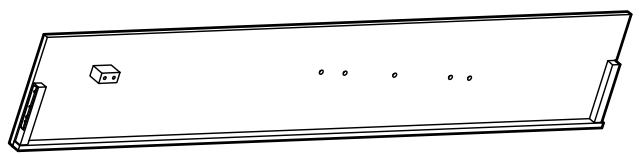


4 Side rail x 1 (194x33cm)



5 Hardboard base panel x 2 (138x64.7cm)

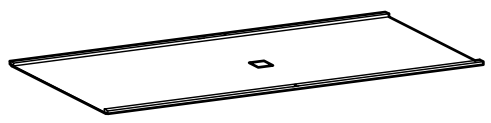

6 Hardboard base central panel x 1 (138x67cm)

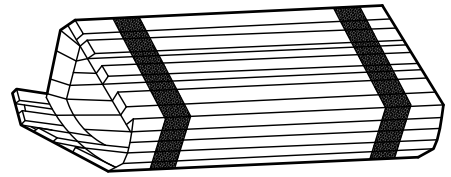

7 Slats (133.5x4.3cm)


Metal frame




8 Middle rail x 1 (184x3cm)



9 Side rail x 1 (190x30cm)

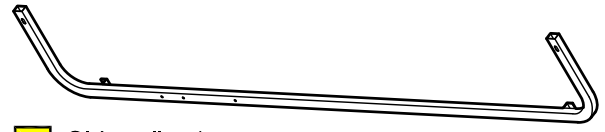


10 Side rail x 1 (190x30cm)




11 Back rail x 1 (87x9cm)



12 Front rail x 1 (87x9cm)



13 Metal Mechanism x 1 (62x9cm)



14 Metal mechanism x 1 (62x9cm)