
Wiltshire- Bedside Chest 2 Drawers

Assembly Instructions - Please keep for future reference

2626286
2478843
2572608

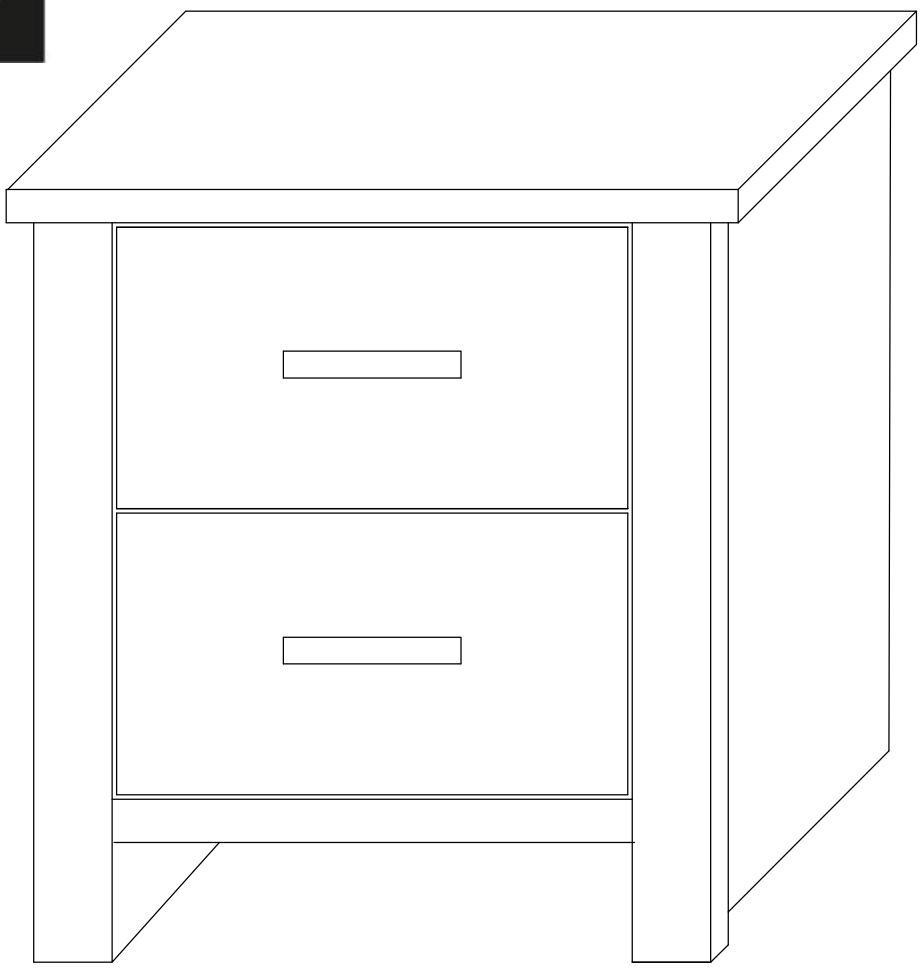

Dimensions

Width - 49.7cm
Depth - 42.5cm
Height- 52.2cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400 800

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (- in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints


• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten bolts.

• Regularly check and ensure that all bolts and fittings are tightened properly.


Components - Panels

If you have damaged or missing commponents, call the Customer Helpline: 03456 400 800


Please check you have all the panels listed below

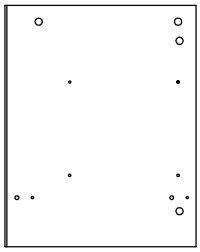


1 **Right side panel x 1 (39.5 x 49.9cm)**

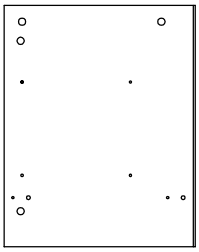

2 **Left side panel x 1 (39.5 x 49.9cm)**

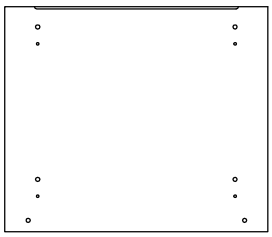


3 **Top panel x 1 (49.7 x 42.5cm)**



4 **Bottom front support x 1 (35.7 x 7.1cm)**




5 **Bottom back support x 1 (35.7 x 7.1cm)**




6 **Back panel x 1 (37.7 x 41.8cm)**



7 **Right hinge frame x 1 (5.3 x 49.9cm)**



8 **Left hinge frame x 1 (5.3 x 49.9cm)**




9 **Bottom plinth x 1 (35.6 x 2cm)**



11 **Right drawer side x 2 (35 x 10cm)**




12 **Left drawer side x 2 (35 x 10cm)**




15 **Handle x 2 (10.5 x 1.9cm)**



18 **Small drawer back x 2 (31.3 x 10cm)**

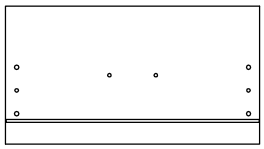

19 **Small drawer front x 2 (35 x 19cm)**











20 **Small drawer base x 2 (31.7 x 33.9cm)**


Components - Fittings

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A  Feet x 4	**B**  8/30mm Wooden dowel x 16	**C**  6/30mm Wooden dowel x 8
D  Nail x 20	**E**  Screw x 17	**F**  9mm Screw x 8
G  Large locking nut x 13	**H**  Small locking nut x 4	**J**  Plastic dowel x 8
K  20mm Screw x 8	**L**  Runner left A x 2	**M**  Runner left B x 2
N  Runner right B x 2	**R**  Runner right A x 2	**S**  30mm Screw x 4
Z4  12mm Screw x 4		


Tools required



Phillips screwdriver (medium & large)



Hammer




Flatblade screwdriver (medium)



Ruler/tape measure

Ruler - Use this ruler to help correctly identify the screws

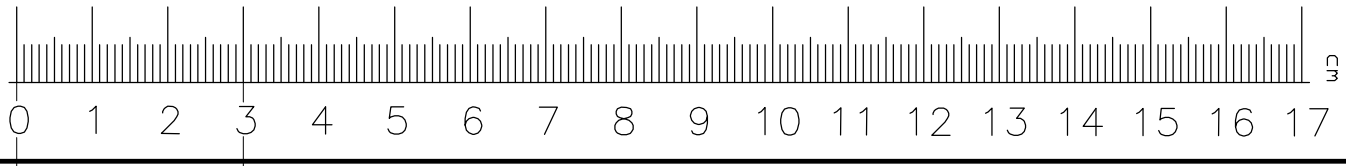



The screws length is measured from the head to the point (30mm screw shown)

Assembly Instructions


Step 1

Attaching runners

a: Position left runners A (L) and right runners A (R) on to the drilled holes of the left and right side panels 1 and 2.

Fix through holes shown using screws (F).


b: Attaching feet
Position plastic feet (A) to the left and right side panels 1 and 2 from below and fix them using the hammer.

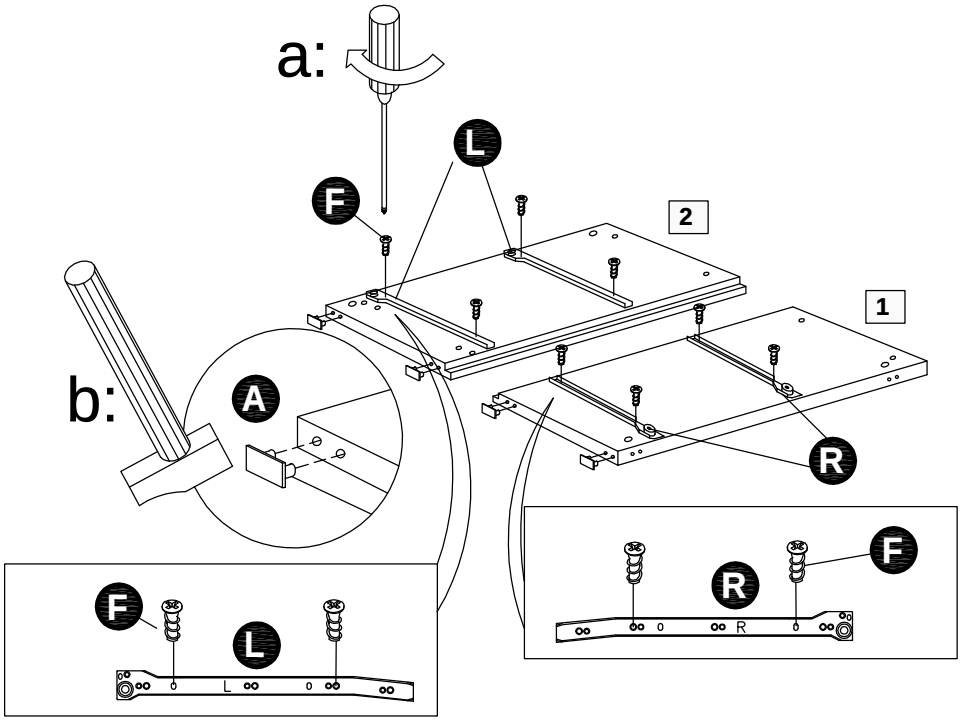

Step 2

Preparation for the attaching of bottom supports

Insert screws (E) into the drilled holes of the left and right side panels 1 and 2.

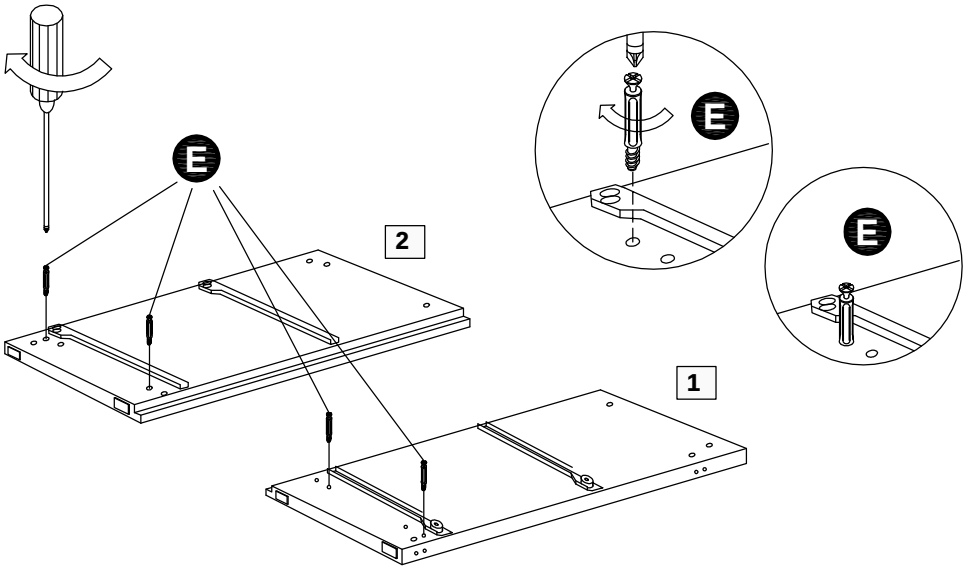


Step 3

Attaching the bottom supports

Insert wooden dowels (B) into the bottom front and back support 4, 5 and place on left and right side panels 1, 2.


Align correctly and insert large locking nuts (G) and turn them clockwise to lock.

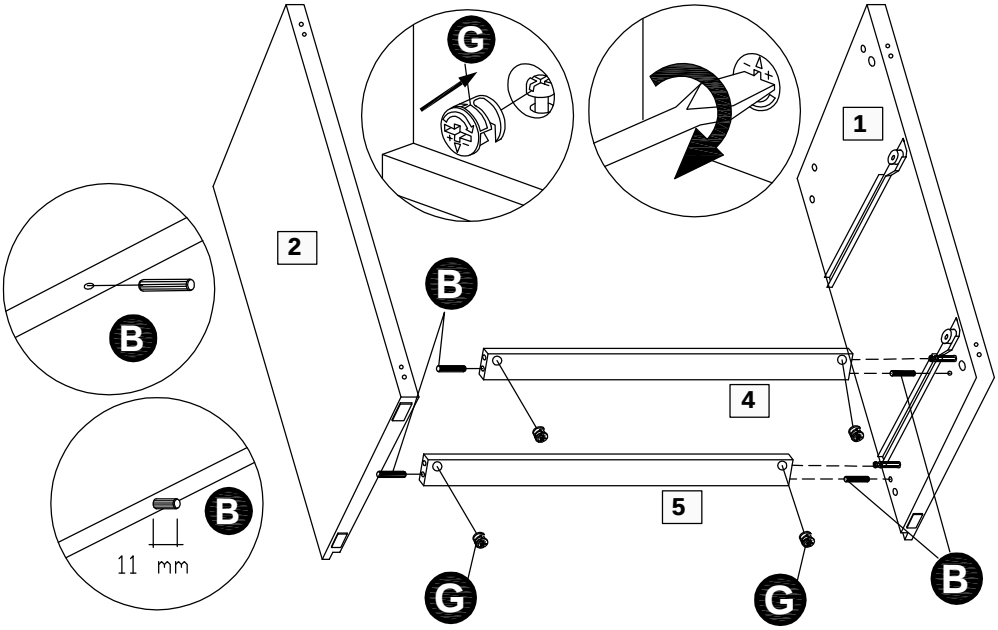

Assembly Instructions


Step 4

Frame assembly
Insert screws E in to the frames 7 , 8 , 9 .

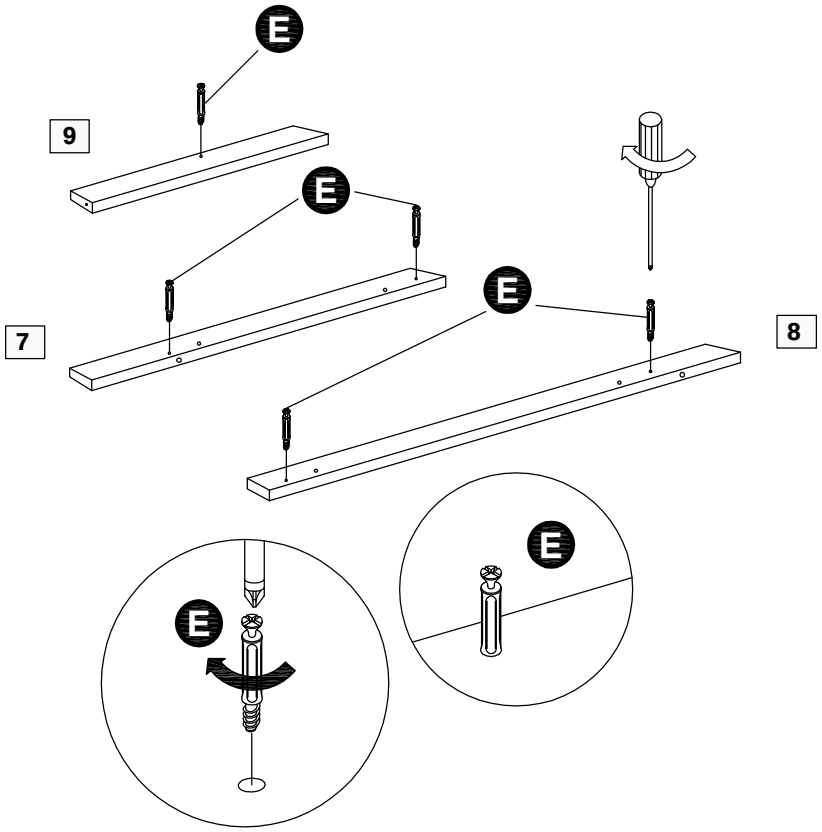

Step 5

Insert wooden dowels B as shown, align correctly and connect the frames 7, 8 and 9 as shown on the picture.

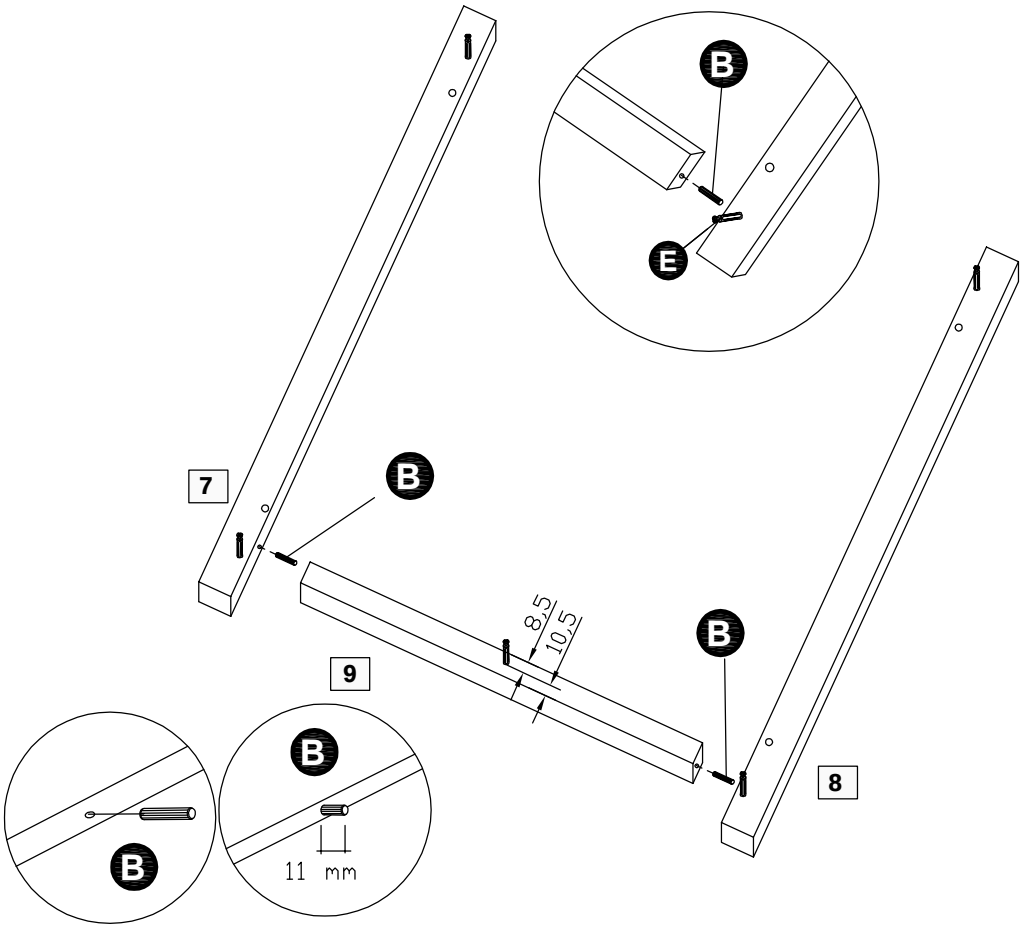


Assembly Instructions

Step 6

Attaching the frame


Insert wooden dowels B into the edge of the left and right side panels 1 , 2 .
Align correctly and insert large locking nuts G into left and right side panels 1 , 2 and bottom front support 4 , place the frame and turn locking nuts clockwise to lock.

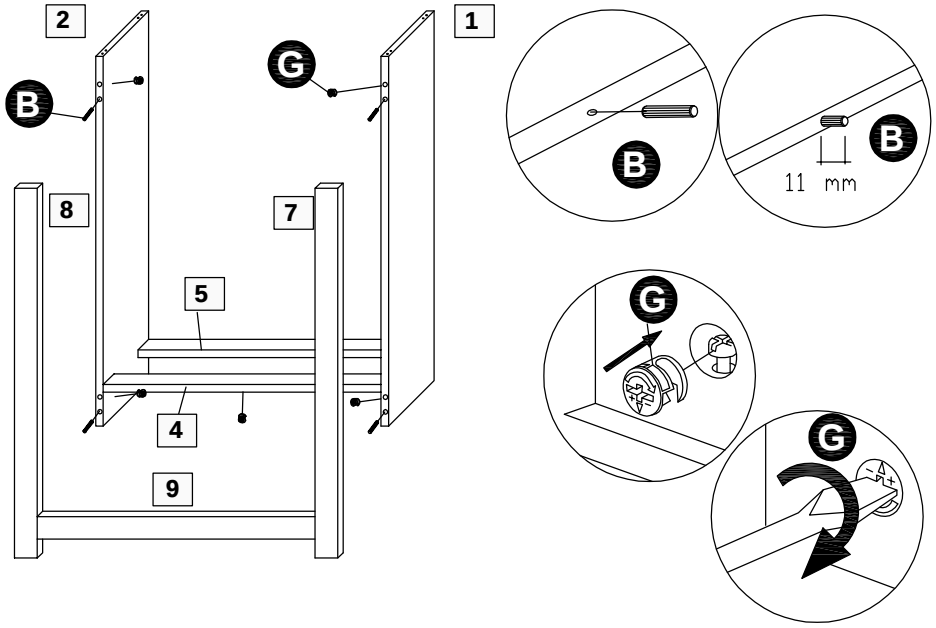

Step 7

Attaching top panel

Insert screws E into the drilled holes of the top panel 3 .
Insert wooden dowels B into the top edges as shown, align correctly and insert large locking nuts G into left and right side panels 1 and 2 , place the top panel 3 and turn locking nuts clockwise to lock.

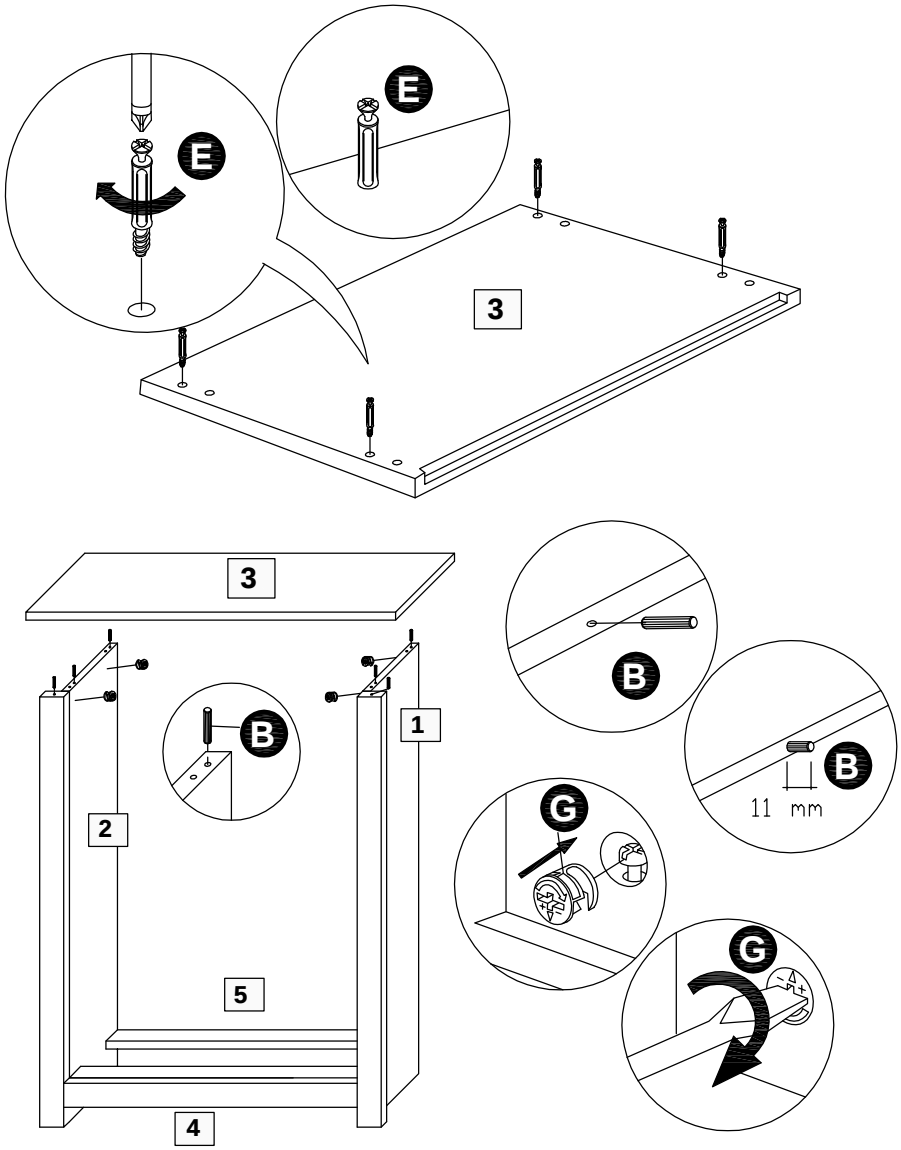


Assembly Instructions


Step 8

Attaching back panel

Position back panel [6] in position on the back of bedside chest. Position nails (D) 5 mm in from side edge of the back panel [6] with distance 100 mm between each other. Fix them using the hammer.

***Note:* You must ensure the bedside chest is square before attaching the back panel.**

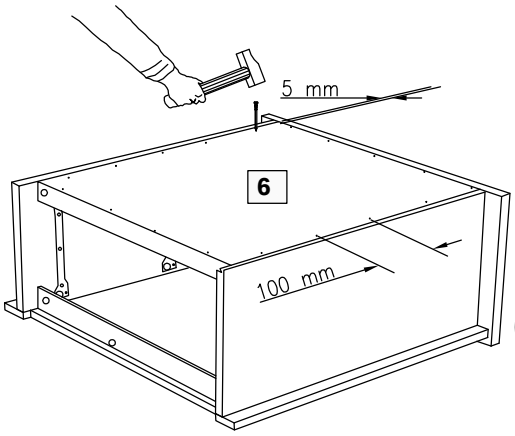


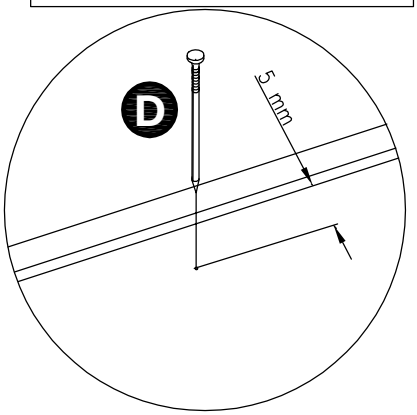


Step 9

Drawer assembly


a: Insert screws (E) into drawer front [19].

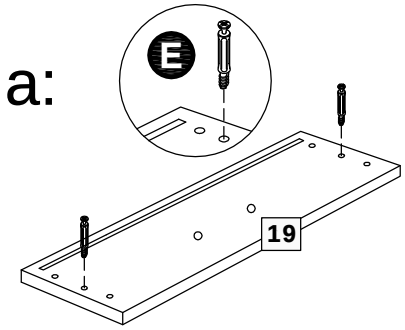


b: Insert wooden dowels (C) into left and right drawer sides [11] , [12] .

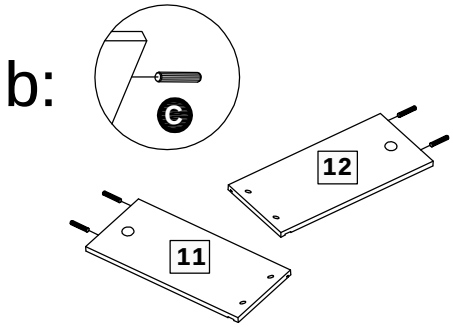


c: Insert plastic dowels (J) into left drawer side [12] and drawer back [18] and fix it together using the hammer.

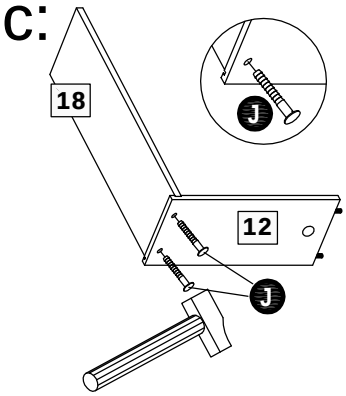


d: Insert plastic dowels (J) into right drawer side [11] and drawer back [18] and fix it together using the hammer.

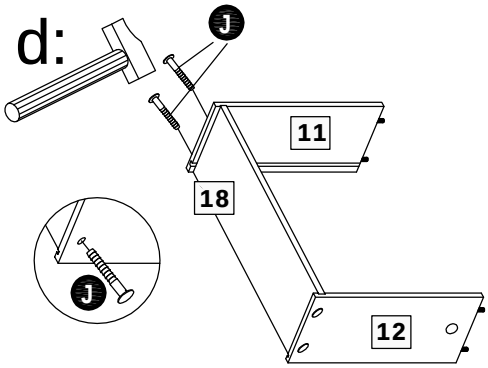

e: Slide drawer base [20] into the grooves.

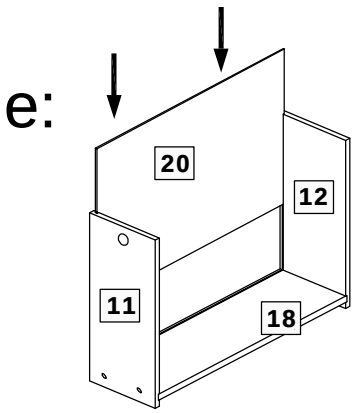

f: Place drawer front [19] onto sides.

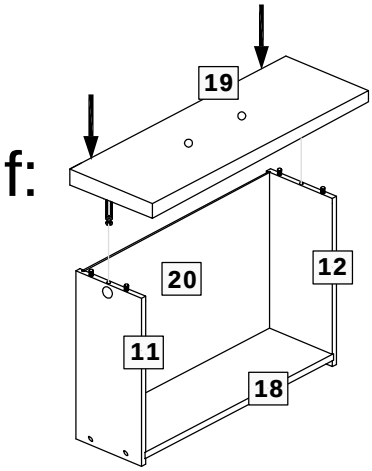


continued on next page

Assembly Instructions

Step 9 - continued


g: Align correctly and insert small locking nuts (H) into left and right drawer sides [11], [12] and turn them clockwise to lock.

g:

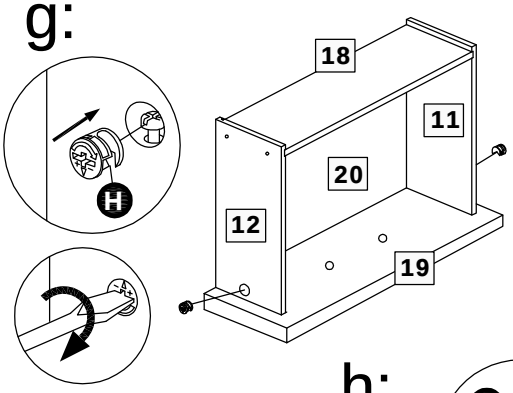

h: Position left and right runners B (M), (N) on to left and right drawer sides [11], [12], fix using screws (K).


h:

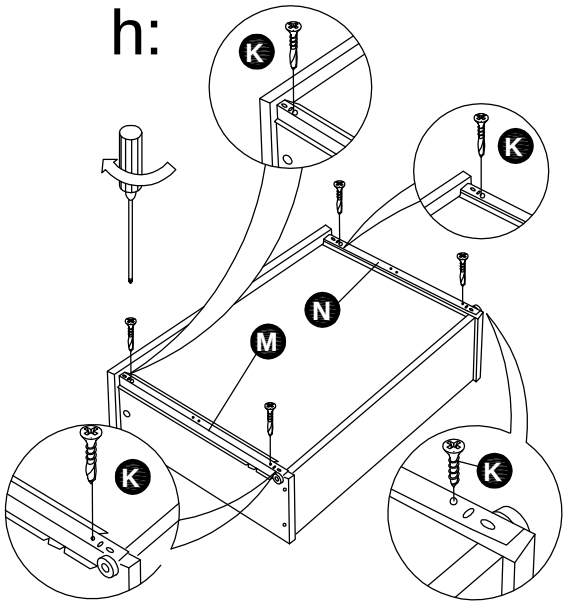

i: All drawers: Attach handles [15] to drawer fronts using screws (S).

Repeat assembly for the remaining drawers.

i:

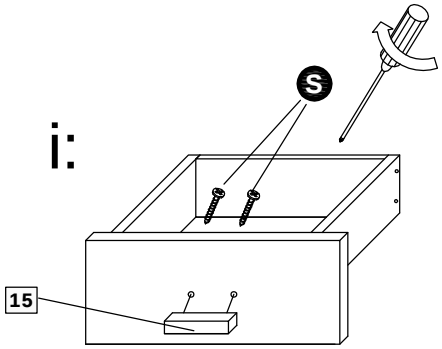


Step 10

Inserting drawers

Insert the drawers moving up and down as shown and ensure that wheels fit onto left and right runners (L), (R).

Check the gaps between the drawers and if they line up, assembly is complete.

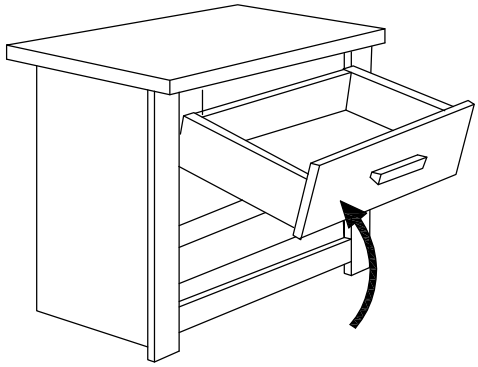


Assembly Instructions

Step 11

Drawer runner adjustment

To move drawers up or down: loosen screws (F) as shown and move runners (R),(L) up or down as required.
Retighten screws (F) and fix the runners (R),(L) using screws (Z)4.

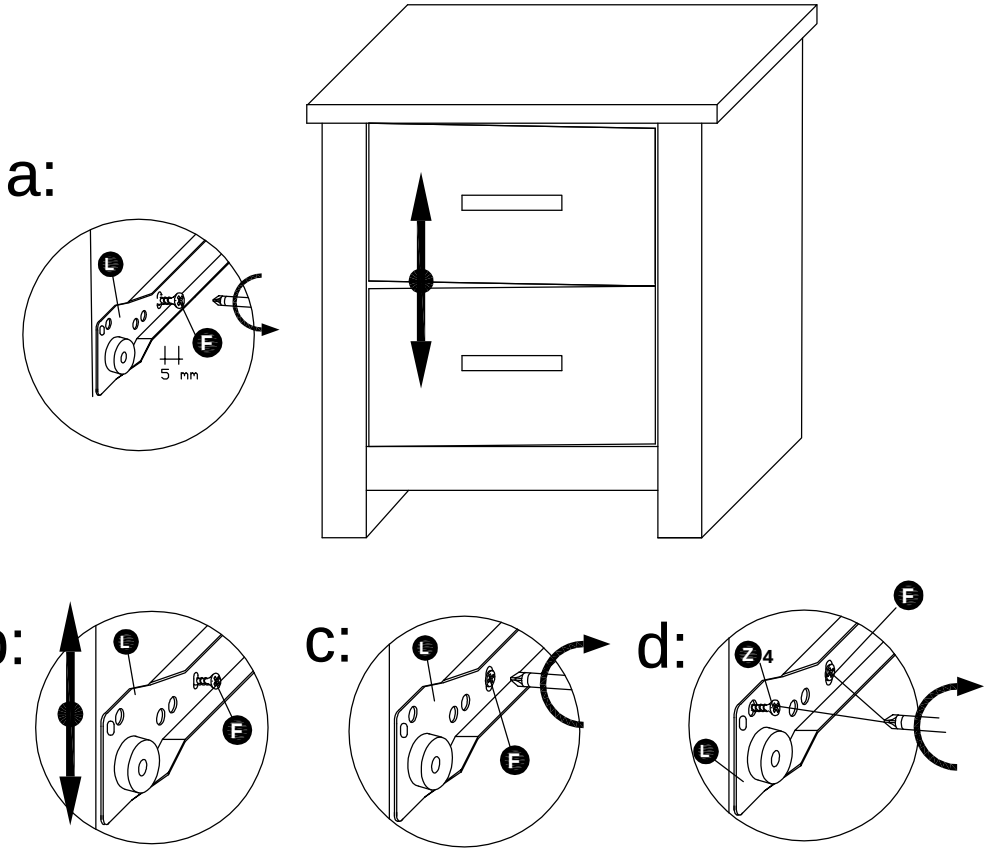

Assembly is complete.