
HOH TOLLERTON WOODEN KITCHEN TROLLEY

Assembly Instructions - please keep for future reference

266/3304

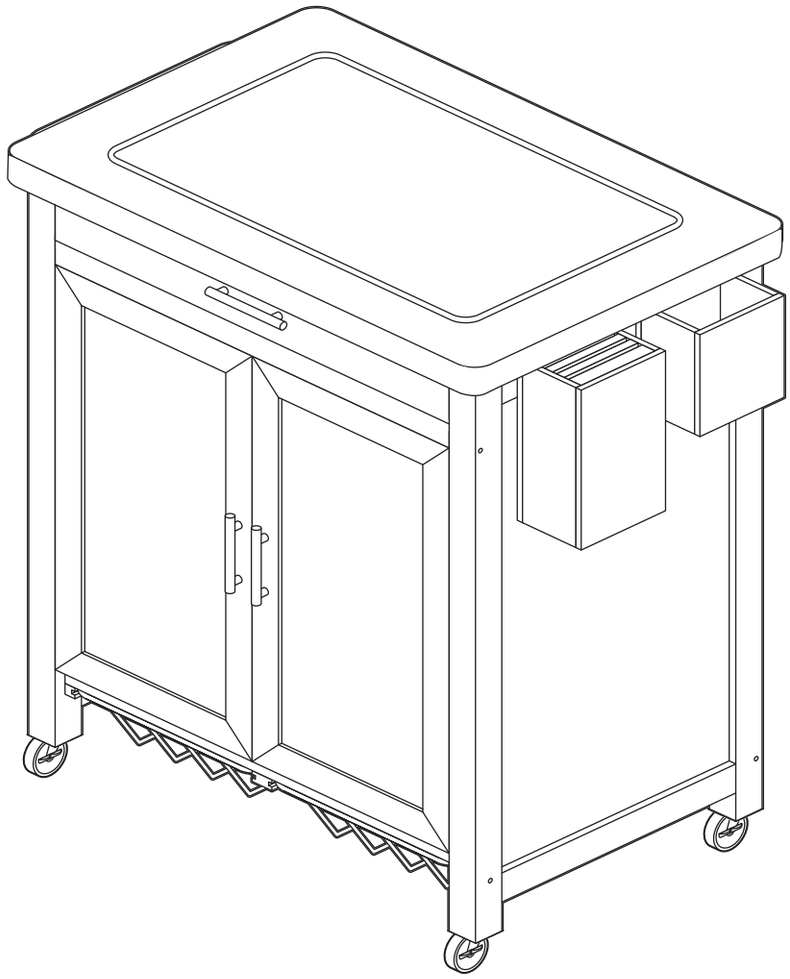

Dimensions

Width - 83cm
Depth - 48cm
Height - 89cm

Important – Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400 800

Issue 3 - 09/05/14

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed opposite.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• Dispose of all packaging carefully and responsibly.

Care and maintenance


• Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Components - Panels


Please check you have all the panels listed below

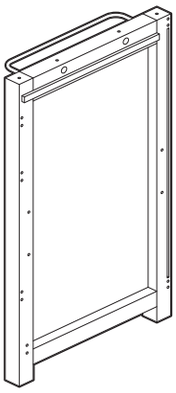


1 Left side x 1
(78.5(h) x 43.5(w)cm)

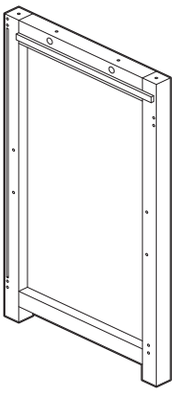


2 Right side x 1
(78.5(h) x 43.5(w)cm)

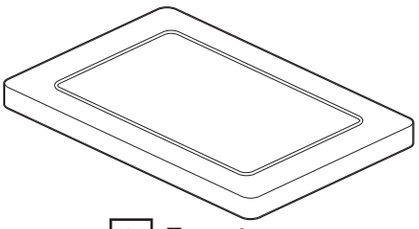


3 Top x 1
(72(w) x 48(d)cm)

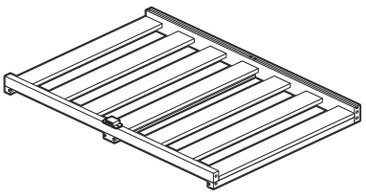

4 Bottom shelf x 1
(59.8(w) x 42(d)cm)

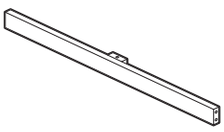

5 Front rail x 1
(4(h) x 59.8(w)cm)

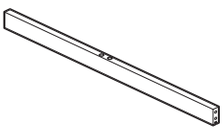


6 Back rail x 1
(4(h) x 59.8(w)cm)




7 Back upright x 1
(60.7(h) x 4(h)cm)




8 Back panel x 2
(61.5(h) x 28.8(w)cm)

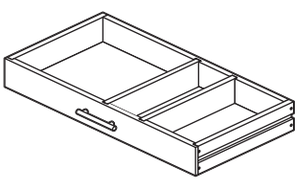


9 Drawer x 1
(59.6(w)cm) x 30(d)cm)

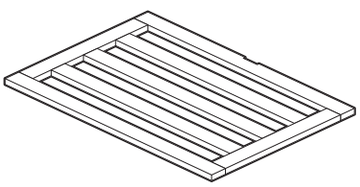


10 Middle shelf x 1
(59.8(w) x 42(d)cm)

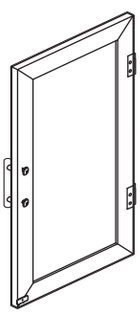


11 Left door x 1
(55.8(h) x 29.6(w)cm)

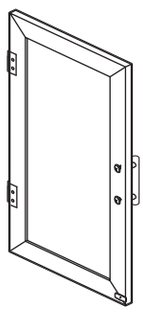


12 Right door x 1
(55.8(h) x 29.6(w)cm)



13 Knife block x 1
(22(h) x 12.8(w) x 9.7(d)cm)



14 Storage box x 1
(14(h) x 12.8(w) x 9.7(d)cm)

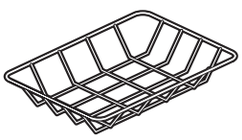







15 Basket x 2
(29.5(w) x 27(d)cm)

Components - Fittings


If you have damaged or missing components, call the Customer Helpline: 03456 400 800

Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

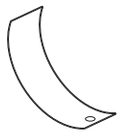
A  60mm Hex bolt x 8		B  Wooden dowel x 20	C  12mm Screw x 9
D  Male Camlock x 4	E  Female Camlock x 4	F  10mm Screw x 1	G  Drawer stopper x 1
H  Castor with brake x 2	I  Castor x 2	J  Hex key x 1	

Tools required



Phillips screwdriver
(medium & large)


Ruler – Use this ruler to help correctly identify the screws



Using Camlocks

Step 1


Connect the male camlock as directed in the assembly instructions using a screwdriver.

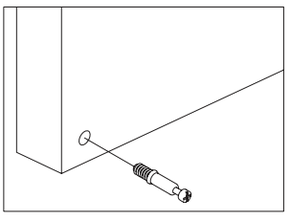

Step 2


Insert the female camlock as shown in the instructions.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

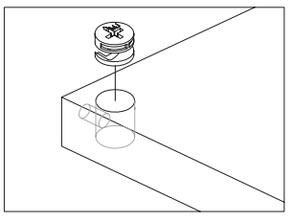

Step 3

Push the male camlock into the entry hole.

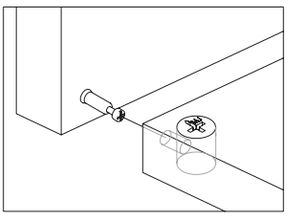


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.


The joint is now secure.

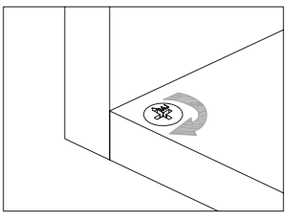

Assembly Instructions

Step 1

Fix 4 x Male camlock Ⓓ into underside of top 3 as shown using a Phillips screwdriver.

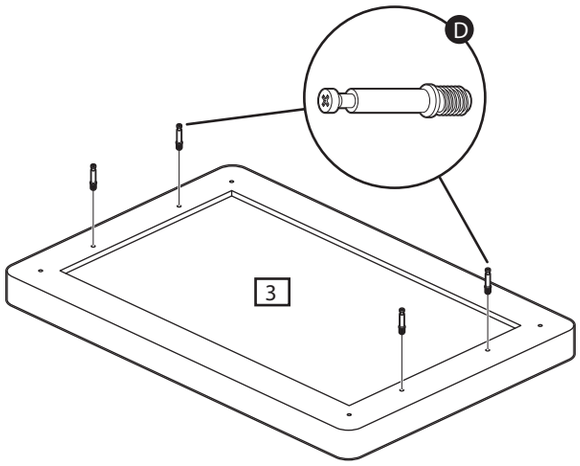


Step 2

Fix 2 x Female camlock Ⓔ into left side panel 1 and right side panel 2 as shown.


Note:

ensure that the arrow on top of the camlock points towards the entry hole for the male camlock.
Please refere to the “Using Camlocks” section for further assistance.

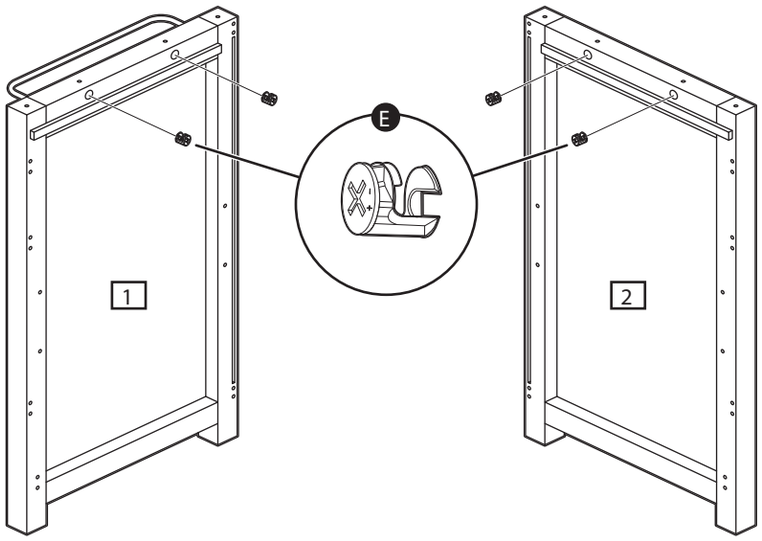

Step 3


Connect bottom shelf 4 and back rail 6 to back upright 7 using 4 x wooden dowel Ⓑ as shown.

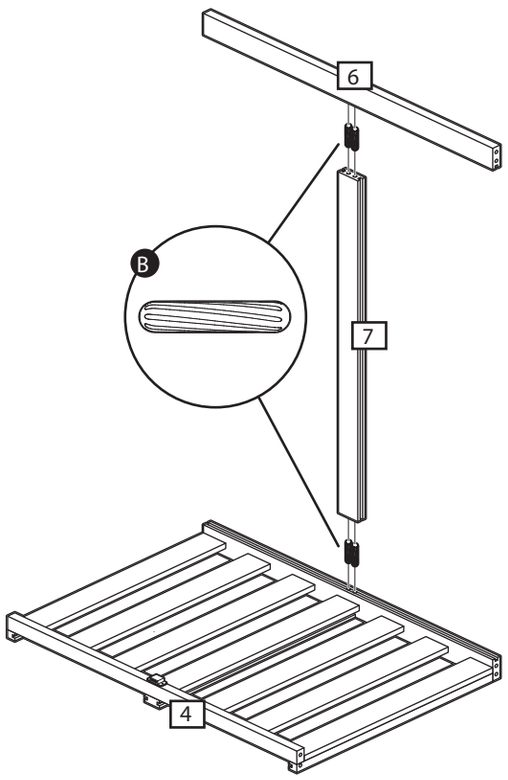

Assembly Instructions

Step 4


Slide 1 x back panel [8] into the left end slots of bottom shelf [4] and back rail [6] as shown.

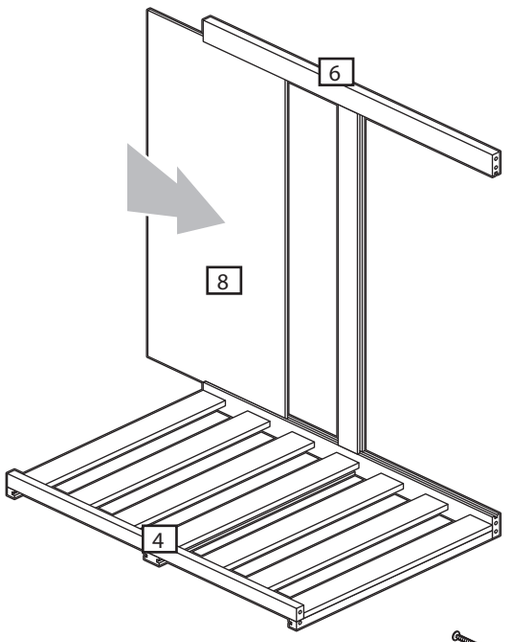

Step 5


Connect assembly completed at Step 4 to left side [1] using 3 x wooden dowel (B) and 3 x 60mm hex bolt (A) as shown. Use Hex Key (J) provided to do this

Connect front rail [5] to left side [1] using 1 x wooden dowel (B) and 1 x 60mm hex bolt (A) as shown. Use Hex Key (J) provided to do this

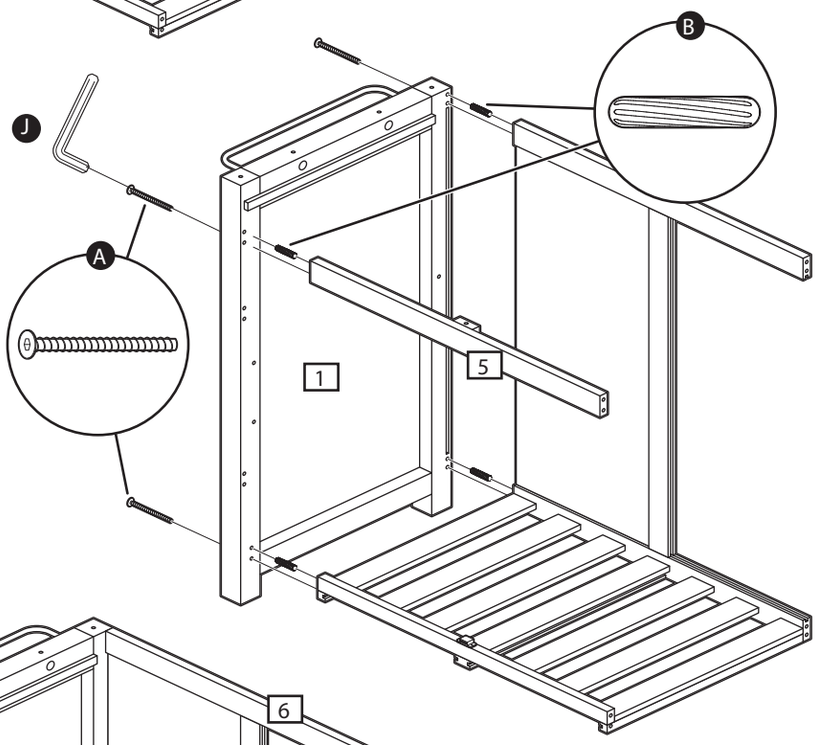

Step 6


Slide 1 x back panel [8] into the right end slots of bottom shelf [4] and back rail [6] as shown.

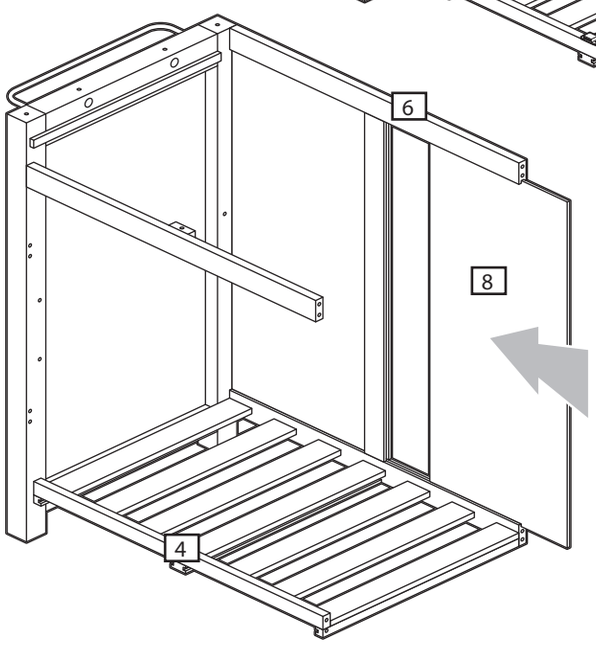

Assembly Instructions

Step 7

Connect right side [2] to exposed ends of assembly and front rail [5] using 4 x wooden dowel (B) and 4 x 60mm hex bolt (A) as shown using Hex Key (J) supplied

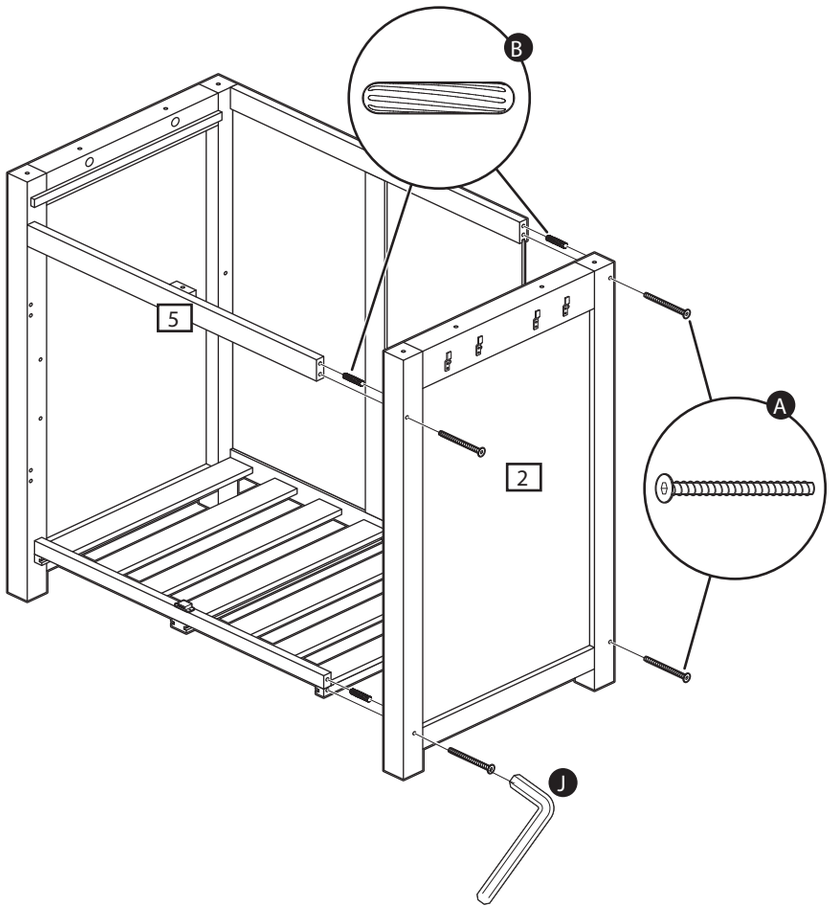

Step 8

Connect drawer stopper (G) to front rail [5] using 1 x 10mm screw (F) as shown (a:).


Note: the loose end of the drawer stopper must point upwards and towards the back of the unit.

Connect top [3] to assembly using 4 x wooden dowel (B) as shown.

Push the male Camlock into the the adjacent entry hole

Turn the femal camlock clockwise with a screw driver. You should feel a click when the camlock is locked in place


The joint is now secure

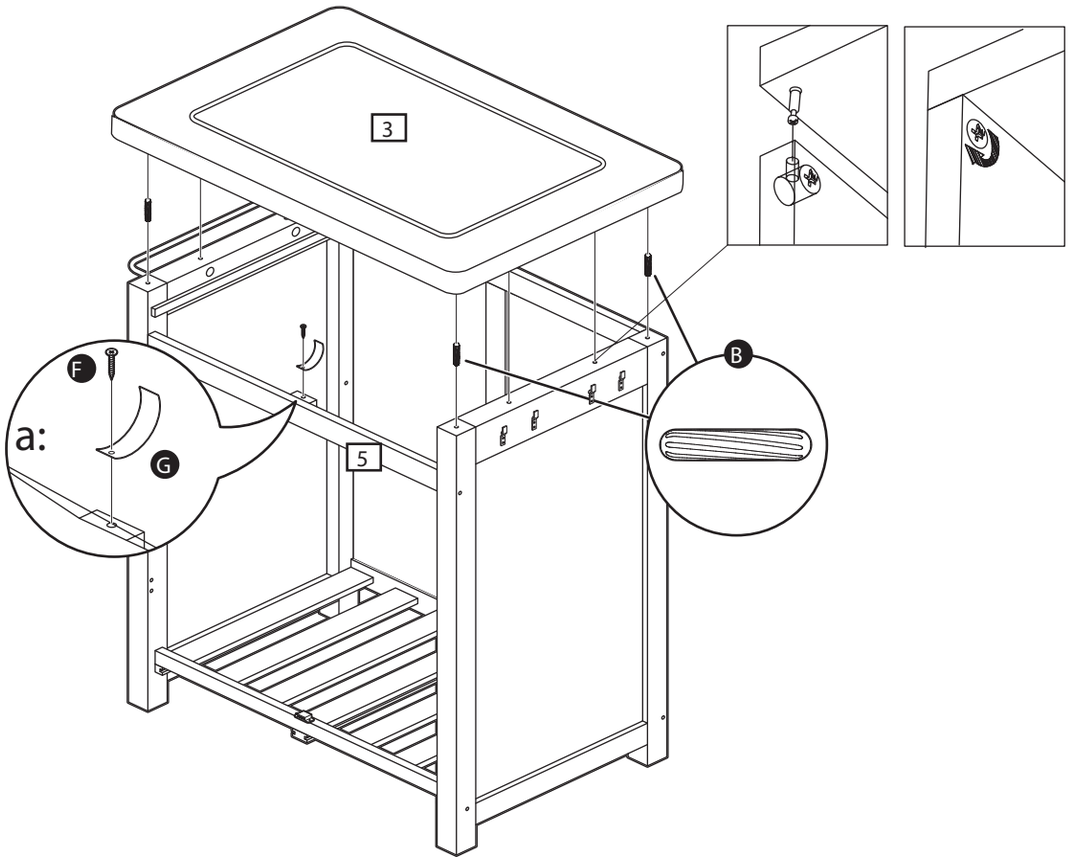

Assembly Instructions

Step 9


Insert the drawer [9] as shown.

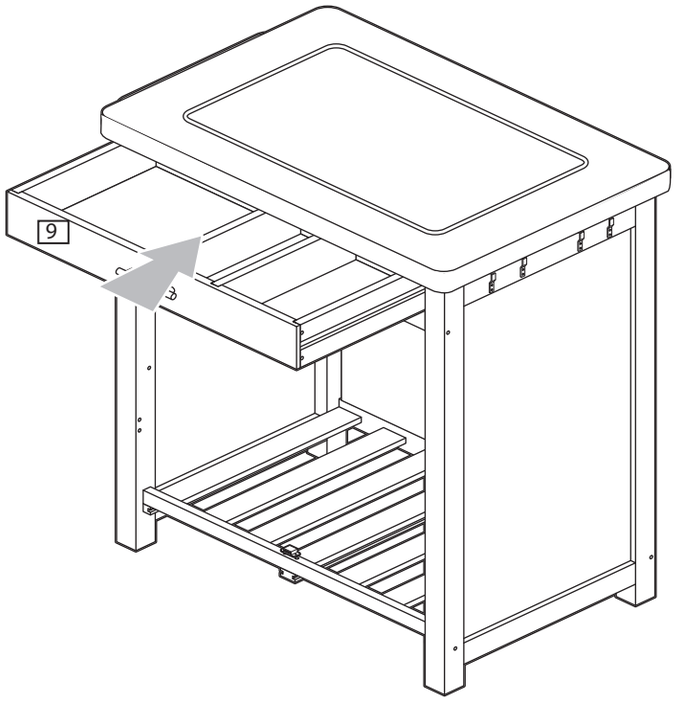

Step 10

Connect left door [11] using 4 x 12mm screws C


Repeat for right door [12]. as shown.

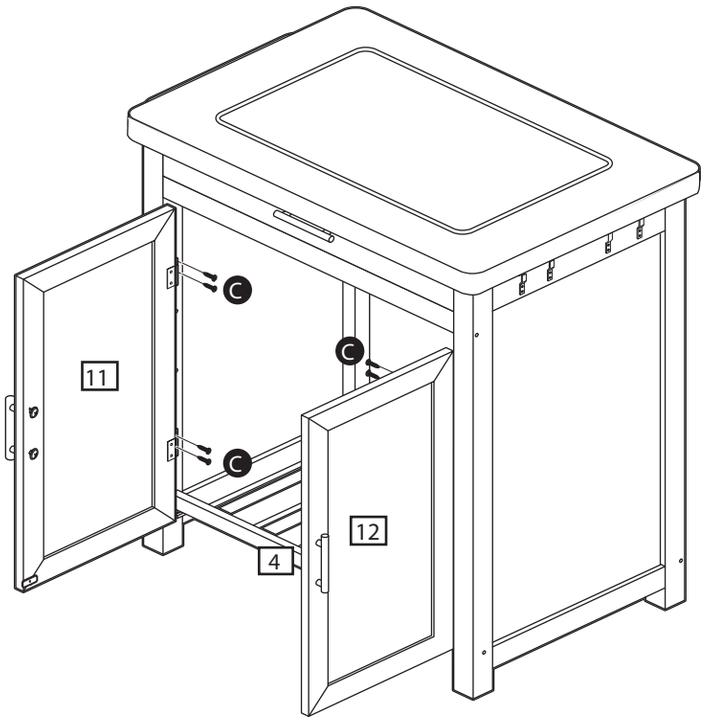

Assembly Instructions

Step 11


Insert 4 x wooden dowel Ⓑ into holes inside unit and set middle shelf [10] on them as shown.

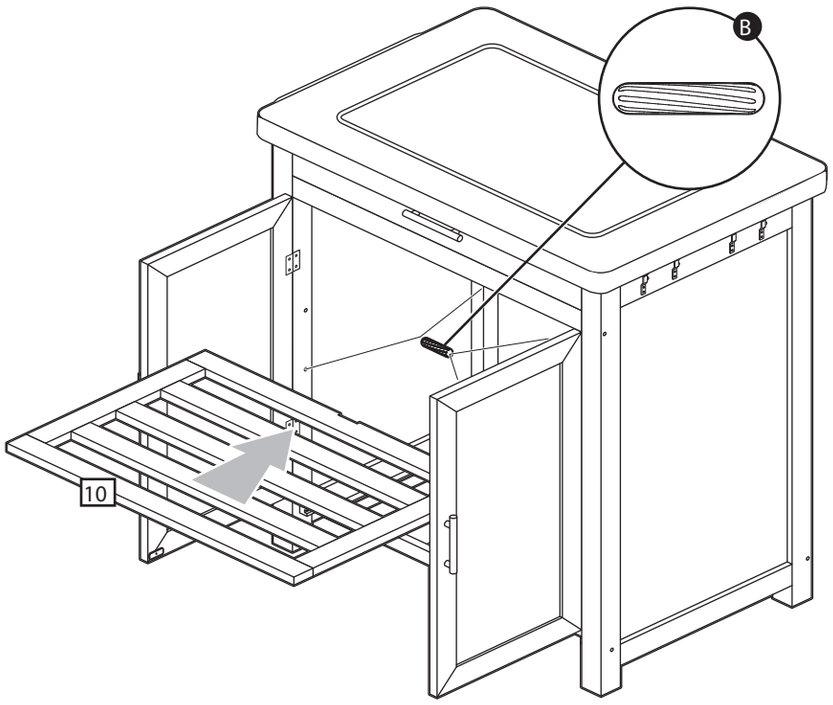

Step 12

Warning:
The unit is heavy. Ask someone to help you with this step.


Insert 2 x castor with brake Ⓗ and 2 x castor Ⓘ into bottom of legs as shown.

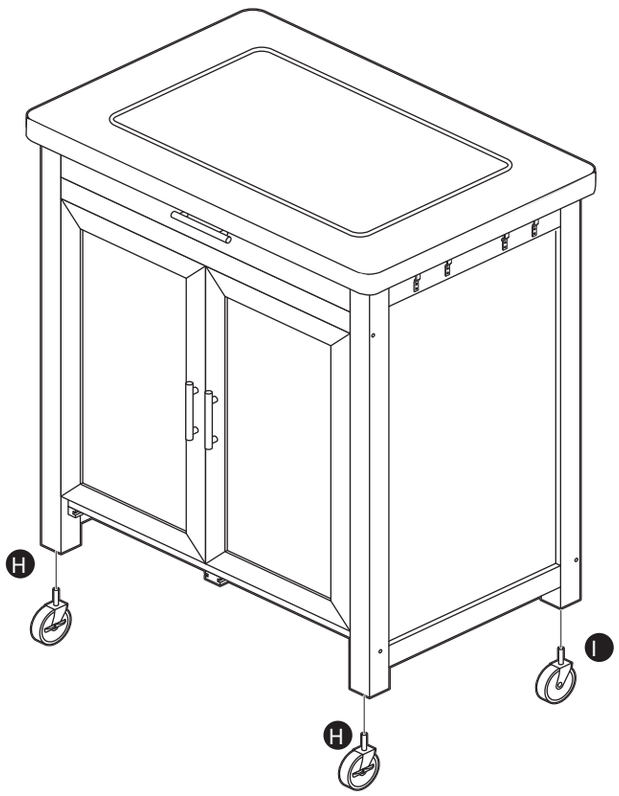

Assembly Instructions

Step 13


Slide 2 x basket [15] into runners underneath bottom shelf as shown.

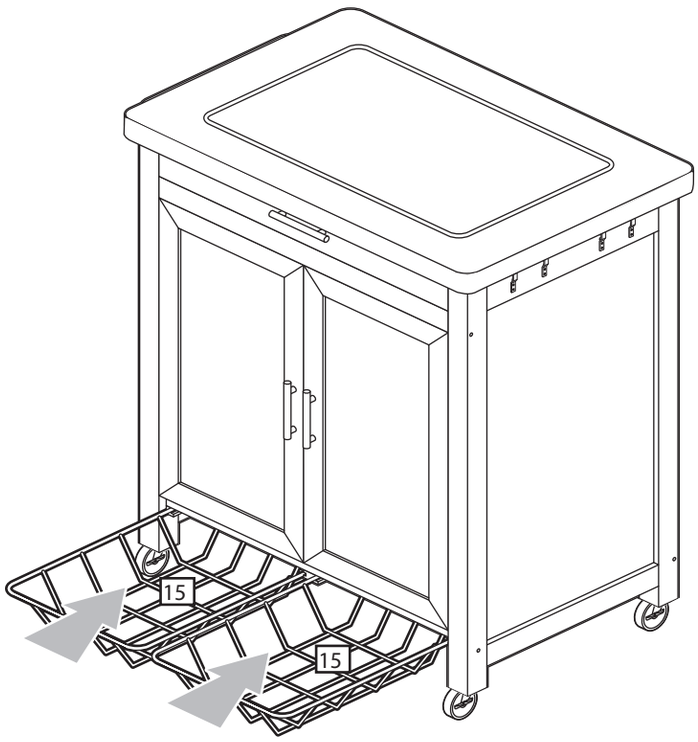

Step 14

Hang knife block [13] and storage box [14] onto hooks as shown

Assembly complete.

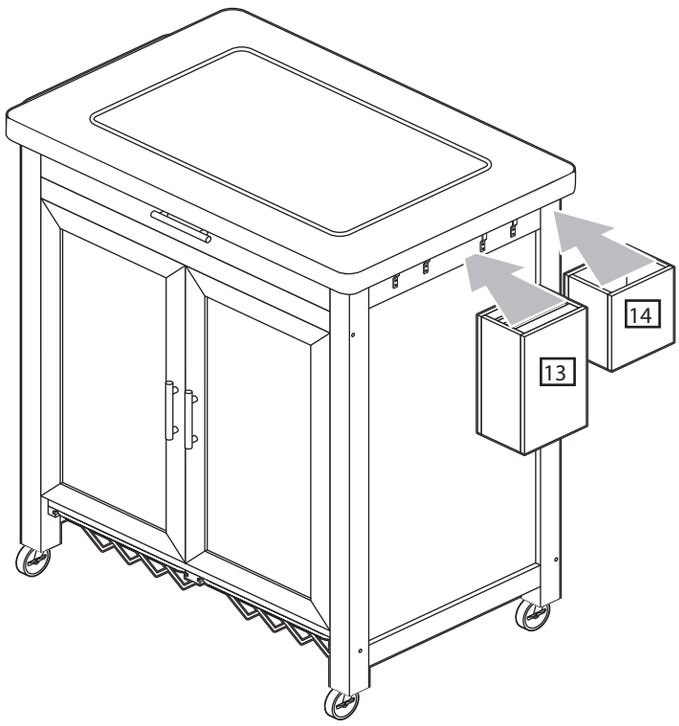

If you need help or have damaged or missing parts, call the Customer Helpline: 03456 400 800
Home Retail G roup, 489-499 Avebury Bouleva rd, Saxon Gate West, Central Milton Keynes, Bucks, MK9 2NW