
Lima - Coffee Table

Assembly Instructions - Please keep for future reference | 275/5205

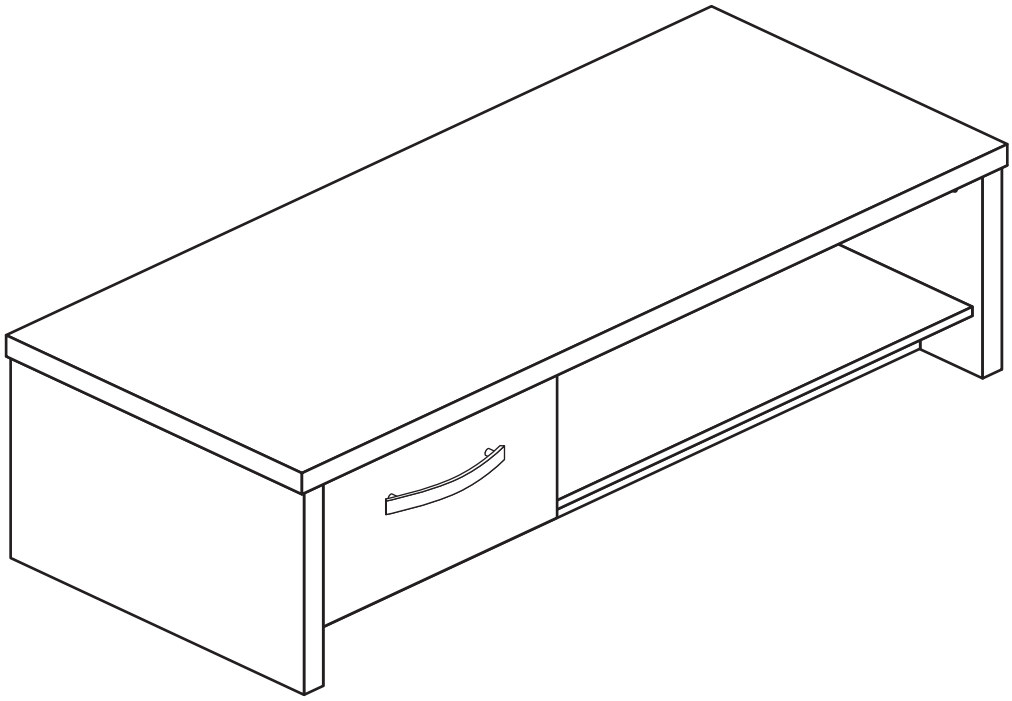

Dimensions
Width - 117cm
Depth - 49cm
Height - 37cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 01/07/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 22kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the panels listed below

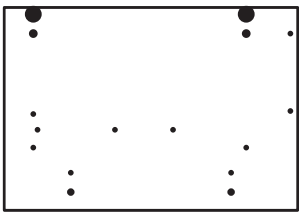

1 Left Side *(D1908A)*
(335 x 485mm)

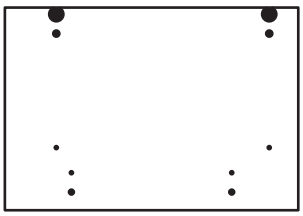


2 Right Side *(D1123A)*
(335 x 485mm)



3 Large Back *(D1126A)*
(224 x 650mm)




4 Top *(D01121A)*
(1166 x 489mm)

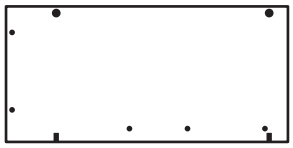


5 Upright *(D1909A)*
(224 x 466mm)




6 Small Back *(D1127A)*
(377 x 224mm)

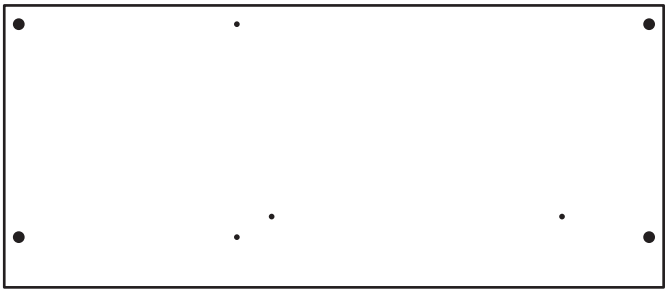

7 Base *(D1124A)*
(1090 x 466mm)

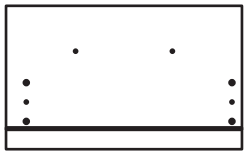


8 Drawer Front *(D1910A)*
(390 x 237mm)




9 Left Drawer Side *(W445LH)*
(320 x 150mm)



10 Right Drawer Side *(W445RH)*
(320 x 150mm)



11 Drawer Back *(W558)*
(327 x 150mm)



12 Drawer Base *(T558)*
(338 x 317mm)



13 Plinth *(D1094A)*
(1090 x 96mm) x 2


Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A




Wooden dowel *(F22)* x 4

B



Metal dowel *(F901)* x 14

C

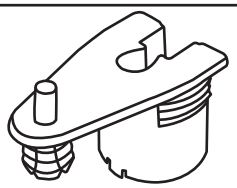

Hollow core locking nut (*F892)* x 4

D



Wedgefix *(F639)* x 2

E




Large locking nut *(F900)* x 12

F



Small locking nut *(F3)* x 2

G




Small metal dowel (*F893)* x 4

H



19mm Screw (*F461)* x 2

I

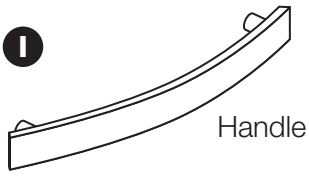

Handle *(F306)* x 1

J



13mm Screw *(F63)* x 6

K



13mm Screw *(F52)* x 6

L



Knock-in Peg *(F171)* x 4

Ma




L Runner *(F159)* x 1

Mb



R Runner *(F160)* x 1

Mc



L Runner *(F161)* x 1

Md




R Runner *(F162)* x 1

N




40mm Screw *(F910)* x 4

O

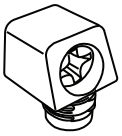

Mini block *(F25)* x 4

Tools required

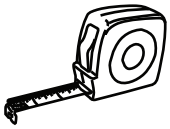

Rule




Cross-head screwdriver



Scissors




Hammer

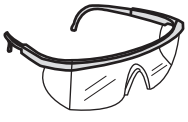

Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

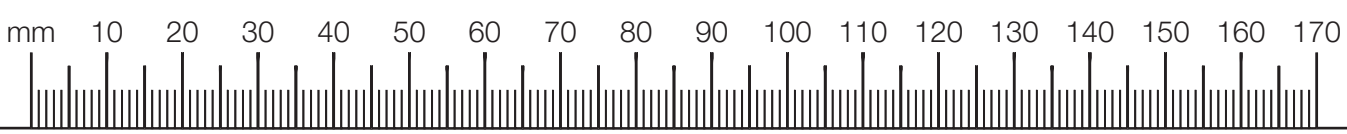

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Step 1

Prepare the drawer front

Screw 2 metal dowels B into the holes shown on the back of the drawer front 8.

Note: Tighten metal dowels up fully against the panel.

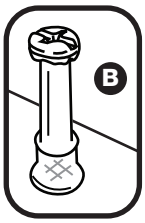

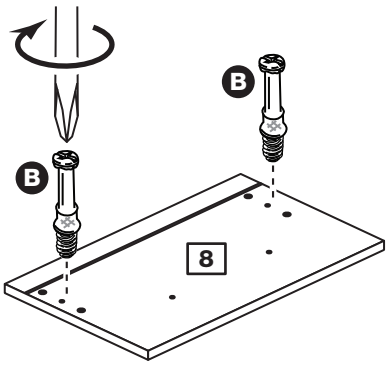


Step 2


Prepare the drawer sides


Insert a small locking nut F into the hole shown on the left drawer side 9 and right drawer side 10.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

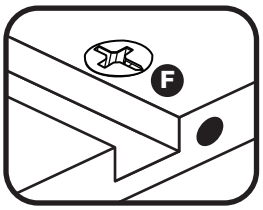

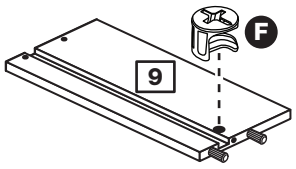

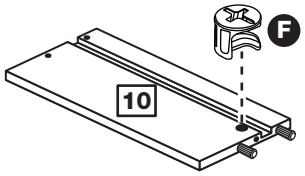


Step 3


Attach the drawer sides to the drawer front

Push the left drawer side 9 and right drawer side 10 onto the back of the drawer front 8.

Turn the small locking nuts F on the left drawer side 9 and right drawer side 10.

Note: Turn the locking nuts F clockwise to secure panels - more than 1/2 a turn.

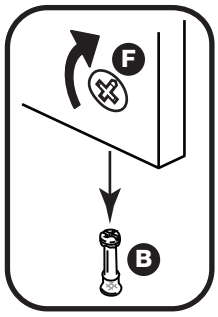

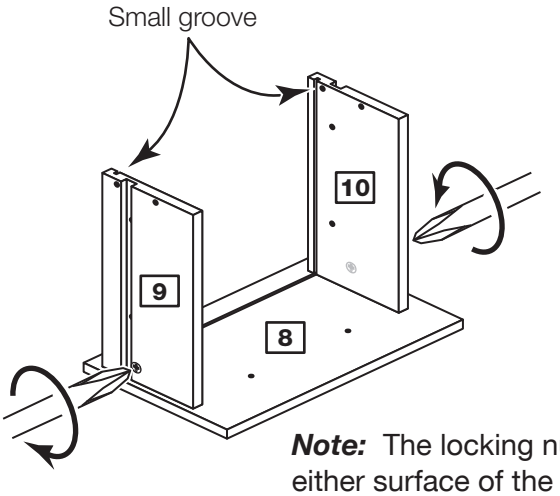


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

Step 4

Fit the drawer base

Slide the drawer base 12 down the grooves in the drawer sides 9 and 10 and down into the groove in the drawer front 8.

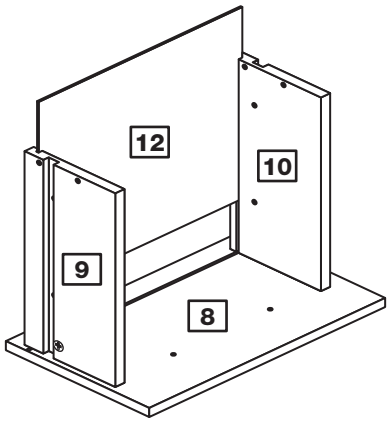


Step 5

Fit the drawer back

Fit the drawer back 11 between the drawer sides 9 and 10.

Make sure that the drawer base 12 fits into the groove in the drawer back 11.


Hold the drawer back 11 in position and tap the knock-in pegs L through the holes in the drawer sides 9 and 10.

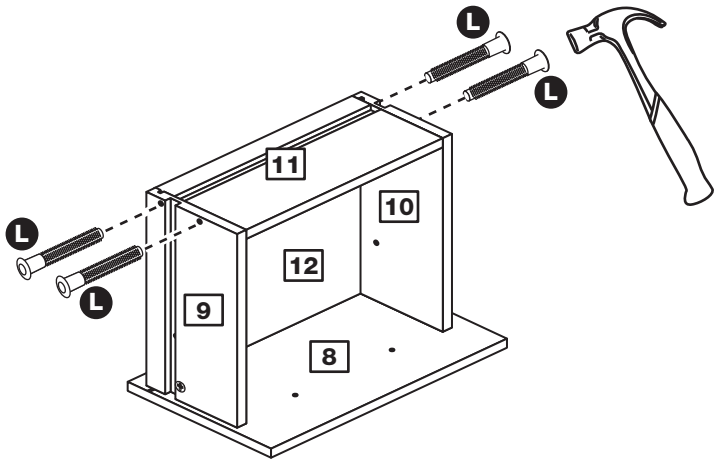

Step 6

Attach the handle

Attach the handle I to the drawer front 8 using 2 screws H.

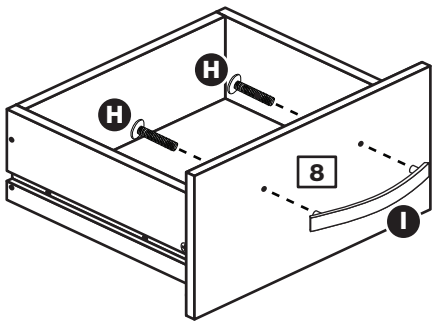


Step 7

Fit the wedgefixes

Turn the drawer assembly over.

Slide a wedgefix (D) into the centre of the small groove located on the back of the drawer front [8] and the drawer back [11].

Once in place, tighten up the screws in the wedgefixes (D).

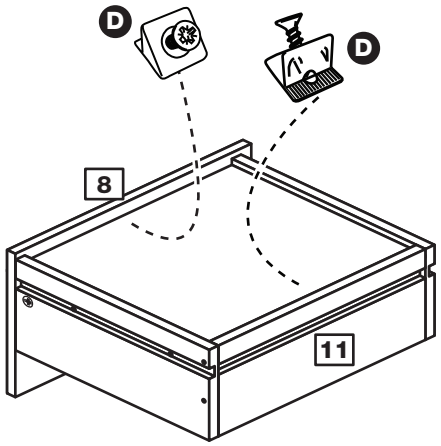


Step 8

Fit runners to the drawers

Fit the runner (Mc) to the bottom edge of the left drawer side [9], as shown, making sure that it is pushed up against the back of the drawer front [8]. Use a bradawl to mark the fixing positions, then secure with 2 screws (J).

Fit the runner (Md) to the bottom edge of the right drawer side [10] using the same method.

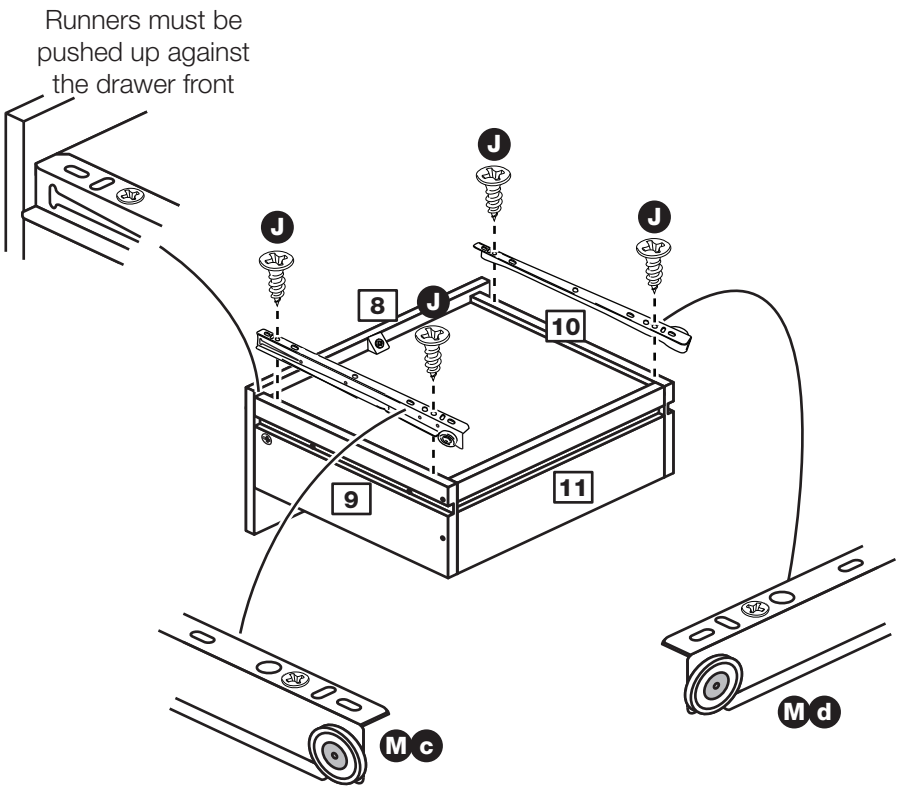


Step 9

Prepare the left side


a: Fit runner Ma to the left side 1.

The 1st screw K uses the 2nd hole in from the front of the runner.

The 2nd and 3rd screws K use the holes that line up with the other panel holes.

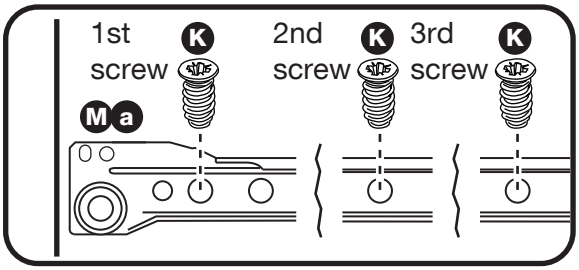



a:

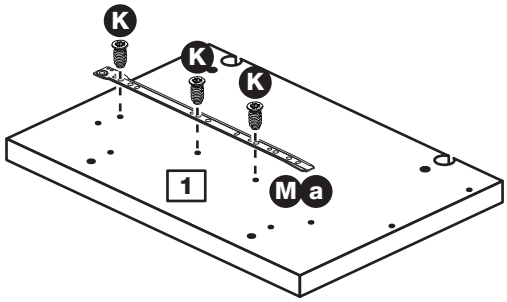

b: Fit a screw J into the 2nd hole in at the top of the runner Ma.

b:

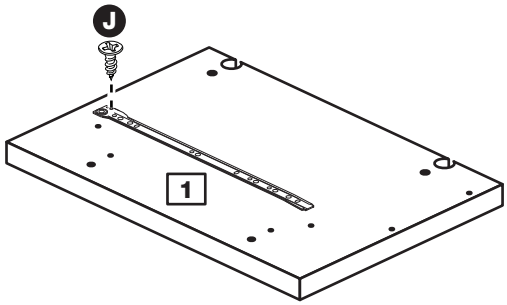

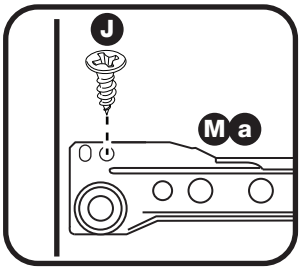



c: Screw 6 large metal dowels B into the holes shown on the left side 1.


Push 2 hollow core locking nuts C into the left side 1, making sure that they are flush against the panel's surface.
Using a hammer, tap in the pin on the hollow core locking nut C.

Note: The pin should be tapped in flush with the top surface of the hollow core locking nut C.

c:

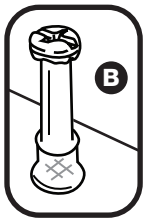

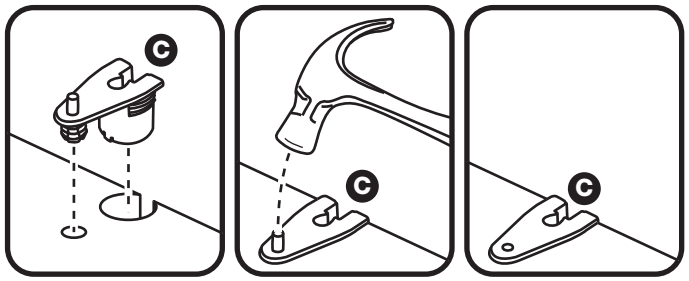

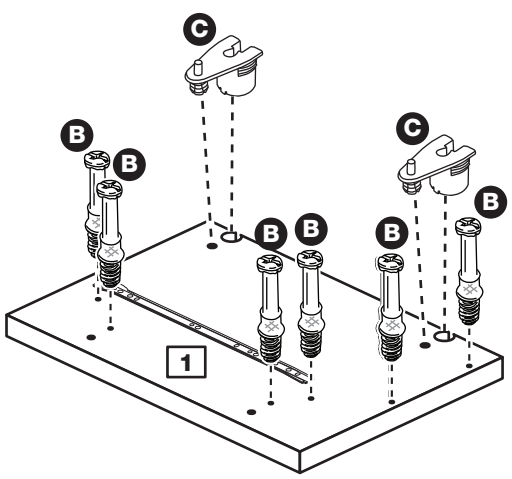


Assembly Instructions

Step 10

Prepare the small back

Insert 4 large locking nuts (E) into the small back [6], as shown.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

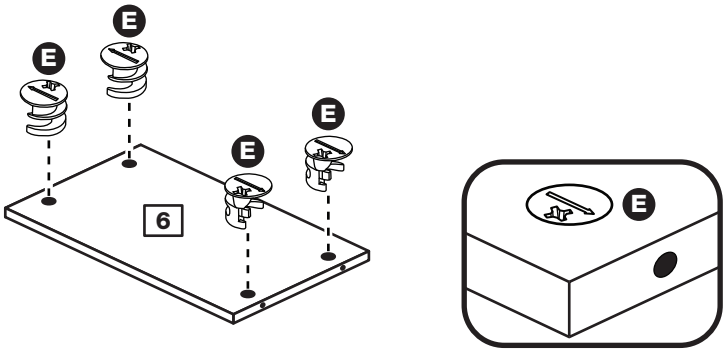


Step 11

Join the left side and small back

Push the small back [6] onto the left side [1].

Use a screwdriver to tighten the 2 large locking nuts (E) fitted to the small back [6].

Note: Turn the large locking nuts (E) as far as they will go - more than 1/2 a turn.

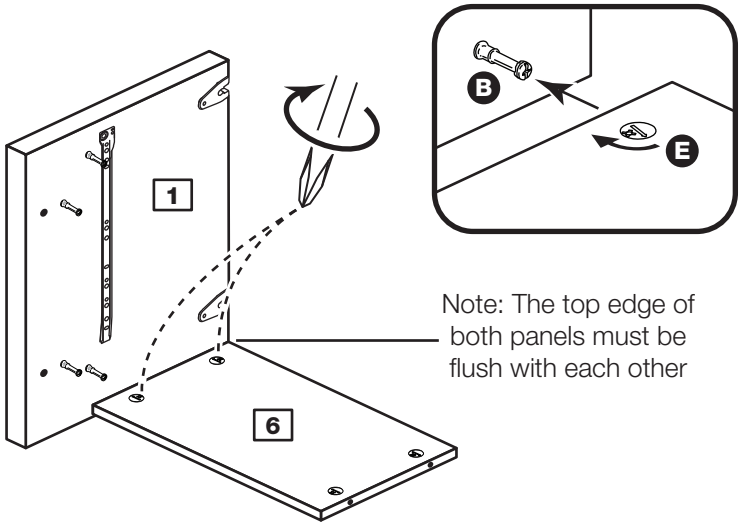


Step 12

Prepare the top

Screw 4 small metal dowels (G) into the holes in the top [4].

Note: Tighten metal dowels up fully against the panels.

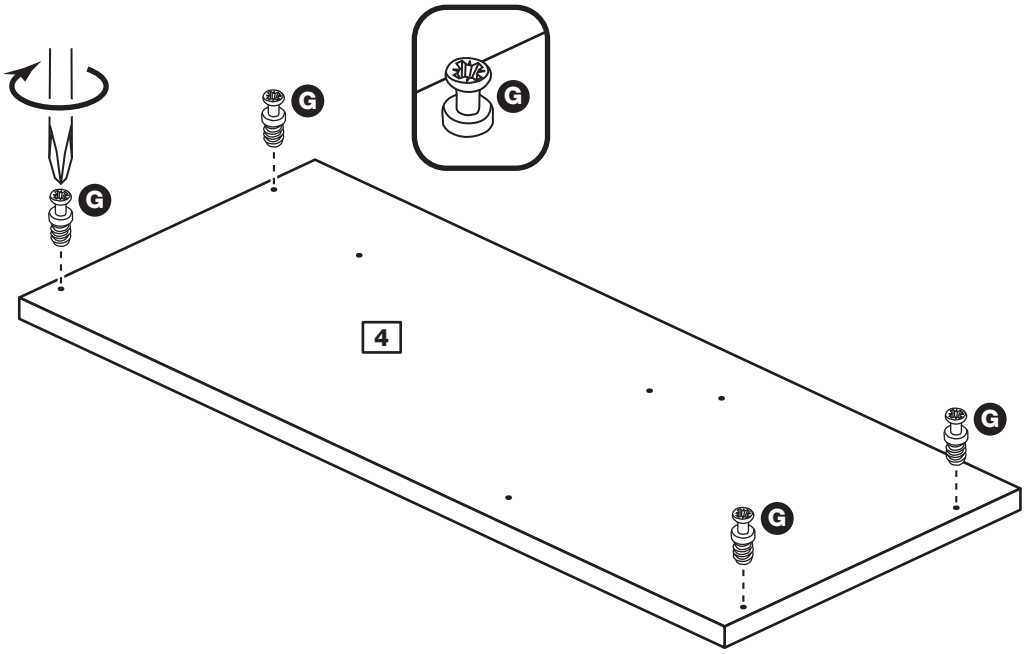


Step 13

Prepare the upright

a: Fit runner Mb to the upright 5.

The 1st screw K uses the 2nd hole in from the front of the runner.


The 2nd and 3rd screws K use the holes that line up with the other panel holes.

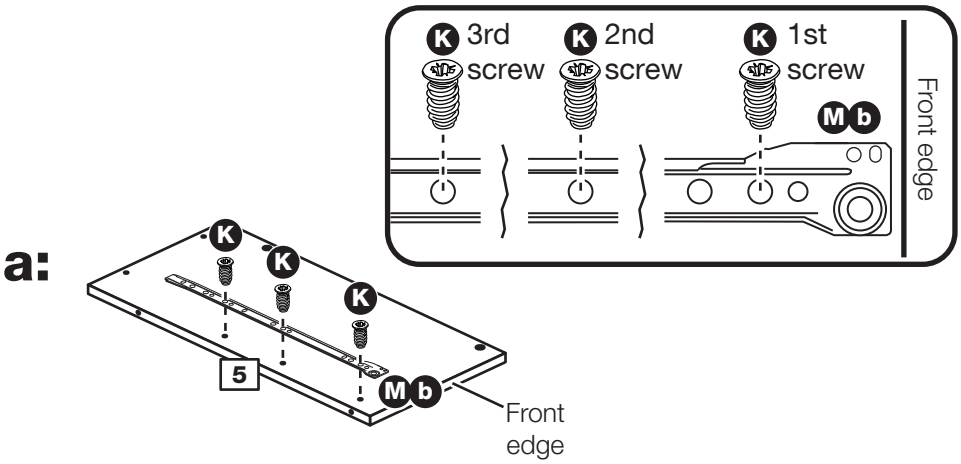

b: Fit a screw J into the 2nd hole in at the top of the runner Mb.

Screw 2 large metal dowels B into the upright 5.

Gently tap 2 mini blocks O into the holes on the upright 5, orientated as shown.

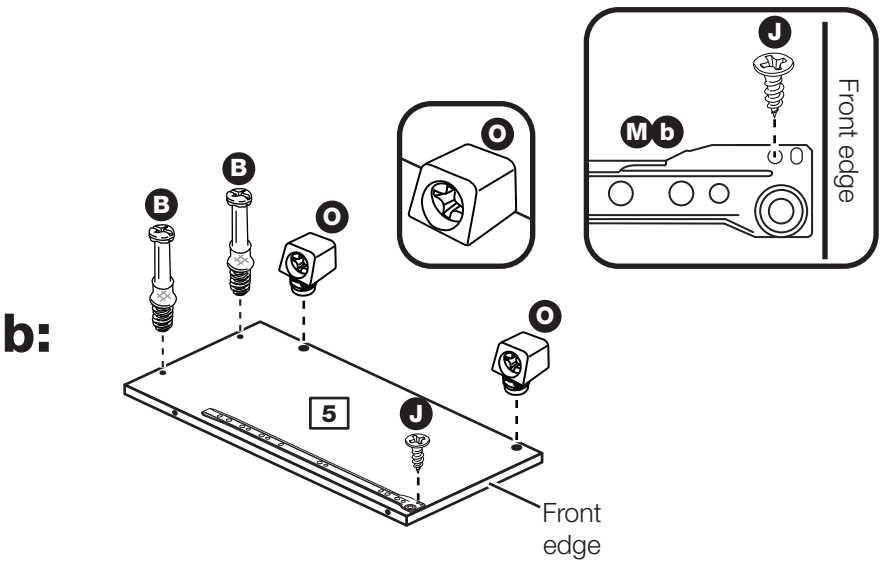


Step 14

Join the top and upright

Position the upright 5 so that the screws from the mini blocks O are over the holes in the top panel 4.

Tighten up the screws in the 2 mini blocks O into the holes in the top 4.

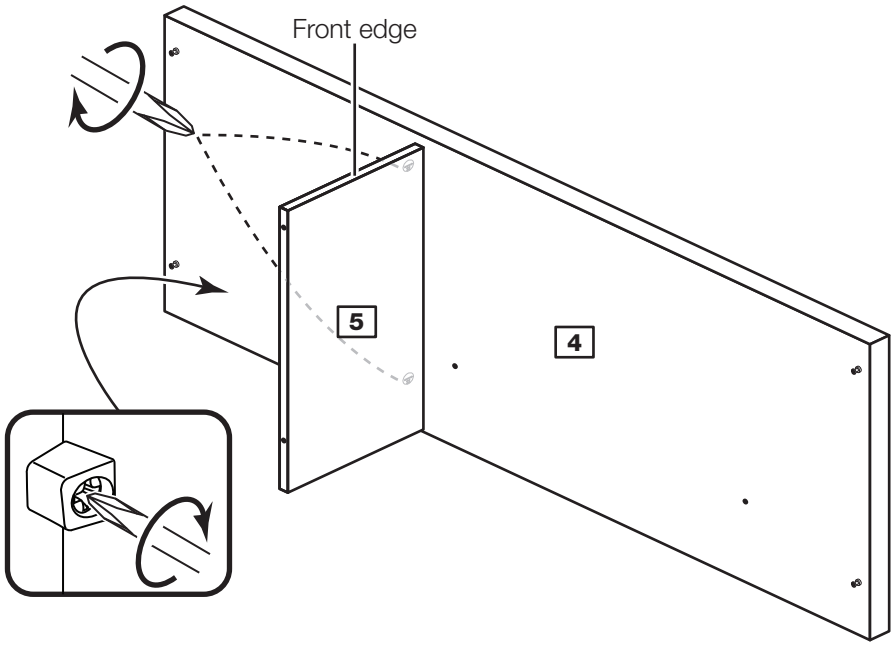

Step 15


Fit the left side and small back to the top and upright


Push the left side 1 onto the top 4 and locate the small back 6 onto the upright 5.

The 2 small metal dowels G fitted to the top 4 must slide into the top of the 2 hollow core locking nuts C fitted to the left side 1.

Insert a screwdriver into the 2 hollow core locking nuts C and turn the nuts inside as far as they will go.


Use a screwdriver to tighten the 2 large locking nuts E fitted to the small back 6.

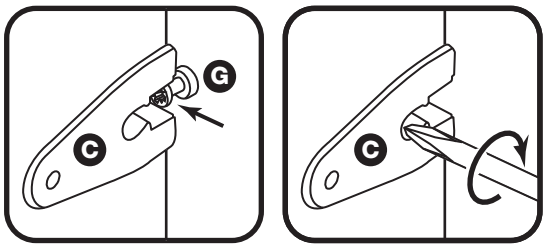

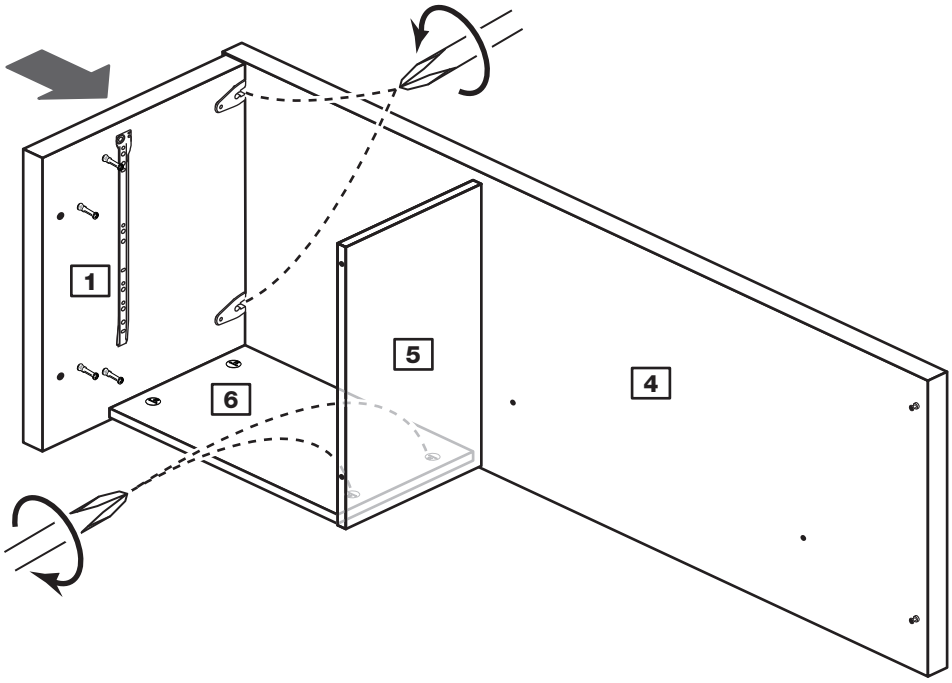

Step 16

Gently tap 2 mini blocks O into the holes on the large back 3, orientated as shown.

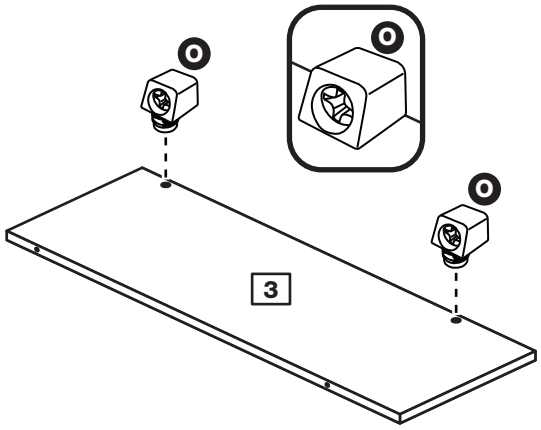


Step 17

Prepare the base

Insert 4 large locking nuts (E) into the base [7], as shown.

Note: Arrow on locking nut **must** point towards hole in edge of panel.

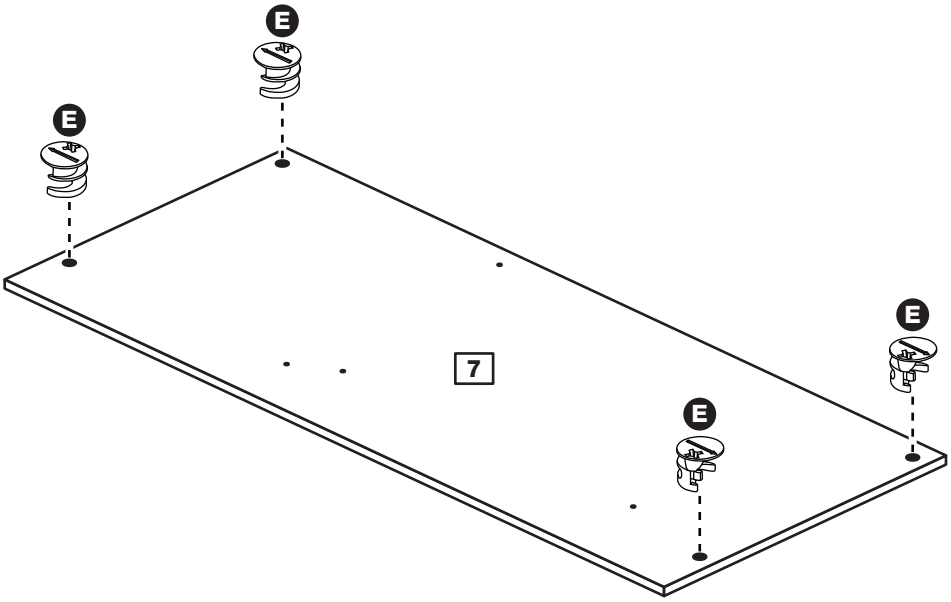


Step 18

Fit the large back

Position the large back [3] so that the screws from the mini blocks (O) are over the holes in the top [4].

Tighten up the screws in the 2 mini blocks (O) into the holes in the top [4].

Note: Support the large back [3] until the base has been fitted in the next step.

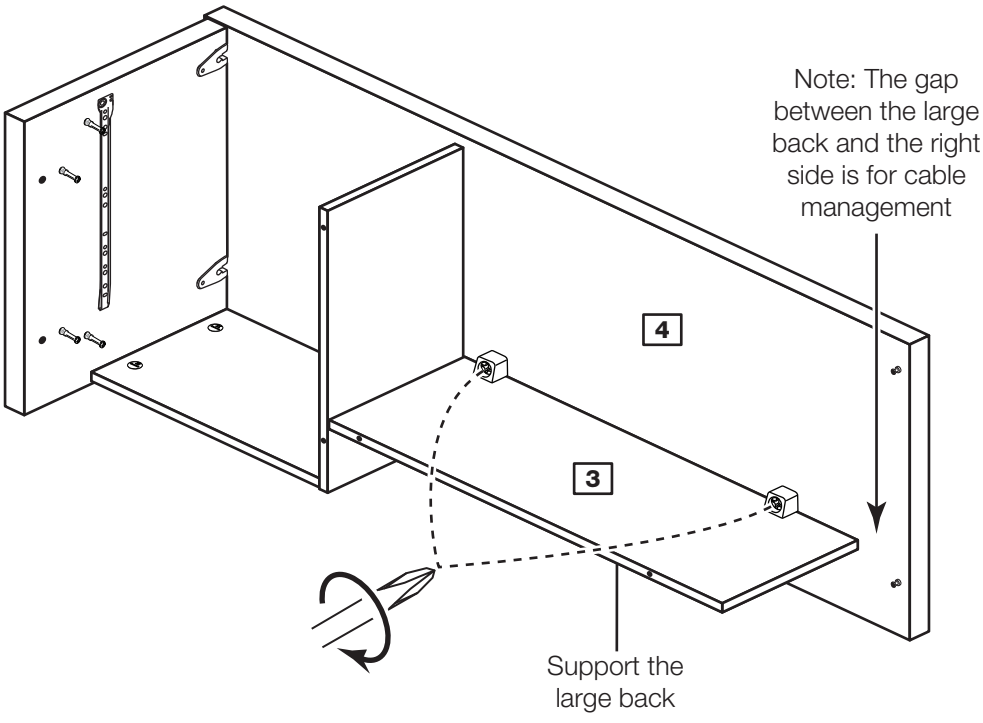

Step 19


Fit the base

Push the base 7 onto the left side 1.

Attach the base 7 to the large back 3 and upright 5 using 4 screws N.

Use a screwdriver to tighten the 2 large locking nuts E fitted to the base 7.

Note: Turn the large locking nuts E as far as they will go - more than 1/2 a turn.

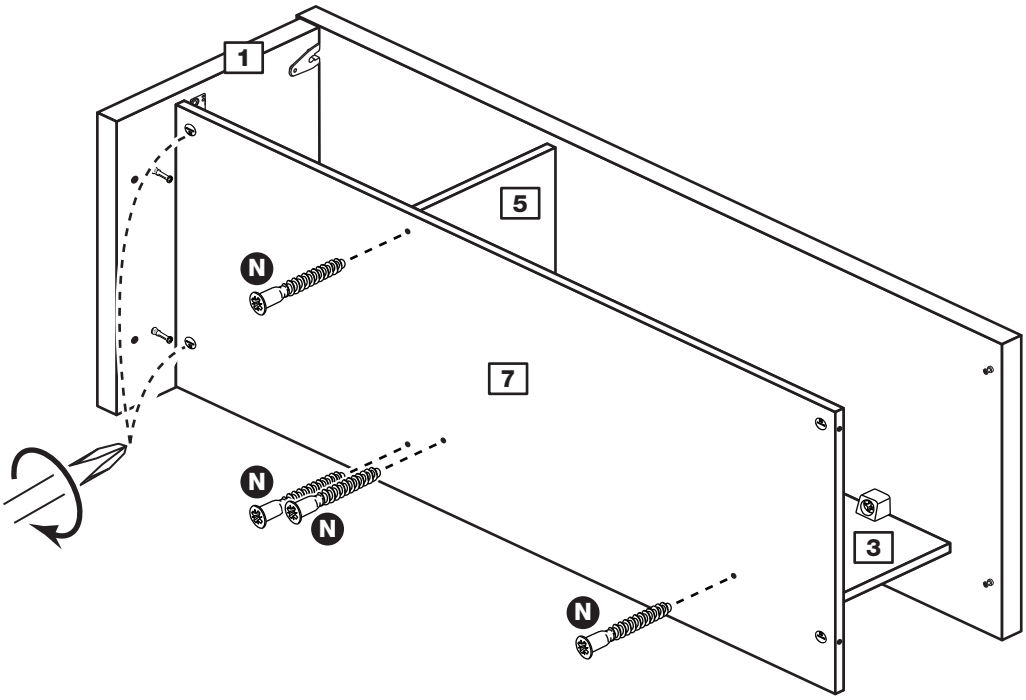


Step 20

Prepare the 2 plinths

Insert 2 large locking nuts E into each of the 2 plinths 13, as shown.

Tap a wooden dowel A into each end of the 2 plinths 13, as shown.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

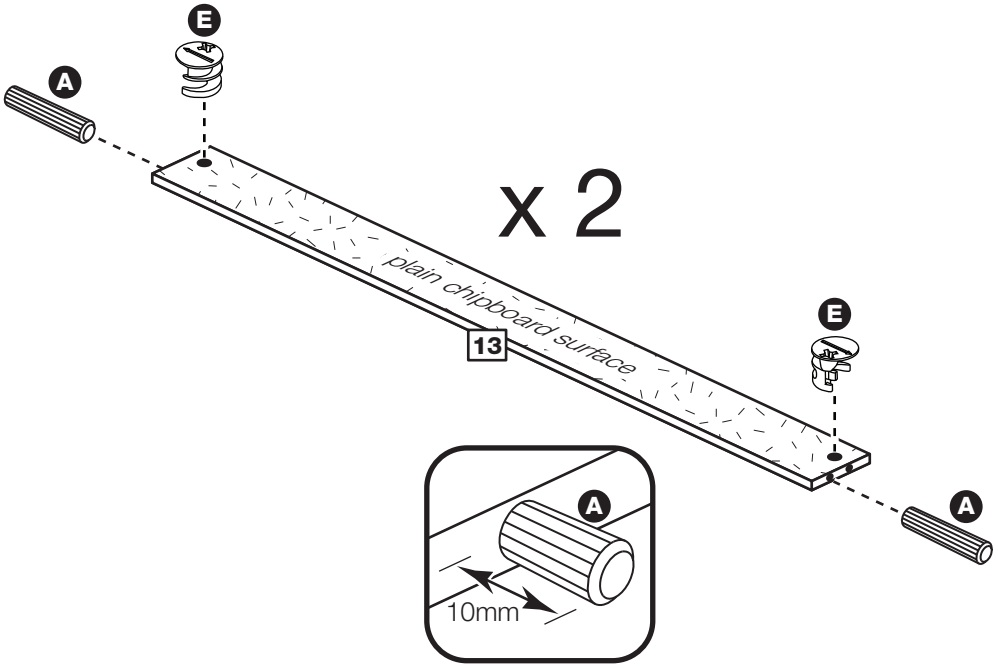


Step 21


Prepare the right side

Screw 4 large metal dowels B into the holes shown on the right side 2.

Push 2 hollow core locking nuts C into the right side 2, making sure that they are flush against the panel's surface.
Using a hammer, tap in the pin on the hollow core locking nut C.

Note: The pin should be tapped in flush with the top surface of the hollow core locking nut C.

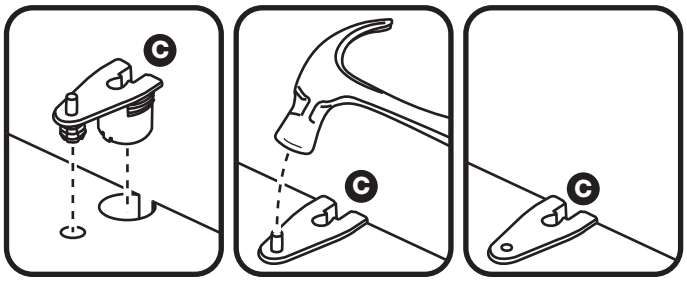

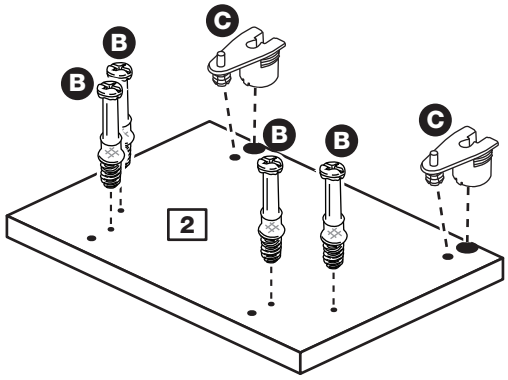


Step 22

Fit the plinths

Push the 2 plinths 13 onto the left side 1, as shown

Use a screwdriver to tighten the large locking nut E fitted to each plinth 13.

Note: Support the 2 plinths 13 until the right side has been fitted in the next step.

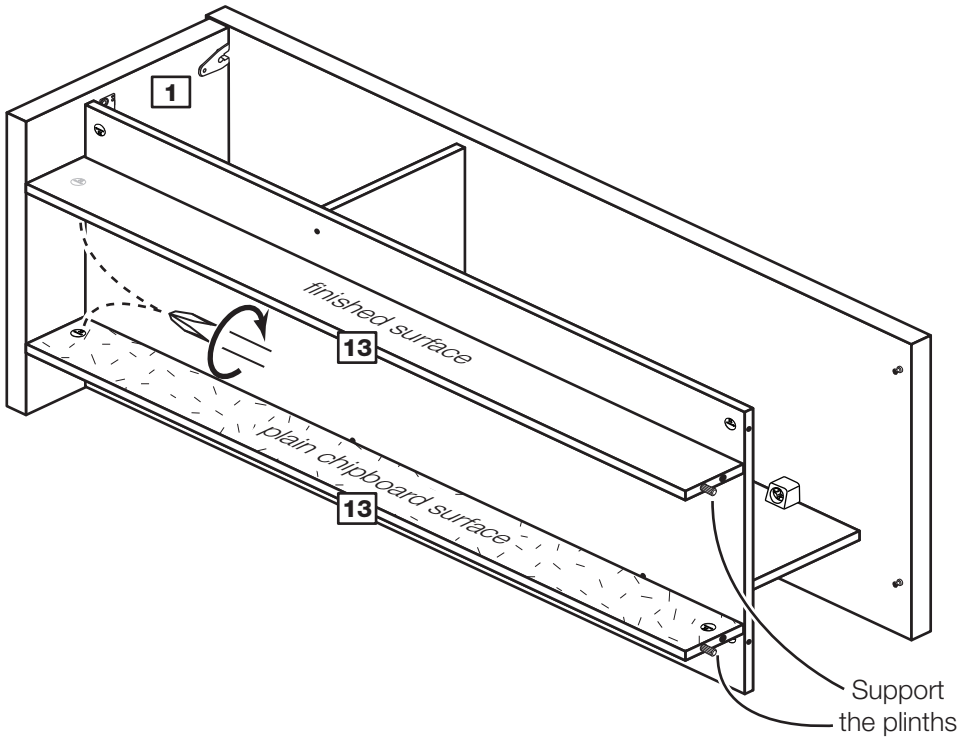

Step 23

Fit the right side

Push the right side 2 onto the top 4, base 7 and plinths 13.

The 2 small metal dowels G fitted to the top 4 must slide into the top of the 2 hollow core locking nuts C fitted to the right side 2.


Note: At this stage, only tighten the hollow core locking nut C at the front of the unit.

Insert a screwdriver into the hollow core locking nut at the front of the unit only C and turn the nut inside as far as it will go.

Use a screwdriver to tighten the 4 large locking nuts E fitted to the base 7 and plinths 13.

Stand the unit up for the next step.


Warning: The unit is heavy. Lift with care.

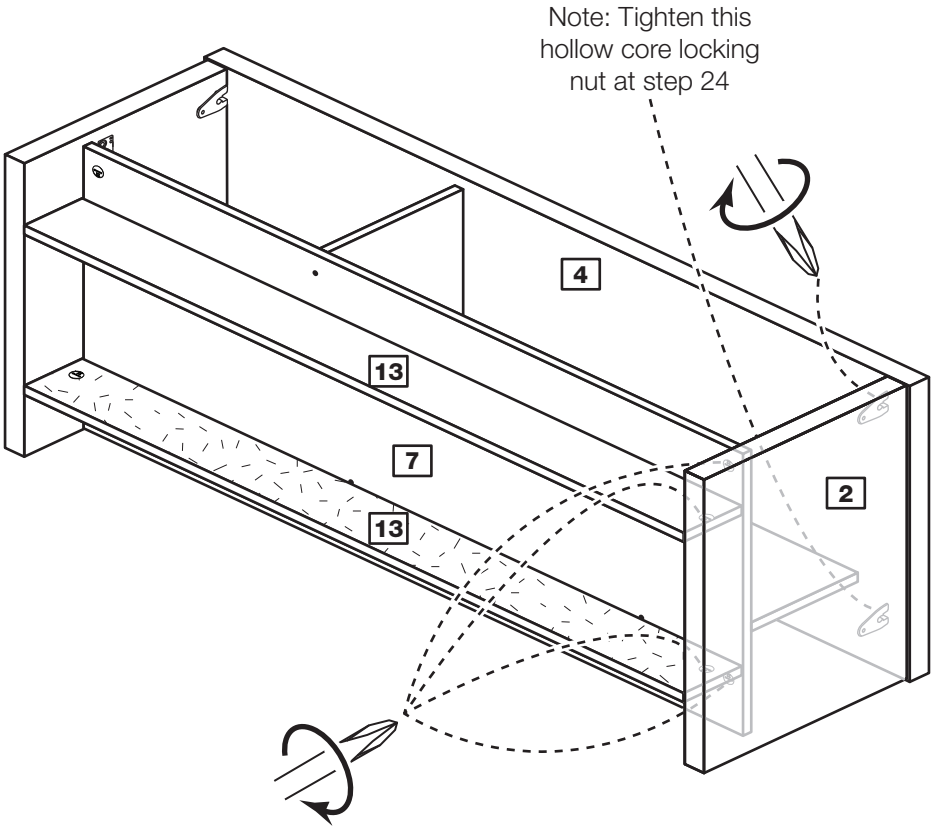

Step 24

Tighten the remaining hollow core locking nut

Insert a screwdriver into the hollow core locking nut C at the back of the right side 2 and turn the nut inside as far as it will go.

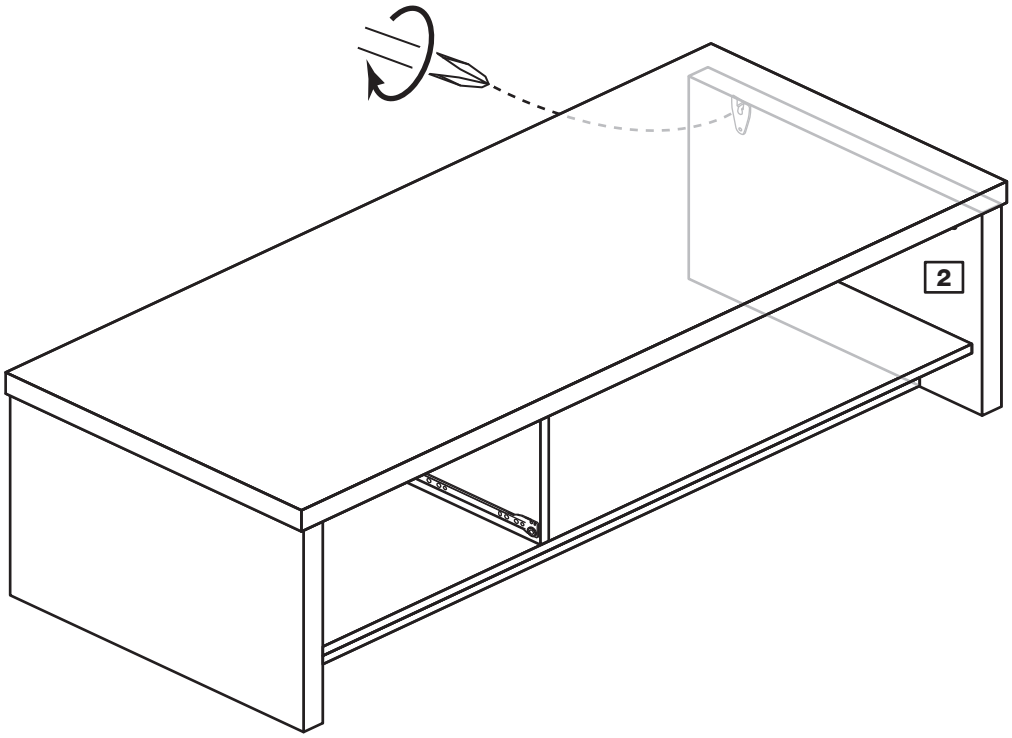

Step 25

Fit the drawer

Slide the wheels of the runners fitted to the drawer over the wheels of the runners fitted to the side panels and push the drawer into position.

Assembly is complete

Warning: The unit is heavy. Lift with care.

