
Kids Sywell - 1 Drawer Bedside

Assembly Instructions - Please keep for future reference

248/6282

275/1096

276/2690

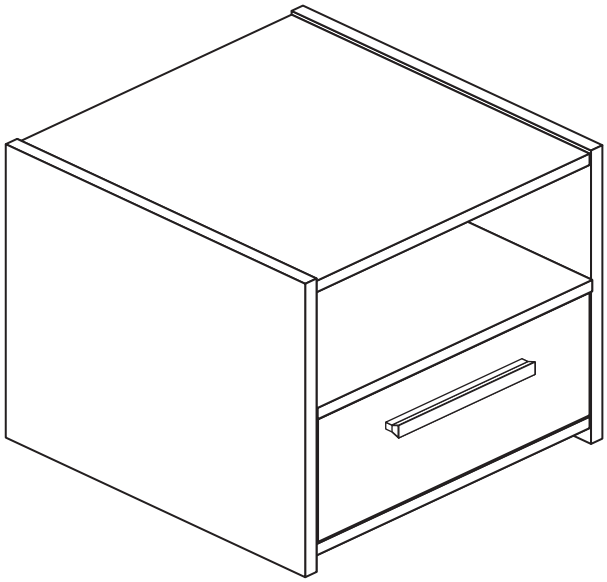

Dimensions
Width - 99.5cm
Depth - 99cm
Height - 99cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Issue 2 - 06/02/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 9.5kgs. Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

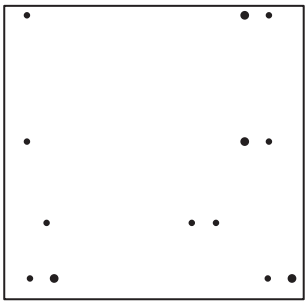


1 Left Side *(D2924A)*
(388 x 396mm)

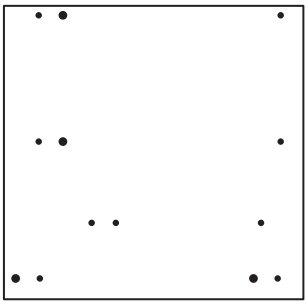


2 Right Side *(D2925A)*
(388 x 396mm)

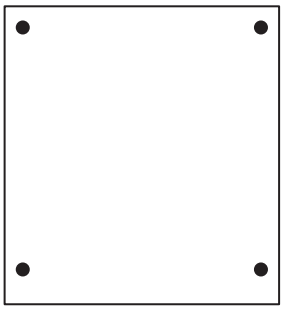

3 Horizontal *(D2541A)*
(363 x 394mm) x 2



4 Rail *(D2544A)*
(363 x 78mm) x 2

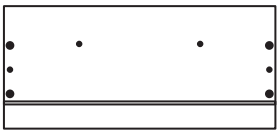

5 Drawer Front *(D2545A)*
(359 x 162mm)




6 Drawer Back *(W331-124)*
(331 x 124mm)




7 Left Drawer Side *(W370-124LH)*
(370 x 124mm)



8 Right Drawer Side *(W370-124RH)*
(370 x 124mm)



9 Drawer Base *(T342-367)*
(342 x 367mm)







10 Back *(X389-359)*
(389 x 359mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*


Please check you have all the fittings listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

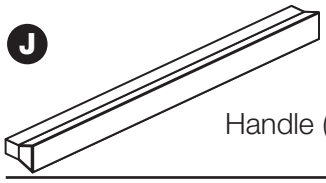A  Wooden dowel *(F22)* x 8	**B**  Metal dowel *(F901)* x 14	**C**  Knock-in Peg *(F171GY)* x 4
D  Large locking nut *(F900)* x 12	**E**  Small locking nut *(F3)* x 2	**F**  25mm Screw *(F95)* x 2
G  9mm Screw *(F74)* x 2	**H**  9mm Screw (*F73)* x 4	**I** Nail *(F51)* x 10
J  Handle (*F315)* x 1	**K**  Drawer runner *(F1004)* x 2	
L  Wedgefix *(F639)* x 2	**M**  Plastic Nail *(F91)* x 4	


Tools required

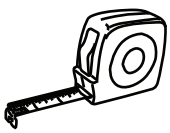
Rule


Cross-head screwdriver



Short cross-head screwdriver


Scissors


Hammer


Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

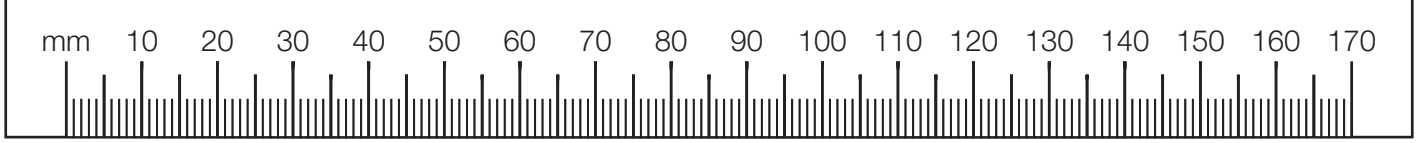

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

Step 1

Prepare the drawer front

Screw 2 metal dowels B into the drawer front 5.

Note: Tighten the metal dowels up fully against the panels.

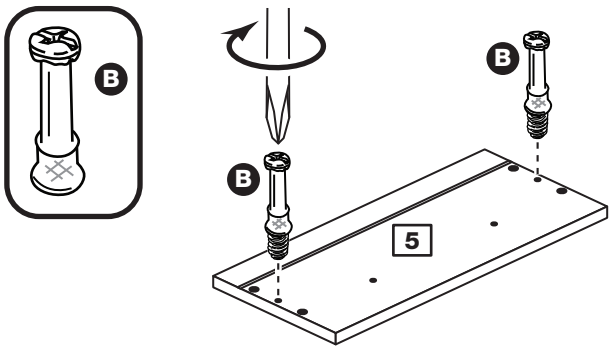


Step 2

Prepare the drawer sides

Insert a small locking nut E into the hole shown on the left drawer side 7 and the right drawer side 8.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

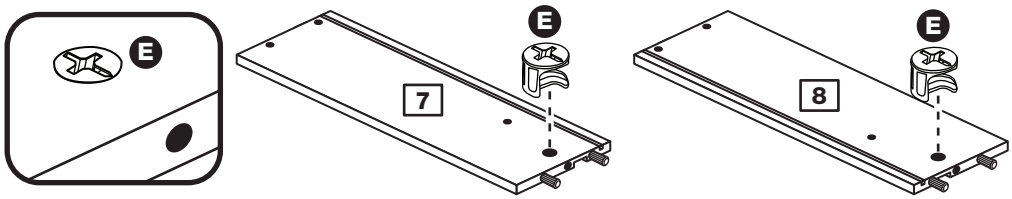

Step 3


Attach the drawer sides to the drawer fronts

Push the left drawer sides 7 and right drawer sides 8 onto the back of the drawer fronts 5.

Turn the small locking nuts E on the left drawer side 7 and right drawer side 8.

Note: Turn the locking nuts E clockwise to secure panels - more than 1/2 a turn.


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

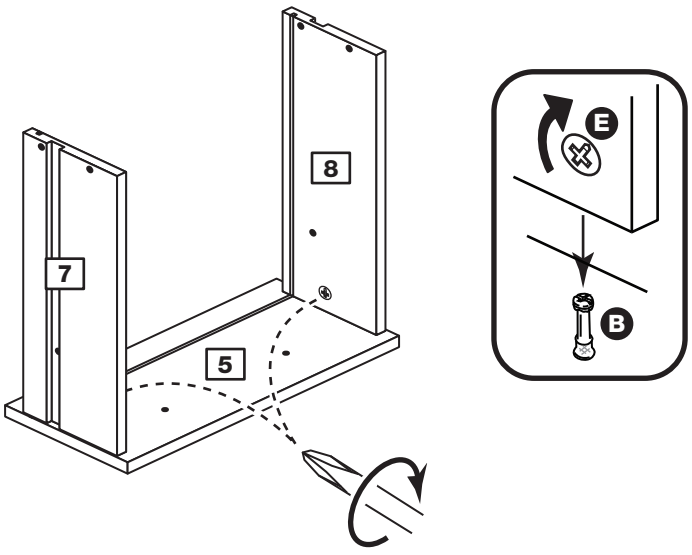

Step 4

Fit the drawer base

Slide the drawer base 9 down the grooves in the drawer sides 7 and 8 and down into the groove in the drawer front 5.

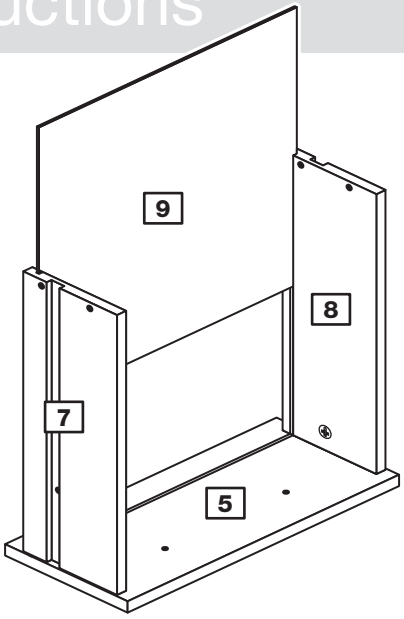


Step 5

Fit the drawer back

Fit the drawer back 6 between the drawer sides 7 and 8. Make sure that the drawer base 9 fits into the groove in the drawer back 6.

Hold the drawer back 6 in position and tap the knock-in pegs C through the holes in the drawer sides 7 and 8.

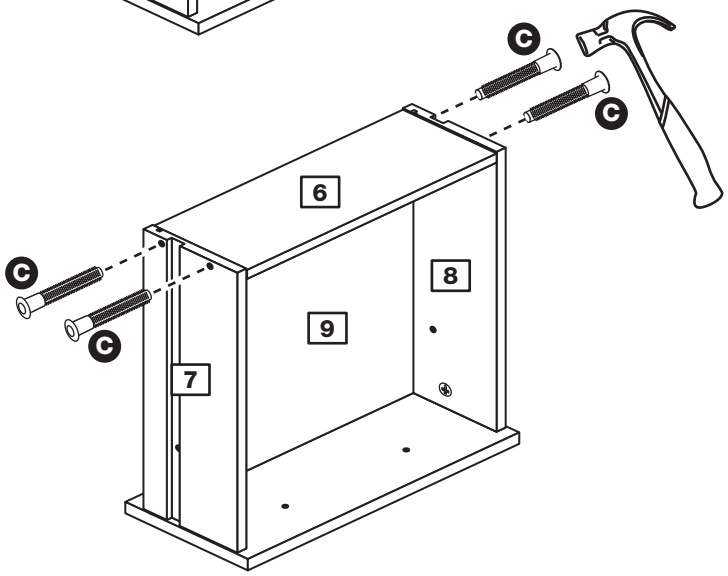


Step 6

Attach the handle

Attach the handle J to the drawer front 5 using screws F.


Note: Do not overtighten the screws.

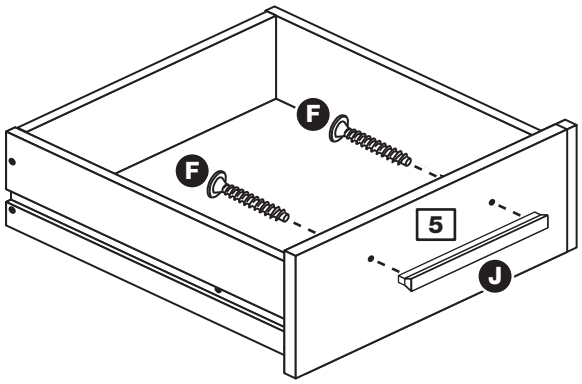


Step 7

Fit the wedgefixes

Turn the drawer assembly over and slide 2 wedgefixes L into the front and back grooves, as shown, and tighten up the screws.

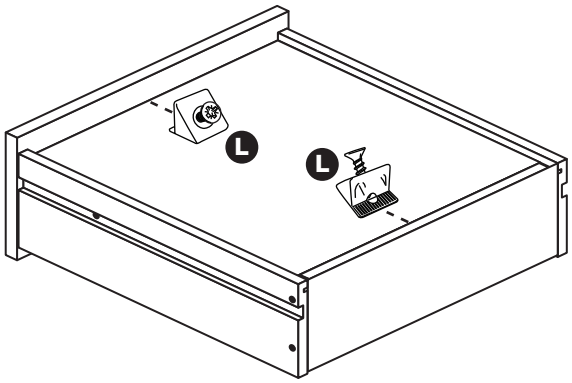

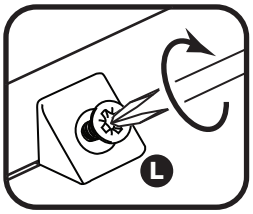

Assembly Instructions


Step 8

Prepare the left side

a: Place a runner (K) on the left side [1]. Slide back the top of the runner and use the 2nd hole from the front to fit the 1st screw (H).

Screw 6 metal dowels (B) into the left side [1].

b: Slide the runner (K) back the other way and fit the 2nd screw (H) into the corresponding hole in the left side [1].

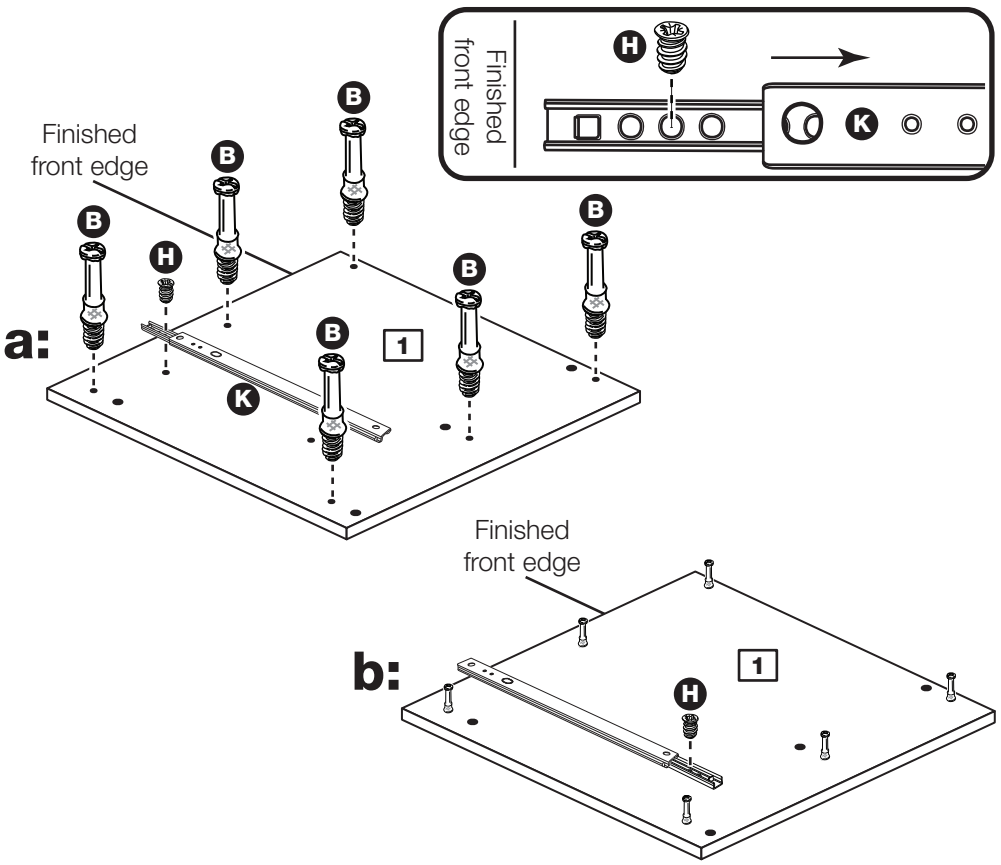


Step 9

Prepare the right side

a: Place a runner (K) on the right side [2]. Slide back the top of the runner and use the 2nd hole from the front to fit the 1st screw (H).

Screw 6 metal dowels (B) into the right side [2].

b: Slide the runner (K) back the other way and fit the 2nd screw (H) into the corresponding hole in the right side [2].

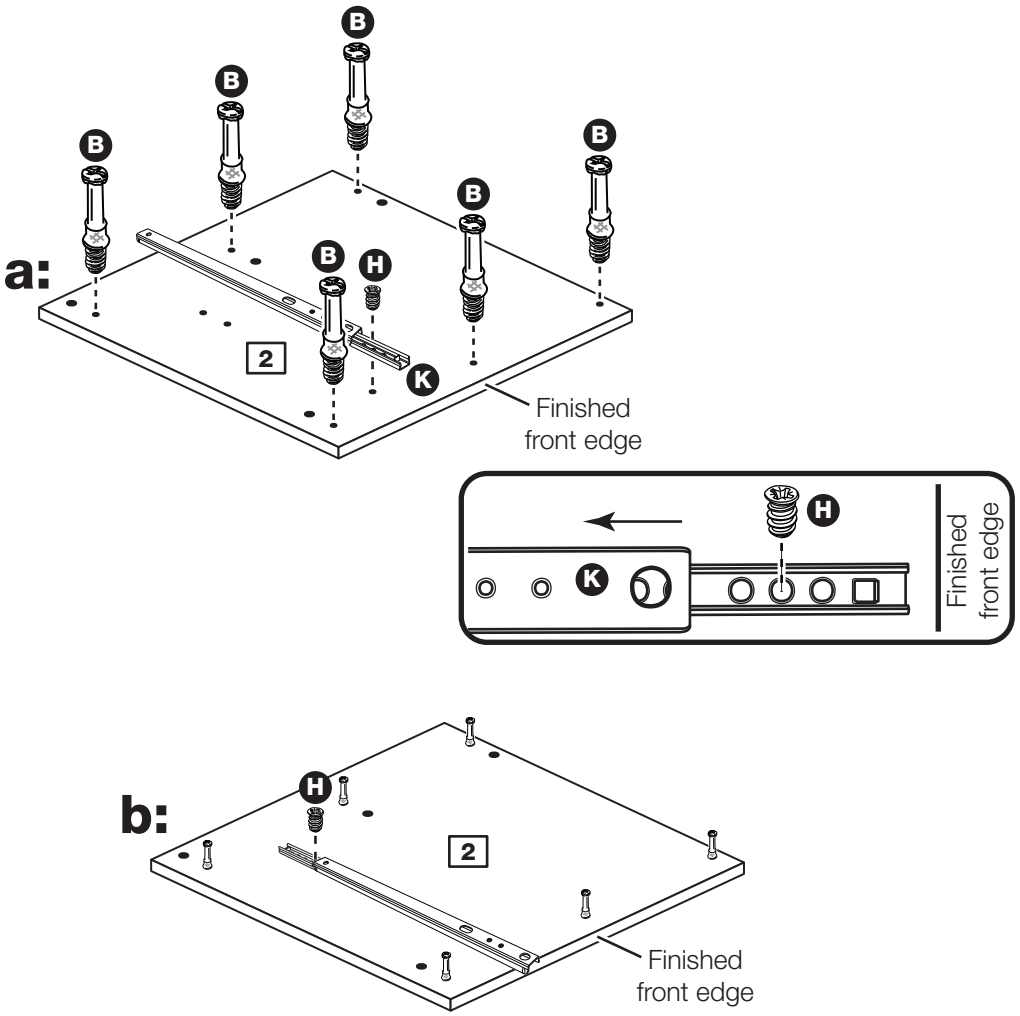

Step 10


Prepare the 2 horizontals

Tap 2 wooden dowels (A) into each of the horizontals [3].

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 4 large locking nuts (D) into each of the horizontals [3].

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

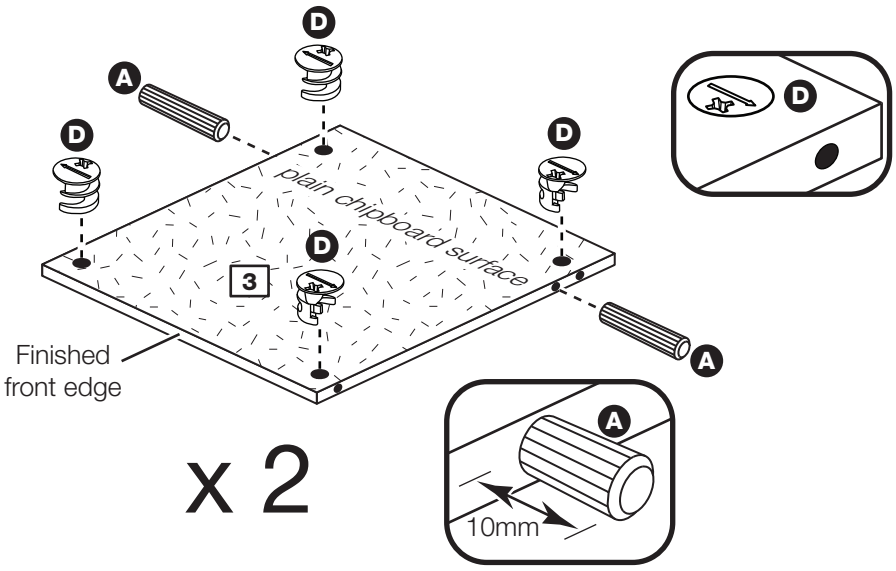


Step 11

Fit a horizontal to the right side

Push a horizontal [3] onto the right side [2].

Use a screwdriver to tighten the 2 large locking nuts (D) fitted to the horizontal [3].

Note: Turn the large locking nuts (D) as far as they will go - more than 1/2 a turn.

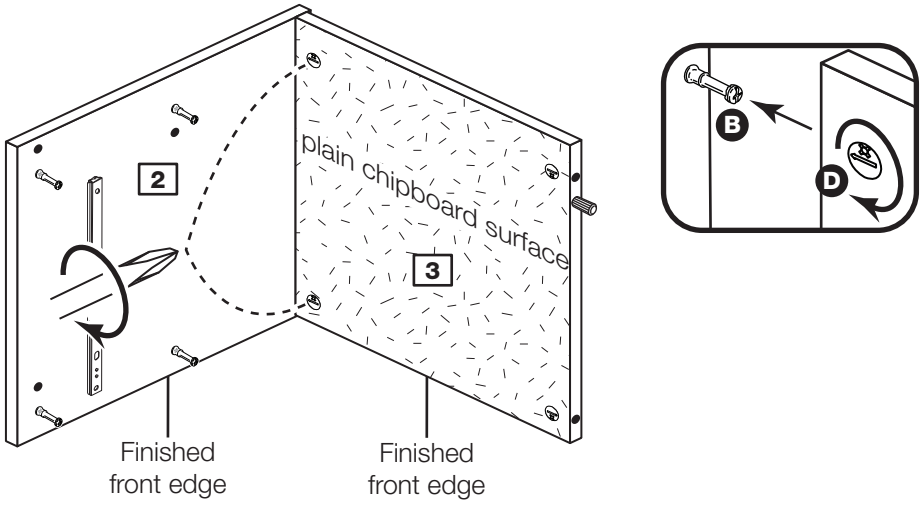


Assembly Instructions

Step 12

Fit the other horizontal to the right side

Push the horizontal [3] onto the right side [2].

Use a screwdriver to tighten the 2 large locking nuts (D) fitted to the horizontal [3].

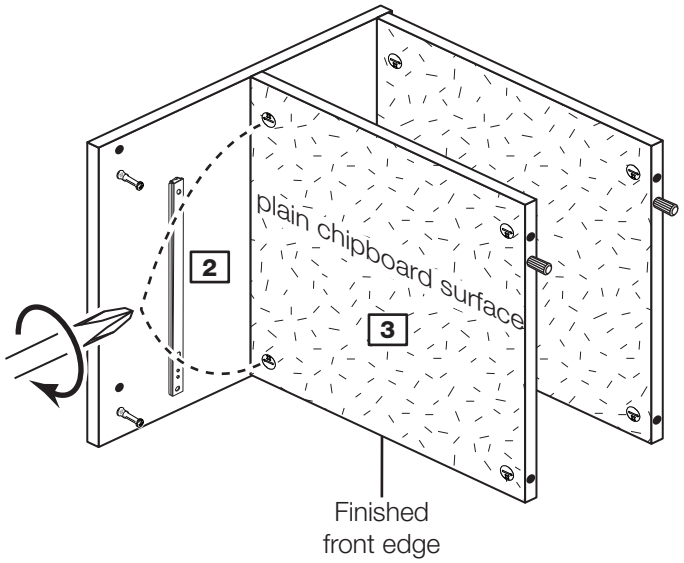


Step 13

Prepare the 2 rails

Tap 2 wooden dowels (A) into each of the 2 rails [4].

Insert 2 large locking nuts (D) into each of the 2 rails [4].

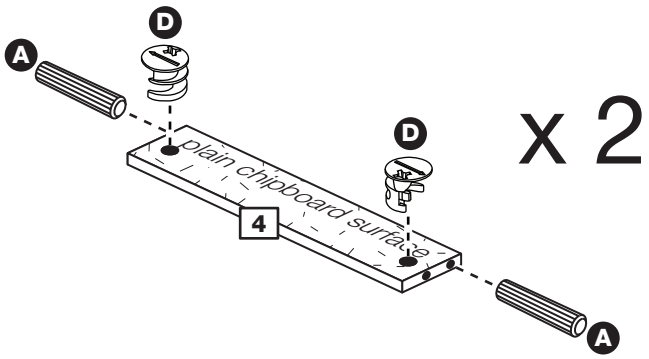


Step 14

Fit the 2 rails

Push the 2 rails [4] onto the right side [2].

Use a screwdriver to tighten the large locking nut (D) fitted to each of the 2 rails [4].

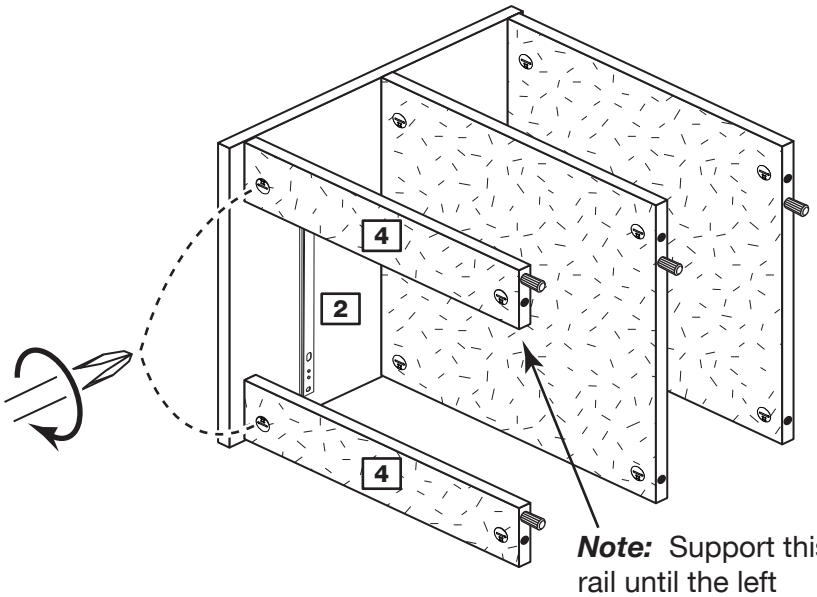


Note: Support this rail until the left side has been fitted in the next step.

Step 15

Fit the left side

Push the left side 1 onto the assembly.

Use a screwdriver to tighten the 6 large locking nuts D fitted to the 2 horizontals 3 and the 2 rails 4.

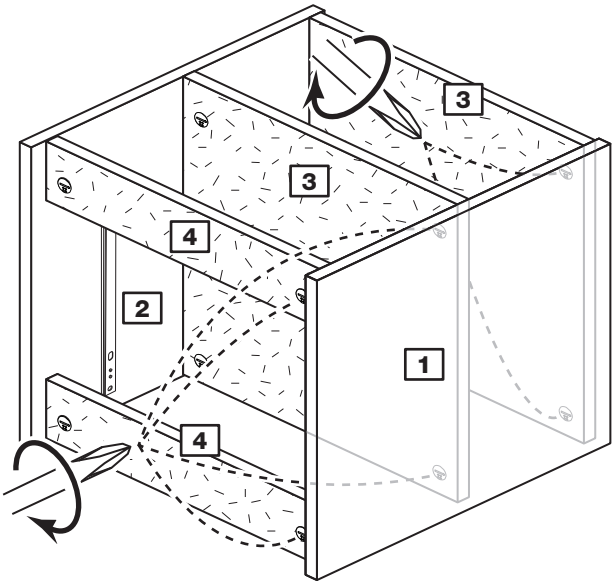

Step 16

Fit the back and plastic nails


a: Square up the unit by making sure that measurement **x to x equals y to y.**

b: Place the back 10 onto the unit.
Nail I around the outside edges of the back 10.

Note: Nails should be spaced about 150mm apart.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

b:

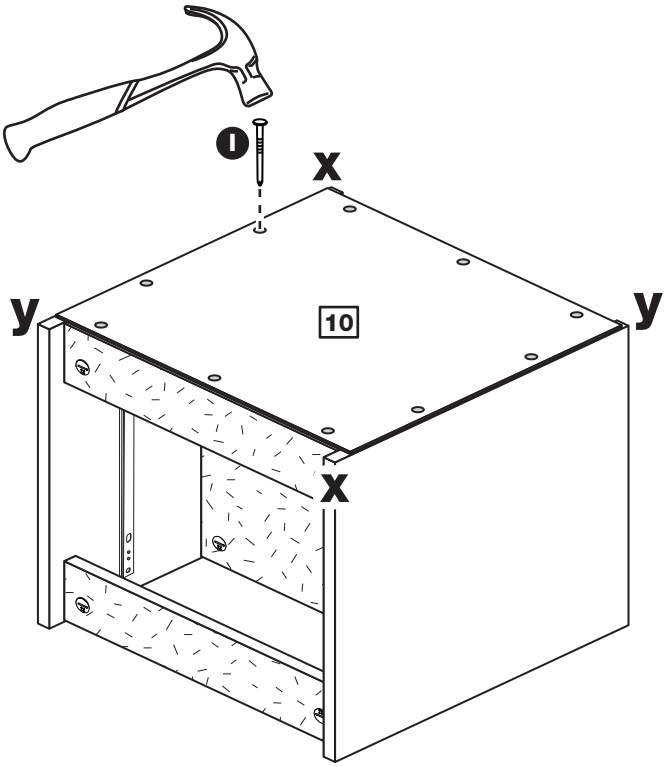


Step 17

Fit the plastinails

Tap 2 plastic nails M into the bottom edge of each of the sides 1 and 2.

Stand the unit up for the next step.

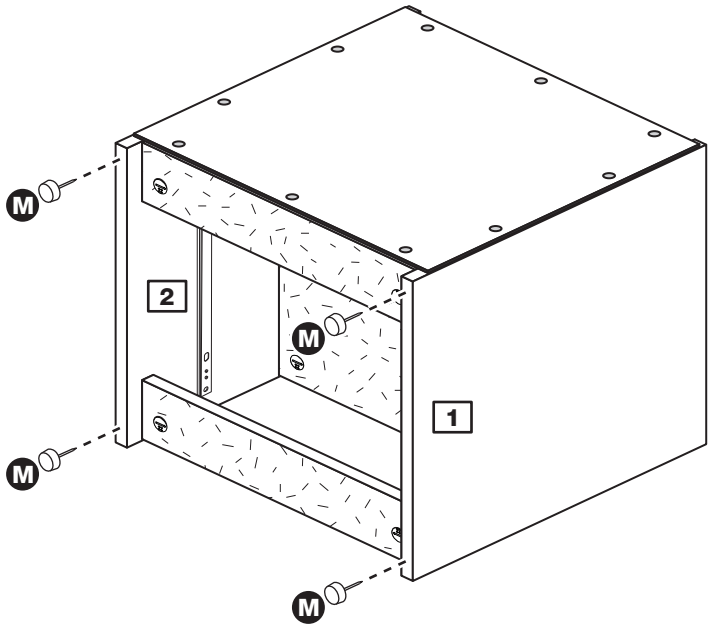


Step 18


Fit the drawers

Slide both the runners K forward and locate the drawer sides 7 and 8 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners K.

Working from the inside of the drawer, insert 2 screws G through the sides and out into the 2nd threaded hole in the runner.

Note: Do not over-tighten the screws G. If they catch on the runner you may need to loosen them slightly.

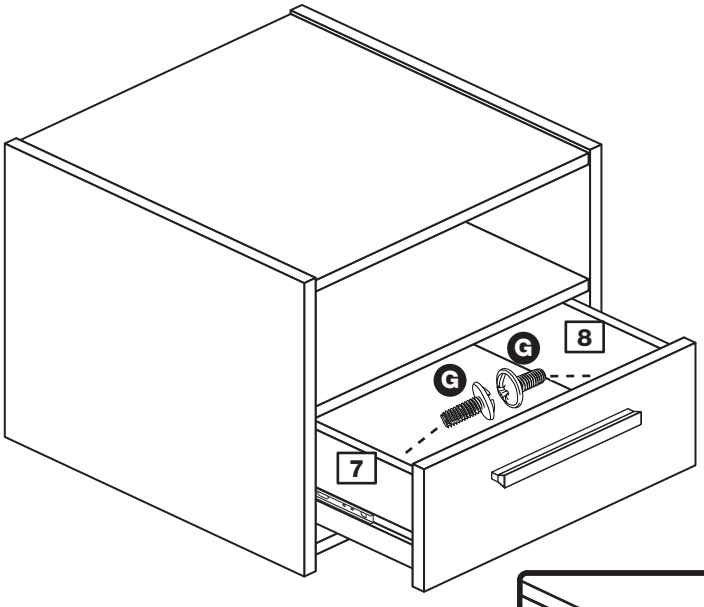

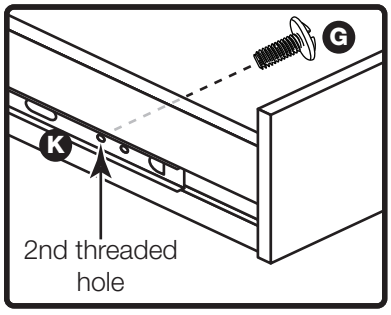

Step 19

Assembly is complete

Note: Now the assembly has finished you can remove any protective film from the panels.

