
Lima - Corner TV Unit

Assembly Instructions - Please keep for future reference

276/4296

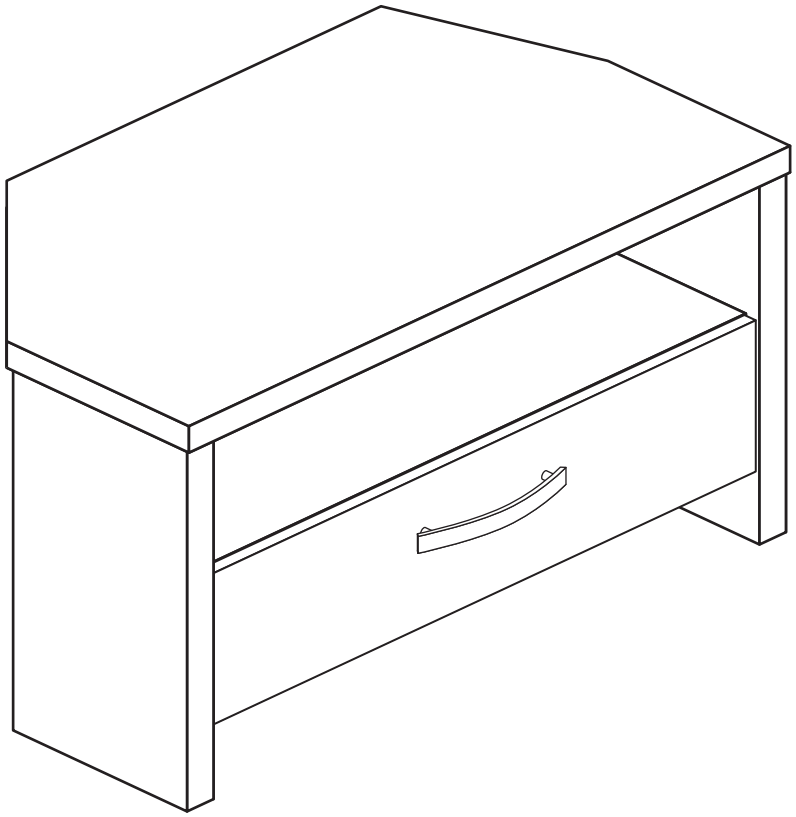

Dimensions
Width - 79.5cm
Depth - 39cm
Height - 51cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**

Issue 1 - 01/07/14

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 14kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** If there is any chance of this unit being pulled over by children etc. it is recommended that the unit is secured to a wall using suitable fixings (not supplied).

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*


Please check you have all the panels listed below

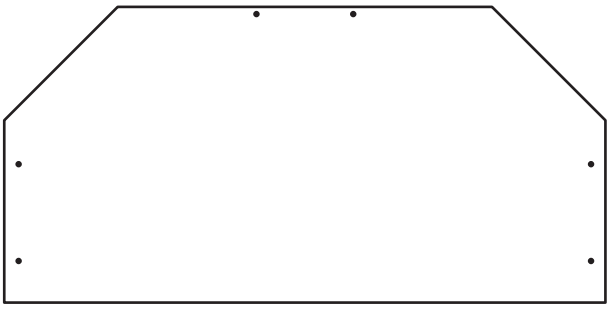


1 Top *(D1315A)*
(795 x 391mm)

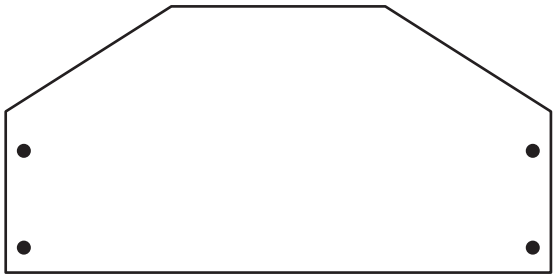


2 Horizontal *(D1318A)*
(721 x 352mm) x 2

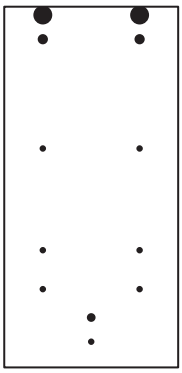


3 Side *(D1912A)*
(477 x 230mm) x 2

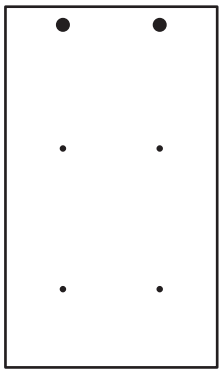

4 Upright *(D1319A)*
(477 x 280mm)



5 Plinth *(D1320A)*
(721 x 96mm)

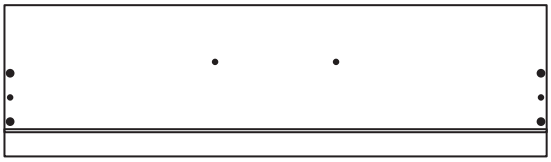

6 Drawer Front *(D1913A)*
(717 x 200mm)



7 Left Drawer Side *(W454LH)*
(200 x 115mm)



9 Drawer Back *(W454)*
(689 x 115mm)



8 Right Drawer Side *(W454RH)*
(200 x 115mm)



10 Drawer Base *(T454)*
(700 x 197mm)


Components - Fittings

If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A



Wooden dowel *(F22)* x 2

B




Metal dowel *(F901)* x 14

C




Large locking nut *(F900)* x 12

D

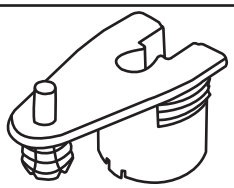

Hollow core locking nut (*F892)* x 4

E



Small metal dowel (*F893)* x 4

F



45mm Screw *(F65)* x 4

G



Small locking nut *(F3)* x 2

H



Knock-in Peg *(F171)* x 4

I



19mm Screw (*F461)* x 2

J




9mm Screw *(F74)* x 2

K



9mm Screw (*F73)* x 4

L

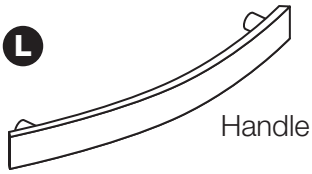


Handle *(F306)* x 1

M



Drawer runner *(F307)* x 2

Tools required

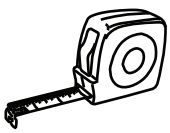

Rule



Cross-head screwdriver



Scissors




Hammer



Eye protection (when using a hammer or drill)

Ruler - Use this ruler to help correctly identify the screws

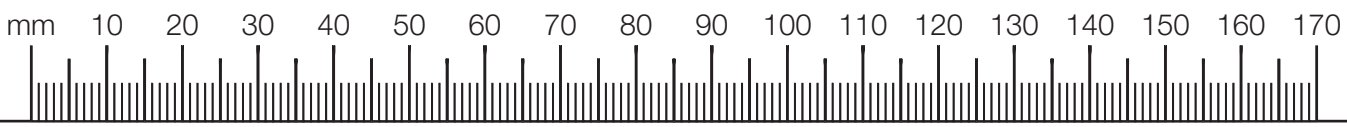

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare the drawer front

Screw 2 metal dowels B into the holes shown on the back of the drawer front 6.

Note: Tighten metal dowels up fully against the panel.

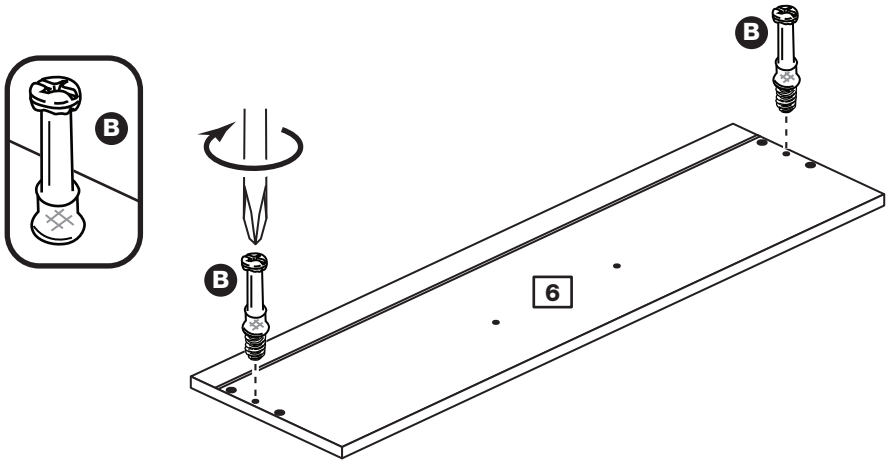


Step 2

Prepare the drawer sides

Insert a small locking nut G into the hole shown on the left drawer side 7 and right drawer side 8.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

Note: Due to the manufacturing process, the holes for the locking nut can be on either surface of the drawer sides.

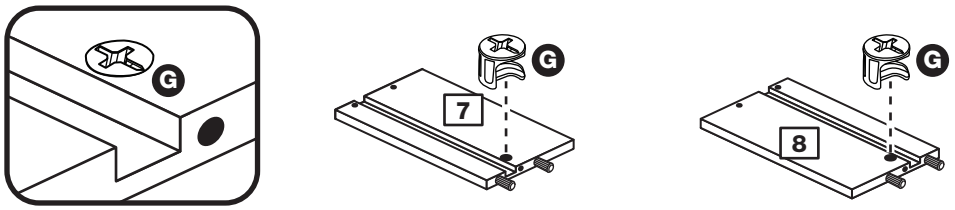


Step 3

Attach the drawer sides to the drawer front

Push the left drawer side 7 and right drawer side 8 onto the back of the drawer front 6.

Turn the small locking nuts G on the left drawer side 7 and right drawer side 8.

Note: Turn the locking nuts G clockwise to secure panels - more than 1/2 a turn.

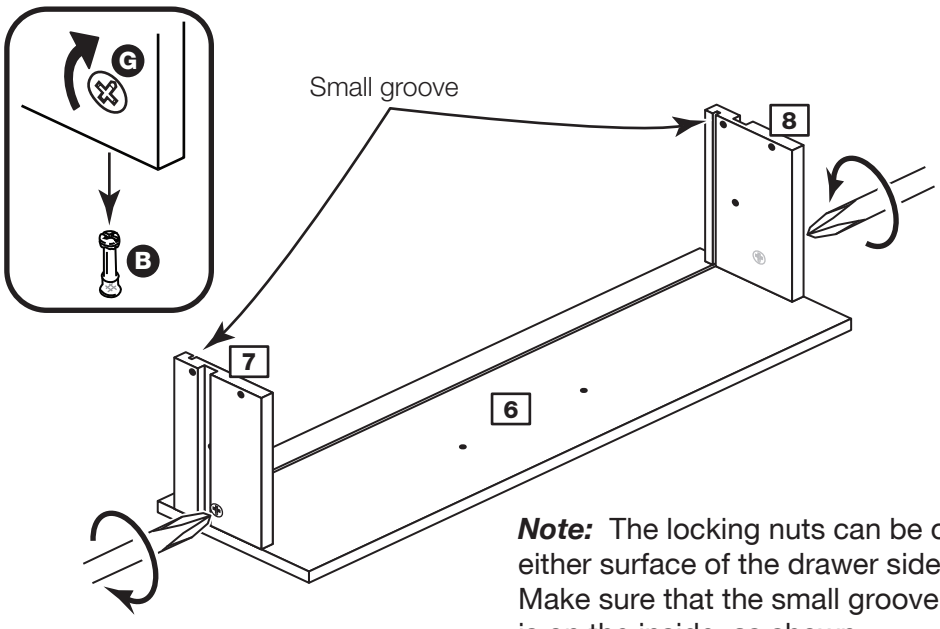


Note: The locking nuts can be on either surface of the drawer sides. Make sure that the small groove is on the inside, as shown.

Step 4

Fit the drawer base

Slide the drawer base [10] down the grooves in the drawer sides [7] and [8] and down into the groove in the drawer front [6].

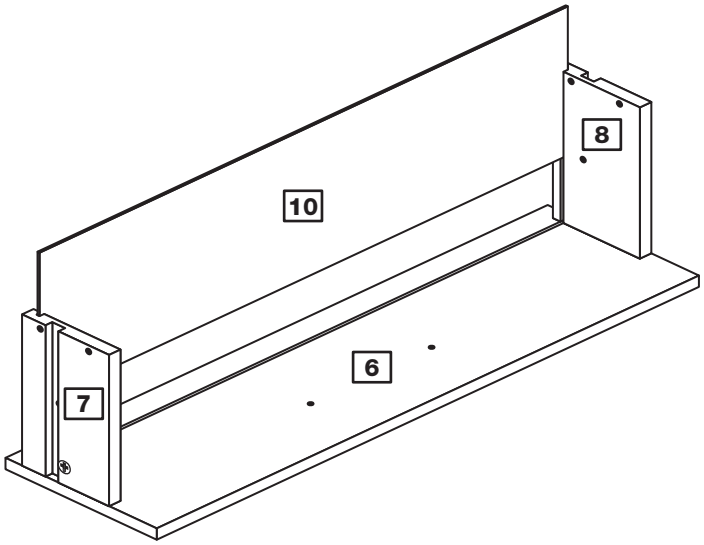


Step 5

Fit the drawer back

Fit the drawer back [9] between the drawer sides [7] and [8].

Make sure that the drawer base [10] fits into the groove in the drawer back [9].


Hold the drawer back [9] in position and tap the knock-in pegs (H) through the holes in the drawer sides [7] and [8].

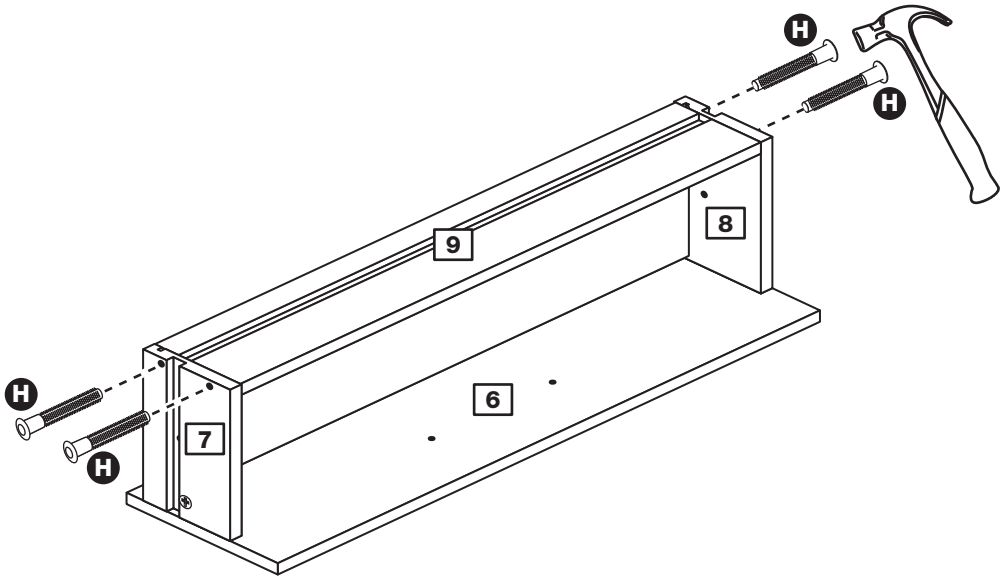

Step 6

Attach the handle

Attach the handle (L) to the drawer front [6] using 2 screws (I).

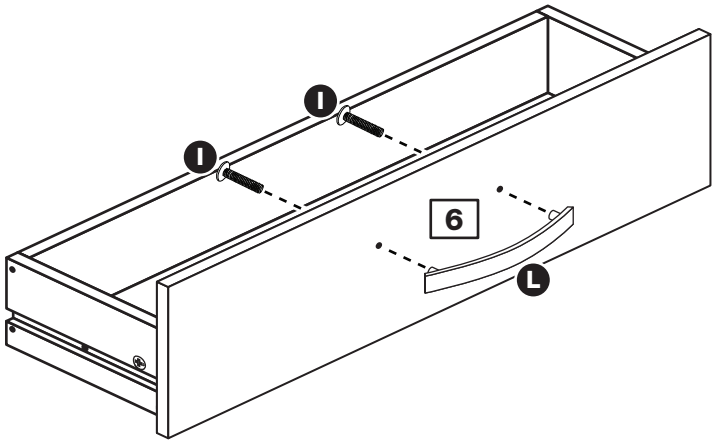



Assembly Instructions

Step 7


Prepare the left side


a: Place a runner (M) onto one of the sides [3]. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (K).

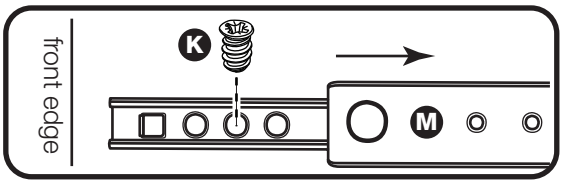

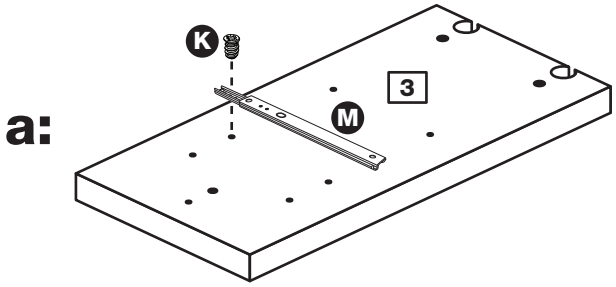

b: Slide the runner (M) back the other way and fit the 2nd screw (K) into the corresponding hole in the side [3].

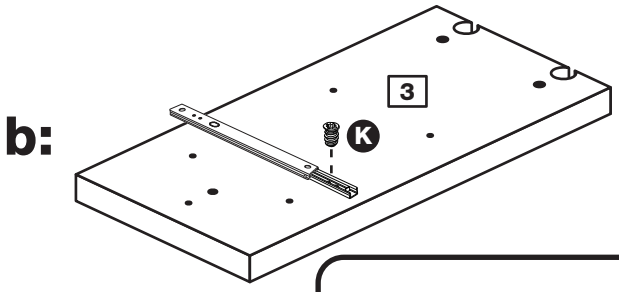


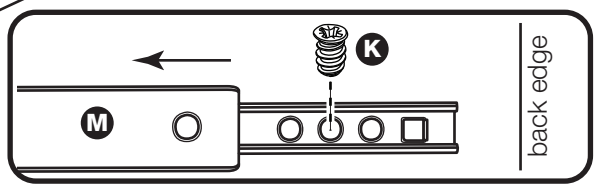


c: Screw 5 metal dowels (B) into the side [3].

Push 2 hollow core locking nuts (D) into the side [3], making sure that they are flush against the panel's surface.
Using a hammer, tap in the pin on the hollow core locking nut (D).

Note: The pin should be tapped in flush with the top surface of the hollow core locking nut (D).

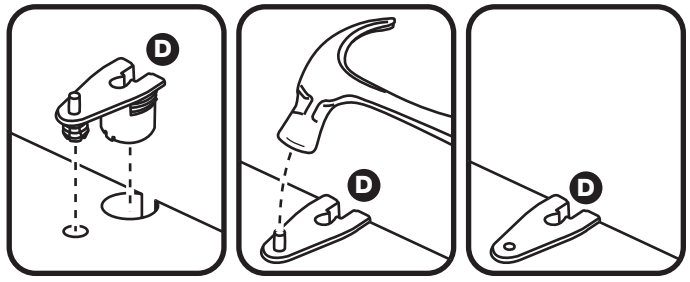


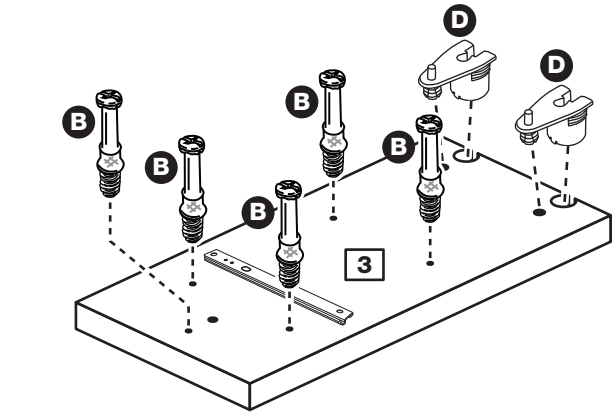


Step 8

Prepare the right side

a: Place a runner (M) onto one of the sides [3]. Slide back the top of runner and use the 2nd hole from the front to fit the 1st screw (K).

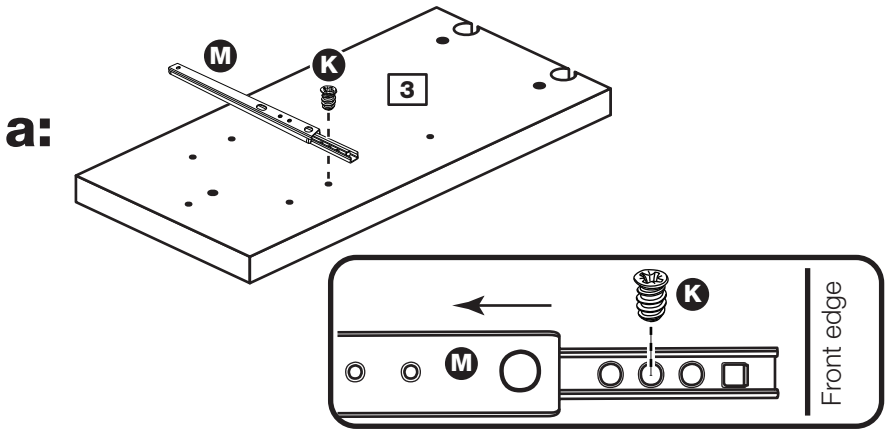


b: Slide the runner (M) back the other way and fit the 2nd screw (K) into the corresponding hole in the side [3].

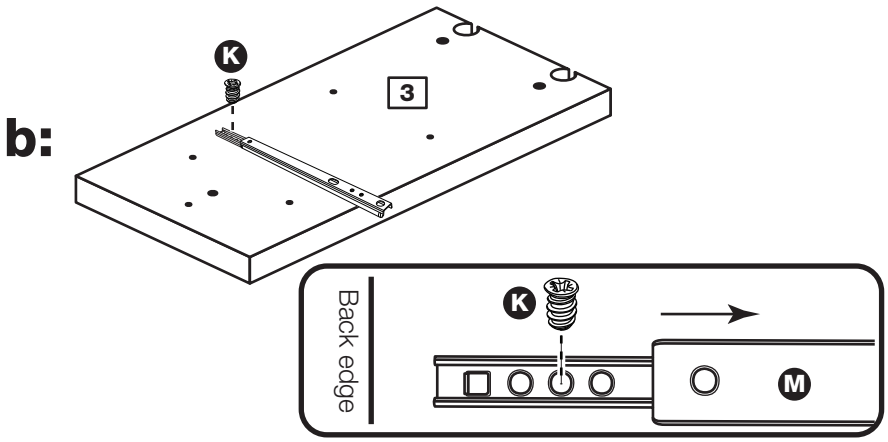

c: Screw 5 metal dowels (B) into the side [3].

Push 2 hollow core locking nuts (D) into the side [3], making sure that they are flush against the panel's surface.
Using a hammer, tap in the pin on the hollow core locking nut (D).

Note: The pin should be tapped in flush with the top surface of the hollow core locking nut (D).

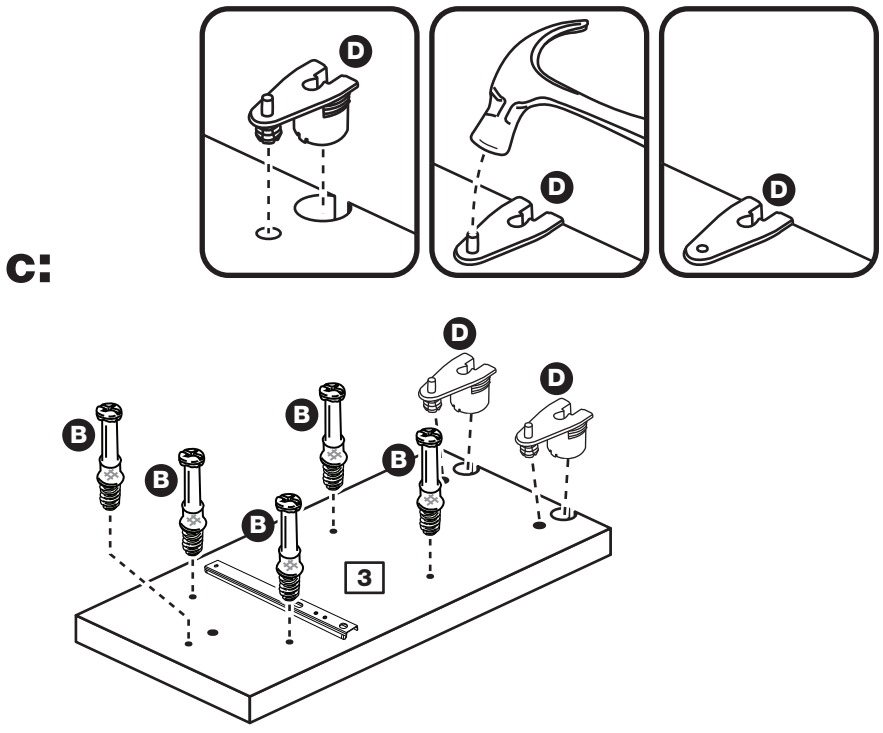

Assembly Instructions


Step 9

Prepare the top

Screw 2 metal dowels B into the top 1.

Screw 4 small metal dowels E into the holes on the top 1.

Note: Tighten metal dowels up fully against the panels.

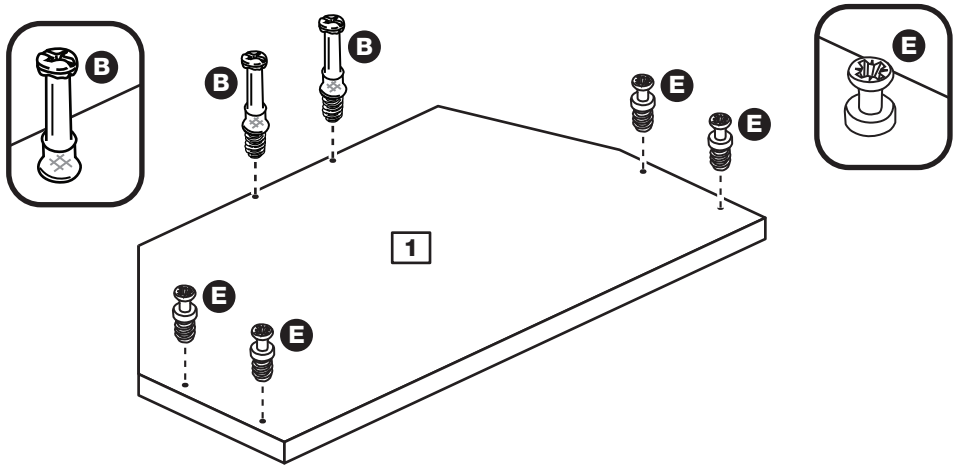


Step 10

Join the top to a side

Attach the top 1 to the right side 3.

Note: You will need to slide the 2 small metal dowels E into the top of the 2 hollow core locking nuts D.

Insert a screwdriver into the 2 hollow core locking nuts D and turn the nuts inside as far as they will go.

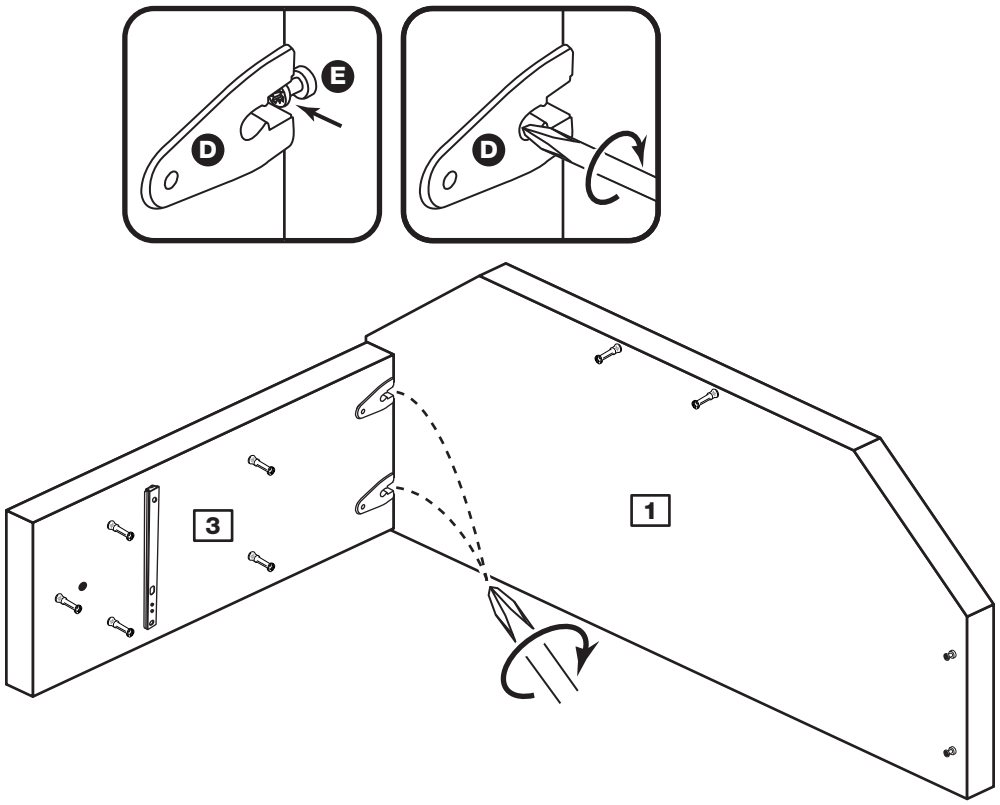


Step 11

Prepare the 2 horizontals

Insert 4 large locking nuts C into each horizontal 2.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

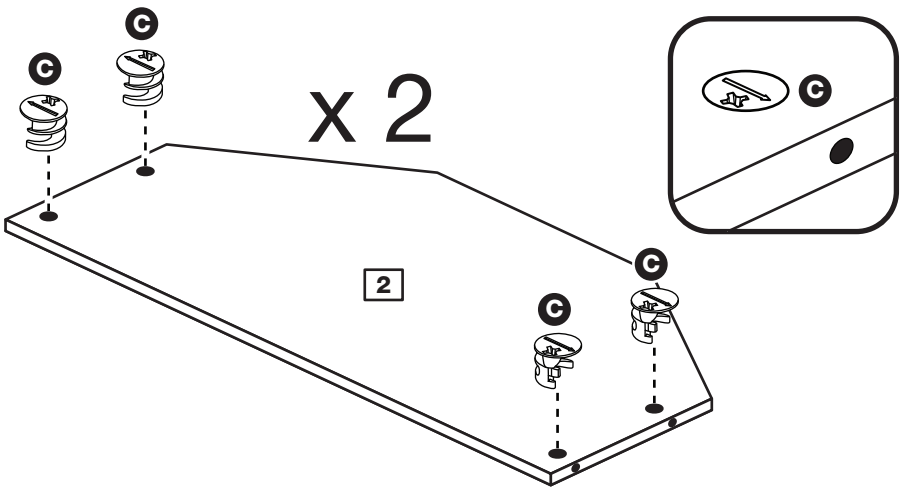

Assembly Instructions


Step 12

Fit a horizontal

Push a horizontal 2 onto the right side 3.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the horizontal 2.

Note: Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

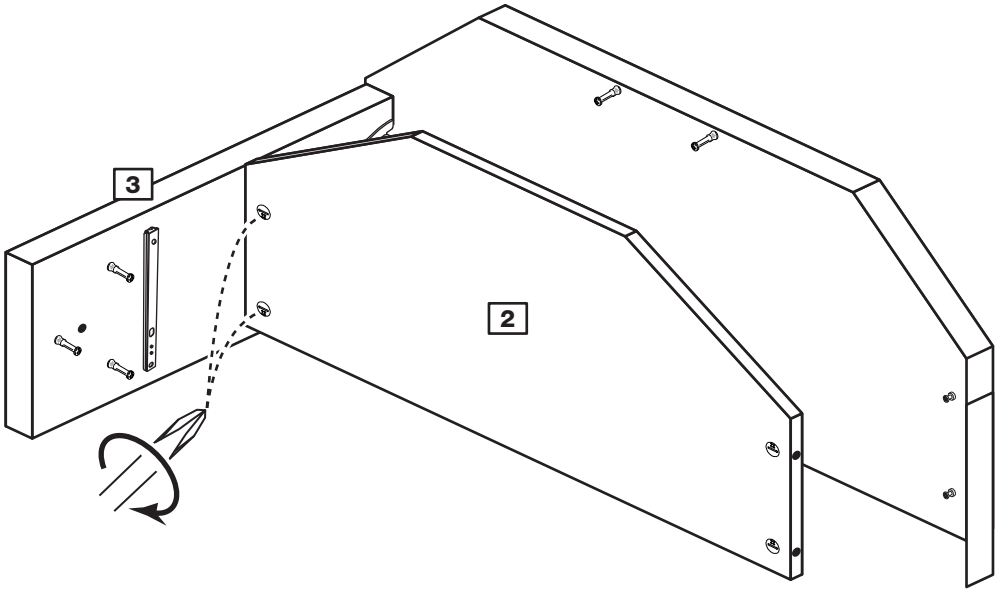


Step 13

Fit the other horizontal

Push the other horizontal 2 onto the right side 3.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the horizontal 2.

Note: Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

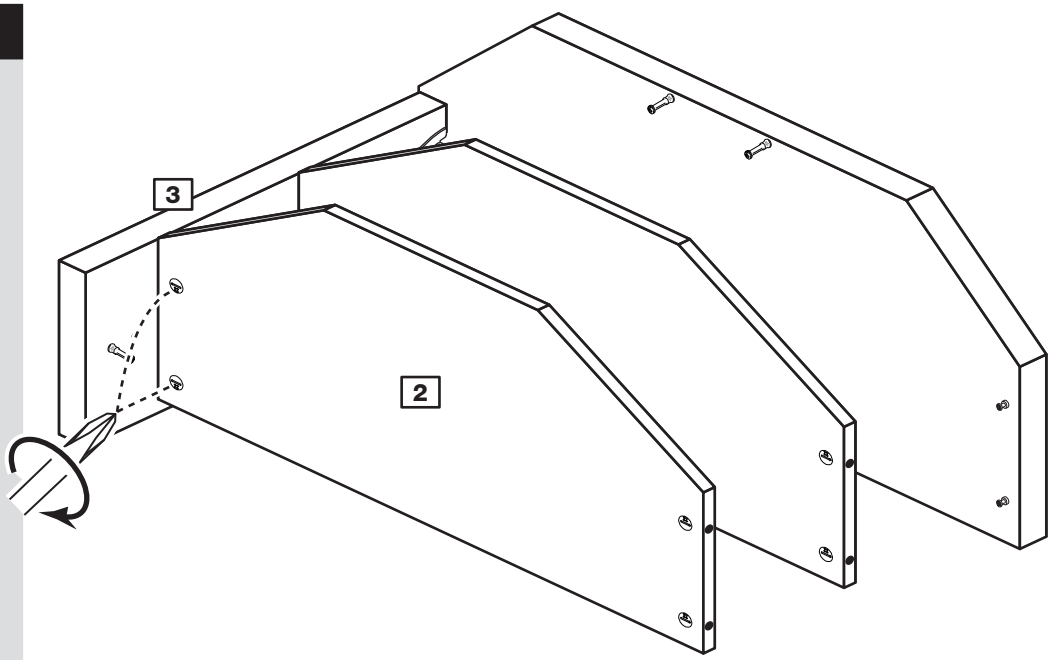


Step 14

Prepare the plinth

Tap 2 wooden dowels A into the plinth 5.

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Insert 2 large locking nuts C into the plinth 5.

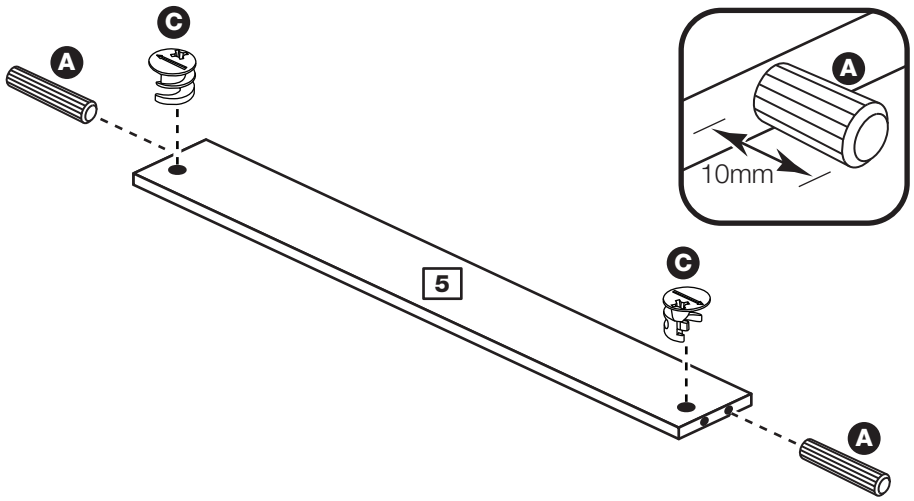


Step 15

Fit the plinth

Push the plinth [5] onto the right side [3].

Use a screwdriver to tighten the large locking nut C fitted to the plinth [5].

Note: Turn the large locking nut C as far as it will go - more than 1/2 a turn.

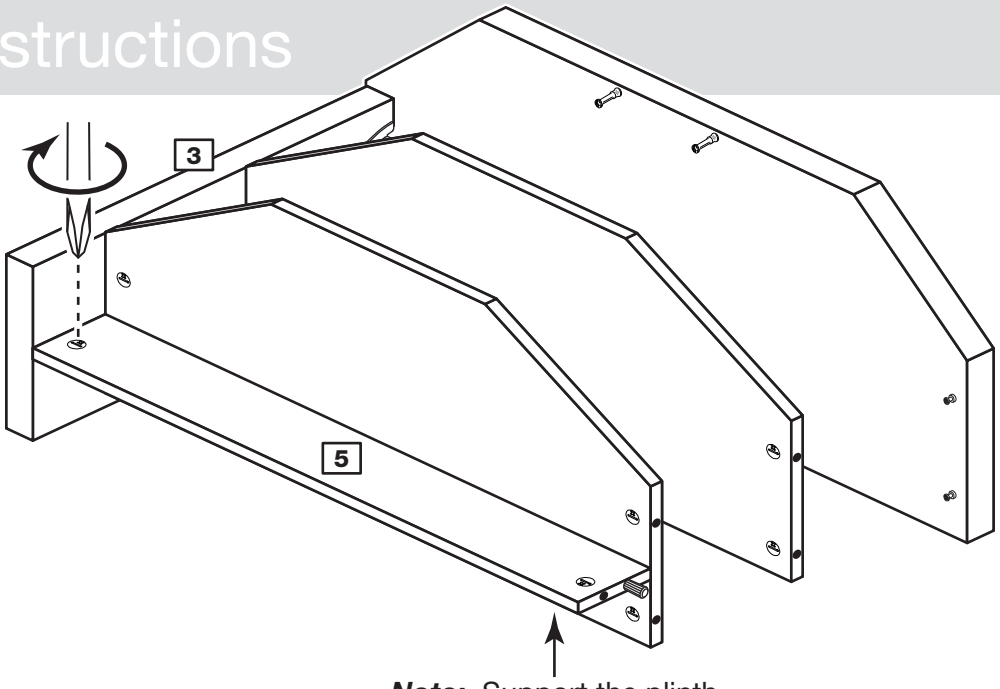

Note: Support the plinth until the side has been fitted in the next step.


Step 16

Fit the other side

Push the left side [3] onto the assembly.

Insert a screwdriver into the 2 hollow core locking nuts D and turn the nuts inside as far as they will go.

Use a screwdriver to tighten the 5 large locking nuts C fitted to the 2 horizontals [2] and the plinth [5].

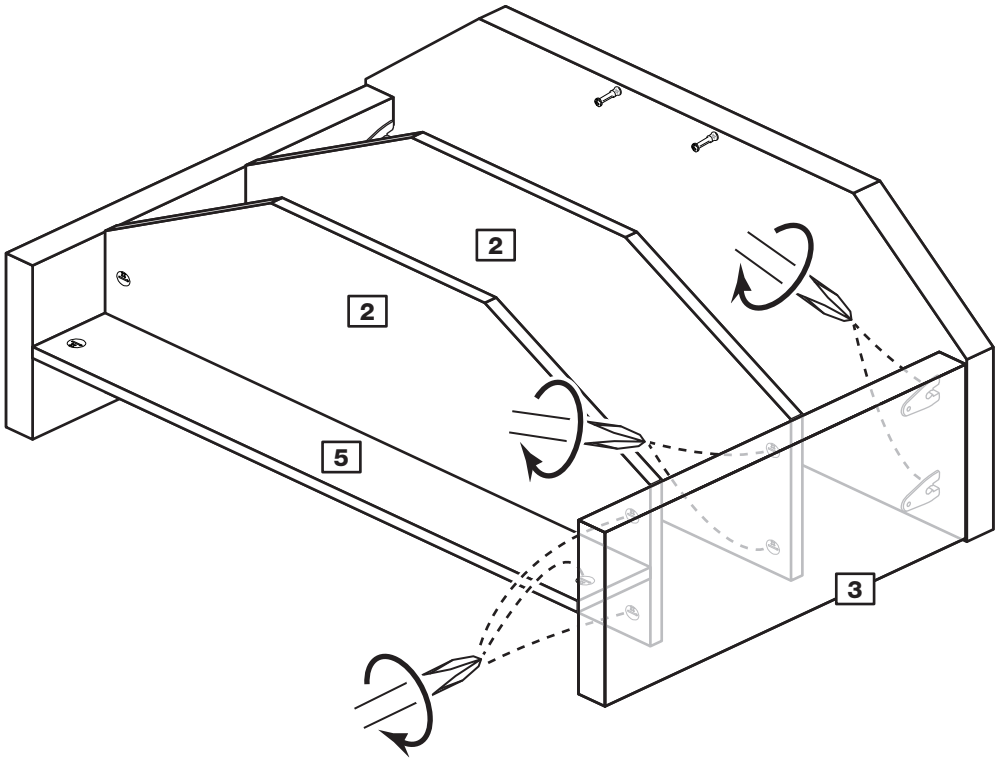


Step 17

Prepare the upright

Insert 2 large locking nuts C into the upright [4].

Note: The arrow on the locking nuts **must** point towards the hole in the edge of the panel.

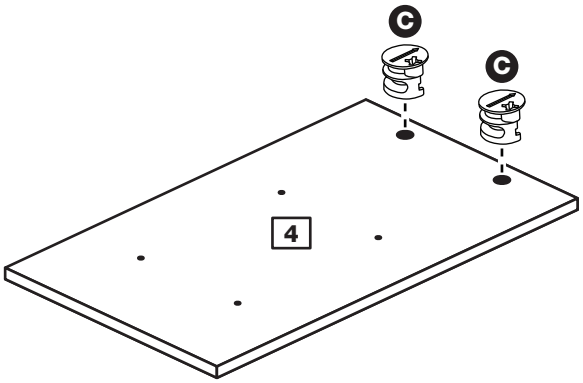

Step 18

Fit the upright


Push the upright 4 onto the top 1.

Use a screwdriver to tighten the 2 large locking nuts C fitted to the upright 4.

Note: Turn the large locking nuts C as far as they will go - more than 1/2 a turn.

Screw through the 4 holes in the upright 4 and into the back edge of the 2 horizontals 2 using screws F.

Stand the unit up.

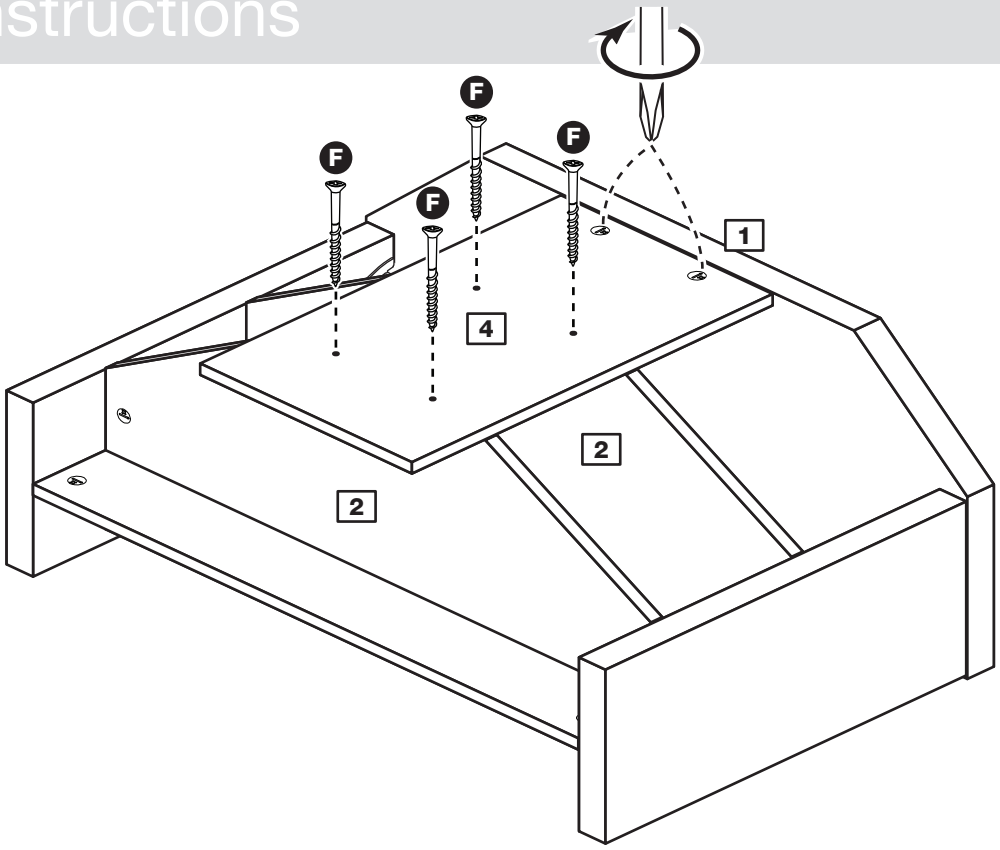


Step 19


Fit the drawer

Slide both of the runners M forward and locate the drawer sides 7 and 8 between them, lining up the holes in the drawer wrap with the 2nd 'threaded' holes in the runners M.

Working from the inside of the drawer, insert 2 screws J through the drawer sides and out into the 2nd threaded hole in the runner.

Assembly is complete

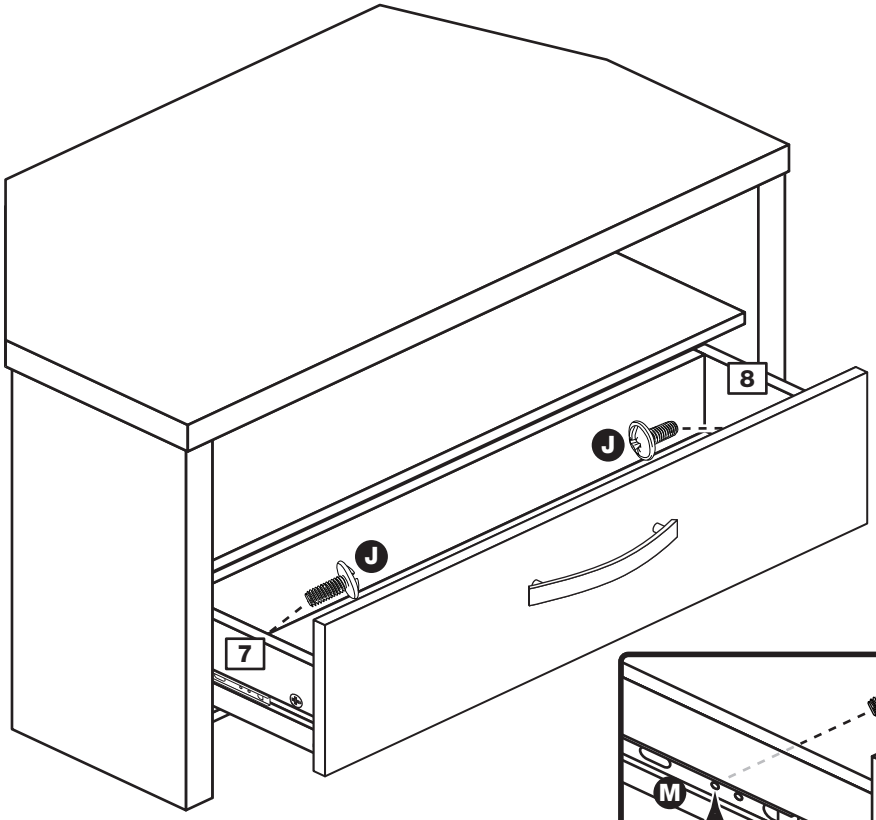

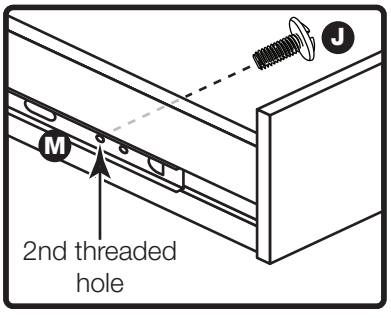

Note: Do not overtighten the screws. If they catch on the runner you may need to loosen them slightly.

If you need help or have damaged or missing parts, call the **Customer Helpline: 08456 400800**
and quote the reference numbers on the component pages.
Argos Ltd, 489-499 Avebury Boulevard, Central Milton Keynes, MK9 2NW