
Faris Bed

IMPORTANT - READ CAREFULLY - RETAIN FOR FUTURE REFERENCE

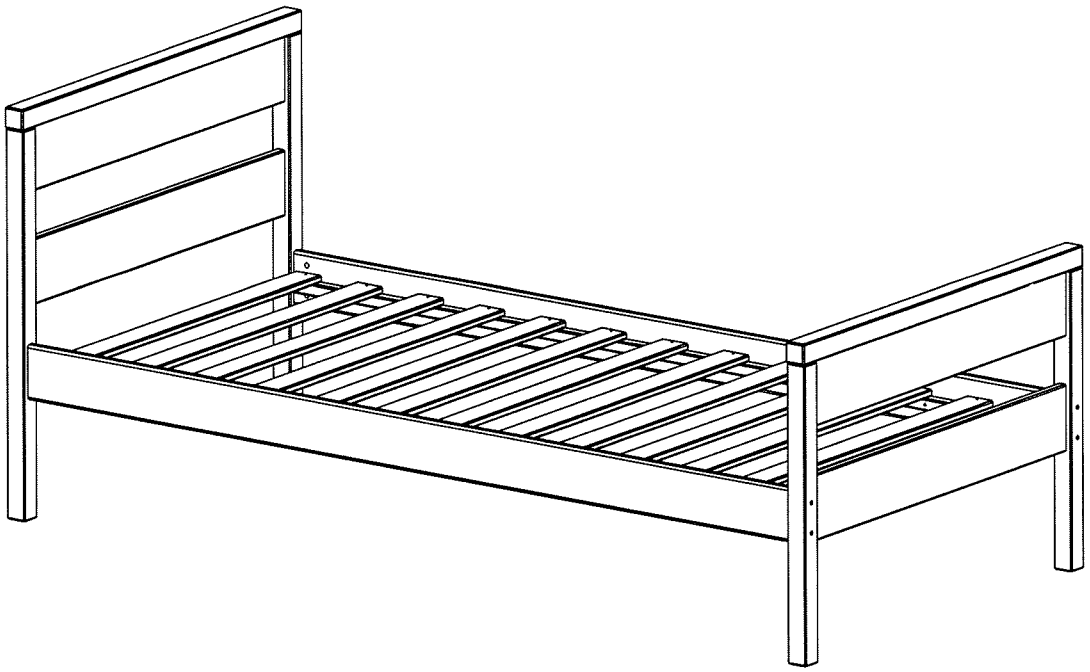

Dimensions

Width - 199,0cm

Depth - 98,0cm

Height - 87,0cm

Assembly instruction - read these instruction fully before starting assembly

If you need help or have damaged or missing parts, call the Customer Helpline: 01278 422839

Issue 1 - 22/05/14

⚠ Safety and Care Advice

Important - Please read these instructions fully before starting assembly

. Check you have all the components and tools listed on pages 2 and 3.

. Remove all fittings from the plastic bags and separate them into their groups.

. Keep children and animals away from the work area, small parts could choke if swallowed.

. Make sure you have enough space to layout the parts before starting.

. Do not stand or put weight on the product, this could cause damage.

. Assemble the item as close to its final position (in the same room) as possible.

. Assemble on a soft level surface to avoid damaging the unit or your floor.

. Parts of the assembly will be easier with 2 people.



. We do not recommend the use of power drill/drivers *for inserting screws*, as this could damage the unit. Only use hand screwdrivers.

. Dispose of all packaging carefully and responsibly.

Care and maintenence


Wipe clean with a damp cloth. Use only water or a gentle detergent. Wipe dry with a clean cloth.

It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.


Note: if required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.

Components - panels

Please check you have all the panels listed below

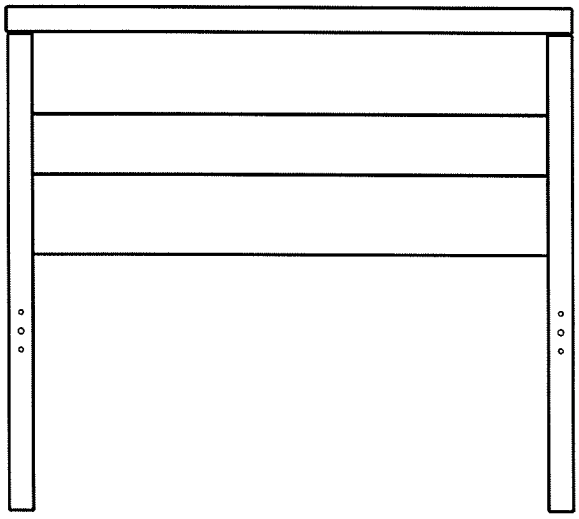

1 Headboard **x1**(98,0x87,0 cm)

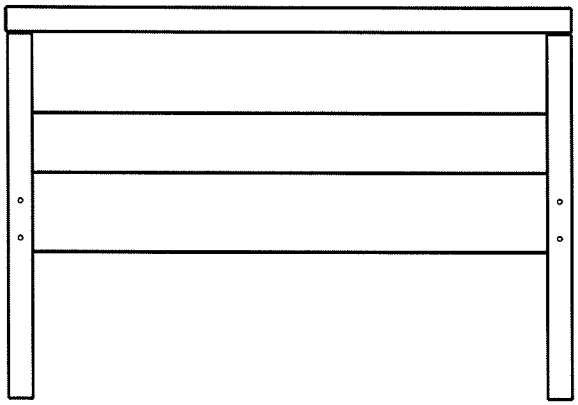

2 Footboard **x1**(98,0x68,0 cm)



3 Side **x2**(190,0x11,5 cm)






4 Slat **x13**(90,7x6,5 cm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 01278 422839**


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.


A  Wooden dowel x4	**B**  90mm Bolt x8	**C**  13mm Barrel nut x8
D  30 mm Wooden screw x26	**E**  Z-key x1	


Tools required


Phillips screwdriver (medium)



Flatblade screwdriver (medium)


Small hammer


Ruler/tape measure


Eye protection (when using a hammer or glue)

Ruler - Use this ruler to help correctly identify the screws




Assembly Instructions

Step 1

Insert dowels


Insert wood dowel Ⓐ in Side [3].

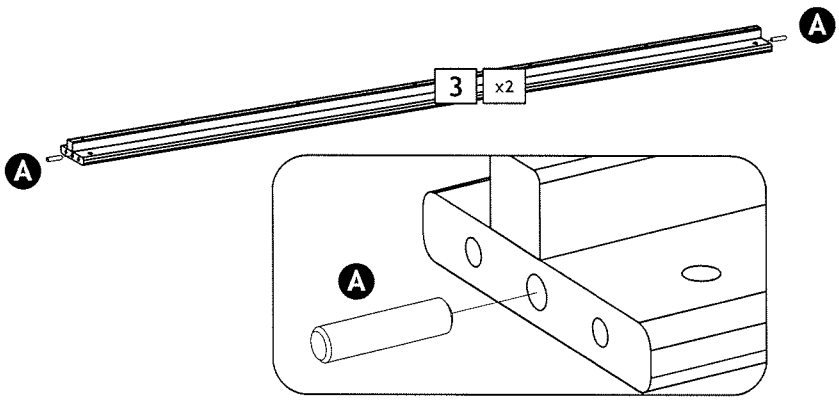


Step 2

Assembling frame

Mount side [3] and Headboard [1] and Footboard [2] using bolt Ⓑ with barrel nut Ⓒ.

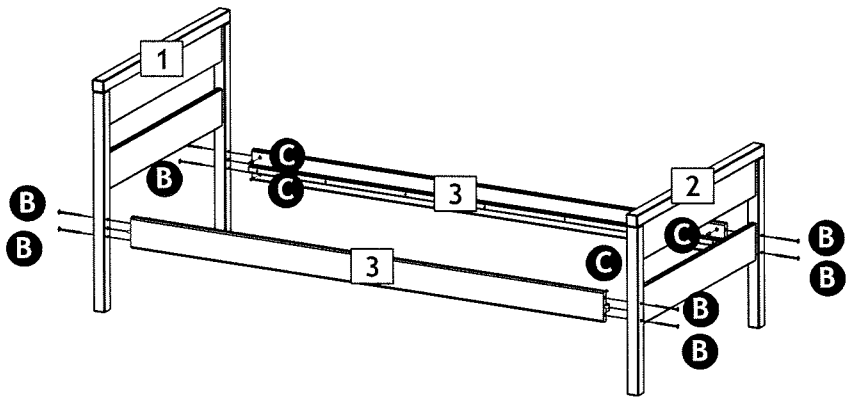

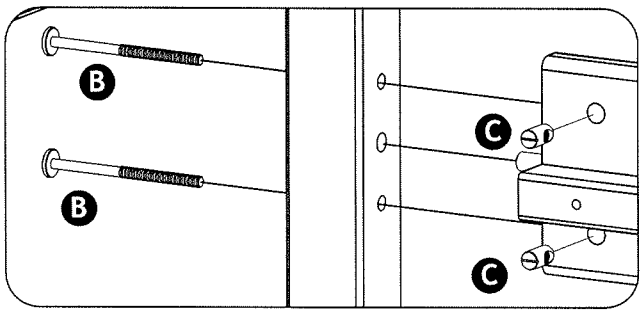

Assembly Instructions

Step 3

Adjust slats

Place one slat 4 in center of bed and next slat place with 87 mm space, using wooden screw D

Attention: Start assembling slats 4 from center of the bed

