
Anderson - Tall Bookcase

Assembly Instructions - Please keep for future reference

290/5323

609/6472

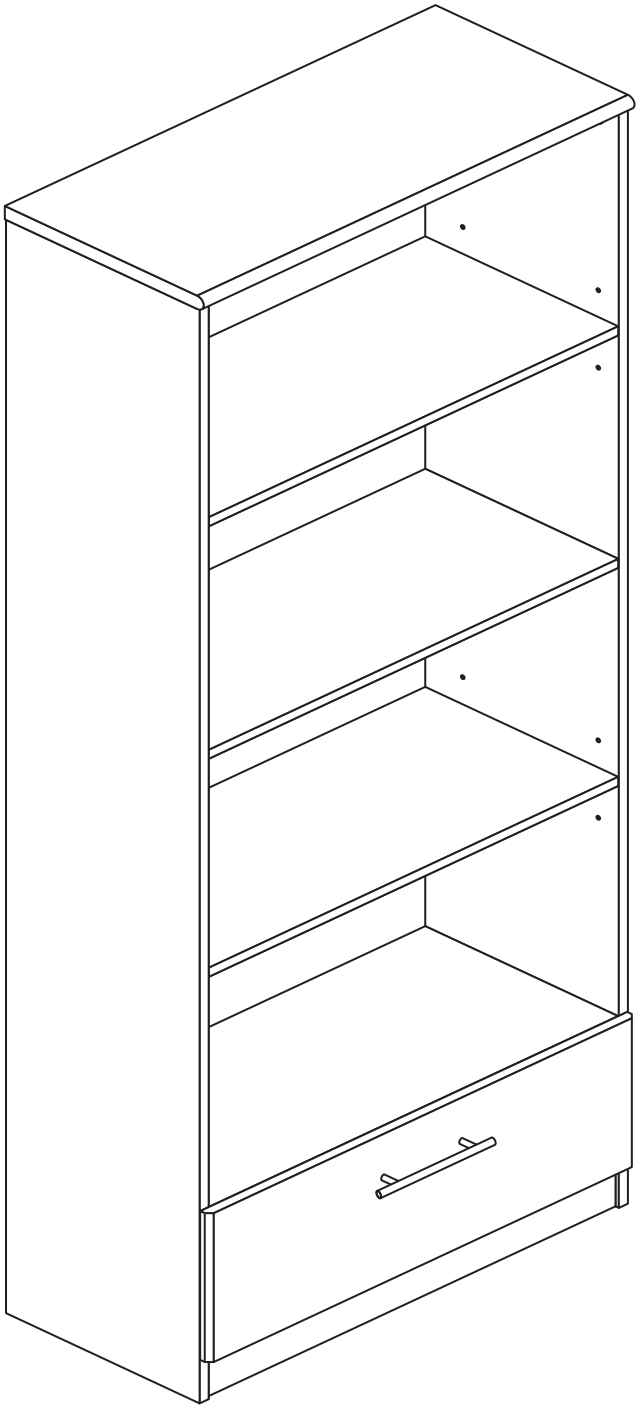

Dimensions
Width - 71.5cm
Depth - 33.5cm
Height - 183.5cm

MADE IN BRITAIN

Important - Please read these instructions fully before starting assembly

If you need help or have damaged or missing parts, call the **Customer Helpline: 03456 400800**

Issue 3 - 22/01/15

Safety and Care Advice

Important - Please read these instructions fully before starting assembly

• ***Warning:*** This unit weighs approximately 32kgs.
Please lift with care.

• Check you have all the components and tools listed on pages 2 and 3.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Parts of the assembly will be easier with 2 people.

• Make sure you have enough space to layout the parts before starting.

• Do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor (use opened out unit carton).



• We do not recommend the use of power drill/drivers ***for inserting screws***, as this could damage the unit. Only use hand screwdrivers.

• **Safety note:** It is recommended that this unit is secured to a wall using the overbalance protector kit supplied or, an alternative fixing method of your choice.

• Dispose of all packaging carefully and responsibly.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.


• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Note: If required the next page can be cut out and used as reference throughout the assembly. Keep this page with these instructions for future reference.


Components - Panels

If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

Please check you have all the panels listed below

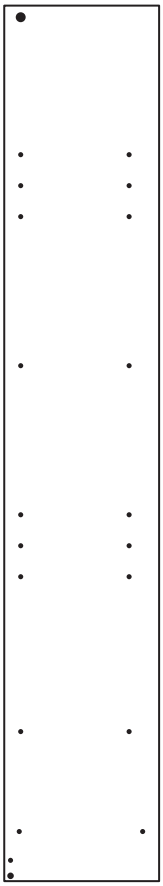

1 Left Side *(D2287A)*
(1809 x 320mm)

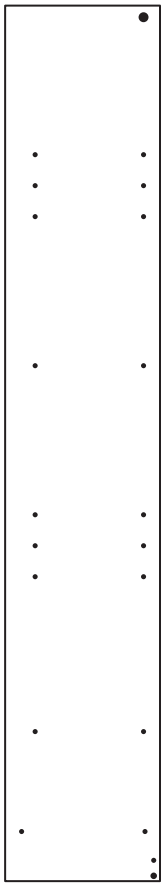

2 Right Side *(D2288A)*
(1809 x 320mm)




3 Top *(D2286A)*
(712 x 329mm)




4 Horizontal *(D2289A)*
(678 x 319mm) x 2




5 Shelf *(D2290A)*
(677 x 319mm) x 2




6 Plinth *(D2292A)*
(678 x 60mm) x 2

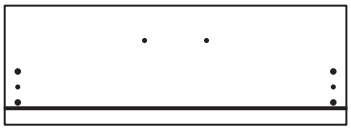

7 Drawer Front *(D2291A)*
(706 x 246mm)



8 Left Drawer Side *(W415LH)*
(320 x 150mm)




9 Right Drawer Side *(W415RH)*
(320 x 150mm)



10 Drawer Back *(W527)*
(626 x 150mm)



11 Drawer Base *(T527)*
(637 x 317mm)

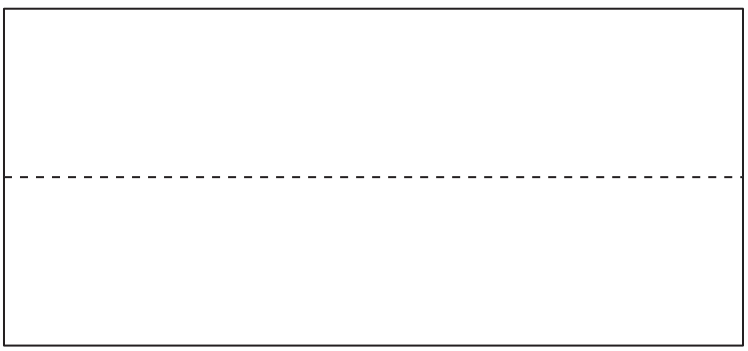


12 Back *(X887)*
(1527 x 696mm)

Components - Fittings


If you have damaged or missing components, call the **Customer Helpline: 03456 400800** *quoting the reference numbers below*

Please check you have all the fittings listed below


Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.

A 

Wooden dowel *(F22)* x 4

B 

Metal dowel *(F901)* x 14

C 

Shelf stud *(F110)* x 8

D

Nail *(F51)* x 30

E 

Large locking nut *(F900)* x 12

F 

Small locking nut *(F3)* x 2

G 

13mm Screw *(F52)* x 4

H 

Knock-in Peg *(F171)* x 4

I 


13mm Screw *(F63)* x 4

Ja 


L Runner *(F961)* x 1

Jb 


R Runner *(F962)* x 1

Jc 


L Runner *(F963)* x 1

Jd 


R Runner *(F964)* x 1

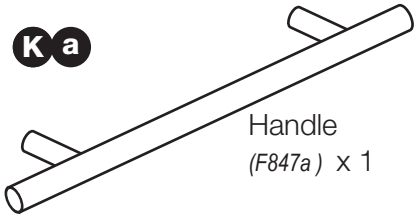Ka 

Handle *(F847a)* x 1

Kb 

Handle Screw *(F847b)* x 2

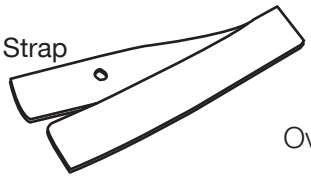L 

Strap




Screw



Washer x 2

Overbalance protector kit *(F269)* x 1

Tools required

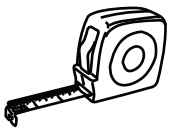

Rule



Cross-head screwdriver



Scissors



Hammer




Eye protection (when using a hammer or drill)



Electric drill (do not use for fitting screws)

Ruler - Use this ruler to help correctly identify the screws

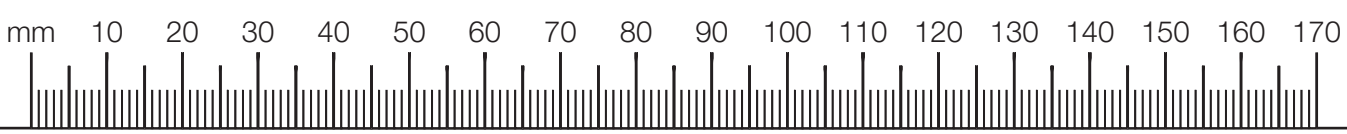

Assembly Instructions


If you have damaged or missing components, call the **Customer Helpline: 08456 400800** *quoting the reference numbers below*

Step 1

Prepare the drawer front

Screw 2 metal dowels B into the holes shown on the back of the drawer front 7.

Note: Tighten the metal dowels up fully against the panels.

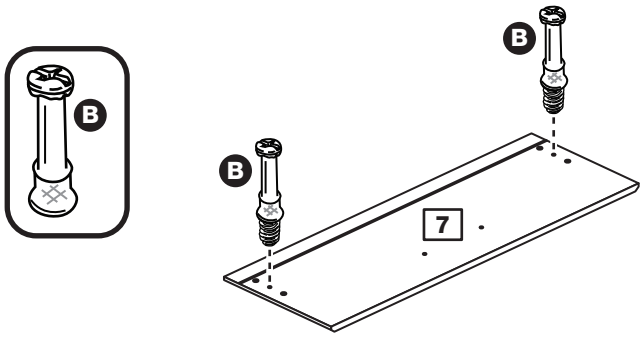


Step 2

Prepare the drawer sides

Insert a small locking nut F into the hole shown on the left drawer side 8 and right drawer side 9.

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

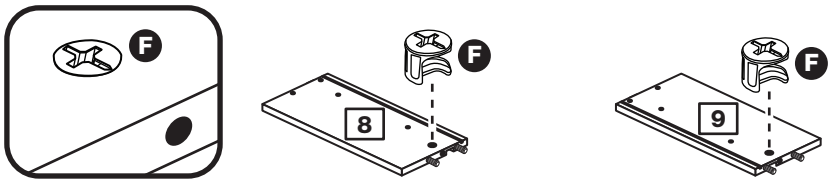


Step 3


Attach the drawer sides to the drawer front

Push the left drawer side 8 and right drawer side 9 onto the back of the drawer front 7.

Turn the small locking nuts F on the left drawer side 8 and right drawer side 9.

Note: Turn the locking nuts F clockwise to secure panels - more than 1/2 a turn.

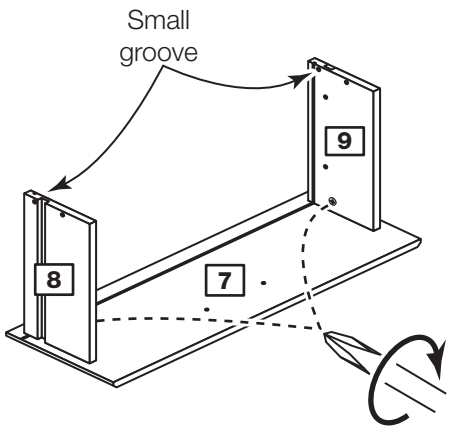


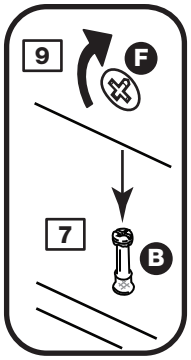

Step 4

Fit the drawer base

Slide the drawer base 11 down the grooves in the drawer sides 8 and 9 and down into the groove in the drawer front 7.

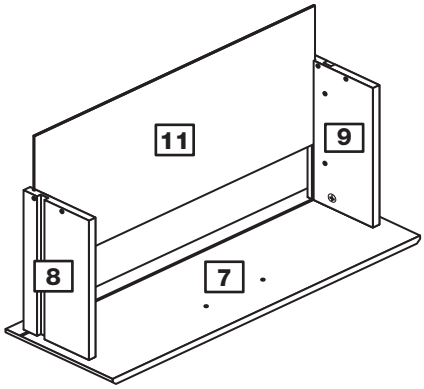


Step 5

Fit the drawer back

Fit the drawer back 10 between the drawer sides 8 and 9.

Make sure that the drawer base 11 fits into the groove in the drawer back 10.


Hold the drawer back 10 in position and tap the knock-in pegs H through the holes in the drawer sides 8 and 9.

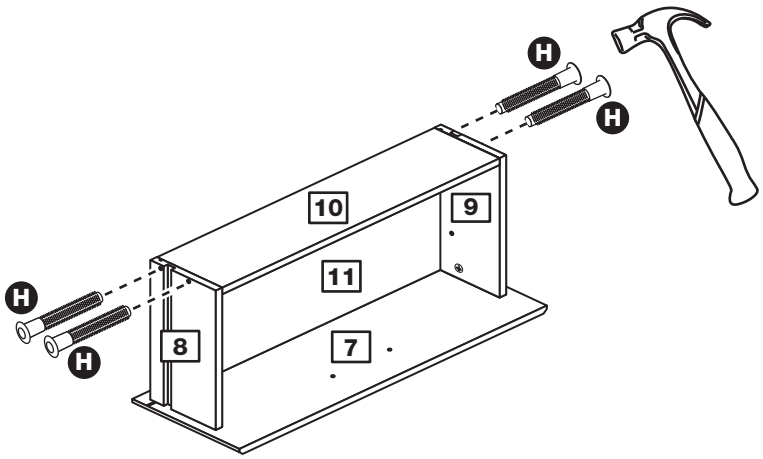

Step 6

Attach the handle

Attach the handle Ka to the drawer front 7 using 2 screws Kb.

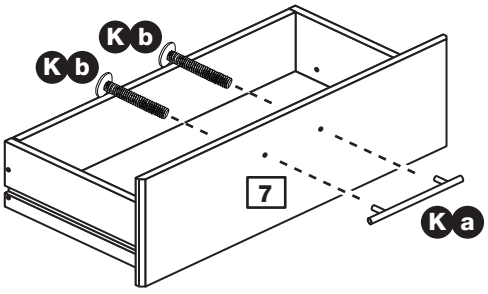


Assembly Instructions

Step 7

Fit runners to the drawers

Fit the runner Jc to the bottom edge of the left drawer side 8, as shown, making sure that it is pushed up against the back of the drawer front 7. Use a bradawl to mark the fixing positions, then secure with 2 screws I.

Fit the runner Jd to the bottom edge of the right drawer side 9 using the same method.

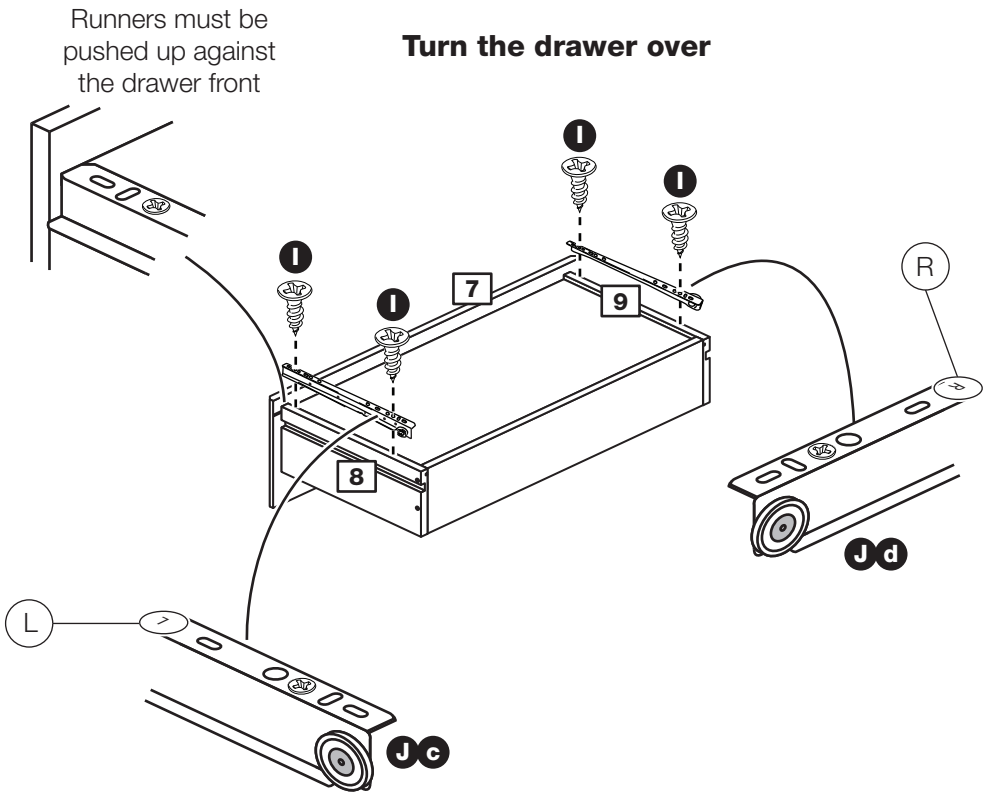

Step 8

Prepare the left side

Tap a wooden dowel A into the left side 1.


Screw 5 metal dowels B into the left side 1.


Insert a large locking nut E into the left side 1.

Fit the runner Ja to the left side 1.


The 1st screw G uses the 2nd hole in from the front of the runner Ja.

The 2nd screw G uses the hole that lines up with the other panel hole.

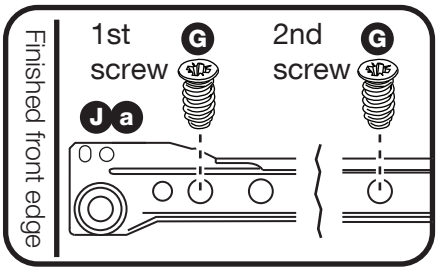

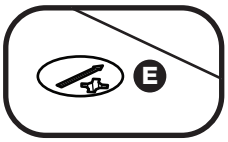

Note: The arrow on the locking nut **must** point towards the hole in the edge of the panel.

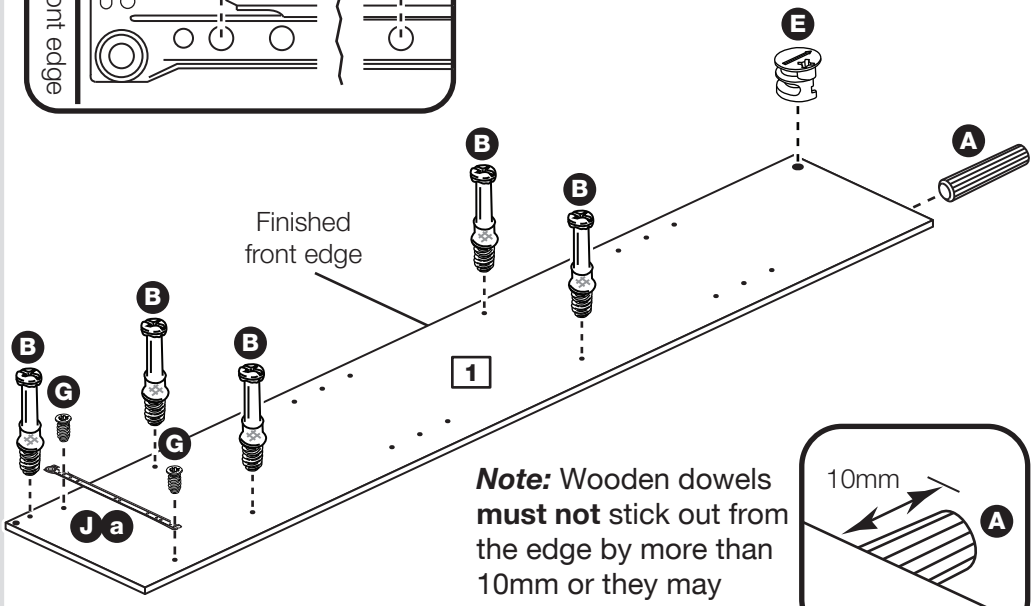

Note: Wooden dowels **must not** stick out from the edge by more than 10mm or they may damage other panels.

Step 9

Prepare the right side

Tap a wooden dowel A into the right side 2.


Screw 5 metal dowels B into the right side 2.

Insert a large locking nut E into the right side 2.

Fit the runner Jb to the right side 2.

The 1st screw G uses the 2nd hole in from the front of the runner Jb.


The 2nd screw G uses the hole that lines up with the other panel hole.

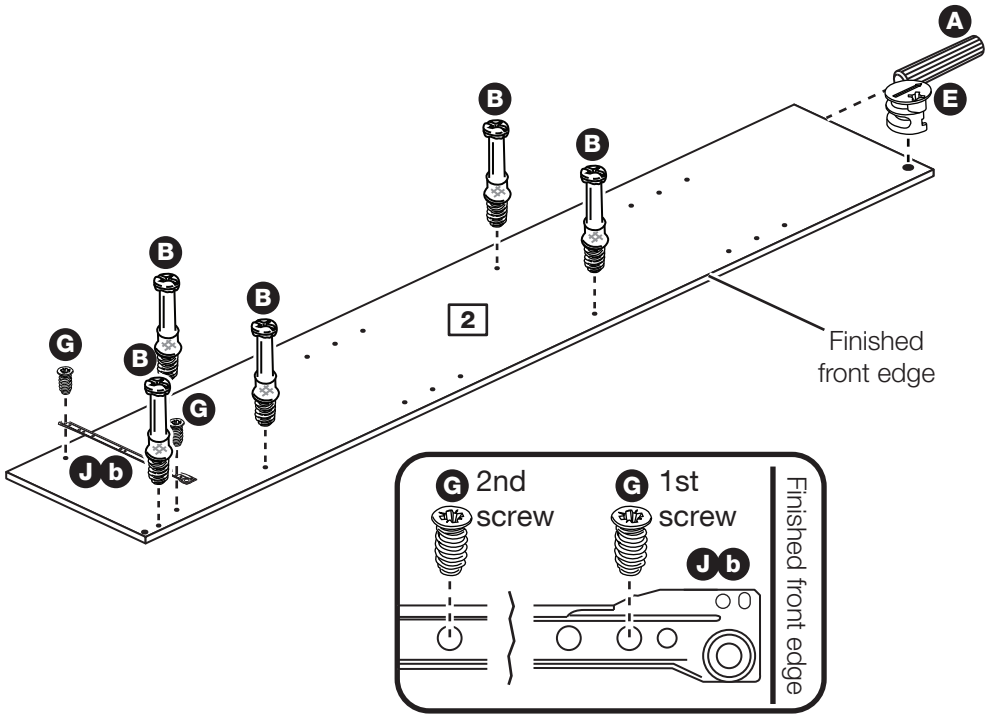

Step 10

Prepare the 2 horizontals

Insert 4 large locking nuts E into each of the horizontals 4.

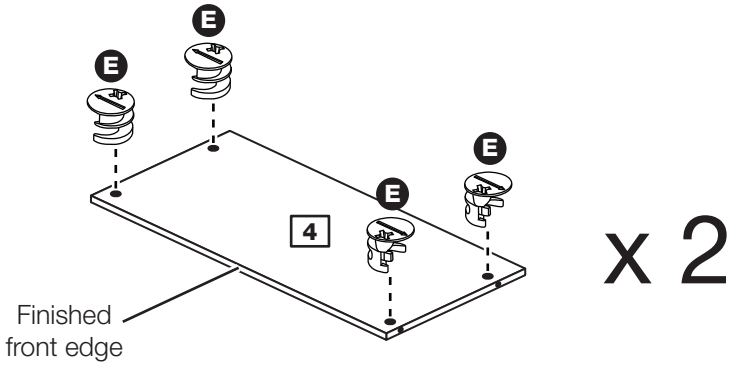

Assembly Instructions


Step 11

Join the right side and horizontals

Push the 2 horizontals [4] onto the right side [2].

Use a screwdriver to tighten the 2 large locking nuts (E) fitted to each of the 2 horizontals [4].

Note: Turn the large locking nuts (E) as far as they will go - more than 1/2 a turn.

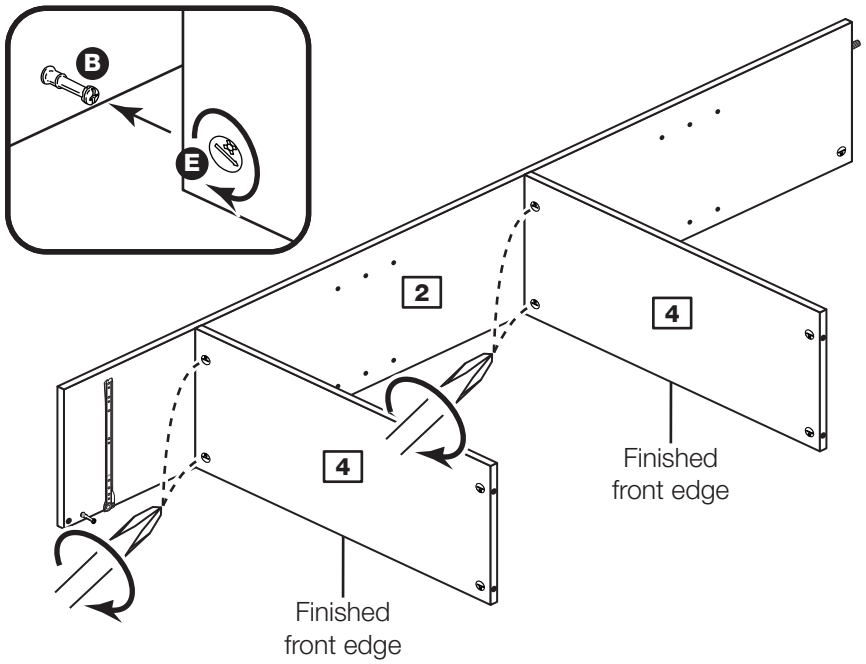


Step 12

Prepare the plinth

Tap 2 wooden dowels (A) into the plinth [6].

Insert 2 large locking nuts (E) into the plinth [6]

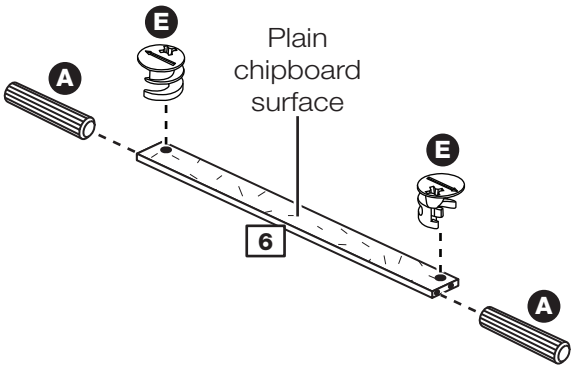


Step 13

Fit the plinth

Push the plinth [6] onto the right side [2].

Use a screwdriver to tighten the large locking nut (E) fitted to the plinth [6].

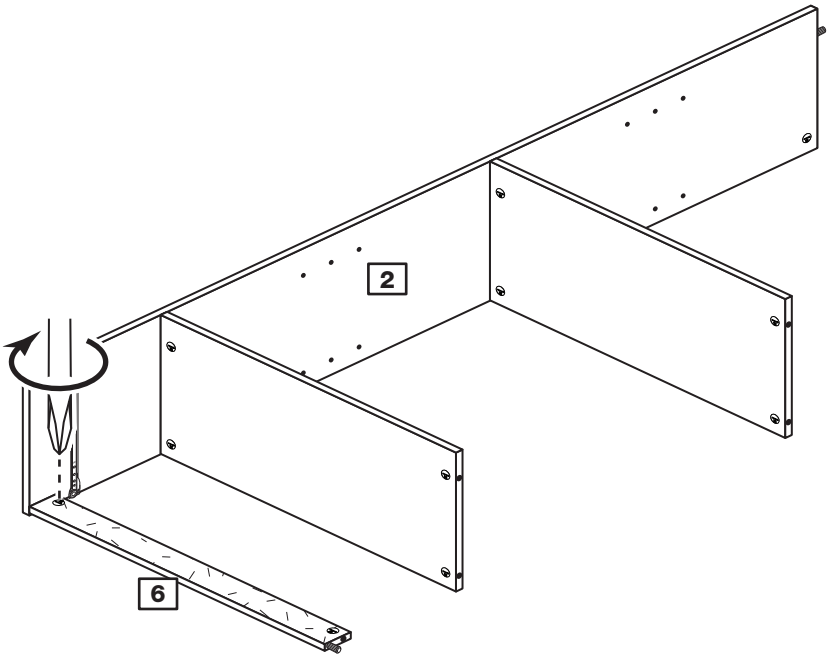


Step 14

Fit the left side

Push the left side 1 onto the assembly.


Use a screwdriver to tighten the 5 large locking nuts E fitted to the 2 horizontals 4 and the plinth 6.

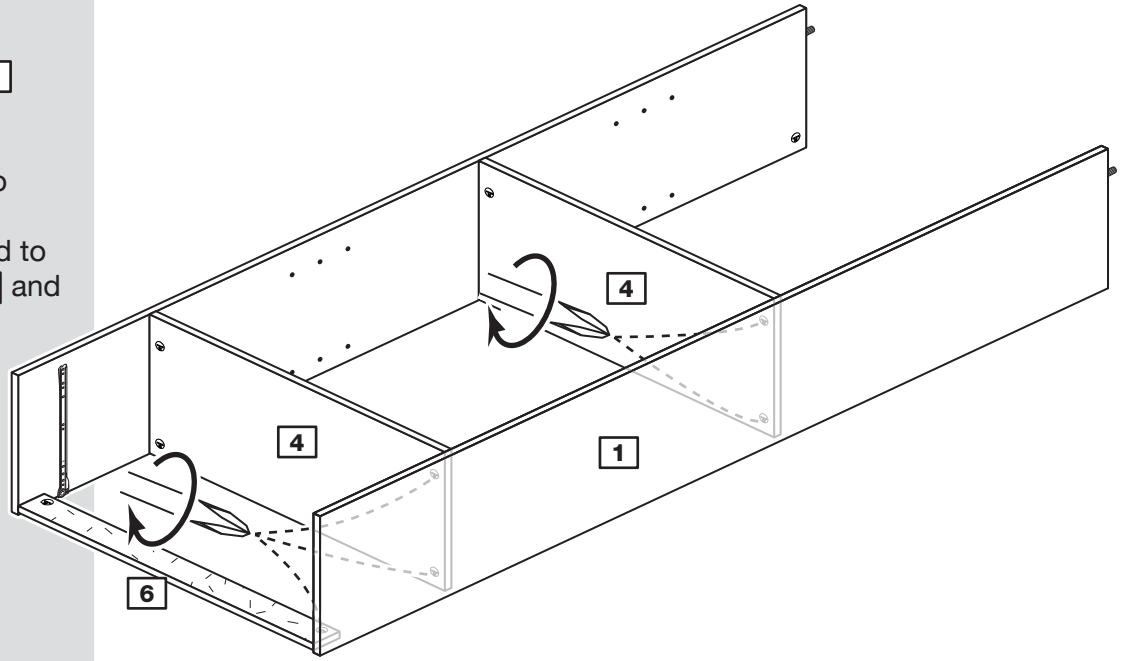

Step 15

Prepare the top

Screw 2 metal dowels B into the top 3.

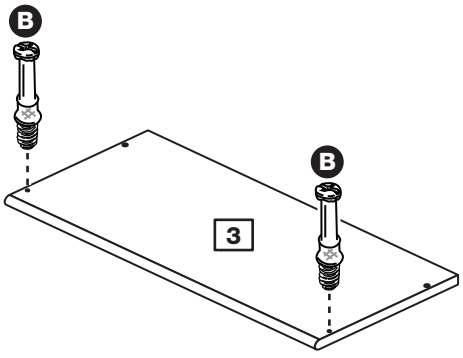


Step 16

Fit the top

Push the top [3] onto the assembly.

Use a screwdriver to tighten the 2 large locking nuts (E) fitted to the left side [1] and right side [2].

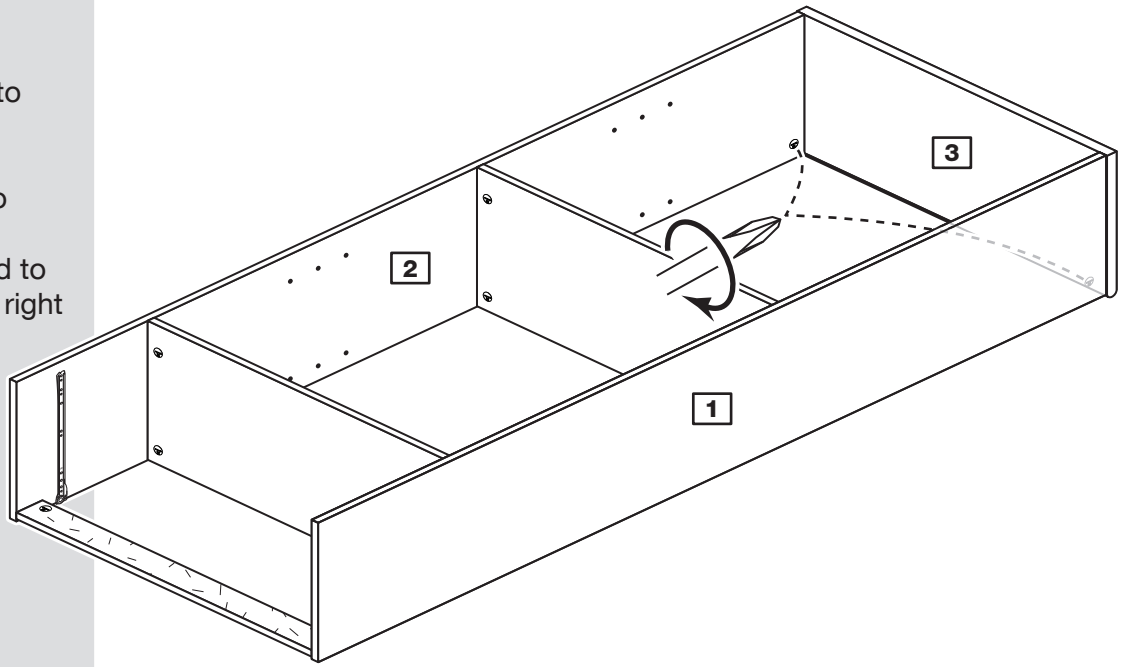

Step 17

Fit the back

a: Square up the unit by making sure that measurement **x to x equals y to y.**


b: Place the back [12] onto the unit.

Nail (D) around the outside edges of the back [12].

Note: Nails should be spaced about 150mm apart.

Stand the unit up for the next step.

a: The measurement from top corner X to bottom corner X must be equal to the measurement from top corner Y to bottom corner Y

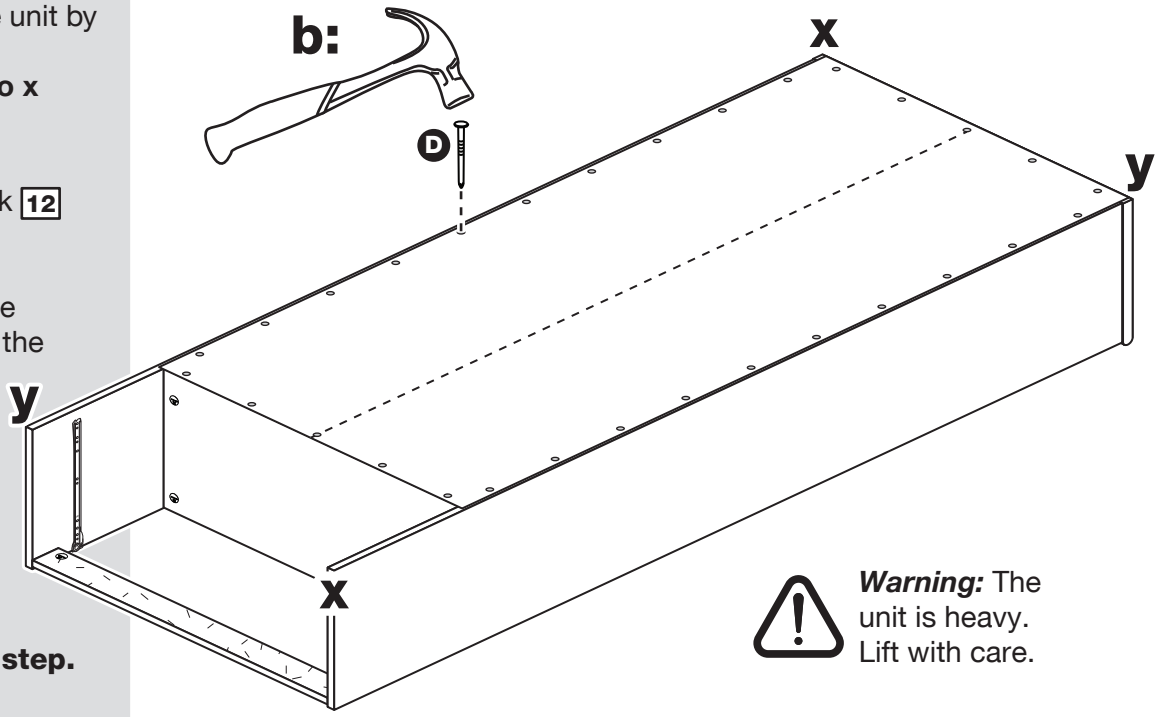

Warning: The unit is heavy. Lift with care.


Step 18

Fit the overbalance protector kit

To prevent possible overbalancing we recommend that this unit is secured to a suitable wall by fitting of the overbalance protector kit L to the unit, or an alternative fixing method of your choice.

Wall fixings are not supplied as they will need to suit the wall type.


Note: Take care when drilling the wall that you do not drill into any pipes, wires etc.
If in doubt, consult an expert.

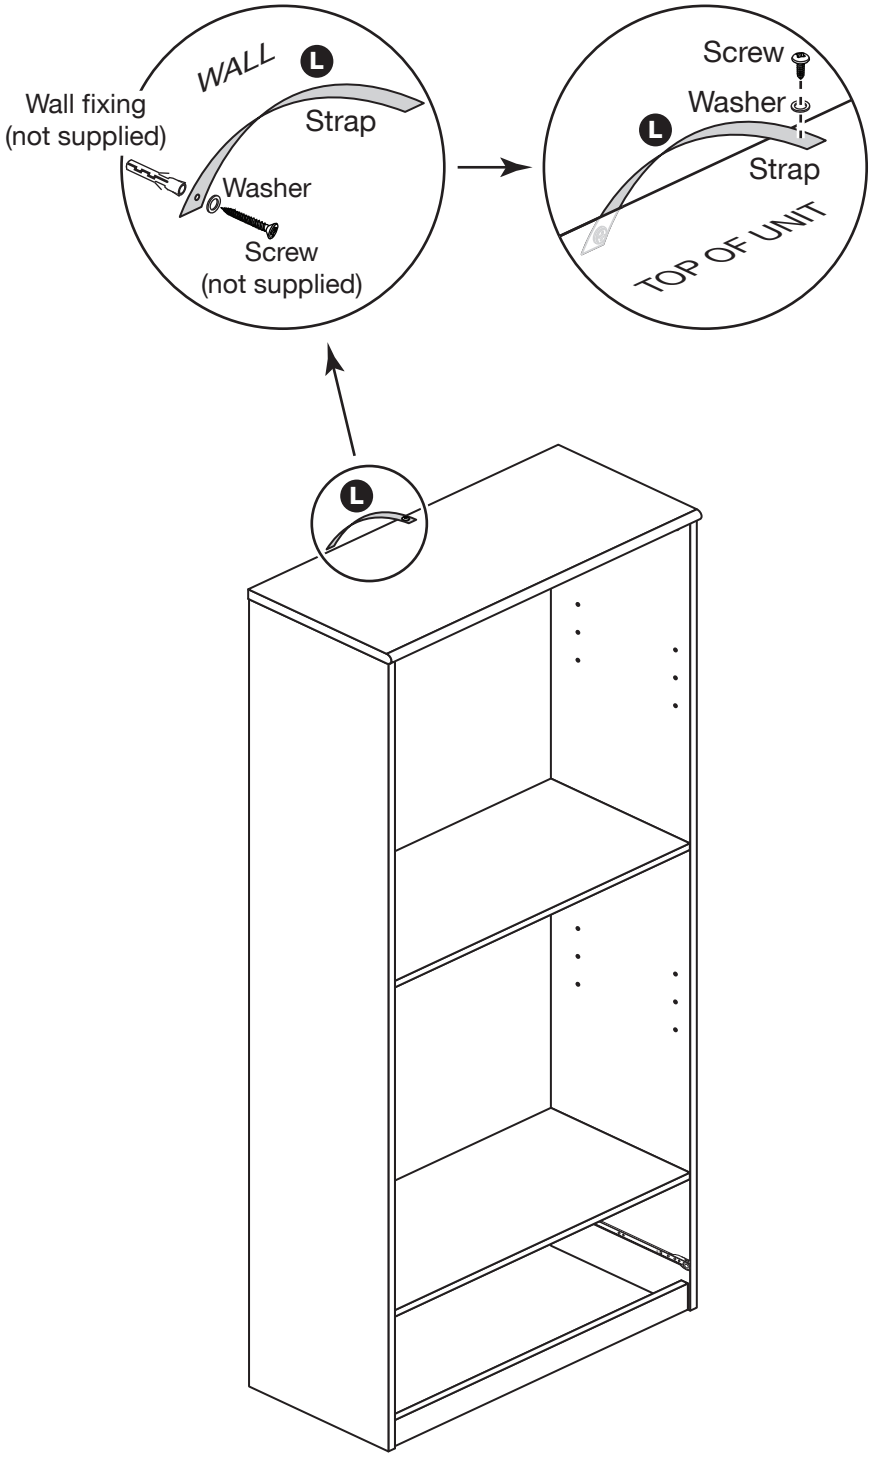

Step 19

Fit the shelf studs


For each of the 2 shelves [5], insert 4 shelf studs C at the required height.

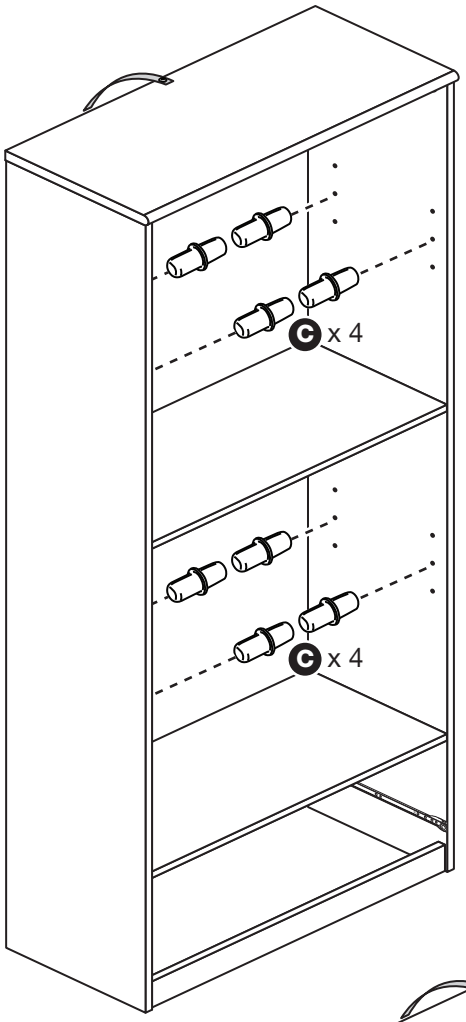

Step 20

Fit the shelves

Lower the 2 shelves [5] down onto the shelf studs C.

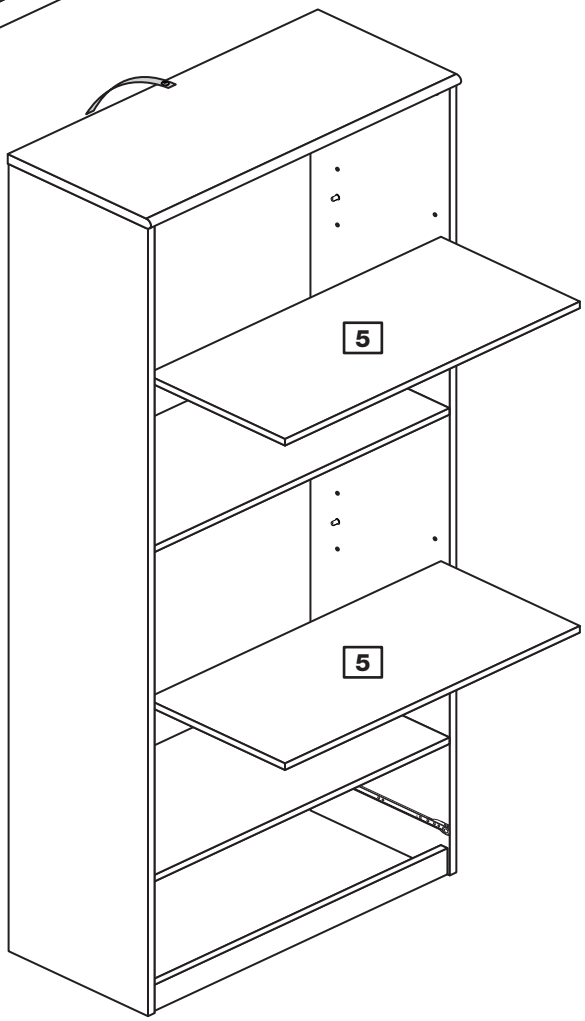

Step 21

Fit the drawer

Slide the wheels on the runners fitted to the drawer sides over the wheels on the runners fitted to the side panels and push the drawer into position.

Assembly is complete

Warning: The unit is heavy. Lift with care.

